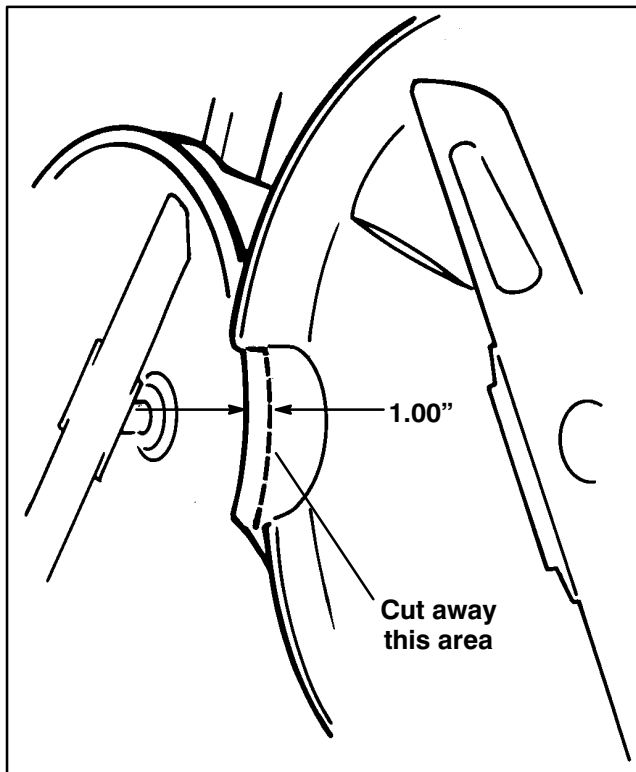


TORO


PART NO. 92-2938

**INSTALLATION
INSTRUCTIONS****PERFORMANCE IMPROVEMENT KIT
37" CUTTING DECK**

1. Disconnect and remove cutting deck from carrier frame. Tip deck over onto back side.
2. Locate, mark and cut away material from center of chamber as shown in figure 1.

**Figure 1**

3. Remove (2) front kickers and front mounting bolt from smaller cutting chamber of deck.
4. Position new insert into cutting chamber, aligning outside mounting holes of insert with kicker mounting holes in deck (Fig. 2).

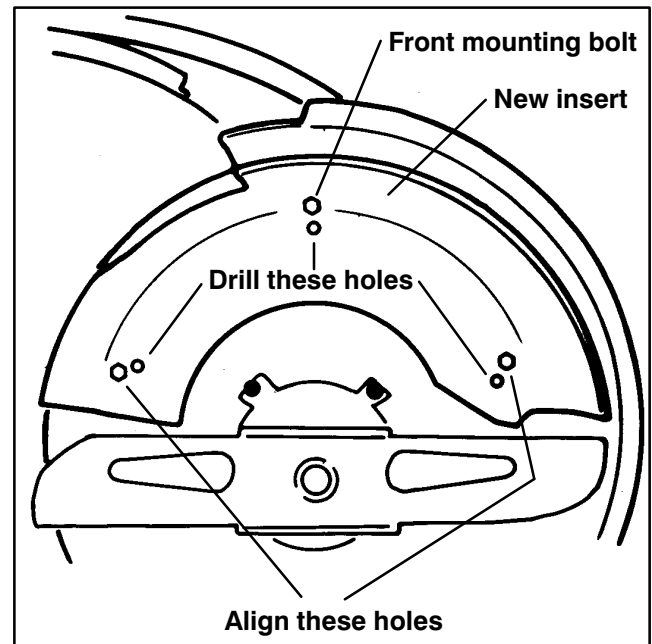**Figure 2**

5. Insert capscrews into aligned holes to hold insert in place (Fig. 2).
6. Using insert as a template, locate, mark and drill (3) .343" dia. holes in deck.
7. Remove capscrews and remount kickers and insert to deck with capscrews and locknuts previously removed. Kickers mount at new holes drilled.
8. Remove wing nut and washer securing top of front cover to deck. Also, remove carriage bolts securing front cover hinge to underside of deck and remove front cover.
9. Install new front cover in same location using fasteners previously removed.