



## WEIGHT KIT

for Z-Master 320/325

PART NO. 98-1330

INSTALLATION  
INSTRUCTIONS

### Loose Parts

**Note:** Use the chart below to identify parts used for assembly.

DESCRIPTION	QTY.	USE
Weight	1	Install rear weight
Bracket	2	
Bolt 1/2-13 x 3/4" (19 mm)	2	
Bolt 1/2-13 x 2-1/4" (57 mm)	2	
Washer 1-3/8" (35 mm)	2	
Washer 1" (25 mm)	2	
Locknut 1/2"	2	

### Install Rear Weight

1. Shut off engine and wait for all moving parts to stop. Remove spark plug wire(s).

### CAUTION

#### POTENTIAL HAZARD

- If you leave the wire on the spark plug, someone could start the engine.


#### WHAT CAN HAPPEN

- Accidental starting of engine could seriously injure you or other bystanders.

#### HOW TO AVOID THE HAZARD

- Pull wire off spark plug before you do any maintenance. Also push wire aside so it does not accidentally contact spark plug.

2. Align brackets, as shown, over caster wheel mount and secure with (2) 1/2-13 x 5/8" (19 mm) bolts (Fig. 1).
3. Align weight slots over bracket holes, as shown. Secure with (2) 1/2-13 x 2-1/4" (19 mm) bolts, 1-3/8" (35 mm) and 1" (25 mm) washers and 1/2" locknuts (Fig. 1).

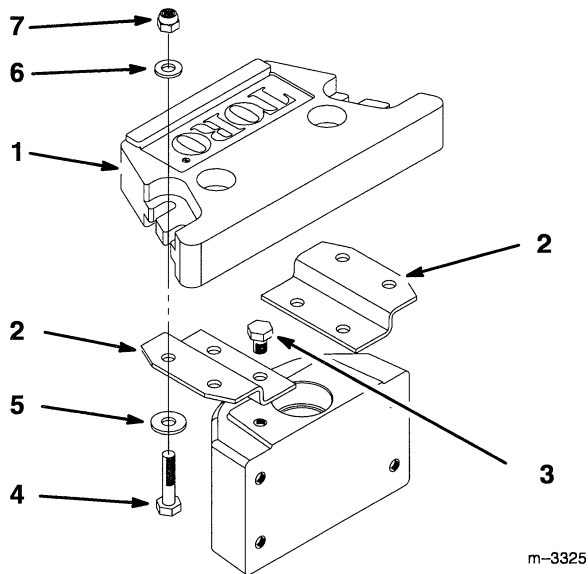

**Figure 1**

- |                                 |                          |
|---------------------------------|--------------------------|
| 1. Weight                       | 5. Washer 1-3/8" (35 mm) |
| 2. Bracket                      | 6. Washer 1" (25 mm)     |
| 3. Bolt 1/2-13 x 5/8" (19 mm)   | 7. Locknut 1/2"          |
| 4. Bolt 1/2-13 x 2-1/4" (57 mm) |                          |