Deck Retention Kit

Zero-Turn-Radius Riding Mower

Model No. 132-0913

Installation Instructions

A WARNING

CALIFORNIA Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

Installation


Loose Parts

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
Left deck-retention link	1	
Right deck-retention link	1	Install the deck-retention links.
Hairpin cotter pin	2	


Installing the Deck-Retention Links

1. Find the locations to install the deck-retention links (Figure 1).

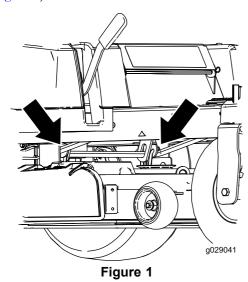


2. Install the left and right deck-retention links and secure them with the hairpin cotter pins. Refer to Figure 2 and Figure 3.

Note: Ensure the links are installed between the mower deck and frame brackets as shown in Figure 3.

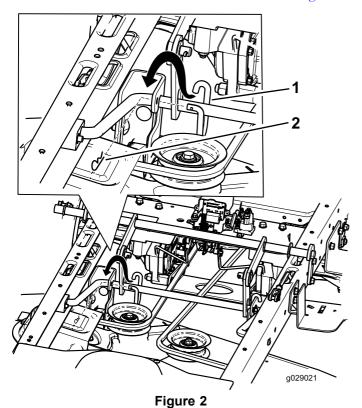

1. Right deck-retention link

2. Hairpin cotter pin

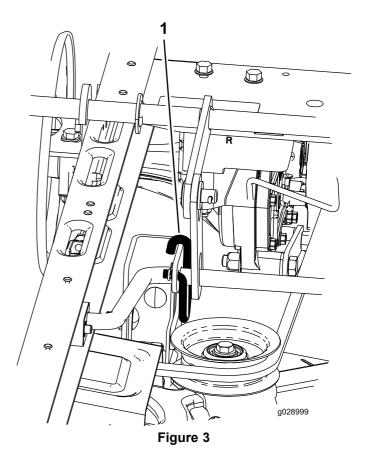

1. Right deck-retention link installed