

TORO
CE UPDATE KIT
36" ProLine Mid-Size Mower Model No. 30136

PART NO. 93-9455


**INSTALLATION
INSTRUCTIONS**
Loose Parts

Note: Use the chart below to identify parts used for assembly.

DESCRIPTION	QTY.	USE
Front baffle	1	
Bolt 5/16-18 x 3/4" (19mm)	6	Install front deflector
Lock nut 5/16" thin	6	
Deflector guard	1	
Bolt 5/16-18 x 3/4" (19mm)	2	Install deflector baffle
Lock nut 5/16" thin	2	
Decal package	1	Replace existing decals

Install Front Baffle

1. Locate baffle inside front of mower, so left end fits into angle and top fits up against top front edge. Using baffle as a guide, mark and drill (5) 9 mm holes in front of mower as shown (Fig. 1).
2. Install front baffle inside mower with 5/16 bolts, from the inside and secure with 5/16 thin lock nuts (Fig. 1).

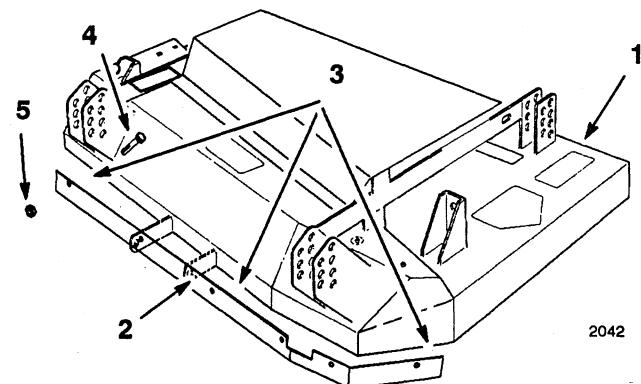**Figure 1**

1. 36" mower	4. Bolt 5/16-18 x 3/4" (19mm)
2. Front baffle	5. Lock nut 5/16" thin
3. Drill 8 mm hole	

Install Deflector Guard

1. Measure 10mm in from rear outer corner of deflector and mark line to inside corner (Fig. 2). Cut deflector along line.
2. Mark and drill a 9 mm hole 13 mm up from the lower edge and 6.5 mm in from end of deflector (Fig. 2).
3. Hold deflector guard in a level position along rear of deflector.
4. Mark and drill a second 9 mm holes in deflector (Fig. 2).
5. Secure guard to deflector with (2) 5/16 bolts, through from inside, and 5/16 thin lock nuts (Fig. 2).

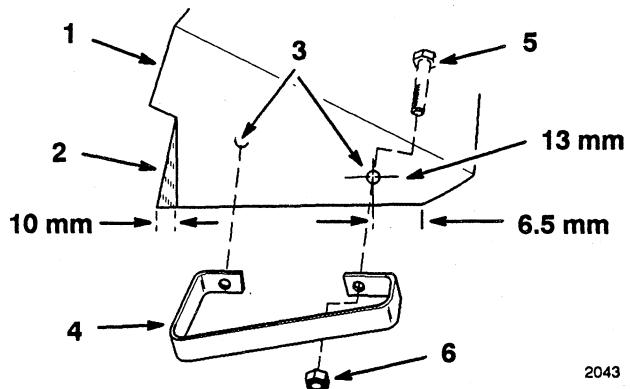


Figure 2

1. Grass deflector	4. Deflector guard
2. Cut off deflector	5. Bolt 5/16-18 x 3/4" (9 mm)
3. Mark and drill 9 mm hole	6. Lock nut 5/16" thin