

**CE UPDATE KIT**

42" & 48" Mowers Model No. 78231 & 78260

PART NO. 93-9255 & 93-9256

**INSTALLATION
INSTRUCTIONS****Loose Parts****Note:** Use the chart below to identify parts used for assembly.

DESCRIPTION	QTY.	USE
Baffle	1	Install front baffle
Bolt 5/16-18 x 3/4" (19 mm)	4	
Lock nut (thin)	4	

**ONLY COPY
DO NOT REMOVE**

Tech. Publications

Installing Front Baffle – Model 78231 only

1. Thread jam nuts onto (4) 5/16 x 19 mm bolts then thread bolt into brackets on baffle (Fig. 1).
2. Position front baffle inside mower deck level with left edge of mower (Fig. 1).
3. Secure front baffle to mower by tightening bolts against mower and tighten thin jam nuts (Fig. 1).

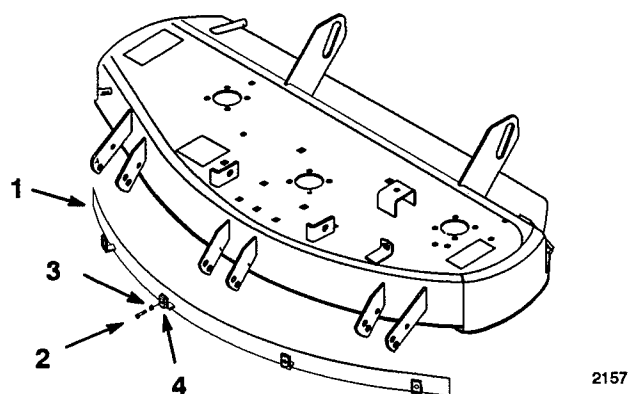


Figure 1

- | | |
|-------------------------------|-------------------|
| 1. Front baffle | 3. Jam nut (thin) |
| 2. Bolt 5/16-18 x 3/4" (19mm) | 4. Bracket |

Installing Front Baffle – Model 78260 only

1. Thread jam nuts onto (4) 5/16 x 19 mm bolts then thread bolt into brackets on baffle (Fig. 2).
2. Position front baffle inside mower deck level with left edge of mower (Fig. 2).
3. Secure front baffle to mower by tightening bolts against mower and tighten thin jam nuts (Fig. 2).

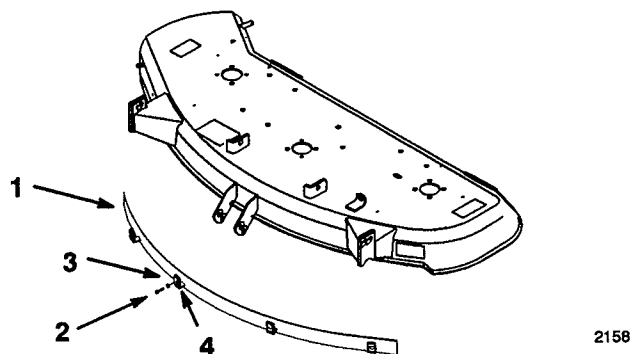


Figure 2

- | | |
|-------------------------------|-------------------|
| 1. Front baffle | 3. Jam nut (thin) |
| 2. Bolt 3/8-16 x 3/4" (19 mm) | 4. Bracket |