



CE UPDATE KIT

1238E, 1338XLE, & 1338HE Model No. 71200, 71205 & 71212

PART NO. 94-1255

INSTALLATION INSTRUCTIONS

Loose Parts

Note: Use the chart below to identify parts used for assembly.

DESCRIPTION	QTY.	USE
Deflector	2	Install grass deflector
Screw 10-10 x 25.4 mm	4	

Drill Holes In Grass Deflector (38" Mower)

1. Locate and drill (4) 5 mm holes in 38 inch grass deflector as shown (Fig. 1).

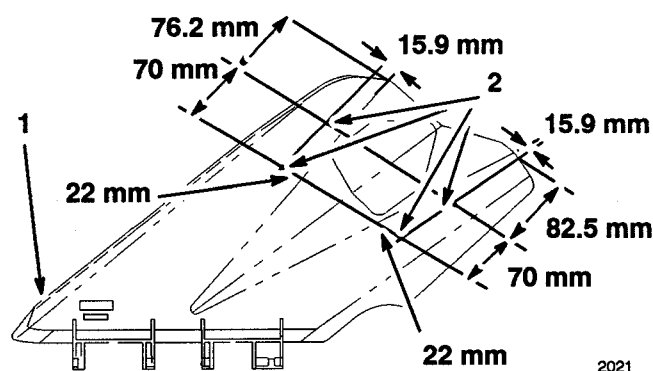


Figure 1

1. Chute deflector 38 inch mower
2. Drill 5 mm hole

Drill Holes In Grass Deflector (32" Mower)

1. Locate and drill (4) 5 mm holes in 32 inch grass deflector as shown (Fig. 2).


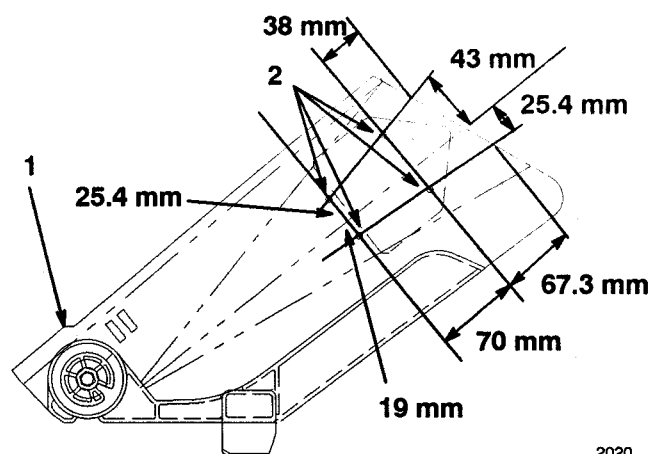


Figure 2

1. Grass deflector 32 inch mower
2. Drill 5 mm hole

Install Kickers

1. Hold kickers in position, inside grass deflector, with large end toward the discharge end. Secure with #10 screws (Fig. 3).

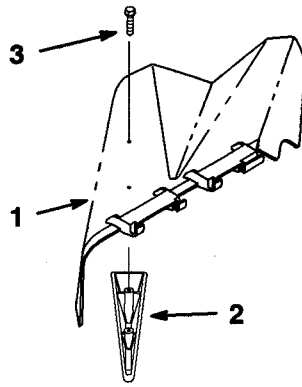

2026

Figure 3

- | | |
|--------------------|--------------------------|
| 1. Grass deflector | 3. Screw 10-10 x 25.4 mm |
| 2. Kicker | |
-