



# Intake Hood Kit

## Workman® HDX-Auto Utility Vehicle Cab

Model No. 127-8692

### Installation Instructions

#### ⚠ WARNING

##### CALIFORNIA Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

## Installation

### Media and Additional Parts

Description	Qty.	Use
Intake-hood assembly	1	Install the intake-hood assembly.

- Park the machine on a level service, turn the machine off, and remove the key from the ignition.
- Remove the existing nuts securing the existing plate (Figure 1).
- Insert the 2 holes in the side of the intake hood into the existing bolts in the plate (Figure 1).
- Install the 2 nuts onto the bolts (Figure 1).
- Connect the CVT air-intake hose into the intake hood (Figure 2).

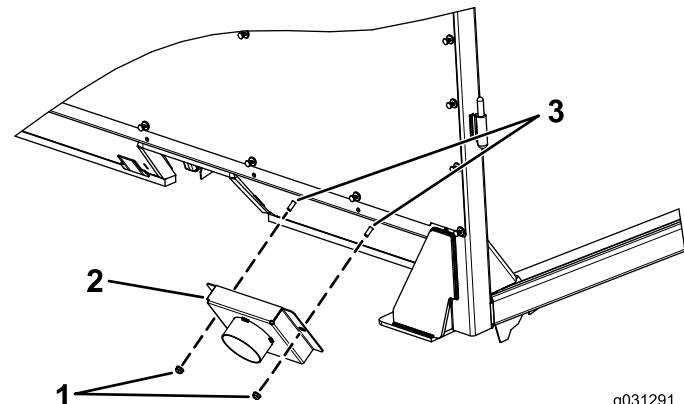


Figure 1

1. Nuts  
2. Intake hood  
3. Bolts

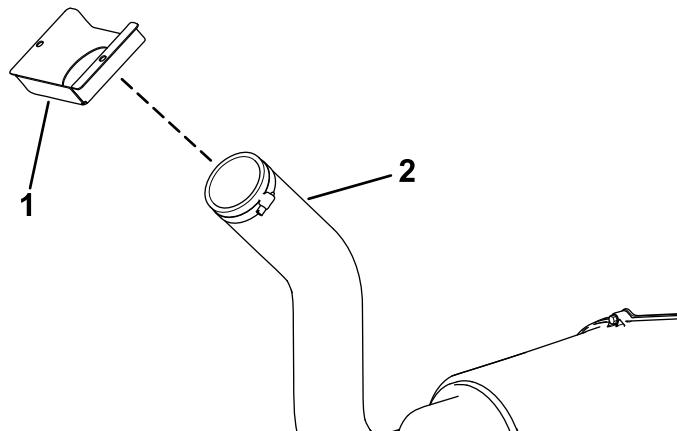


Figure 2

1. Intake hood  
2. Intake hose

