


Arctic Cat® Prowler

Installation Instructions - Accessory Kit

LXC HDX Rear Panel Kit

(p/n 1436-595)

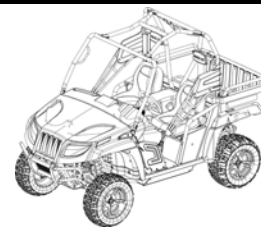

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

Kit includes:

p/n	QTY	DESCRIPTION
0541-063	1	Upper Panel (1)
0541-064	1	Lower Panel (2)
0541-067	1	Left-Side Lower Panel (3)
0541-066	1	Right-Side Lower Panel (4)
0541-068	2	Rubber Boot (5)
0541-065	1	Sliding Window Assembly (6)
2441-241	2	C-Clamp (7)
*	11	Button-Head Screw (M6 x 16 mm) (8)
*	2	Button-Head Screw (M6 x 20 mm) (9)
*	4	Nylon Lock Nut (M6) (10)
*	13	Rubber Washer (11)
*	13	Fender Washer (12)
**	1	Upper Foam Seal (13)
**	1	Rear Panel Trim (14)
**	2	Side Panel Foam (15)
**	1	Lower Panel Foam (16)
**	1	Seat Belt Trim (17)
0453-828	1	Instruction

* Included in Hardware Kit (p/n 0541-062)


** Included in Foam/Seal Kit (p/n 0541-069)

Parts illustration on page 2

■ **NOTE:** If LXC doors are not being used, side restraints must be installed and lower side panels # 3 and #4 from this kit do not need to be installed.

1. Lift up the cargo box; then remove and retain the four cap screws securing the backrest assembly to the frame.
2. Slide Rear Lower Panel on the front side of the rear ROPS tubes and between the backrest assembly and the frame; then loosely install the cap screws securing the backrest assembly to the frame making sure the top two screws are installed through the rear panel. See Fig. 1.

Fig. 1

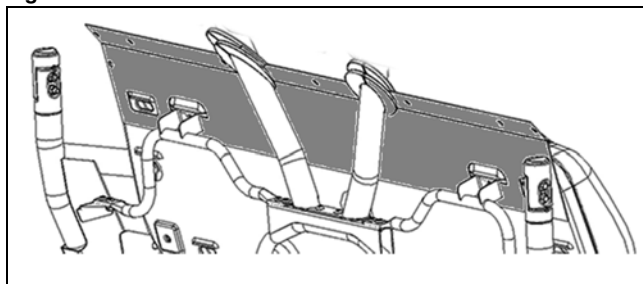


UTV-187

3. Remove and retain the two torx-head screws and nuts securing the rear taillight to the ROPS.

4. Slide Rubber Boot around the tube and place the edge of the lower panel between the lips of the rubber boot with the slit positioned at the top.
5. Position Upper Panel onto the back side of the rear ROPS tubes and on the front side of the lower panel making sure to install the rubber boots between the both panels. See Fig. 2.


Fig. 2

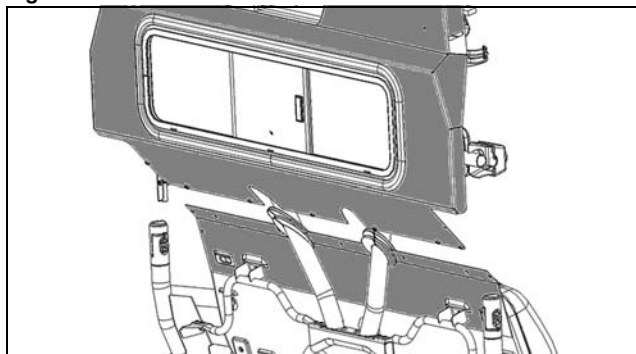

UTV-171A

6. Position the upper panel so the holes in the panel align with the holes that secure the taillight.
7. Loosely secure the upper rear panel to the rear ROPS tubes using two C-Clamps, two Button-Head Screws (M6 x 20 mm) (installed on the outside), two Rubber Washers, two Fender Washers, and two Nylon Lock Nuts. See Fig. 3.

Fig. 3

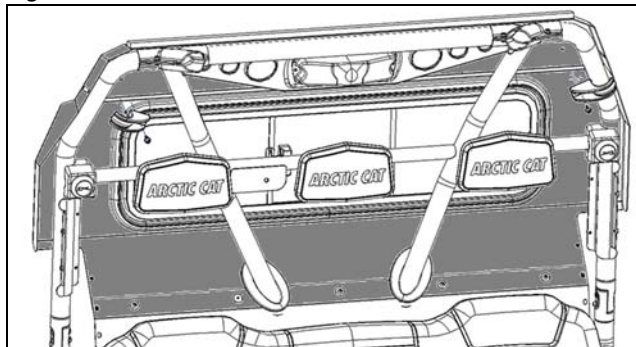


UTV-173A

8. Install the taillight using the existing torx-head screws and nuts; then tighten the screws and nuts from step 6. Tighten securely.

9. Secure the upper and lower panels together using five Button-Head Screws (M6-1.0 x 16 mm), five Rubber Washers, and five Fender Washers. See Fig. 4.


Fig. 4

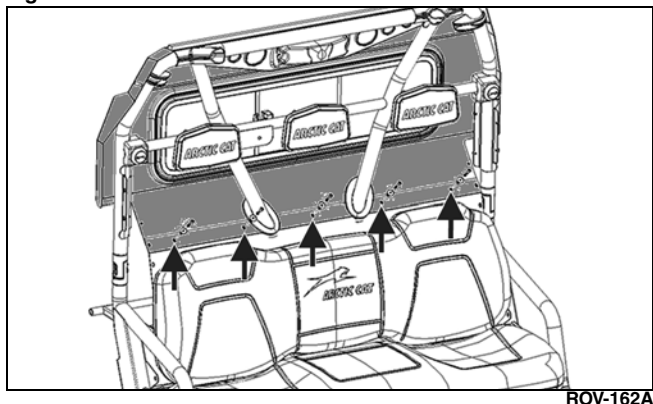

10. Install LXC Door Kit (p/n 1436-594) with the instructions provided within that kit.

11. Install Right- and Left-Side Panels using six button-head screws (M6 x 16 mm) See Fig. 5.

Fig. 5

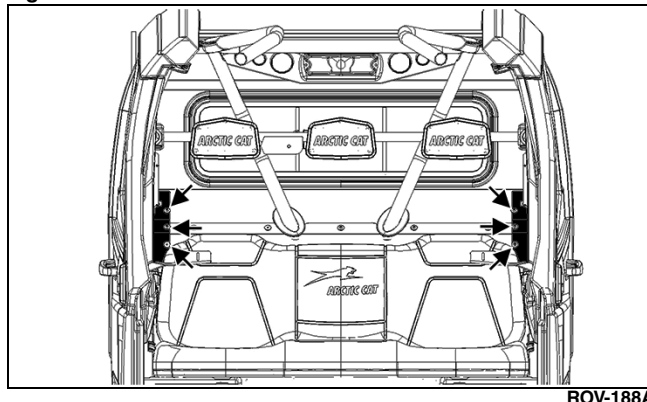

12. Tighten all screws securely.

■ **NOTE:** If doors are not being used, side restraints must be installed.

