


# Arctic Cat® Prowler

## Installation Instructions - Accessory Kit

### VXC (HDX) Rear Panel Kit (1436-587)

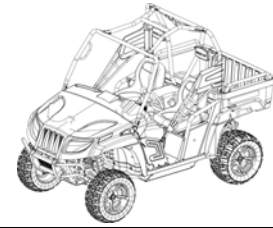

■ **NOTE:** Read these Installation Instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

#### Kit includes:

| p/n      | QTY | DESCRIPTION      |
|----------|-----|------------------|
| N/A      | 1   | Upper Rear Panel |
| N/A      | 1   | Lower Rear Panel |
| 2441-224 | 4   | Rubber Clamp     |
| *        | 1   | Hardware Kit     |
| 0453-772 | 1   | Instruction      |

1. Clean around the tail light; then apply Adhesive Foam around the tail light. See Fig. 1.


Fig. 1



UTV-125A

2. Raise the cargo box; then secure Upper Rear Panel to Lower Rear Panel using five M6 Torx-Head Screws, five Flat Washers, and five M6 Lock Nuts. Tighten securely. See Fig. 2.

Fig. 2

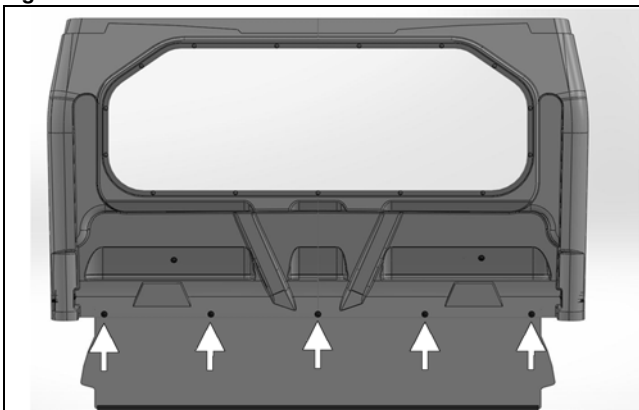


ROV-005A

3. Align the assembled rear panel onto the rear ROPS tube.
4. Insert four Machine Screws and four Washers through the outside of the rear panel and into the four rubber clamps. Finger tighten using four Nuts.

■ **NOTE:** Install 2-piece roof kit (p/n 1436-519 with the instructions included with that kit. The roof will overlap the rear panel.

5. With the roof in position, insert two machine screws and two washers through the outside of the roof and top of the rear panel going into rubber clamps on the ROPS tube (A). See Fig. 4.
6. Using a 1/4-in. drill bit, drill the remaining two mounting locations (B) from inside (using the rear panel as a hole template) the rear panel and through the roof. Secure using two machine screws and two washers through the outside of the roof and top of the rear panel and fasten using fender washers and nuts on the inside. See Fig. 3.


Fig. 3

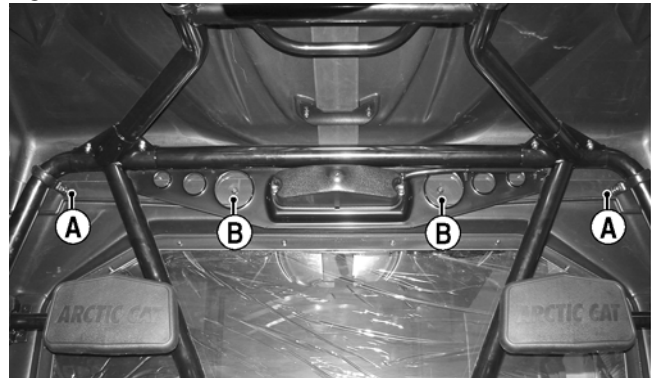

UTV-277A

7. With the rear panel in position, locate the four mounting locations for all four Rubber Clamps; then place clamps onto rear ROPS tubes. See Fig. 4.

Fig. 4

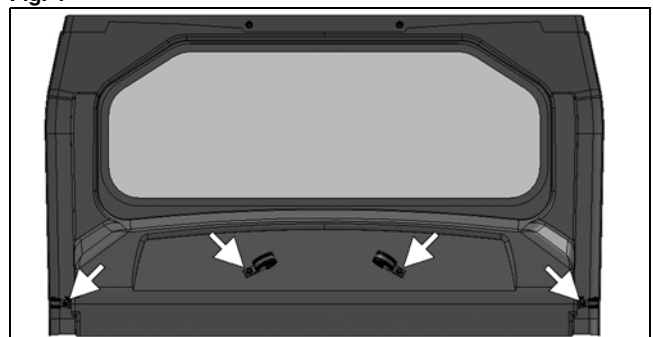

UTV-124A

8. Remove the cap screws and nuts securing the front the the side cargo box panels; then replace with two M10 Cap Screw, two M10 Flat Washers and two Short Spacers. Secure using existing nuts. Tighten securely. See Fig. 5 and 6.

Fig. 5


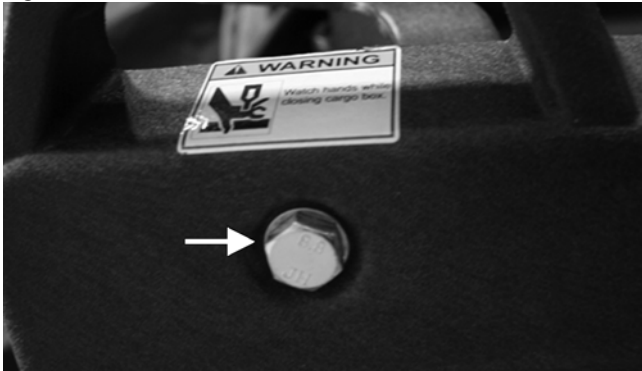


Fig. 6

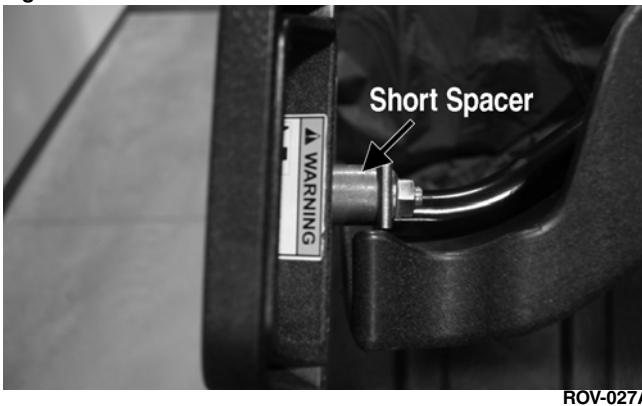

9. Remove the three screws and spacers along the back side of the cargo box. Replace with three M6 cap screw and three Long Spacers. Fasten using existing nuts. Tighten securely. See Fig. 7 and 8.

Fig. 7


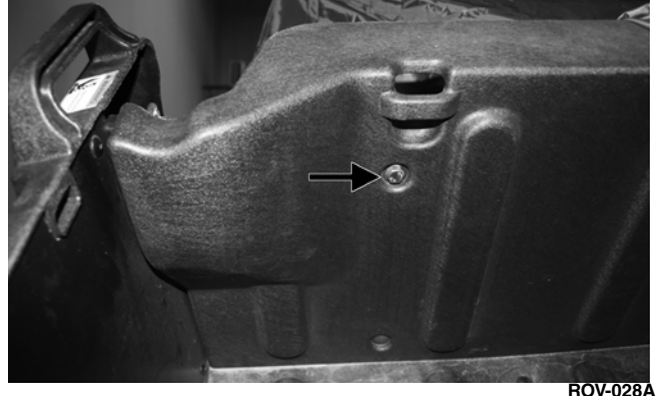


Fig. 8

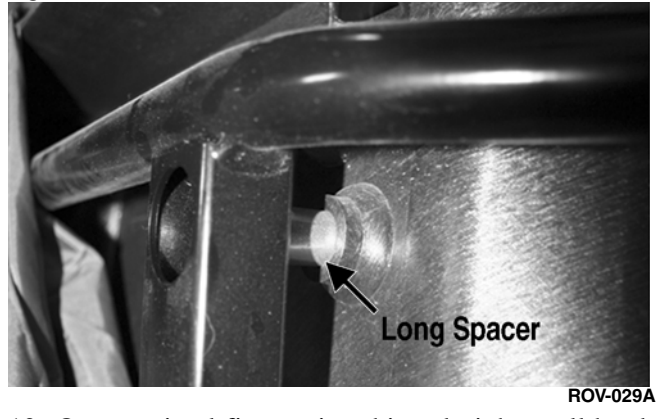

10. Once optimal fitment is achieved, tighten all hardware and latch the cargo box.