
TURF TRACER®
X-SERIES

Model No. TTX650EKC604N0—Serial No. 316000000 and Up

Picture below may not reflect actual product.

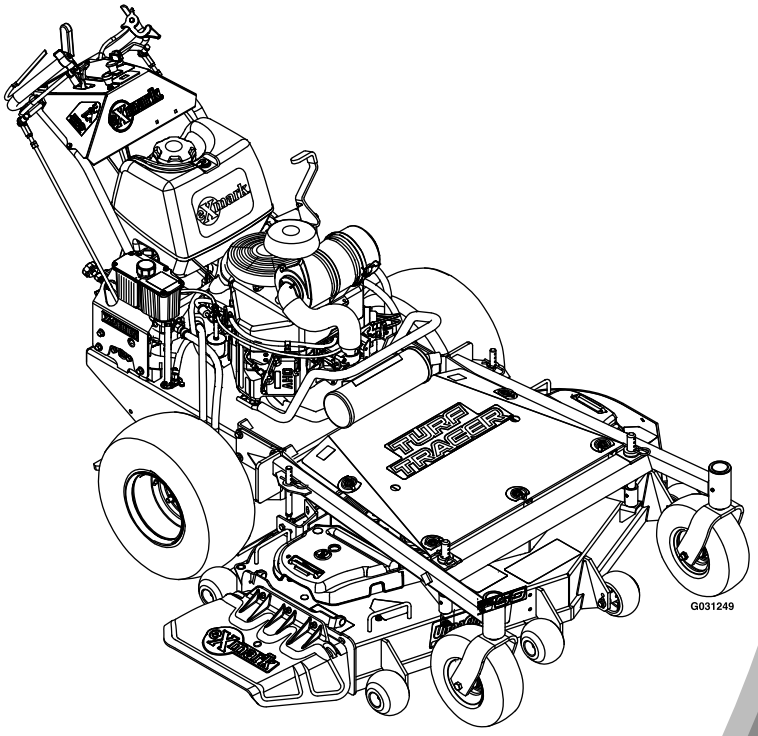

Parts Manual

Part No. 4502-591 Rev. B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

© 2016—Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310

Contact us at www.Exmark.com.
Printed in the USA.
All Rights Reserved




If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Complete Deck Assembly 4
Deck Assembly 6
Deck W/Decals Assembly No. 126-2570 8
Deck Idler Assembly No. 126-2314 10
Frame Assembly 12
Front Frame Assembly No. 126-2540 14
ECS Upper Handle Controls Assembly 16
Controls Assembly 18
Engine Deck Assembly 20
Engine Assembly 22
Fuel Assembly 24
Hydro Assembly 26
Electrical Assembly 28
Stand-On Assembly 30
Draw Bar Assembly 32
Wheel Assembly 34


Complete Deck Assembly

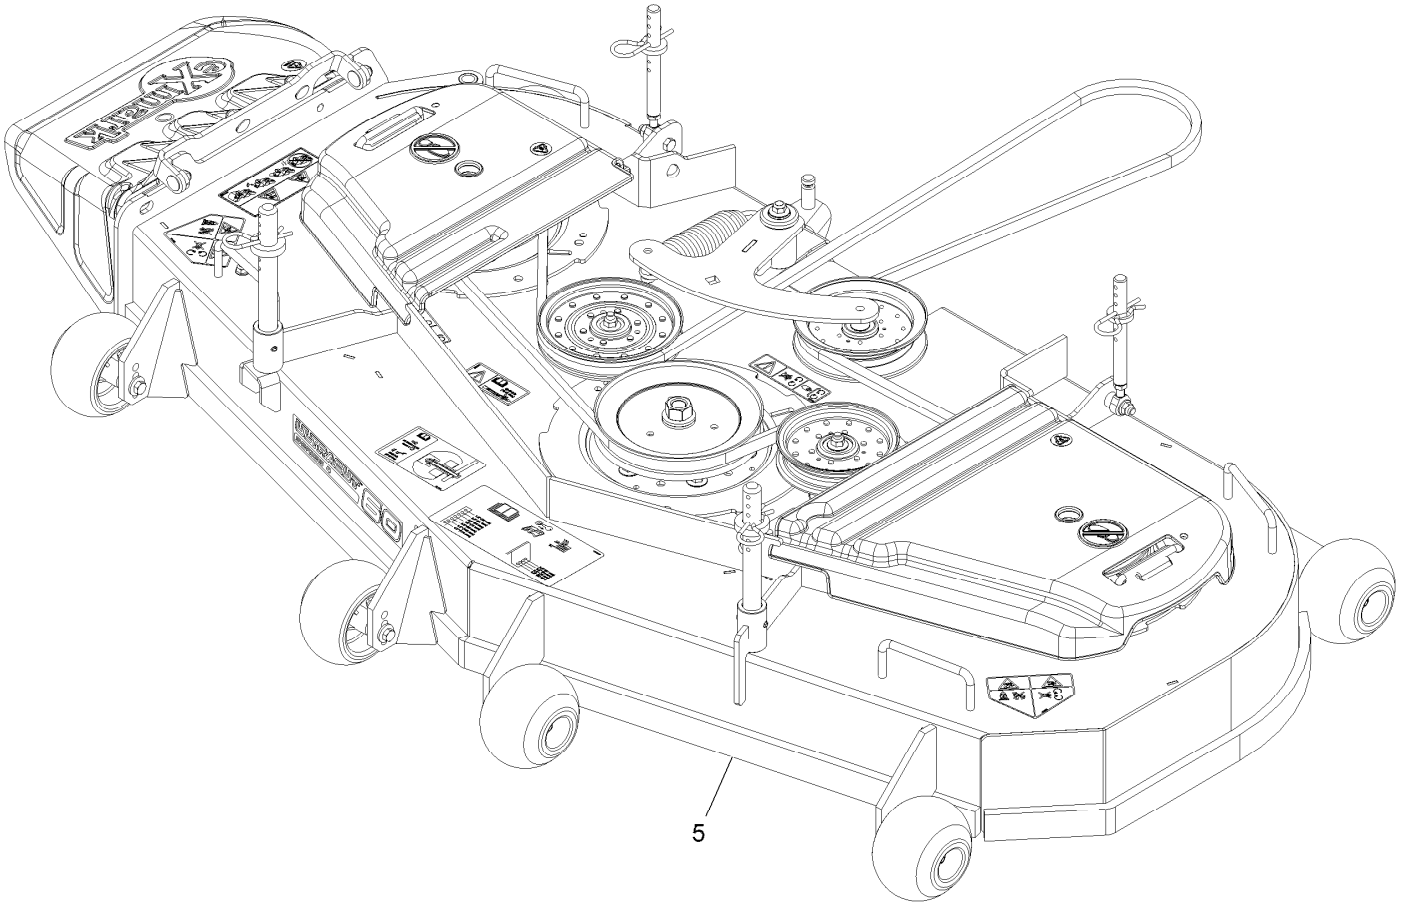

Complete Deck Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
5	126-2537	1	ASM, Complete Deck, 60

Deck Assembly

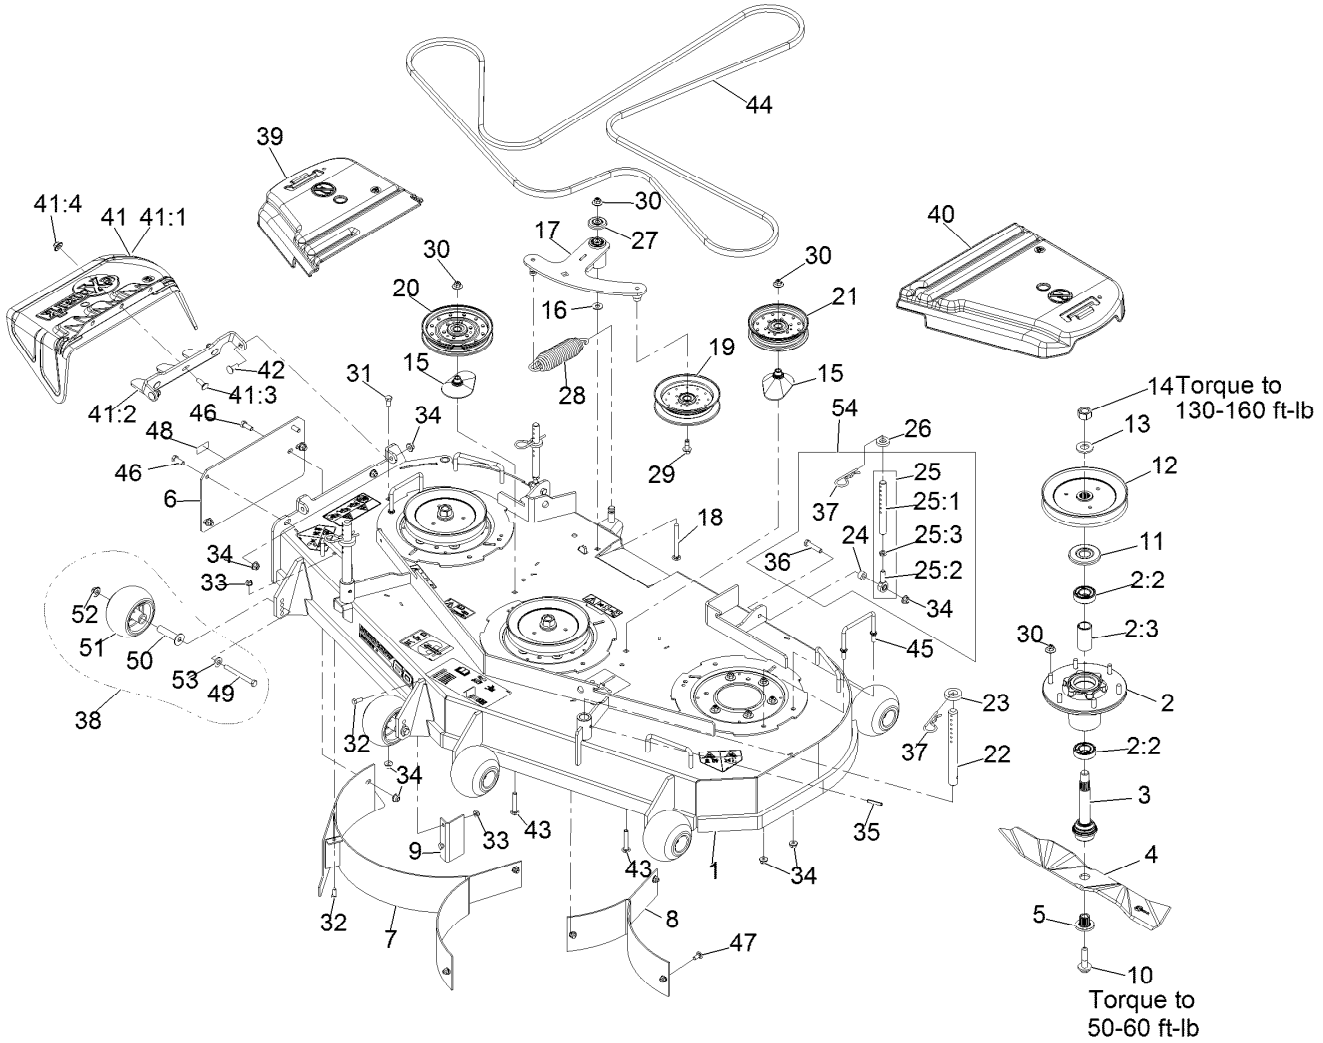

Apply lubricant to threads
as needed to prevent seizing.
Copper based antiseize preferable.
Grease is an acceptable substitute.


Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-2570	1	ASM, Deck W/ Decals, 60"
2	116-3344	3	ASM-Cutter Hsg With Bearings
2:2	116-0720	2	Bearing-Ball
2:3	116-3312	1	Spacer-Bearing
3	116-3341	3	ASM-Spindle And Seal ■
4	103-6383	3	Blade, Solid
4	103-6388	3	Blade, Low Lift
4	103-6393	3	Blade, Mulching ●
4	103-6403	3	Blade, Notched
4	116-5174	3	Blade-Extreme 2, 20.50"
5	103-3037	3	Bushing, Splined
6	1-633957-01	1	Plate, Mulch Cover Mk604
7	1-632954-03	1	Wld, Baffle RH Mk604
8	1-632948-03	1	Wld, Baffle LH Mk604
9	1-633956-03	1	Baffle, Blocker Mk604
10	109-9220	3	Screw-Sems 1/2-20 X 2.19
11	116-1286	3	Guard,Bearing Top .989
12	116-0676	3	Sheave,Blade Drive 7.25
13	103-2802	3	Washer-Spring Disc 3/4
14	116-7306	3	Nut-Hex
15	109-2872	2	Spacer-Pulley
16	3256-4	1	Washer-3/8 Std
17	126-2314	1	ASM, Deck Idler
18	3231-24	1	Bolt-Carriage 3/8-16 X 3 3/4
19	116-4668	1	Idler-Pulley, Flanged
20	116-4667	1	Idler-Pulley, Flat
21	116-4665	1	Idler-Pulley, Flat
22	1-603001	2	Rod, Deck Support
23	1-413425	2	Spacer-Deck Support
24	1-603050	2	Spacer
25	1-414521	2	Link Assy
25:1	1-413525	1	Link, Rear Deck Support
25:2	1-613204	1	Balljoint
25:3	3220-3	1	Nut-Jam 3/8-24
26	1-323539	2	Spacer-Blade Drive
27	103-2916	1	Guard-Top
28	116-6317	1	Spring-Extension
29	126-1680	1	Screw-Hfh
30	109-6658	21	Nut-Nyloc 3/8-16 Flg
31	323-4	1	Screw-HH 3/8-16 X 3/4
32	322-3	5	Screw-HH 5/16-18 X 3/4
33	104-8300	8	Nut-Nyloc 5/16-18 Flg
34	104-8301	14	Nut-Nyloc 3/8-16 Flg
35	1-806332	2	Rollpin 1/4 X 1 1/2
36	323-9	2	Screw-HH 3/8-16 X 1 3/4
37	1-806009	4	Hairpin-Cotter #206
38	116-9981	6	Kit, Anti-Scalp Roller
39	116-0094	1	Cover-Belt, RH
40	109-6938	1	Cover-Belt, LH
41	109-7188	1	ASM,Discharge Chute
41:1	109-2738	1	Chute, Discharge
41:2	109-8675-01	1	Bracket,Discharge Chute
41:3	3231-22	3	Bolt-Carriage 3/8-16 X 1
41:4	109-6658	3	Nut-Nyloc 3/8-16 Flg
42	3231-22	2	Bolt-Carriage 3/8-16 X 1
43	3231-40	2	Bolt-Carriage 3/8-16 X 2 1/4
44	126-2539	1	Belt, Deck Drive
45	109-6982	2	Wireform-Cover
46	323-6	5	Screw-HH 3/8-16 X 1
47	3230-1	3	Bolt-Carriage 5/16-18 X 3/4
48	126-4345	1	Decal-Patent
49	116-9362	6	Screw-HH 3/8-16 X 3 3/4 GR 8
50	116-8131	6	Axle, Roller
51	103-8415	6	Roller-Anti-Scalp
52	109-6658	6	Nut-Nyloc 3/8-16 Flg
53	98-5975	6	Washer-Spring Disc 3/8
54	1-411532	2	Kit, Support Link W/Pin

● Requires installation of mulch kit for proper mulching. See your Exmark dealer for details.

■ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize). See operator s manual for locations.


Deck W/Decals Assembly No. 126-2570

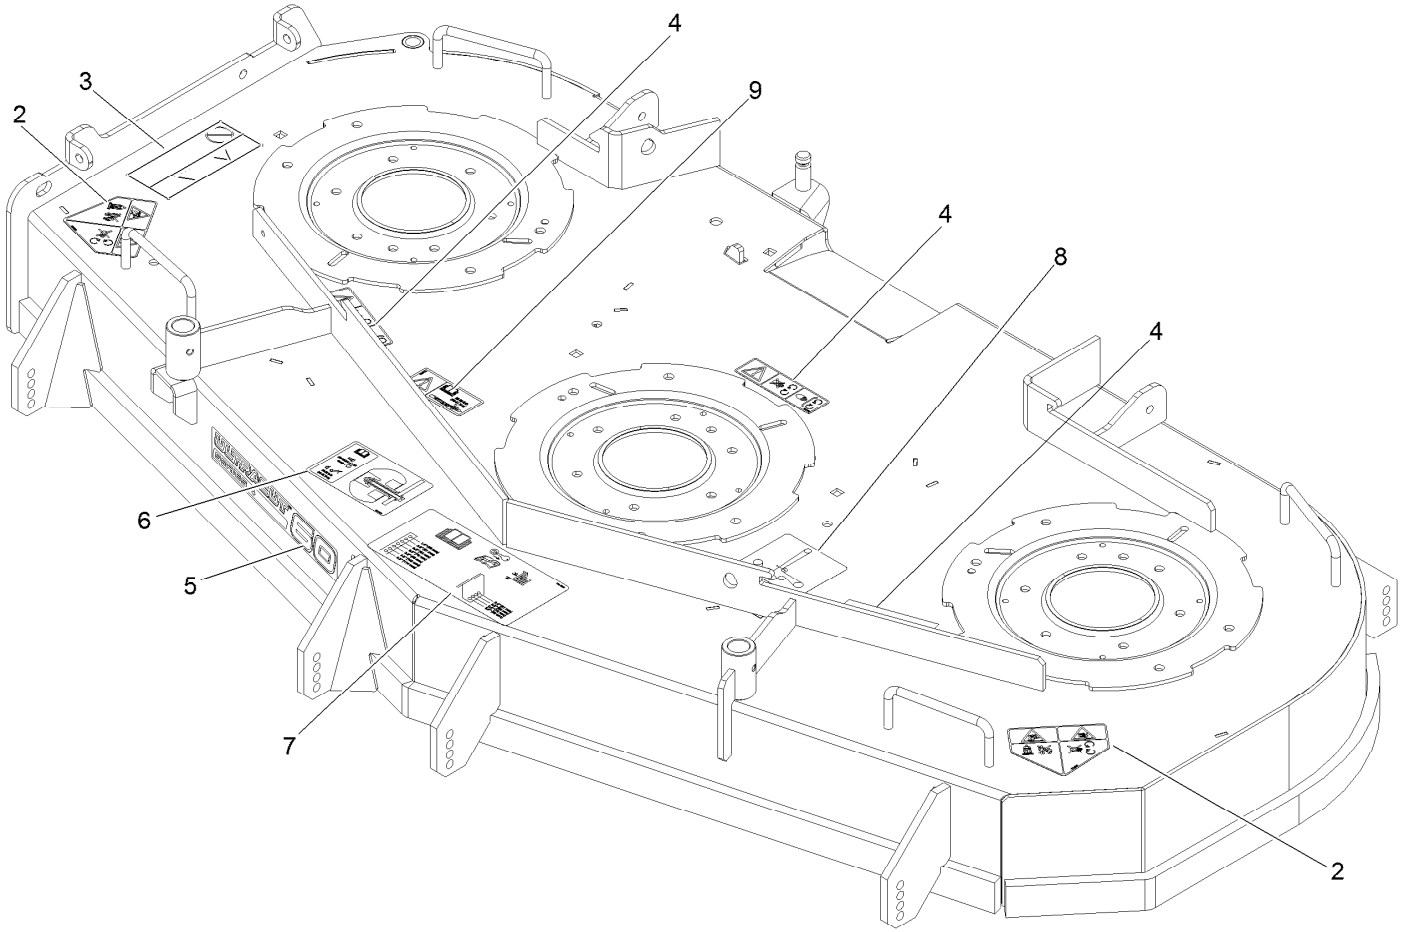

Deck W/Decals Assembly No. 126-2570 (continued)

Ref.	Part Number	Qty.	Description
2	112-8760	2	Decal-Danger
3	114-3489	1	Decal-Warning, Bagger
4	112-9028	3	Decal-Missing, Cover
5	126-6589	1	Decal, 604
6	126-0898	1	Decal-Roller Mounting
7	116-8278	1	Decal-Anti-Scalp
8	116-8727	1	Decal-Belt Routing
9	116-8283	1	Decal-Bolt Torque

Deck Idler Assembly No. 126-2314

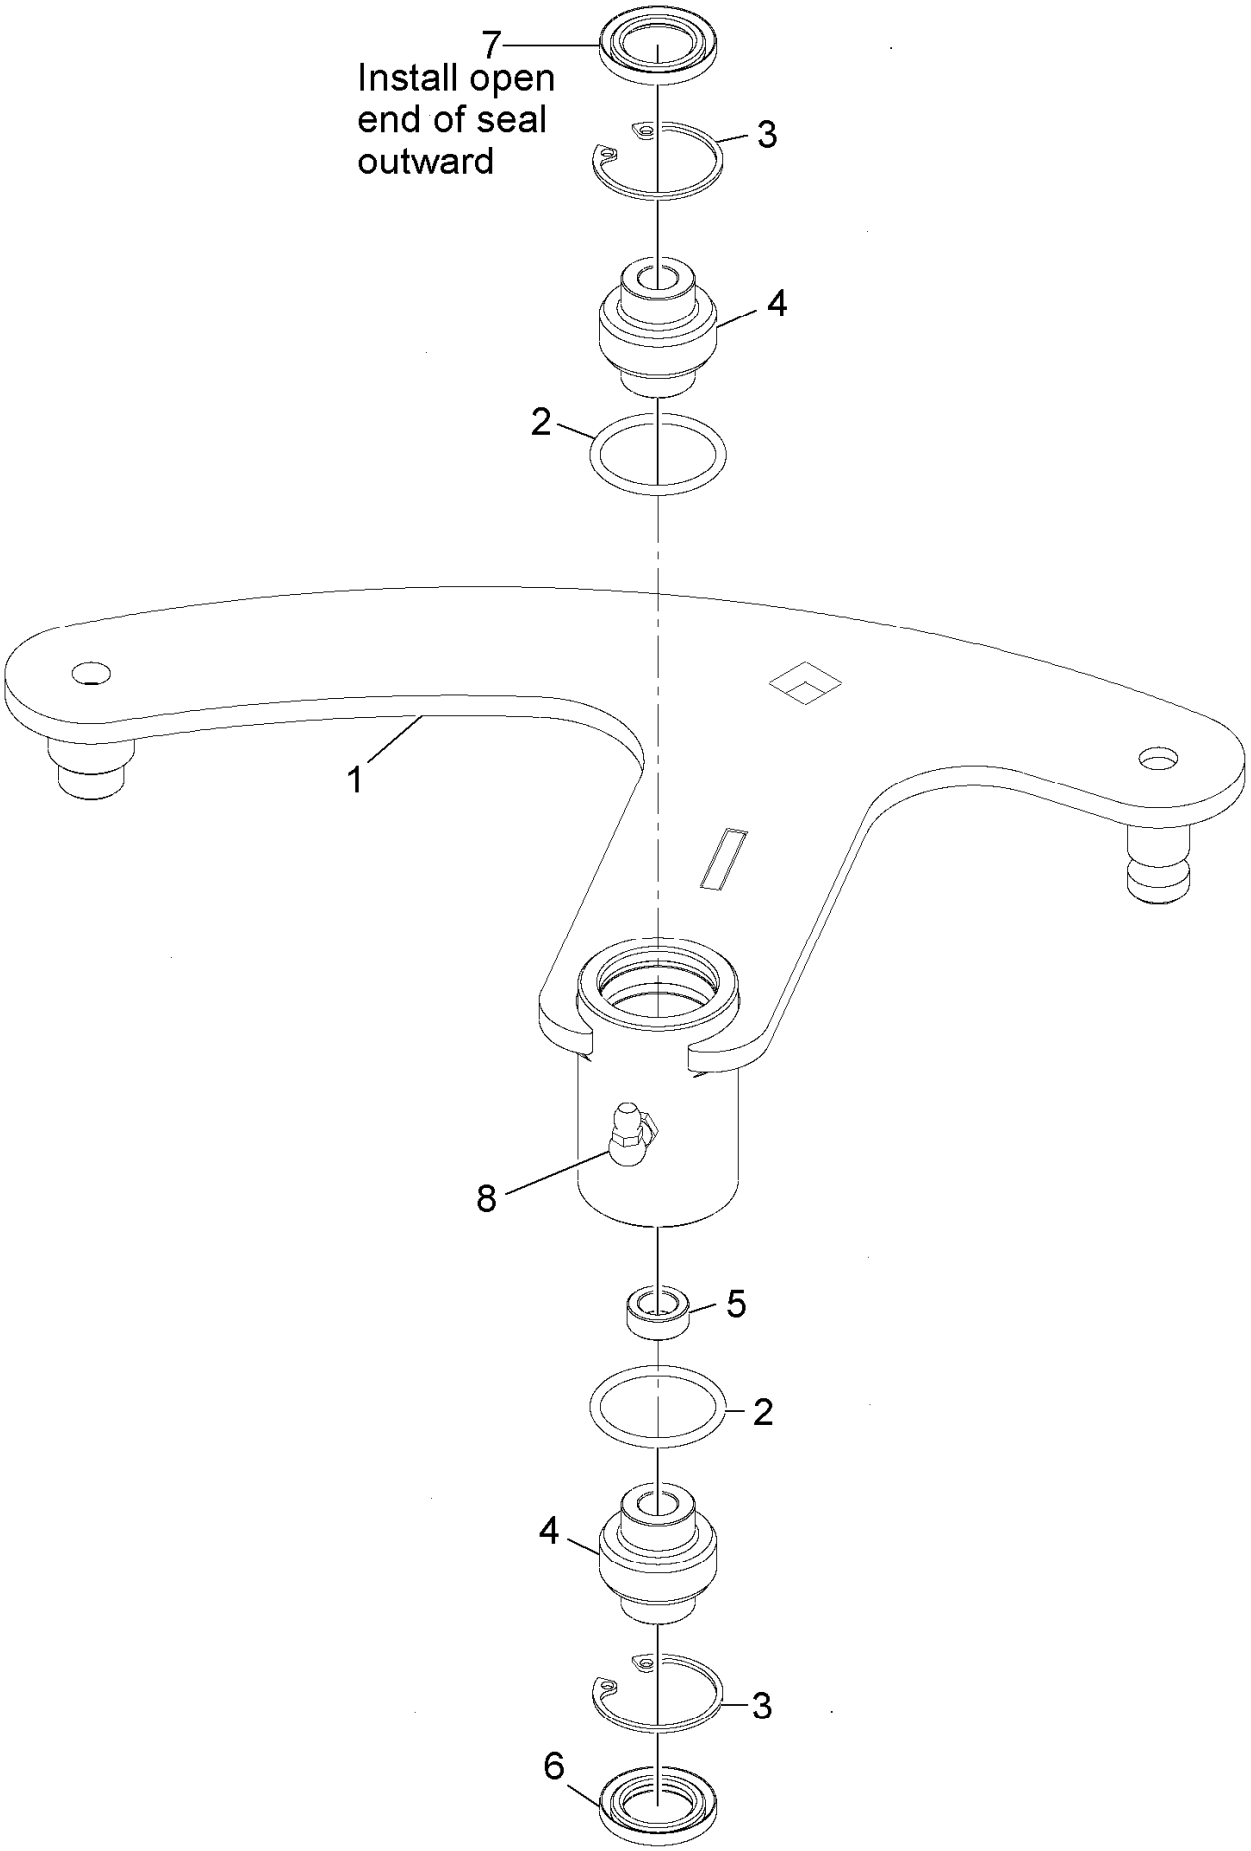


Deck Idler Assembly No. 126-2314 (continued)

Ref.	Part Number	Qty.	Description
1		1	Weld, Idler Arm ●
2	106-7159	2	O-Ring
3	32120-10	2	Ring-Snap
4	103-3504	2	Bearing-Spherical
5	103-5677	1	Spacer
6	103-3505	1	Seal-Double Lip
7	103-3506	1	Seal-Lip, Single
8	302-40	1	Fitting-Grease, 90 DEG

● Not serviced separately

Frame Assembly

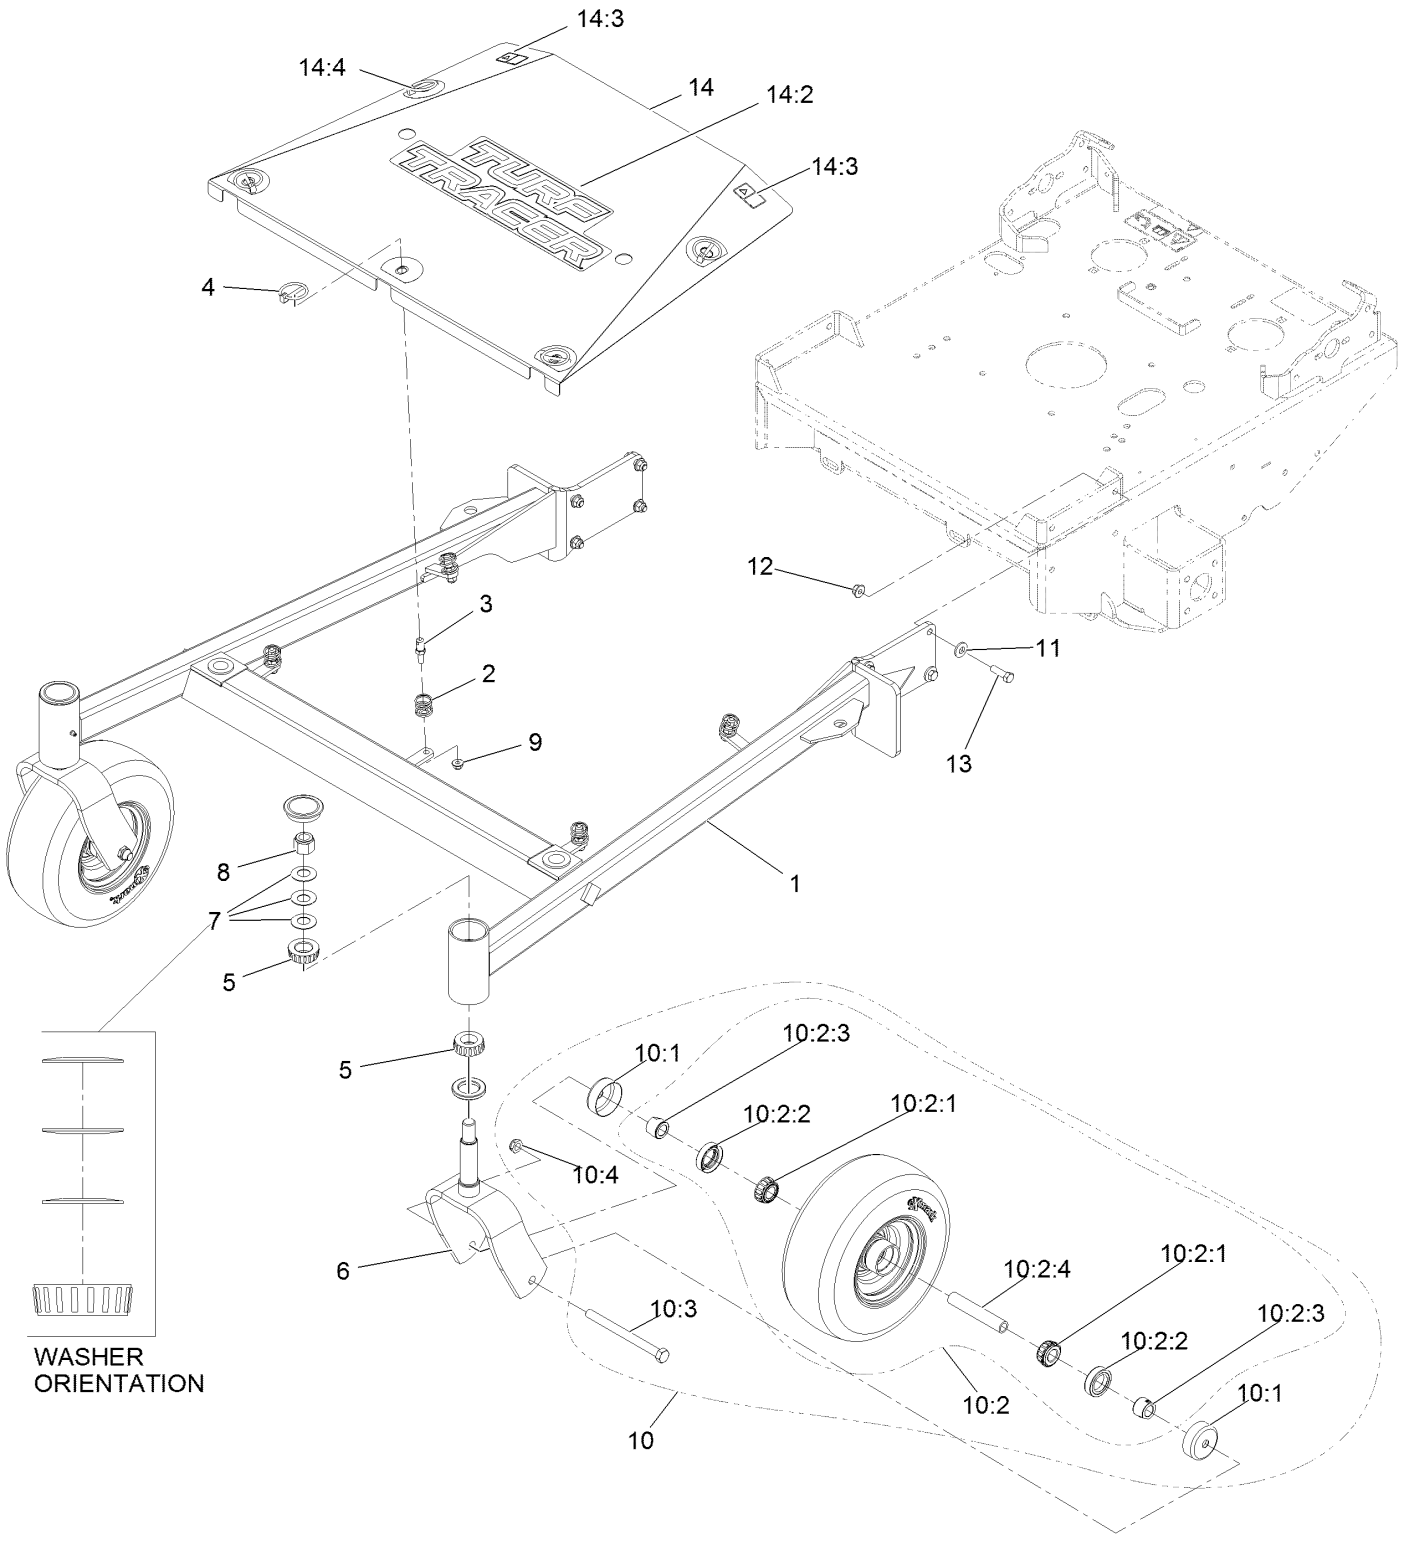


Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-2541	1	ASM, Front Frame W/ Bearings, 60
2	126-1503	5	Spring
3	126-1504	5	Pin, Spring
4	92-1298	5	Pin-Lynch
5	1-543509	4	Cone-Bearing Tapered Roller
6	103-1891-01	2	Wld, Caster Fork
7	1-633508	6	Washer-Spring Disc
8	3296-51	2	Nut-Nyloc 3/4-10
9	104-8300	5	Nut-Nyloc 5/16-18 Flg
10	109-3524	2	Asm, Wheel And Bearings
10:1	103-2768	2	Guard-Seal
10:2		1	ASM,Wheel And Bearing ●
10:2:1	1-633585	2	Bearing-Cone Tapered Roller
10:2:2	103-0063	2	Seal-Double Lip
10:2:3	103-3051	2	Spacer-Nut
10:2:4	103-3157	1	Axle-Caster
10:3	325-20	1	Screw-HH 1/2-13 X 6
10:4	3296-45	1	Nut-Nyloc 1/2-13 Thin
11	98-5975	8	Washer-Spring Disc 3/8
12	104-8301	8	Nut-Nyloc 3/8-16 Flg
13	323-7	8	Screw-HH 3/8-16 X 1 1/4
14	126-2545	1	ASM, Center Shield W/ Decals, 60
14:2	126-6892	1	Decal-Turf Tracer
14:3	106-5517	2	Decal-Warning
14:4	126-1692	5	Decal-Scratch Cover

● Not serviced separately


Front Frame Assembly No. 126-2540

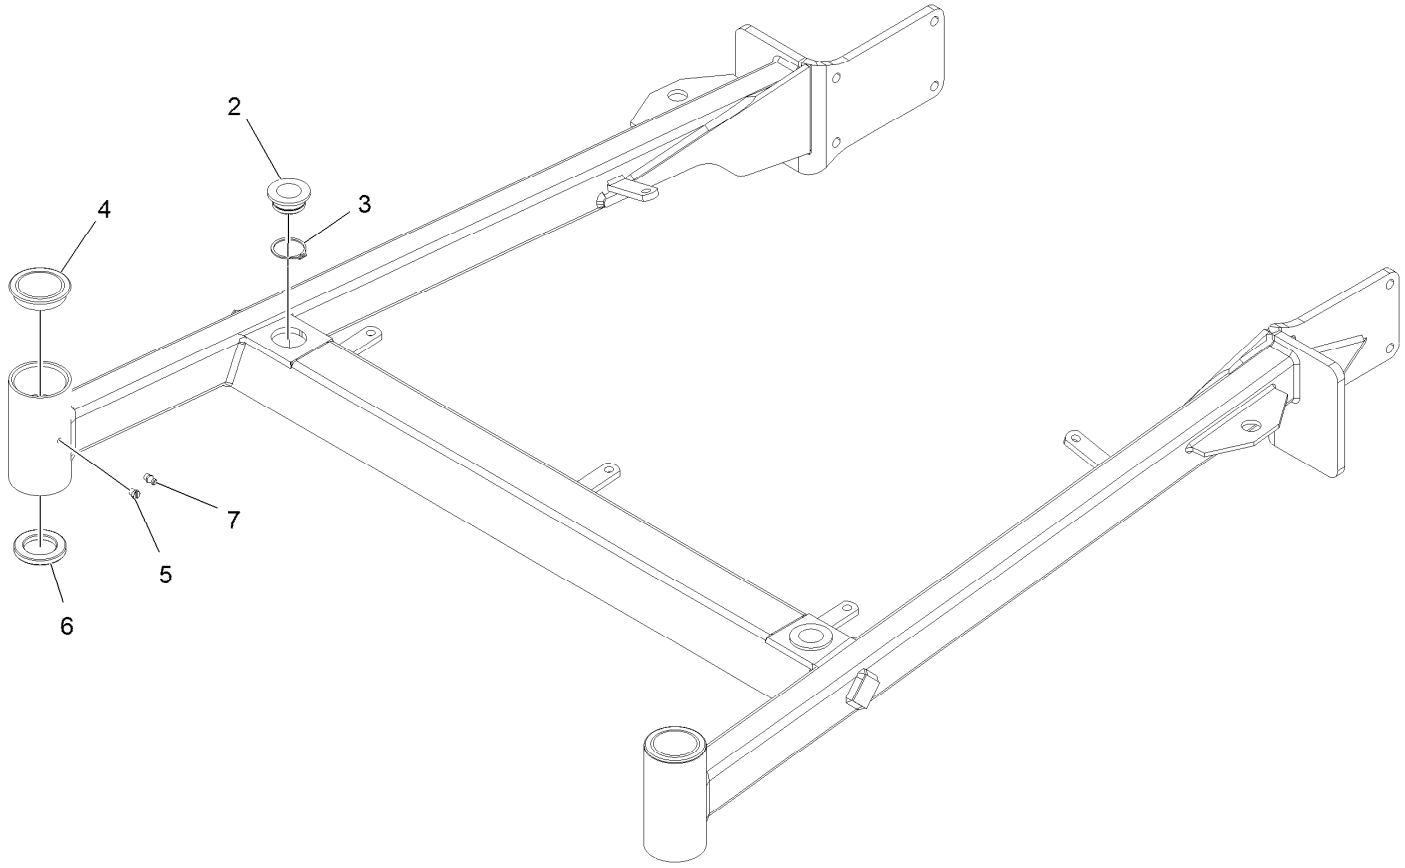

Front Frame Assembly No. 126-2540 (continued)

Ref.	Part Number	Qty.	Description
2	1-513336	2	Bushing-Deck
3	32120-33	2	Ring-Retaining
4	103-4882	2	Cap-Grease
5	1-811010	2	Plug
6	1-543511	2	Seal-Grease
7	302-19	1	Zerk-1/4-28 Str

ECS Upper Handle Controls Assembly

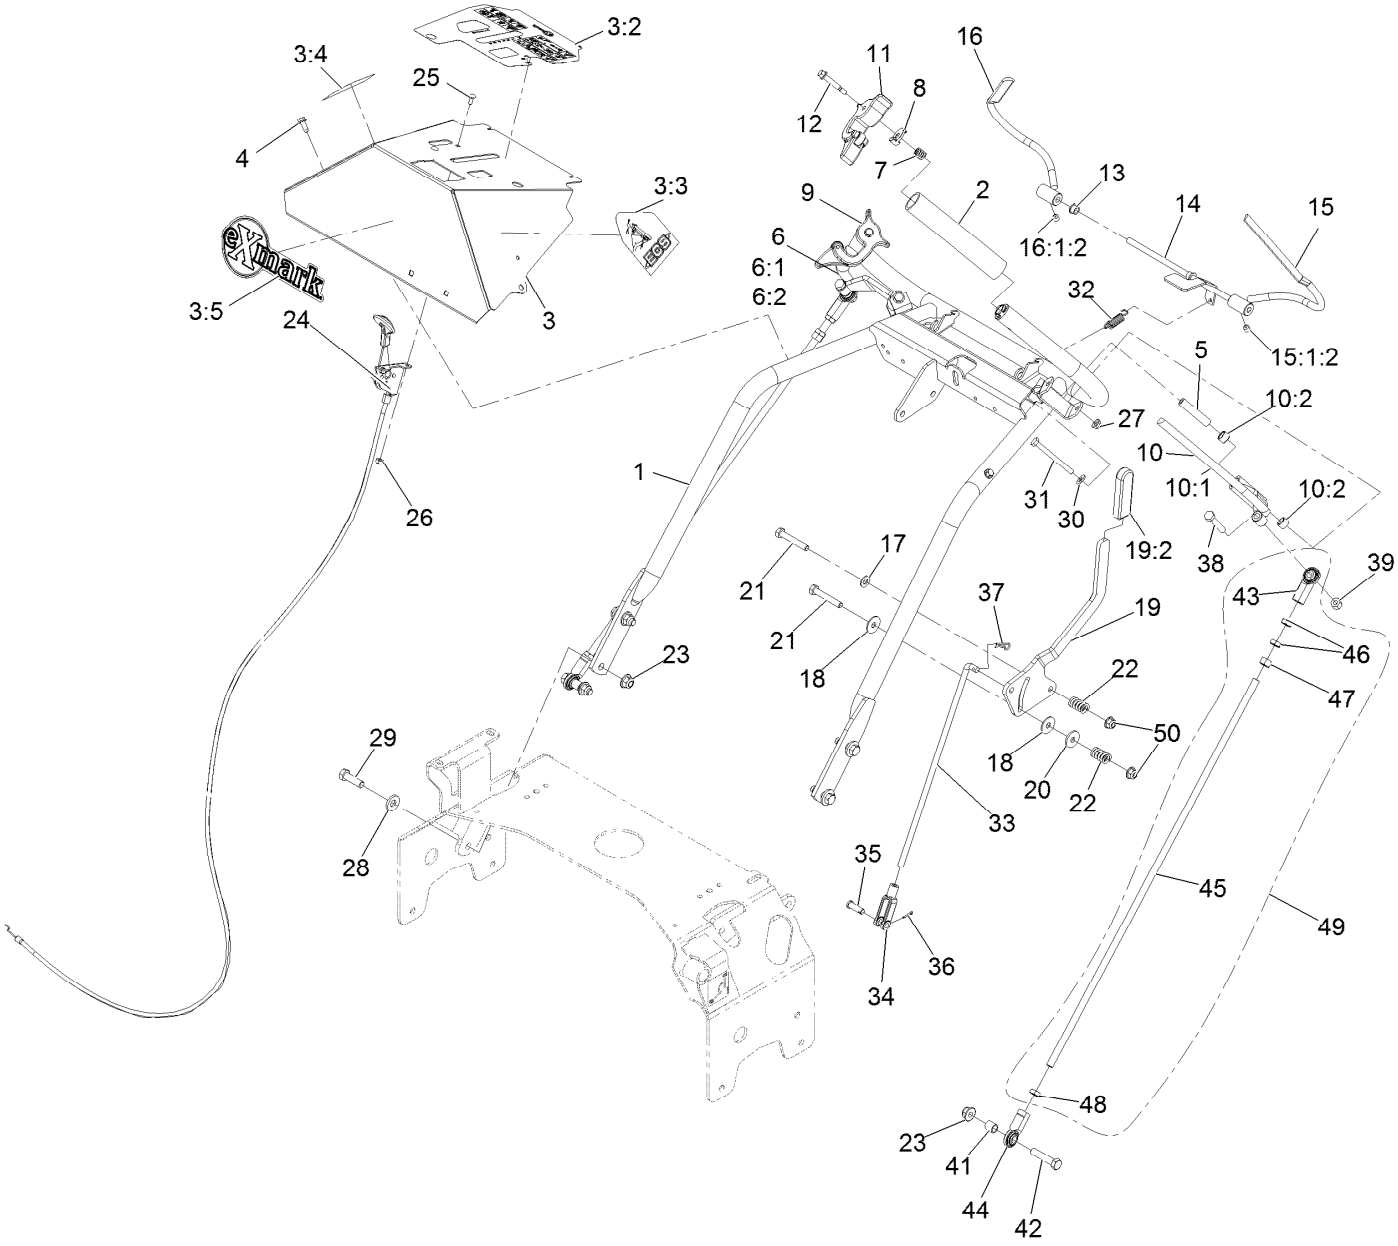


ECS Upper Handle Controls Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-2642-03	1	Weld, Handle
2	103-0815	2	Grip-BAR, Handle
3	126-2820	1	ASM, Console W/ Decals
3:2	126-3315	1	Decal-Console Ttx Efi
3:3	103-2242	1	Decal, Ecs Instruction LH
3:4	103-2243	1	Decal, Ecs Instruction RH
3:5	126-6877	1	Decal, Exmark Logo
4	32144-10	2	Screw-HWH 1/4-20 X .62
5	103-0027	2	Bushing-Lever, Drive
6	103-2513	1	Asm, Drive Lever RH
6:1	116-4082	1	Wld,RH Drive Lever
6:2	1-413152	2	Bushing-Sleeve
7	1-633349	2	Spring-Compression
8	126-2921	2	Latch, Ecs
9	103-1371	1	Thumb Latch Asm RH
10	103-2514	1	Asm, Drive Lever LH
10:1	116-4081	1	Wld,LH Drive Lever
10:2	1-413152	2	Bushing-Sleeve
11	103-1372	1	Thumb Latch Asm LH
12	126-2931	2	Screw-Shoulder
13	1-303365	2	Bushing-Nylon
14	103-0769-03	1	Rod Weldment, OPC
15	116-4079	1	Wld,LH OPC Lever ■
15:1:2	1-803322	1	Setscrew-5/16-24 X 5/16 ●
16	116-4080	1	Wld,RH OPC Lever ■
16:1:2	1-803322	1	Setscrew-5/16-24 X 5/16 ●
17	3256-23	1	Washer-5/16 SAE
18	1-323244	2	Washer-Friction
19	126-0148	1	Lever, Shift W/Grip
19:2	103-5994	1	Grip-Handle, Steering
20	1-603716	1	Washer-Friction Disc
21	322-11	2	Screw-HH 5/16-18 X 2 1/4
22	1-323245	2	Spring-Compression
23	104-8301	6	Nut-Nyloc 3/8-16 Flg
24	109-3958	1	Control-Throttle
25	1-807513	2	Bolt-Carriage #10-24 X 1/2
26	3296-2	2	Nut-Nyloc #10-24
27	104-7201	2	Nut-Nyloc 1/4-20 Flg
28	98-5975	4	Washer-Spring Disc 3/8
29	323-7	4	Screw-HH 3/8-16 X 1 1/4
30	3256-22	2	Washer-1/4 SAE
31	321-14	2	Screw-HH 1/4-20 X 2 3/4
32	1-303363	1	Spring-Extension
33	1-413225	1	Rod, Speed Control
34	1-303105	1	Yoke-Adjustable
35	1-808280	1	Pin-Clevis 5/16 X 1 49/64
36	3272-5	1	Pin-Cotter 3/32 X 1/2
37	1-806003	1	Hairpin-Cotter
38	322-9	2	Screw-HH 5/16-18 X 1 3/4
39	3296-29	2	Nut-Nyloc 5/16-18
41	103-1166	2	Spacer-Tube, Pump Link
42	323-9	2	Screw-HH 3/8-16 X 1 3/4
43	103-2463	4	Balljoint
44	103-1167	2	Joint-Ball End
45	103-1148	2	Rod,Drive Lever
46	3220-3	4	Nut-Jam 3/8-24
47	3219-3	2	Nut-Hex 3/8-24
48	3220-16	2	Nut-Jam 3/8-24 LH
49	116-3414	2	Drive Link ASM
50	104-8300	2	Nut-Nyloc 5/16-18 Flg

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.
■ Use Pro-Lock retaining type, Part no. 1-840023 (.5cc tube) on inside of bore of OPC hub.


Controls Assembly

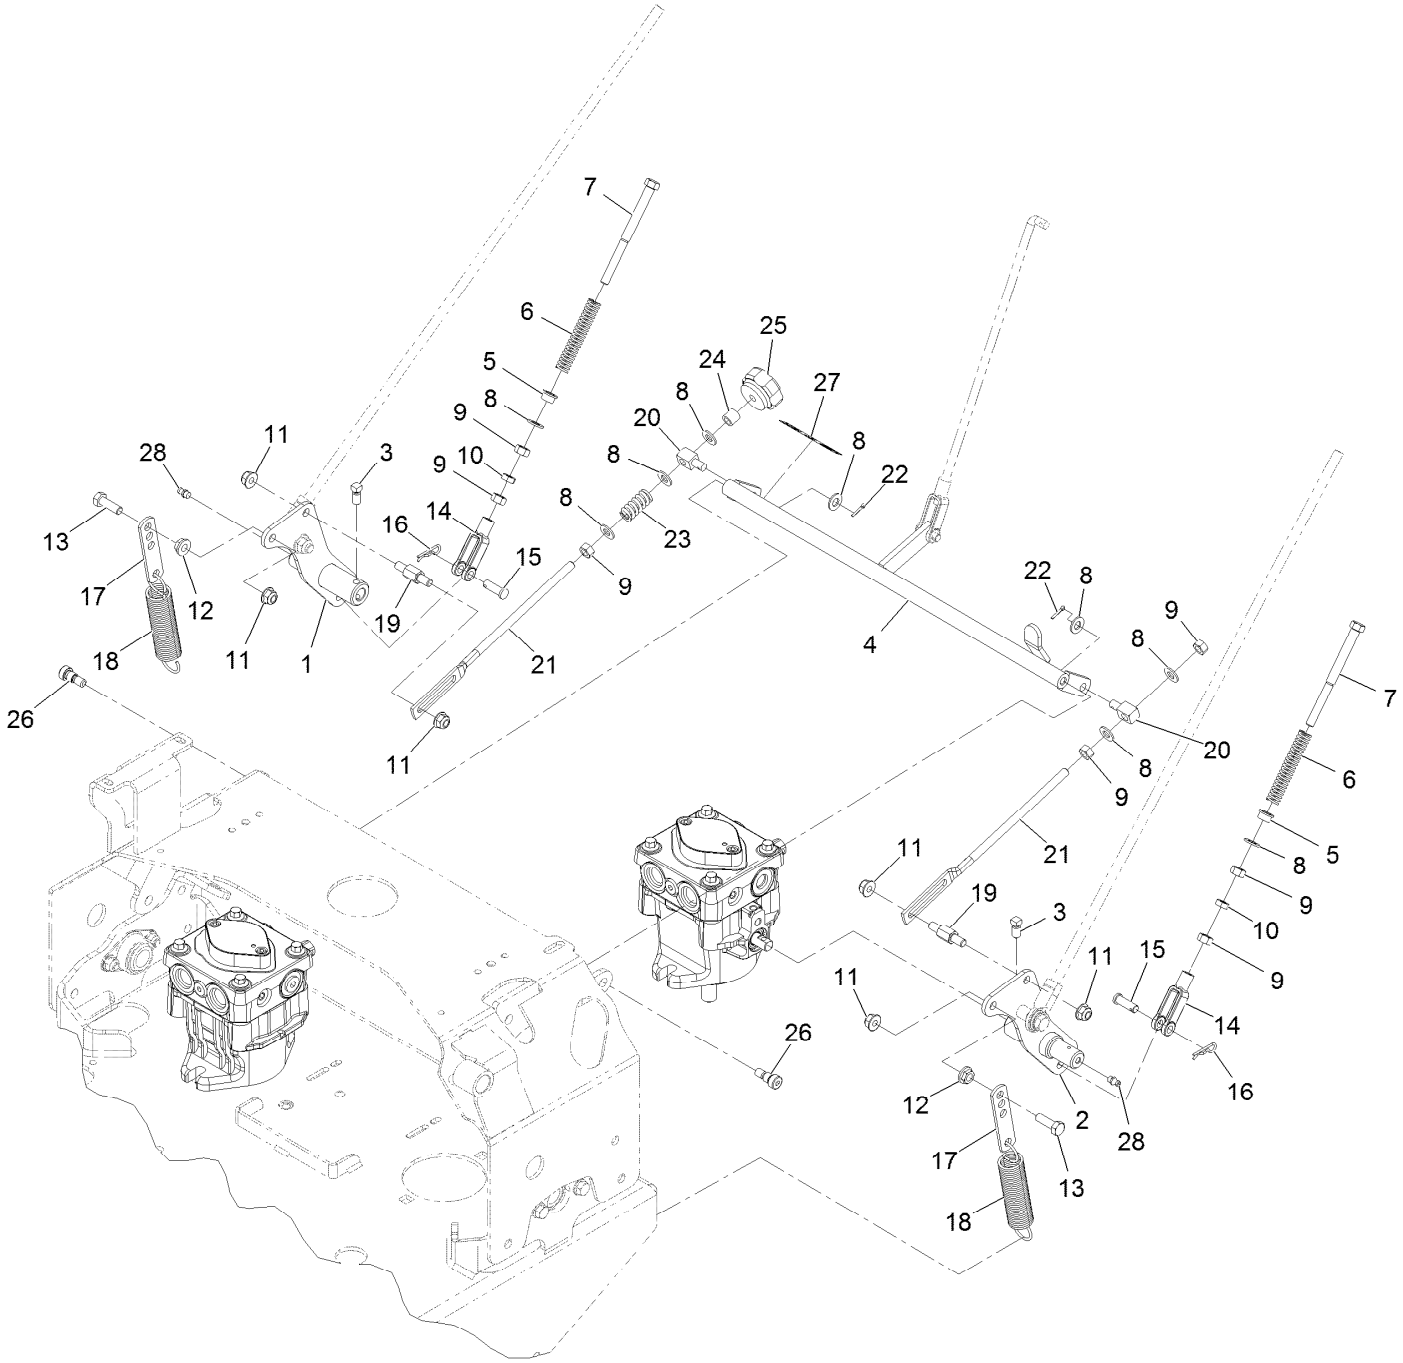

Controls Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-9975	1	Weld, Motion Control, Rt
2	116-9974	1	Weld, Motion Control, Lt
3	1-803022	2	Setscrew-5/16-18 X 5/8
4	126-2982-01	1	Weld, Speed Control
5	1-603735	2	Bushing-Flanged
6	103-0265	2	Spring, Neutral Return
7	1-603737	2	Bolt-Neutral Return
8	3256-23	9	Washer-5/16 SAE
9	3219-2	7	Nut-Hex 5/16-24
10	3220-2	2	Nut-Jam 5/16-24
11	104-8300	6	Nut-Nyloc 5/16-18 Flg
12	32128-20	2	Nut-Whizlock 5/16-18
13	322-5	2	Screw-HH 5/16-18 X 1
14	1-303105	2	Yoke-Adjustable
15	1-808280	2	Pin-Clevis 5/16 X 1 49/64
16	1-806003	2	Hairpin-Cotter
17	1-613089	2	Tab-Spring, Extension
18	1-603693	2	Spring
19	126-0610	2	Pin, Motion Control
20	1-603676	2	Swivel-Adjustable, Short
21	1-413350	2	Link-Control, Speed
22	3272-5	2	Pin-Cotter 3/32 X 1/2
23	1-323245	1	Spring-Compression
24	1-603903	1	Spacer
25	103-3060	1	Knob-Tracking
26	1-809056	2	Screw-Sh 5/16-18 X 1 3/8
27	116-7918	1	Decal-Tracking Adjustment
28	302-19	2	Zerk-1/4-28 Str


Engine Deck Assembly

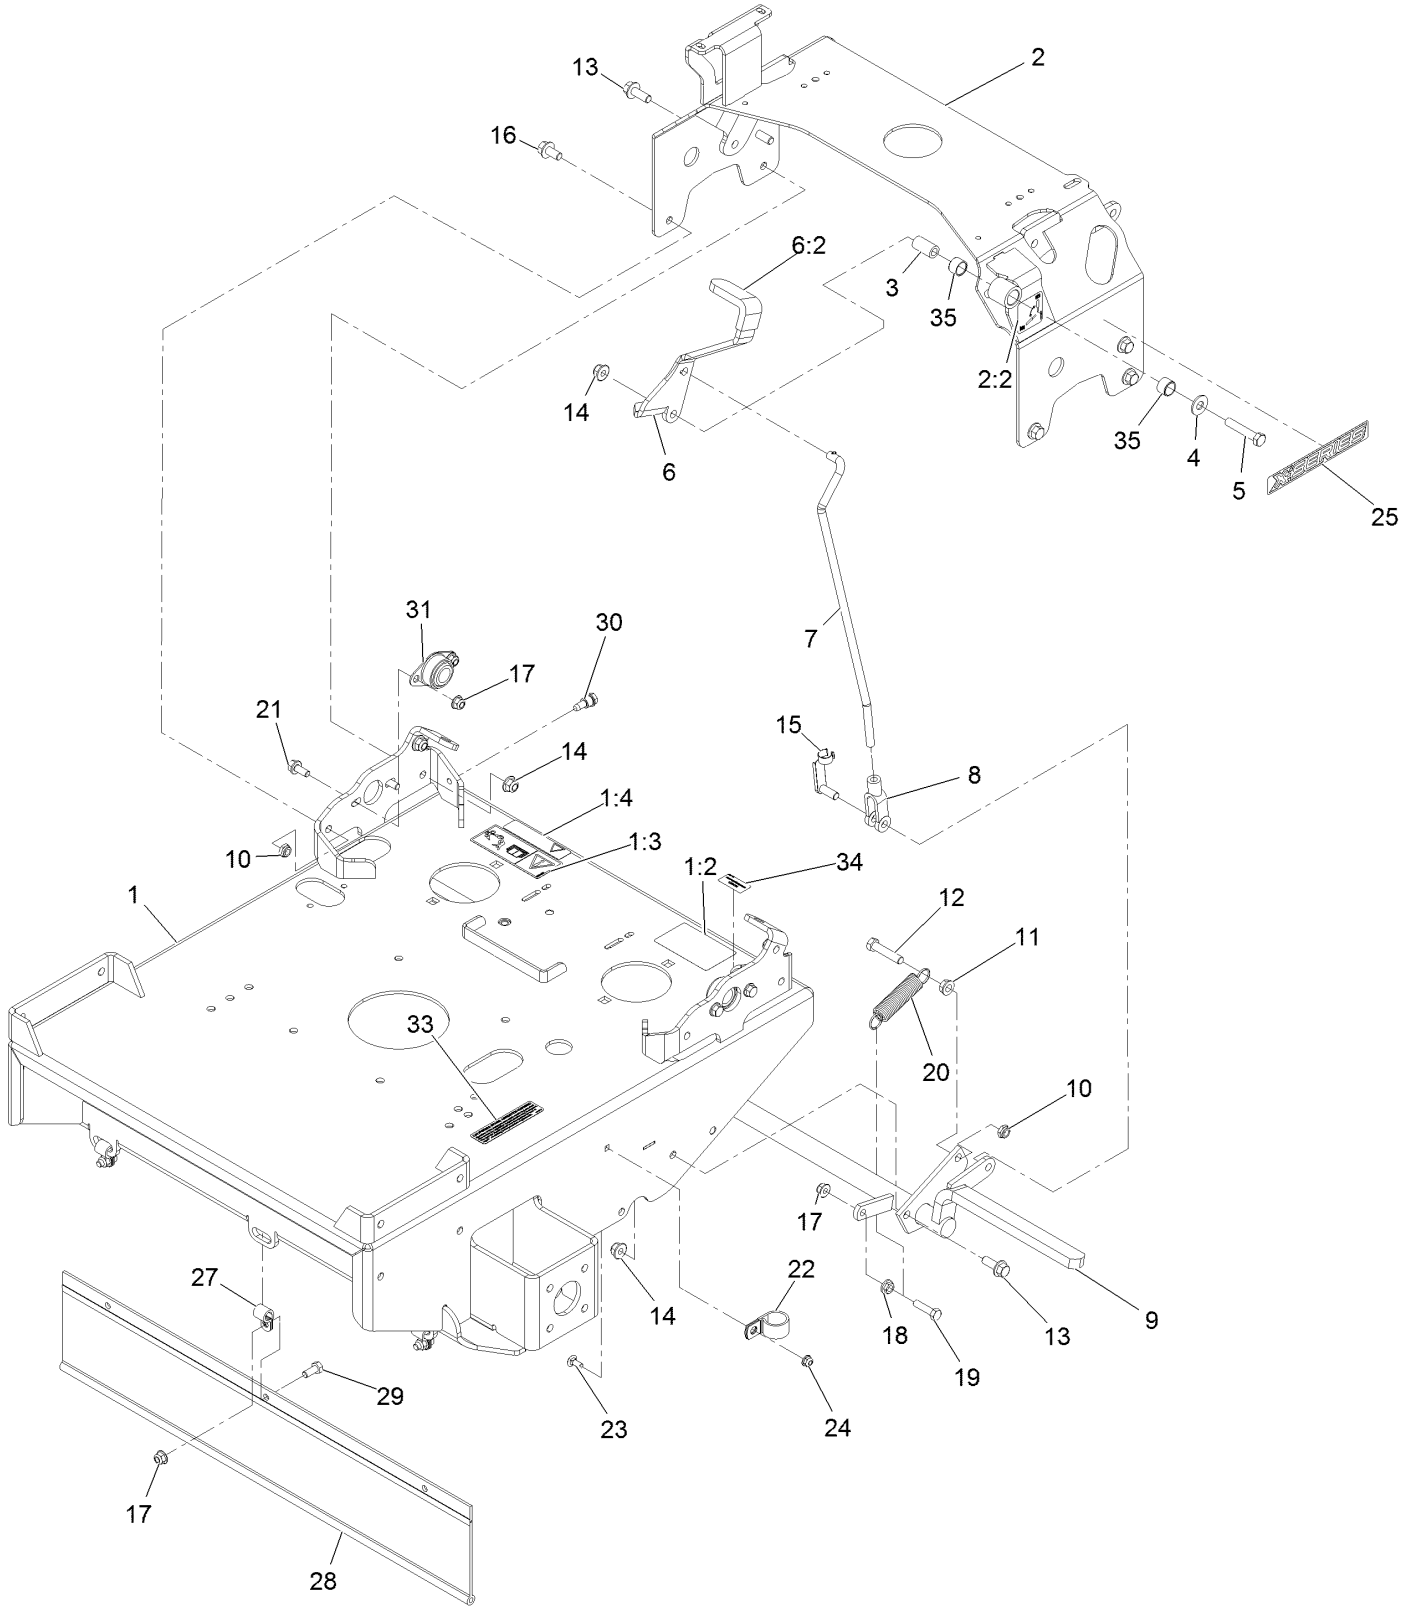

Engine Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-2521	1	ASM, Engine Deck W/ Decals
1:2	98-1977	1	Decal-Warning
1:3	126-1400	1	Decal-Warning, Sulky
1:4	116-8253	1	Decal-Drive Release
2	126-2181	1	ASM, Tank Support W/ Decal
2:2	116-5988	1	Decal-Park Brake, CE
3	1-413344	1	Bushing-Pivot
4	3256-4	1	Washer-3/8 Std
5	323-10	1	Screw-HH 3/8-16 X 2
6	126-2180	1	ASM, Brake Lever W/ Grip
6:2	1-303020	1	Grip-Lever
7	116-9960	1	Linkage-Brake
8	1-633131	1	Yoke-Linkage, Brake
9	116-9159	1	Wld,Brake Ttx
10	3296-59	3	Nut-Nyloc 3/8-16 Thin
11	3290-357	1	Nut-Whizlock 3/8-16
12	323-9	1	Screw-HH 3/8-16 X 1 3/4
13	3234-42	7	Screw HHF 3/8-16 X 1
14	104-8301	8	Nut-Nyloc 3/8-16 Flg
15	103-2399	1	Pin-Clevis Spring 3/8
16	3234-12	2	Screw-HH Flg 3/8-16 X 3/4
17	104-8300	8	Nut-Nyloc 5/16-18 Flg
18	32128-20	1	Nut-Whizlock 5/16-18
19	322-6	1	Screw-HH 5/16-18 X 1 1/4
20	1-323161	1	Spring
21	3234-47	4	Screw-HH Flg 5/16-18 X 3/4
22	1-643312	1	Clip-Loom
23	3229-11	1	Bolt-Carriage 1/4-20 X 5/8
24	104-7201	1	Nut-Nyloc 1/4-20 Flg
25	126-6573	2	Decal-X-Series
27	1-413510	3	Clip-Loom
28	103-2224	1	Shield, Drag
29	322-3	3	Screw-HH 5/16-18 X 3/4
30	115-1958	1	Bolt-Shoulder
31	1-633102	2	Bearing-Flanged
33	117-2718	1	Decal-Arrester, Spark
34	126-4345	1	Decal-Patent
35	1-413347	2	Sleeve-Bushing

Engine Assembly

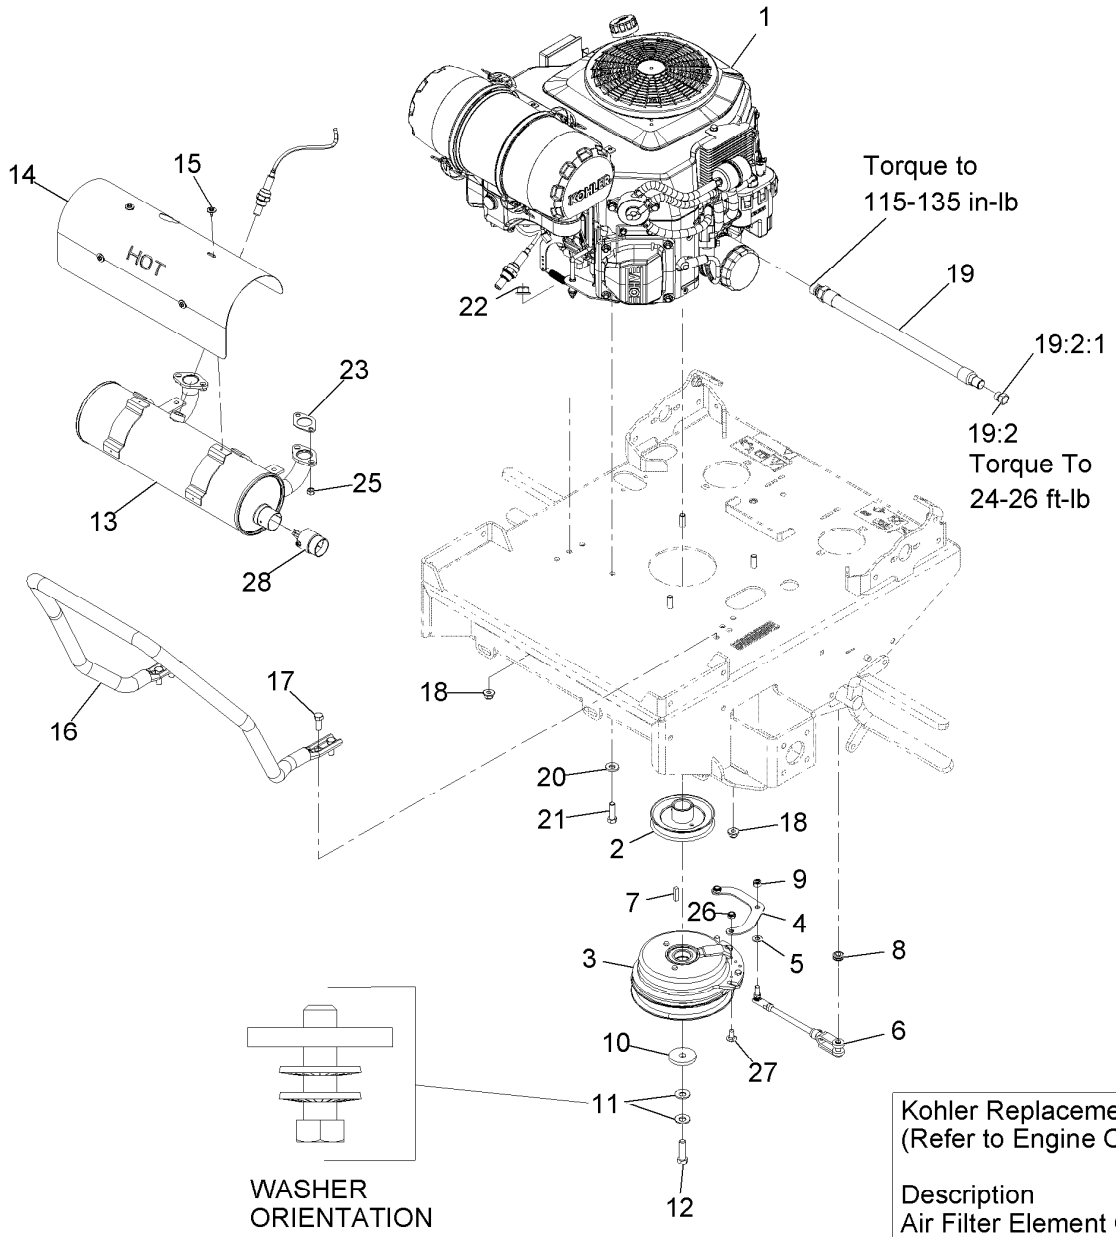

Kohler Replacement Parts List (Refer to Engine Owner's Manual)	
Description	Kohler P/N
Air Filter Element Outer	2508301-S
Air Filter Element Inner	2508304-S

Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine, Kohler Ecv650-3017 ●■
2	126-2605	1	Sheave W/ Hub
3	126-2601	1	Clutch, 200 Ft/Lbs, 1.13
4	126-2602	1	Strap, Clutch
5	3256-23	1	Washer-5/16 SAE
6	126-0620	1	ASM, Clutch Anchor
7	1-807259	1	Key-Machine 1/4 X 1/4 X 1 ❑
8	237-136	1	Grommet
9	3296-4	1	Nut-Lock 5/16-24
10	109-6919	1	Washer-Clutch
11	1-603610	2	Washer-Spring Disc 7/16
12	87-2080	1	Bolt-Hex, TAP ◆
13	116-8653	1	Muffler-Ttx, Efi
14	116-8654	1	Shield-Muffler,Ttx Efi
15	116-1103	4	Screw-HH, Thread Forming
16	116-8575-03	1	Guard,Air Cleaner
17	323-6	4	Screw-HH 3/8-16 X 1
18	104-8301	4	Nut-Nyloc 3/8-16 Flg
19	116-5316	1	Oil Drain Hose ASM ▲
19:2	353-508	1	Plug-W/O-Ring
19:2:1	237-42	1	O-Ring
20	1-303334	4	Washer-Spring Disc 5/16
21	322-7	4	Screw-HH 5/16-18 X 1 1/2
22	104-8300	4	Nut-Nyloc 5/16-18 Flg
23	110-6697	2	Gasket-Exhaust
25	114-3549	4	Nut-M8
26	3296-47	2	Nut-Lock, NI
27	3230-18	2	Screw-CARR
28	116-0433	1	Arrestor,Spark 1.375 DIA

● Not serviced separately


■ Obtain parts from www.kohlerplus.com

▲ Use a Teflon Pipe Sealant or equivalent on threads.

◆ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

❑ Apply anti-seize compound to engine crankshaft, pulley hub I.D., clutch bore I.D. and square key.

Fuel Assembly

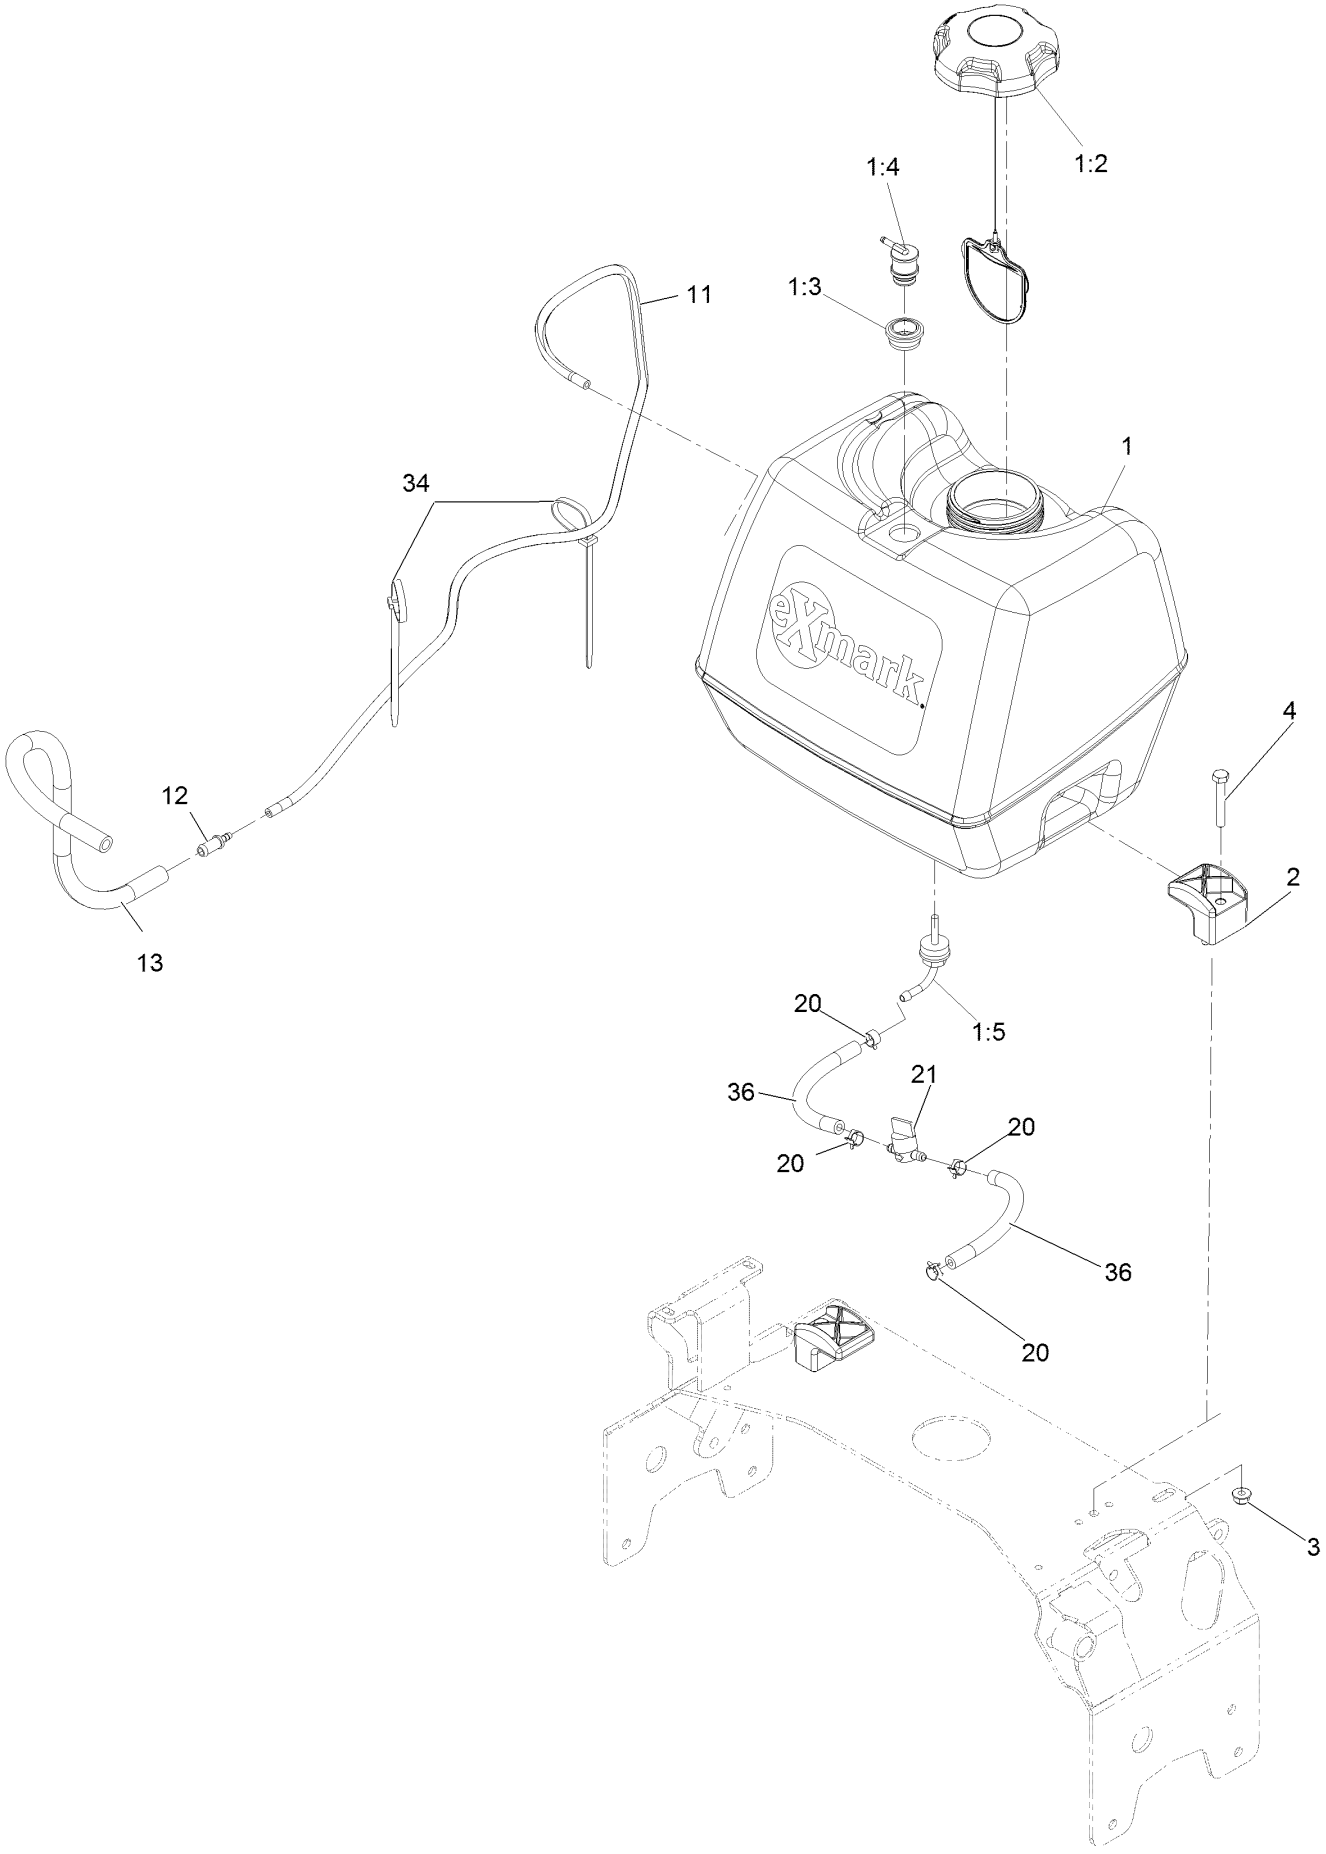


Fuel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-1525	1	ASM, Fuel Tank
1:2	120-5461	1	Cap-Fuel, Ratcheting
1:3	114-0284	1	Grommet
1:4	119-3547	1	Valve-Vent, Fuel
1:5	103-2605	1	Fitting-Fuel Bulkhead W/Strainer ●
2	107-4543	2	Clamp
3	104-8300	2	Nut-Nyloc 5/16-18 Flg
4	322-10	2	Screw-HH 5/16-18 X 2
11	126-1679	1	Hose, Emissions
12	98-2952	1	Fitting-Straight
13	119-8562	1	Hose-Fuel
20	2412-98	4	Clamp-Hose
21	1-603770	1	Valve-Fuel
34	1-303335	1	Tie-Plastic
36	110-1876	2	Hose-Fuel

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

Hydro Assembly

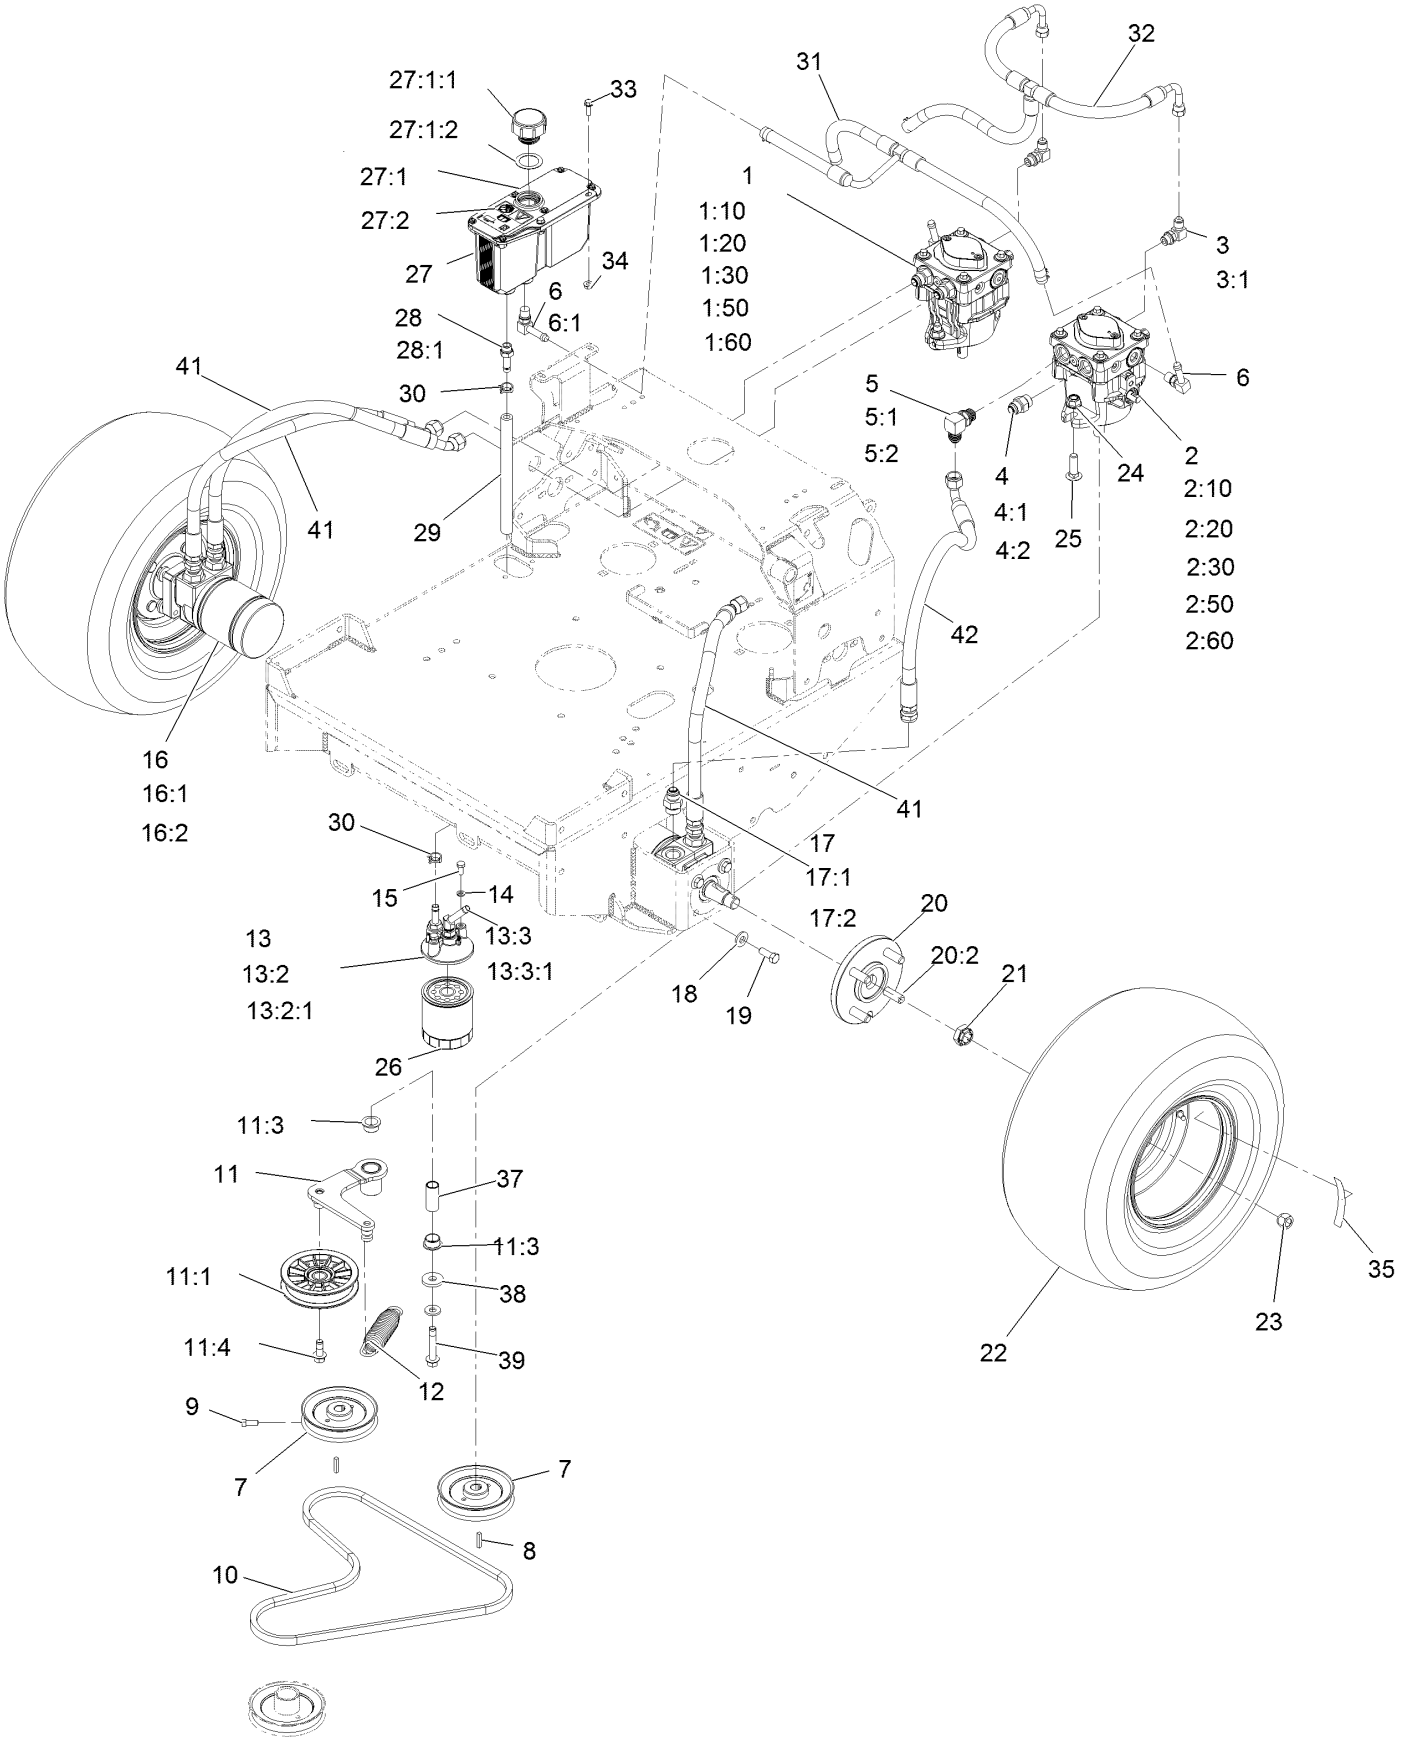


Hydro Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-2495	1	Pump-HYD Pe RH TTH
1:10	103-2664	1	Input Shaft Kit
1:20	94-6922	1	Bearing-Thrust
1:30	103-2666	1	Cylinder Block Kit
1:50	105-6184	1	Seal Overhaul Kit
1:60	126-2479	1	Kit, 10Cc Pump Kit
2	116-2494	1	Pump-HYD Pe LH TTH
2:10	103-2664	1	Input Shaft Kit
2:20	94-6922	1	Bearing-Thrust
2:30	103-2666	1	Cylinder Block Kit
2:50	105-6184	1	Seal Overhaul Kit
2:60	126-2479	1	Kit, 10Cc Pump Kit
3	103-1802	2	Ftg-Elbow 90D
3:1	1-603921	1	O-Ring
4	1-603990	3	Fitting-Straight
4:1	1-603920	1	O-Ring
4:2	1-603992	1	O-Ring
5	103-2153	1	Fitting-90 DEG
5:1	1-603920	1	O-Ring
5:2	1-603992	1	O-Ring
6	100-4887	3	Fitting-Barbed, 90 DEG
6:1	237-42	1	O-Ring
7	1-413010	2	Sheave ASM
8	1-807272	2	Key
9	120-6474	4	Screw-Set, SQH
10	103-4761	1	Belt
11	126-2531	1	ASM, Pump Idler
11:1	109-4077	1	Pulley-Idler, Flat
11:3	109-8054	2	Bushing-Flange
11:4	126-1680	1	Screw-Hfh
12	116-6316	1	Spring-Extension
13	126-0621	1	ASM, Filter Head
13:2	103-1912	1	Adapter-Straight
13:2:1	237-42	1	O-Ring
13:3	103-1807	1	Fitting-Barbed, 45 DEG
13:3:1	237-42	1	O-Ring
14	1-805004	2	Washer-Lock
15	321-3	2	Screw-HH
16	1-603718	2	HYD Motor ASM
16:1	1-000119	1	Seal Kit
16:2	1-000138	1	Bearing And Seal Kit
17	1-603991	4	Fitting-Straight
17:1	237-80	1	O-Ring
17:2	1-603992	1	O-Ring
18	98-5975	9	Washer-Belleville
19	323-6	8	Screw-HH
20	112-9049	2	Wheel Hub ASM
20:2	1-633926	4	Stud-Wheel
21	116-2839	2	Nut-Lock
22	103-1715	2	Tire And Wheel Assy
23	242-50	8	Nut-Lug
24	114-8417	4	Nut-HF, NI
25	3232-3	4	Bolt-CARR
26	109-4180	1	Element, Oil Filter
27	126-1248	1	ASM, HYD Reservoir ■
27:1		1	Reservoir-HYD ●
27:1:1	103-1948	1	Cap-Reservoir, HYD
27:1:2	103-1949	1	Gasket-Cap
27:2	115-4212	1	Decal-Warning
28	103-1912	1	Adapter-Straight
28:1	237-42	1	O-Ring
29	103-2959	1	Hose-Charge
30	103-1988	6	Clamp-Hose
31	126-2550	1	Hose, Case
32	126-2555	1	Hose, Charge
33	32105-15	2	Screw-HWH
34	32128-33	2	Nut-HF
35	126-2056	2	Decal-Torque Wheel Lug-Hub
37	126-2954	1	Pivot, Idler
38	1-373034	1	Washer
39	126-2956	1	Screw-HHF W/ Patch
41	116-8646	3	Hose,Hydraulic W/Cover
42	119-7827	1	HYD Hose ASM

● Not serviced separately

■ Use Exmark Premium Hydro Oil P/N 109-9828 (32oz)

Electrical Assembly

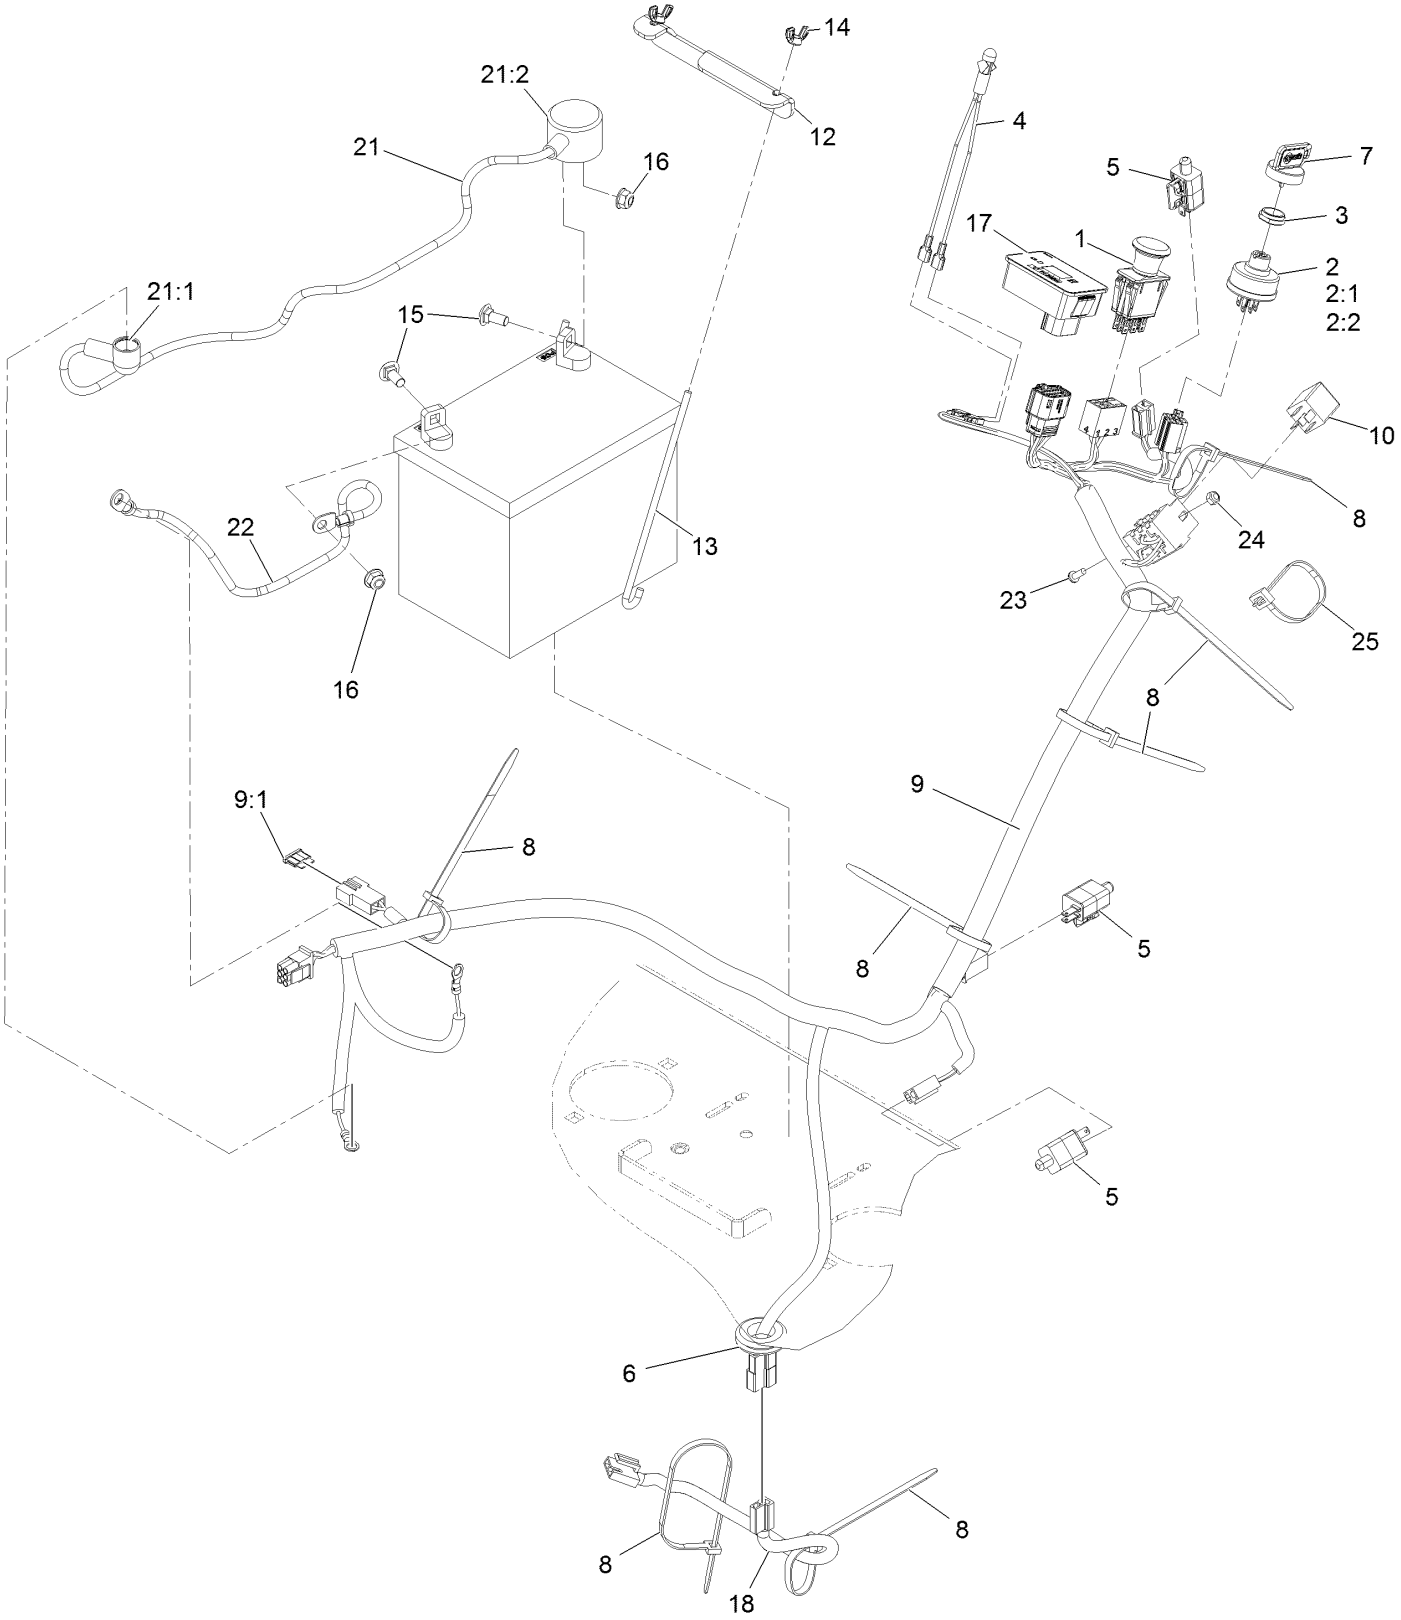


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	103-5221	1	Switch-PTO
2	103-0206	1	Switch-Ignition W/Keys
2:1	3254-5	1	Washer-Tooth, Internal
2:2	218-461	1	Nut-HH
3	103-0498	1	Nut-Ignition
4	1-643267	1	Indicator-Red LED
5	110-6765	3	Switch
6	1-543286	1	Grommet
7	103-2106	1	Key-Exmark Logo
8	1-303335	7	Tie-Cable 7 15/16 (Large)
9	126-3011	1	Harness-Main Ttx Kohler Efi ■
9:1	1-816001	1	Fuse-Blade Type, 20 Amp
10	1-643275	1	Relay-12Vdc 40 Amp
12	126-0008	1	Bracket, Battery Hold Down
13	1-633651	2	Bolt-Holddown
14	1-543792	2	Wingnut-Nyloc 1/4-20
15	3230-1	2	Bolt-Carriage 5/16-18 X 3/4
16	104-8300	2	Nut-Nyloc 5/16-18 Flg
17	116-8893	1	Module-Hour Meter
18	126-0624	1	Harness-Clutch Pigtail
21	109-7621	1	Positive Battery Cable ASM
21:1	1-543393	1	Insulator-Solenoid
21:2	109-2407	1	Insulator-Battery
22	1-413540	1	Cable-Battery, Negative ●
23	1-803071	1	Screw-Machine #10-24 X 1/2
24	3296-2	1	Nut-Nyloc #10-24
25	1-643115	1	Tie-Cable 11.4

● Not illustrated
■ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.


Stand-On Assembly

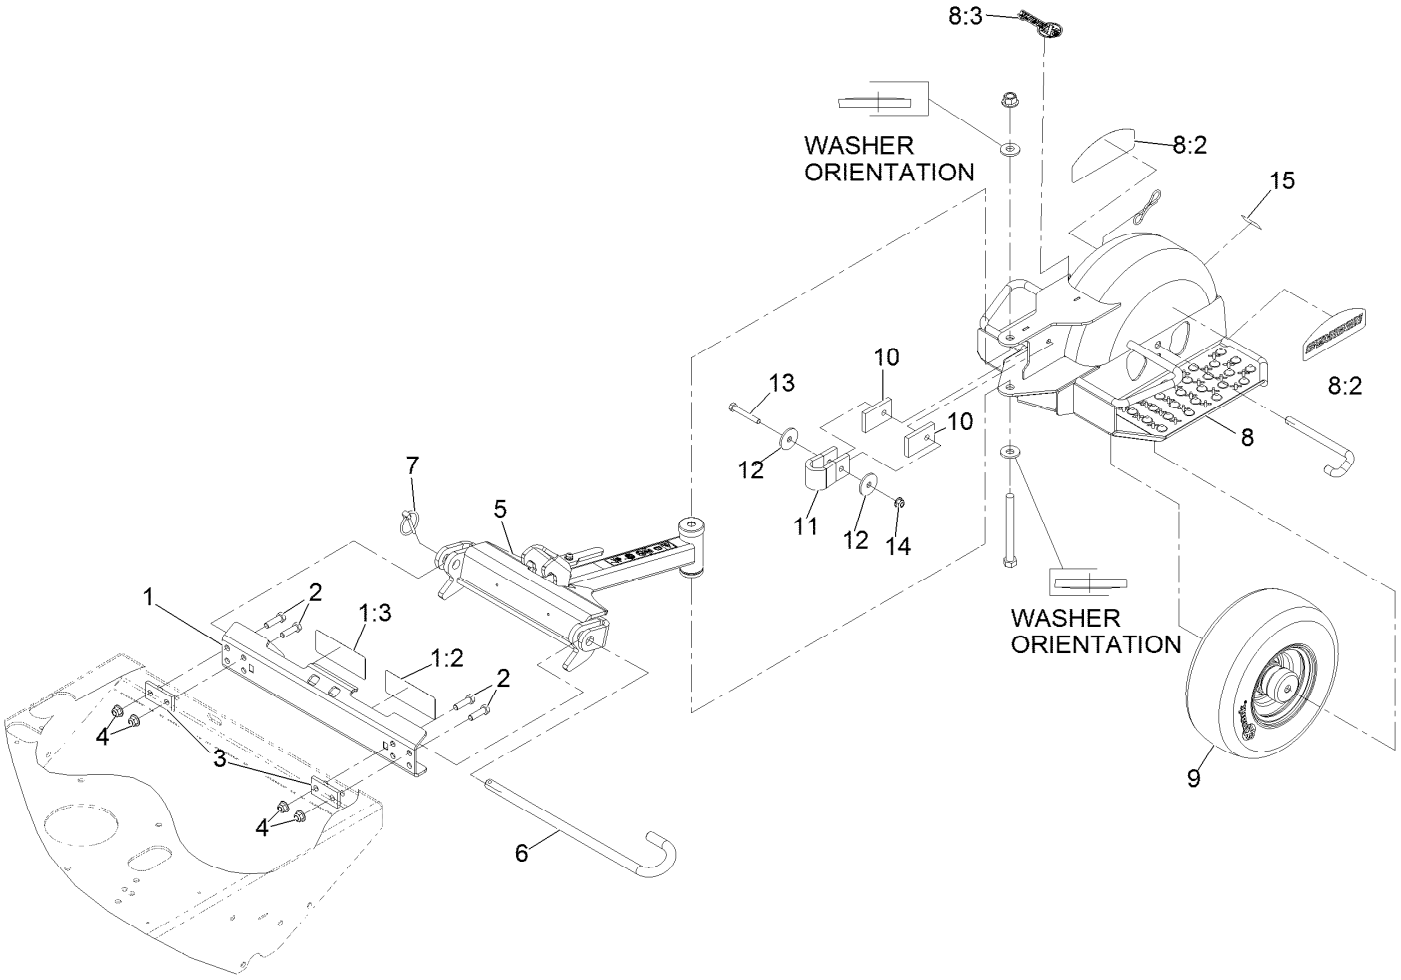

Stand-On Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-1955	1	ASM, Mount Plate
1:2	116-8225	1	Decal-Belt Drive Warning
1:3	126-1400	1	Decal-Warning, Sulky
2	323-7	4	Screw-HH 3/8-16 X 1 1/4
3	103-6663	2	Plate, Back-Up
4	104-8301	4	Nut-Nyloc 3/8-16 Flg
5	126-1958	1	ASM, Draw BAR
6	116-6302	1	Pin, Pivot
7	92-1298	1	Pin-Lynch
8	126-1952	1	ASM-Sulky Frame W/ Decals
8:2	126-6893	2	Decal, Standon
8:3	126-6894	1	Decal, Exmark
9	116-7228	1	ASM, Wheel And Bearings
10	103-6654	2	Pad, Stop
11	103-6652	1	Stop, Rotation
12	1-213069	2	Washer
13	322-11	1	Screw-HH 5/16-18 X 2 1/4
14	104-8300	1	Nut-Nyloc 5/16-18 Flg
15	126-4345	1	Decal-Patent


Draw Bar Assembly

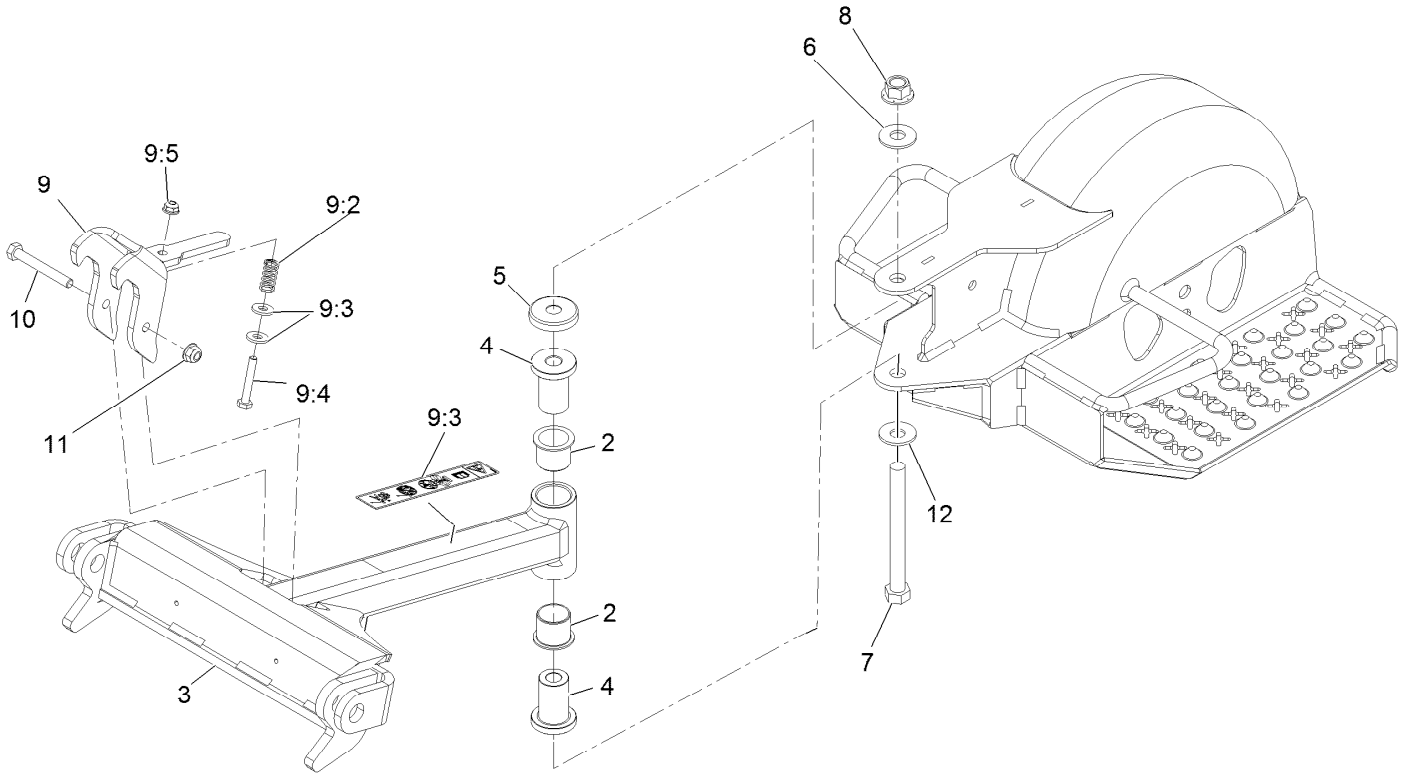

Draw Bar Assembly (continued)

Ref.	Part Number	Qty.	Description
2	126-1963	2	Bushing-Pivot
3	126-1411	1	Decal-Sulky Hazard
4	126-1964	2	Spacer, Pivot
5	116-6313	1	Cover, Dust
6	116-8429	1	Washer-Belleville
7	325-19	1	Screw-HH 1/2-13 X 5
8	99-5107	1	Nut-Lock 1/2-13
9	126-2125	1	Transport Latch ASM
9:2	116-6523	1	Spring, Compression
9:3	3256-2	2	Washer-1/4 Std
9:4	321-37	1	Screw-HH
9:5	104-7201	1	Nut-Nyloc 1/4-20 Flg
10	322-12	1	Screw-HH 5/16-18 X 2 1/2
11	104-8300	1	Nut-Nyloc 5/16-18 Flg
12	1-513435	1	Washer-Spring Disc 1/2

Wheel Assembly

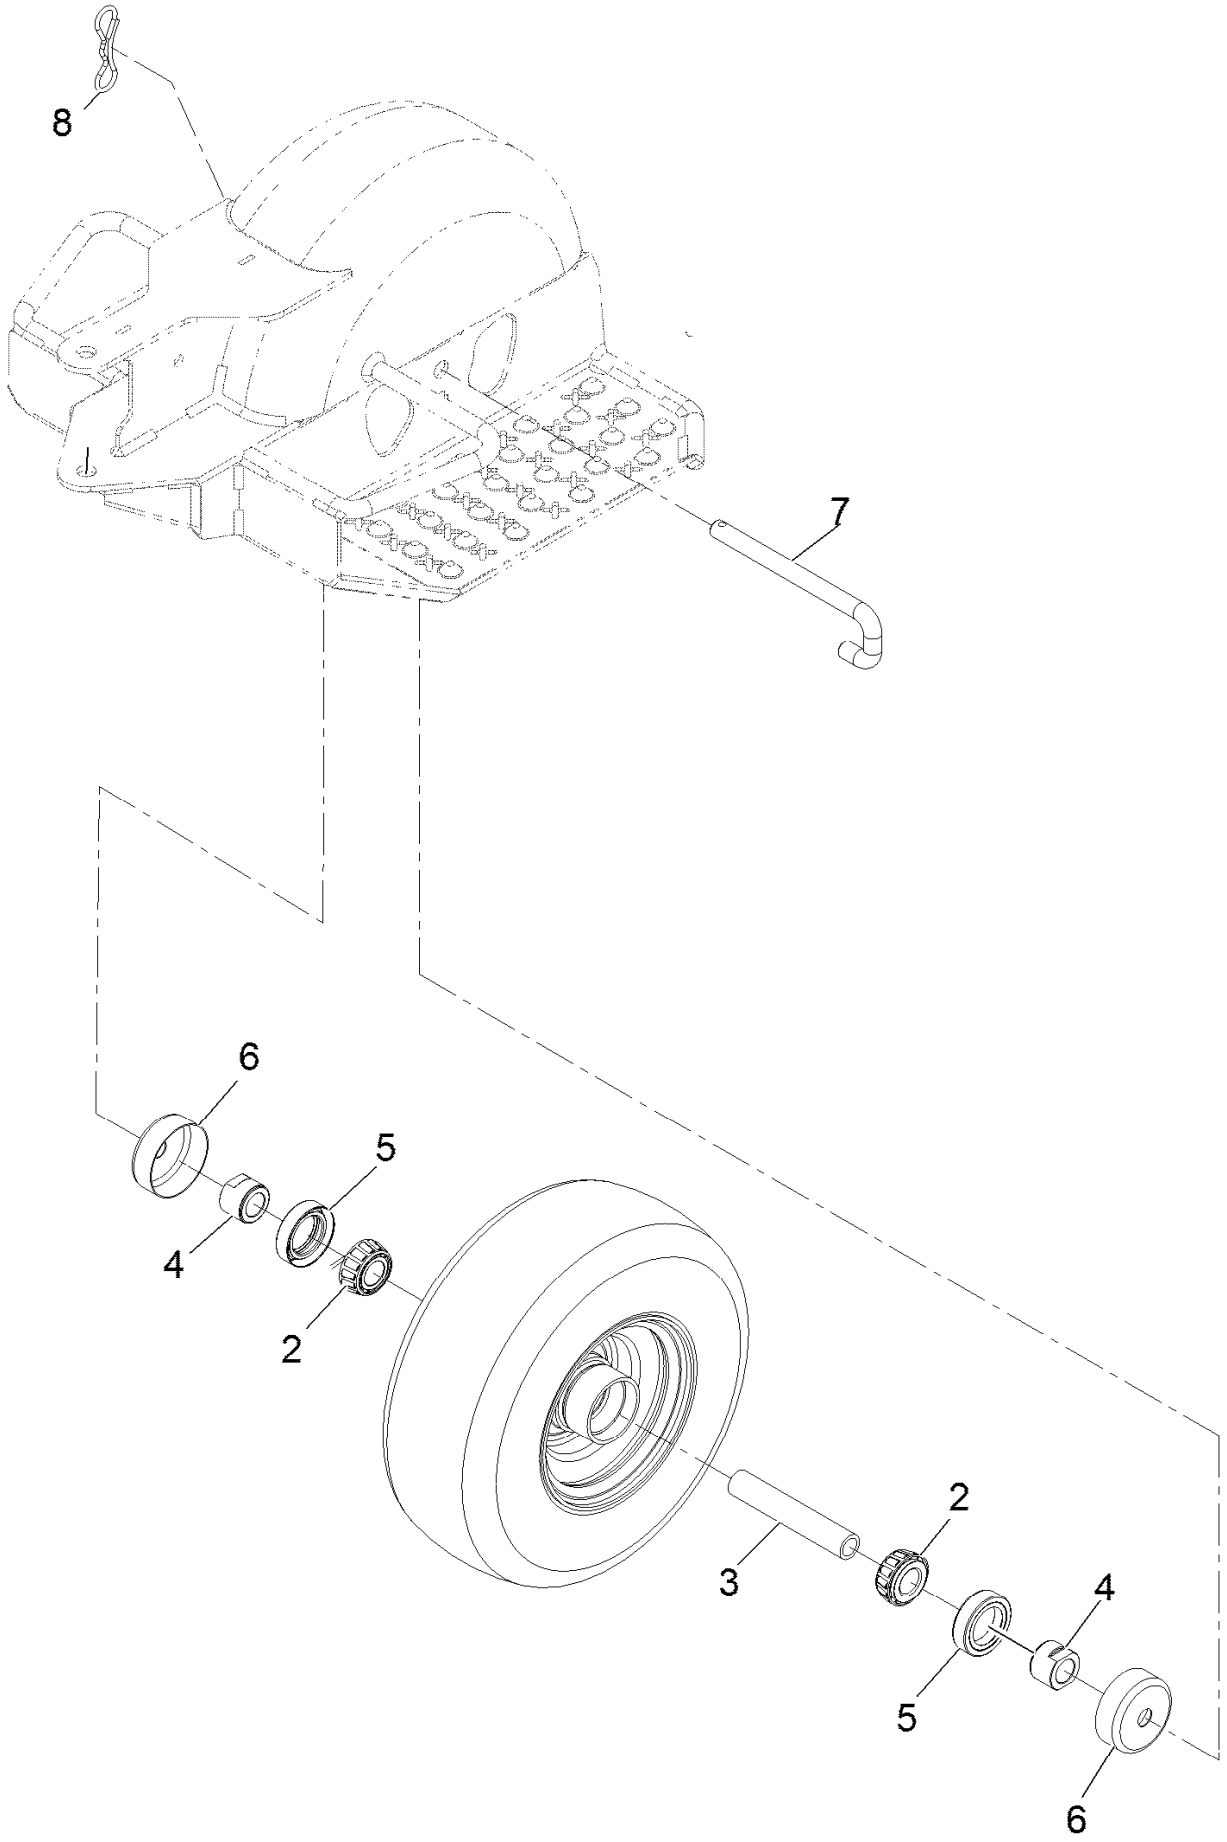

Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
2	1-633585	2	Bearing-Cone, Taper
3	103-3157	1	Axle-Caster
4	103-3051	2	Spacer-Nut
5	103-0063	2	Seal-Caster
6	103-2768	2	Guard-Seal
7	116-6017	1	Pin, Caster
8	116-6392	1	Pin-Cotter, Locking

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
FULL SUSPENSION SEAT
DECK LIFT ASSIST KIT
HITCH KIT
LIGHT KIT
12V POWER PORT
MICRO-MULCH SYSTEM
OPERATOR CONTROLLED DISCHARGE
SUN SHADE
TRASH CONTAINER
TURF STRIPER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
DUAL-TAIL WHEEL
FLOOR PAN EXTENDER
HITCH KIT
LIGHT KIT
MICRO-MULCH SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)
SNOW BLADE
SNOWBLOWER
SUN SHADE
TRASH CONTAINER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM
WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER
MICRO-MULCH SYSTEM
TURF STRIPER
STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No. Label Here (Included in the Literature Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2016 Exmark Mfg. Co., Inc.
All Rights Reserved

Industrial Park Box 808
Beatrice, NE 68310
(402) 223-6300
Fax (402) 223-5489

Part No. 4502-591 Rev. B
Printed in the USA.

www.exmark.com