



Proline
**Mid-Size Traction
Unit**

13 HP Kohler Gear Drive

Model No. 30159 – 890001 & UP

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Fuel Tank and Idler Bracket Assembly	1	Cylinder Head, Valves And Breather	11
Transmission and Idler Pulley Assembly	2	Ignition / Electrical	12
Brake, Wheel Pulley and Wheel Assembly	3	Blower Housing And Baffles	13
Wheel And Tire Asm	4	Starter System	14
Handle and Control Panel Assembly	5	Fuel System	15
Engine Assembly	6	Engine Controls	16
Clutch Asm No. 54-3200	7	Air Cleaner	17
Peerless Transmission Model 700-082	8	Exhaust	18
Crankcase	9	Electric Schematic	19
Oil Pan / Lubrication	10		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

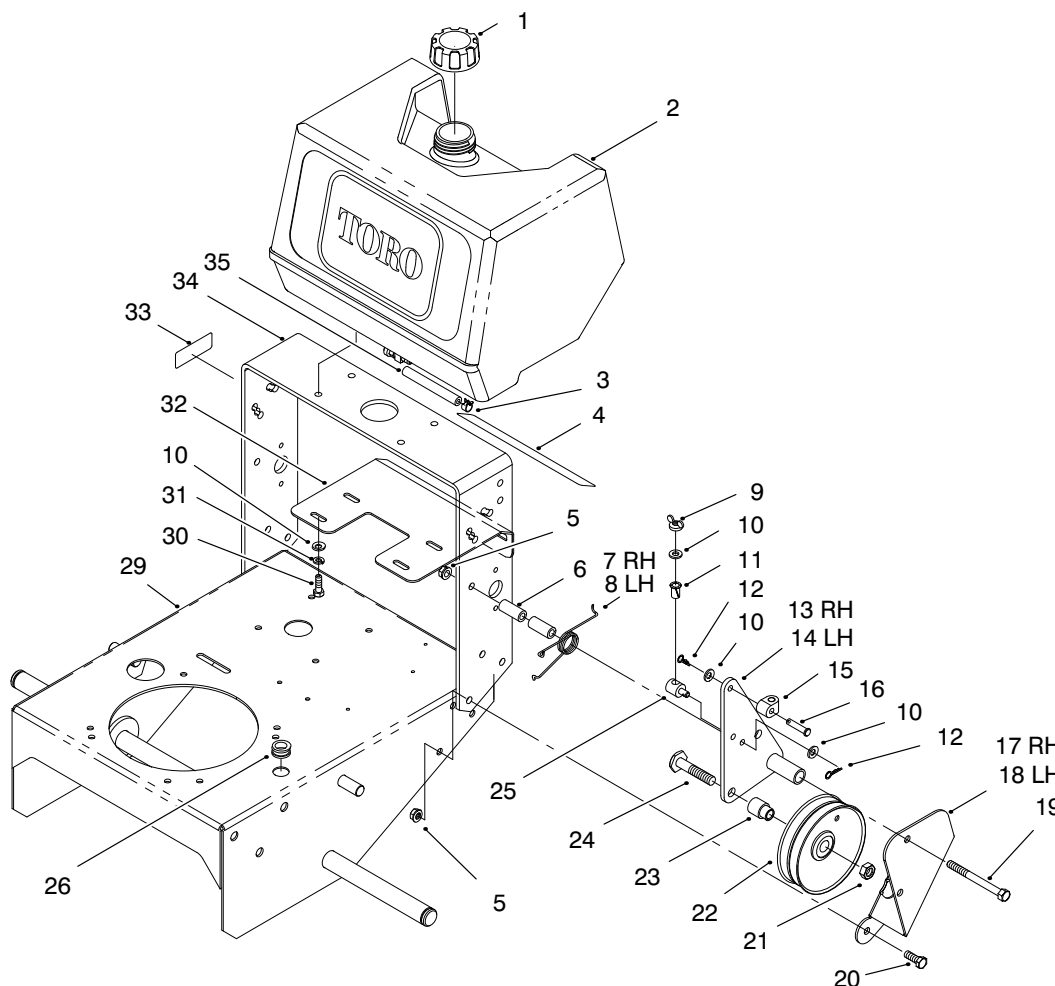

Sheet No.: 2

Fuel Tank and Idler Bracket Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	55-3570	1	Cap-Fuel	29	93-1161	1	Frame
2	95-2802	1	Tank-Fuel	30	322-4	4	Screw-HH
3	2412-98	2	Clamp-Hose	31	3253-4	4	Washer-Lock
4	82-7750	1	Decal-Ground Speed	32	66-7400	1	Plate-Control
5	3296-39	8	Nut-Lock	33	95-2814	1	Decal-Fuel Shut-Off
6	74-0040	4	Spacer-Pivot	34	74-0360	1	Frame-Rear
7	51-4370	1	Spring-RH	35	47-2964	1	Hose-Gas
8	51-4380	1	Spring-LH				
9	32103-25	2	Nut-Wing				
10	3256-23	10	Washer-Flat				
11	52-2890	2	Bushing-Flanged				
12	3290-307	4	Pin-Cotter				
13	74-0230	1	Idler Bracket RH				
14	74-0220	1	Idler Bracket LH				
15	74-0521	2	Rod-Fitting				
16	283-6	2	Pin-Clevis				
17	67-6370	1	Bracket-RH				
18	67-6380	1	Bracket-LH				
19	323-16	2	Screw-HH				
20	323-6	6	Screw-HH				
21	3296-23	2	Nut-Lock				
22	95-2800	2	Pulley-Idler				
23	95-2801	2	Spacer-Pulley				
24	51-4450	2	Screw-Leveler				
25	68-9690	2	Fitting Rod				
26	237-124	1	Grommet				

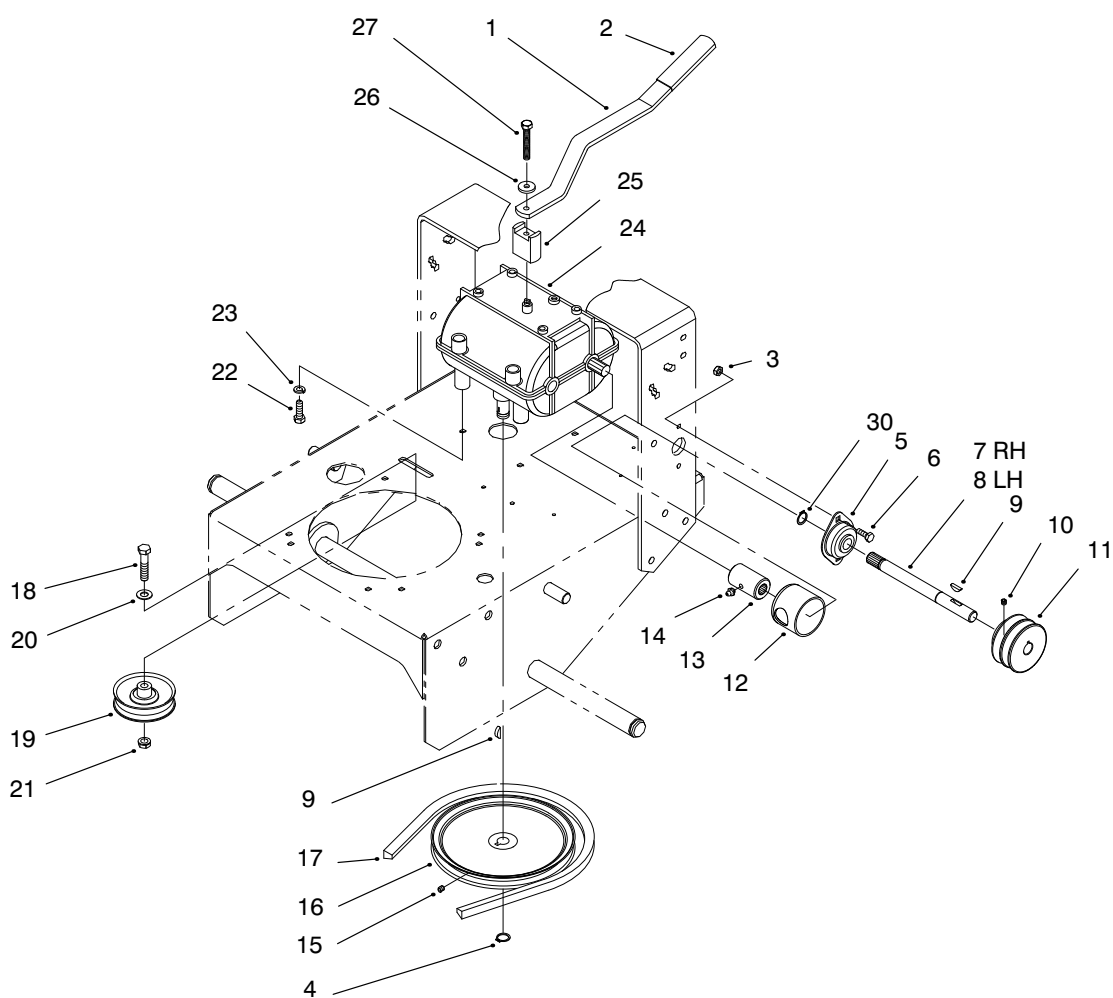

Sheet No.: 3

Transmission and Idler Pulley Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	74-0320	1	Lever-Shift	27	329-10	1	Screw
2	47-1970	1	Grip-Engagement	30	32151-62	2	Ring-Retaining
3	3296-42	4	Nut-Lock				
4	32120-64	1	Ring-Retaining				
5	51-4270	2	Bearing-Shaft Ext				
6	321-4	4	Screw-HH				
7	98-0788	1	Shaft-RH				
8	98-0787	1	Shaft-LH				
9	3257-5	3	Key-Woodruff				
10	3245-3	2	Screw-HSH				
11	74-0480	2	Pulley-Drive ASM				
12	51-4220	2	Guard-Coupler				
13	98-0789	2	Coupler				
14	302-5	2	Fitting-Grease				
15	3245-1	1	Screw-Set				
16	51-4190	1	Pulley-Drive				
17	26-9671	1	"v" Belt				
18	323-9	1	Screw-HH				
19	51-4810	1	Pulley-Idler				
20	3256-24	1	Washer-Flat				
21	32128-21	1	Nut-HF				
22	322-2	4	Screw-HH				
23	3253-4	4	Washer-Lock				
24	98-0791	1	Transmission-4 Speed				
25	72-2190	1	Mount-Shift Lever				
26	7-5461	1	Spacer-Transmission				

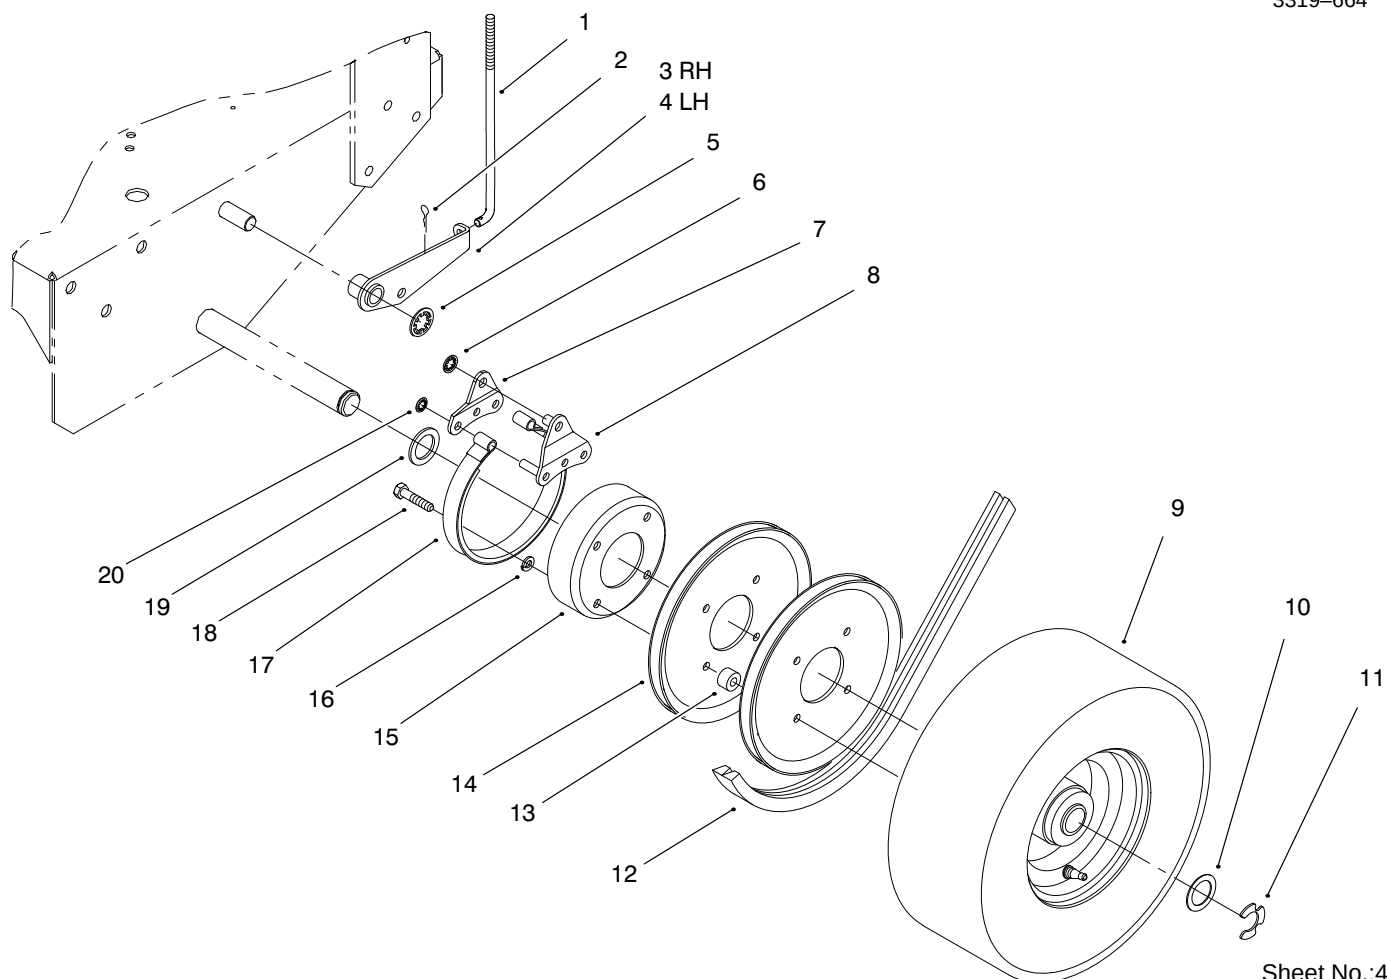


Sheet No.:4

Brake, Wheel Pulley and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	51-4580	2	Rod-Brake
2	3290-307	2	Pin-Cotter
3	67-6400	1	Arm-Brake RH
4	67-6420	1	Arm-Brake LH
5	32151-40	2	Ring-Retaining
6	32151-56	2	Ring-Retaining
7	51-4660	2	Plate-Brake Link
8	51-4650	2	Link-Brake
10	10-8110	A/R	Washer-Thrust
11	32151-91	2	Ring-Retaining
12	51-4291	2	"v" Belt
13	51-4170	8	Spacer-Pulley
14	51-4160	4	Pulley-Wheel
15	51-4180	2	Drum-Brake
16	3253-4	8	Washer-Lock
17	51-4700	2	Band-Brake
18	322-7	8	Screw-HH
19	51-4230	2	Washer-Wheel
20	32151-72	4	Ring-Retaining

Ref. No.	Part No.	Qty.	Description

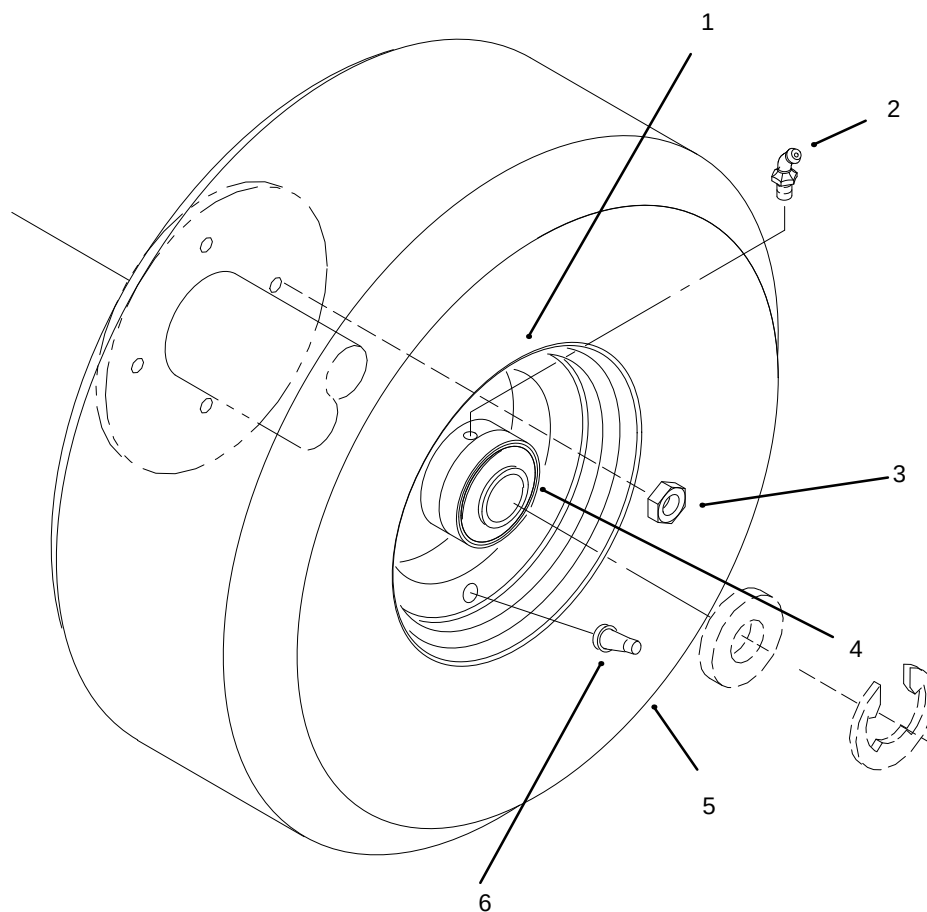


Sheet No.: 500

Wheel And Tire Asm

Ref. No.	Part No.	Qty.	Description
1	242-80	2	Rim
2	302-11	2	Fitting-Grease
3	3296-29	8	Nut-Lock
4	92-1746	4	Bearing
5	231-117	2	Tire-15x6
6	232-27	2	Valve Stem


Ref. No.	Part No.	Qty.	Description

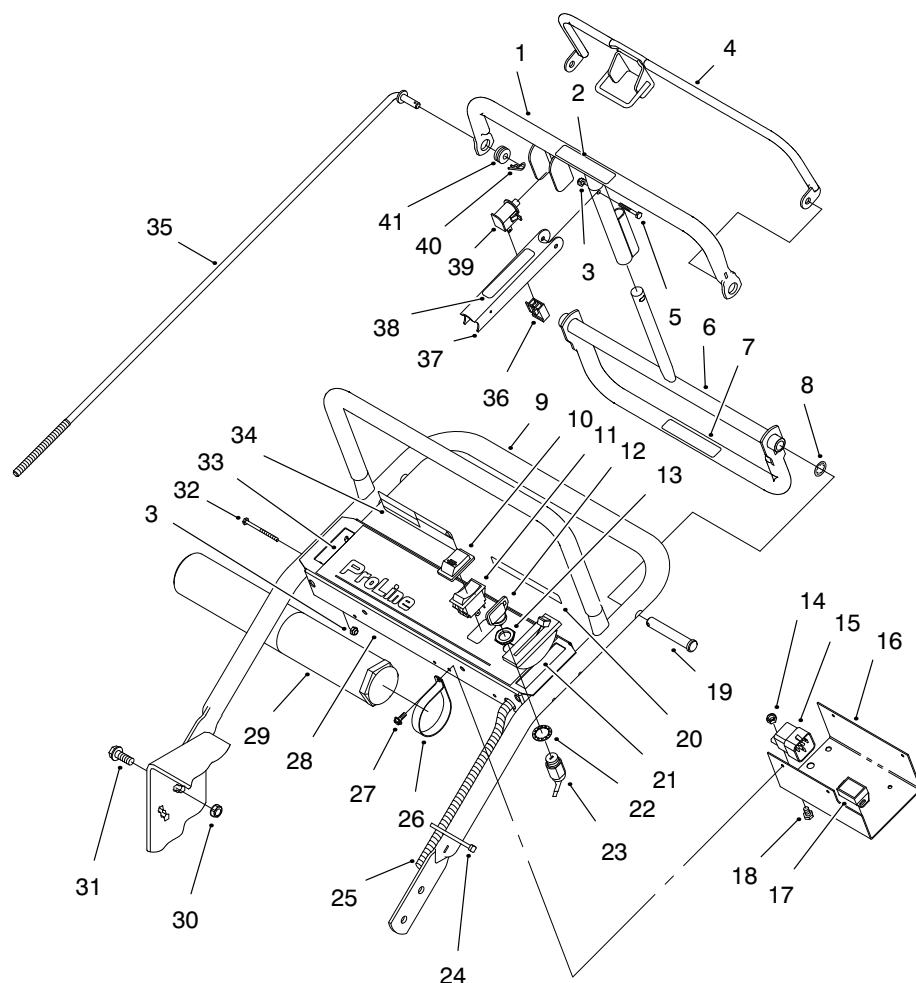

Sheet No.: 5

Handle and Control Panel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	82-7690	1	Bar	27	32104-76	4	Screw-Self TAP
2	82-2290	1	Decal-Control Bar	28	82-2180-03	1	Panel-Control
3	3296-2	5	Nut-Lock	29	74-0720	1	Tube-Manual
4	82-7680-03	1	Bail	30	32128-21	4	Nut-HF
5	32105-1	1	Screw-HH	31	3234-11	4	Screw-HHF
6	74-0380-03	1	Control Pivot	32	32105-14	4	Screw-HH
7	82-2280	1	Decal-Reverse	33	82-7730	1	Decal-Panel Proline
8	32151-80	2	Ring-Push On	34	71-1280	1	Decal-Warning
9	67-6440	1	Handle-Upper	35	82-7632	2	Rod-Control
10	82-3820	1	Boot-Switch	36	218-595	1	Connector-Body
11	82-2300	1	Switch	37	51-4850	1	Lever-Parking Brake
12	63-8360	2	Key-Ignition	38	52-2010	1	Decal-Parking Lever
13	218-461	1	Nut-HH (F/W Sw)	39	82-2190	1	Switch-Bail
14	3296-42	1	Nut-Lock	40	3290-307	2	Pin-Cotter
15	63-7590	1	Relay	41	237-141	2	Grommet
16	93-1187-03	1	Panel-Bottom				
17	94-9666	1	Module				
18	321-2	1	Screw-HH				
19	283-55	2	Pin-Clevis				
20	65-3090	1	Decal-Manual				
21	74-0630	1	Control-Throttle				
22	3254-5	1	Washer-Lock				
23	29-5560	1	Switch-On/Off				
24	3290-378	2	Tie-Cable				
25	95-2803	1	Wire Harness				
26	2412-120	2	Clamp-R				

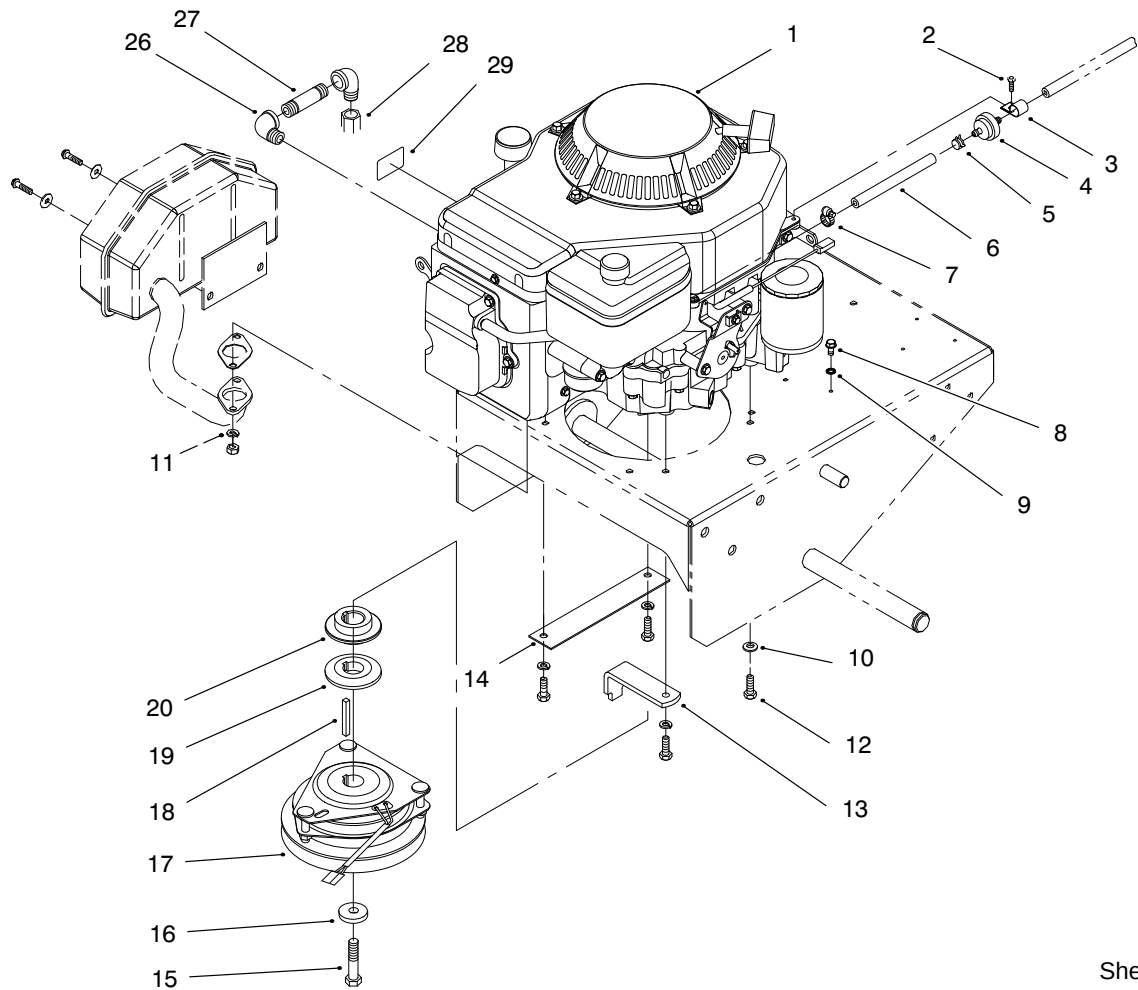


Sheet No.: 6

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	95-2832	1	Engine-13 Hp Kohler
2	32144-19	1	Screw-HH
3	2412-87	1	Clamp-Cable
4	56-6360	1	Filter-Fuel
5	2412-98	1	Clamp-Hose
6	47-2982	1	Hose-Fuel
7	2412-108	1	Clamp-Hose
8	12-3270	1	Screw-HH
9	3255-7	1	Washer-Lk
10	3256-23	1	Washer-Flat
11	3253-4	2	Washer-Lock
12	57-6380	4	Screw-HH
13	51-4540-03	1	Retainer-Clutch
14	74-0930-01	1	Guard-Pulley
15	3212-9	1	Screw-HH
16	112843	1	Washer-PTO
18	608006	1	Key
19	74-0050	1	Sheave-Lower
20	74-0060	1	Sheave-Upper
23	3256-78	2	Washer-Plain
24	93-7033	2	Screa
25	95-5517	1	Muffler (Supplied w/Eng)
26	74-0950	2	Elbow
27	289-51	1	Nipple-Pipe


Ref. No.	Part No.	Qty.	Description
28	288-4	1	Cap-Pipe
29	63-8440	1	Decal-Hot Surface

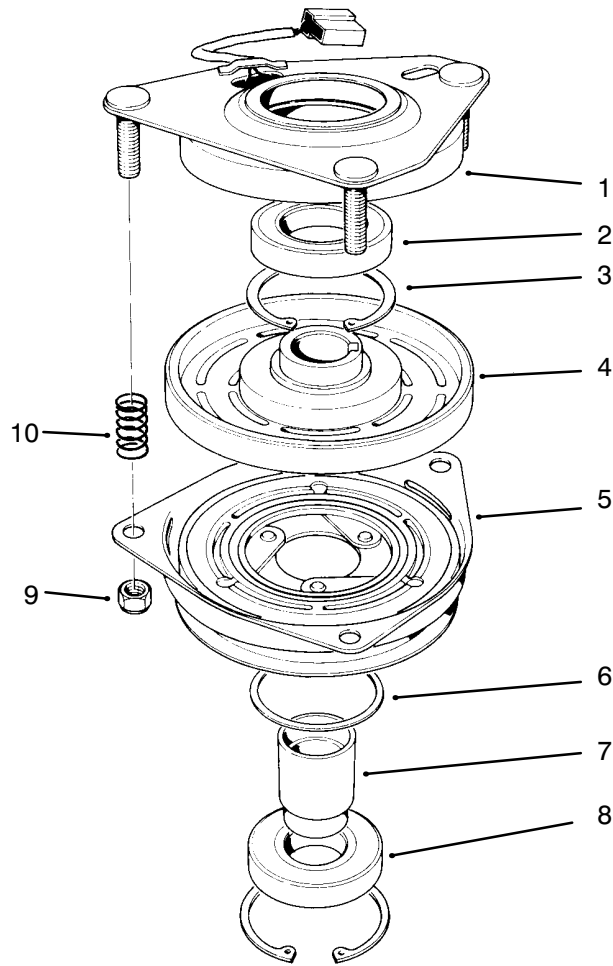

Sheet No.: 301

Clutch Asm No. 54-3200

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	54-0230	1	Field ASM Incl 2 3				
2	251-292	1	Bearing				
3	44-8310	2	Ring-Retaining				
4	44-8360	1	Field Coil & Bearing				
5	55-7410	1	Armature & Pulley ASM				
6	44-8330	1	Spacer-Pulley Bearing				
7	44-8340	1	Collar-Bearing				
8	251-291	1	Bearing-Pulley				
9	3296-5	3	Nut-Lock				
10	44-8320	3	Spring				

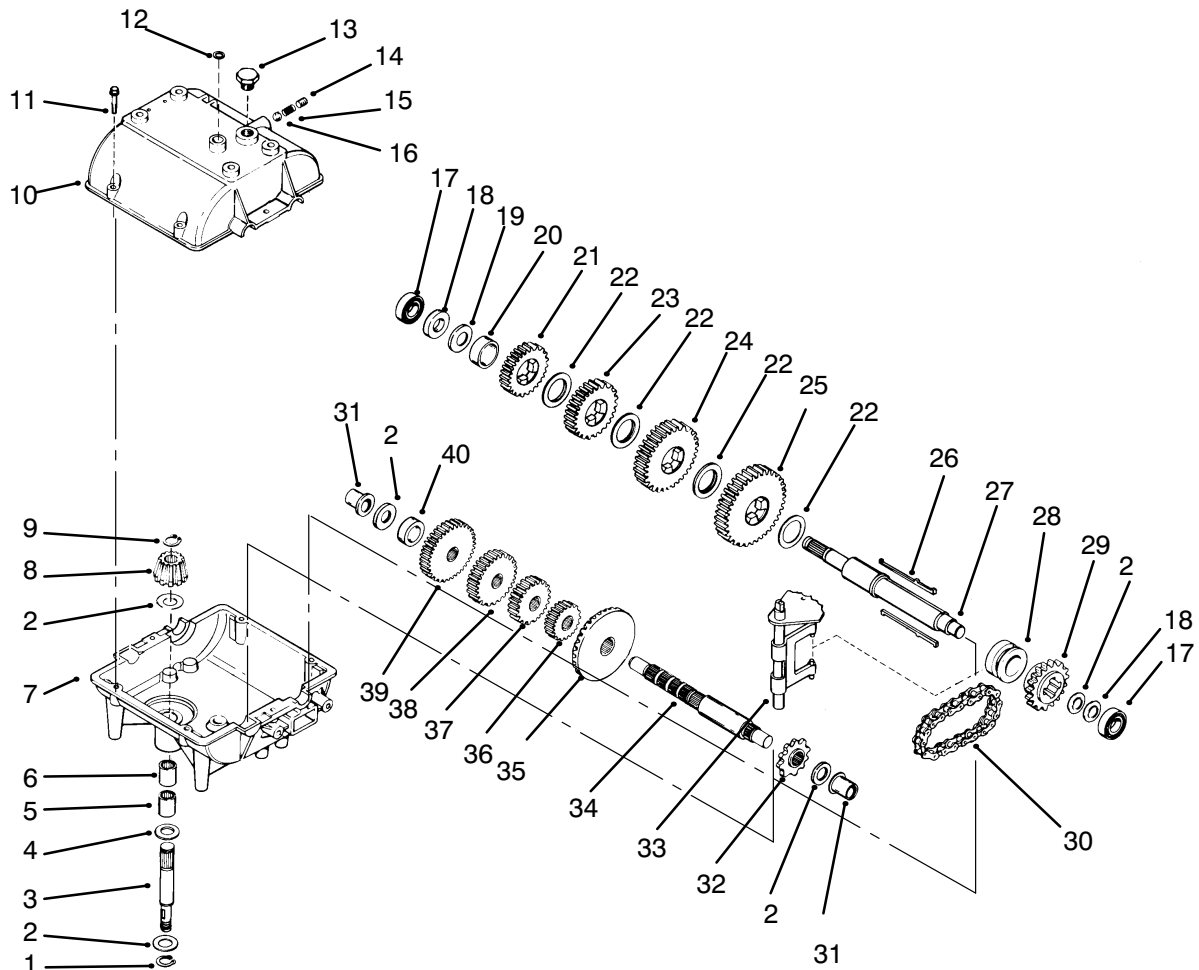


C-1776

Peerless Transmission Model 700-082

Ref. No.	Part No.	Description	No. Used
1	792035	Ring – Retaining	1
2	780072	Washer – Thrust	5
3	776135	Shaft – Input	1
4	792001	"O"Ring	2
5	780142	Bearing – Needle	1
6	780086A	Bearing – Needle	1
7	770090A	Case – Transmission	1
8	778153	Bevel Pinion – Input	1
9	788040	Ring – Retaining	1
10	772099A	Cover – Transmission	1
11	792073A	Screw – Self Tapping	6
12	788069	Seal – Square Cut	1
13	792074	Plug – Threaded	1
14	792078	Screw – Set	1
15	792079	Spring	1
16	792077A	Ball – Steel	1
17	780092	Bearing – Ball	2
18	780065	Washer – Thrust	2
19	780139	Washer – Thrust	1
20	786072	Spacer	1
21	778123A	Gear – Spur (25 Teeth)	1
22	780108	Washer – Thrust	4

Ref. No.	Part No.	Description	No. Used
23	778250	Gear – Spur (27 Teeth)	1
24	778124A	Gear – Spur (30 Teeth)	1
25	778125	Gear – Spur (35 Teeth)	1
26	792089A	Key	4
27	776421	Shaft – Shifter & Brake	1
28	784266	Collar – Shift	1
29	786083	Sprocket (18 Teeth)	1
30	786081	Chain – Roller (No. 41 Chain 24 Links)	1
31	780105A	Bushing – Flanged	2
32	786082	Sprocket (9 Teeth)	1
33	784267	Rod & Fork Asm – Shift	1
34	776134	Shaft – Counter	1
35	778154	Gear – Bevel (42Teeth)	1
36	778136	Gear – Spur (15 Teeth)	1
37	778126A	Gear – Spur (20 Teeth)	1
38	778249	Gear – Spur (23 Teeth)	1
39	778127A	Gear – Spur (25 Teeth)	1
40	786071	Spacer	1
*	788067B	Grease 32oz Bottle	1
*	510334	Grease Eliminator	1

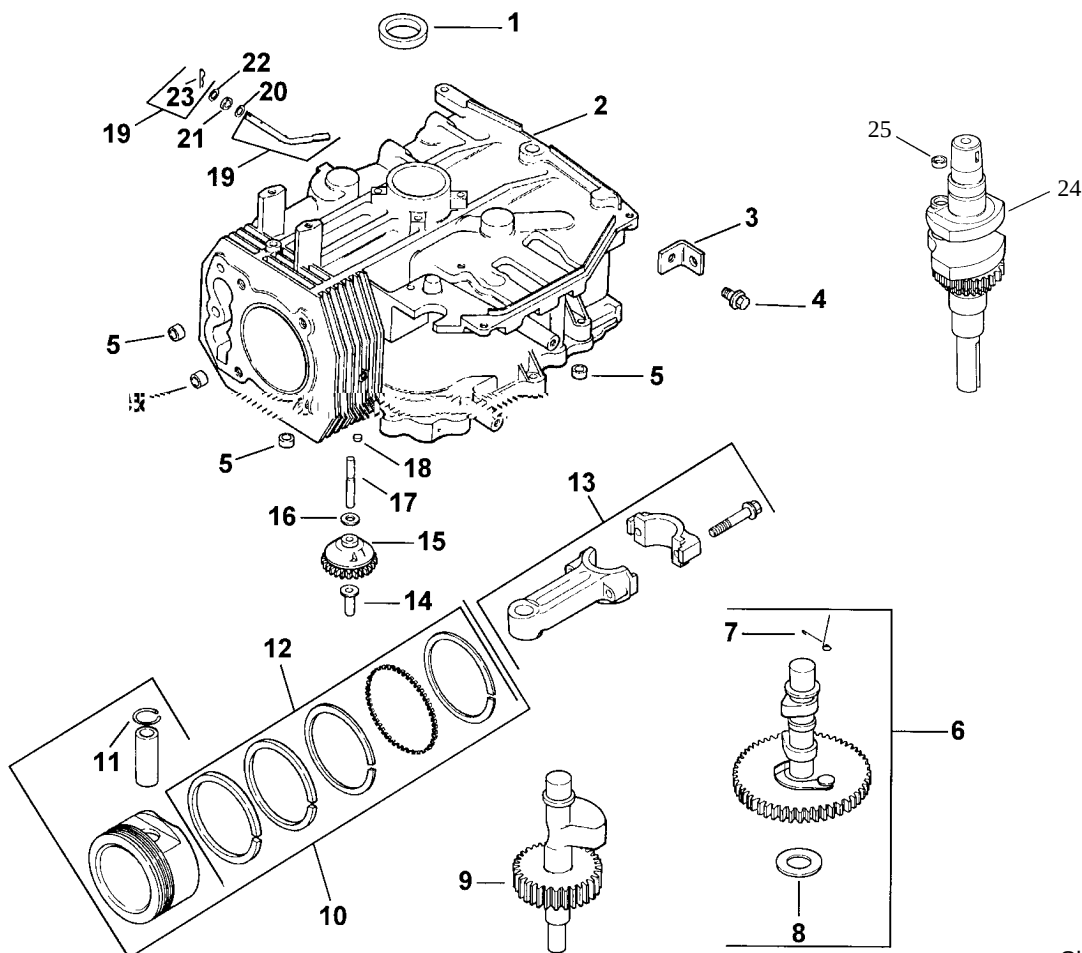

Sheet No.: 2 01


Crankcase

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 032 03	1	Seal-Crankshaft	14	12 380 01	1	Pin-Governor Regulating
2	12 522 33	1	Shortblock	15	12 043 05	1	Gear-Governor ASM
3	12 445 02	1	Strap-Lifting	16	M-0631005	1	Washer-Governor
4	M-0839025	1	Screw M8x1.25x22	17	12 144 02	1	Shaft-Governor Gear
5	12 380 17	4	Dowel-Locating	18	52 139 09	1	Plug-Cup
6	12 755 49	1	Kit-Camshaft INC 7-8	19	12 755 64	1	Kit - Shaft-Governor Cross (Incl. Ref.#23)
7	12 089 31	1	Spring-Actuating	20	X-25-102	1	Washer-Flat
8	12 422 07	A/R	Shim-Camshaft A/R	21	12 032 01	1	Seal-Governor Shaft
8	12 422 08	1	Shim-Camshaft A/R	22	M-0631015	1	Washer-Governor Shaft
8	12 422 09	A/R	Shim-Camshaft A/R	23	12 154 05	1	Clip - Hitch Pin
8	12 422 10	A/R	Shim-Camshaft A/R	24	12 014 30	1	Crankshaft ASM
8	12 422 11	A/R	Shim-Camshaft A/R	25	12 139 01	1	Plug-Cup
8	12 422 12	A/R	Shim-Camshaft A/R	*	12 030 02	1	Bearing - Crankshaft 0.25
8	12 422 13	A/R	Shim-Camshaft A/R	*	12 030 03	1	Bearing - Crankshaft 0.50
9	12 144 27	1	Shaft-Balance	*	12 755 83	1	Set - Gasket
10	12 847 01	1	Set Piston w/Ring STD				
10	12 847 02	1	Set-Piston w/Ring .25				
10	12 847 03	1	Set-Piston w/Ring .50				
11	12 018 02	2	Retainer-Piston Pin				
12	12 108 01	1	Ring Set STD				
12	12 108 02	1	Ring Set .25				
12	12 108 03	1	Ring Set .50				
13	12 067 05	1	Rod Connecting STD				
13	12 067 06	1	Rod Connecting .25				

* Not Illustrated

Kohler Engine Model CV13T SP 21524

Obtain parts from kohler

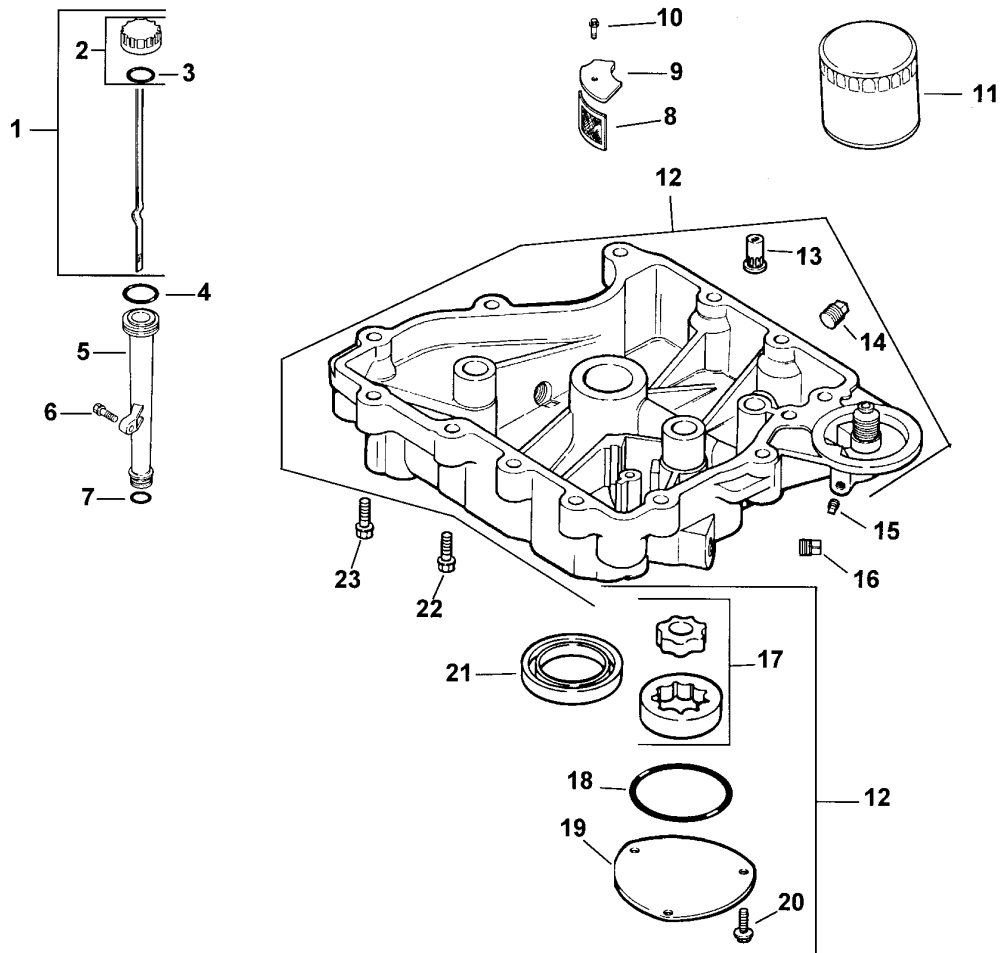

Sheet No.: 2 02

Oil Pan / Lubrication


Ref. No.	Part No.	Qty.	Description
1	12 038 01	1	Dipstick INC 2-3
2	25 755 13	1	Kit-Oil Cap INC 3
3	12 153 03	1	O Ring-Fill Cap
4	12 153 02	1	O Ring-Upper Fill Tube
5	12 123 04	1	Tube-Oil Fill
6	M-0545020	1	Screw M5x0.8x20
7	12 153 01	2	O Ring-Lower Fill Tube
8	25 162 07	1	Screen-Oil
9	12 096 03	1	Cover-Oil Pickup Screen
10	M-0545016	1	Screw M5x0.8x16
11	52 050 02	1	Filter-Oil
12	12 755 45	1	Pan - Oil (Incl. Ref. #13, 14, 17-20)
13	25 462 09	1	Valve - Oil Pressure
14	X-75-2	2	Plug-1/4nptf
15	X-75-1	2	Plug-1/8nptf
16	X-75-10	2	Plug-SH 3/8 NPTF
17	12 393 01	1	Pump-Oil
18	12 153 06	1	O Ring-Oil Pump Cover
19	12 096 34	1	Cover-Oil Pump
20	M-0545016	3	Screw M5x0.8x16
21	12 032 03	1	Seal-Crankshaft

Ref. No.	Part No.	Qty.	Description
22	24 086 16	11	Screw-M8X1.25X45
23	24 068 17	1	Screw-M5X1.25X45

*Not illustrated

Kohler Engine Model CV13T SP 21524

Obtain parts from kohler

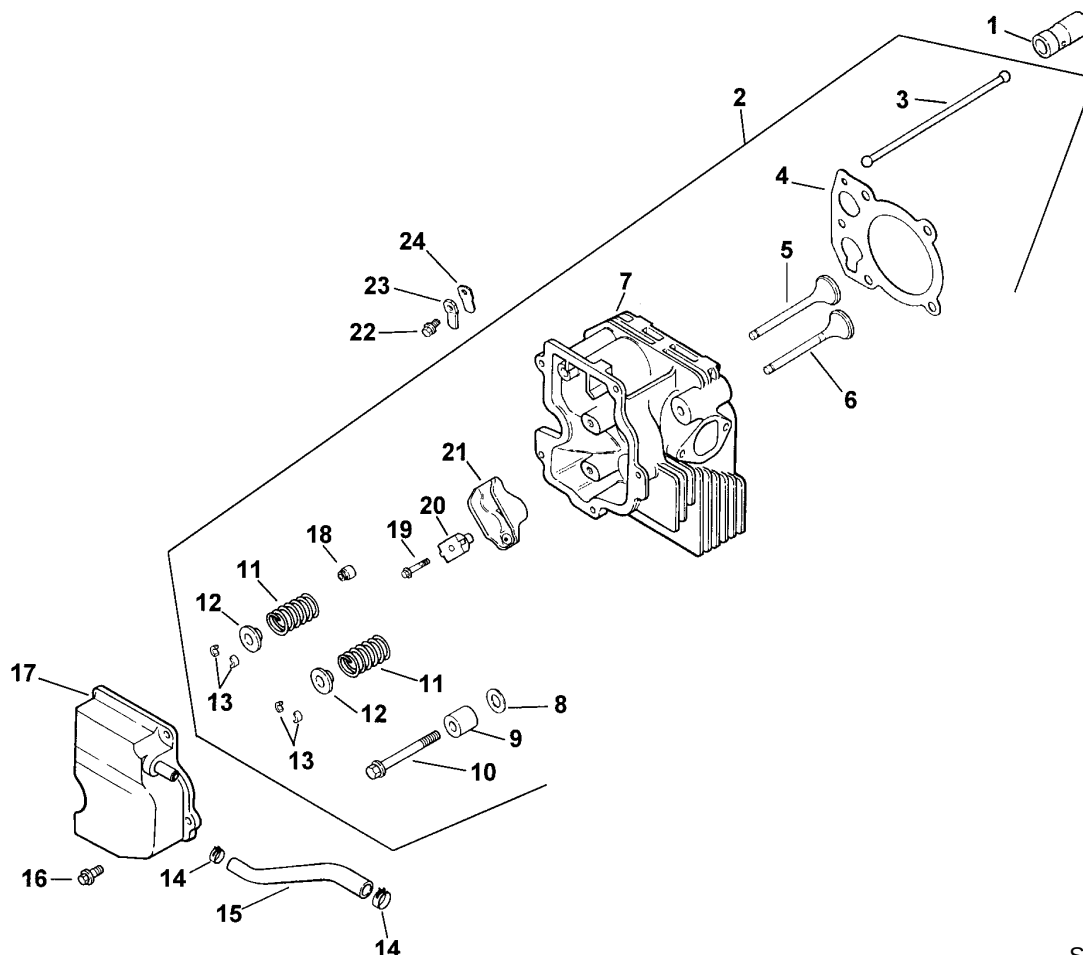

Sheet No.: 2 03


Cylinder Head, Valves And Breather

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 351 02	2	Lifter-Valve				
2	12 755 81	1	Kit-Cylinder Head	24	12 402 02	1	Reed Reed-Breather
3	12 411 01	2	Rod-Push				
4	12 041 08	1	Gasket-Cylinder Head				
5	12 017 01	1	Valve-Intake STD				
5	12 017 02	1	Valve-Intake .25				
6	12 016 01	1	Valve-Exhaust STD				
6	12 016 02	1	Valve-Exhaust .25				
7	12 318 19	1	Head - Cylinder				
8	12 468 05	1	Washer-Flat				
9	12 112 13	1	Spacer-Head Bolt Exhaust				
10	12 086 15	5	Screw M10x1.5x80				
11	12 089 01	1	Spring-Valve				
12	12 173 01	2	Cap-Valve Spring				
13	12 755 03	2	Kit-Retainer				
14	X-426-9	2	Clamp-Hose				
15	12 326 03	1	Hose-Breather				
16	M-0645020	3	Screw-HH M6x1.0x20				
17	12 096 07	1	Cover-Valve w/Nipple				
18	24 023 05	1	Seal-Valve Spring				
19	M-0640034	2	Screw M6x1.0x34				
20	12 599 03	2	Pivot - Rocker Arm				
21	25 186 01	2	Arm-Rocker				
22	M-0545010	1	Screw M5x0.8x10				
23	12 018 01	1	Retainer-Breather				

*Not illustrated

Kohler Engine Model CV13T SP 21524

Obtain parts from kohler

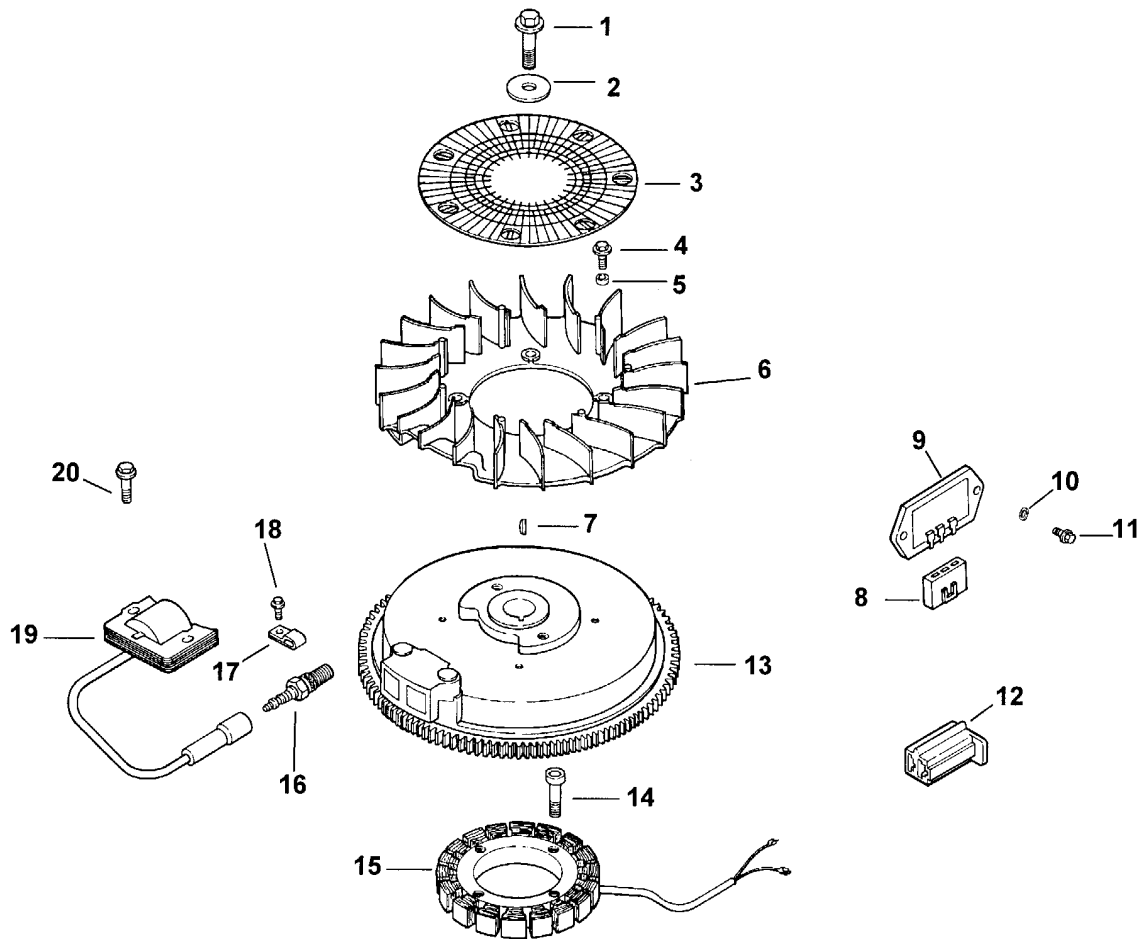

Sheet No.: 2 04

Ignition / Electrical


Ref. No.	Part No.	Qty.	Description
1	12 086 14	1	Screw-Flywheel Mounting
2	12 486 03	1	Washer-Flat
3	12 162 03	1	Screen-Grass
4	M-0639016	4	Screw M6x1.0x16
5	12 112 01	4	Spacer-Fan
6	12 157 02	1	Fan
7	X-42-15	1	Key
8	236602	1	Connector-Regulator
9	12 403 01	1	Rectifier-Unregulated
10	X-22-11	2	Washer - Lock
11	M-0639016	2	Screw M6x1.0x16
12	41 155 03	1	Connector
13	12 025 15	1	Flywheel ASM
14	M-0548025	4	Screw M5x0.8x25
15	54 755 09	1	Kit - Stator-15 Amp (Incl. Bracket P/N #24 126 71)
16	12 132 02	1	Spark Plug
17	X-728-1	2	Clip-Kill Lead
18	M-0545010	1	Screw M5x0.8x10
19	12 584 02	1	Module-Ignition
20	M-0545020	2	Screw M5x0.8x20
*	X-25-5	1	Washer
	12 518 01	1	Lead-White
*	25 518 05	1	Lead-Black

Ref. No.	Part No.	Qty.	Description
*	25 518 29	1	Lead-Black
*	24 126 71	1	Bracket - Stator Wire

* Not illustrated

Kohler Engine Model CV13T SP 21524

Obtain parts from kohler

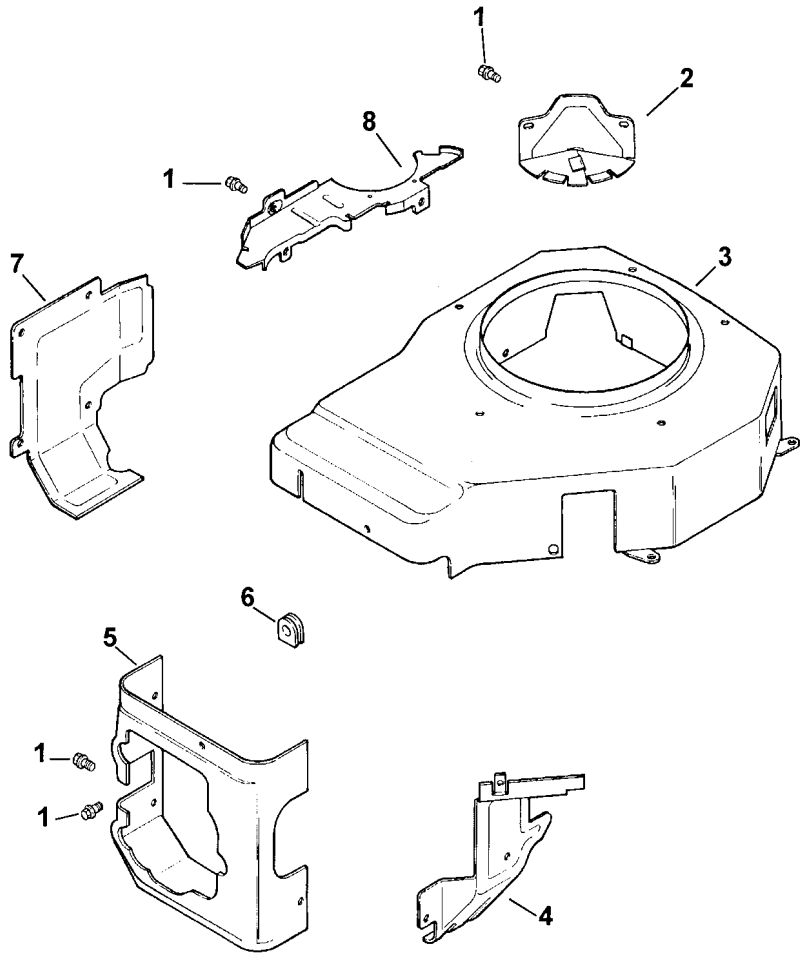

Sheet No.: 2 05

Blower Housing And Baffles


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-0545010	15	Screw M5x0.8x10				
2	12 096 29	1	Cover-Starter				
3	12 027 37	1	Housing-Blower				
4	12 063 05	1	Baffle-Carburetor				
5	12 063 08	1	Baffle-Cyl. Head				
6	12 313 03	1	Grommet-Blower				
7	12 063 01	1	Baffle-Cylinder				
8	12 146 07	1	Plate-Blower Housing				
*	12 133 66	1	Decal-Horsepower				

* Not illustrated
Kohler Engine Model CV13T SP 21524
Obtain parts from kohler

Starter System

Ref. No.	Part No.	Qty.	Description

Kohler Engine Model CV13T SP 21524
Obtain parts from kohler

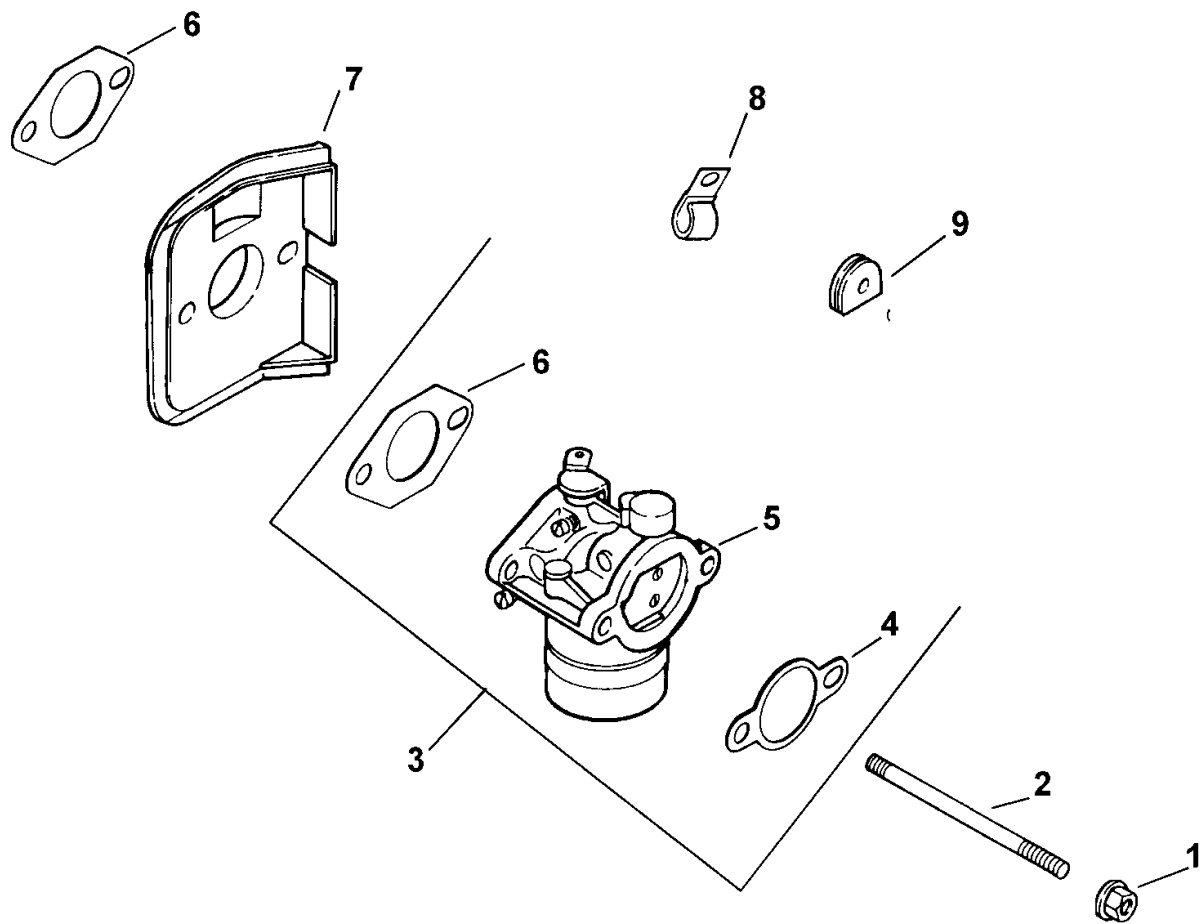


Sheet No.: 2 08

Fuel System

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-0641060	2	Nut M6x1.0				
2	M-0629122	2	Stud M6x1.0x110				
3	12 853 78	1	Kit-Carburetor w/Gaskets				
4	12 041 02	1	Gasket-Air Cleaner				
5	12 053 78	1	Carburetor ASM				
6	12 041 01	2	Gasket-Carburetor				
7	12 265 04	1	Deflector-Heat				
8	47 154 01	1	Clip-Cable				
9	12 313 01	1	Grommet				
*	12 757 02	1	Kit-Float				
*	12 757 08	1	Kit-Choke Repair				
*	12 757 03	1	Kit-Carburetor Repair				

* Not illustrated
Kohler Engine Model CV13T SP 21524
Obtain parts from kohler

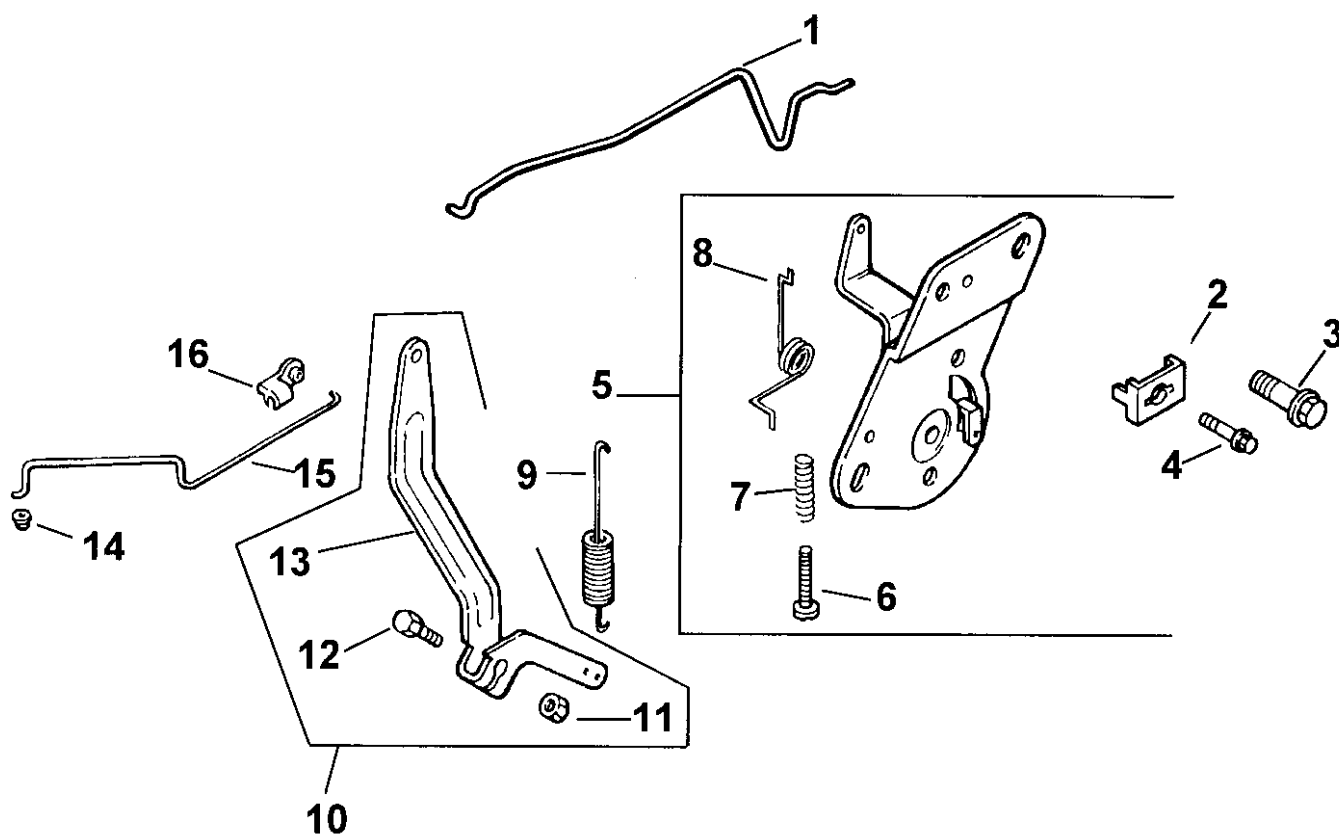


Sheet No.: 2 09

Engine Controls

Ref. No.	Part No.	Qty.	Description
1	12 079 07	1	Linkage–Choke
2	12 237 01	1	Clamp–Cable
3	M–0664020	2	Screw M6X1.0X20
4	M–0645016	1	Screw–HH M6x1.0x16
5	12 536 01	1	Control–Speed
6	SM–0443025	1	Screw
7	12 089 11	1	Spring
8	12 089 23	1	Spring–Choke Return
9	12 089 19	1	Spring–Governor
10	12 755 83	1	Kit – Governor Lever (Incl. Ref.#11–13)
11	12 100 07	1	Nut
12	52 211 04	1	Bolt – Round HD
13	12 090 26	1	Lever–Governor
14	25 158 08	1	Bushing–Linkage
15	12 079 01	1	Linkage–Throttle
16	25 158 11	1	Bushing–Linkage

Ref. No.	Part No.	Qty.	Description

Kohler Engine Model CV13T SP 21524
Obtain parts from kohler

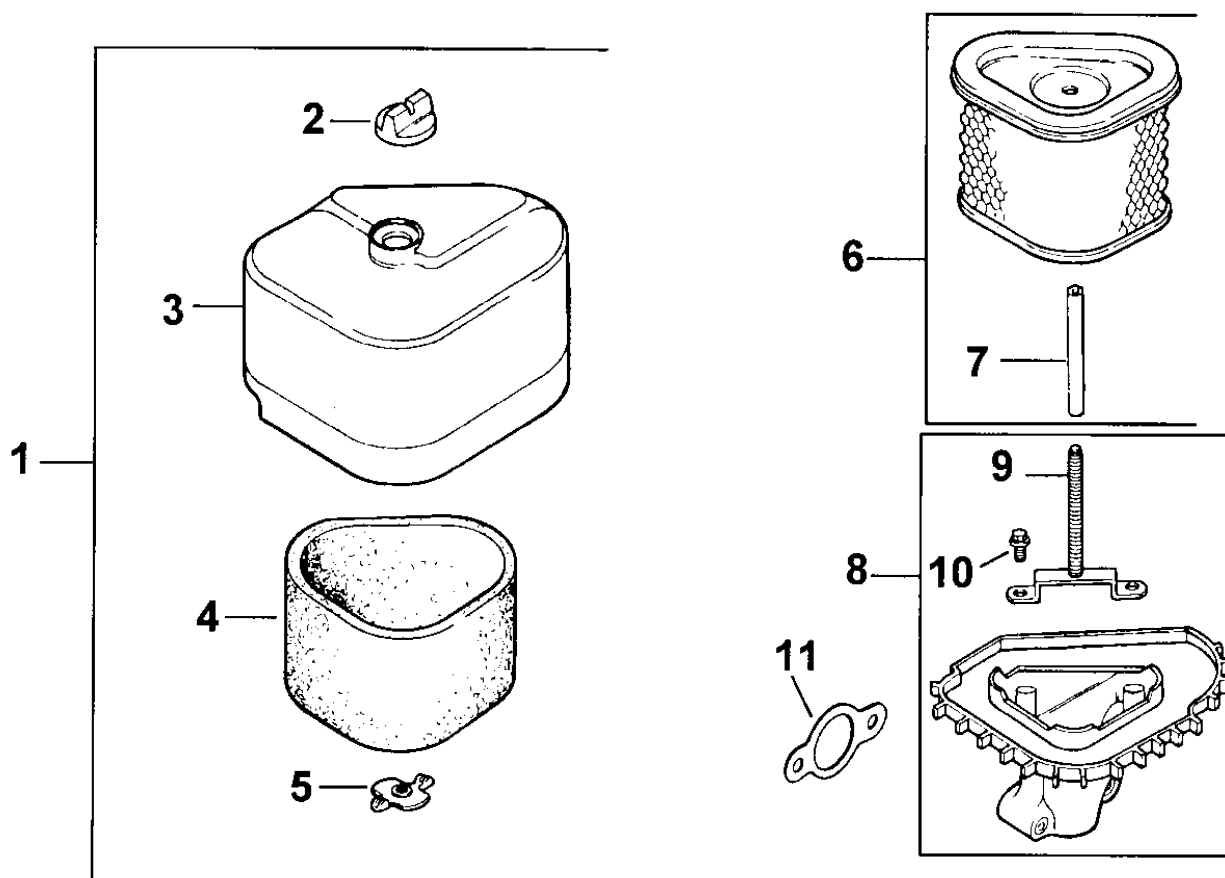

Sheet No.: 207


Air Cleaner

Ref. No.	Part No.	Qty.	Description
1	12 734 02	1	Kit—Air Cleaner (Incl. Ref.# 2–11)
2	25 341 03	1	Knob—Cover
3	12 096 16	1	Cover—Air Cleaner
4	12 083 12	1	Precleaner—Element
5	12 100 01	1	Nut—Wing
6	12 083 10	1	Element—Air Cleaner (Incl. Ref.#7)
7	12 032 11	1	Seal
8	12 094 07	1	Base—Air Cleaner (Incl. Ref.#9, 10)
9	12 072 04	1	Stud—Mounting Plate
10	12 086 01	1	Screw—Mounting Plate
11	12 041 02	1	Gasket—Air Cleaner
*	12 113 04	1	Decal—Air Cleaner

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Kohler Engine Model CV13T SP 21524
Obtain parts from kohler

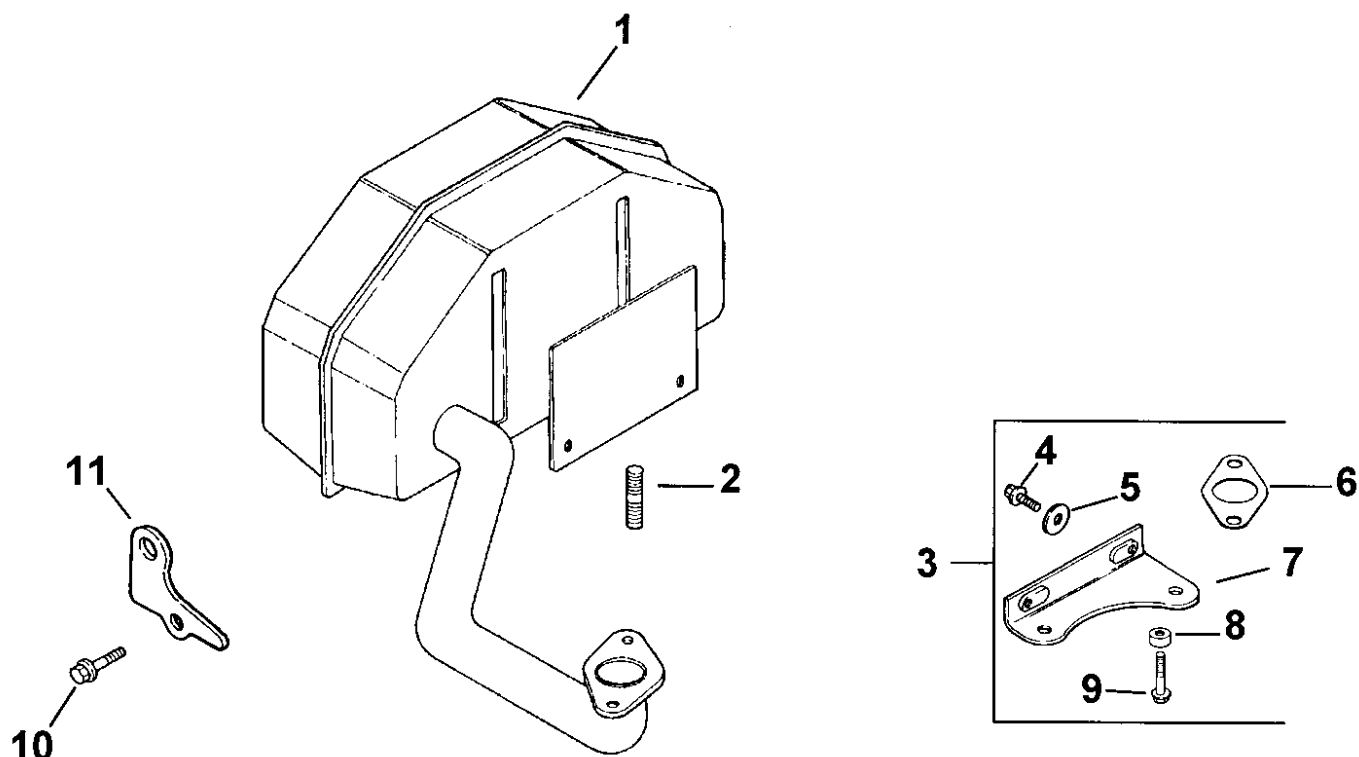

Sheet No.: 2 10

Exhaust


Ref. No.	Part No.	Qty.	Description
1	12 068 03	1	Muffler
2	M-0829033	2	Stud M8x1.25x20
3	12 755 30	1	Kit-Bracket (Incl. Ref.#4-9)
4	M-0650012	2	Screw
5	X-25-52	2	Washer
6	12 041 03	1	Gasket - Exhaust
7	12 126 55	1	Bracket-Muffler
8	12 468 01	1	Washer
9	12 086 13	1	Screw
10	M-0645025	1	Screw
11	12 445 06	1	Strap-Lifting

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Kohler Engine Model CV13T SP 21524

Obtain parts from kohler

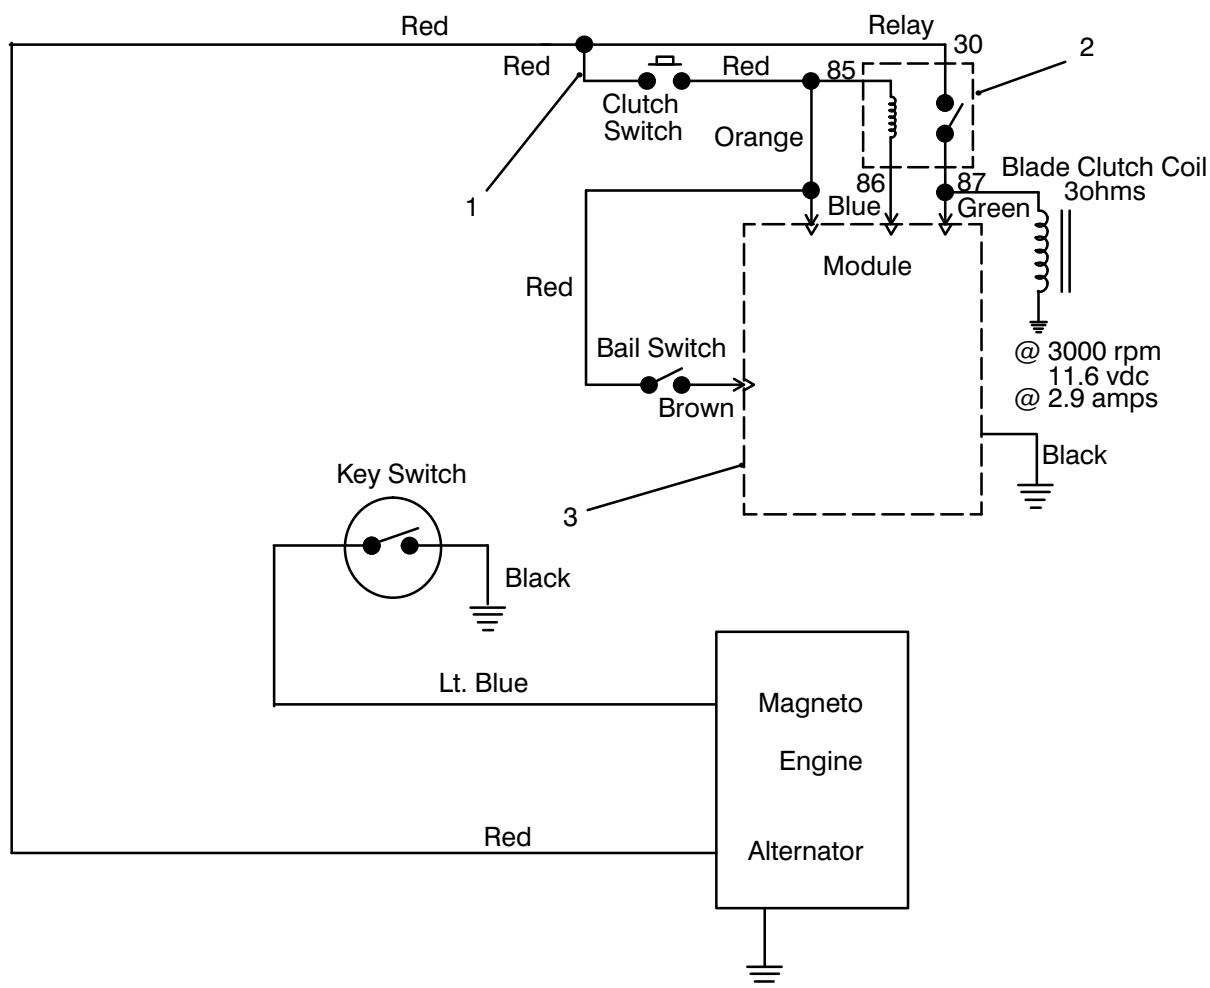

Sheet No.:

Electric Schematic

Ref. No.	Part No.	Qty.	Description
1	95-2803	1	Wire Harness
2	63-7590	1	Relay
3	94-9666	1	Module - Interlock

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
112843	6	16	1	Washer-PTO
608006	6	18	1	Key
7-5461	2	26	1	Spacer-Transmission
10-8110	3	10	A/R	Washer-Thrust
12-3270	6	8	1	Screw-HH
26-9671	2	17	1	"v" Belt
29-5560	5	23	1	Switch-On/Off
47-1970	2	2	1	Grip-Engagement
47-2964	1	35	1	Hose-Gas
47-2982	6	6	1	Hose-Fuel
51-4160	3	14	4	Pulley-Wheel
51-4170	3	13	8	Spacer-Pulley
51-4180	3	15	2	Drum-Brake
51-4190	2	16	1	Pulley-Drive
51-4220	2	12	2	Guard-Coupler
51-4230	3	19	2	Washer-Wheel
51-4270	2	5	2	Bearing-Shaft Ext
51-4291	3	12	2	"v" Belt
51-4370	1	7	1	Spring-RH
51-4380	1	8	1	Spring-LH
51-4450	1	24	2	Screw-Leveler
51-4540-03	6	13	1	Retainer-Clutch
51-4580	3	1	2	Rod-Brake
51-4650	3	8	2	Link-Brake
51-4660	3	7	2	Plate-Brake Link
51-4700	3	17	2	Band-Brake
51-4810	2	19	1	Pulley-Idler
51-4850	5	37	1	Lever-Parking Brake
52-2010	5	38	1	Decal-Parking Lever
52-2890	1	11	2	Bushing-Flanged
55-3570	1	1	1	Cap-Fuel
56-6360	6	4	1	Filter-Fuel
57-6380	6	12	4	Screw-HH
63-7590	5	15	1	Relay
63-8360	5	12	2	Key-Ignition
63-8440	6	29	1	Decal-Hot Surface
65-3090	5	20	1	Decal-Manual
66-7400	1	32	1	Plate-Control
67-6370	1	17	1	Bracket-RH
67-6380	1	18	1	Bracket-LH
67-6400	3	3	1	Arm-Brake RH
67-6420	3	4	1	Arm-Brake LH
67-6440	5	9	1	Handle-Upper
68-9690	1	25	2	Fitting Rod
71-1280	5	34	1	Decal-Warning
72-2190	2	25	1	Mount-Shift Lever
74-0040	1	6	4	Spacer-Pivot
74-0050	6	19	1	Sheave-Lower
74-0060	6	20	1	Sheave-Upper
74-0220	1	14	1	Idler Bracket LH
74-0230	1	13	1	Idler Bracket RH
74-0320	2	1	1	Lever-Shift
74-0360	1	34	1	Frame-Rear
74-0380-03	5	6	1	Control Pivot
74-0480	2	11	2	Pulley-Drive ASM
74-0521	1	15	2	Rod-Fitting
74-0630	5	21	1	Control-Throttle
74-0720	5	29	1	Tube-Manual
74-0930-01	6	14	1	Guard-Pulley
74-0950	6	26	2	Elbow
82-2180-03	5	28	1	Panel-Control
82-2190	5	39	1	Switch-Bail

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
82-2280	5	7	1	Decal-Reverse
82-2290	5	2	1	Decal-Control Bar
82-2300	5	11	1	Switch
82-3820	5	10	1	Boot-Switch
82-7632	5	35	2	Rod-Control
82-7680-03	5	4	1	Bail
82-7690	5	1	1	Bar
82-7730	5	33	1	Decal-Panel Proline
82-7750	1	4	1	Decal-Ground Speed
93-1161	1	29	1	Frame
93-1181	4	1	2	ASM-Wheel
93-1187-03	5	16	1	Panel-Bottom
93-7033	6	24	2	Screa
94-9666	5	17	1	Module
95-1526	2	28	1	Shield-Trailing
95-1529	2	29	1	Rod-Shield
95-2800	1	22	2	Pulley-Idler
95-2801	1	23	2	Spacer-Pulley
95-2802	1	2	1	Tank-Fuel
95-2803	5	25	1	Wire Harness
95-2814	1	33	1	Decal-Fuel Shut-Off
95-2832	6	1	1	Engine-13 Hp Kohler
95-5517	6	25	1	Muffler (Supplied w/Eng)
98-0786	2	24	1	Transmission-4 Speed
98-0787	2	8	1	Shaft-LH
98-0788	2	7	1	Shaft-RH
98-0789	2	13	2	Coupler
218-461	5	13	1	Nut-HH (F/W Sw)
218-595	5	36	1	Connector-Body
231-94	4	2	2	Tire
237-124	1	26	1	Grommet
237-141	5	41	2	Grommet
2412-87	6	3	1	Clamp-Cable
2412-98	1	3	2	Clamp-Hose
2412-98	6	5	1	Clamp-Hose
2412-108	6	7	1	Clamp-Hose
2412-120	5	26	2	Clamp-R
283-6	1	16	2	Pin-Clevis
283-55	5	19	2	Pin-Clevis
288-4	6	28	1	Cap-Pipe
289-51	6	27	1	Nipple-Pipe
302-5	2	14	2	Fitting-Grease
321-2	5	18	1	Screw-HH
321-4	2	6	4	Screw-HH
322-2	2	22	4	Screw-HH
322-4	1	30	4	Screw-HH
322-7	3	18	8	Screw-HH
323-6	1	20	6	Screw-HH
323-9	2	18	1	Screw-HH
323-16	1	19	2	Screw-HH
329-10	2	27	1	Screw
3212-9	6	15	1	Screw-HH
3234-11	5	31	4	Screw-HHF
3245-1	2	15	1	Screw-Set
3245-3	2	10	2	Screw-HSH
3253-4	1	31	4	Washer-Lock
3253-4	2	23	4	Washer-Lock
3253-4	3	16	8	Washer-Lock
3253-4	6	11	2	Washer-Lock
3254-5	5	22	1	Washer-Lock
3255-7	6	9	1	Washer-Lk
3256-23	1	10	10	Washer-Flat

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3256-23	6	10	1	Washer-Flat
3256-24	2	20	1	Washer-Flat
3256-78	6	23	2	Washer-Plain
3257-5	2	9	3	Key-Woodruff
3290-307	1	12	4	Pin-Cotter
3290-307	3	2	2	Pin-Cotter
3290-307	5	40	2	Pin-Cotter
3290-378	5	24	2	Tie-Cable
3296-2	5	3	5	Nut-Lock
3296-23	1	21	2	Nut-Lock
3296-39	1	5	8	Nut-Lock
3296-42	2	3	4	Nut-Lock
3296-42	5	14	1	Nut-Lock
32103-25	1	9	2	Nut-Wing
32104-76	5	27	4	Screw-Self TAP
32105-1	5	5	1	Screw-HH
32105-14	5	32	4	Screw-HH
32120-64	2	4	1	Ring-Retaining
32128-21	2	21	1	Nut-HF
32128-21	5	30	4	Nut-HF
32144-19	6	2	1	Screw-HH
32151-40	3	5	2	Ring-Retaining
32151-56	3	6	2	Ring-Retaining
32151-62	2	30	2	Ring-Retaining
32151-72	3	20	4	Ring-Retaining
32151-80	5	8	2	Ring-Push On
32151-91	3	11	2	Ring-Retaining

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]