



ProLine

Mid Size Traction Unit

12.5 HP Kawasaki Gear Drive

Model No. 30167 – 890001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Fuel Tank And Idler Bracket Asm	1	Cooling Equipment	11
Transmission And Idler Pulley Asm	2	Electric Equipment	12
Brake, Wheel Pulley And Wheel Asm	3	Control Equipment	13
Wheel And Tire Asm	4	Carburetor	14
Handle Asm	5	Air Filter	15
Engine Asm	6	Starter	16
Crankcase	7	Muffler	17
Piston / Crankshaft	8	Clutch Asm No. 54–3200	18
Valve / Camshaft	9	Peerless Tansmission Model 700–082	19
Lubrication Equipment	10	Electric Schematic	20

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

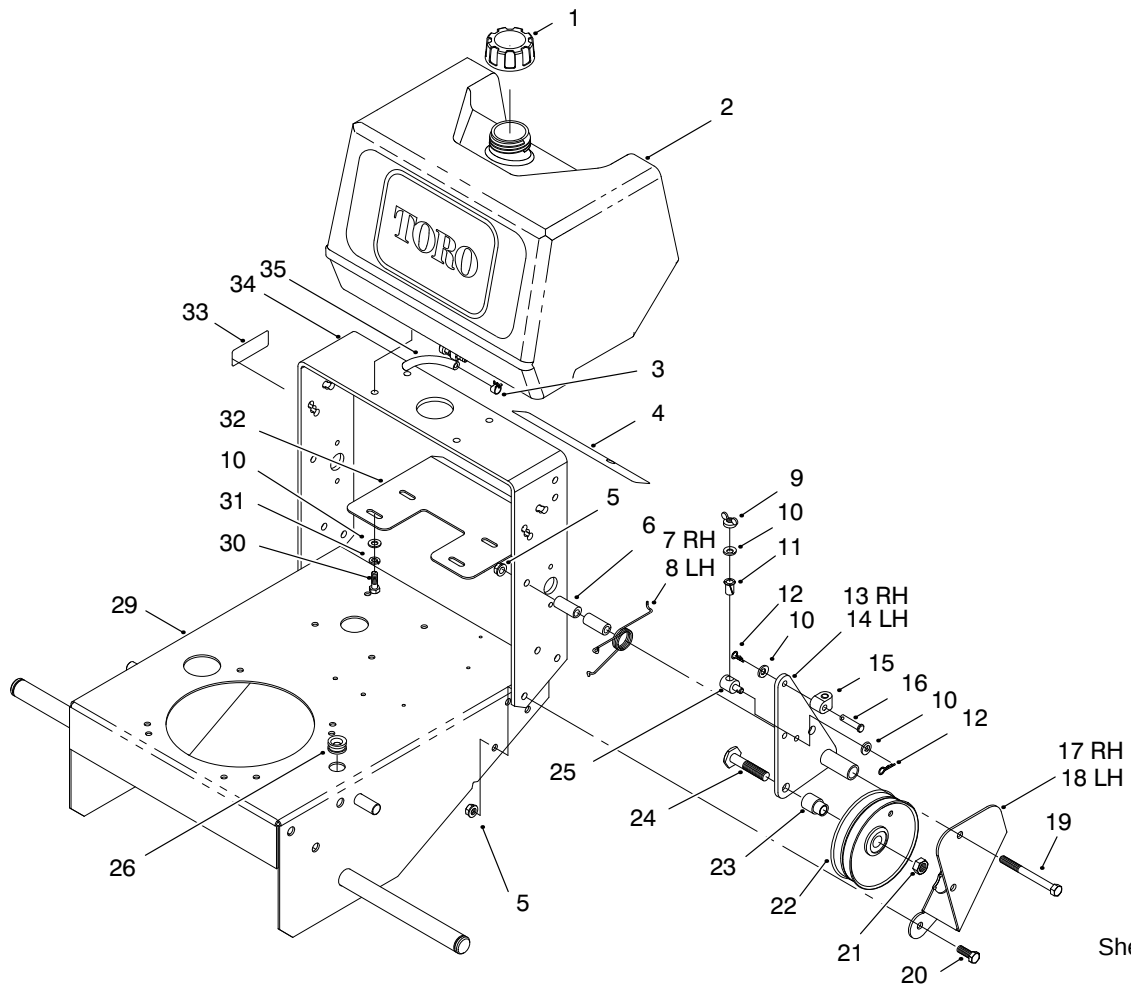


Sheet No.: 2

Fuel Tank And Idler Bracket Assembly

Ref. No.	Part No.	Qty.	Description
1	55-3570	1	Cap-Fuel
2	95-2802	1	Tank-Fuel
3	2412-98	2	Clamp-Hose
4	82-7750	1	Decal-Ground Speed
5	3296-39	8	Nut-Lock
6	74-0040	4	Spacer-Pivot
7	51-4370	1	Spring-RH
8	51-4380	1	Spring-LH
9	32103-25	2	Nut-Wing
10	3256-23	10	Washer-Flat
11	52-2890	2	Bushing-Flanged
12	3290-307	4	Pin-Cotter
13	74-0230	1	Idler Bracket RH
14	74-0220	1	Idler Bracket LH
15	74-0521	2	Rod-Fitting
16	283-6	2	Pin-Clevis
17	67-6370	1	Bracket-RH
18	67-6380	1	Bracket-LH
19	323-16	2	Screw-HH
20	323-6	6	Screw-HH
21	3296-23	2	Nut-Lock
22	95-2800	2	Pulley-Idler
23	95-2801	2	Spacer-Pulley
24	51-4450	2	Screw-Leveler
25	68-9690	2	Fitting Rod
26	237-124	1	Grommet

Ref. No.	Part No.	Qty.	Description
29	93-1156	1	Frame
30	322-4	4	Screw-HH
31	3253-4	4	Washer-Lock
32	66-7400	1	Plate-Control
33	95-2814	1	Decal-Fuel Shut-Off
34	74-0360	1	Frame-Rear
35	47-2982	1	Hose-Fuel

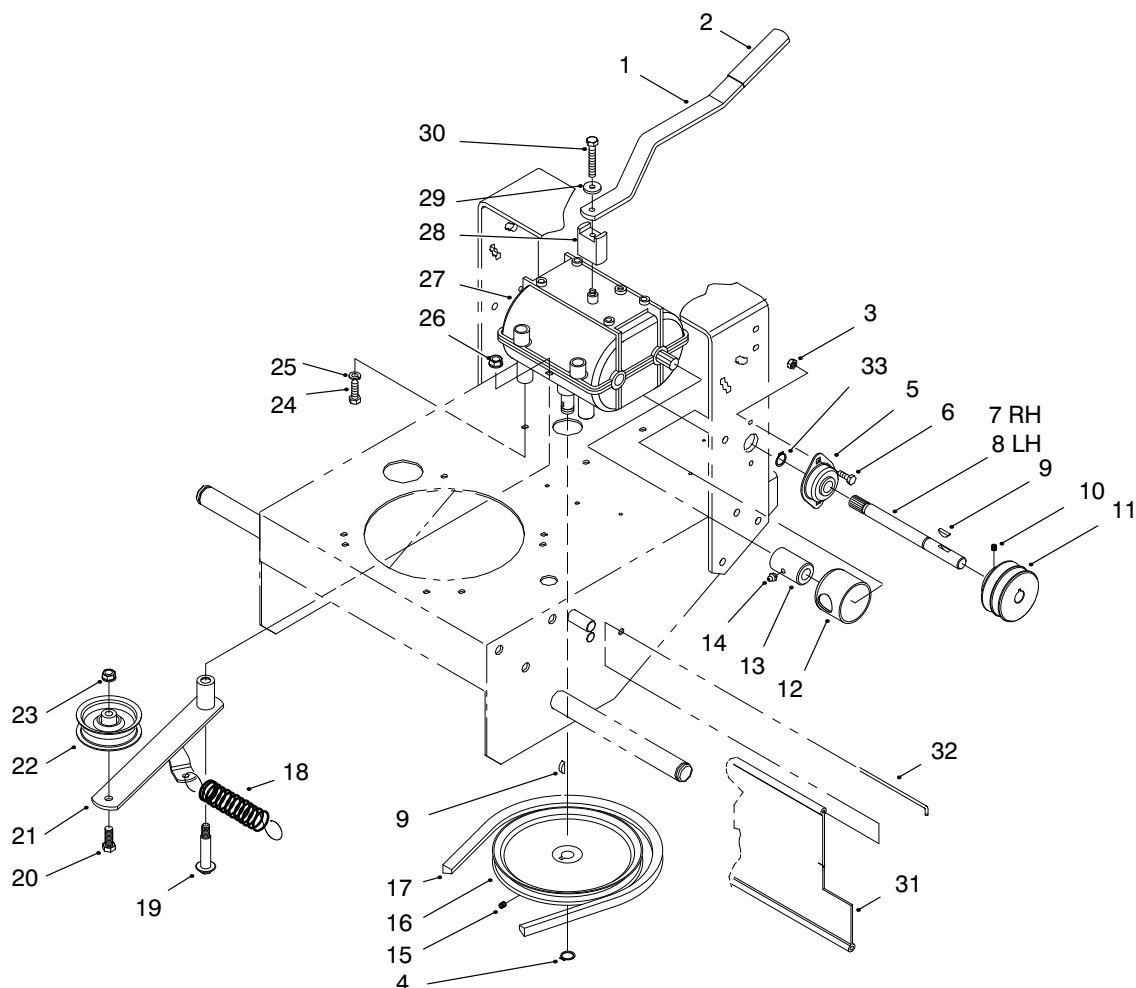


Sheet No.: 3

Transmission And Idler Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	74-0320	1	Lever-Shift
2	47-1970	1	Grip-Engagement
3	3296-42	4	Nut-Lock
4	32120-64	1	Ring-Retaining
5	51-4270	2	Bearing-Shaft Ext
6	321-4	4	Screw-HH
7	98-0788	1	Shaft-RH
8	98-0787	1	Shaft-LH
9	3257-5	3	Key-Woodruff
10	3245-3	2	Screw-HSH
11	74-0480	2	Pulley-Drive ASM
12	51-4220	2	Guard-Coupler
13	98-0789	2	Coupler
14	302-5	2	Fitting-Grease
15	3245-1	1	Screw-Set
16	51-4190	1	Pulley-Drive
17	26-9671	1	"v" Belt
18	68-2190	1	Spring-Extension
19	27-6230	1	Bolt-Wheel
20	323-8	1	Screw-HH
21	82-4800	1	Lever-Idler
22	62-4540-03	1	Pulley-Idler
23	3296-39	1	Nut-Lock
24	322-2	4	Screw-HH
25	3253-4	4	Washer-Lock
26	3296-6	1	Nut-Lock


Ref. No.	Part No.	Qty.	Description
27	98-0791	1	Transmission-4 Speed
28	72-2190	1	Mount-Shift Lever
29	7-5461	1	Spacer-Transmission
30	329-10	1	Screw
31	95-1526	1	Shield-Trailing
32	95-1529	1	Rod-Shield
33	32151-62	2	Ring-Retaining

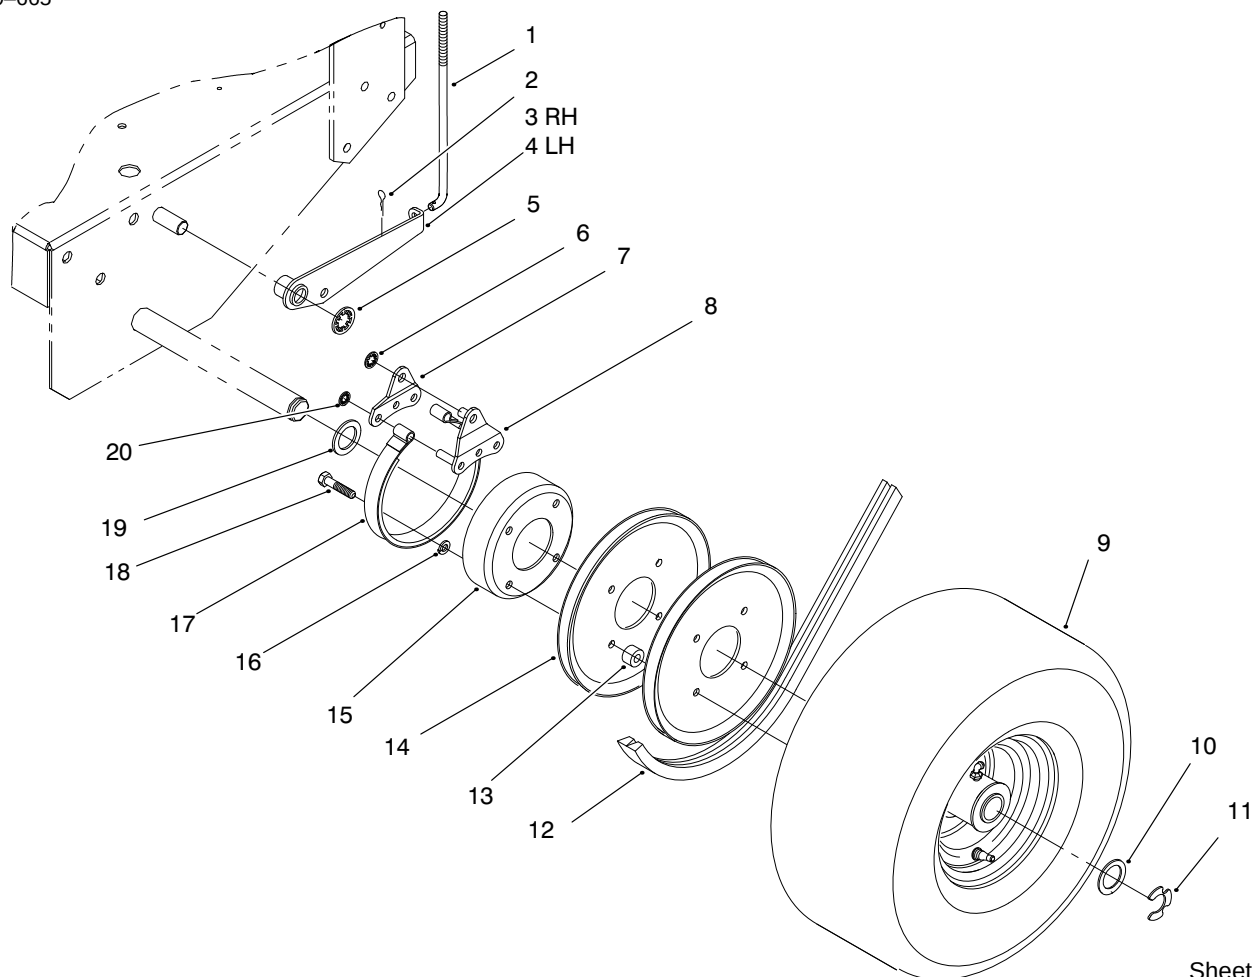

Sheet No.: 4

Brake, Wheel Pulley And Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	51-4580	2	Rod-Brake
2	3290-307	2	Pin-Cotter
3	51-4600	1	Brake-Arm RH
4	51-4610	1	Brake Arm-LH
5	32151-40	2	Ring-Retaining
6	32151-56	2	Ring-Retaining
7	51-4660	2	Plate-Brake Link
8	51-4650	2	Link-Brake
9	94-9663	2	Wheel & Tire ASM
10	10-8110	A/R	Washer-Thrust
11	32151-91	2	Ring-Retaining
12	51-4290	2	Belt-Drive
13	51-4170	8	Spacer-Pulley
14	51-4160	4	Pulley-Wheel
15	51-4180	2	Drum-Brake
16	3253-4	8	Washer-Lock
17	51-4700	2	Band-Brake
18	322-7	8	Screw-HH
19	51-4230	2	Washer-Wheel
20	32151-72	4	Ring-Retaining

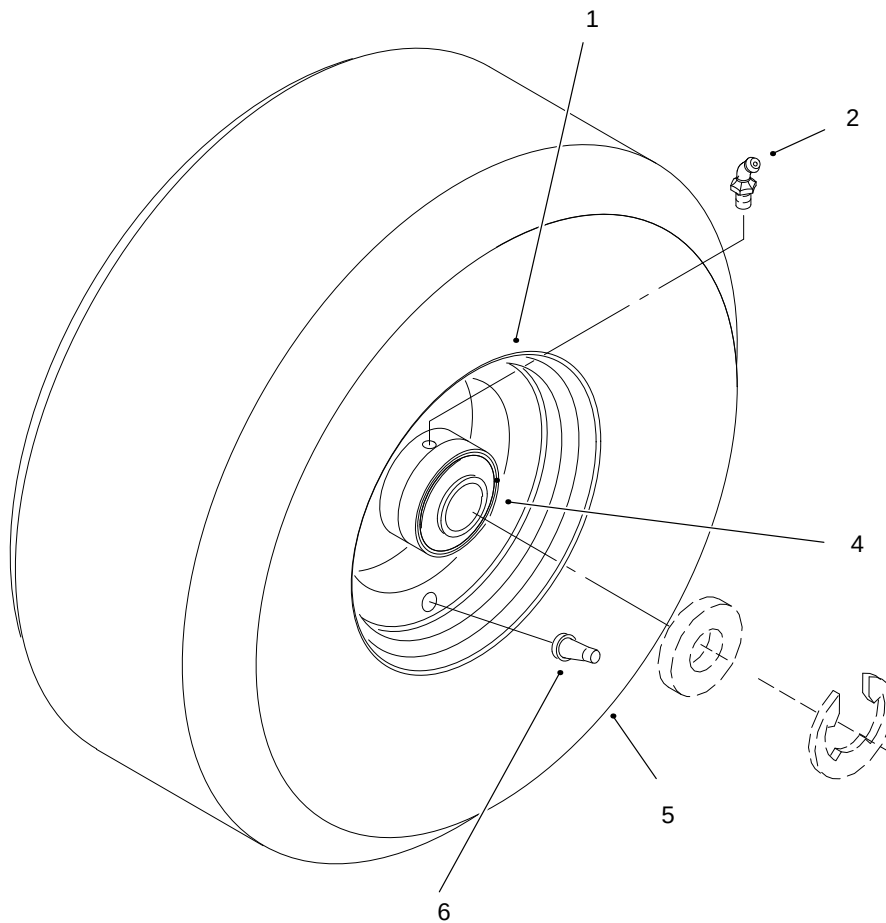


Sheet No.: 500

Wheel And Tire Asm

Ref. No.	Part No.	Qty.	Description
1	242-80	2	Rim
2	302-11	2	Fitting-Grease
3	3296-29	8	Nut-Lock
4	92-1746	4	Bearing
5	231-117	2	Tire-15x6
6	232-27	2	Valve Stem

Ref. No.	Part No.	Qty.	Description

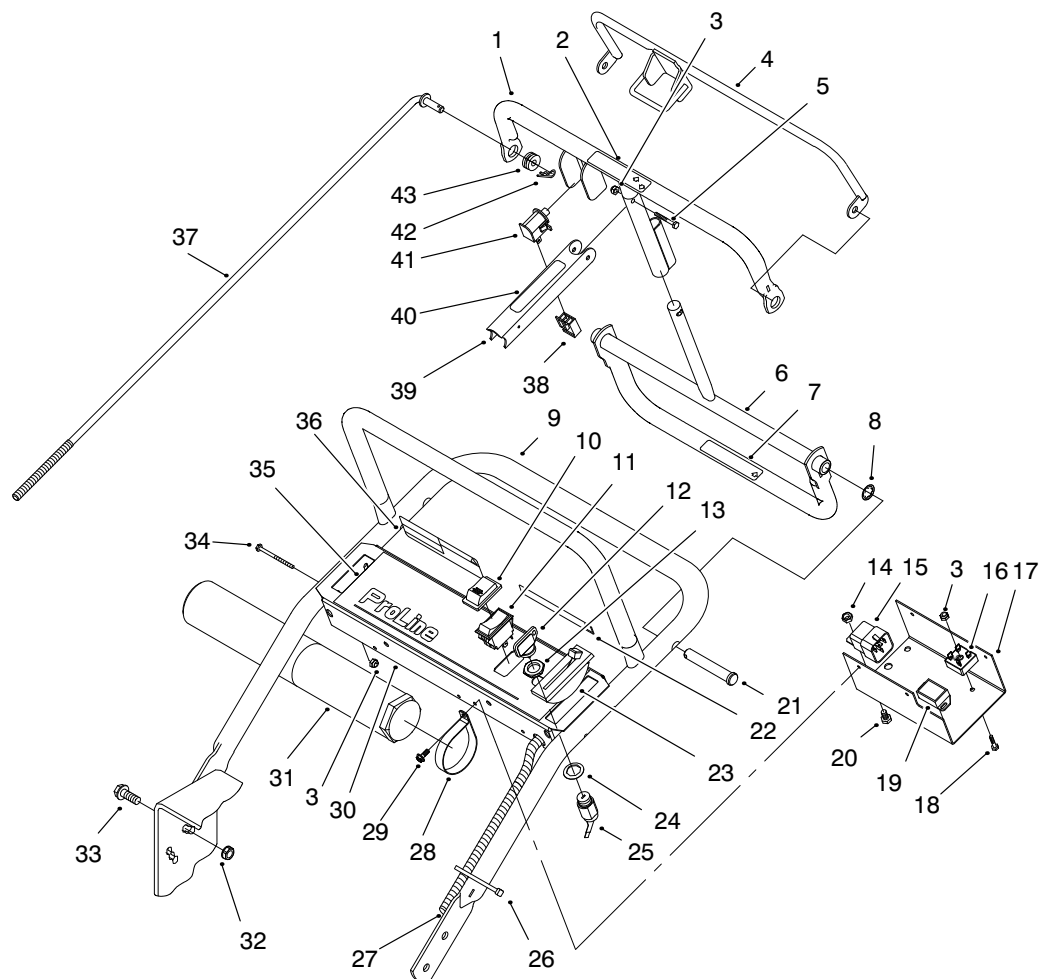


Sheet No.: 5

Handle Asm

Ref. No.	Part No.	Qty.	Description
1	82-7690	1	Bar
2	82-2290	1	Decal-Control Bar
3	3296-2	6	Nut-Lock
4	82-7680-03	1	Bail
5	32105-1	1	Screw-HH
6	74-0380-03	1	Control Pivot
7	82-2280	1	Decal-Reverse
8	32151-80	2	Ring-Push On
9	67-6440	1	Handle-Upper
10	82-3820	1	Boot-Switch
11	82-2300	1	Switch
12	63-8360	2	Key-Ignition
13	218-461	1	Nut-HH (F/W Sw)
14	3296-42	1	Nut-Lock
15	63-7590	1	Relay
16	37-7600	1	Bridge Rectifier
17	93-1187-03	1	Panel-Bottom
18	32105-13	1	Screw-HH
19	94-9666	1	Module
20	321-2	1	Screw-HH
21	283-55	2	Pin-Clevis
22	65-3090	1	Decal-Manual
23	74-0740	1	Control-Throttle
24	3254-5	1	Washer-Lock
25	29-5560	1	Switch-On/Off
26	3290-378	2	Tie-Cable

Ref. No.	Part No.	Qty.	Description
27	95-2804	1	Wire Harness
28	2412-120	2	Clamp-R
29	32104-76	4	Screw-Self TAP
30	82-2180-03	1	Panel-Control
31	74-0720	1	Tube-Manual
32	32128-21	4	Nut-HF
33	3234-11	4	Screw-HHF
34	32105-14	4	Screw-HH
35	82-7730	1	Decal-Panel Proline
36	71-1280	1	Decal-Warning
37	82-7631	2	Rod-Control
38	218-595	1	Connector-Body
39	51-4850	1	Lever-Parking Brake
40	52-2010	1	Decal-Parking Lever
41	82-2190	1	Switch-Bail
42	3290-307	2	Pin-Cotter
43	237-141	2	Grommet

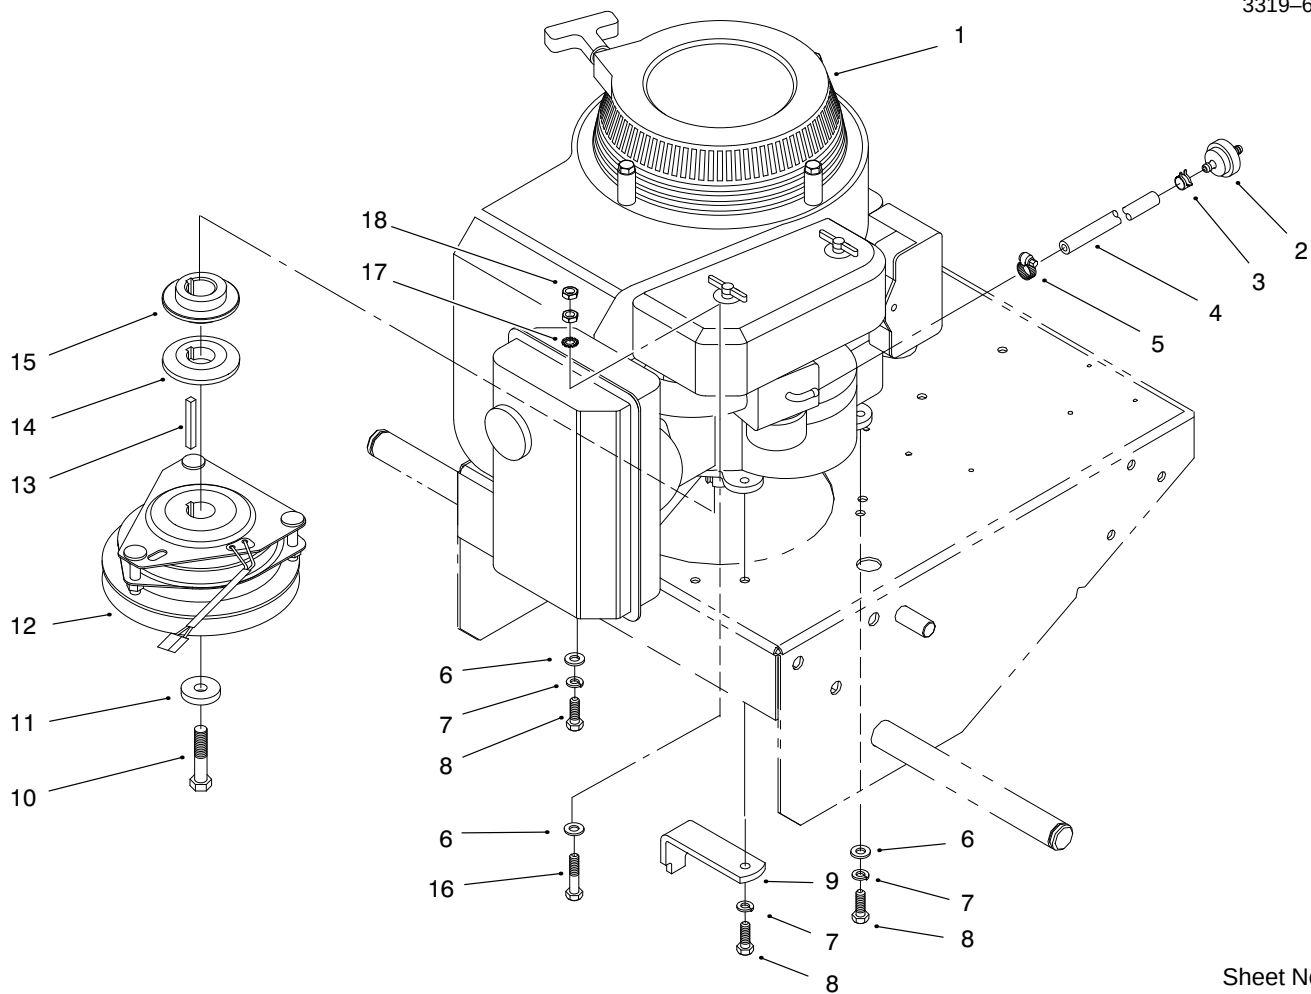


Sheet No.: 6

Engine Asm

Ref. No.	Part No.	Qty.	Description
1	57-4101	1	Engine-12 Hp Kawasaki
2	56-6360	1	Filter-Fuel
3	2412-98	1	Clamp-Hose
4	47-2982	1	Hose-Fuel
5	2412-108	1	Clamp-Hose
6	3256-23	3	Washer-Flat
7	3253-4	3	Washer-Lock
8	57-6380	3	Screw-HH
9	51-4540-03	1	Retainer-Clutch
10	57-6360	1	Screw-HH
11	112843	1	Washer-PTO
12	54-3200	1	Clutch Assembly
13	92-5436	1	Key
14	74-0050	1	Sheave-Lower
15	74-0060	1	Sheave-Upper
16	57-6370	1	Screw-HH
17	3255-8	1	Washer-Lock
18	57-6390	2	Nut

Ref. No.	Part No.	Qty.	Description

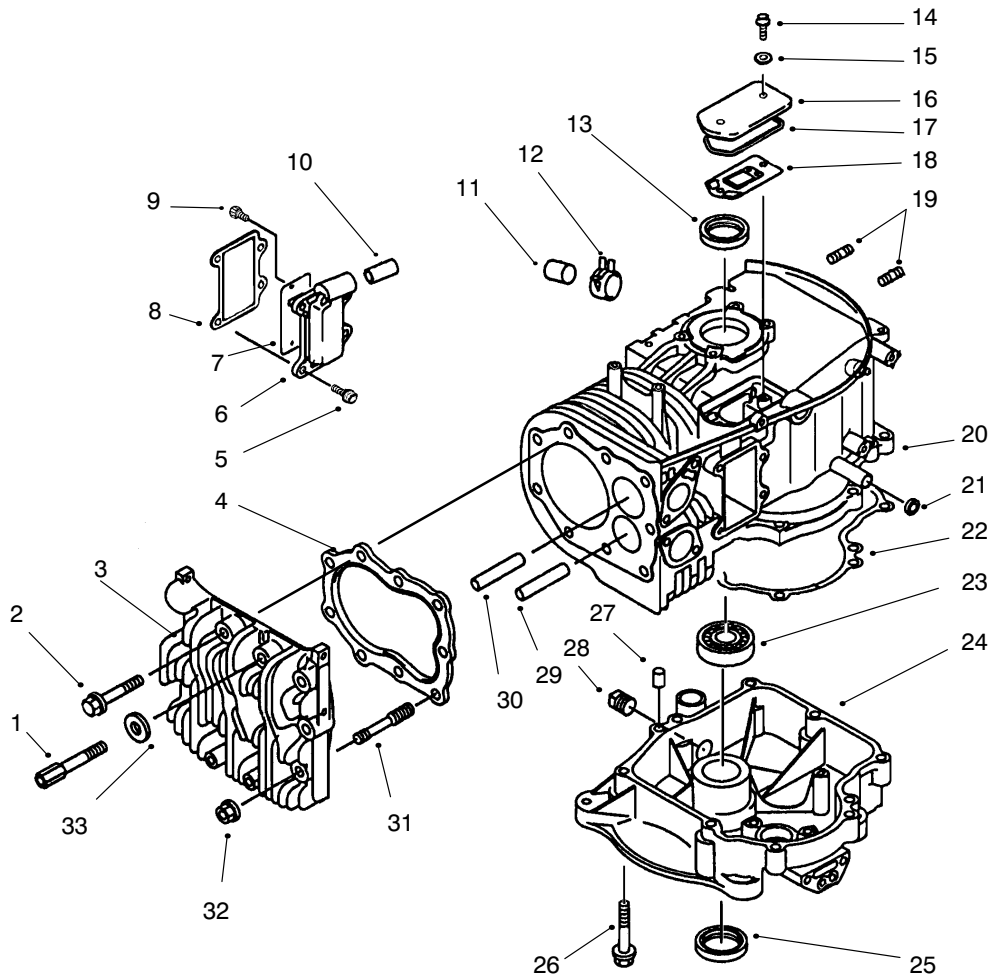


Sheet No.: 201

Crankcase

Ref. No.	Part No.	Qty.	Description
1	92002-2258	2	Bolt
2	130g1055	4	Bolt-Flange
3	11001-2151	1	Head-Cylinder
4	11004-2091	1	Gasket-Head
5	130g0616	4	Bolt-Flange
6	49108-2011	1	Cover-Valve Chamber
7	14025-2143	1	Cover
8	11060-2059	1	Gasket
9	92009-2307	2	Screw
10	92059-2142	1	Tube
11	92066-2096	1	Plug
12	92170-2088	1	Clamp
13	92049-2096	1	Seal-Oil
14	92002-2087	2	Bolt
15	11060-2323	2	Gasket
16	14025-2040	1	Cover-Breather
17	11009-2339	1	Gasket-Cover
18	14069-2062	1	Breather
19	92004-2083	4	Stud-6 X 14
20	49120-6108	1	Crankcase-Complete
21	92049-2097	1	Seal-Oil
22	11060-2015	1	Gasket-Crankcase
23	601a6207	1	Bearing-Ball
24	49015-6176	1	Cover-Crankcase
25	92049-2227	1	Seal-Oil
26	130g0845	8	Bolt-Flange

Ref. No.	Part No.	Qty.	Description
27	92043-1263	2	Pin
28	92066-2097	1	Plug
29	49002-2071	1	Guide-Valve Exhaust
30	49002-2070	1	Guide-Valve Intake
31	92004-2082	3	Stud
32	92015-2115	3	Nut
33	410b1000	2	Washer-Plain

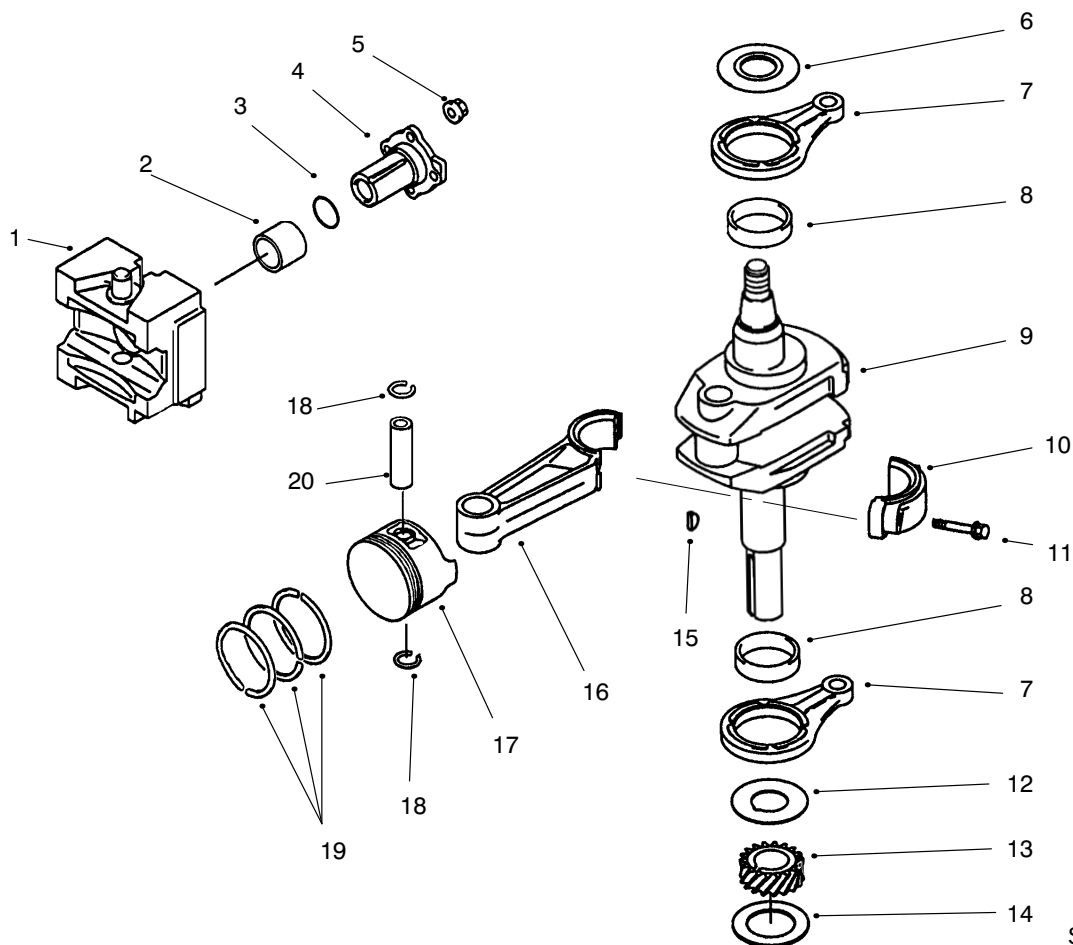


Sheet No.: 202

Piston / Crankshaft

Ref. No.	Part No.	Qty.	Description
1	13042-6006	1	Weight Incl #2
2	92141-2097	1	Bearing-Plane
3	92055-2072	1	O-Ring
4	13107-2253	1	Shaft
5	92015-1193	4	Nut
6	92026-2164	1	Spacer
7	46102-6007	2	Rod Incl #8
8	92141-2108	2	Bearing-Plane
9	49119-2177	1	Crankshaft ASM
11	92050-2193	2	Bolt
12	92026-2156	1	Spacer
13	59056-2105	1	Gear-Helical
14	92025-2145	A/R	Shim T=1.18
14	92025-2146	A/R	Shim T=1.25
14	92025-2147	A/R	Shim T=1.32
14	92025-2148	A/R	Shim T=1.39
14	92025-2149	A/R	Shim T=1.46
14	92025-2150	A/R	Shim T=1.53
14	92025-2151	A/R	Shim T=1.60
14	92025-2152	A/R	Shim T=1.67
14	92025-2153	A/R	Shim T=1.74
14	92180-2015	A/R	Shim T=1.11
14	92180-2016	A/R	Shim T=1.81
15	92038-2094	1	Key
16	13251-6005	1	Rod ASM Incl #10 11

Ref. No.	Part No.	Qty.	Description
16	13251-6007	A/R	Rod ASM Incl #10 11 0.50
17	13001-2084	1	Piston
17	13029-2019	A/R	Piston 0.25
17	13029-2020	A/R	Piston 0.50
18	92033-2066	2	Ring-Snap
19	13008-6001	1	Set-Ring Piston
19	13008-6002	A/R	Set-Ring Piston 0.25
19	13008-6003	A/R	Set-Ring Piston 0.50
20	13002-2066	1	Pin-Piston

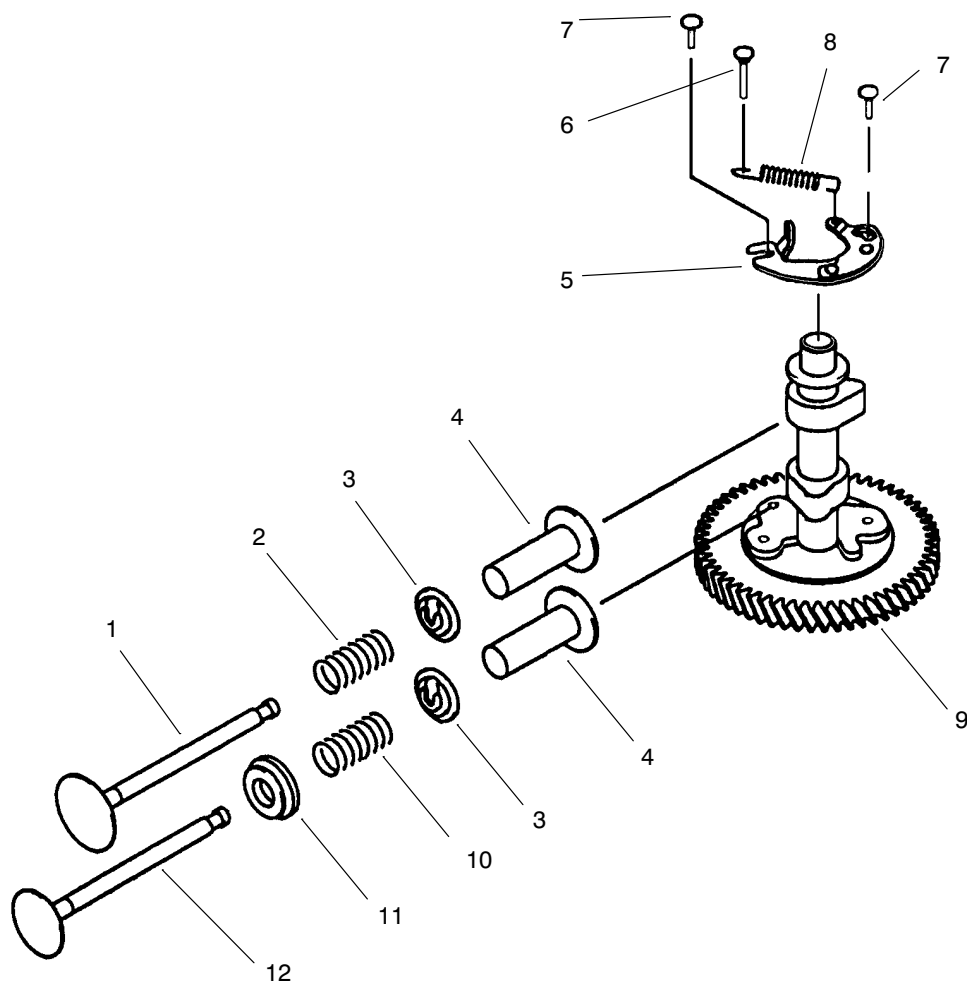

Sheet No.: 203

Valve / Camshaft

Ref. No.	Part No.	Qty.	Description
1	12004-2076	1	Valve-Intake
2	49078-2059	1	Spring-Valve
3	39108-2054	2	Retainer-Spring
4	12032-2058	2	Tappet
5	21118-2068	1	Decompressor
6	92043-2167	1	Pin
7	92043-2113	2	Pin
8	92144-2171	1	Spring
9	49118-2134	1	Camshaft Incl # 5-8
10	49078-2058	1	Spring-Valve
11	12039-2052	1	Rotator
12	12005-2066	1	Valve-Exhaust


Ref. No.	Part No.	Qty.	Description



Lubrication Equipment

Ref. No.	Part No.	Qty.	Description
1	11009-2346	1	Gasket-Oil Gauge
2	52005-2058	1	Gauge-Oil
3	130b0508	3	Bolt-Flange
4	92170-2014-9H	1	Clamp
5	59231-2059	1	Filler-Oil
6	130b0825	3	Bolt-Flange
7	16142-6001	1	Cover-Pump
8	130b0610	1	Bolt-Flange
9	13270-2054	1	Plate
10	49065-2056	1	Filter-Oil
11	16082-2057	1	Pump ASM-Oil
12	92081-2216	1	Spring
13	13169-2359	1	Plate
14	600a1000	1	Ball-Steel
15	92066-2211	1	Plug
16	14025-2145	1	Cover
17	130b0830	2	Bolt-Flange
18	92055-2063	1	O-Ring
19	670d2016	1	O-Ring


Ref. No.	Part No.	Qty.	Description

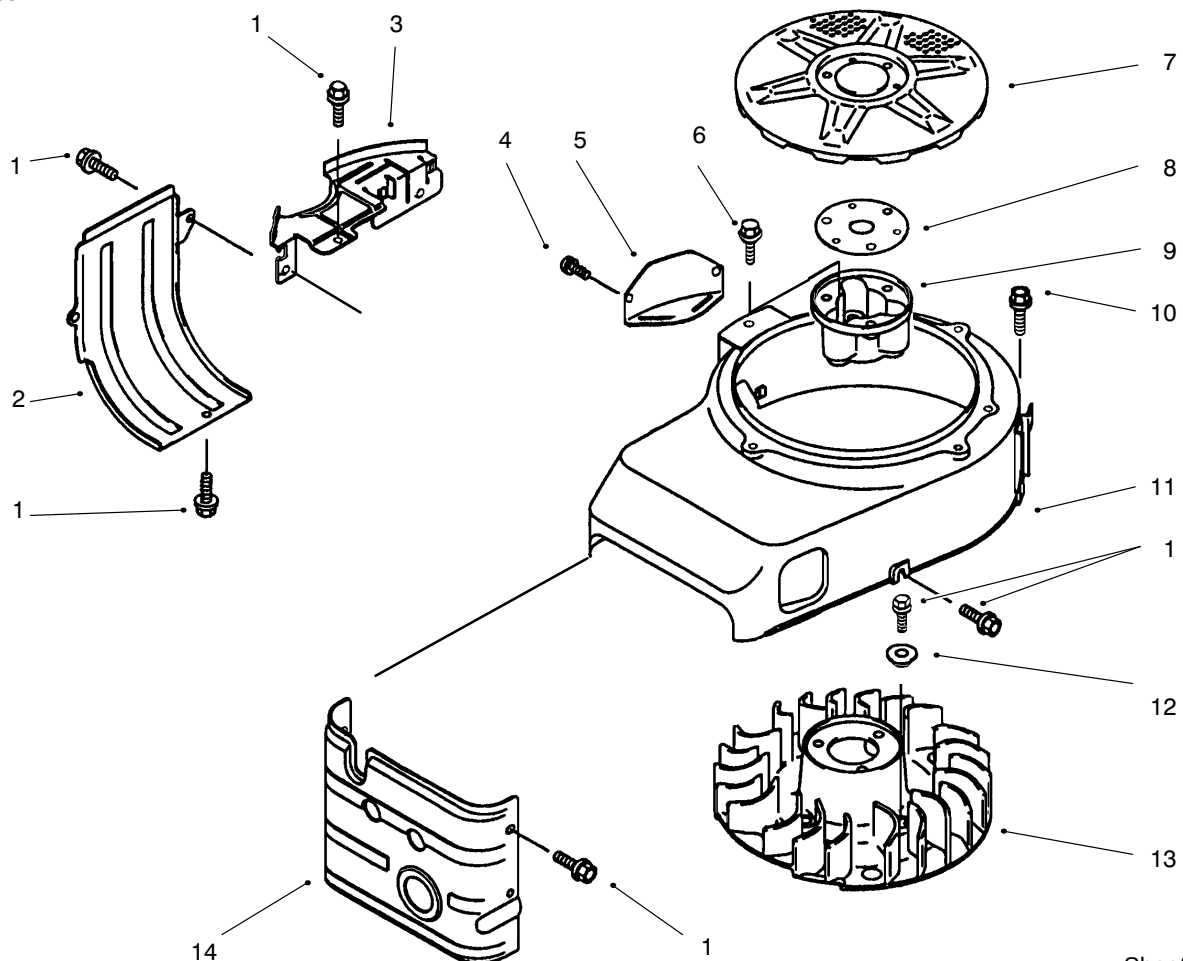

Sheet No.: 205

Cooling Equipment


Ref. No.	Part No.	Qty.	Description
1	130g0610	9	Bolt-Flange
2	49089-2199-9H	1	Shroud-Engine
3	59066-2295-9H	1	Housing-Fan
4	234b0408	2	Screw
5	14024-2038-9H	1	Cover
6	130b0820	3	Bolt-Flange
7	14037-2104-9H	1	Screen
8	92025-2003	1	Shim T-1.20
9	11044-2084	1	Bracket
10	130g0614	6	Bolt-Flange
11	59066-2677-9H	1	Housing-Fan
12	92143-2179	4	Collar
13	59041-2081	1	Fan
14	49089-2181-9H	1	Shroud-Engine



Electric Equipment

Ref. No.	Part No.	Qty.	Description
1	92071-2100	1	Grommet
2	92037-2063	1	Clamp
3	26001-2113	1	Harness-Wire
4	92038-2094	1	Key
5	21121-2086	1	Coil-Ignition
6	130b0520	2	Bolt-Flange
7	314g1800	1	Nut-Hex
8	92022-2178	1	Washer
9	21194-2323	1	Flywheel
10	224b0620	2	Screw
11	59031-2106	1	Coil-Charging
12	92037-2158	1	Clamp
13	26011-2329	1	Wire-Lead
14	92170-2029	1	Clamp
15	92071-2099	1	Grommet
16	234b0408	1	Screw
17	21130-2060	1	Cap-Spark Plug
18	92070-2101	1	Spark Plug-Rcj8


Ref. No.	Part No.	Qty.	Description

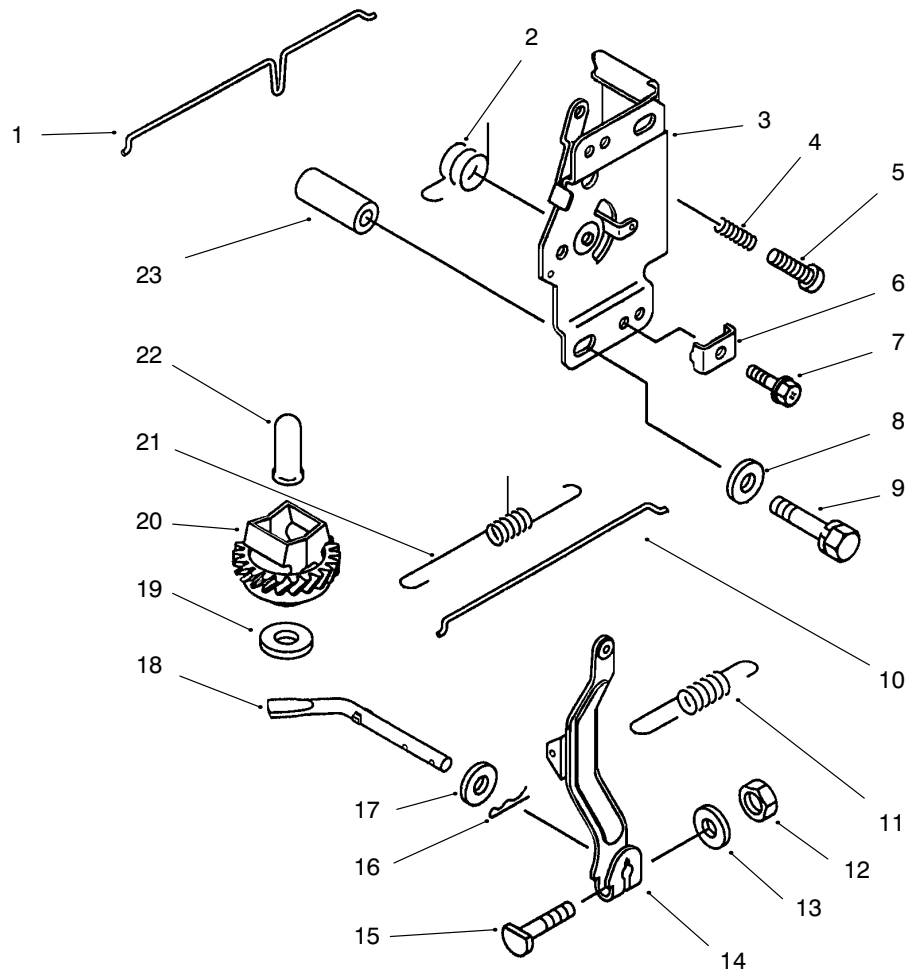

Sheet No.: 207

Control Equipment

Ref. No.	Part No.	Qty.	Description
1	16169-2126	1	Link-choke
2	92081-2316	1	Spring
3	49113-2067	1	Panel Incl #2 4-7
4	92144-2266	1	Spring
5	214b0425	1	Screw
6	92037-2020	1	Clamp
7	92150-2128	1	Bolt
8	92200-2070	2	Washer
9	180b0650	2	Bolt
10	16171-2083	1	Link
11	39129-2010	1	Spring-Governor
12	311b0600	1	Nut-HH
13	411b0600	1	Washer
14	21187-2052	1	Arm ASM
15	92002-2269	1	Bolt
16	554a0600	1	Pin-Snap
17	92200-2029	1	Washer
18	39003-2072	1	Arm-Pivot
19	92200-2036	1	Washer
20	49110-2067	1	Governor ASM
21	92081-2213	1	Spring
22	42036-2060	1	Sleeve
23	92027-2071	2	Collar

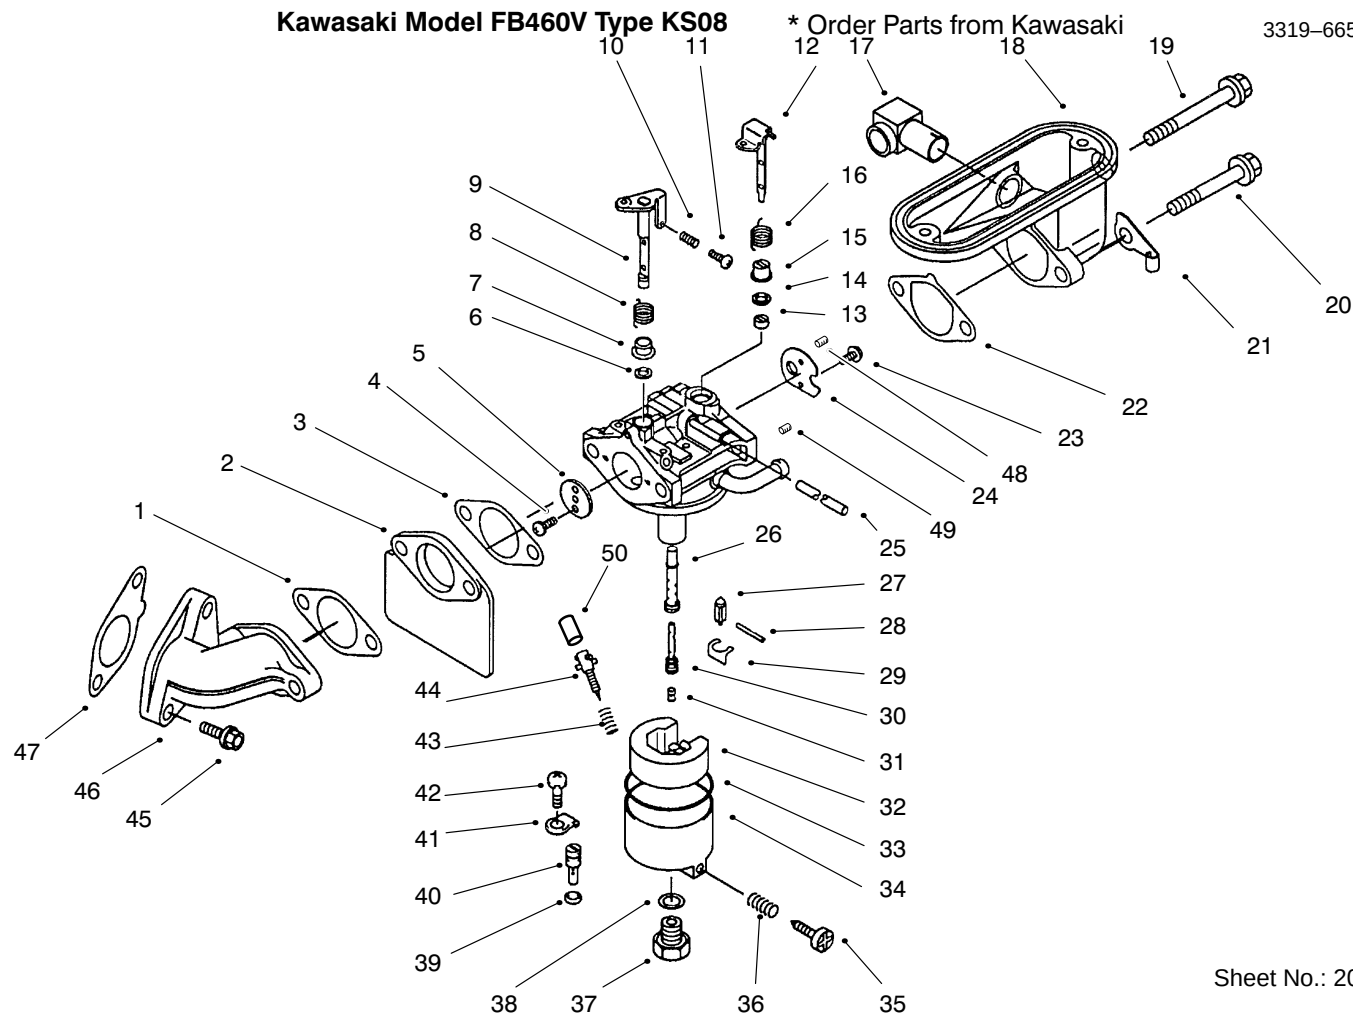


Sheet No.: 208

Carburetor

Ref. No.	Part No.	Qty.	Description
0	15003-2467	1	Carburetor ASM
1	11060-2338	1	Gasket-Intake Pipe
2	16073-2091	1	Insulator
3	11060-2339	2	Gasket-Carburetor
4	92009-2080	2	Screw
5	16025-2141	1	Valve-Throttle #110
6	92093-2082	1	Seal
7	92027-2025	1	Collar
8	92081-2077	1	Spring
9	16041-2009	1	Shaft-Throttle
10	92081-2046	1	Spring
11	92009-2079	1	Screw
12	16041-2010	1	Shaft-Choke
13	92027-2003	1	Collar
14	92093-2069	1	Seal
15	92143-2142	1	Collar
16	92144-2160	1	Spring
17	59071-2062	1	Joint
18	16060-2108	1	Pipe-Intake
19	92002-2254	1	Bolt
20	92002-2253	1	Bolt
21	92170-2019	1	Clamp
22	11009-2025	1	Gasket
23	92009-2081	2	Screw
24	16126-2206	1	Valve-Choke
25	92059-2266	1	Tube


Ref. No.	Part No.	Qty.	Description
26	49121-2207	1	Nozzle-Main
27	16030-2073	1	Valve-Float
28	92043-2006	1	Pin
29	92033-2067	1	Ring-Snap
30	49123-2078	1	Holder-Main Jet
31	92063-2294	1	Jet-Main
32	16031-2066	1	Float
33	11009-2024	1	Gasket
34	16020-2109	1	Chamber-Float Incl 35
35	92009-2015	1	Screw
36	92081-2009	1	Spring
37	92150-2146	1	Bolt
38	1100a-2025	1	Gasket
39	16038-024	1	Gasket
40	92064-2108	1	Jet-Pilot
41	13183-2252	1	Plate
42	92009-2244	1	Screw
43	92081-2008	1	Spring
44	16014-2076	1	Screw-Pilot Air
45	130g0825	2	Bolt-Flange
46	16060-2109	1	Pipe-Intake
47	11060-2337	1	Gasket-Intake Pipe
48	16035-2063	1	Jet-Air #0.9
49	16035-2051	1	Jet-Air #1.4
50	39076-2053	1	Limiter

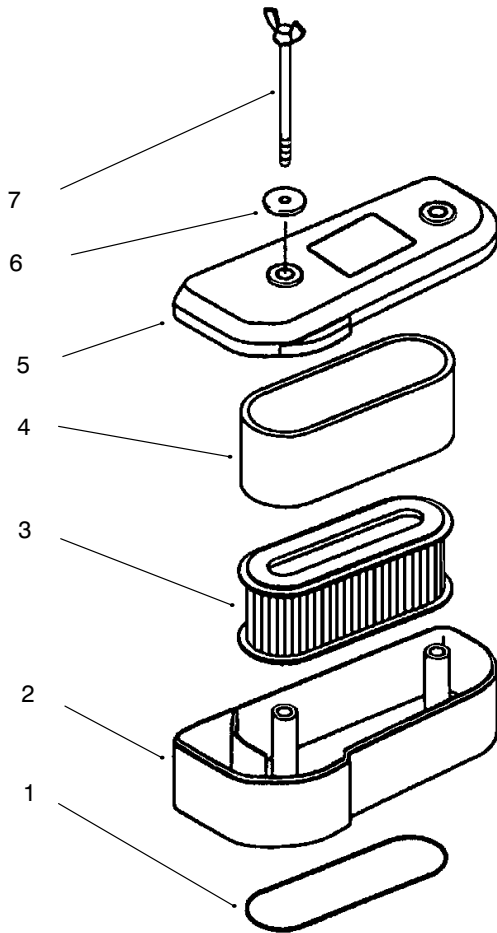

Sheet No.: 210

Air Filter


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	11009-2443	1	Gasket-Air Filter				
2	11011-2174	1	Case-Air Filter				
3	11013-2021	1	Element-Air Filter				
4	11013-2020	1	Element-Air Filter				
5	11012-2192	1	Cap-Air Filter				
6	92022-2220	2	Washer				
7	92002-2230	2	Bolt				
	11010-2291	1	Filter ASM				



Starter


Ref. No.	Part No.	Qty.	Description
1	90281-2267	1	Spring-Recoil
2	32099-2060	1	Case-Spring
3	32099-2239-yk	1	Case-Recoil Starter
4	130b0610	4	Bolt-Flange
5	59106-2060	1	Rope-Starter
6	46075-2059	1	Grip-Starter Rope
7	92022-2248	1	Washer
8	59101-2054	1	Reel-Recoil Starter
9	92081-2021	3	Spring
10	92081-2268	1	Spring-Return
11	13165-2073	3	Pawl-Recoil Starter
12	14020-2054	1	Retainer-Recoil
13	92001-2027	1	Bolt
14	49080-2144	1	Pulley-Starting
15	120p0620	3	Bolt-Socket
16	49088-2412-yk	1	Starter Incl #1-5 8-14

Ref. No.	Part No.	Qty.	Description

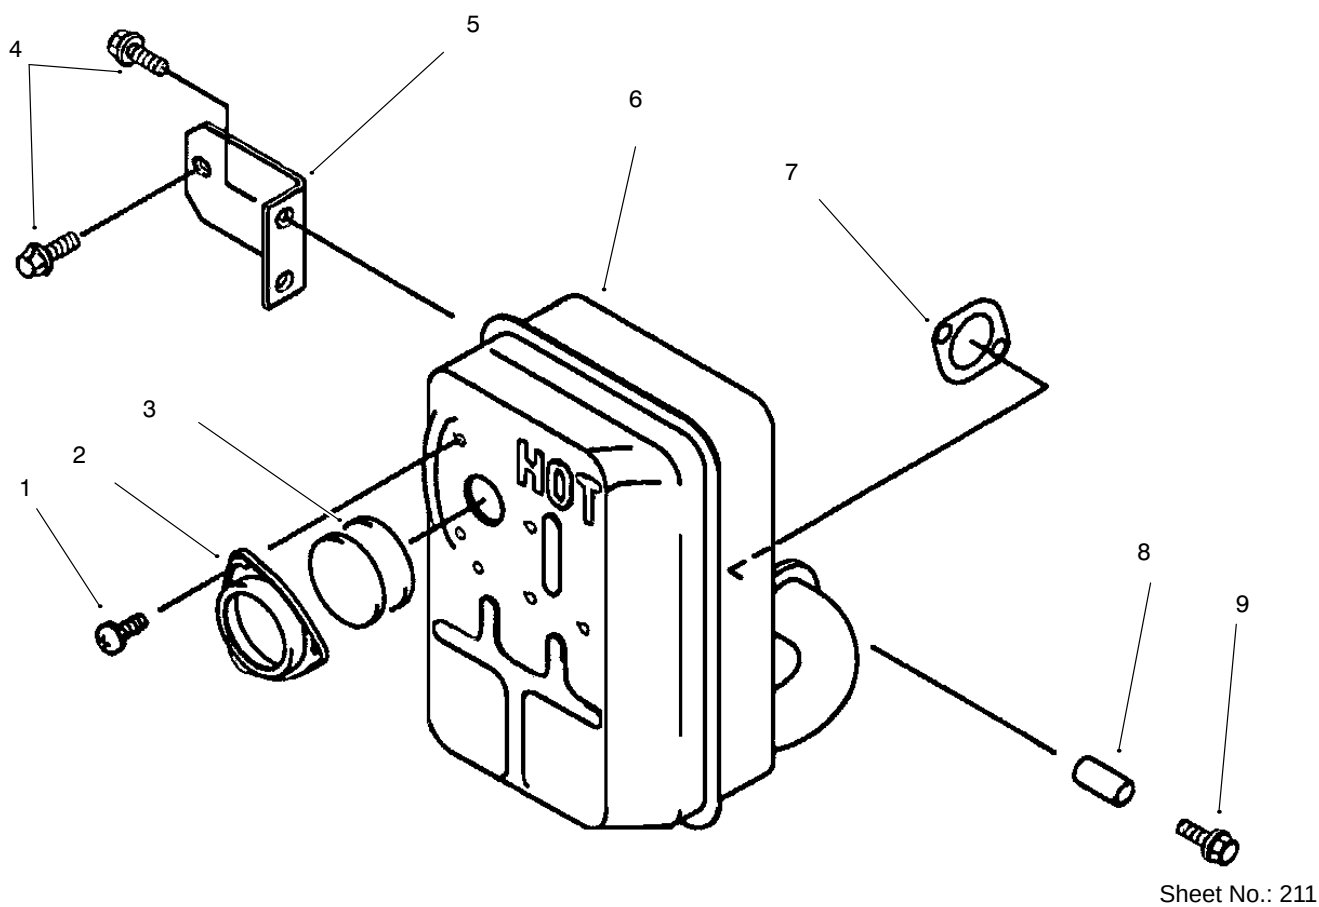

Muffler

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92009-2166	2	Screw				
2	11012-2165-9Y	1	Cap-Spark Arrestor				
3	18077-2054	2	Arrestor-Spark				
4	130b0812	4	Bolt-Flange				
5	11044-2069-9Y	1	Bracket				
6	49069-2190-9Y	1	Muffler ASM				
7	11009-2527	1	Gasket-Muffler				
8	92027-2081	1	Collar				
9	130g0845	1	Bolt-Flange				

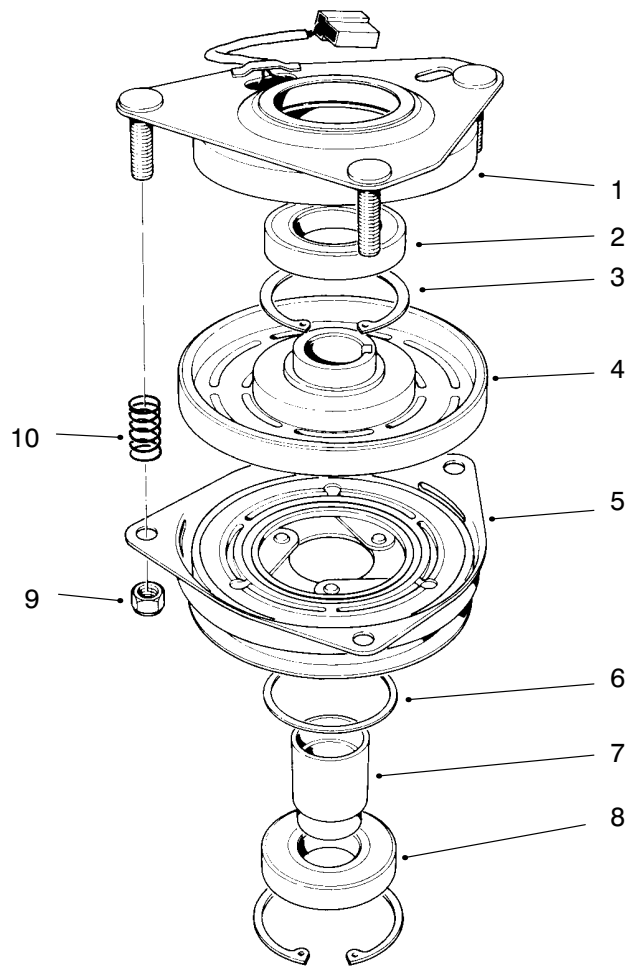


Sheet No.: 301

Clutch Asm No. 54-3200

Ref. No.	Part No.	Qty.	Description
1	54-0230	1	Field ASM Inc2/3
2	251-292	1	Bearing
3	44-8310	2	Ring-Retaining
4	44-8360	1	Field Coil & Bearing
5	55-7410	1	Armature & Pulley ASM
6	44-8330	1	Spacer-Pulley Bearing
7	44-8340	1	Collar-Bearing
8	251-291	1	Bearing-Pulley
9	3296-5	3	Nut-Lock
10	44-8320	3	Spring

Ref. No.	Part No.	Qty.	Description

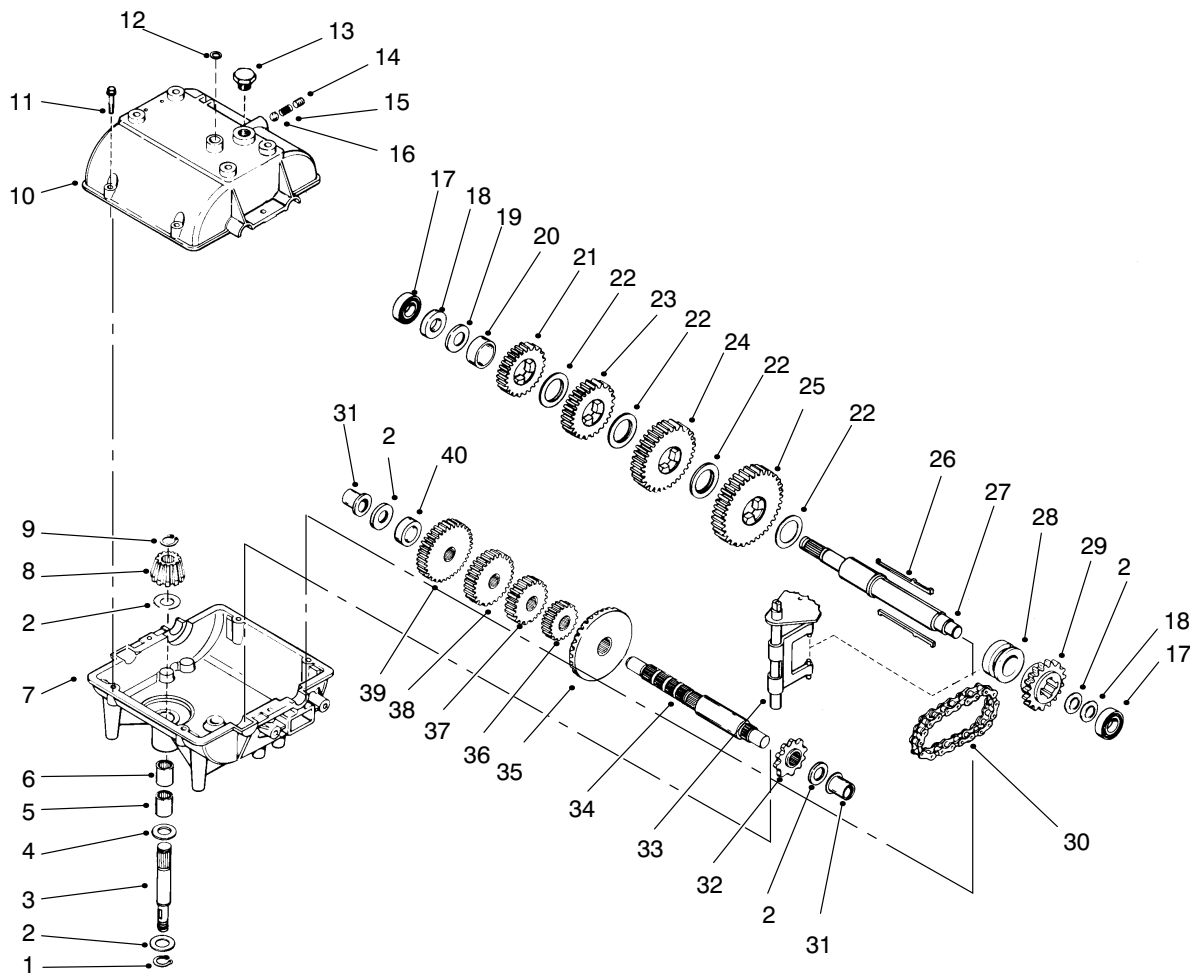


C-1776

Peerless Tansmission Model 700-082

Ref. No.	Part No.	Description	No. Used
1	792035	Ring – Retaining	1
2	780072	Washer – Thrust	5
3	776135	Shaft – Input	1
4	792001	"O"Ring	2
5	780142	Bearing – Needle	1
6	780086A	Bearing – Needle	1
7	770090A	Case – Transmission	1
8	778153	Bevel Pinion – Input	1
9	788040	Ring – Retaining	1
10	772099A	Cover – Transmission	1
11	792073A	Screw – Self Tapping	6
12	788069	Seal – Square Cut	1
13	792074	Plug – Threaded	1
14	792078	Screw – Set	1
15	792079	Spring	1
16	792077A	Ball – Steel	1
17	780092	Bearing – Ball	2
18	780065	Washer – Thrust	2
19	780139	Washer – Thrust	1
20	786072	Spacer	1
21	778123A	Gear – Spur (25 Teeth)	1
22	780108	Washer – Thrust	4

Ref. No.	Part No.	Description	No. Used
23	778250	Gear – Spur (27 Teeth)	1
24	778124A	Gear – Spur (30 Teeth)	1
25	778125	Gear – Spur (35 Teeth)	1
26	792089A	Key	4
27	776421	Shaft – Shifter & Brake	1
28	784266	Collar – Shift	1
29	786083	Sprocket (18 Teeth)	1
30	786081	Chain – Roller (No. 41 Chain 24 Links)	1
31	780105A	Bushing – Flanged	2
32	786082	Sprocket (9 Teeth)	1
33	784267	Rod & Fork Asm – Shift	1
34	776134	Shaft – Counter	1
35	778154	Gear – Bevel (42Teeth)	1
36	778136	Gear – Spur (15 Teeth)	1
37	778126A	Gear – Spur (20 Teeth)	1
38	778249	Gear – Spur (23 Teeth)	1
39	778127A	Gear – Spur (25 Teeth)	1
40	786071	Spacer	1
*	788067B	Grease 32oz Bottle	1
*	510334	Grease Eliminator	1

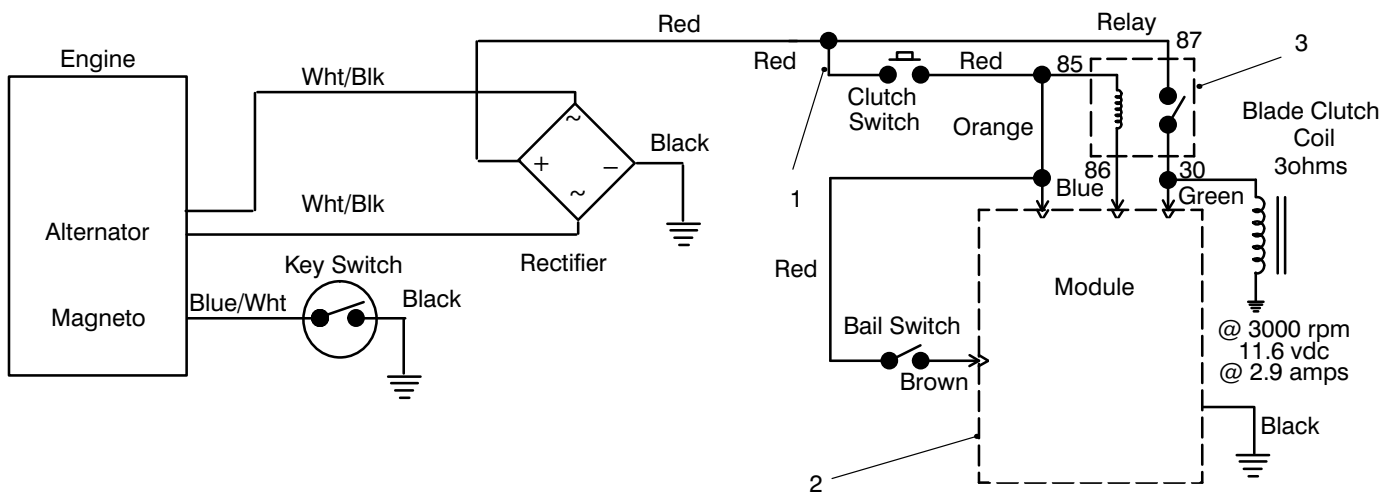

Electric Schematic

Ref. No.	Part No.	Qty.	Description
1	95-2804	1	Wire Harness
2	94-9666	1	Module - Interlock
3	63-7590	1	Relay

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
112843	6	11	1	Washer--PTO
7-5461	2	29	1	Spacer--Transmission
10-8110	3	10	A/R	Washer--Thrust
26-9671	2	17	1	"v" Belt
27-6230	2	19	1	Bolt--Wheel
29-5560	5	25	1	Switch--On/Off
37-7600	5	16	1	Bridge Rectifier
47-1970	2	2	1	Grip--Engagement
47-2982	1	35	1	Hose--Fuel
47-2982	6	4	1	Hose--Fuel
51-4160	3	14	4	Pulley--Wheel
51-4170	3	13	8	Spacer--Pulley
51-4180	3	15	2	Drum--Brake
51-4190	2	16	1	Pulley--Drive
51-4220	2	12	2	Guard--Coupler
51-4230	3	19	2	Washer--Wheel
51-4270	2	5	2	Bearing--Shaft Ext
51-4290	3	12	2	Belt--Drive
51-4370	1	7	1	Spring--RH
51-4380	1	8	1	Spring--LH
51-4450	1	24	2	Screw--Leveler
51-4540-03	6	9	1	Retainer--Clutch
51-4580	3	1	2	Rod--Brake
51-4600	3	3	1	Brake--Arm RH
51-4610	3	4	1	Brake Arm--LH
51-4650	3	8	2	Link--Brake
51-4660	3	7	2	Plate--Brake Link
51-4700	3	17	2	Band--Brake
51-4850	5	39	1	Lever--Parking Brake
52-2010	5	40	1	Decal--Parking Lever
52-2890	1	11	2	Bushing--Flanged
55-3570	1	1	1	Cap--Fuel
56-6360	6	2	1	Filter--Fuel
57-4101	6	1	1	Engine--12 Hp Kawasaki
57-6360	6	10	1	Screw--HH
57-6370	6	16	1	Screw--HH
57-6380	6	8	3	Screw--HH
57-6390	6	18	2	Nut
62-4540-03	2	22	1	Pulley--Idler
63-7590	5	15	1	Relay
63-8360	5	12	2	Key--Ignition
65-3090	5	22	1	Decal--Manual
66-7400	1	32	1	Plate--Control
67-6370	1	17	1	Bracket--RH
67-6380	1	18	1	Bracket--LH
67-6440	5	9	1	Handle--Upper
68-2190	2	18	1	Spring--Extension
68-9690	1	25	2	Fitting Rod
71-1280	5	36	1	Decal--Warning
72-2190	2	28	1	Mount--Shift Lever
74-0040	1	6	4	Spacer--Pivot
74-0050	6	14	1	Sheave--Lower
74-0060	6	15	1	Sheave--Upper
74-0220	1	14	1	Idler Bracket LH
74-0230	1	13	1	Idler Bracket RH
74-0320	2	1	1	Lever--Shift
74-0360	1	34	1	Frame--Rear
74-0380-03	5	6	1	Control Pivot
74-0480	2	11	2	Pulley--Drive ASM
74-0521	1	15	2	Rod--Fitting
74-0720	5	31	1	Tube--Manual
74-0740	5	23	1	Control--Throttle

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
82-2180-03	5	30	1	Panel-Control
82-2190	5	41	1	Switch-Bail
82-2280	5	7	1	Decal-Reverse
82-2290	5	2	1	Decal-Control Bar
82-2300	5	11	1	Switch
82-3820	5	10	1	Boot-Switch
82-4800	2	21	1	Lever-Idler
82-7631	5	37	2	Rod-Control
82-7680-03	5	4	1	Bail
82-7690	5	1	1	Bar
82-7730	5	35	1	Decal-Panel Proline
82-7750	1	4	1	Decal-Ground Speed
92-1746	4	4	4	Bearing
92-5436	6	13	1	Key
93-1156	1	29	1	Frame
93-1187-03	5	17	1	Panel-Bottom
94-9663	3	9	2	Wheel & Tire ASM
94-9666	5	19	1	Module
95-1526	2	31	1	Shield-Trailing
95-1529	2	32	1	Rod-Shield
95-2800	1	22	2	Pulley-Idler
95-2801	1	23	2	Spacer-Pulley
95-2802	1	2	1	Tank-Fuel
95-2804	5	27	1	Wire Harness
95-2814	1	33	1	Decal-Fuel Shut-Off
98-0786	2	27	1	Transmission-4 Speed
98-0787	2	8	1	Shaft-LH
98-0788	2	7	1	Shaft-RH
98-0789	2	13	2	Coupler
218-461	5	13	1	Nut-HH (F/W Sw)
218-595	5	38	1	Connector-Body
231-117	4	5	2	Tire-15x6
232-27	4	6	2	Valve Stem
237-124	1	26	1	Grommet
237-141	5	43	2	Grommet
242-80	4	1	2	Rim
2412-98	1	3	2	Clamp-Hose
2412-98	6	3	1	Clamp-Hose
2412-108	6	5	1	Clamp-Hose
2412-120	5	28	2	Clamp-R
283-6	1	16	2	Pin-Clevis
283-55	5	21	2	Pin-Clevis
302-5	2	14	2	Fitting-Grease
302-11	4	2	2	Fitting-Grease
321-2	5	20	1	Screw-HH
321-4	2	6	4	Screw-HH
322-2	2	24	4	Screw-HH
322-4	1	30	4	Screw-HH
322-7	3	18	8	Screw-HH
323-6	1	20	6	Screw-HH
323-8	2	20	1	Screw-HH
323-16	1	19	2	Screw-HH
329-10	2	30	1	Screw
3234-11	5	33	4	Screw-HHF
3245-1	2	15	1	Screw-Set
3245-3	2	10	2	Screw-HSH
3253-4	1	31	4	Washer-Lock
3253-4	2	25	4	Washer-Lock
3253-4	3	16	8	Washer-Lock
3253-4	6	7	3	Washer-Lock
3254-5	5	24	1	Washer-Lock
3255-8	6	17	1	Washer-Lock

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3256-23	1	10	10	Washer-Flat
3256-23	6	6	3	Washer-Flat
3257-5	2	9	3	Key-Woodruff
3290-307	1	12	4	Pin-Cotter
3290-307	3	2	2	Pin-Cotter
3290-307	5	42	2	Pin-Cotter
3290-378	5	26	2	Tie-Cable
3296-2	5	3	6	Nut-Lock
3296-6	2	26	1	Nut-Lock
3296-23	1	21	2	Nut-Lock
3296-29	4	3	8	Nut-Lock
3296-39	1	5	8	Nut-Lock
3296-39	2	23	1	Nut-Lock
3296-42	2	3	4	Nut-Lock
3296-42	5	14	1	Nut-Lock
32103-25	1	9	2	Nut-Wing
32104-76	5	29	4	Screw-Self TAP
32105-1	5	5	1	Screw-HH
32105-13	5	18	1	Screw-HH
32105-14	5	34	4	Screw-HH
32120-64	2	4	1	Ring-Retaining
32128-21	5	32	4	Nut-HF
32151-40	3	5	2	Ring-Retaining
32151-56	3	6	2	Ring-Retaining
32151-62	2	33	2	Ring-Retaining
32151-72	3	20	4	Ring-Retaining
32151-80	5	8	2	Ring-Push On
32151-91	3	11	2	Ring-Retaining

24

MAINTENANCE RECORD

[illegible]