





MODEL NO. 52201 39000001 & Up

**INSTALLATION
GUIDE**


Style Lites™ Floodlights



1. Press the bulb into the fixture contacts.



2. Snap the silver reflector into the clear lens.

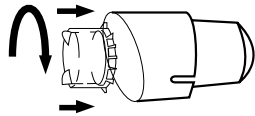

3. Install the fixture lens/reflector.

Install the clear lens/reflector by pushing down on the lens with slight pressure while turning the lens clockwise. The tabs on the lens will snap into the three slots on the fixture. Turn the lens until the movement stops.

The most important part of installing the fixtures is making sure their metal pins pierce the wire inside the cable:



This




Not This

You'll know they're well-aligned and the wire was pierced when the light comes on.




4. Prepare the stake.

Loop the cable around the channels in the stake. Make certain the cable is centered around the stake head and is tight. If the cable is loose, pull the ends to eliminate the slack.

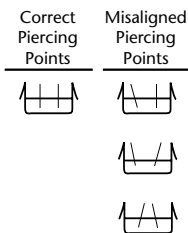


5. Make sure the piercing points in the fixture are straight.

Make sure the brass piercing points in the cable channel at the base of the fixture **are straight**. Even a slight bend may result in contact not being made with the wire.

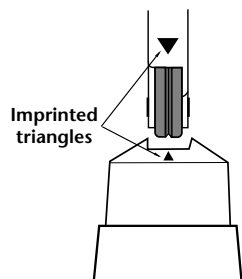


6. Align the side of the stake with the imprinted triangle to the top of the fixture head with the imprinted triangle.

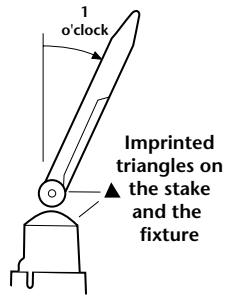

7. Hold the stake with the cable at an angle of about 30° (1 o'clock) to the floodlight housing as shown.


Press the stake with the cable down firmly into the piercing points on the fixture.

If you have done this correctly, the fixture should light. If it doesn't, make sure the power pack is on (and the photocell is covered to block light), the piercing points **are straight**, and try again. You can reposition the cable; the earlier holes created by the piercing points will self-seal and not cause a hazard.

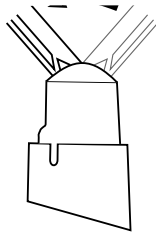


8. Lock the stake in place.

After the fixture has lit, turn the stake away from the imprinted triangle on the fixture to lock it in place. Pull on the cable to remove any slack.

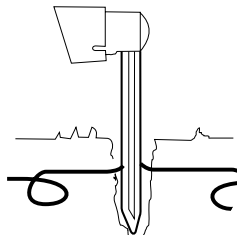

9. Put the stake into the ground.

To install the stake, make a hole in the ground. Do not push the stake into the ground without making a hole first because the stake could be damaged. After you've inserted the stake, fill in around it with dirt. Do not hammer or press hard on the lamp assembly.

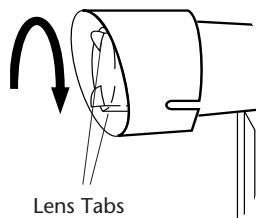

10. Adjust the light beam.

To adjust the light beam from narrow to broad, turn the lens using the tabs.

IMPORTANT: To ensure your power pack isn't overloaded, use a replacement bulb with the same wattage as the original bulb. Maximum wattage allowed for this fixture is 7 watts.



WARNING

! Possible Burns !

Do not attempt to remove any bulbs while the fixtures are on or you may be burned.