



SUPER RECYCLER® MOWER UPDATE KIT

MODEL NO. 59201
MODEL NO. 59205

INSTALLATION INSTRUCTIONS

Since this instruction sheet covers only a minimal amount of information necessary to maintain and operate your mower, we suggest that you keep this material with your Operator's Manual so that both may be referred to for instructions concerning safe operation and proper maintenance procedures.

! IMPORTANT

Your Recycler® mower has been updated to a Super Recycler® mower. Make sure that your dealer is aware of this whenever parts are ordered or servicing is required.


Kit Contents

DESCRIPTION	QTY.
Accelerator – BBC Models (Kit Model No. 59201)	1
Accelerator – Zone Start Models (Kit Model No. 59205)	1
Blade – Super Recycler	1
Blade Spacer – BBC Models	1
Blade Retainer – Zone Start Models	1
Installation Instruction Sheet	1

Assembly

1. Remove spark plug wire from spark plug.

2. Drain gasoline; refer to the Operator's Manual that was provided with your mower for proper draining instructions.
3. Tip mower on side opposite from air cleaner.
4. Remove blade fastener(s), blade stiffener, blade, and spacer (BBC models) or retainer (zone start models). Discard all parts except the blade fasteners.
5. Install new blade retainer or spacer.
6. Install new blade and accelerator (Fig. 1 & 2). Secure with fasteners removed previously. Tighten blade bolt on a zone start mower to 45–60 ft-lb. Tighten blade nuts on a BBC mower to 15–27 ft-lb.

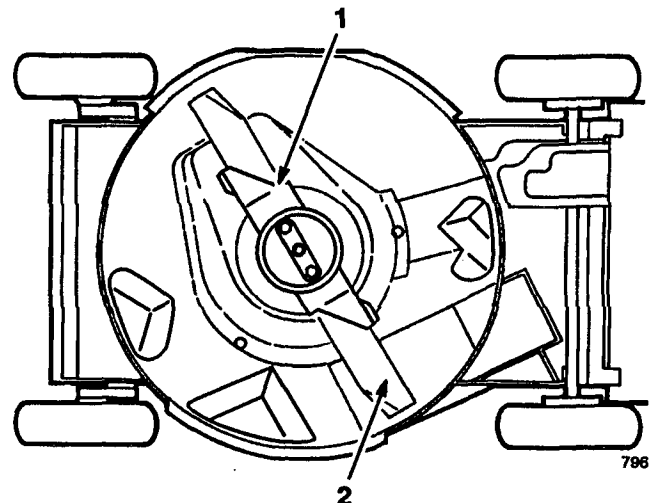


Self-propelled BBC Model

Figure 1

1. Blade

2. Accelerator

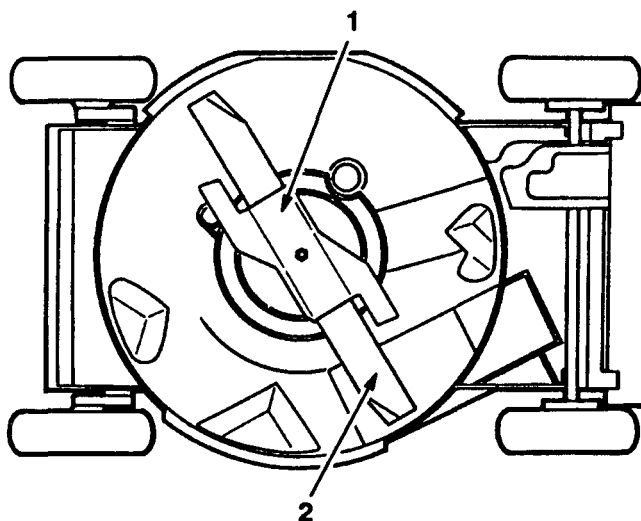

757

Self-propelled Zone Start Model

Figure 2

1. Blade

2. Accelerator

7. Using a rag or wearing gloves, rotate blade one complete revolution slowly, by hand, to ensure blade does not interfere with kickers, deck or any other component. If interference occurs, contact Toro Service Dealer.
8. Turn mower upright.
9. Reconnect spark plug wire to spark plug.
10. Refill the fuel tank.
11. Start engine and check mower safety systems to ensure that blade stops in 3 seconds or less.