



Form No. 3384-872 Rev C

**Count on it.**

# Parts Catalog

## TimeMaster 30in Lawn Mower

Model No. 20199—Serial No. 314000001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Deck and Frame Assembly . . . . . 4

Belt, Spindle and Blade Assembly . . . . . 6

Side Discharge Chute Assembly . . . . . 8

Engine and Pulley Assembly . . . . . 10

Front Wheel and Axle Assembly . . . . . 12


Transmission, Rear Wheel and Height-of-Cut Assembly . . . . . 14

Handle Assembly . . . . . 16

Bag Assembly . . . . . 18

Attachments and Accessories . . . . . 20

# Deck and Frame Assembly

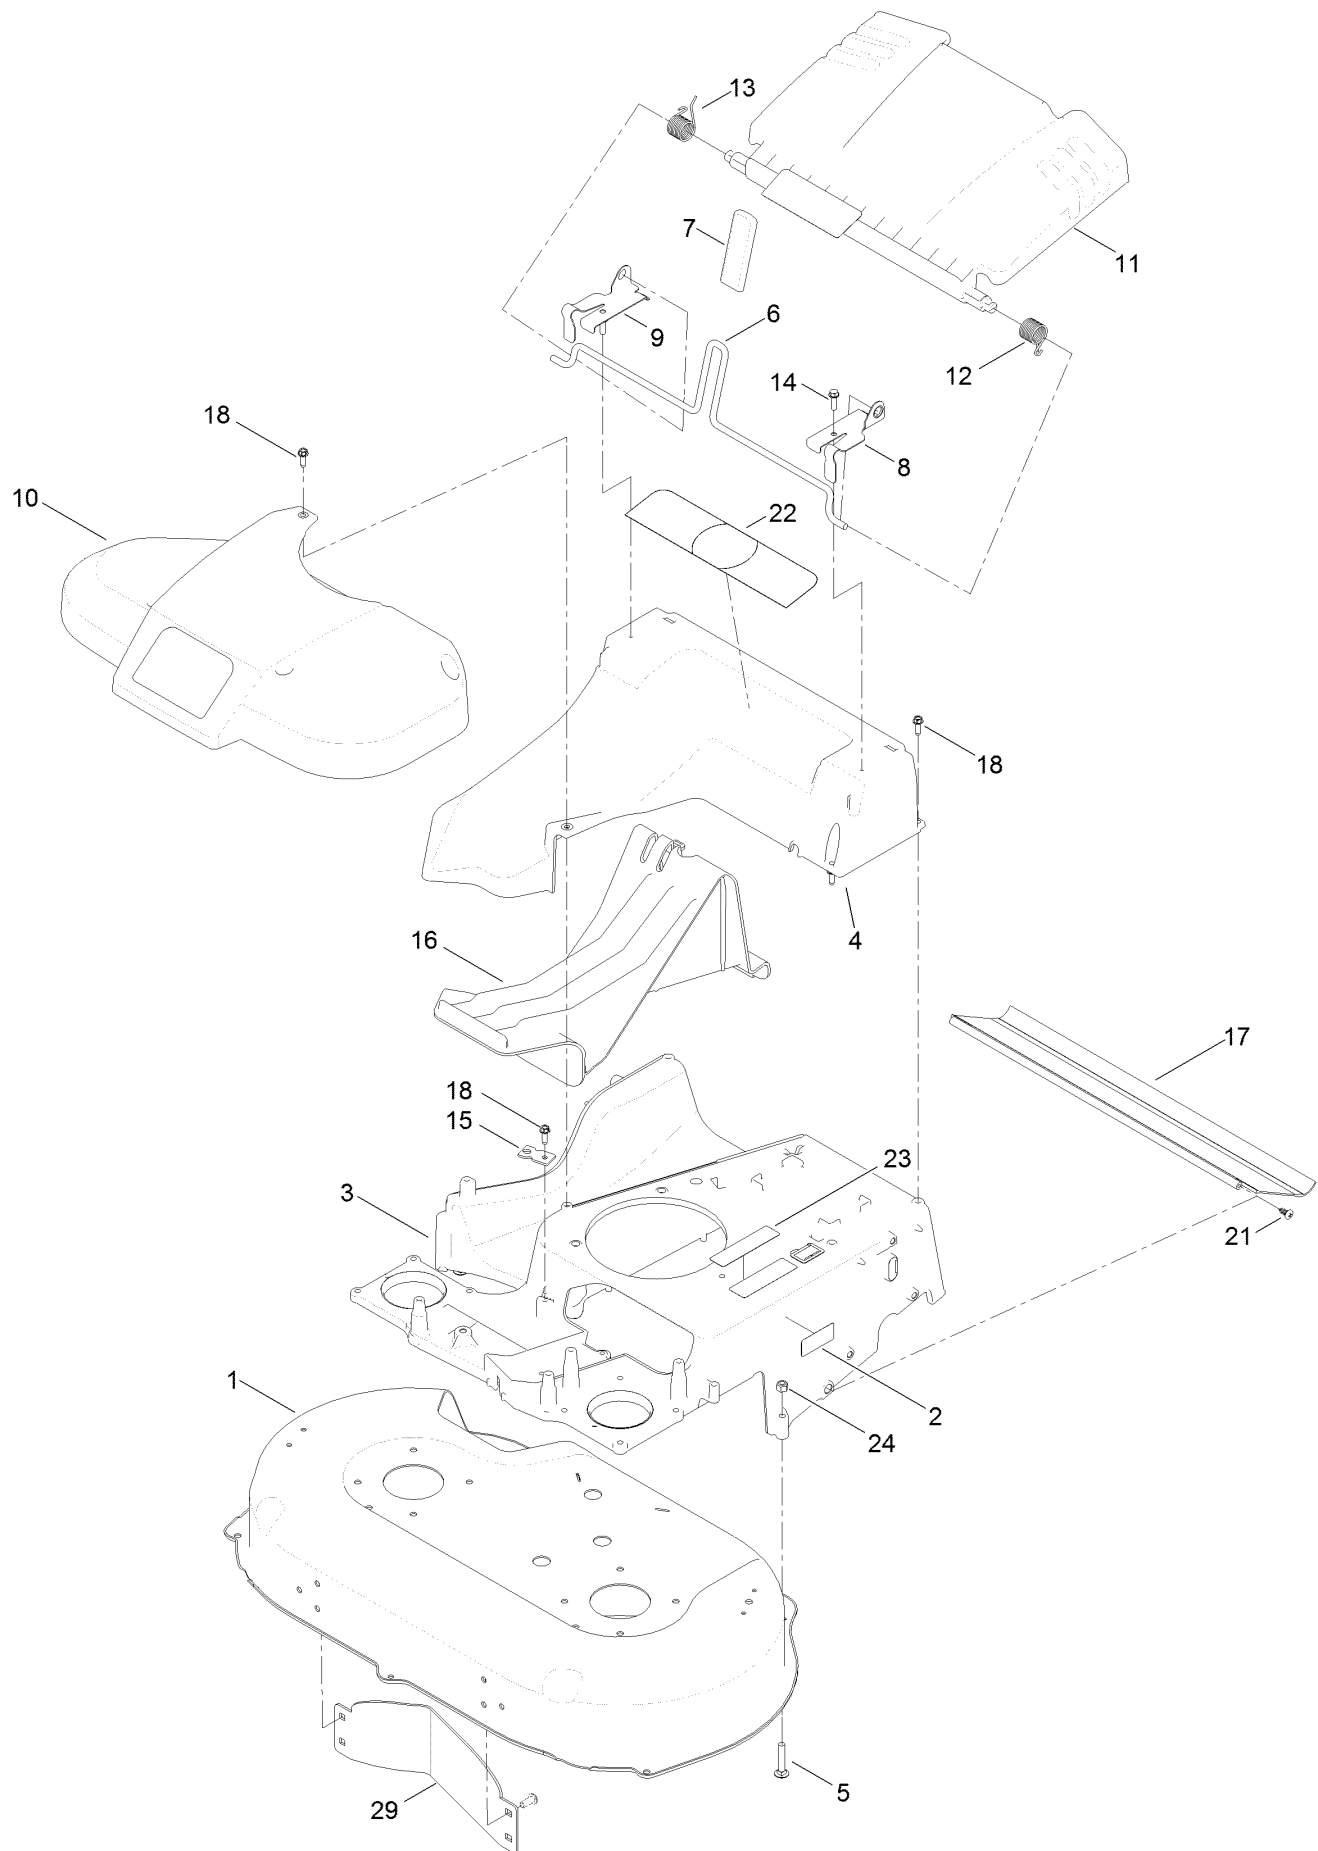


## Deck and Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|--------------------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 125-5087           | 1           | Housing ASM                    | 13          | 114-7924           | 1           | Spring-Torsion          |
| 2           | 121-5684           | 1           | Decal-Location, Service Dealer | 14          | 46-8091            | 2           | Screw-HWH               |
| 3           | 121-9198-01        | 1           | Frame                          | 15          | 107-7497           | 1           | Bracket-Cable, Traction |
| 4           | 120-3336           | 1           | Chute                          | 16          | 120-5225           | 1           | Plug-Mulch              |
| 5           | 3230-5             | 2           | Screw-CARR                     | 17          | 120-6241           | 1           | Shield-Trailing         |
| 6           | 120-3344           | 1           | Rod-Release, Handle            | 18          | 49-2040            | 9           | Screw-HWHTF             |
| 7           | 120-7018           | 1           | Grip-Lever                     | 21          | 117-1092           | 2           | Screw-PTH               |
| 8           | 121-9114           | 1           | Bracket-Door, LH               | 22          | 121-2398           | 1           | Decal-Position, Handle  |
| 9           | 121-9115           | 1           | Bracket-Door, RH               | 23          | 117-2718           | 1           | Decal-Arrester, Spark   |
| 10          | 120-7049           | 1           | Belt Cover ASM                 | 24          | 3296-29            | 2           | Nut-Lock, NI            |
| 11          | 120-7048           | 1           | Rear Deflector ASM             | 29          | 130-2352-01        | 1           | Baffle-Control          |
| 12          | 115-2859           | 1           | Spring-Torsion                 | 99          | 125-5072           | 1           | Frame Plate Kit ●       |

● Not illustrated


# Belt, Spindle and Blade Assembly

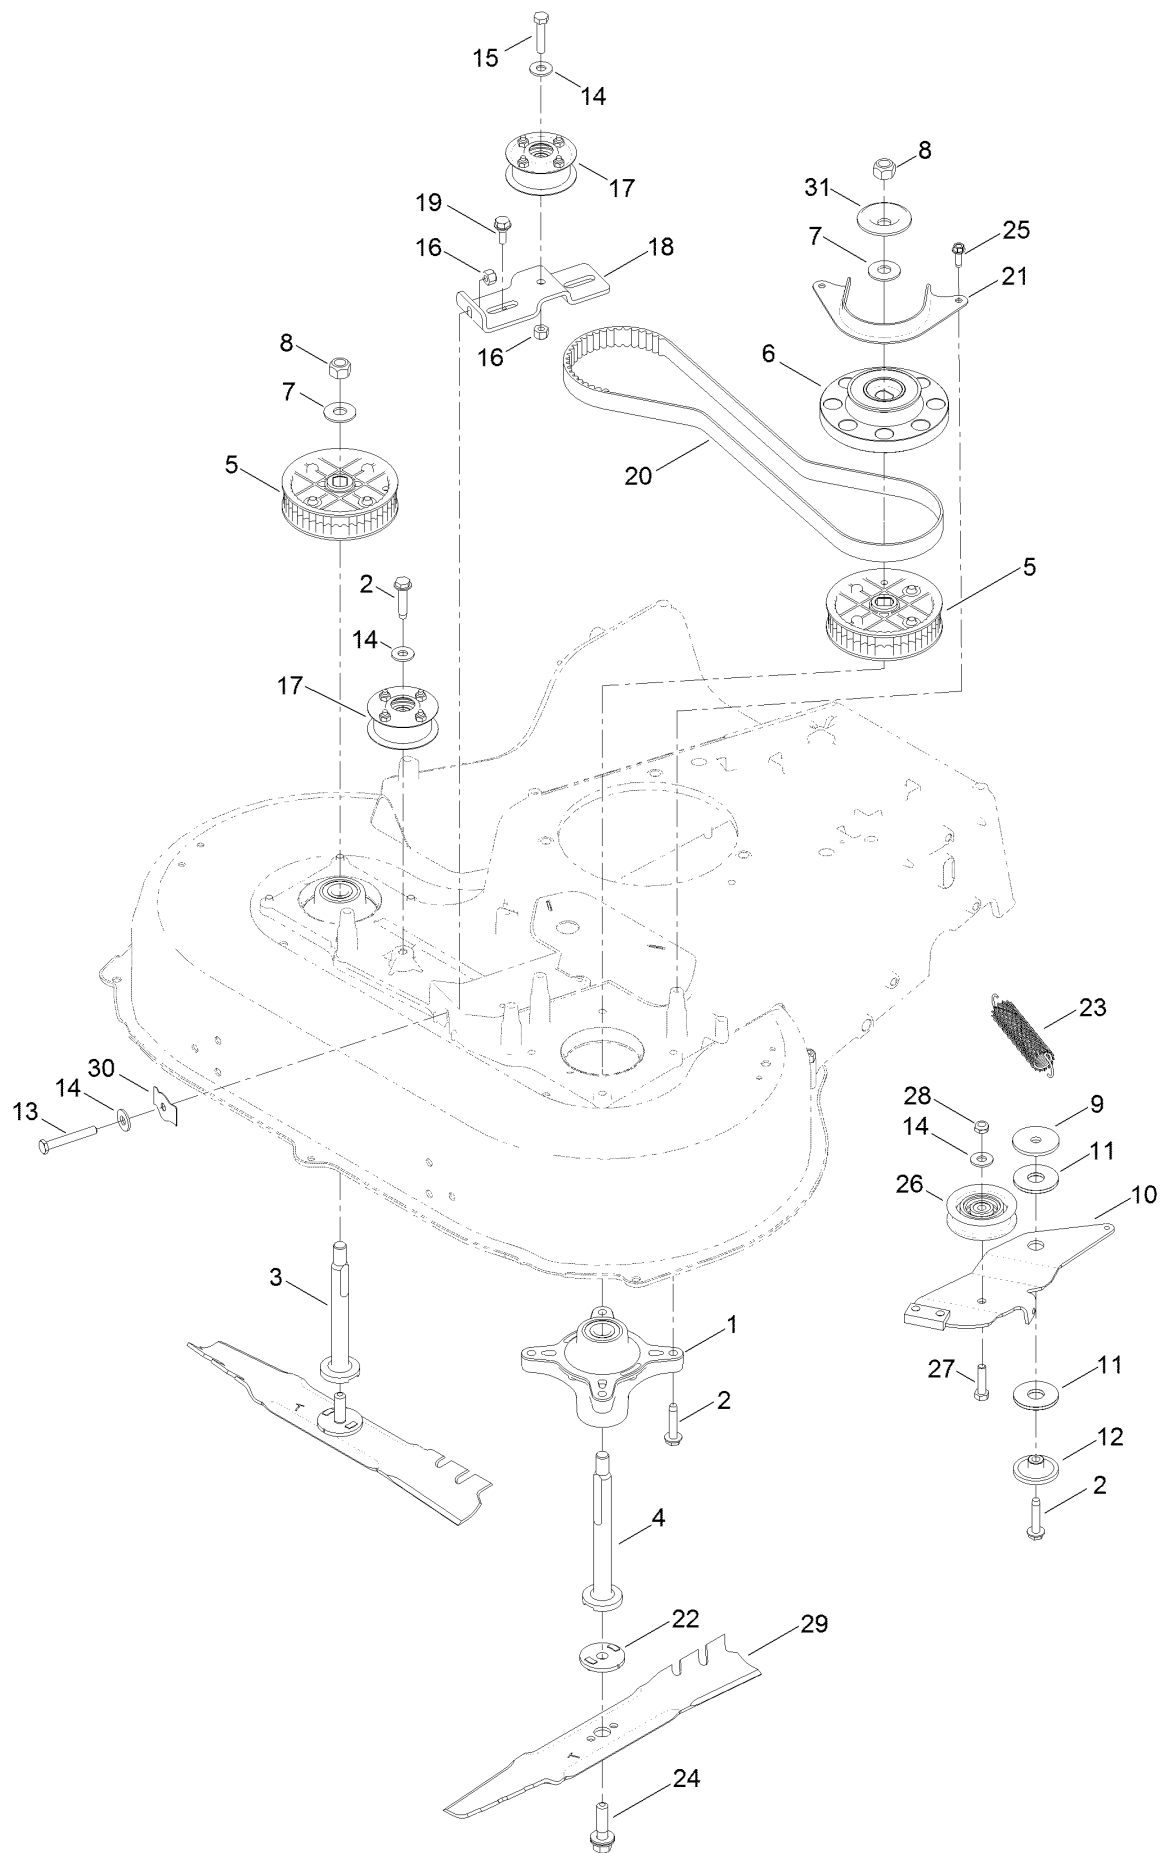

## Belt, Spindle and Blade Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 121-9107           | 2           | Spindle ASM                | 17          | 125-2532           | 2           | Pulley ASM              |
| 2           | 32144-57           | 10          | Screw                      | 18          | 120-3348           | 1           | Bracket-Idler           |
| 3           | 120-5234           | 1           | Shaft-Spindle              | 19          | 120-7024           | 2           | Screw-Shoulder, HHF     |
| 4           | 120-5235           | 1           | Shaft-Spindle              | 20          | 120-3335           | 1           | Belt-Synchronous        |
| 5           | 121-9100           | 2           | Sprocket                   | 21          | 120-5245-03        | 1           | Guide-Belt, Spindle     |
| 6           | 120-3334           | 1           | Pulley-Brake, Spindle      | 22          | 120-5236           | 2           | Adapter-Blade           |
| 7           | 109-9505           | 2           | Washer-Spring              | 23          | 121-5808           | 1           | Spring-Extension, Brake |
| 8           | 130-2384           | 2           | Nut-Hex                    | 24          | 125-2466           | 2           | Bolt-Blade              |
| 9           | 63-7400            | 1           | Washer-Rebound             | 25          | 49-2040            | 2           | Screw-HWHTF             |
| 10          | 120-6242           | 1           | Arm-Brake                  | 26          | 120-7082           | 1           | Pulley-Idler            |
| 11          | 121-2305           | 2           | Washer-Friction, Composite | 27          | 322-6              | 1           | Screw-HH                |
| 12          | 120-9490           | 1           | Spacer                     | 28          | 3296-47            | 1           | Nut-Lock, NI            |
| 13          | 9114524            | 1           | Bolt-TAP, HH               | 29          | 116-6358-03        | 2           | Blade-Rotary            |
| 14          | 3256-3             | 4           | Washer-Flat                | 30          | 121-2336           | 1           | Spring-Flat             |
| 15          | 322-7              | 1           | Screw-HH                   | 31          | 130-2364           | 1           | Washer-Cup              |
| 16          | 3296-29            | 2           | Nut-Lock, NI               |             |                    |             |                         |

# Side Discharge Chute Assembly

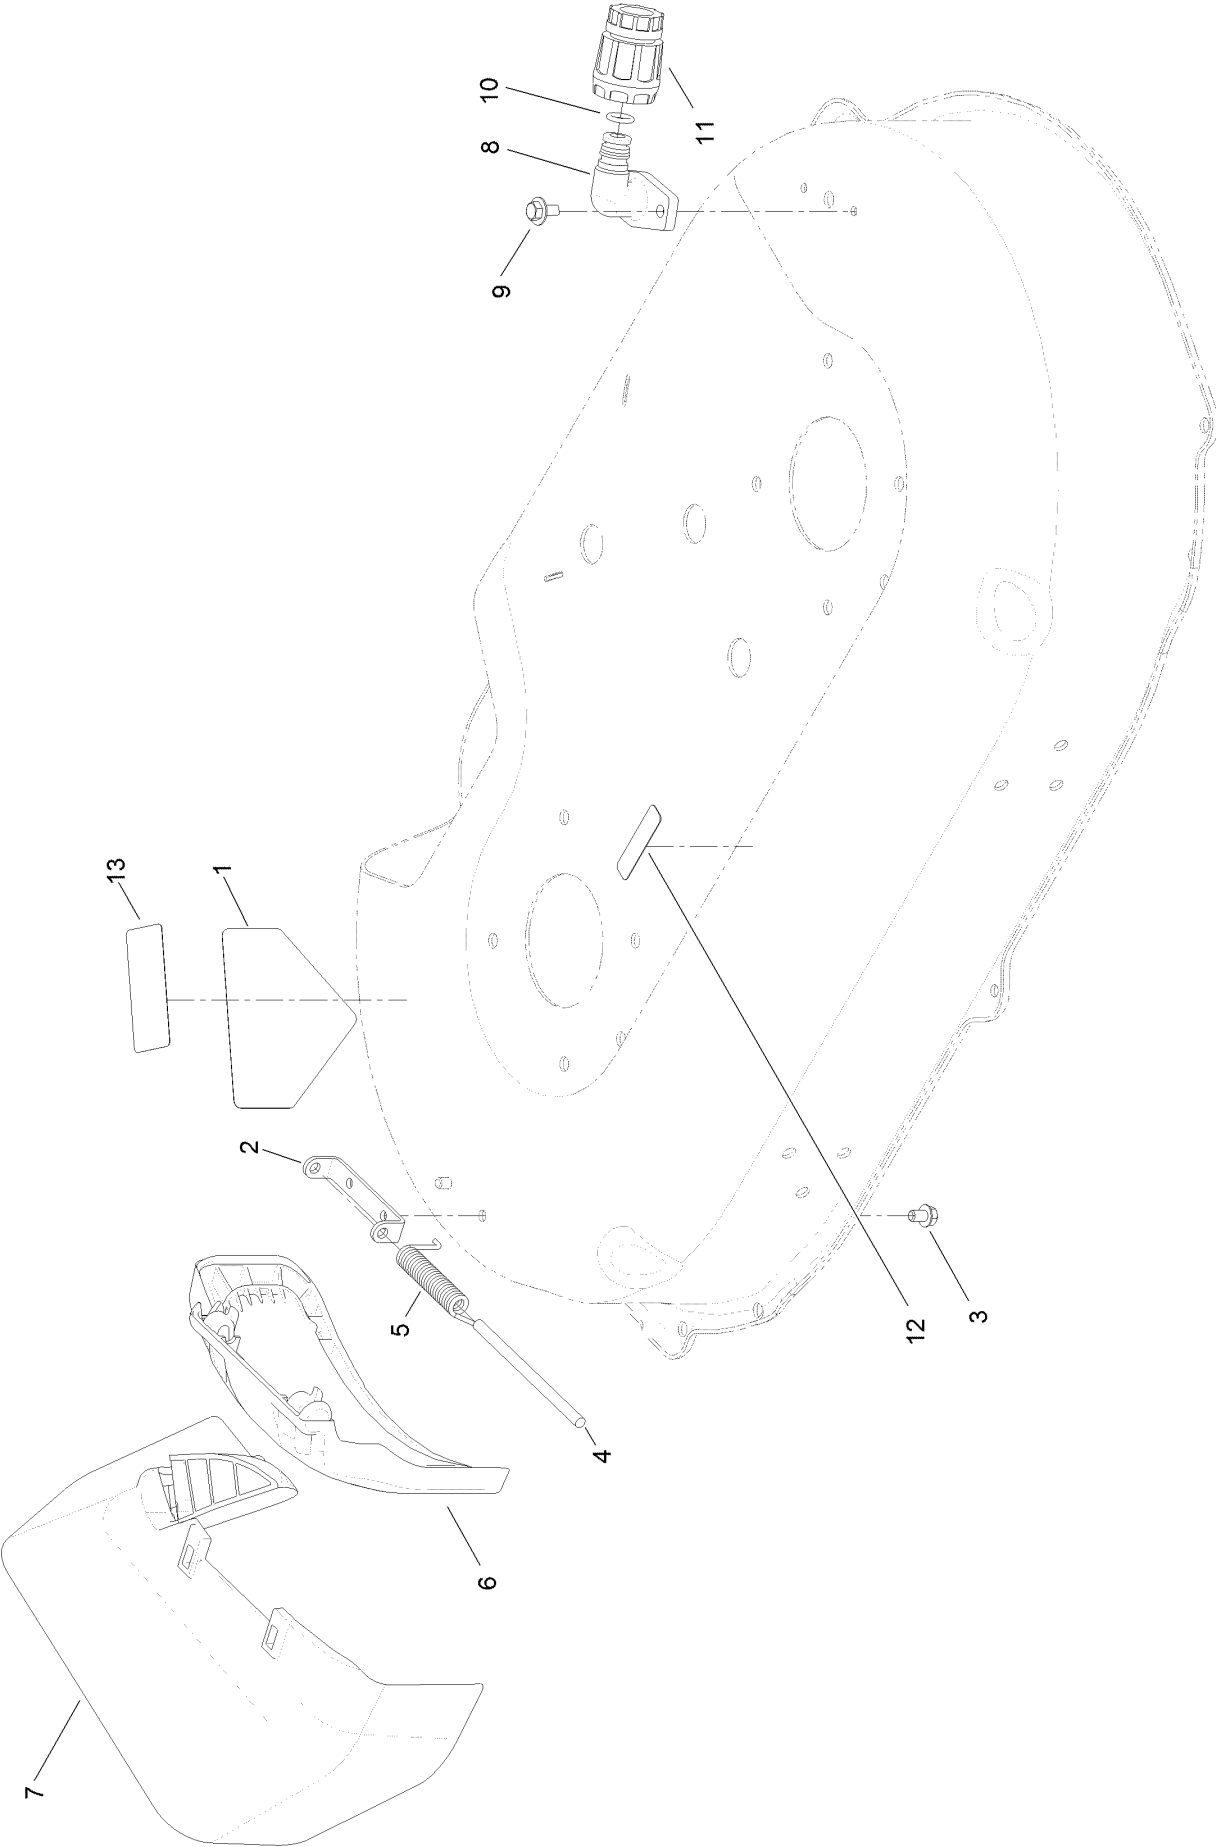


## Side Discharge Chute Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 1           | 94-8072            | 1           | Decal-Danger          |
| 2           | 112-6416           | 1           | Bracket-Cover         |
| 3           | 99-8445            | 2           | Screw-HWH             |
| 4           | 99-5291            | 1           | Rod-Cover             |
| 5           | 127-0721           | 1           | Spring-Torsion, Cover |
| 6           | 125-5091           | 1           | Deflector-Side        |
| 7           | 121-2319           | 1           | Chute-Discharge, Side |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 8           | 95-2747            | 1           | Fitting-Washout       |
| 9           | 46-8560            | 2           | Screw-HHFTF           |
| 10          | 46-6290            | 1           | O-Ring                |
| 11          | 95-3270            | 1           | Connector-Hose        |
| 12          | 120-9570           | 1           | Decal-Warning         |
| 13          | 125-5092           | 1           | Decal-Placement, Foot |

# Engine and Pulley Assembly

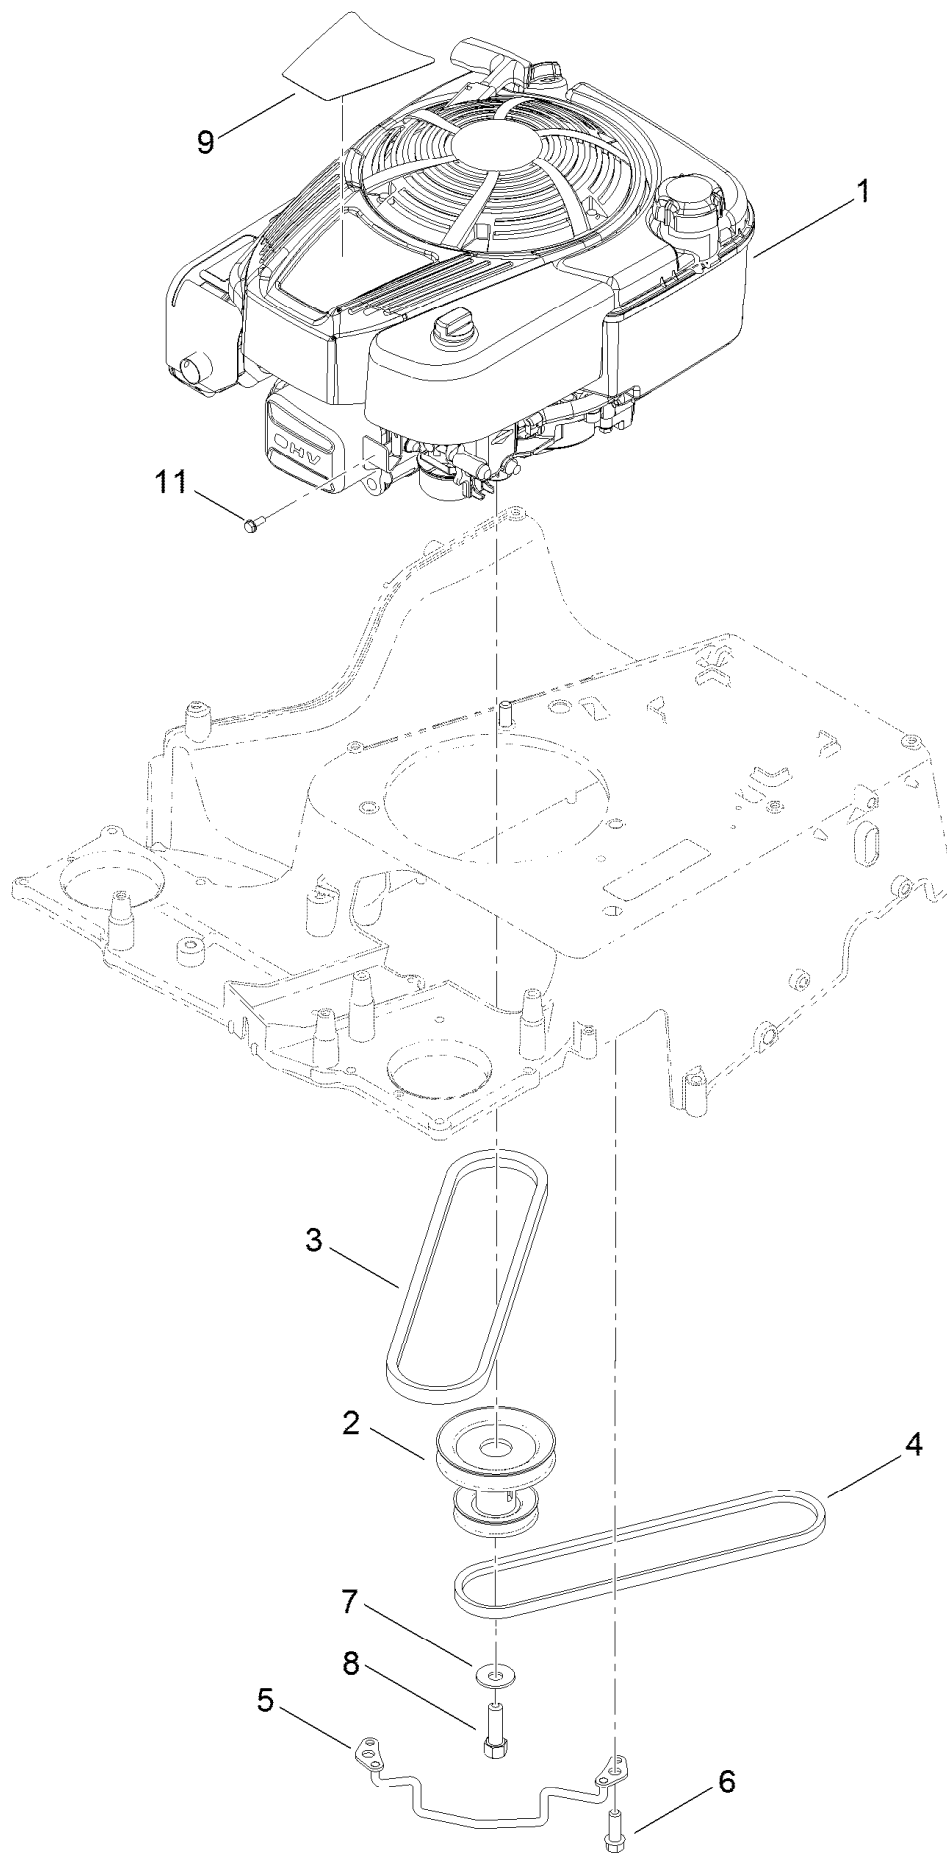

## Engine and Pulley Assembly (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                |
|-------------|--------------------|-------------|-----------------------------------|
| 1           |                    | 1           | Engine-Briggs,<br>121S020130F1 ●■ |
| 2           | 120-3333           | 1           | Pulley-Engine                     |
| 3           | 121-5765           | 1           | V-Belt                            |
| 4           | 120-9470           | 1           | V-Belt, Traction                  |
| 5           | 120-7077           | 1           | Guide-Belt                        |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 6           | 95-1726            | 3           | Screw-Taptite      |
| 7           | 3290-465           | 1           | Washer-Belleville  |
| 8           | 26-0671            | 1           | Screw-HH           |
| 9           | 121-2318           | 1           | Decal-Shroud       |
| 11          | 32144-1            | 1           | Screw-Taptite      |

● Not serviced separately

■ Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)


# Front Wheel and Axle Assembly

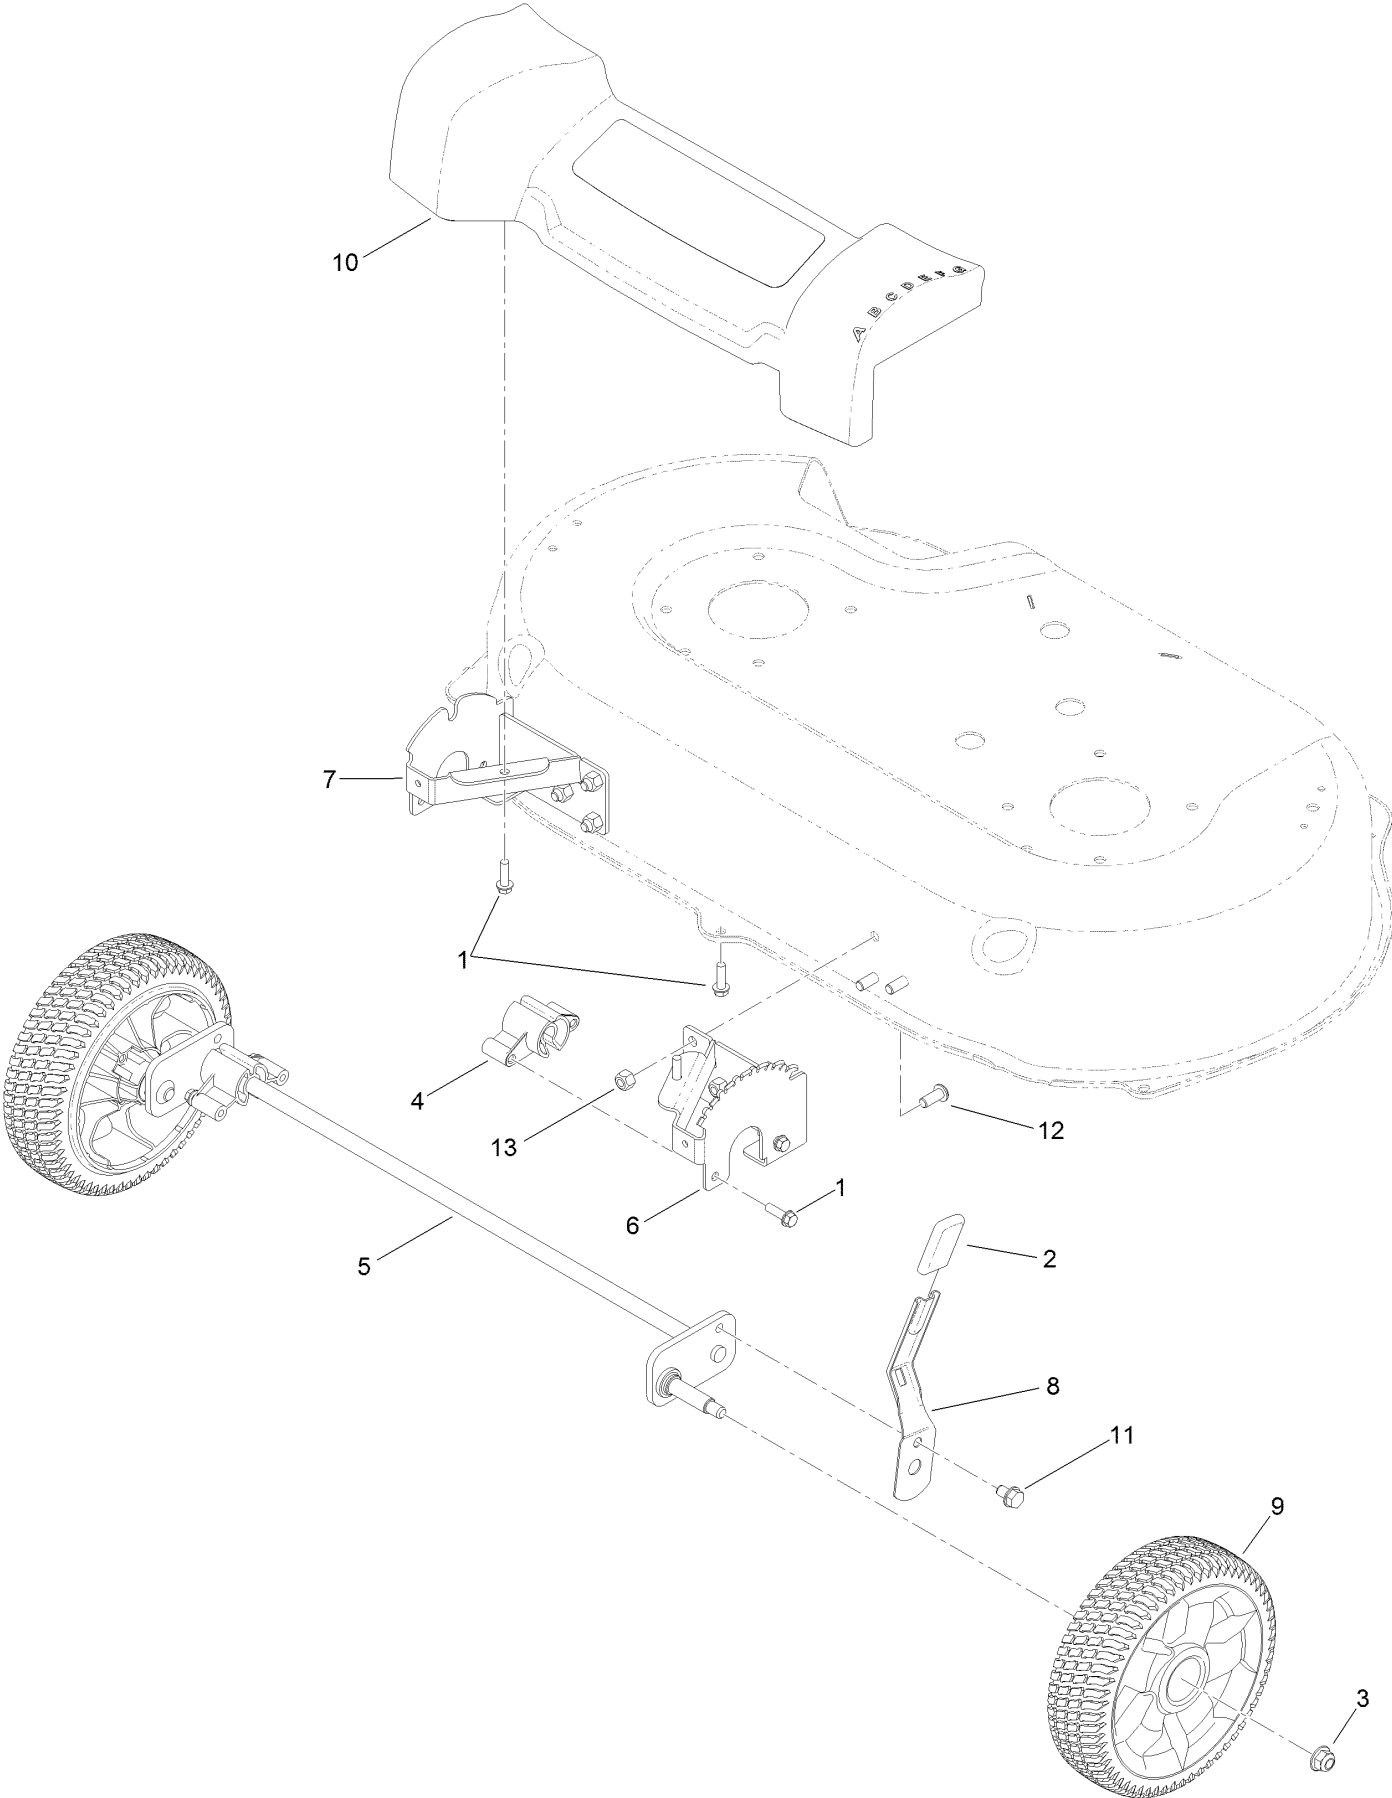

## Front Wheel and Axle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 46-8091            | 7           | Screw-HWH            | 8           | 120-7043           | 1           | Arm-Spring         |
| 2           | 120-9535           | 1           | Grip-Lever           | 9           | 125-2510           | 2           | 8 Inch Wheel ASM   |
| 3           | 104-8301           | 2           | Nut-HF, NI           | 10          | 125-5027           | 1           | Front Cover ASM    |
| 4           | 125-2495           | 2           | Bushing-Pivot, Front | 11          | 700057             | 1           | Screw-HWH          |
| 5           | 125-5061           | 1           | Axle-Front           | 12          | 3274-55            | 6           | Screw-HSBH         |
| 6           | 120-7037-03        | 1           | Plate-HOC, LH        | 13          | 3296-29            | 6           | Nut-Lock, NI       |
| 7           | 120-7038-03        | 1           | Plate-HOC, RH        |             |                    |             |                    |


# Transmission, Rear Wheel and Height-of-Cut Assembly

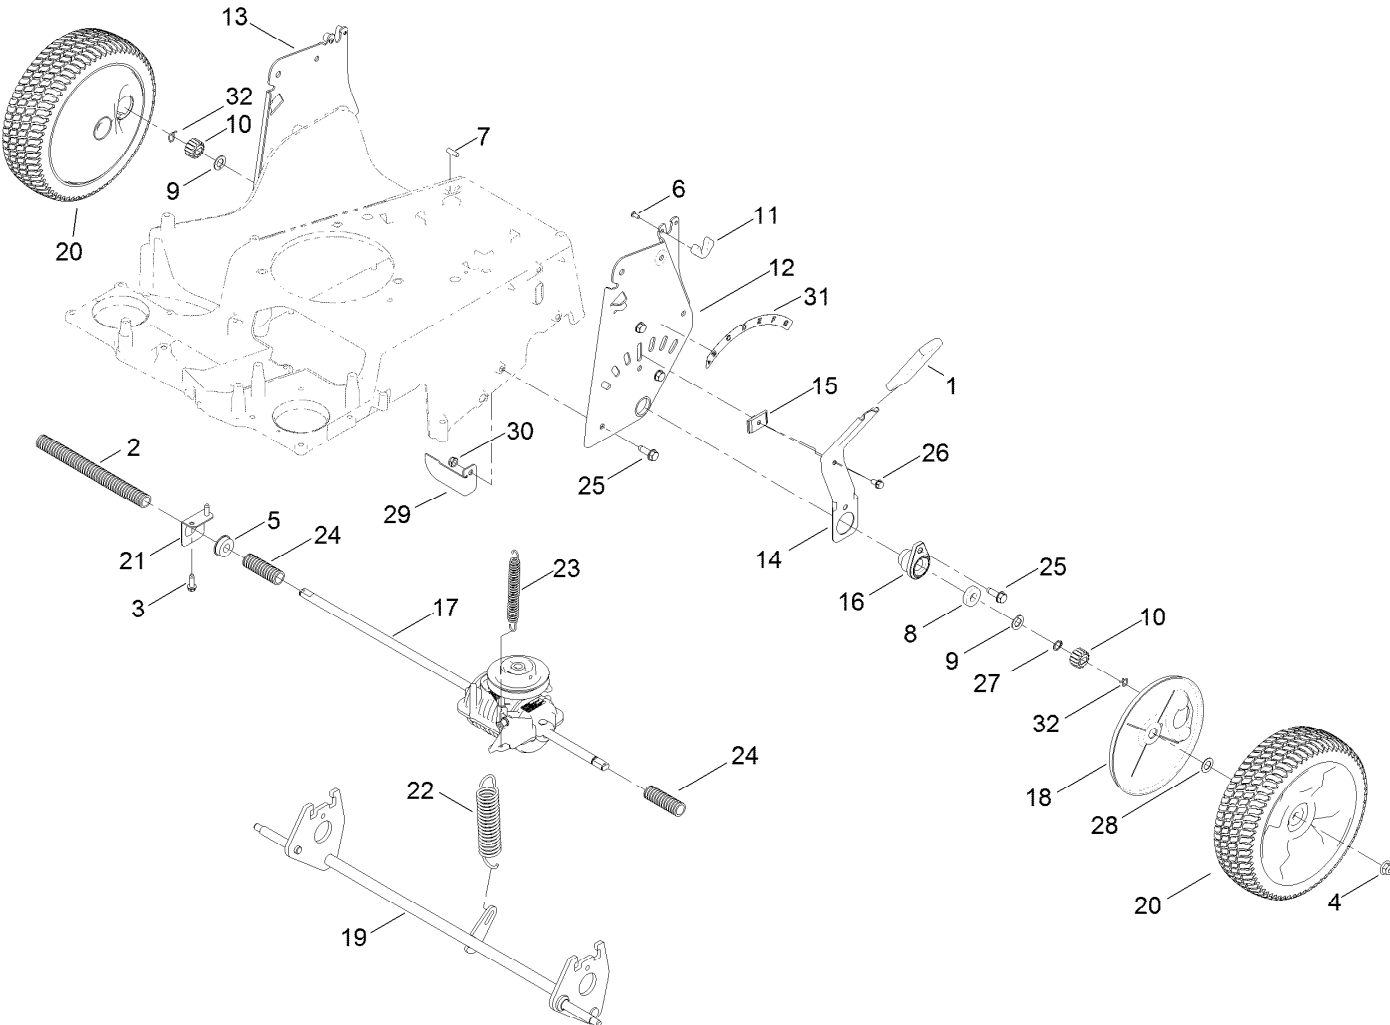

## Transmission, Rear Wheel and Height-of-Cut Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------|
| 1           | 1-633295           | 1           | Grip-Lever, Lift   | 17          | 130-2388           | 1           | Transmission-Mv502     |
| 2           | 121-5799           | 1           | Conduit-Convolved  | 18          | 120-6233           | 2           | Cover-Gear             |
| 3           | 49-2040            | 2           | Screw-HWHTF        | 19          | 125-5062           | 1           | Axle-Rear              |
| 4           | 104-8301           | 2           | Nut-HF, NI         | 20          | 125-2509           | 2           | 10 Inch Wheel Gear ASM |
| 5           | 104-8699           | 1           | Bearing-Ball       | 21          | 120-7008           | 1           | Mount-Bearing          |
| 6           | 105-9437           | 2           | Screw-PPH          | 22          | 120-7026           | 1           | Spring-Extension       |
| 7           | 106-5681           | 1           | Pin-Stop           | 23          | 120-7027           | 1           | Spring-Extension       |
| 8           | 109-8020           | 2           | Bearing-Ball       | 24          | 121-5800           | 2           | Conduit-Convolved      |
| 9           | 110-7191           | 2           | Washer-Thrust      | 25          | 701243             | 8           | Screw-HWHTF            |
| 10          | 110-9417           | 2           | Gear-Pinion, 15T   | 26          | 32144-4            | 1           | Screw-HWH              |
| 11          | 115-8406           | 2           | Anchor-Bag         | 27          | 32151-61           | 1           | Ring-Retaining         |
| 12          | 120-3342-03        | 1           | Plate-HOC, LH      | 28          | 36-4780            | 2           | Washer-Plain           |
| 13          | 120-3343-03        | 1           | Plate-HOC, RH      | 29          | 121-5821           | 1           | Bracket-Stop           |
| 14          | 120-5208           | 1           | Arm-Spring, Rear   | 30          | 3296-47            | 1           | Nut-Lock, NI           |
| 15          | 120-5209           | 1           | Key-Springarm      | 31          | 125-2497           | 1           | Decal-HOC, Rear        |
| 16          | 120-5210           | 2           | Retainer-Bearing   | 32          | 130-2369           | 2           | Pin-Snap               |


# Handle Assembly

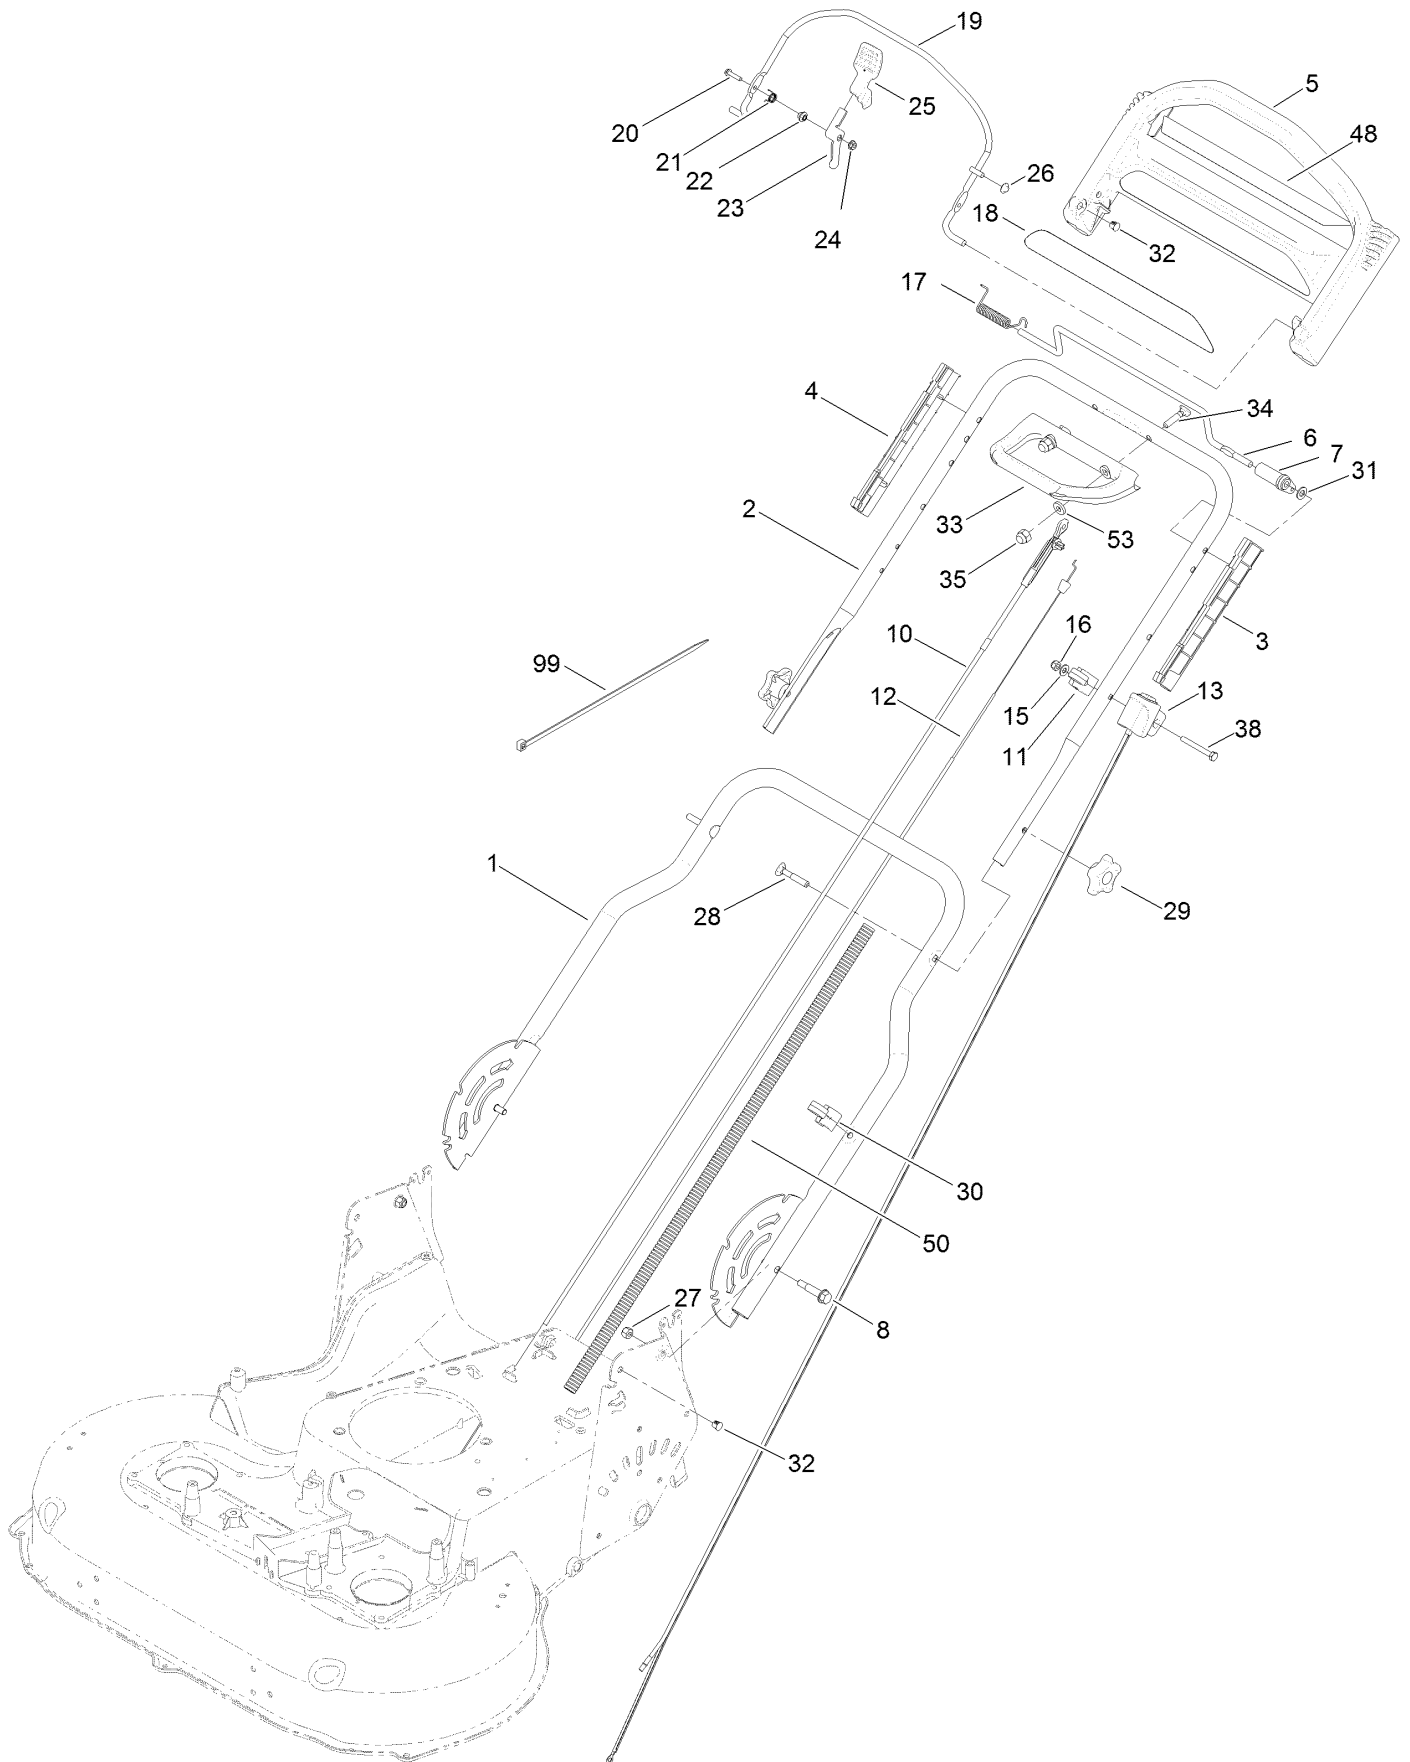

## Handle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-5204-05        | 1           | Handle-Lower          | 22          | 107-7463           | 1           | Spacer                  |
| 2           | 121-5783-05        | 1           | Handle-Upper          | 23          | 106-6802           | 1           | Lever                   |
| 3           | 105-6842           | 1           | Guide-LH              | 24          | 32128-17           | 1           | Nut-Lock, Flange        |
| 4           | 105-6841           | 1           | Guide-RH              | 25          | 112-8884           | 1           | Knob                    |
| 5           | 104-8678           | 1           | Handle-Control        | 26          | 3290-337           | 1           | Nut-Speed               |
| 6           | 99-1588            | 1           | Bar-Control, Traction | 27          | 3296-29            | 2           | Nut-Lock, NI            |
| 7           | 99-1589            | 1           | Lever-Traction        | 28          | 92-2260            | 2           | Screw-Handle            |
| 8           | 120-7025           | 2           | Bolt-Shoulder, HHF    | 29          | 117-5976           | 2           | Knob-Handle             |
| 10          | 120-6243           | 1           | Cable-Brake, BBC      | 30          | 114-7988           | 1           | Guide-Cable             |
| 11          | 99-5239            | 1           | Anchor-Cable          | 31          | 3256-23            | 1           | Washer-Plain            |
| 12          | 127-6867           | 1           | Cable-Traction        | 32          | 104-9368           | 3           | Plug-Dome               |
| 13          | 117-5975           | 1           | Switch Housing ASM    | 33          | 120-7087           | 1           | Handle-Assist, Traction |
| 15          | 3256-1             | 1           | Washer-Flat           | 34          | 92-4095            | 2           | Screw-Handle            |
| 16          | 3296-73            | 1           | Nut-Lock, NI          | 35          | 125-5028           | 2           | Nut-Hex, Nylon Cap      |
| 17          | 121-9118           | 1           | Spring-Torsion        | 38          | 321-50             | 1           | Screw-HH                |
| 18          | 117-1019           | 1           | Decal                 | 48          | 121-2399           | 1           | Decal-Assist, Traction  |
| 19          | 108-3788-03        | 1           | Bail-Brake            | 50          | 121-5801           | 1           | Conduit-Convoluted      |
| 20          | 106-9169           | 1           | Screw-HWH             | 53          | 71-9320            | 2           | Spacer                  |
| 21          | 107-7462           | 1           | Spring-Torsion        | 99          | 614249             | 2           | Tie-Cable               |

# Bag Assembly

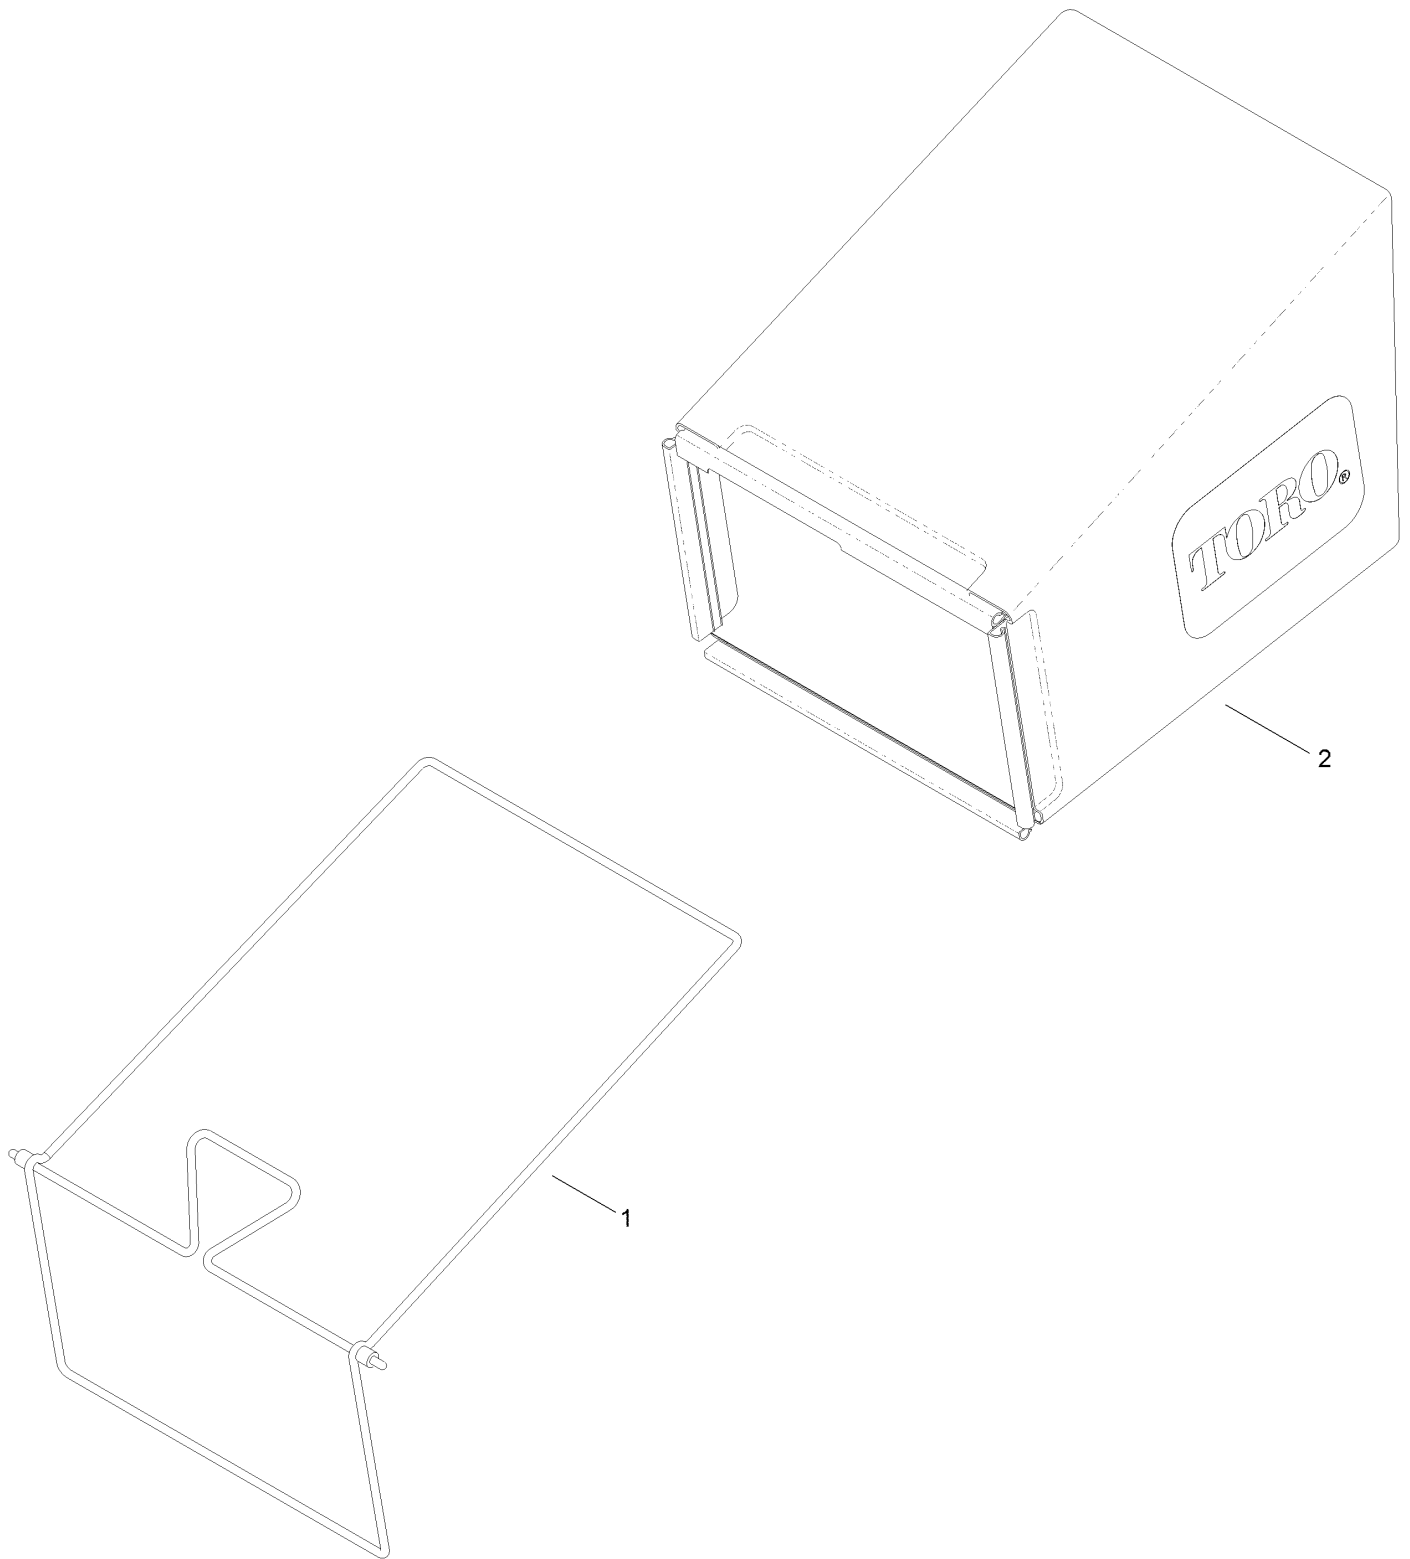

## Bag Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 121-5766-03        | 1           | Frame-Bag          |
| 2           | 121-5770           | 1           | Bag-Grass          |

# Attachments and Accessories

## For 20199 TimeMaster 30in Lawn Mower

| Product Name                | Model/Part |
|-----------------------------|------------|
| Engine Maintenance Kit..... | 130-8146   |
| Replacement Blade Kit ..... | 20120P     |
| Mower Cover .....           | 490-7461   |

**Notes:**

**Notes:**

**Notes:**



**Count on it.**