

# **LAWN-BOY®**

## **SILVER SERIES® WALK-BEHIND MOWER**

**Model No. 10328 – 8900001 & Up**

---

# **Parts Catalog**

## ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

## Contents

| Description                 | Page | Description                                    | Page  |
|-----------------------------|------|------------------------------------------------|-------|
| Housing Assembly .....      | 1    | Engine LEV100–345001B .....                    | 8–10  |
| Rear Axle Assembly .....    | 2    | Recoil Starter Assembly 590694 .....           | 11    |
| Engine Assembly .....       | 3    | Recoil Starter Assembly 590737 (Optional) .... | 12    |
| Handle Assembly .....       | 4    | Lawn–Boy Part Number Index .....               | 13–14 |
| Gear Assembly .....         | 5    | Maintenance .....                              | 15–17 |
| Bagging Assembly .....      | 6    |                                                |       |
| Carburetor No. 640118 ..... | 7    |                                                |       |

**Note:**

## Accessories

| Description                | Model / Parts No. | Description               | Model / Parts No. |
|----------------------------|-------------------|---------------------------|-------------------|
| Side Bagging Kit .....     | Model No. 89814   | Mow & Feed                |                   |
| Leaf Bag .....             | Model No. 89804   | Fertilizer Spreader ..... | Model No. 59070   |
| Leaf Shredder Kit .....    | Model No. 89860   | Mulch Plate .....         | Model No. 89864   |
| Leaf Bag Kit w/Chute ..... | Model No. 89811   |                           |                   |

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation | Meaning                | Abbreviation | Meaning                           |
|--------------|------------------------|--------------|-----------------------------------|
| AR .....     | as required            | HWHTF .....  | hex washer head<br>thread forming |
| ASM .....    | assembly               | INC .....    | incorporated                      |
| CARR .....   | carriage               | LH .....     | left hand                         |
| DEG .....    | degrees                | PH .....     | pan head                          |
| FH .....     | flat head              | PPH .....    | Phillips pan head                 |
| GA .....     | gauge                  | PTO .....    | power take off                    |
| HF .....     | hex flange             | RH .....     | right hand                        |
| HFW .....    | hex flange washer      | SFH .....    | slotted fillister head            |
| HH .....     | hex head               | SH .....     | square head                       |
| HHF .....    | hex head flange        | SHWH .....   | slotted hex washer head           |
| HHST .....   | hex head self tapping  | SPH .....    | slotted pan head                  |
| HJ .....     | hex jam                | STD .....    | standard                          |
| HOC .....    | height-of-cut          | TAP .....    | self tapping                      |
| HS .....     | hex socket             | TH .....     | truss head                        |
| HSBH .....   | hex socket button head | TTH .....    | Torx truss head                   |
| HSFH .....   | hex socket flat head   | WH .....     | wing head                         |
| HSH .....    | hex socket head        |              |                                   |
| HWH .....    | hex washer head        |              |                                   |

## Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

### Service Assemblies

Parts within service assemblies have reference numbers in the form  $X:Y$ .  $X$  is the reference number of the service assembly and  $Y$  is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

### Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form  $X (Y)$ .  $X$  is the reference number.  $Y$  in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

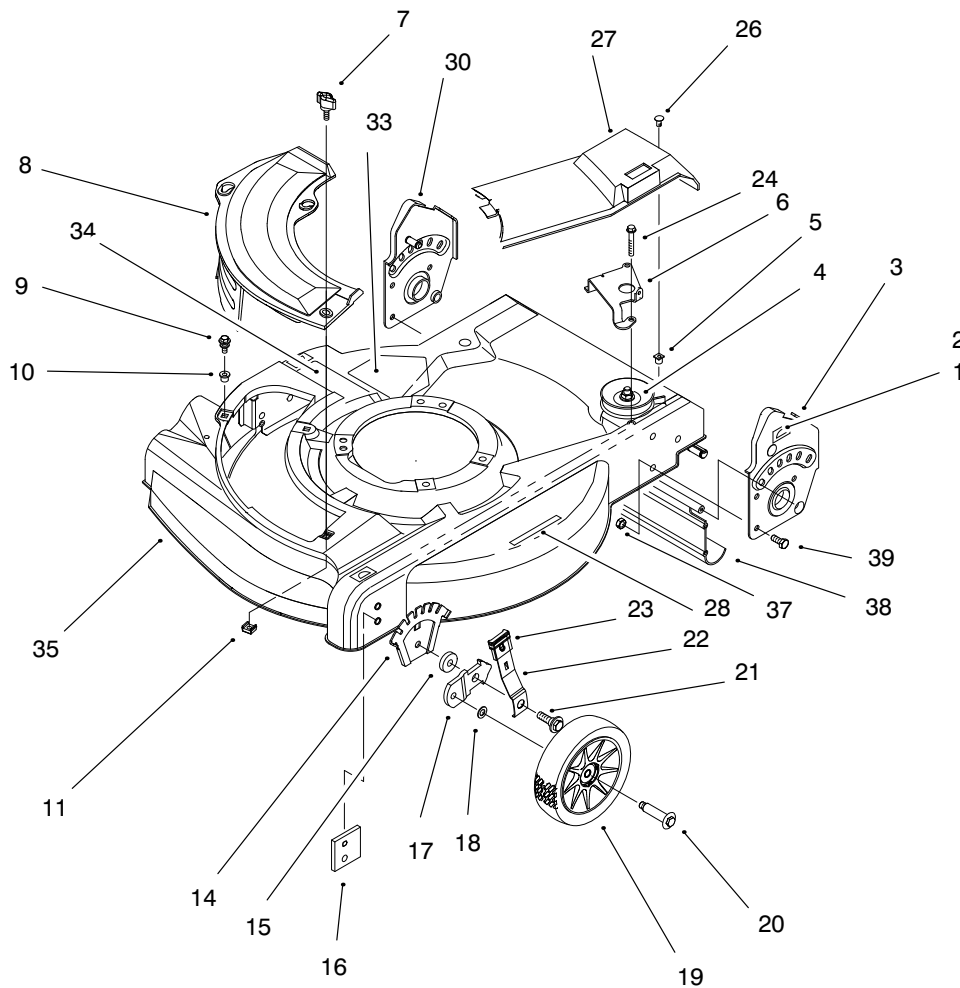


Sheet No.:2

## Housing Assembly

| Ref. No. | Part No. | Qty. | Description              |
|----------|----------|------|--------------------------|
| 1        | 92-2915  | 1    | Decal-HOC                |
| 2        | 92-2914  | 1    | Decal-HOC                |
| 3        | 92-7724  | 1    | ASM-Handle Bracket       |
| 4        | 92-7735  | 1    | ASM-Gear Case            |
| 5        | 605120   | 1    | Grommet                  |
| 6        | 92-7728  | 1    | Guide-Transmission       |
| 7        | 98-8332  | 1    | Knob-Cover Plate         |
| 8        | 92-8630  | 1    | Mulch Plate-21"          |
| 9        | 614677   | 2    | Screw-Sems               |
| 10       | 94-1610  | 2    | Grommet-Plastic          |
| 11       | 613765   | 1    | Nut-Cage                 |
| 14       | 92-4881  | 2    | Plate-Height Adjust      |
| 15       | 92-4890  | 2    | Washer                   |
| 16       | 92-7731  | 2    | Plate-Baffle             |
| 17       | 95-7403  | 2    | Bracket-Wheel Height Adj |
| 18       | 40-1940  | 2    | Washer                   |
| 19       | 684776   | 2    | ASM-Wheel & Tire 6"      |
| 20       | 92-1099  | 2    | Bolt-Shoulder            |
| 21       | 614672   | 2    | Bolt-Shoulder            |
| 22       | 614687   | 2    | Spring Arm-Front         |
| 23       | 92-1008  | 4    | Knob-Height Adjust       |
| 24       | 98-8347  | 2    | Screw-Thread Forming     |
| 26       | 92-9665  | 1    | Screw-Phil               |
| 27       | 95-7068  | 1    | Cover-Drive              |


| Ref. No. | Part No. | Qty. | Description          |
|----------|----------|------|----------------------|
| 28       | 93-7250  | 1    | Decal-Warning        |
| 30       | 92-7723  | 1    | ASM-Handle Bracket   |
| 33       | 39-5770  | 1    | Decal-Danger         |
| 34       | 92-1097  | 1    | Decal-Discharge      |
| 35       | 98-4477  | 1    | ASM-Housing & Baffle |
| 37       | 3296-29  | 6    | Nut-Lock             |
| 38       | 92-8647  | 1    | Shield-Trailing      |
| 39       | 322-3    | 6    | Screw-HH             |

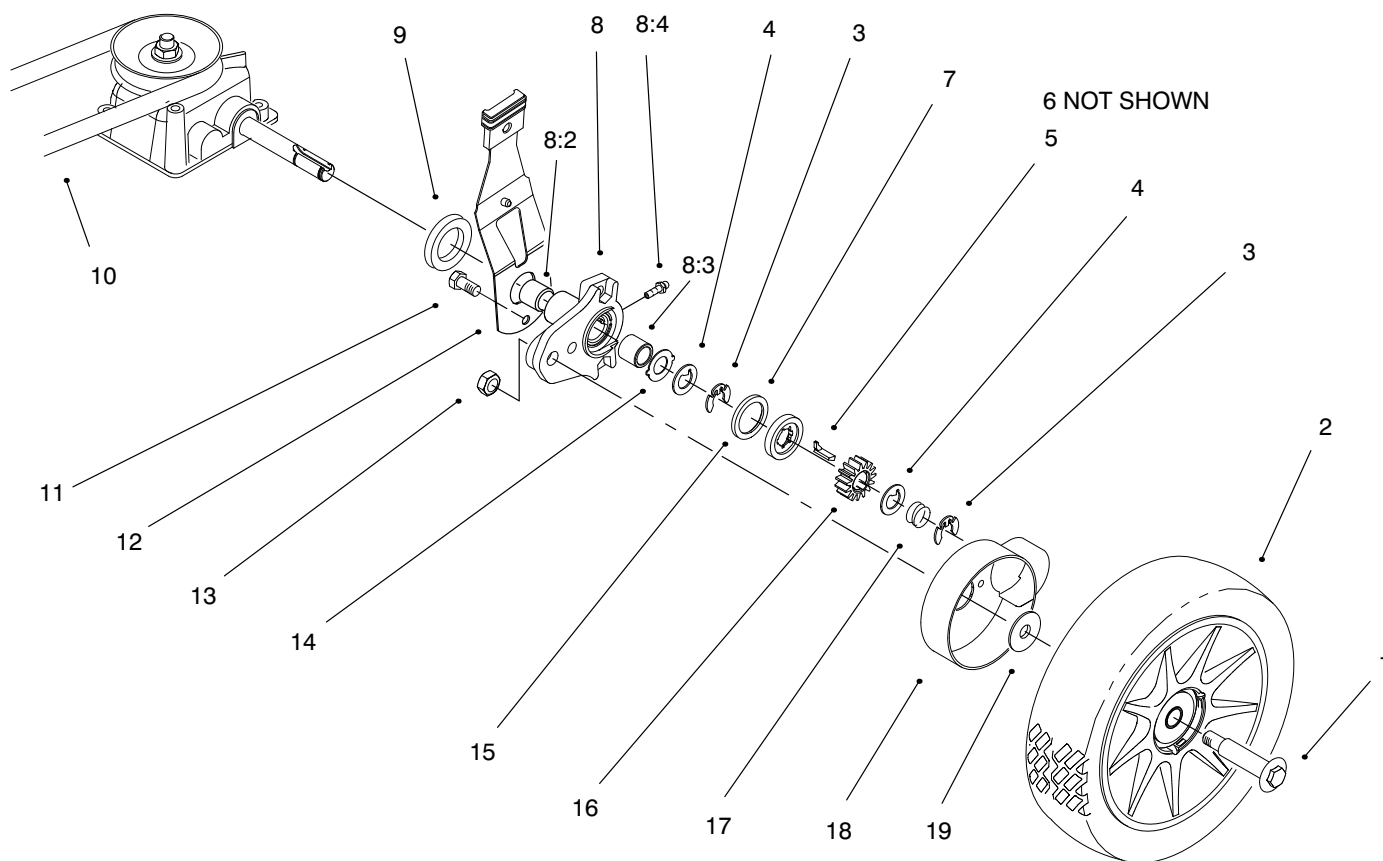

Sheet No.:3

## Rear Axle Assembly

| Ref. No. | Part No. | Qty. | Description        |
|----------|----------|------|--------------------|
| 1        | 92-1057  | 2    | Bolt-Shoulder      |
| 2        | 92-1042  | 2    | ASM-Whl            |
| 3        | 65-2720  | 4    | Ring-Retaining     |
| 4        | 65-4740  | 4    | Washer-Thrust      |
| 5        | 66-6050  | 1    | Key-Rocking LH     |
| 6        | 66-6040  | 1    | Key-Locking RH     |
| 7        | 65-4710  | 2    | Ring-Friction      |
| 8        | 92-7746  | 2    | ASM-Hgt Adj Arm    |
| 8:2      | 70-9760  | 2    | Bushing            |
| 8:3      | 47-2900  | 2    | Bushing            |
| 8:4      | 302-56   | 2    | Fitting-Grease     |
| 9        | 614447   | 2    | Spacer-Axle Shaft  |
| 10       | 93-7381  | 1    | V-Belt             |
| 11       | 32144-85 | 2    | Screw-HH           |
| 12       | 92-1004  | 2    | ASM-Spring Arm     |
| 13       | 610358   | 2    | Nut-Lock           |
| 14       | 65-4730  | 2    | Washer-Thrust      |
| 15       | 65-4760  | 2    | Washer             |
| 16       | 65-4750  | 2    | Gear-Pinion        |
| 17       | 65-4720  | 2    | Spring-Compression |
| 18       | 94-1609  | 2    | Cover-Wheel        |
| 19       | 614426   | 2    | Washer-Stepped     |

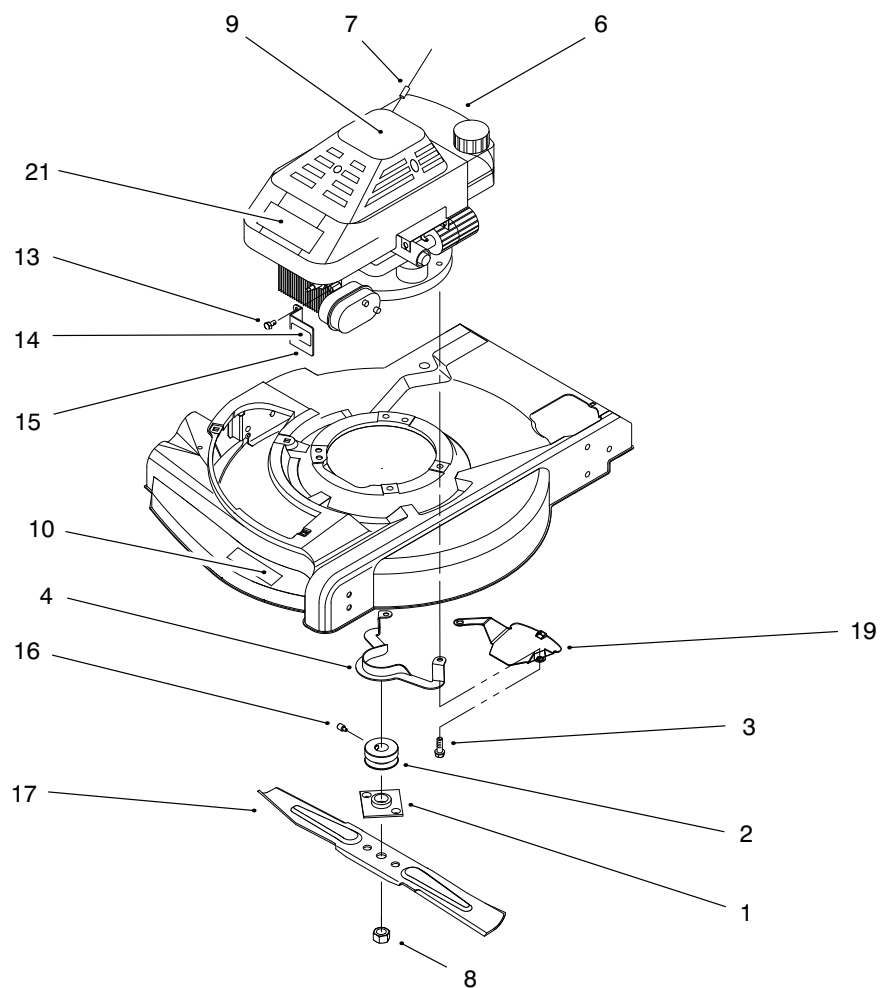


Sheet No.:4

# Engine Assembly

| Ref. No. | Part No. | Qty. | Description           |
|----------|----------|------|-----------------------|
| 1        | 677525   | 1    | ASM-Plate & Collar    |
| 2        | 92-9575  | 1    | Pulley-Engine         |
| 3        | 95-1726  | 3    | Screw-Engine Mount    |
| 4        | 92-1024  | 1    | Guide-Belt            |
| 5        | 92-4851  | 1    | Decal-Oil Instruction |
| 6        |          | 1    | ASM-Engine            |
| 7        | 92-1701  | 1    | Rope-Stop             |
| 8        | 603164   | 1    | Nut-Blade             |
| 9        | 95-7448  | 1    | Decal-Shroud          |
| 10       | 98-1567  | 1    | Decal-Deck            |
| 13       | 32144-85 | 1    | Screw-HH              |
| 14       | 65-2690  | 1    | Decal-Hot Surface     |
| 15       | 94-6066  | 1    | Guard-Muffler         |
| 16       | 613227   | 1    | Screw-Set             |
| 17       | 612543   | 1    | Blade-21" Whirl       |
| 19       | 93-4196  | 1    | Shield-Grass          |
| 21       | 98-1593  | 1    | Applique              |


| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

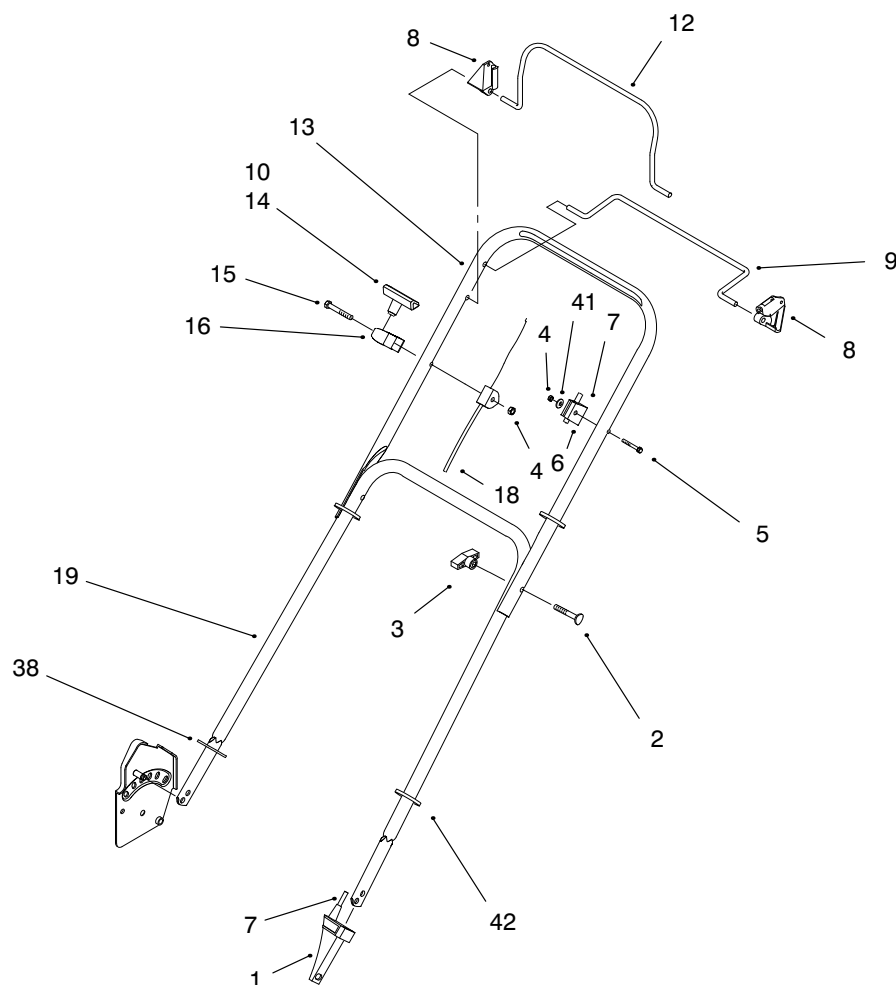

Sheet No.:6

## Handle Assembly

| Ref. No. | Part No. | Qty. | Description          |
|----------|----------|------|----------------------|
| 1        | 93-7380  | 1    | Anchor-Cable         |
| 2        | 614697   | 2    | Screw-Handle         |
| 3        | 98-7134  | 2    | Knob                 |
| 4        | 3296-73  | 2    | Nut-Lock             |
| 5        | 92-2266  | 1    | Screw-Handle         |
| 6        | 92-7729  | 1    | Anchor-Cable         |
| 7        | 92-7726  | 1    | Cable-Traction       |
| 8        | 92-5412  | 2    | Stop-Pivot           |
| 9        | 92-1001  | 1    | Bail-Sp Control      |
| 10       | 92-5424  | 1    | Staple-Handle        |
| 12       | 93-4184  | 1    | Bail-Flywheel Brake  |
| 13       | 95-1713  | 1    | Handle Section-Upper |
| 14       | 92-4853  | 1    | Handle-Starter       |
| 15       | 321-50   | 1    | Screw                |
| 16       | 93-7383  | 1    | Guide-Rope           |
| 18       | 98-1560  | 1    | ASM-Brake Cable      |
| 19       | 614643   | 1    | Handle Section-Lower |
| 38       | 93-3653  | 1    | Handle-Guard         |
| 41       | 3256-1   | 1    | Washer-Flat          |
| 42       | 614249   | 4    | Tie Strap            |

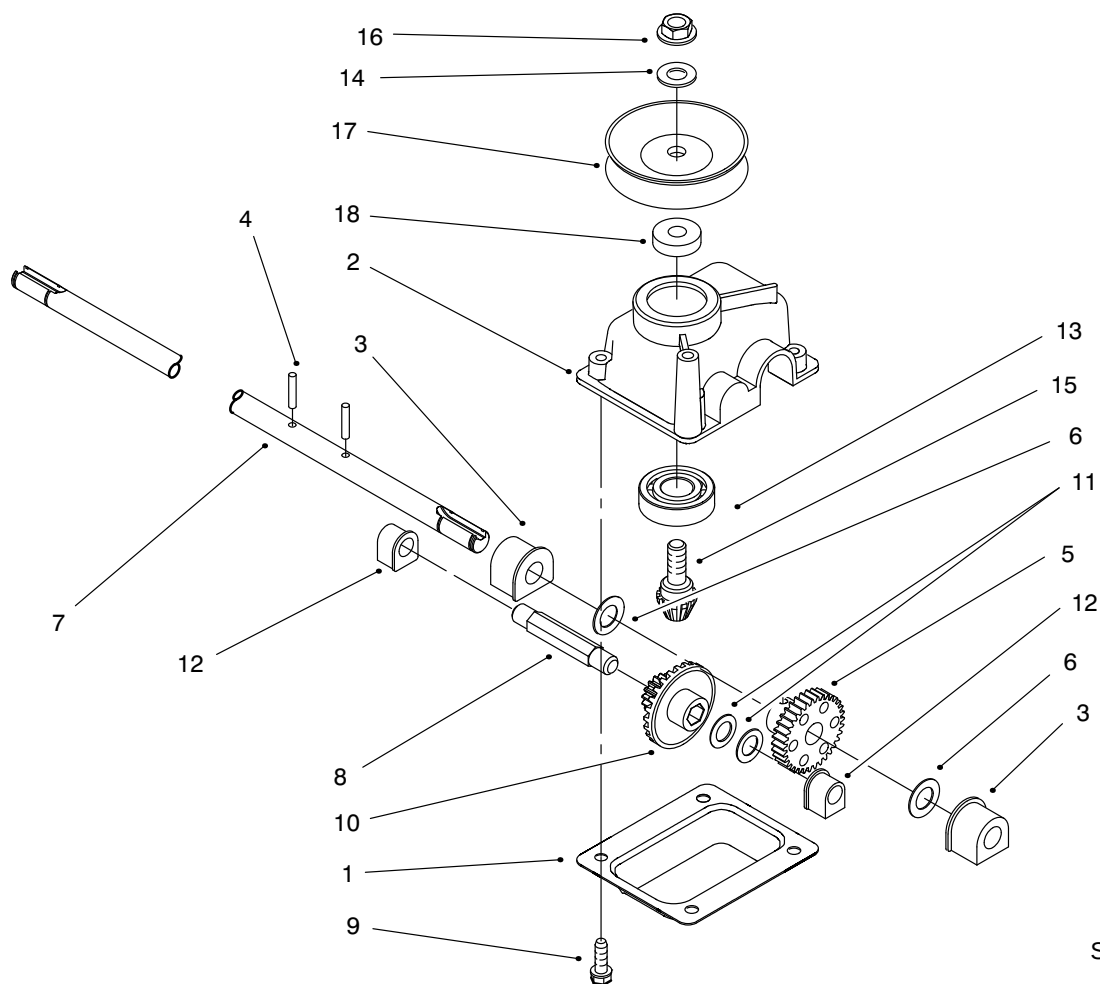


Sheet No.:100

## Gear Assembly

| Ref. No. | Part No. | Qty. | Description        |
|----------|----------|------|--------------------|
| 1        | 614668   | 1    | Cover—Gear Case    |
| 2        | 92—7727  | 1    | Gearcase—Upper Ss  |
| 3        | 60—8850  | 2    | Bushing—Output     |
| 4        | 3285—19  | 2    | Pin—Spirol         |
| 5        | 614596   | 1    | Gear—34t           |
| 6        | 36—4780  | 2    | Washer—Thrust      |
| 7        | 93—0239  | 1    | Shaft—Output       |
| 8        | 614696   | 1    | Shaft—Intermediate |
| 9        | 32144—4  | 4    | Screw—TAP          |
| 10       | 55—3760  | 1    | 15 T Pinion        |
| 11       | 36—4791  | 2    | Washer—Thrust      |
| 12       | 60—8750  | 2    | Bushing            |
| 13       | 38—7820  | 1    | Bearing—Ball       |
| 14       | 3256—24  | 1    | Washer—Flat        |
| 15       | 60—8890  | 1    | Gear—Pinnion       |
| 16       | 3296—5   | 1    | Nut—Lock           |
| 17       | 614669   | 2    | Pulley—Half        |
| 18       | 62—6660  | 1    | Spacer—Pulley      |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

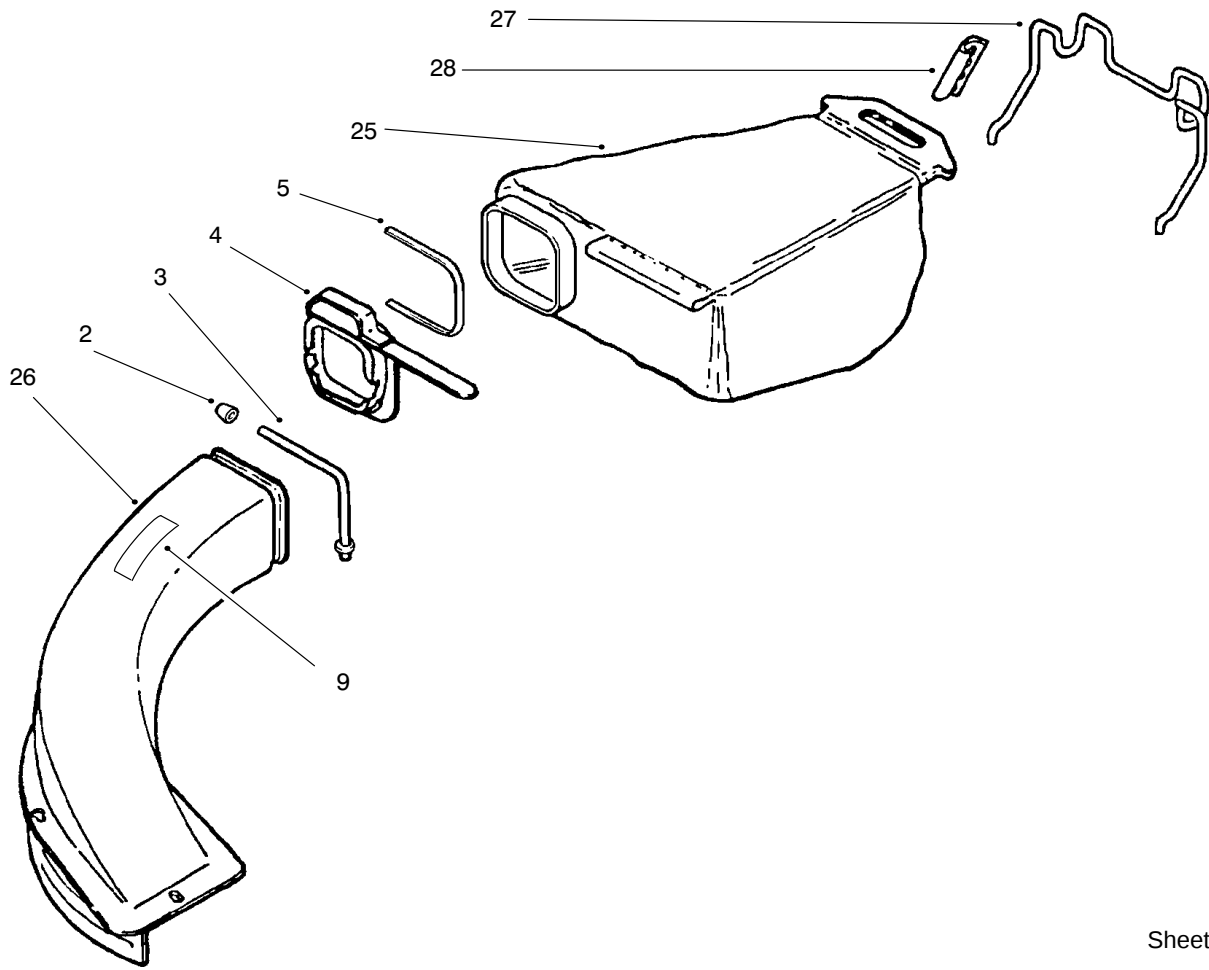


Sheet No.:200

## Bagging Assembly

| Ref. No. | Part No. | Qty. | Description         |
|----------|----------|------|---------------------|
| 2        | 614589   | 1    | Nut–Cap             |
| 3        | 614591   | 1    | Support–Chute       |
| 4        | 684727   | 1    | ASM–Adaptor         |
| 5        | 614700   | 1    | Tie Strap           |
| 9        | 92–2919  | 1    | Decal–Danger        |
| 25       |          | 1    | ASM–Bag & Adapter   |
| 26       | 684729   | 1    | ASM–Chute & Support |
| 27       | 613455   | 1    | Hanger–Wire         |
| 28       | 613462   | 2    | Hanger–Clamp        |


| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

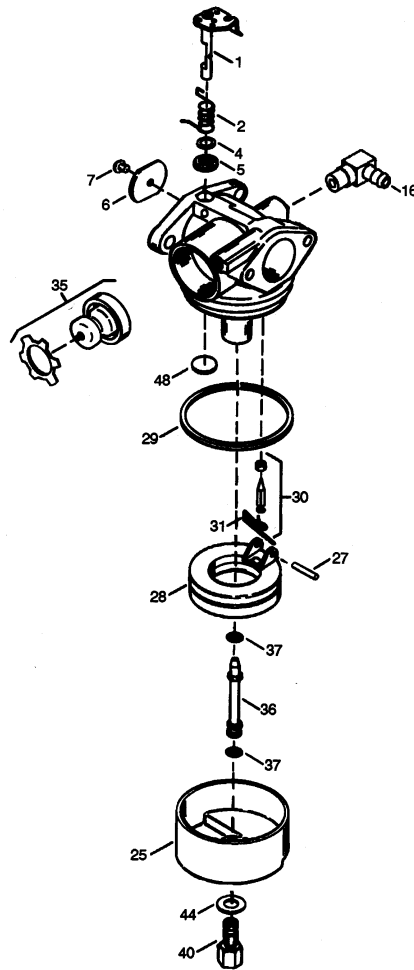

## CARBURETOR No. 640118

| Ref. No. | Part No. | Description                     | No. Used | Ref. No. | Part No. | Description                           | No. Used |
|----------|----------|---------------------------------|----------|----------|----------|---------------------------------------|----------|
| 0        | 640118   | Carburetor                      | 1        | 29       | 631028   | Float Bowl "O" Ring                   | 1        |
| 1        | 631615   | Throttle Shaft & Lever Assembly | 1        | 30       | 631021   | Inlet Needle, Seat, & Clip (Incl. 31) | 1        |
| 2        | 631767   | Throttle Return Spring          | 1        | 31       | 631022   | Spring Clip                           | 1        |
| 4        | 631184   | Dust Seal Washer                | 1        | 35       | 36045A   | Primer Bulb/Retainer Ring             | 1        |
| 5        | 631183   | Dust Seal (Throttle)            | 1        | 36       | 632735   | Main Nozzle Tube                      | 1        |
| 6        | 632504   | Throttle Shutter                | 1        | 37       | 632547   | O-Ring, Main Nozzle Tube              | 2        |
| 7        | 650506   | Shutter Screw                   | 1        | 40       | 632743   | High Speed Bowl Nut                   | 1        |
| 16       | 631807   | Fuel Fitting                    | 1        | 44       | 27110    | Bowl Nut Washer                       | 1        |
| 25       | 631867   | Float Bowl                      | 1        | 48       | 631027   | Welch Plug, Atmospheric Vent          | 1        |
| 27       | 631024   | Float Shaft                     | 1        |          |          |                                       |          |
| 28       | 632019   | Float                           | 1        |          |          |                                       |          |

# ENGINE LEV100-345001B

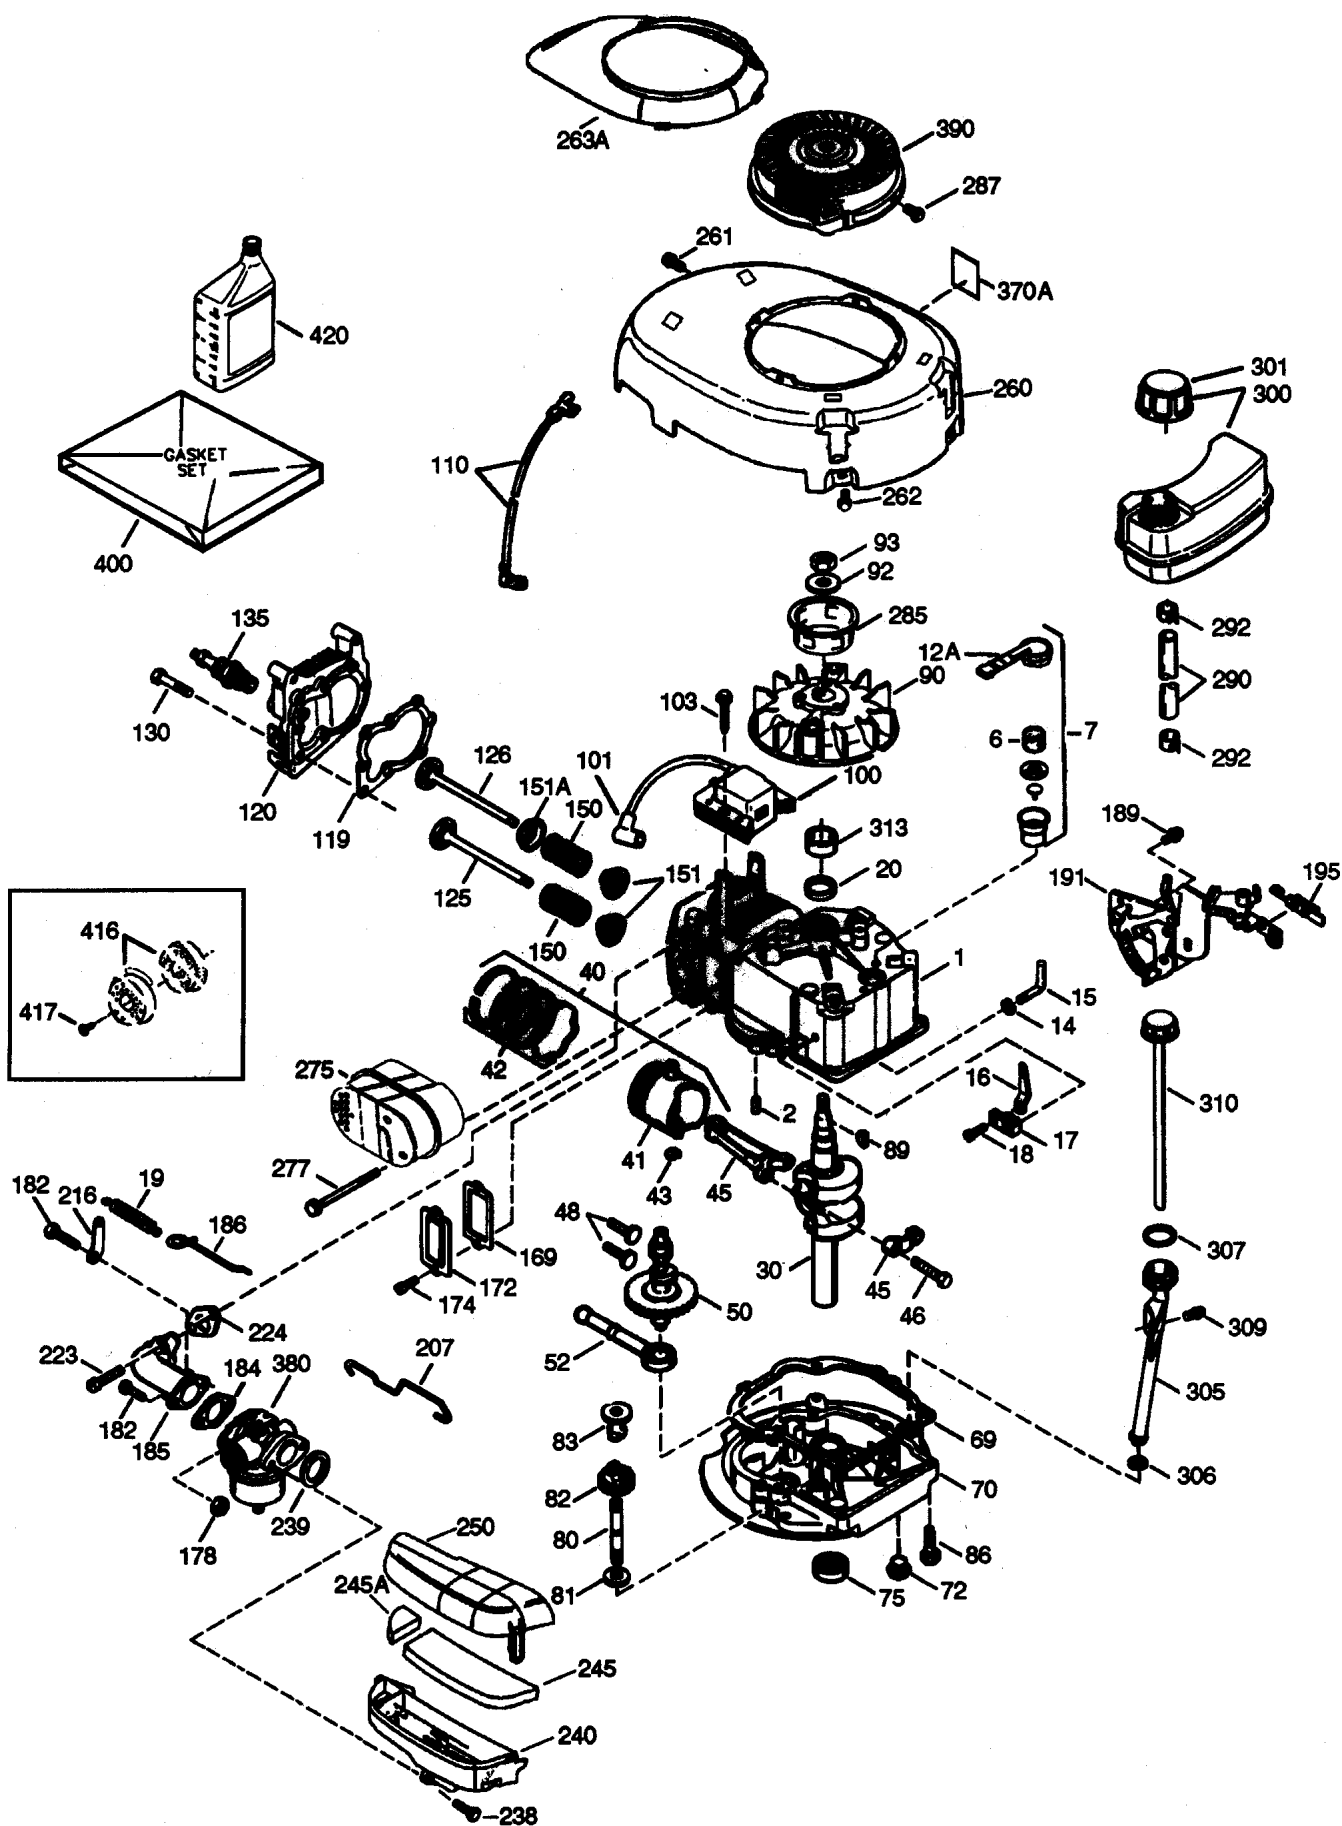


**ENGINE LEV100-345001B**

| Ref. No. | Part No. | Description                                  | No. Used | Ref. No. | Part No. | Description                             | No. Used |
|----------|----------|----------------------------------------------|----------|----------|----------|-----------------------------------------|----------|
| 1        | 37027    | Cylinder<br>(Incl. 2 & 20)                   | 1        | 125      | 36780    | Exhaust Valve (1/32" OS)<br>(Incl. 151) | 1        |
| 2        | 26727    | Dowel Pin                                    | 2        | 126      | 36781    | Intake Valve (Std.)<br>(Incl. 151)      | 1        |
| 6        | 33734    | Breather Element                             | 1        | 126      | 36782    | Intake Valve (1/32" OS)<br>(Incl. 151)  | 1        |
| 7        | 36557    | Breather Body Ass'y.<br>(Incl. 6 & 12A)      | 1        | 130      | 6021A    | Screw                                   | 6        |
| 12A      | 36558    | Breather Cover & Tube<br>(Incl. 12B)         | 1        | 135      | 35395    | Resistor Spark Plug<br>(RJ19LM)         | 1        |
| 14       | 28277    | Washer                                       | 1        | 150      | 35991    | Valve Spring                            | 2        |
| 15       | 30589    | Governor Rod (Incl. 14)                      | 1        | 151      | 31673    | Valve Spring Cap                        | 2        |
| 16       | 34839A   | Governor Lever                               | 1        | 151A     | 40017    | Intake Valve Seal                       | 1        |
| 17       | 31335    | Governor Lever Clamp                         | 1        | 169      | 36783    | Valve Cover Gasket                      | 1        |
| 18       | 651018   | Screw                                        | 1        | 172      | 36784    | Valve Cover                             | 1        |
| 19       | 36281    | Extension Spring                             | 1        | 174      | 30200    | Screw                                   | 2        |
| 20       | 32600    | Oil Seal                                     | 1        | 178      | 29752    | Nut & Lock Washer                       | 2        |
| 30       | 37124    | Crankshaft                                   | 1        | 182      | 6201     | Screw                                   | 2        |
| 40       | 35544A   | Piston, Pin & Ring Set (Std.)                | 1        | 184      | 26756    | Carburetor To Intake Pipe<br>Gasket     | 1        |
| 40       | 33545A   | Piston, Pin & Ring Set<br>(.010" OS)         | 1        | 185      | 36785    | Intake Pipe                             | 1        |
| 40       | 35546    | Piston, Pin & Ring Set<br>(.020" OS)         | 1        | 186      | 32653    | Governor Link                           | 1        |
| 41       | 35541    | Piston & Pin Ass'y. (Std.)<br>(Incl. 43)     | 1        | 189      | 650839   | Screw                                   | 2        |
| 41       | 35542    | Piston & Pin Ass'y.<br>(.010" OS) (Incl. 43) | 1        | 191      | 36559    | S.E. Brake Bracket<br>(Incl. 195)       | 1        |
| 41       | 35543    | Piston & Pin Ass'y.<br>(.020" OS) (Incl. 43) | 1        | 195      | 610973   | Terminal                                | 1        |
| 42       | 35547A   | Ring Set (Std.)                              | 1        | 207      | 34336    | Throttle Link                           | 1        |
| 42       | 35548A   | Ring Set (.010" OS)                          | 1        | 216      | 33086    | R.P.M. Adjusting Lever                  | 1        |
| 42       | 35549    | Ring Set (.020" OS)                          | 1        | 223      | 650451   | Screw                                   | 2        |
| 43       | 20381    | Piston Pin Retaining Ring                    | 2        | 224      | 36786    | Intake Pipe Gasket                      | 1        |
| 45       | 36777    | Connecting Rod Ass'y.<br>(Incl. 46)          | 1        | 238      | 650806   | Screw                                   | 2        |
| 46       | 32610A   | Connecting Rod Bolt                          | 2        | 239      | 34338    | Air Cleaner Gasket                      | 1        |
| 48       | 27241    | Valve Lifter                                 | 2        | 240      | 37115    | Air Cleaner Body                        | 1        |
| 50       | 37032    | Camshaft (MCR)                               | 1        | 245      | 37116    | Air Cleaner Filter                      | 1        |
| 52       | 29914    | Oil Pump Ass'y.                              | 1        | 245A     | 37117    | Air Cleaner Filter                      | 1        |
| 69       | 35261    | Mounting Flange Gasket                       | 1        | 250      | 37118    | Air Cleaner Cover                       | 1        |
| 70       | 36995    | Mounting Flange<br>(Incl. 72 thru 83)        | 1        | 260      | 37125    | Blower Housing                          | 1        |
| 72       | 36083    | Oil Drain Plug                               | 1        | 261      | 30200    | Screw                                   | 2        |
| 75       | 27897    | Oil Seal                                     | 1        | 262      | 650831   | Screw                                   | 2        |
| 80       | 30574A   | Governor Shaft                               | 1        | 263A     | 36758    | Starter Grill                           | 1        |
| 81       | 30590A   | Washer                                       | 1        | 275      | 36790    | Muffler                                 | 1        |
| 82       | 30591    | Governor Gear Ass'y.<br>(Incl. 81)           | 1        | 277      | 650988   | Screw                                   | 2        |
| 83       | 30588A   | Governor Spool                               | 1        | 285      | 35000A   | Starter Cup                             | 1        |
| 86       | 650488   | Screw                                        | 6        | 287      | 650926   | Screw                                   | 2        |
| 89       | 611004   | Flywheel Key                                 | 1        | 290      | 34357    | Fuel Line                               | 1        |
| 90       | 611112   | Flywheel                                     | 1        | 292      | 26460    | Fuel Line Clamp                         | 2        |
| 92       | 650815   | Belleville Washer                            | 1        | 300      | 35586    | Fuel Tank<br>(Incl. 292 & 301)          | 1        |
| 93       | 650816   | Flywheel Nut                                 | 1        | 301      | 36246    | Fuel Cap                                | 1        |
| 100      | 34443B   | Solid State Ignition                         | 1        | 305      | 35577    | Oil Fill Tube                           | 1        |
| 101      | 610118   | Spark Plug Cover                             | 1        | 306      | 36996    | "O" - Ring                              | 1        |
| 103      | 651007   | Screw, Torx T-15,                            | 2        | 307      | 35499    | "O" - Ring                              | 1        |
| 110      | 37047    | Ground Wire                                  | 1        | 309      | 650562   | Screw                                   | 1        |
| 119      | 37028    | Cylinder Head Gasket                         | 1        | 310      | 36801    | Dipstick                                | 1        |
| 120      | 36788    | Cylinder Head                                | 1        | 313      | 34080    | Spacer                                  | 1        |
| 125      | 36779    | Exhaust Valve (Std.)<br>(Incl. 151)          | 1        | 370A     | 36261    | Lubrication Decal                       | 1        |
|          |          |                                              |          | 380      | 640118   | Carburetor<br>(Incl. 184)               | 1        |


| Ref. No. | Part No. | Description                                                                                                                                            | No. Used |
|----------|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------|----------|
| 390      | 590694   | Rewind Starter<br>(NOTE: This engine could have been built with 590737 starter.                                                                        | 1        |
| 400      | 37029    | Gasket Set<br>(Incl. Items Marked PK in Notes)<br>Incl. part #'s 26756 (1), 28833 (1) 34338 (1), 35261 (1), 36783 (1), 36786 (1) 36832 (1), 37128 (1). | 1        |
| 416      | 36085    | Spark Arrestor Kit<br>(Incl. 417) (Optional)                                                                                                           | 1        |
| 417      | 650760   | Screw (Optional)                                                                                                                                       | 1        |
| 420      | 730225   | SAE 30 4-Cycle Engine Oil (Quart)                                                                                                                      | 1        |

| Ref.<br>No. | Part No. | Description | No.<br>Used |
|-------------|----------|-------------|-------------|
|             |          |             |             |

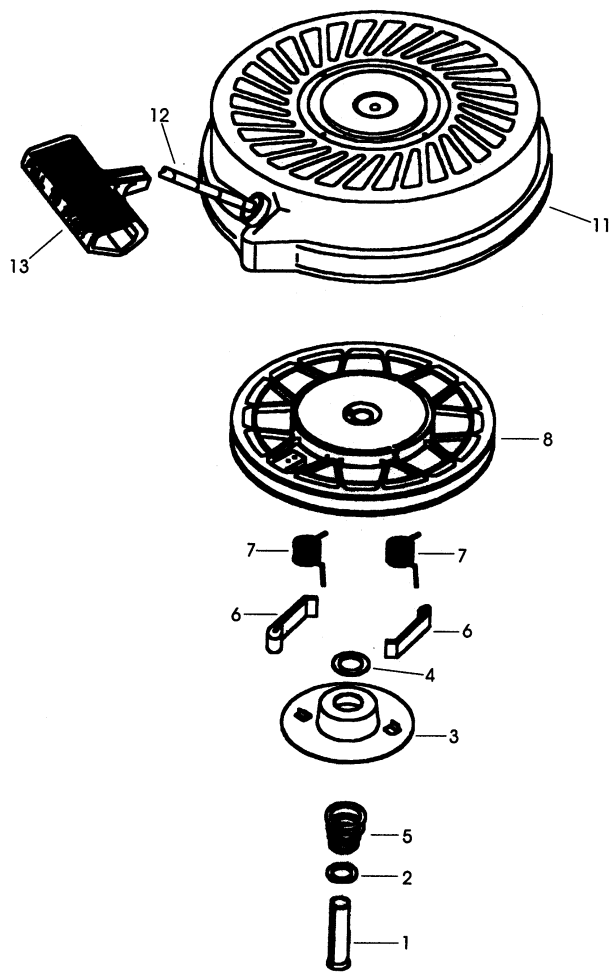

## RECOIL STARTER ASSEMBLY 590694

| Ref. No. | Part No. | Description          | No. Used | Ref. No. | Part No. | Description                               | No. Used |
|----------|----------|----------------------|----------|----------|----------|-------------------------------------------|----------|
| 0        | 590694   | Recoil Starter       | 1        | 8        | 590700   | Pulley & Rewind Spring Ass'y.             | 1        |
| 1        | 590599A  | Spring Pin (Incl. 4) | 1        | 11       | 590695   | Starter Housing Ass'y (40 degree grommet) | 1        |
| 2        | 590600   | Washer               | 1        | 12       | 590535   | Starter Rope ( 98" X 9/64" dia.)          | 1        |
| 3        | 590696   | Retainer             | 1        | 13       | 590701   | Starter Handle                            | 1        |
| 4        | 590601   | Washer               | 2        |          |          |                                           |          |
| 5        | 590697   | Brake Spring         | 1        |          |          |                                           |          |
| 6        | 590698   | Starter Dog          | 2        |          |          |                                           |          |
| 7        | 590699   | Dog Spring           | 2        |          |          |                                           |          |

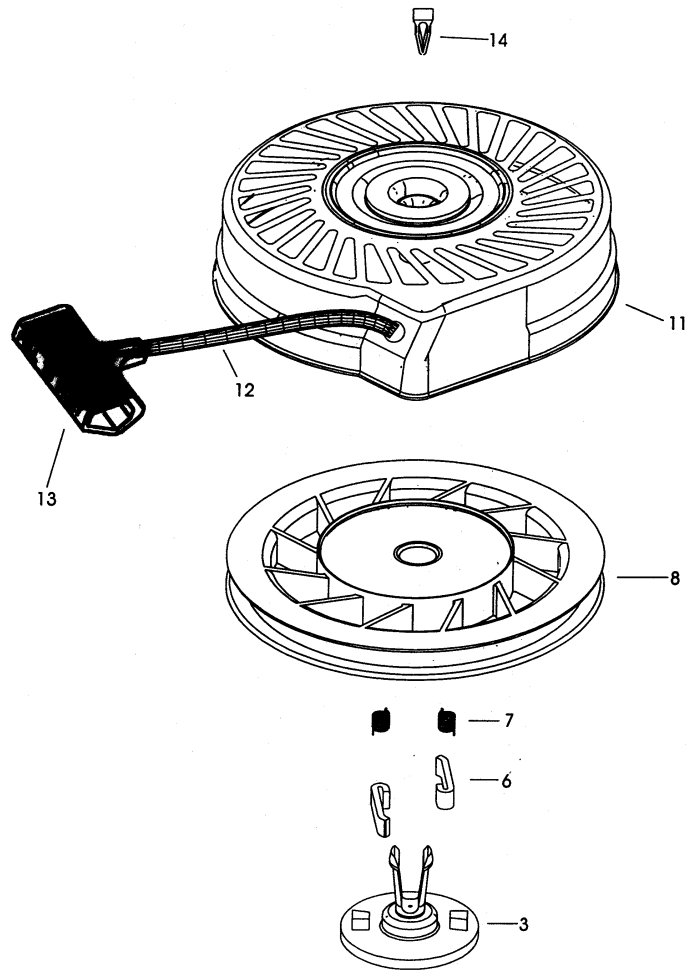

**RECOIL STARTER ASSEMBLY 590737 (Optional)**

| Ref. No. | Part No. | Description                     | No. Used | Ref. No. | Part No. | Description                                  | No. Used |
|----------|----------|---------------------------------|----------|----------|----------|----------------------------------------------|----------|
| 0        | 590737   | Rewind Starter                  | 1        | 11       | 590637A  | Starter Housing Ass'y<br>(40 degree grommet) | 1        |
| 3        | 590740   | Retainer                        | 1        | 12       | 590535   | Starter Rope<br>(Length 98" x 9/64" dia.)    | 1        |
| 6        | 590616   | Starter Dog                     | 2        | 13       | 590701   | Starter Handle                               | 1        |
| 7        | 590617   | Dog Spring                      | 2        | 14       | 590741   | Locking Tab                                  | 1        |
| 8        | 590618A  | Pulley & Rewind<br>Spring Ass'y | 1        |          |          |                                              |          |

# Lawn—Boy Part Number Index

| Part No. | Page No. | Ref. No. | Qty. | Description          |
|----------|----------|----------|------|----------------------|
| 603164   | 3        | 8        | 1    | Nut—Blade            |
| 605120   | 1        | 5        | 1    | Grommet              |
| 610358   | 2        | 13       | 2    | Nut—Lock             |
| 612543   | 3        | 17       | 1    | Blade—21" Whirl      |
| 613227   | 3        | 16       | 1    | Screw—Set            |
| 613455   | 6        | 27       | 1    | Hanger—Wire          |
| 613462   | 6        | 28       | 2    | Hanger—Clamp         |
| 613765   | 1        | 11       | 1    | Nut—Cage             |
| 614249   | 4        | 42       | 4    | Tie Strap            |
| 614426   | 2        | 19       | 2    | Washer—Stepped       |
| 614447   | 2        | 9        | 2    | Spacer—Axle Shaft    |
| 614589   | 6        | 2        | 1    | Nut—Cap              |
| 614591   | 6        | 3        | 1    | Support—Chute        |
| 614596   | 5        | 5        | 1    | Gear—34t             |
| 614643   | 4        | 19       | 1    | Handle Section—Lower |
| 614668   | 5        | 1        | 1    | Cover—Gear Case      |
| 614669   | 5        | 17       | 2    | Pulley—Half          |
| 614672   | 1        | 21       | 2    | Bolt—Shoulder        |
| 614677   | 1        | 9        | 2    | Screw—Sems           |
| 614687   | 1        | 22       | 2    | Spring Arm—Front     |
| 614696   | 5        | 8        | 1    | Shaft—Intermediate   |
| 614697   | 4        | 2        | 2    | Screw—Handle         |
| 614700   | 6        | 5        | 1    | Tie Strap            |
| 677525   | 3        | 1        | 1    | ASM—Plate & Collar   |
| 684727   | 6        | 4        | 1    | ASM—Adaptor          |
| 684729   | 6        | 26       | 1    | ASM—Chute & Support  |
| 684776   | 1        | 19       | 2    | ASM—Wheel & Tire 6"  |
| 36-4780  | 5        | 6        | 2    | Washer—Thrust        |
| 36-4791  | 5        | 11       | 2    | Washer—Thrust        |
| 38-7820  | 5        | 13       | 1    | Bearing—Ball         |
| 39-5770  | 1        | 33       | 1    | Decal—Danger         |
| 40-1940  | 1        | 18       | 2    | Washer               |
| 47-2900  | 2        | 8:3      | 2    | Bushing              |
| 55-3760  | 5        | 10       | 1    | 15 T Pinion          |
| 60-8750  | 5        | 12       | 2    | Bushing              |
| 60-8850  | 5        | 3        | 2    | Bushing—Output       |
| 60-8890  | 5        | 15       | 1    | Gear—Pinnion         |
| 62-6660  | 5        | 18       | 1    | Spacer—Pulley        |
| 65-2690  | 3        | 14       | 1    | Decal—Hot Surface    |
| 65-2720  | 2        | 3        | 4    | Ring—Retaining       |
| 65-4710  | 2        | 7        | 2    | Ring—Friction        |
| 65-4720  | 2        | 17       | 2    | Spring—Compression   |
| 65-4730  | 2        | 14       | 2    | Washer—Thrust        |
| 65-4740  | 2        | 4        | 4    | Washer—Thrust        |
| 65-4750  | 2        | 16       | 2    | Gear—Pinion          |
| 65-4760  | 2        | 15       | 2    | Washer               |
| 66-6040  | 2        | 6        | 1    | Key—Locking RH       |
| 66-6050  | 2        | 5        | 1    | Key—Rocking LH       |
| 70-9760  | 2        | 8:2      | 2    | Bushing              |
| 92-1001  | 4        | 9        | 1    | Bail—Sp Control      |
| 92-1004  | 2        | 12       | 2    | ASM—Spring Arm       |
| 92-1008  | 1        | 23       | 4    | Knob—Height Adjust   |
| 92-1024  | 3        | 4        | 1    | Guide—Belt           |
| 92-1042  | 2        | 2        | 2    | ASM—Whl              |
| 92-1057  | 2        | 1        | 2    | Bolt—Shoulder        |
| 92-1097  | 1        | 34       | 1    | Decal—Discharge      |
| 92-1099  | 1        | 20       | 2    | Bolt—Shoulder        |
| 92-1701  | 3        | 7        | 1    | Rope—Stop            |
| 92-2266  | 4        | 5        | 1    | Screw—Handle         |
| 92-2914  | 1        | 2        | 1    | Decal—HOC            |
| 92-2915  | 1        | 1        | 1    | Decal—HOC            |

\*Not Illustrated

# Lawn-Boy Part Number Index (cont.)

| Part No. | Page No. | Ref. No. | Qty. | Description              |
|----------|----------|----------|------|--------------------------|
| 92-2919  | 6        | 9        | 1    | Decal-Danger             |
| 92-4851  | 3        | 5        | 1    | Decal-Oil Instruction    |
| 92-4853  | 4        | 14       | 1    | Handle-Starter           |
| 92-4881  | 1        | 14       | 2    | Plate-Height Adjust      |
| 92-4890  | 1        | 15       | 2    | Washer                   |
| 92-5412  | 4        | 8        | 2    | Stop-Pivot               |
| 92-5424  | 4        | 10       | 1    | Staple-Handle            |
| 92-7723  | 1        | 30       | 1    | ASM-Handle Bracket       |
| 92-7724  | 1        | 3        | 1    | ASM-Handle Bracket       |
| 92-7726  | 4        | 7        | 1    | Cable-Traction           |
| 92-7727  | 5        | 2        | 1    | Gearcase-Upper Ss        |
| 92-7728  | 1        | 6        | 1    | Guide-Transmission       |
| 92-7729  | 4        | 6        | 1    | Anchor-Cable             |
| 92-7731  | 1        | 16       | 2    | Plate-Baffle             |
| 92-7735  | 1        | 4        | 1    | ASM-Gear Case            |
| 92-7746  | 2        | 8        | 2    | ASM-Hgt Adj Arm          |
| 92-8630  | 1        | 8        | 1    | Mulch Plate-21"          |
| 92-8647  | 1        | 38       | 1    | Shield-Trailing          |
| 92-9575  | 3        | 2        | 1    | Pulley-Engine            |
| 92-9665  | 1        | 26       | 1    | Screw-Phil               |
| 93-0239  | 5        | 7        | 1    | Shaft-Output             |
| 93-3653  | 4        | 38       | 1    | Handle-Guard             |
| 93-4184  | 4        | 12       | 1    | Bail-Flywheel Brake      |
| 93-4196  | 3        | 19       | 1    | Shield-Grass             |
| 93-7250  | 1        | 28       | 1    | Decal-Warning            |
| 93-7380  | 4        | 1        | 1    | Anchor-Cable             |
| 93-7381  | 2        | 10       | 1    | V-Belt                   |
| 93-7383  | 4        | 16       | 1    | Guide-Rope               |
| 94-1609  | 2        | 18       | 2    | Cover-Wheel              |
| 94-1610  | 1        | 10       | 2    | Grommet-Plastic          |
| 94-6066  | 3        | 15       | 1    | Guard-Muffler            |
| 95-1713  | 4        | 13       | 1    | Handle Section-Upper     |
| 95-1726  | 3        | 3        | 3    | Screw-Engine Mount       |
| 95-7068  | 1        | 27       | 1    | Cover-Drive              |
| 95-7403  | 1        | 17       | 2    | Bracket-Wheel Height Adj |
| 95-7448  | 3        | 9        | 1    | Decal-Shroud             |
| 98-1560  | 4        | 18       | 1    | ASM-Brake Cable          |
| 98-1567  | 3        | 10       | 1    | Decal-Deck               |
| 98-1593  | 3        | 21       | 1    | Applique                 |
| 98-4477  | 1        | 35       | 1    | ASM-Housing & Baffle     |
| 98-7134  | 4        | 3        | 2    | Knob                     |
| 98-8332  | 1        | 7        | 1    | Knob-Cover Plate         |
| 98-8347  | 1        | 24       | 2    | Screw-Thread Forming     |
| 302-56   | 2        | 8:4      | 2    | Fitting-Grease           |
| 321-50   | 4        | 15       | 1    | Screw                    |
| 322-3    | 1        | 39       | 6    | Screw-HH                 |
| 3256-1   | 4        | 41       | 1    | Washer-Flat              |
| 3256-24  | 5        | 14       | 1    | Washer-Flat              |
| 3285-19  | 5        | 4        | 2    | Pin-Spirol               |
| 3296-5   | 5        | 16       | 1    | Nut-Lock                 |
| 3296-29  | 1        | 37       | 6    | Nut-Lock                 |
| 3296-73  | 4        | 4        | 2    | Nut-Lock                 |
| 32144-4  | 5        | 9        | 4    | Screw-TAP                |
| 32144-85 | 2        | 11       | 2    | Screw-HH                 |
| 32144-85 | 3        | 13       | 1    | Screw-HH                 |

\*Not Illustrated

[illegible]

[illegible]

[illegible]