

LAWN-BOY®

824E Snowthrower

Model No. 28232 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Auger, Housing, & Discharge Chute Assembly	1	Carburetor Tecumseh #640052	11
Traction Frame Assembly	2	Recoil Starter #590749 (Optional)	12
Axle, Wheel, & Tire Assembly	3	Electric Starter No. 33329D (Optional)	13
Engine & Belt Cover Assembly	4	Lawn-Boy Part Number Index	14-16
Handle Assembly	5	Maintenance	17
Recoil Starter Tecumseh #590733	6		
Engine Tecumseh Model HMSK80-155635V	7-10	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Tire Chain Kit	Part No. 56-2700		
Light Kit	Part No. 66-7941		
Drift Breaker Kit	Part No. 37-7021		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSR	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

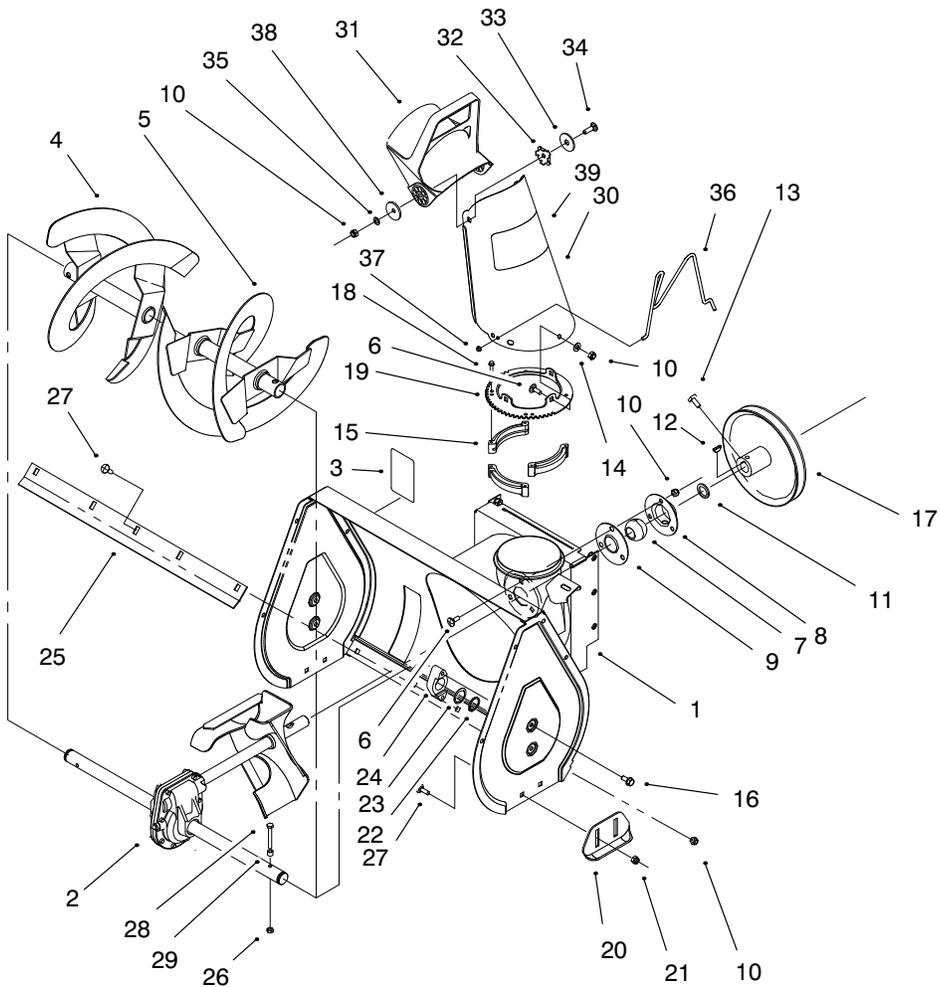


Sheet No.:2

Auger, Housing, & Discharge Chute Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2265	1	Auger Hsg ASM
2	95-2674	1	Gear Case ASM
3	53-7670	1	Decal-Warning, Auger
4	95-2690-03	1	Auger Wa RH
5	95-2691-03	1	Auger Wa LH
6	3230-18	6	Carriage Bolt
7	63-3450	1	Bearing-Ball
8	26-6110	1	Flange-Cup, Bearing
9	26-6120	1	Flange-Cup, Bearing
10	3296-29	13	Nut-Lock
11	3-0737	1	Washer
12	3257-23	1	Key-Woodruff
13	3242-4	2	Screw-SQH
14	3256-23	3	Washer-Flat
15	37-6490	3	Chute Ring Retainer
16	32144-70	4	Taptite
17	95-2677	1	Pulley-Impeller
18	27-0220	6	Spec Screw
19	37-8941-03	1	Chute Ring
20	40-8160-02	2	Skid
21	32128-20	4	Nut-Hex, Flange
22	32151-36	2	Retaining Ring
23	5-1550	4	Check Washer
24	37-6550	2	Auger Bearing
25	74-1420-02	1	Scraper Blade
26	3296-42	2	Nut-Lock

Ref. No.	Part No.	Qty.	Description
27	3230-1	9	Screw-CARR
28	321-11	2	Capscrew
29	66-8010	2	Spacer-Hub, Impeller
30	94-2793	1	ASM-Chute w/Decal
31	56-2680	1	Chute Deflector
32	55-8950	2	Friction Plate
33	20-4320	2	Rubber Washer
34	3230-22	2	Bolt S.n.
35	3290-456	2	Washer-Belleville
36	56-2670	1	Chute Wire
37	3290-326	1	Nut-Push
38	3256-68	2	Flat Washer
39	94-8079	1	Decal-Danger

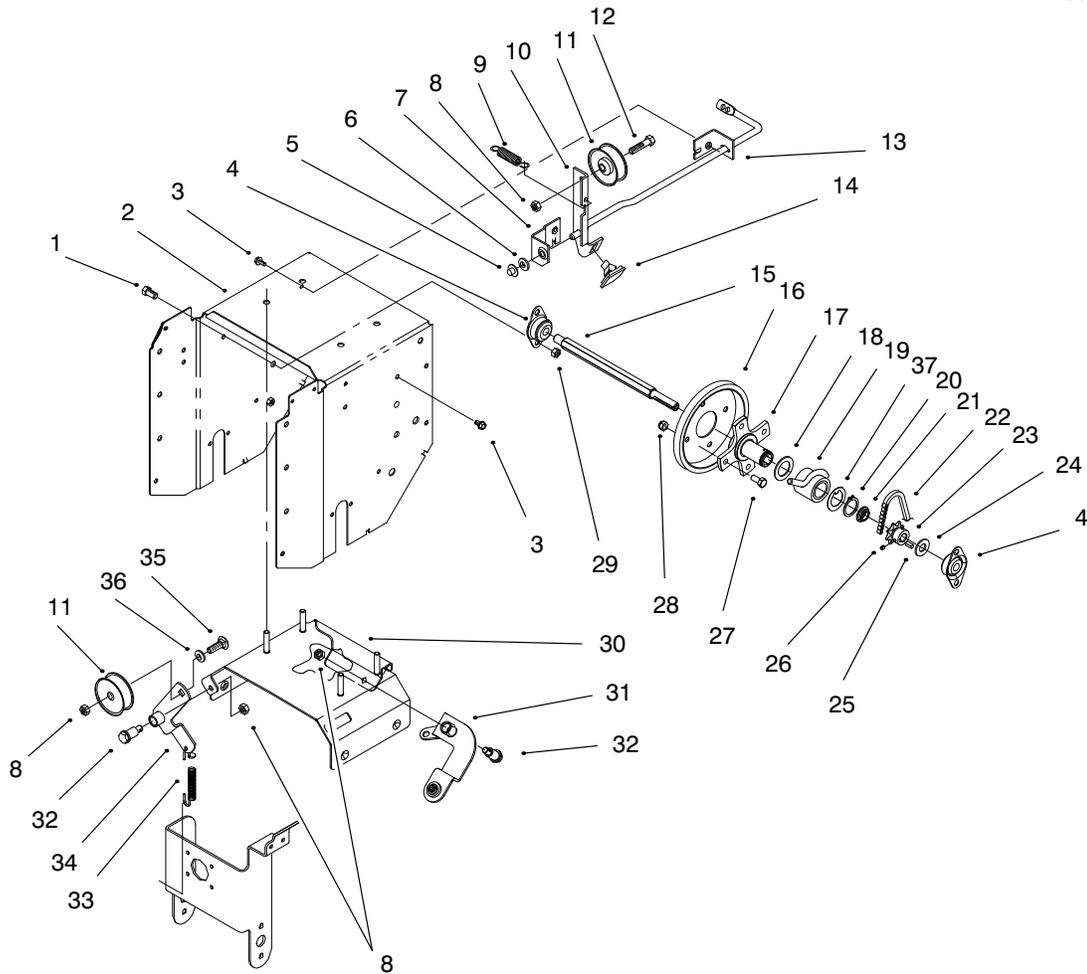


Sheet No.:3

Traction Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	323-4	4	Screw-HH
2	95-6157-02	1	Frame-Traction Wa
3	32144-4	6	Screw-HH
4	94-8824	2	Bearing - Triangle
5	3290-320	1	Retainer-Push On
6	3256-24	1	Washer-Flat
7	94-8829	1	Mounting-Clutch Rod Bracket
8	3296-59	4	Nut-Lock
9	53-7570	1	Spring
10	94-9942-03	1	Auger Clutch Ron Wa
11	3-4244	2	Pulley-Idler
12	323-29	1	Screw-HH
13	94-8841	1	Mounting-Rear Clutch Rod
14	66-8060	1	Pad-Brake
15	94-8816	1	Shaft - Hex
16	40-8170	1	Friction Wheel
17	95-7931	1	Hub-Traction Disc
18	9547	1	Thrust Washer
19	94-8883	1	ASM - Slider Ring
20	32151-36	1	Retaining Ring
21	94-8862	1	Spacer
22	20-1810	1	Roller Chain
23	5-9820	1	Sprocket
24	87-7270	1	Washer - Thrust

Ref. No.	Part No.	Qty.	Description
25	94-8850	1	Key - Square
26	3245-32	2	Screw-HS
27	322-3	4	Screw-HH
28	3296-29	4	Nut-Lock
29	3296-39	4	Nut-Lock
30	94-8851-03	1	Brace
31	94-8821	1	Assembly - Shift Arm
32	94-8859	2	Bolt - Shoulder
33	94-8870	1	Spring - Extension Idler
34	94-8864	1	Bracket/Hub-Idler
35	3231-26	1	Screw-CARR
36	9202594	1	Washer
37	98-2252	1	Washer - Thrust

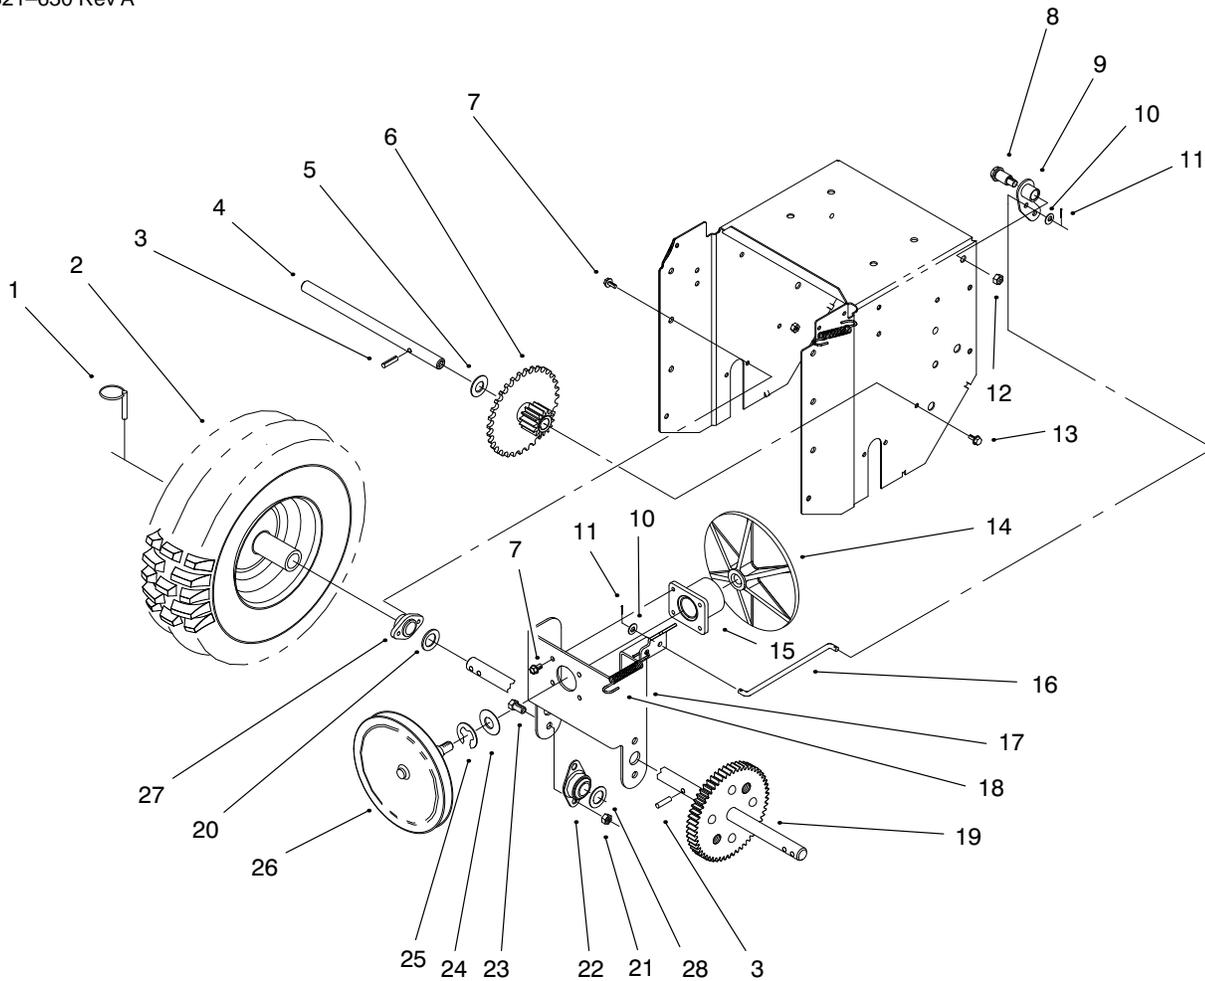


Sheet No.:4

Axle, Wheel, & Tire Assembly

Ref. No.	Part No.	Qty.	Description
1	3290-243	2	Pin-Lynch
2	98-2287	2	Wheel & Tire ASM
3	32121-9	4	Pin-Spring
4	94-8814	1	Shaft - Intermediate
5	7-3590	1	Washer
6	94-8856	1	ASM - Gear/Bushing
7	32144-4	8	Screw-HH
8	94-8859	1	Bolt - Shoulder
9	94-8822	1	Wa - Pivot Hub
10	3256-67	2	Black Zinc Wshr
11	3272-4	2	Pin-Cotter
12	3296-59	1	Nut-Lock
13	32144-14	2	Screw-HWH
14	94-8857	1	Disc - Friction Aluminum
15	94-8845	1	ASM - Bearing Hub
16	94-8818	1	Rod - Engage
17	94-8833-03	1	Frame-Friction Plate
18	94-8813	1	Spring - Engage
19	94-8855	1	Wa - Axle*
20	3-8664	2	Thrust Washer
21	3296-39	4	Nut-Lock
22	68-2970	2	Bushing-Selt/A
23	323-4	4	Screw-HH
24	252-80	1	Bearing-Thrust

Ref. No.	Part No.	Qty.	Description
25	32151-103	1	Snap Ring
26	94-8823	1	ASM - Pulley/Shaft
27	37-6850	2	Axle Brg
28	3-6498	2	Thrust Washer

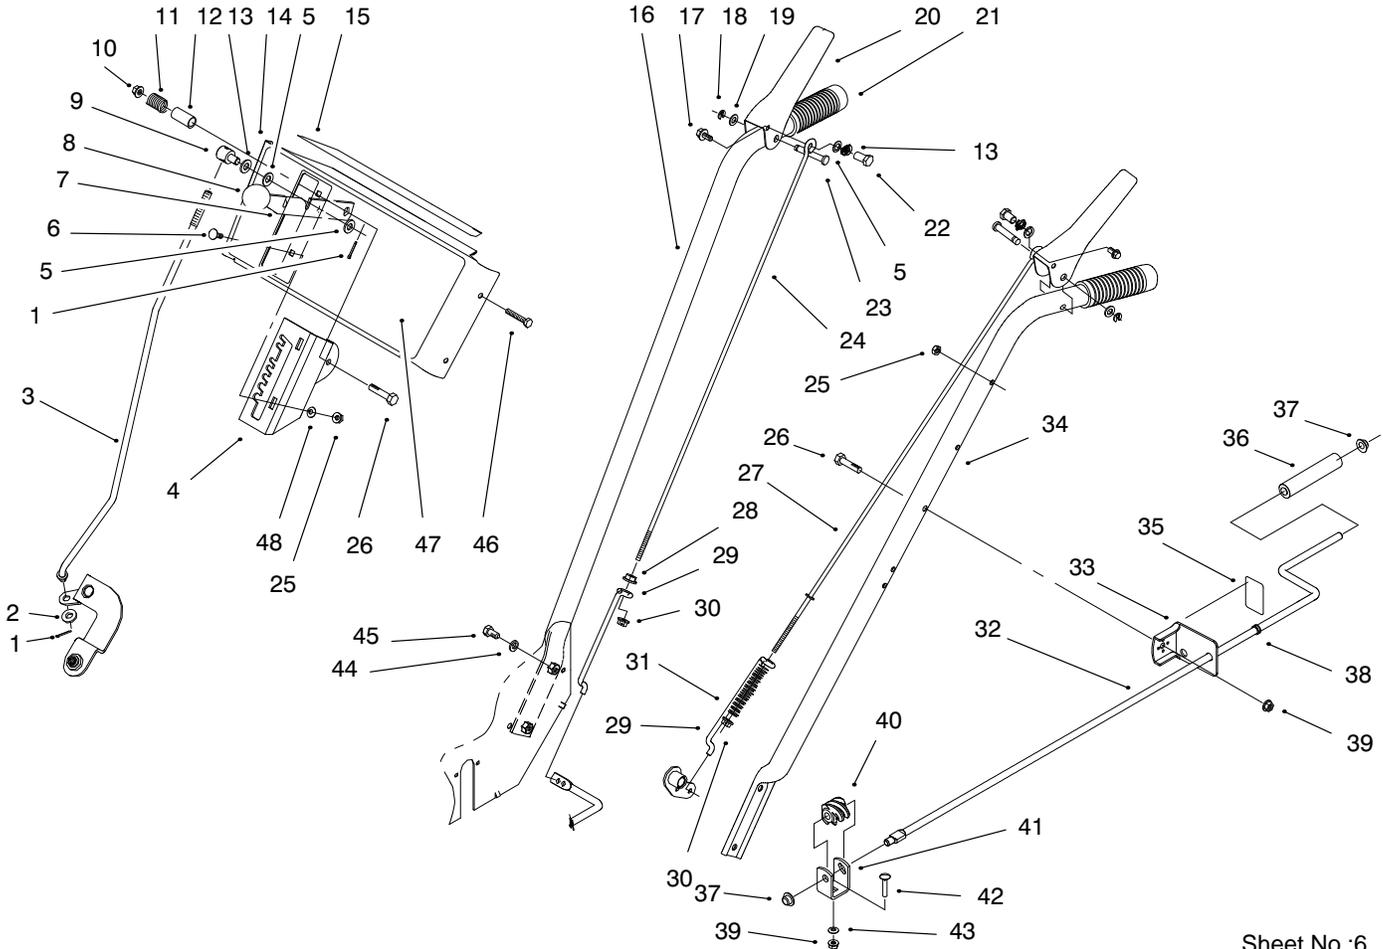


Sheet No.:6

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	3272-4	2	Cotter-Pin
2	3256-38	1	Washer-Flat
3	94-9875	1	Rod - Shift
4	99-1799-03	1	Mount-Speed Selector
5	3256-24	4	Washer-Flat
6	3229-11	2	Screw-CARR
7	94-8806-03	1	Selector-Speed
8	233-21	1	Knob
9	110656	1	Trunnion
10	32128-13	1	Nut-Hex Flange
11	37-9150	1	Spring
12	40-8130	1	Spacer
13	612586	3	Washer-Spring
14	99-5965	1	Panel-Control Asm
15	95-2698	1	Decal - Escutcheon
16	94-8804-03	1	Handle-Right
17	3234-13	2	Screw-HHF
18	32151-73	2	Klip Ring
19	3256-23	2	Washer-Flat
20	94-8887-03	2	Control Handle
21	74-1360	2	Grip Handle
22	47-4990	2	Post,Linkage Mounting
23	52-5600	2	Control Lever Pin
24	94-8838	1	Rod-Upper Engage
			Auger

Ref. No.	Part No.	Qty.	Description
25	3296-42	6	Nut-Lock
26	322-7	2	Screw-HH
27	94-8837	1	Rod - Upper Traction
28	32128-33	1	Nut-Hex Flange
29	94-8836	2	Rod - Lower Traction
30	32128-32	2	Nut-Hex, Flange
31	38-4520	1	Comp Spring
32	40-8270	1	Rod Chute Control
33	25-6090	1	Chute Rod Brkt
34	95-2695-03	1	Left Handle (Black)
35	63-3510	1	Decal - Chute
			Direction
36	40-8230	1	Chute Control Grip
37	3290-320	2	Retainer-Push On
38	256-249	1	Bushing-Sfl
39	3296-29	2	Nut-Lock
40	40-8250	1	Worm Gear Chute
41	40-8280	1	Worm Bracket
42	3230-22	1	Bolt S.n.
43	3290-238	1	Pyrmld Lockwasher
44	3290-456	4	Washer-belleville
45	32144-14	4	Screw-HWH
46	321-9	4	Screw-HH
47	99-3248	1	Decal Control Panel
48	3256-22	2	Washer

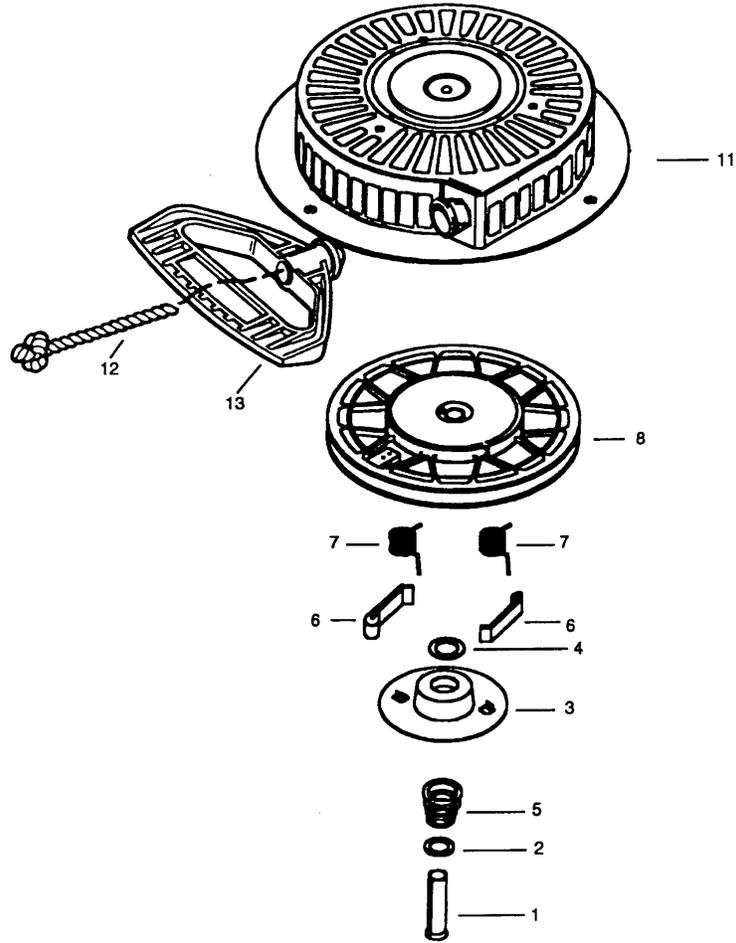


Recoil Starter Tecumseh # 590733

Ref. No.	Part No.	Description	No. Used
1	590599A	Pin – Spring (Incl. Ref. #4)	
2	590600	Washer	1
3	590696	Retainer	1
4	590601	Washer	1
5	590697	Spring – Brake	1
6	590698	Dog – Starter	2

Ref. No.	Part No.	Description	No. Used
7	590699	Spring – Dog	2
8	590709	Pulley & Rewind Spring Assembly	1
11	590734	Starter Housing Asm	1
12	590535	Rope – Starter	1
‡13	590574	Handle – Mitten Grip	1

‡Not Included in Starter Assembly.

Engine Tecumseh Model # HMSK80-155635V

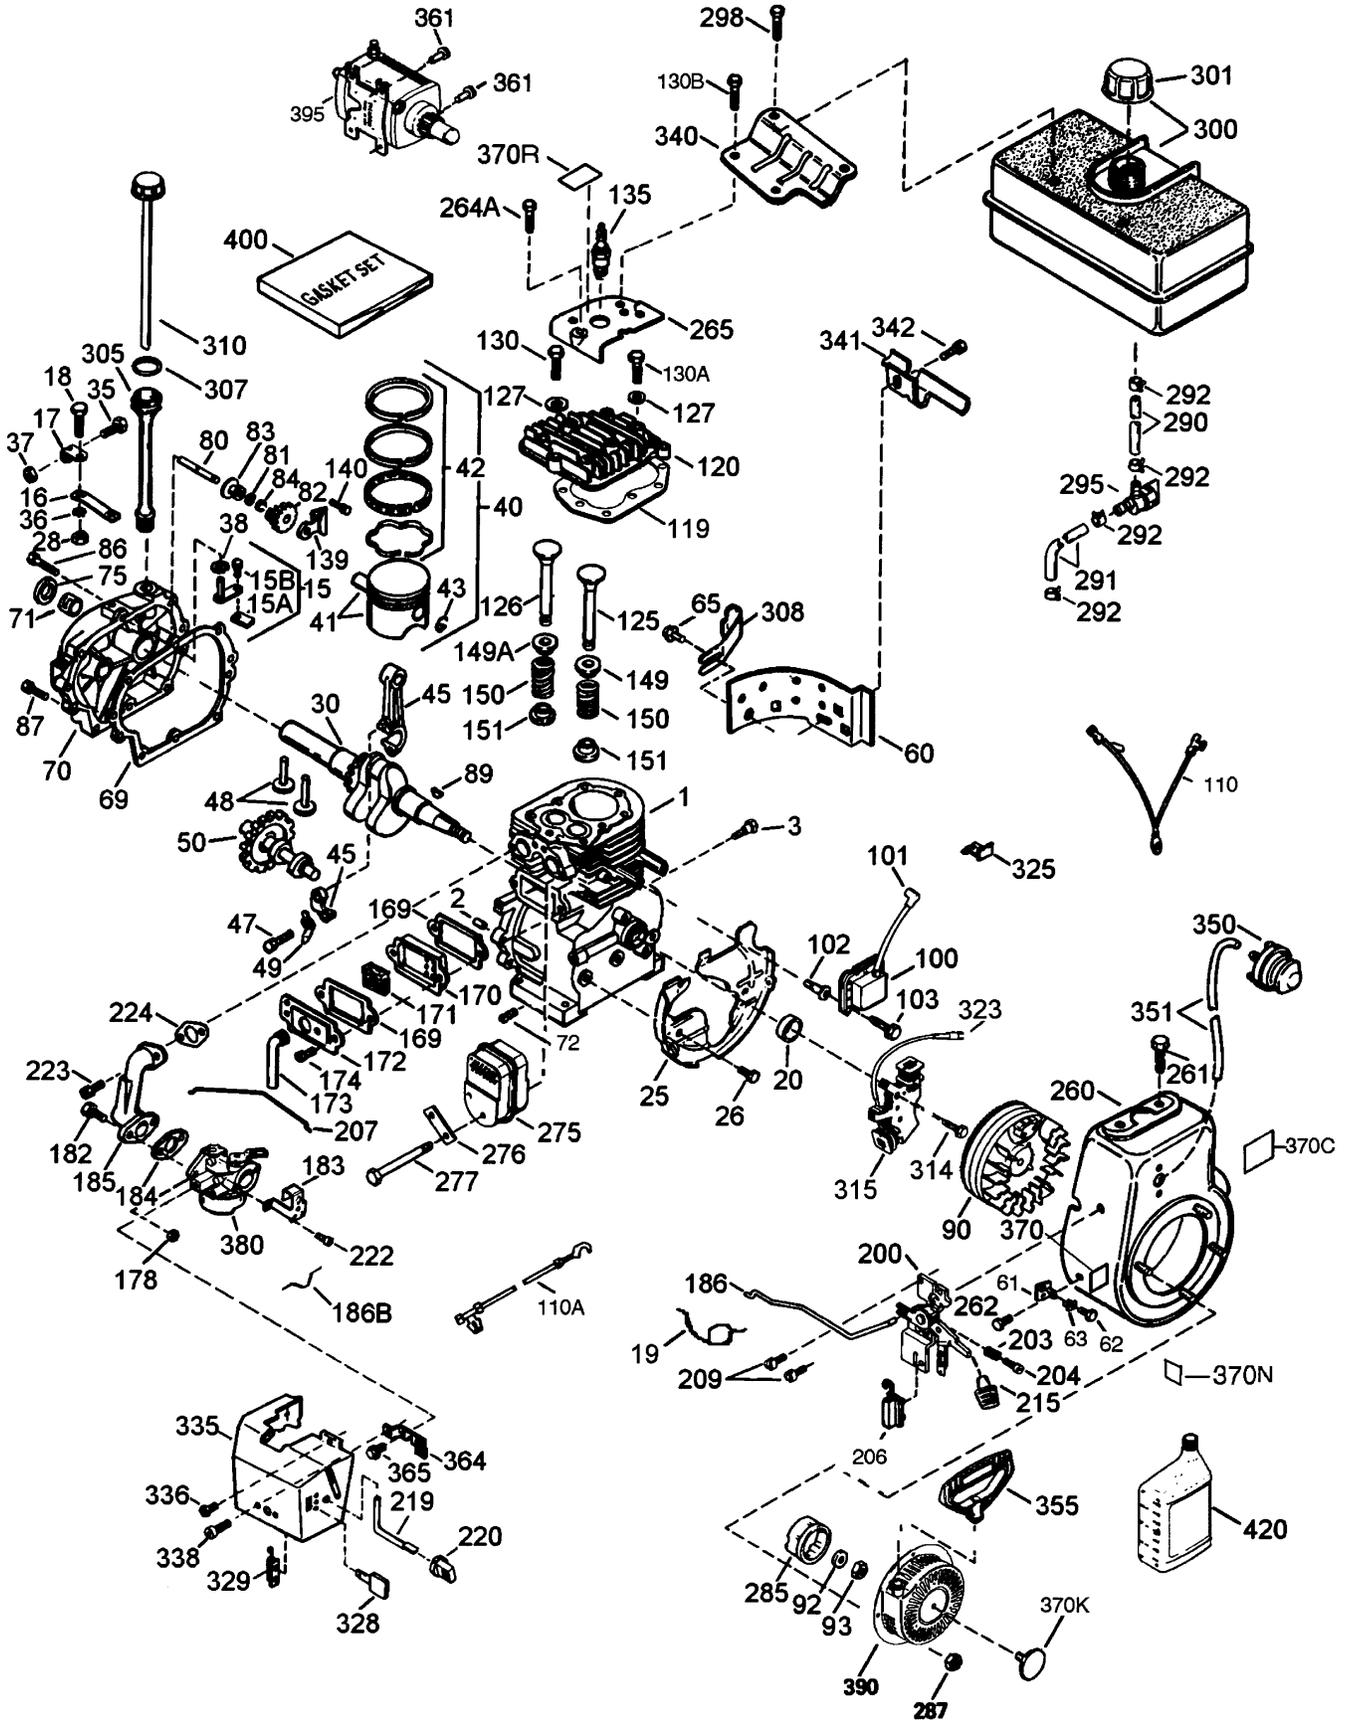


Engine Tecumseh Model # HMSK80-155635V

Ref. No.	Part No.	Description	No. Used
1	35385	Cylinder Asm (Incl. Ref. #2, 20, & 72)	1
2	27652	Dowel Pin	2
3	650820	Screw	2
15	30699C	Governor (Incl. Ref. #15A & 15B)	1
15A	30700	Governor Yoke	1
15B	650494	Screw	1
16	33454	Governor Lever	1
17	29916	Governor Lever Clamp	1
18	651028	Screw	1
19	34663	Spring - Speed Control	1
20	35319	Oil Seal	1
25	36460	Blower Housing Baffle	1
26	650561	Screw	2
28	30322	Lock Nut	1
30	35571A	Crankshaft	1
35	29826	Screw	1
36	29918	Lock Washer	1
37	29216	Lock Nut	1
38	29642	Retaining Ring	1
40	40011	Piston, Pin & Ring Set (Std.)	1
40	40012	Piston, Pin & Ring Set (.010" OS)	1
41	40009	Piston & Pin Asm (Std.) (Incl. Ref. #43)	1
41	40010	Piston & Pin Asm (.010" OS) (Incl. Ref. #43)	1
42	40013	Ring Set (Std.)	1
42	40014	Ring Set (.010" OS)	1
43	27888	Piston Pin Retaining Ring	2
45	36897	Connecting Rod Asm (Incl. Ref. #47, & 49)	1
47	651033	Connecting Rod Bolt	2
48	34034	Valve Lifter	2
49	36896	Oil Dipper	1
50	35375	Camshaft (MCR)	1
60	33273A	Blower Housing Extension	1
61	34126	Grommet Mounting Bracket	1
62	650760	Screw	1
63	28545	Grommet	1
65	650128	Screw	1
*69	35262A	Cylinder Cover Gasket	1
70	35376	Cylinder Cover (Incl. Ref. #71, 75, & 80)	1
71	35377	Crankshaft Bushing	1
72	27642	Oil Drain Plug	1
75	35319	Oil Seal	1
80	31845	Governor shaft	1
81	30590A	Washer	1
82	35378	Governor Gear Asm (Incl. Ref. #81)	1

Ref. No.	Part No.	Description	No. Used
83	30588A	Governor Spool	1
84	29193	Retaining Ring	1
86	650833	Screw	7
87	650832	Screw	1
89	32589	Flywheel Key	1
90	611093	Flywheel (W/Ring Gear)	1
92	650880	Lock Washer	1
93	650881	Flywheel Nut	1
100	35135	Solid State Ignition	1
101	610118	Spark Plug Cover	1
102	651024	Solid State Mounting Stud	2
103	651007	Screw, Torx T-15	2
110	35253	Ground Wire	1
110A	35305	Ground Wire	1
*119	36448	Cylinder Head Gasket	1
120	36449	Cylinder Head	1
125	27878A	Exhaust Valve (Std.) (Incl. Ref. #151)	1
125	27880A	Exhaust valve (1/32" OS) (Incl. Ref. #151)	1
126	34035	Intake Valve (Std.) (Incl. Ref. #151)	1
126	34036	Intake Valve (1/32" OS) (Incl. Ref. #151)	1
127	650691	Washer	2
130	6021A	Screw	7
130A	650727	Screw	2
130B	650713	Screw	2
135	35395	Resistor Spark Plug (RJ19LM)	1
139	33369	Governor Gear Bracket	1
140	650836	Screw	2
149	27882	Valve Spring Cap	1
149A	35862	Valve Spring Cap	1
150	27881	Valve Spring	2
151	32581	Valve Spring Keeper	2
*169	27896A	Valve Cover Gasket	2
170	28423	Breather Body	1
171	28424	Breather Element	1
172	28425	Valve Cover	1
173	35350	Breather Tube	1
174	650128	Screw	2
178	29752	Nut & Lock Washer	2
182	30088A	Screw	2
183	34587A	Choke Bracket	1
*184	33263	Carburetor To Intake Pipe Gasket	1
185	33877	Intake Pipe	1
186	34667	Governor Link	1
186B	36652	Spring - Choke	1

*Included in Gasket Set 36450A

Engine Tecumseh Model # HMSK80-155635V (Cont.)

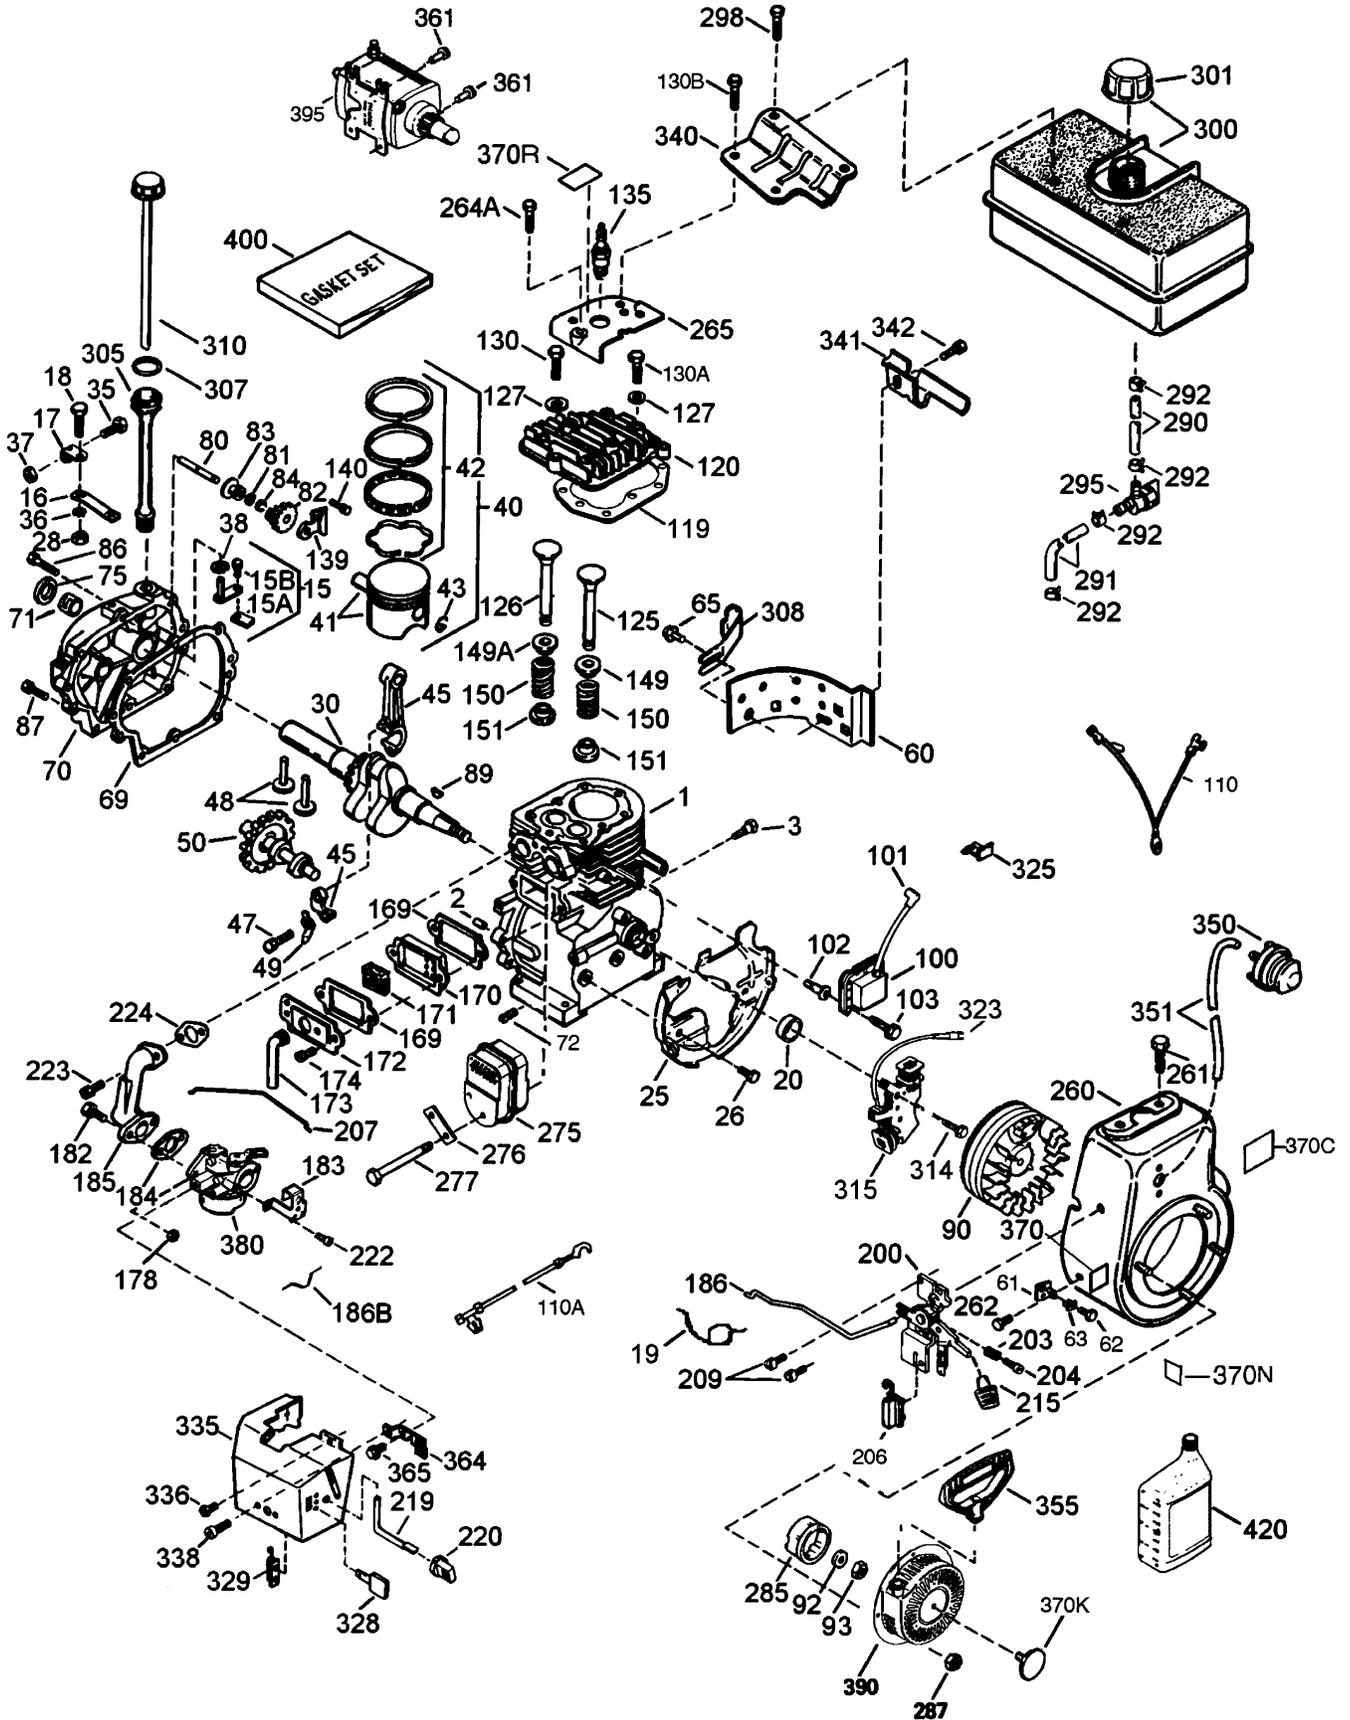


Engine Tecumseh Model # HMSK80-155635V (Cont.)

Ref. No.	Part No.	Description	No. Used
200	34677	Control Bracket (Incl. Ref. #19, 203, 204 & 206)	1
203	31342	Compression Spring	1
204	651029	Screw	1
206	610973	Terminal	1
207	33878	Throttle Link	1
209	650821	Screw	2
215	35440	Control Knob	1
219	34586	Choke rod	1
220	35438	Choke Knob	1
222	28820	Screw	2
223	650378	Screw, Torx T-30	2
*224	27915A	Intake Pipe Gasket	1
260	35447A	Blower Housing	1
261	650788	Screw	2
262	29747B	Screw, Torx T-40	2
264A	650802	Screw	1
265	33272B	Cylinder Head Cover	1
275	35056	Muffler	1
276	31588	Locking Plate	1
277	651002	Screw	2
285	35985B	Starter Cup	1
287	29752	Nut & Lock Washer	4
290	29774	Fuel Line	1
291	30705	Fuel Line	1
292	26460	Fuel Line Clamp	4
295	35857	Fuel shut-Off Valve	1
298	650665	Screw	2
300	34156A	Fuel Tank (Incl. Ref. #292 & 301)	1
301	36246	Fuel Cap	1
305	35554	Oil fill Tube	1
307	35499	"O" Ring	1
308	35540	Fill Tube Clip	1

Ref. No.	Part No.	Description	No. Used
310	36205	Dipstick	1
314	650873	Screw	1
315	611111	Alternator Coil (18 Watt) (Incl. Ref. #323)	1
323	611118	Terminal	1
325	29443	Wire Clip	1
328	35062	Ignition Keys	2
329	610973	Terminal	1
335	35057A	Carburetor Cover	1
336	650765	Screw	1
338	28942	Screw	2
340	34154	Fuel Tank Bracket	1
341	34155	Fuel Tank Bracket	1
342	650561	Screw	1
350	570682	Primer Bulb	1
351	32180C	Primer Line	1
355	590574	Starter Handle	1
361	650990	Screw, Torx T-30	2
364	33377	Carburetor Cover Bracket	1
365	650767	Screw	2
370	36261	Identification Decal	1
370C	36501	Primer Decal	1
370K	36695	Starter - Decal	1
370N	35077	Bilingual Decal	1
370R	37119	Warning Decal	1
380	640052	Carburetor (Incl. Ref. #184)	1
390	590733	Rewind Starter (Note: This engine could have been built with 590749 starter.)	1
395	33329D	Electric Starter Motor, 120 Volt (Optional)	1
400	36450A	Gasket Set	1
420	730226	SAE 5W30 4-Cyc. Eng. Oil	1


*Included in Gasket Set 36450A

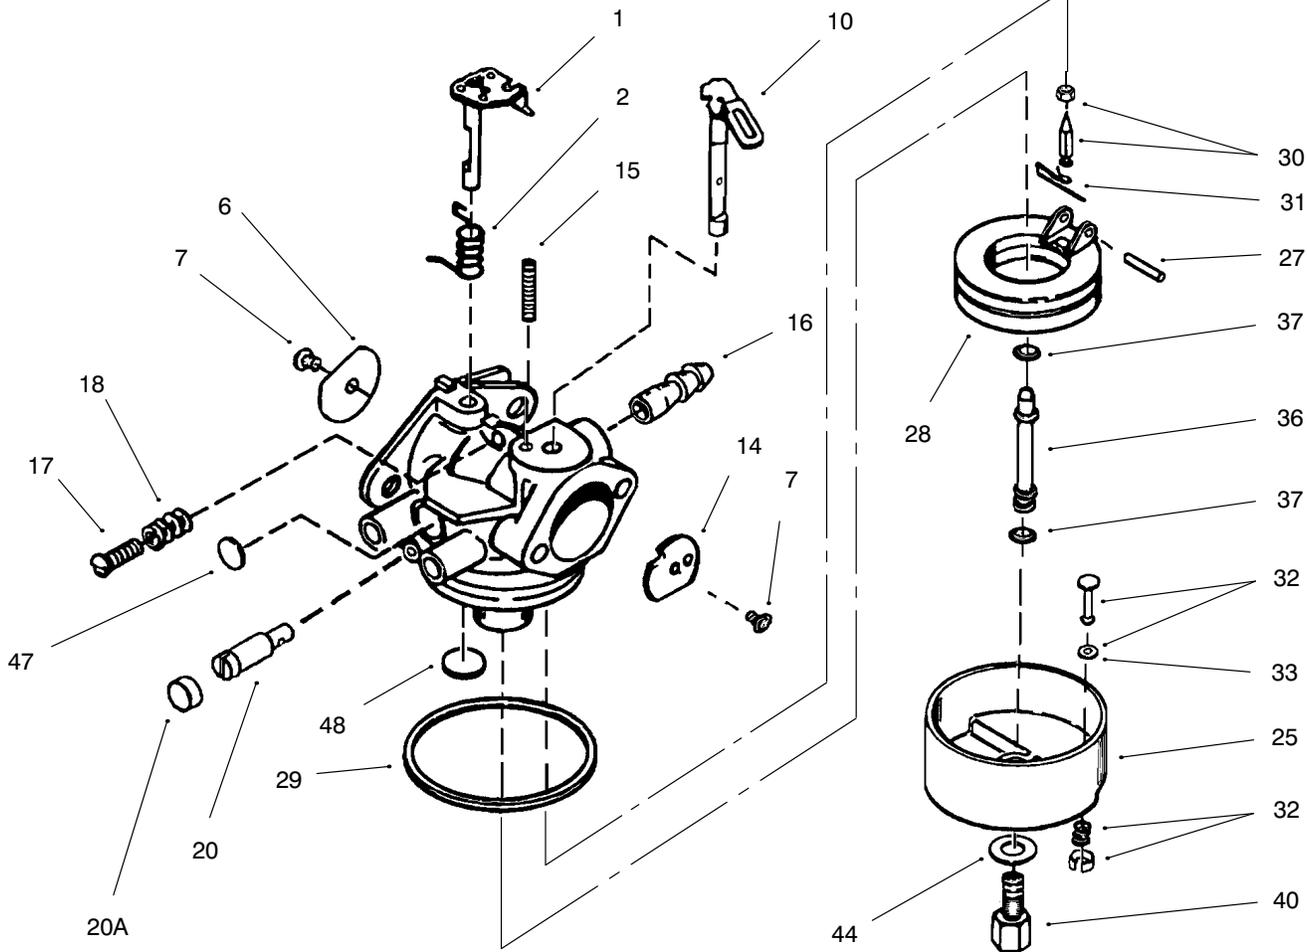

Carburetor Tecumseh # 640052

Ref. No.	Part No.	Description	No. Used
1	631776A	Shaft/Lever – Throttle	1
2	631970	Spring – Throttle Return	1
6	631778	Shutter – Throttle	1
7	650506	Screw – Shutter	2
10	632112	Shaft/Lever – Choke	1
14	632174	Shutter – Choke	1
15	630735	Spring – Choke Positioning	1
16	632164	Fitting – Fuel Inlet	1
17	650417	Screw – Idle Regulating	1
18	630766	Spring – Tension	1
20	640016	Screw – Idle Adjustment	1
21	640053	Cap – Screw Idler Adj.	1
25	631951	Float Bowl Assembly (Incl. Ref. #32 & 33)	1
27	631024	Shaft – Float	1

Ref. No.	Part No.	Description	No. Used
28	632019	Float – Carburetor	1
29	631028	Gasket – Bowl to Body	1
30	631021	Inlet Needle, Seat & Clip Asm (Incl. Ref. #31)	1
31	631022	Clip – Inlet Needle	1
32	27136A	Drain Assembly (Incl. Ref. #33)	1
33	27554	Gasket – Bowl Drain	1
36	640005	Main Nozzle Tube	1
37	632547	O-Ring–Main Nozzle Tube	2
40	640055	High Speed Bowl Nut	1
44	27110	Gasket – Bowl to Body	1
47	630748	Plug – Welch	1
48	631027	Plug – Welch	1

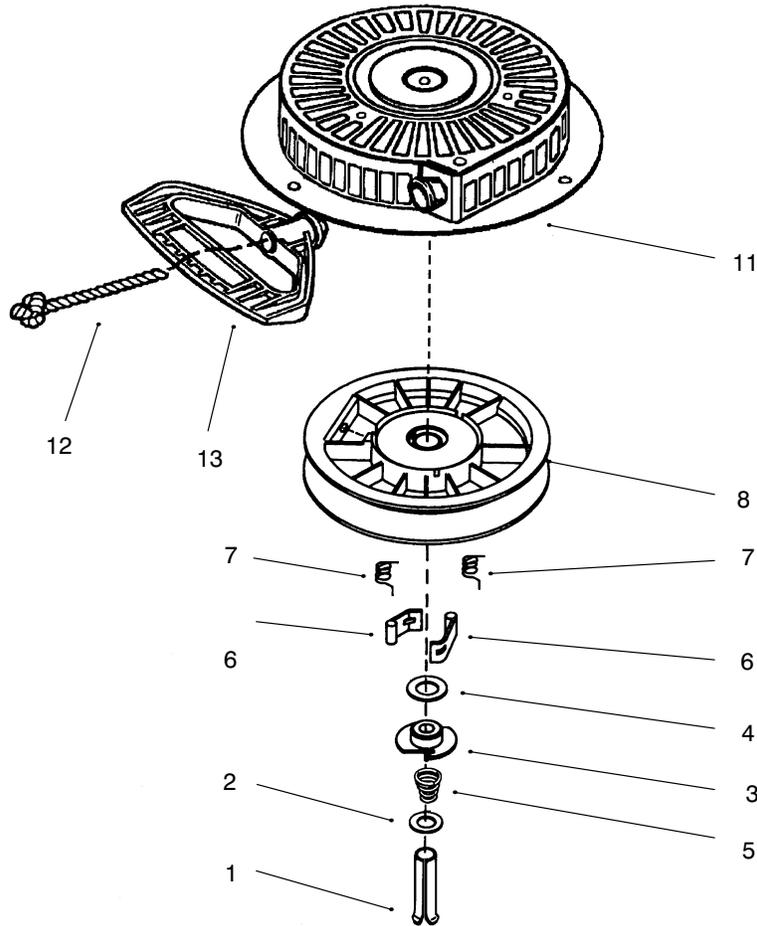


Recoil Starter # 590749 (Optional)

Ref. No.	Part No.	Description	No. Used
1	590599A	Pin – Spring (Incl. Ref. #4)	1
2	590600	Washer	1
3	590679	Retainer	1
4	590601	Washer	1
5	590678	Spring – Brake	1
6	590680	Dog – Starter	2

Ref. No.	Part No.	Description	No. Used
7	590412	Spring – Dog	2
8	590682	Pulley & Rewind Spring Assembly	1
11	590750	Starter Housing Asm	1
12	590535	Rope – Starter	1
‡3	590574	Handle – Mitten Grip	1

‡ Not Included with Starter

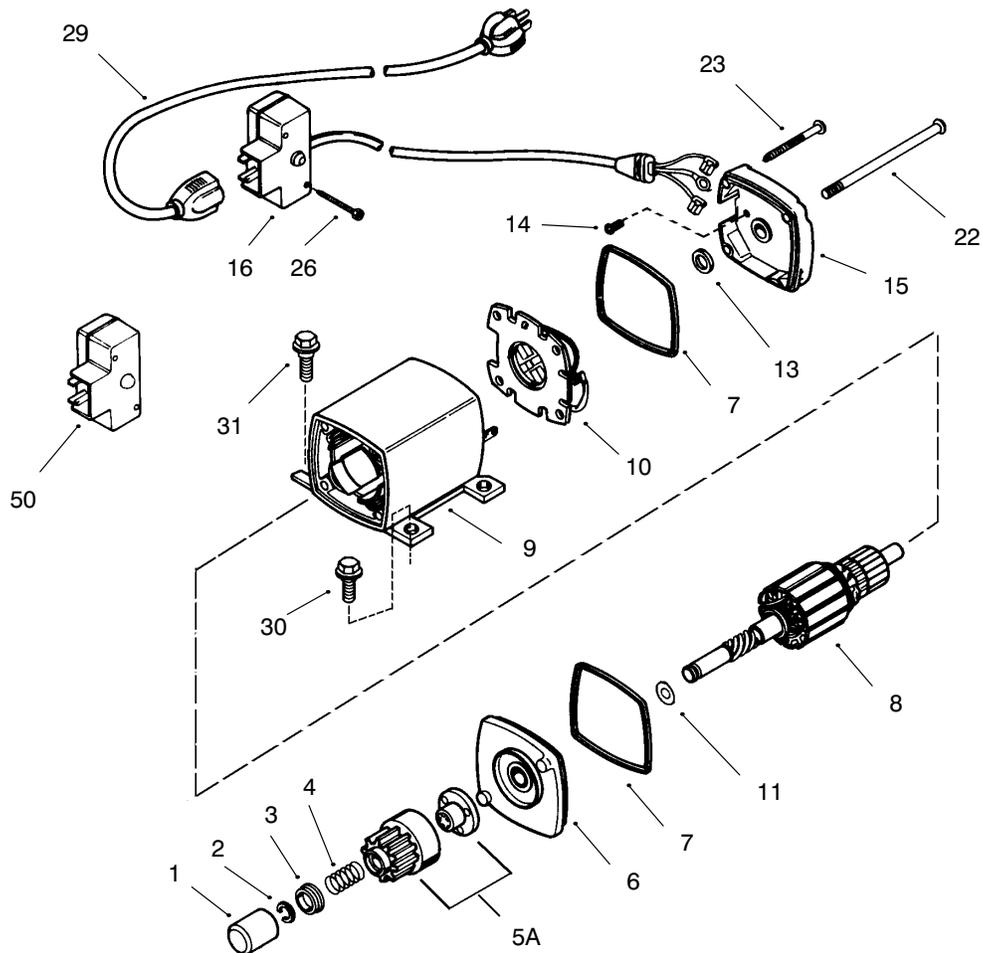

ELECTRIC STARTER NO. 33329D (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	33451	Dust Cover	1
2	33842	Retainer Ring	1
3	33430	Spring Retainer	1
4	33431	Anti-drift Spring	1
5A	37050	Gear and Nut (Incl. Ref.# 2)	1
6	35449	Drive End Cap Asm. (Incl. Ref.# 7)	1
7	35450	O-Ring	2
8	35915	Armature	1
9	35451A	Housing Assembly	1
10	35452A	Brush Card Assembly	1
11	35911	Thrust Washer	1

Ref. No.	Part No.	Description	No. Used
13	590500	Thrust Washer	1
14	33441	Ground Screw	1
15	35453	Commutator End Cap Asm. (Incl. Ref.# 7)	1
16	35454	Switch Box Assembly (Incl. Ref# 26)	1
22	35455	Case Bolt	2
23	35456	Ground Screw	1
26	650819	Screw	2
29	32450B	Extension Cord	1
30	30063	Screw - Torx	2
31	650820	Screw	2
50	730623	Switch Repair Kit	1

Lawn-Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
9547	2	18	1	Thrust Washer
110656	5	9	1	Trunnion
612586	5	13	3	Washer-Spring
9202594	2	36	1	Washer
3-0737	1	11	1	Washer
3-4244	2	11	2	Pulley-Idler
3-6498	3	28	2	Thrust Washer
3-8664	3	20	2	Thrust Washer
5-1550	1	23	4	Check Washer
5-9820	2	23	1	Sprocket
7-3590	3	5	1	Washer
20-1810	2	22	1	Roller Chain
20-4320	1	33	2	Rubber Washer
25-6090	5	33	1	Chute Rod Brkt
26-6110	1	8	1	Flange-Cup, Bearing
26-6120	1	9	1	Flange-Cup, Bearing
26-9671	4	9	1	V-Belt
27-0220	1	18	6	Spec Screw
37-6490	1	15	3	Chute Ring Retainer
37-6550	1	24	2	Auger Bearing
37-6850	3	27	2	Axle Brg
37-8941-03	1	19	1	Chute Ring
37-9150	5	11	1	Spring
38-4520	5	31	1	Comp Spring
40-8130	5	12	1	Spacer
40-8160-02	1	20	2	Skid
40-8170	2	16	1	Friction Wheel
40-8230	5	36	1	Chute Control Grip
40-8250	5	40	1	Worm Gear Chute
40-8270	5	32	1	Rod Chute Control
40-8280	5	41	1	Worm Bracket
47-4990	5	22	2	Post,Linkage Mounting
52-5600	5	23	2	Control Lever Pin
53-7570	2	9	1	Spring
53-7670	1	3	1	Decal-Warning, Auger
55-8950	1	32	2	Friction Plate
56-2670	1	36	1	Chute Wire
56-2680	1	31	1	Chute Deflector
62-0920	4	12	1	Sheave-Half, Traction
62-0940	4	8	1	Sheave-Half, Impeller
63-3450	1	7	1	Bearing-Ball
63-3510	5	35	1	Decal - Chute Direction
66-8010	1	29	2	Spacer-Hub, Impeller
66-8060	2	14	1	Pad-Brake
68-2970	3	22	2	Bushing-Selt/A
74-1360	5	21	2	Grip Handle
74-1420-02	1	25	1	Scraper Blade
87-7270	2	24	1	Washer - Thrust
94-2782	4	13	1	Cap-Wire, Lite
94-2793	1	30	1	ASM-Chute w/Decal
94-8079	1	39	1	Decal-Danger
94-8802	4	28	1	Cover - Upper Belt
94-8804-03	5	16	1	Handle-Right
94-8806-03	5	7	1	Selector-Speed
94-8812	4	11	1	Belt - Traction
94-8813	3	18	1	Spring - Engage
94-8814	3	4	1	Shaft - Intermediate
94-8816	2	15	1	Shaft - Hex
94-8818	3	16	1	Rod - Engage
94-8821	2	31	1	Assembly - Shift Arm
94-8822	3	9	1	Wa - Pivot Hub
94-8823	3	26	1	ASM - Pulley/Shaft

*Not Illustrated

Lawn-Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-8824	2	4	2	Bearing - Triangle
94-8829	2	7	1	Mounting-Clutch Rod Bracket
94-8833-03	3	17	1	Frame-Friction Plate
94-8836	5	29	2	Rod - Lower Traction
94-8837	5	27	1	Rod - Upper Traction
94-8838	5	24	1	Rod-Upper Engage Auger
94-8841	2	13	1	Mounting-Rear Clutch Rod
94-8844-02	4	26	1	Cover-Lower Traction
94-8845	3	15	1	ASM - Bearing Hub
94-8849	4	10	1	Pulley - Engine Center
94-8850	2	25	1	Key - Square
94-8851-03	2	30	1	Brace
94-8855	3	19	1	Wa - Axle*
94-8856	3	6	1	ASM - Gear/Bushing
94-8857	3	14	1	Disc - Friction Aluminum
94-8859	2	32	2	Bolt - Shoulder
94-8859	3	8	1	Bolt - Shoulder
94-8862	2	21	1	Spacer
94-8864	2	34	1	Bracket/Hub-Idler
94-8870	2	33	1	Spring - Extension Idler
94-8883	2	19	1	ASM - Slider Ring
94-8887-03	5	20	2	Control Handle
94-9875	5	3	1	Rod - Shift
94-9942-03	2	10	1	Auger Clutch Ron Wa
95-2674	1	2	1	Gear Case ASM
95-2677	1	17	1	Pulley-Impeller
95-2690-03	1	4	1	Auger Wa RH
95-2691-03	1	5	1	Auger Wa LH
95-2695-03	5	34	1	Left Handle (Black)
95-2698	5	15	1	Decal - Escutcheon Back
95-6156-02	4	23	1	Plate-Back
95-6157-02	2	2	1	Frame-Traction Wa
95-7917	4	4	1	Guide - Belt
95-7931	2	17	1	Hub-Traction Disc
98-2252	2	37	1	Washer - Thrust
98-2265	1	1	1	Auger Hsg ASM
98-2287	3	2	2	Wheel & Tire ASM 13.5
99-1799-03	5	4	1	Mount-Speed Selector
99-3248	5	47	1	Decal Control Panel
99-5965	5	14	1	Panel-Control Asm
233-21	5	8	1	Knob
252-80	3	24	1	Bearing-Thrust
256-249	5	38	1	Bushing-Sfl
288-2	4	18	1	Cap-Pipe
289-34	4	19	1	Nipple-Pipe
321-9	5	46	4	Screw-HH
321-11	1	28	2	Capscrew
322-3	2	27	4	Screw-HH
322-7	5	26	2	Screw-HH
323-4	2	1	4	Screw-HH
323-4	3	23	4	Screw-HH
323-29	2	12	1	Screw-HH
3210-3	4	1	2	Screw-HH
3212-8	4	5	1	Screw-HH
3229-11	5	6	2	Screw-CARR
3230-1	1	27	9	Screw-CARR
3230-18	1	6	6	Carriage Bolt
3230-22	1	34	2	Bolt S.n.
3230-22	5	42	1	Bolt S.n.
3231-26	2	35	1	Screw-CARR
3234-13	5	17	2	Screw-HHF
3242-4	1	13	2	Screw-SQH

*Not Illustrated

Lawn-Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3245-32	2	26	2	Screw-HS
3253-4	4	2	2	Washer-Lock
3253-6	4	6	1	Washer-Lock
3256-22	5	48	2	Washer
3256-23	1	14	3	Washer-Flat
3256-23	4	3	2	Washer-Flat
3256-23	5	19	2	Washer-Flat
3256-24	2	6	1	Washer-Flat
3256-24	5	5	4	Washer-Flat
3256-38	5	2	1	Washer-Flat
3256-41	4	7	1	Washer-Flat
3256-67	3	10	2	Black Zinc Wshr
3256-68	1	38	2	Flat Washer
3257-23	1	12	1	Key-Woodruff
3272-4	5	1	2	Cotter-Pin
3272-4	3	11	2	Pin-Cotter
3290-238	5	43	1	Pyrmld Lockwasher
3290-243	3	1	2	Pin-Lynch
3290-320	2	5	1	Retainer-Push On
3290-320	5	37	2	Retainer-Push On
3290-326	1	37	1	Nut-Push
3290-456	1	35	2	Washer-Belleville
3296-29	1	10	13	Nut-Lock
3296-29	2	28	4	Nut-Lock
3296-29	5	39	2	Nut-Lock
3296-39	2	29	4	Nut-Lock
3296-39	3	21	4	Nut-Lock
3296-42	1	26	2	Nut-Lock
3296-42	5	25	6	Nut-Lock
3296-59	2	8	4	Nut-Lock
3296-59	3	12	1	Nut-Lock
32121-9	3	3	4	Pin-Spring
32128-13	5	10	1	Nut-Hex Flange
32128-20	1	21	4	Nut-Hex, Flange
32128-20	4	21	4	Nut-Hex, Flange
32128-32	5	30	2	Nut-Hex, Flange
32128-33	5	28	1	Nut-Hex Flange
32144-4	2	3	6	Screw-HH
32144-4	3	7	8	Screw-HH
32144-4	4	22	11	Screw-HH
32144-14	3	13	2	Screw-HWH
32144-14	4	27	6	Screw-HWH
32144-14	5	45	4	Screw-HWH
32144-70	1	16	4	Taptite
32151-36	1	22	2	Retaining Ring
32151-36	2	20	1	Retaining Ring
32151-73	5	18	2	Klip Ring
32151-103	3	25	1	Snap Ring

*Not Illustrated

