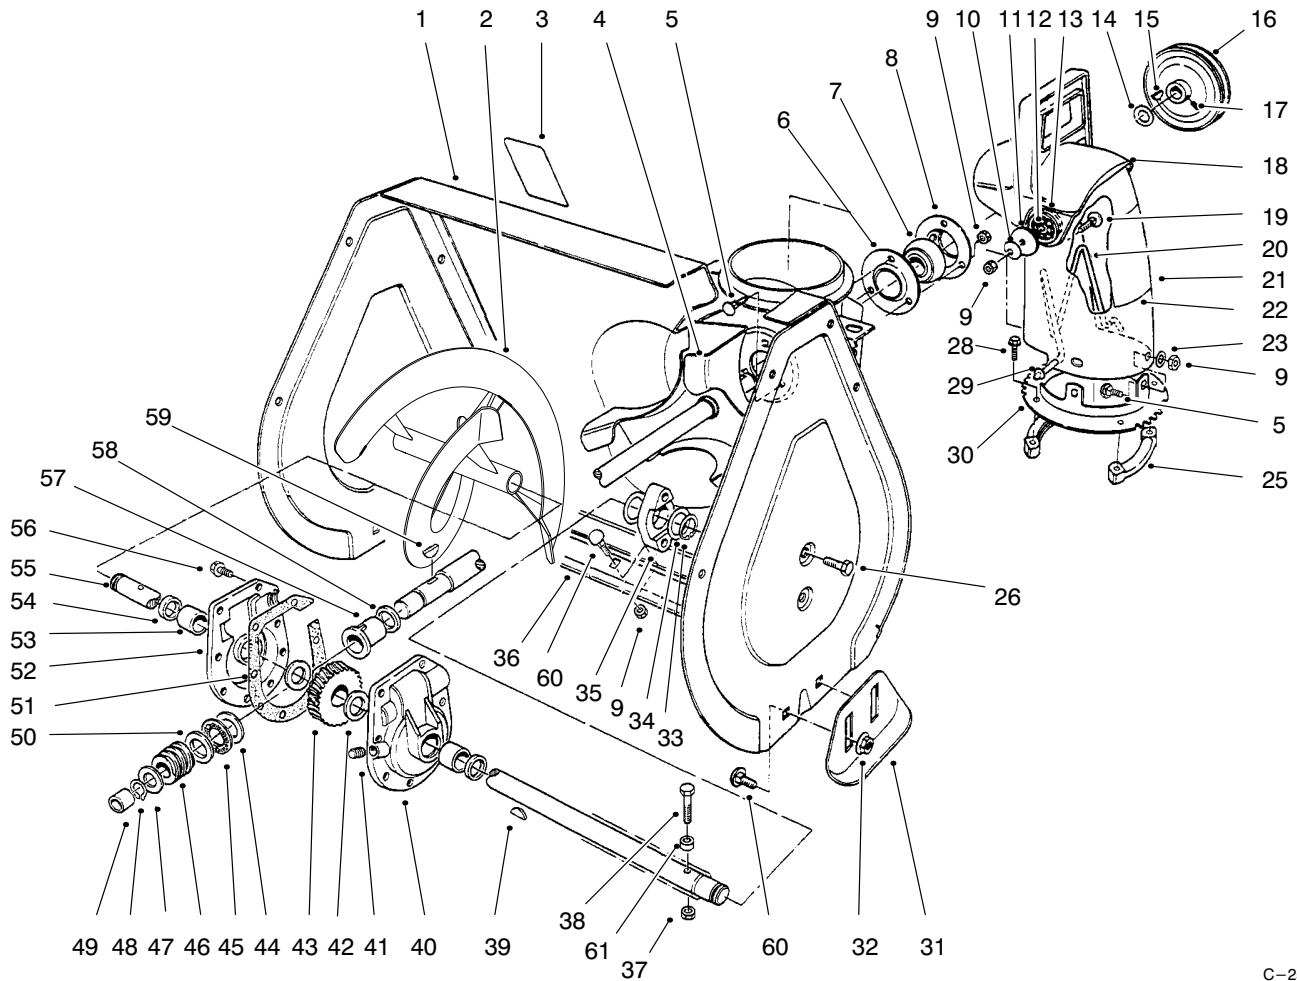


LAWN-BOY®**MODEL NO. 28230-9900001 & UP****PARTS
CATALOG****522 SNOWTHROWER**


C-2587

AUGER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	43-7322-02	Housing - Auger (Incl. Ref. #3)	1
2	98-2270-03	Auger - R.H.	1
*	98-2271-03	Auger - L.H.	1
3	53-7670	Decal - Auger Warning	1
4	37-6990-03	Shaft & Impeller	1
5	3230-18	Bolt - Carriage	6
6	26-6120	Flange - Bearing Front	1
7	63-3450	Bearing - Ball	1
8	26-6110	Flange - Bearing Rear	1
9	3296-29	Nut - Lock	13
10	3290-456	Washer - Lock	2

Ref. No.	Part No.	Description	No. Used
11	3256-68	Washer - Flat	2
12	55-8950	Plate - Friction	2
13	20-4320	Washer - Rubber	2
14	3-0737	Washer	1
15	3257-23	Key	1
16	37-6890	Pulley	1
17	3242-4	Screw - Set	2
18	56-2680	Deflector	1
19	3230-22	Bolt - Carriage	2
20	56-2670	Chute - Wire	1
21	94-2793	Chute - Discharge (Incl. Ref. # 22)	1

*Not Illustrated

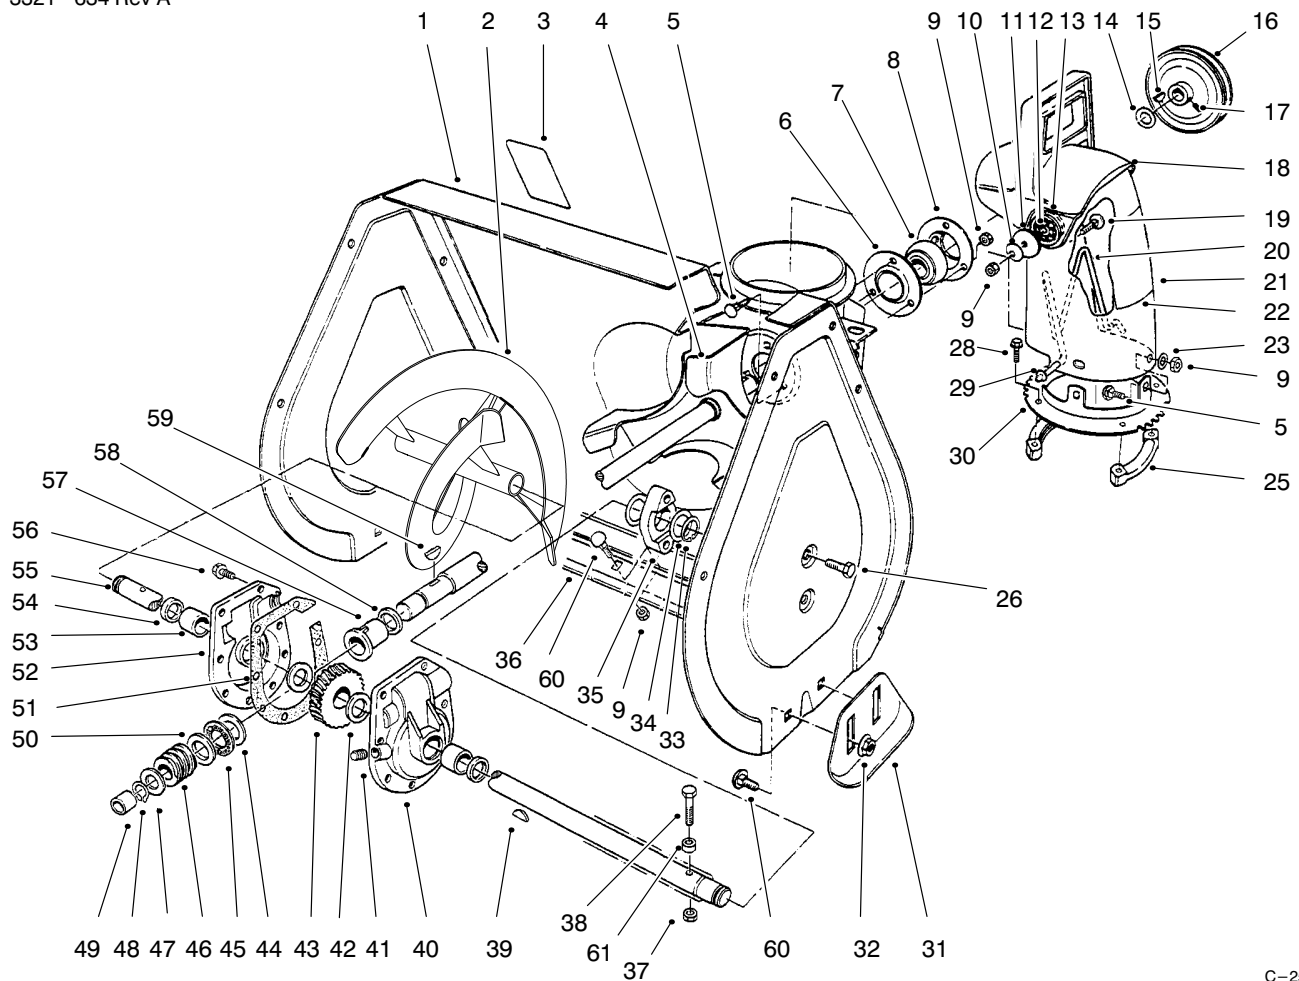


C-2587

AUGER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
22	94-8079	Decal - Discharge	1	45	252-76	Bearing - Needle, Thrust	1
23	3256-23	Washer	3	46	5-7170	Gear - Worm	1
25	37-6490	Retainer - Chute Ring	3	47	3-8664	Washer	1
26	32144-70	Screw - Self Tapping	4	48	32120-72	Ring - Retaining	1
28	27-0220	Screw - Self Tapping	6	49	256-32	Bushing	1
29	3290-326	Pushnut	1	50	252-80	Washer - Thrust	1
30	37-8941-03	Ring - Chute	1	51	51-0460	Gasket	1
31	40-8160-02	Skid	2	52	14-2449	Gear Case R.H. (Incl. Ref. #53 & 54)	1
32	32128-20	Nut - Flange	4	53	256-237	Bushing	2
33	32151-36	Ring - Retaining	2	54	7-0045	Seal - Oil	2
34	5-1550	Washer - Thrust	4	55	37-6802	Shaft - Auger	1
35	37-6550	Bearing - Auger	2	56	32144-41	Screw - Self Tapping	8
36	94-8892-02	Blade - Scraper	1	57	37-6560	Bushing - Input	1
37	3296-42	Nut - Lock	2	58	237-87	Seal	1
38	321-11	Screw	2	59	3257-23	Key - Woodruff	1
39	3257-33	Key - Woodruff	1	60	3230-1	Bolt - Carriage	9
40	14-2459	Gear Case L.H. (Incl. Ref. #53 & 54)	1	61	66-8010	Spacer - Auger	2
41	281-1	Pipe - Plug	1	*	37-6962	Gear Case Asm.	1
42	252-71	Bearing - Thrust	2	*	12-8789	Bearing Asm. (Incl. Ref. #6-8)	1
43	5-7180	Gear	1				
44	257-3	Washer - Thrust	1				

*Not Illustrated

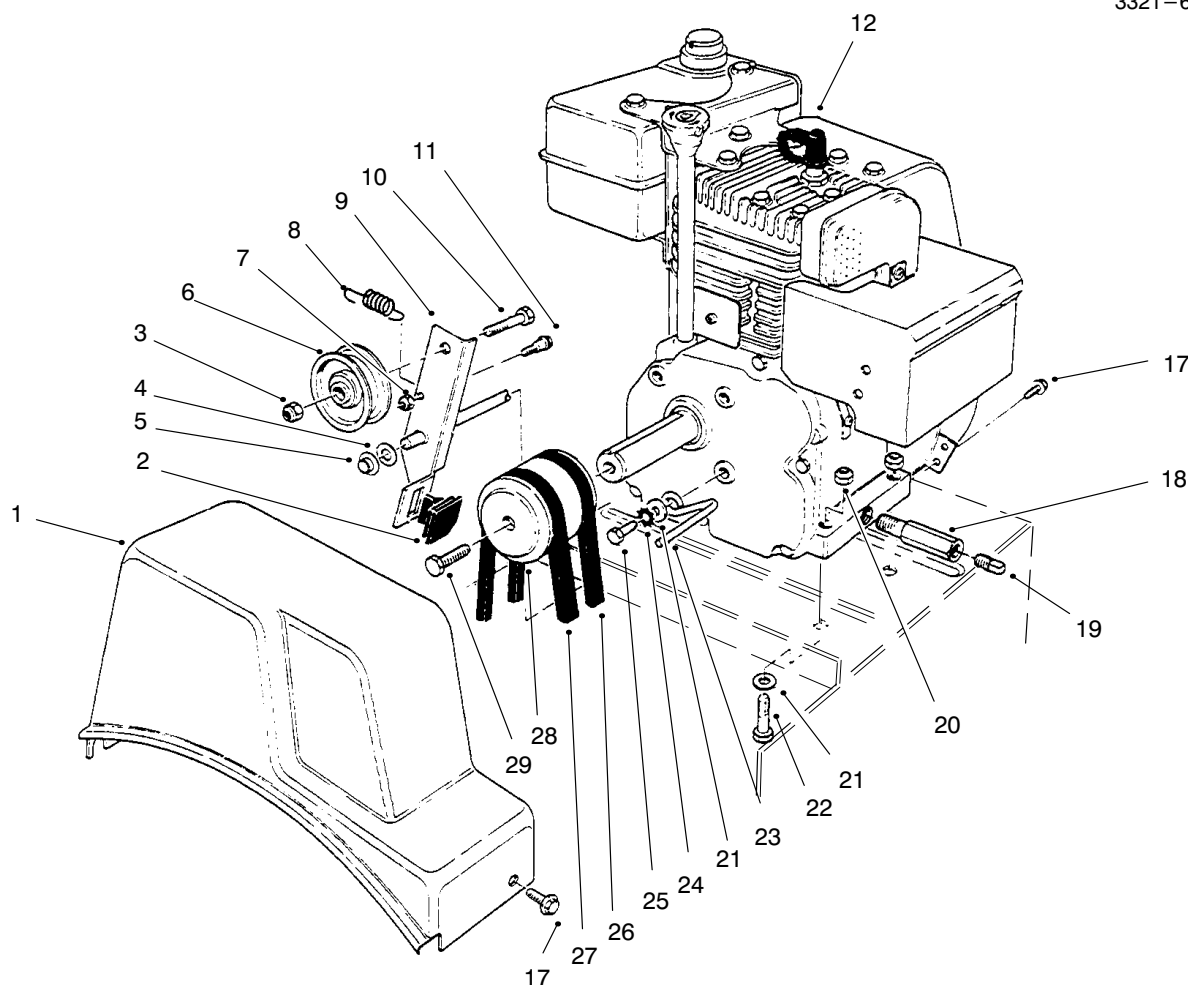


C-2704

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	37-6900	Cover - Belt	1
2	66-8060	Molded Brake Asm.	1
3	3296-59	Nut - Lock	1
4	3256-24	Washer - Flat	1
5	3290-320	Nut - Push On	1
6	3-4244	Idler Pulley	1
7	3296-56	Nut - Lock	1
8	53-7570	Spring - Auger Disengage	1
9	14-7959	Auger Clutch (Incl. Ref. #2)	1
10	323-29	Screw	1
11	42-3560	Bolt - Shoulder	1
†12		Engine	1
17	32144-4	Screw - Self Tapping	3

Ref. No.	Part No.	Description	No. Used
18	49-3040	Pipe - Drain	1
19	281-7	Plug - Pipe	1
20	3296-29	Nut - Lock	4
21	3256-23	Washer - Flat	5
22	322-7	Screw	4
23	37-8990	Retainer - Belt	1
24	3255-8	Washer - Lock Ext. Tooth	1
25	3210-3	Screw	1
26	37-9090	V-Belt - Traction	1
27	37-9080	V-Belt - Auger	1
28	43-7370	Engine Pulley	1
29	43-7290	Screw - Special	1

†Order From Tecumseh

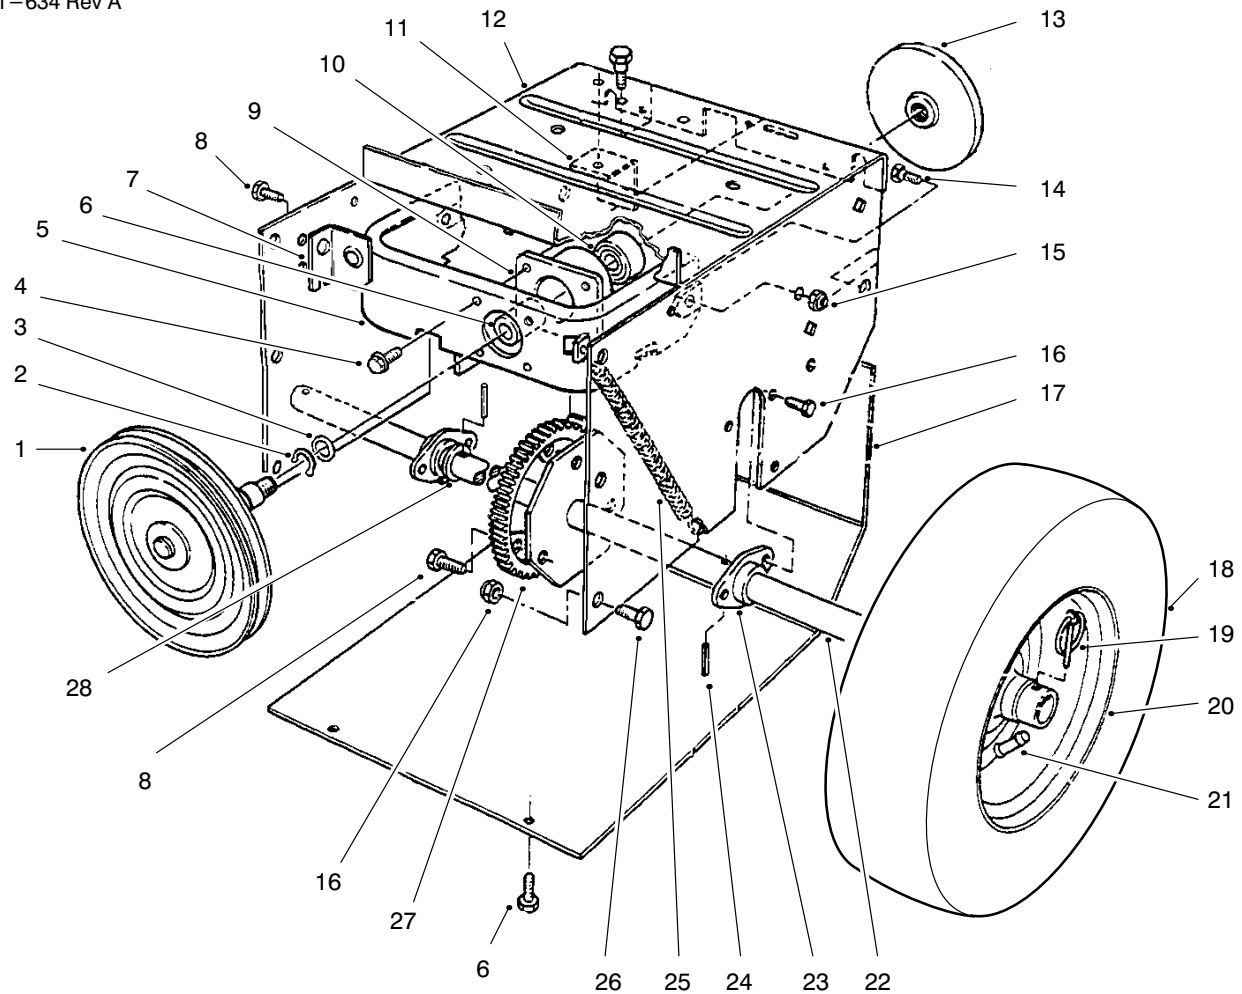


C-2371

TRACTION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-0850	Pulley & Shaft	1
2	32151-103	Ring - Snap	1
3	252-80	Washer - Thrust	1
4	12-3270	Screw - Tapping	8
5	88-0550-03	Frame - Friction Plate	1
6	256-322	Bushing	1
7	66-6790	Mount - Clutch Rod Front	1
8	32144-70	Screw - Self Tap. Hex. Hd.	5
9	88-0560	Hub - Frame	1
10	38-7820	Bearing	1
11	37-9070	Mount - Clutch Rod Rear	1
12	37-8900-02	Frame - Traction	1
13	38-0800	Plate - Friction	1
14	37-8770	Bolt - Shoulder	2


Ref. No.	Part No.	Description	No. Used
15	3296-29	Nut - Lock	6
16	32144-4	Screw - Self Tap. Hex. Hd.	6
17	37-6830-02	Cover - Bottom	6
18	700457	Tire	2
19	3290-243	Pin - Klik	2
20	241-131	Rim	2
21	232-50	Tube	2
22	74-1350	Shaft - Axle	1
23	37-6850	Bearing - Axle	2
24	32121-31	Pin - Roll	2
25	37-8870	Spring - Friction Plate	1
26	322-2	Screw - Hex. Hd.	6
27	37-6520	Gear - Axle	1
28	3-8664	Washer - Thrust	2

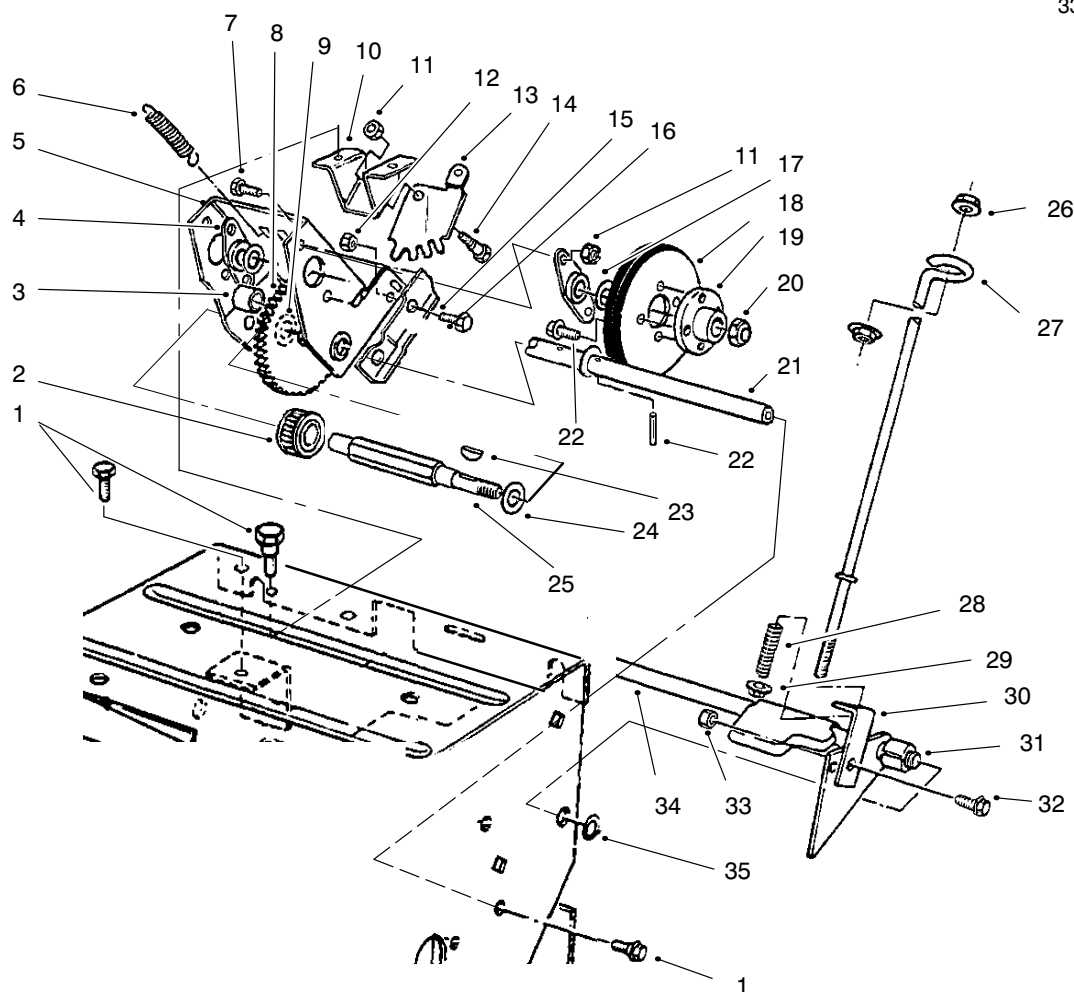

C-2372

TRACTION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Self Tap. Hex. Hd.	4	18	37-6570	Wheel - Friction	1
2	37-6500	Gear - Sliding	1	19	39-1520	Hub - Friction Wheel Mount	1
3	256-86	Bushing	1	20	3296-48	Nut - Lock	1
4	20-1620	Bearing - Friction Wheel	2	21	37-6760	Shaft - Pivot	1
5	39-1230	Bracket - Sliding	1	22	32121-45	Pin - Roll	2
6	37-8880	Spring - Traction Engage	1	23	3257-24	Key	1
7	322-2	Screw - Hex. Hd.	4	24	5-7570	Washer - Thrust	2
8	37-9160	Intermediate Gear & Bushing	1	25	37-6780	Shaft - Hex	1
9	10-9280	Washer - Thrust	2	26	32128-33	Nut - Flange	2
10	37-8790	Mount - Quadrant Gear	1	27	39-3060	Rod - Lower Traction	1
11	3296-29	Nut - Lock	4	28	38-4520	Spring - Compression	1
12	3296-16	Nut - Lock	1	29	32128-32	Nut - Flange	1
13	37-8800	Quadrant - Gear	1	30	38-4490	Bracket - Traction	1
14	37-8770	Bolt - Shoulder	3	31	40-9680	Spacer	1
15	39-1250	Cam - Receiver	1	32	40-8350	Screw - Shoulder	1
16	321-4	Screw - Hex. Hd.	1	33	3296-42	Nut - Lock	1
17	36-4790	Washer - Thrust	2	34	43-7310-03	Traction Engagement Asm.	1
				35	32151-61	Ring - Retaining	1

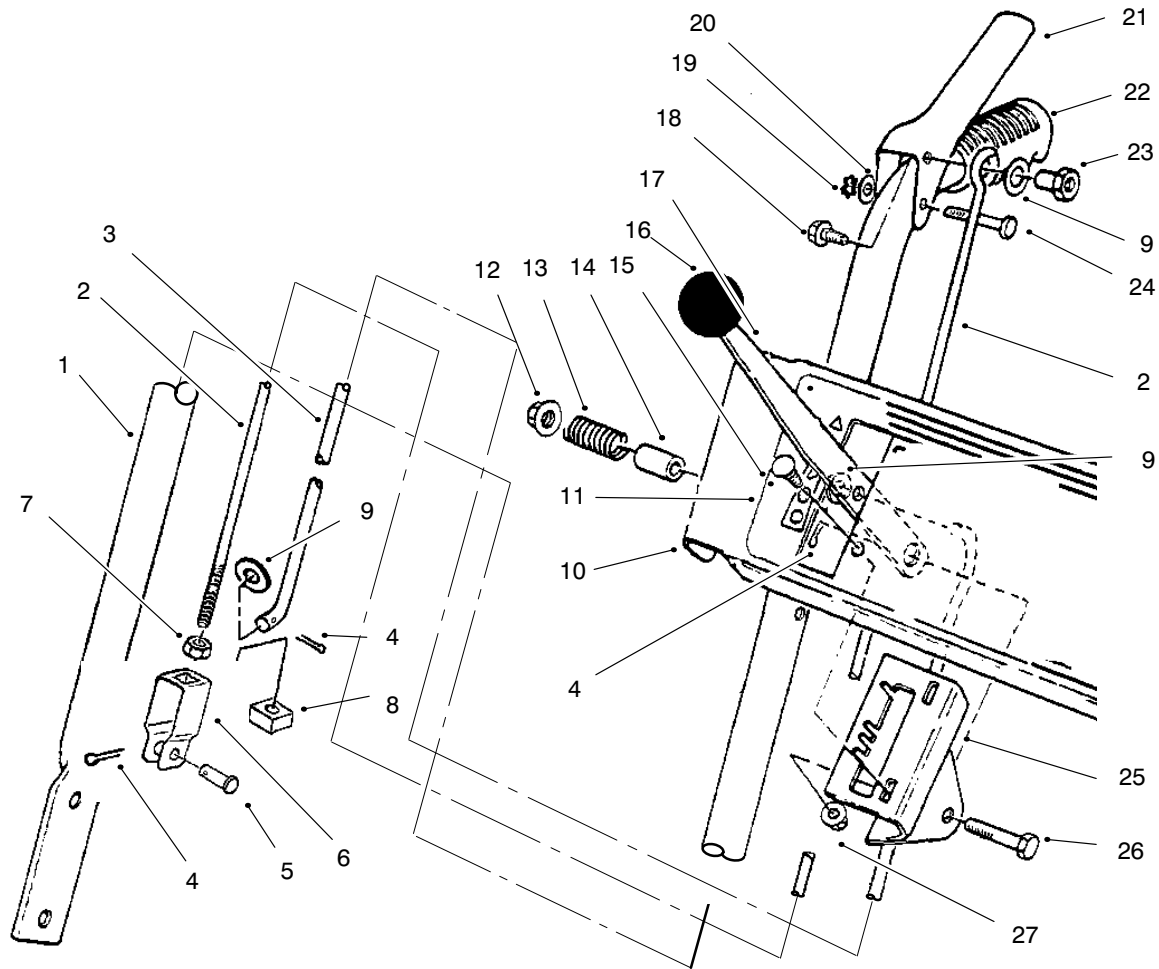


C-2373

HANDLE ASSEMBLY RIGHT SIDE

Ref. No.	Part No.	Description	No. Used
1	52-5561-03	Handle - Right	1
2	52-5590	Link - Upper	1
3	39-7570	Rod - Speed Selector	1
4	3272-4	Pin - Cotter	3
5	283-3	Pin - Clevis	1
6	39-3080	Clevis	1
7	3218-1	Nut - Jam	1
8	32115-5	Retainer - Nut	1
9	3256-23	Washer	2
10	99-5960	Panel - Escutcheon Ass'y	1
11	94-8098	Decal - Escutcheon	1
12	32128-13	Nut - Flange Lock	1
13	37-9150	Spring	1
14	40-8130	Spacer - Speed Selector	1

Ref. No.	Part No.	Description	No. Used
15	3229-11	Bolt - Carriage	2
16	233-21	Knob	1
17	37-8820-03	Selector - Speed	1
18	3234-13	Screw - Hex. Flange Hd.	1
19	32151-73	Ring - Clip	1
20	3256-24	Washer	1
21	94-8887-03	Handle - Control	1
22	74-1360	Grip - Handle	1
23	47-4990	Post - Linkage Mounting	1
24	52-5600	Pin - Control Lever	1
25	39-1280-03	Mount - Speed Selector	1
26	322-7	Screw	1
27	32128-33	Nut - Flange Lock	2
*	3290-378	Cable Tie	1

*Not Illustrated

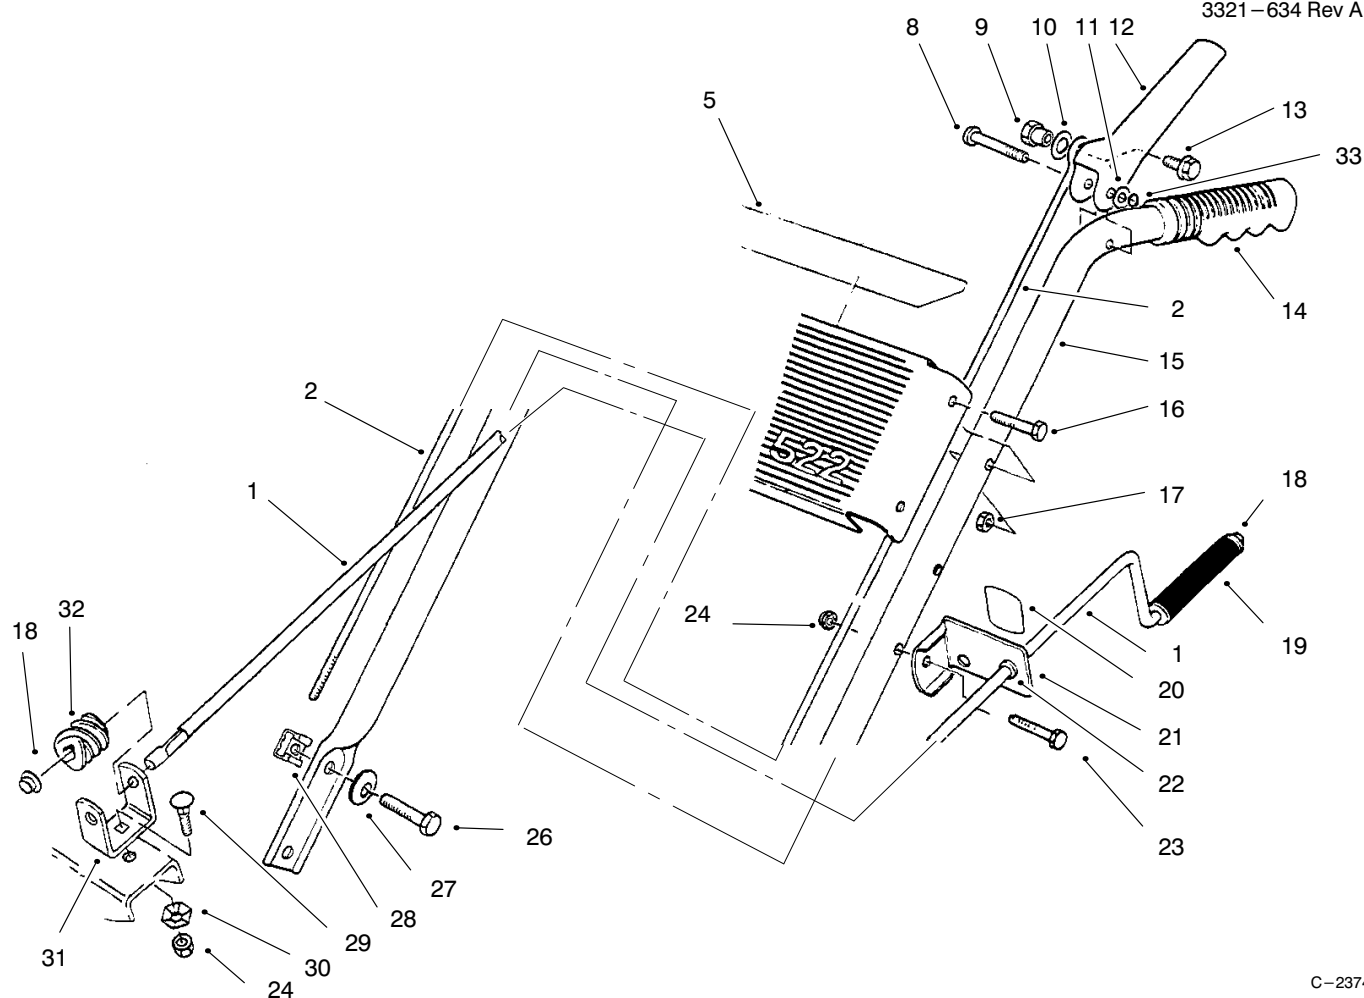

C-2374


HANDLE ASSEMBLY LEFT SIDE

Ref. No.	Part No.	Description	No. Used
1	40-8270	Rod - Chute Control	1
2	52-5590	Link - Upper	1
5	95-2698	Decal - Escutcheon Back	1
8	52-5600	Pin - Control Lever	1
9	47-4990	Post - Linkage Mounting	1
10	3256-23	Washer	1
11	3256-24	Washer	1
12	94-8887-03	Handle - Control	1
13	3234-13	Screw - Hex. Flange Hd.	1
14	74-1360	Grip - Handle	1
15	52-5571	Handle - Left	1
16	321-9	Screw - Hex. Head	4
17	3296-42	Nut - Lock	4
18	3290-320	Nut - Push	2
19	40-8230	Grip - Rod	1

Ref. No.	Part No.	Description	No. Used
20	63-3510	Decal - Chute Direction	1
21	12-7739	Bracket - Chute Control (Incl. Ref.# 20 & 22)	1
22	256-249	Nyliner	1
23	322-7	Screw - Hex. Hd.	1
24	3296-29	Nut - Lock	2
26	322-2	Screw - Hex. Hd.	4
27	3290-456	Washer - Belleville	4
28	3290-196	Retainer - Nut	4
29	3230-22	Bolt - Carriage	1
30	3290-238	Washer - Pyramidal	1
31	40-8280	Bracket - Chute Worm	1
32	40-8250	Gear - Worm	1
33	32151-73	Ring Clip	1
*	3290-378	Cable Tie	1

*Not Illustrated

ENGINE TECUMSEH MODEL HSSK50-67390S

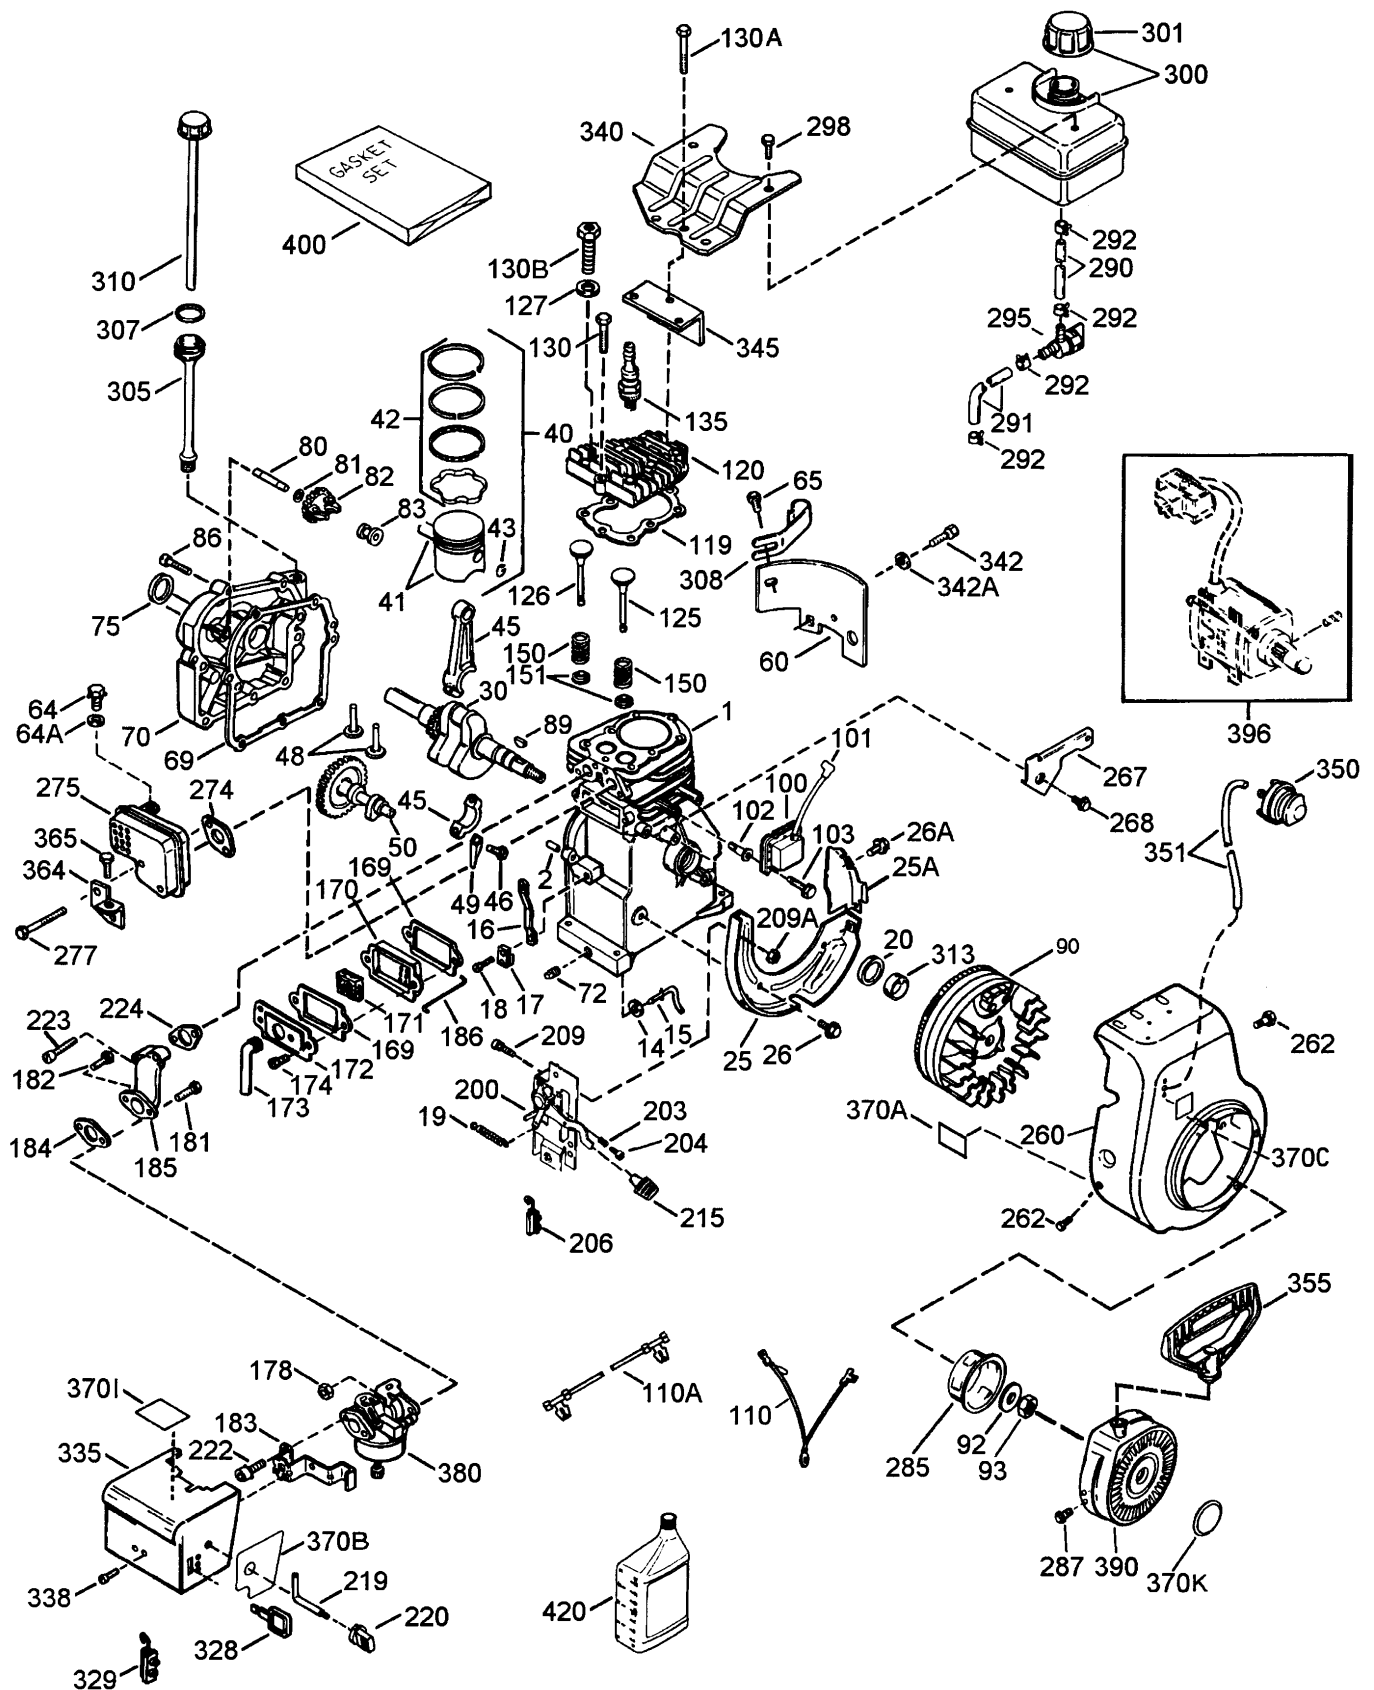

ENGINE TECUMSEH MODEL HSSK50-67390S

Ref. No.	Part No.	Description	No. Used
1	36469A	Cylinder Assembly (Incl. Ref. #2, 20, 72 & 125)	1
2	26727	Pin - Dowel	2
14	28277	Washer - Flat	1
15	31334	Rod - Governor	1
16	31510	Lever - Governor	1
17	31335	Clamp - Governor Lever	1
18	651018	Screw - Torx	1
19	31426	Spring - Extension	1
20	32600	Seal - Oil	1
25	36552	Baffle - Blower Housing	1
25A	35883	Extension - Baffle	1
26	650802	Screw - Hex Washer Hd.	2
26A	650926	Screw	1
30	34740	Crankshaft Assembly	1
40	36073	Piston - Pin & Ring Asm.. Standard	1
	36074	Piston - Pin & Ring Asm.. .010" oversize	1
	36075	Piston - Pin & Ring Asm.. .020" oversize	1
41	36070	Piston & Pin Asm.. Standard (Incl. Ref. #43)	1
	36071	Piston & Pin Assembly .010" oversize (Incl. Ref. #43)	1
	36072	Piston & Pin Assembly .020" oversize (Incl. Ref. #43)	1
42	36076	Ring Set - Piston Std.	1
	36077	Ring Set - Piston .010" oversize	1
	36078	Ring Set - Piston .020" oversize	1
43	20381	Ring - Piston Pin Retaining	2
45	32875A	Connecting Rod Assembly (Incl. Ref. #46 & 49)	1
46	32610A	Bolt - Connecting Rod	2
48	27241	Lifter - Valve	2
49	32654	Dipper - Oil	1
50	33158	Camshaft	1
60	29745	Extension - Blower	1
64	30063	Screw - Hex Washer Hd.	1
64A	8345	Washer - Flat	1
65	650128	Screw - Hex Hd.	1
69	*27677A	Gasket - Cylinder Cover	1
70	34674C	Cover - Cylinder (Incl. Ref. #75 & 80)	1
72	27642	Plug - Pipe	2
75	27897	Seal - Oil	1
80	30574A	Shaft - Governor	1
81	30590A	Washer - Flat	1
82	30591	Gear - Governor (Incl. Ref. #81)	1
83	30588A	Spool - Governor	1
86	650488	Screw - Hex Hd.	7

Ref. No.	Part No.	Description	No. Used
89	610961	Key - Flywheel	1
90	611199	Flywheel - w/Ring Gear	1
92	650815	Washer - Belleville	1
93	650816	Nut - Flywheel	1
100	34443B	Solid State Assembly	1
101	610118	Cover - Spark Plug	1
102	651024	Stud	2
103	651007	Screw - Torx	2
110	35182	Wire - Ground	1
110A	36874	Ground Wire	1
119	*36443	Gasket - Cylinder Head	1
120	36441	Head - Cylinder (Incl. Ref. #131)	1
125	36471	Valve - Exhaust Standard (Incl. Ref. #151)	1
	36472	Valve - Exhaust 1/32" oversize (Incl. Ref. #151)	1
126	32644A	Valve - Intake Standard (Incl. Ref. #151)	1
	32645A	Valve - Intake 1/32" oversize (Incl. Ref. #151)	1
127	650691	Washer - Flat	1
130	6021A	Screw - Hex Flange Hd.	2
130A	650694A	Screw - Hex Flange Hd.	5
130B	650818	Screw - Special	1
135	35395	Plug - Spark (Champion RJ-19LM or equivalent)	1
150	31672	Spring - Valve	2
151	31673	Cap - Valve Spring	2
169	*27234A	Gasket - Valve Cover	2
170	27666	Body - Valve Cover	1
171	31410	Element - Valve Body	1
172	34146	Cover - Breather	1
173	35350	Tube - Breather	1
174	650783	Screw - Hex Hd.	2
178	29752	Nut & Lockwasher	2
181	650870	Screw - Hex Hd.	1
182	6201	Screw - Hex Hd.	1
183	34583A	Bracket - Choke	1
184	*26756	Gasket - Carburetor	1
185	33691	Pipe - Intake	1
186	32698	Link - Governor to Throttle	1
200	36677	Control Assembly (Incl. Ref. # 203, 204, 206, 209 & 209A)	1
203	31342	Spring - Compression	1
204	651029	Screw - Fil. Hd.	1
206	610973	Terminal Assembly	1
209	650139	Screw	2
209A	30322	Lock Nut	2
215	35440	Knob - Speed Control	1
219	34582	Rod - Choke	1
220	35438	Knob - Choke Control	1
222	28820	Screw - Fil. Hd.	2
223	650664	Screw - Fil Hd.	2
224	*33673A	Gasket - Intake	1


* Indicated Parts included in Gasket Set Ref.#400

ENGINE TECUMSEH MODEL HSSK50–67390S (Cont.)

Ref. No.	Part No.	Description	No. Used
260	35656A	Housing – Blower	1
262	650737	Screw – Hex Hd.	2
267	34212	Bracket – Hold Down	1
268	30200	Screw – Hex Washers Hd.	1
274	*33670A	Gasket – Exhaust	1
275	35771	Muffler (Incl. Ref.# 274)	1
277	650327	Screw – Fil. Hd.	2
285	36467A	Cup – Starter	1
287	650926	Screw – Hex Washer Hd.	2
290	30705	Line – Fuel	1
291	29774	Line – Fuel	1
292	26460	Clamp – Fuel Line	4
295	35857	Valve – Shut–Off	1
298	650665	Screw – Hex Washer Hd.	2
300	35584	Tank Assembly – Fuel (Incl. Ref. #292 & 301)	1
301	36246	Cap – Fuel Tank	1
305	35554	Tube Asm.. – Oil Fill	1
307	35499	"O" Ring	1
308	35539	Clip – Oil Fill	1
310	35556	Dipstick	1
313	34080	Spacer – Flywheel Key	1
328	35062	Ignition Key	2
329	610973	Terminal	1
335	35072	Cover – Carburetor	1
338	650257	Screw – Pan Hd.	2

Ref. No.	Part No.	Description	No. Used
340	36247	Plate – Fuel Tank	1
342	30063	Screw w/Belleville Washer	1
342A	650675	Washer – Flat	1
345	33344	Baffle – Heat	1
350	570682A	Primer Assembly	1
351	32180C	Line – Primer	1
355	590574	Handle – Starter	1
364	33333	Carburetor Cover Bracket	1
365	650735	Screw	1
370A	36261	Decal – Lubrication	1
370B	35282	Control Decal	1
370C	36501	Primer Decal	1
370I	37119	Warning Decal	1
370K	36695	Starter Decal	1
380	640084A	Carburetor (Incl. Ref. #184)	1
390	590742	Starter – Rewind	1
396	33290E	Electric Starter Kit (110 V) (Optional)	1
400	36444	Gasket Set (Incl. Parts Marked *) (26756 (1), 27234A (2), 27272A (1), 27677A (1) 29673 (1), 36443 (1), 33670A (1), 33673A (1)	1
420	730226	Oil – 4 Cycle SAE 5W30 (Quart)	1


* Indicated Parts included in Gasket Set Ref.#400

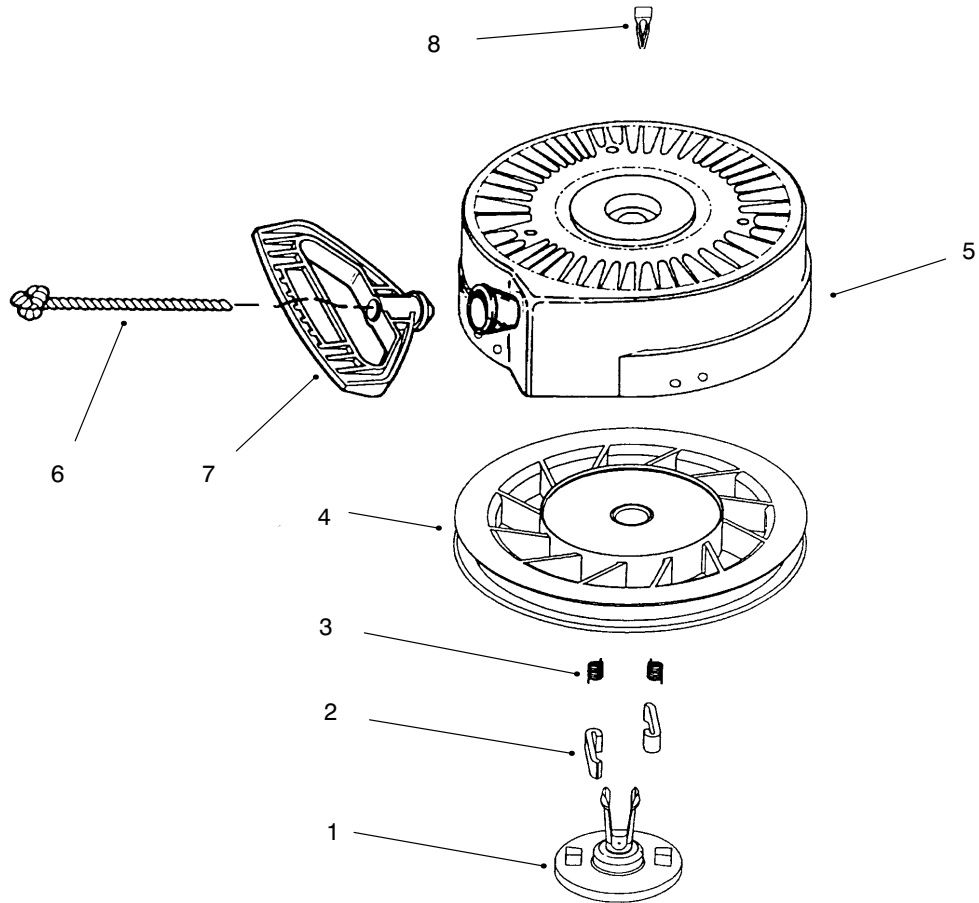

REWIND STARTER NO. 590742

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	590740	Retainer	1	5	590647	Starter Housing Asm.	1
2	590616	Starter Dog	2	6	590535	Starter Rope	1
3	590617	Dog Spring	2	7	590574	Mitten Grip Handle	1
4	590645A	Pulley & Rewind Spring Asm.	1	8	590741	Locking Tab	1

* Not Illustrated

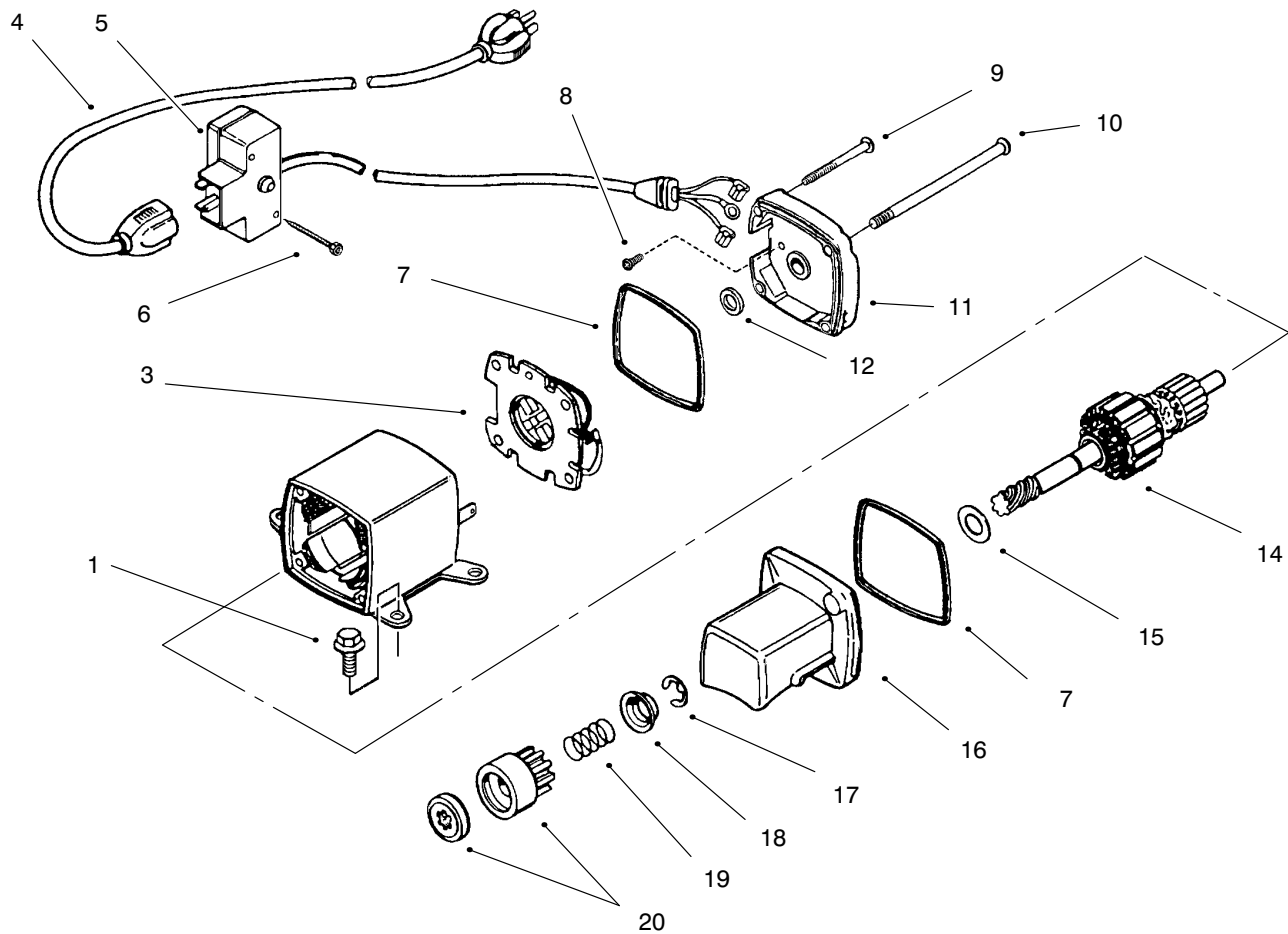


STARTER MOTOR NO. 33290E (Optional)

Ref. No.	Part No.	Description	No. Used
1	650759	Screw – Torx	3
3	35452A	Brush & Spring Card Asm	1
4	32450B	Cord – Extension	1
5	35454	Switch Box Asm (Incl. Ref. # 6)	1
6	650819	Screw	2
7	35450	"O'Ring	2
8	33441	Screw – Ground	1
9	35456	Screw – Ground	1
10	35462	Bolt – Case	2
11	35453	Cap – Commutator End Asm (Incl. Ref. #7)	1

Ref. No.	Part No.	Description	No. Used
12	590500	Washer – Thrust	1
14	35912	Armature	1
15	35911	Washer – Thrust	1
16	35461	Cap – Drive End (Incl. Ref.# 7)	1
17	31749	Ring – Retainer	1
18	33522	Retainer – Spring	1
19	33769	Spring – Anti Drift	1
20	33524	Nut & Gear	1
*	33290E	Starter – Electric (110 Volt)	1
*	730623	Switch Repair Kit	1

* Not Illustrated

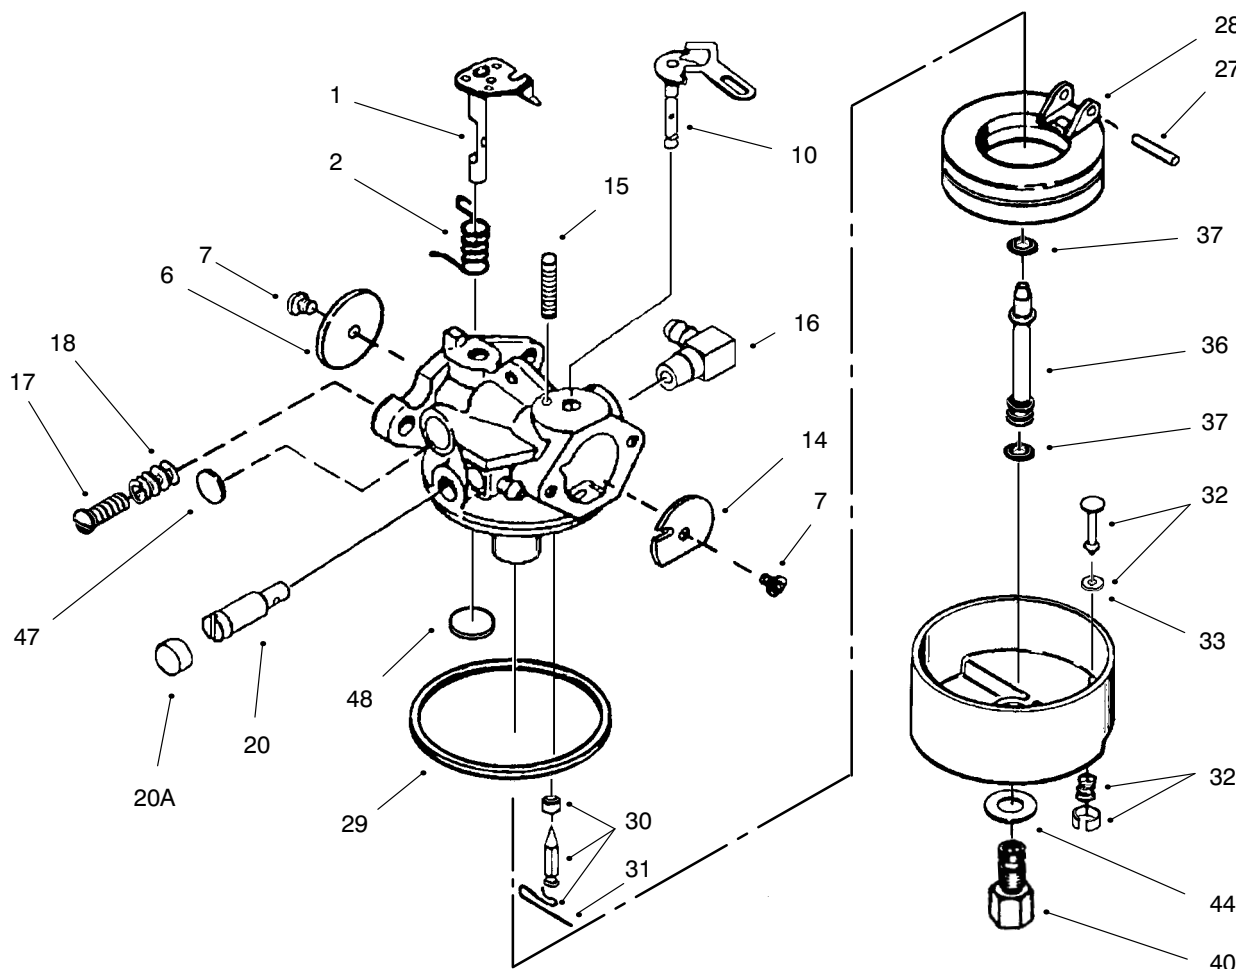

CARBURETOR NO. 640084A

Ref. No.	Part No.	Description	No. Used
1	631615	Shaft & Lever Assembly	1
2	631767	Throttle Shaft & Lever Asm.	1
6	640070	Throttle Shutter	1
7	650506	Screw - Shutter	2
10	632108	Choke Shaft & Throttle Asm.	1
14	631890	Shutter - Choke	1
15	630735	Spring - Choke Positioning	1
16	631807	Fuel Fitting	1
17	651025	Screw - Idle	1
18	630766	Spring - Tension	1
20	640018	Screw - Idle Restrictor	1
20A	640053	Cap - Idle Restrictor Screw	1
25	631951	Float Bowl Asm. (Incl. Ref. # 32, 33)	1
27	631024	Shaft - Float	1

Ref. No.	Part No.	Description	No. Used
28	632019	Float	1
29	631028	ORing - Float Bowl	1
30	631021	Inlet Needle - Seat & Clip (Incl. Ref. # 31)	1
31	631022	Clip - Spring	1
32	27136A	Bowl Drain Asm.	1
33	27554	Gasket - Drain Plunger	1
36	632745	Main Nozzle Tube	1
37	632547	ORing - Main Nozzle Tube	2
40	640131	Nut - High Speed Bowl	1
44	27110	Bowl Nut Washer	1
47	630748	Welch Plug - Idle Mixture Well	1
48	631027	Welch Plug - Atmospheric Vent	1

LAWN-BOY PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
700457	Tire	4 18 2	42-3560	Bolt - Shoulder	3 11 1
3-0737	Washer	1 14 1	43-7290	Screw - Special	3 29 1
3-4244	Idler Pulley	3 6 1	43-7310-03	Traction Engagement Asm.	5 34 1
3-8664	Washer	2 47 1	43-7322-02	Housing-Auger	1 1 1
3-8664	Washer - Thrust	4 28 2	43-7370	Engine Pulley	3 28 1
5-1550	Washer - Thrust	2 34 4	47-4990	Post - Linkage Mounting	7 9 1
5-7170	Gear - Worm	2 46 1	47-4990	Post - Linkage Mounting	6 23 1
5-7180	Gear	2 43 1	49-3040	Pipe - Drain	3 18 1
5-7570	Washer - Thrust	5 24 2	51-0460	Gasket	2 51 1
7-0045	Seal - Oil	2 54 2	52-5561-03	Handle - Right	6 1 1
10-9280	Washer - Thrust	5 9 2	52-5571	Handle - Left	7 15 1
12-3270	Screw - Tapping	4 4 8	52-5590	Link - Upper	6 2 1
12-7739	Bracket - Chute Control	7 21 1	52-5590	Link - Upper	7 2 1
12-8789	Bearing Asm.	2 * 1	52-5600	Pin - Control Lever	7 8 1
14-2449	Gear Case R.H.	2 52 1	52-5600	Pin - Control Lever	6 24 1
14-2459	Gear Case L.H.	2 40 1	53-7570	Spring - Auger Disengage	3 8 1
14-7959	Auger Clutch	3 9 1	53-7670	Decal - Auger Warning	1 3 1
20-1620	Bearing - Friction Wheel	5 4 2	55-8950	Plate - Friction	1 12 2
20-4320	Washer - Rubber	1 13 2	56-2670	Chute - Wire	1 20 1
26-6110	Flange - Bearing Rear	1 8 1	56-2680	Deflector	1 18 1
26-6120	Flange - Bearing Front	1 6 1	63-3450	Bearing - Ball	1 7 1
27-0220	Screw - Self Tapping	2 28 6	63-3510	Decal - Chute Direction	7 20 1
36-4790	Washer - Thrust	5 17 2	66-6790	Mount - Clutch Rod Front	4 7 1
37-6490	Retainer - Chute Ring	2 25 3	66-8010	Spacer - Auger	2 61 2
37-6500	Gear - Sliding	5 2 1	66-8060	Molded Brake Asm.	3 2 1
37-6520	Gear - Axle	4 27 1	74-1350	Shaft - Axle	4 22 1
37-6550	Bearing - Auger	2 35 2	74-1360	Grip - Handle	7 14 1
37-6560	Bushing - Input	2 57 1	74-1360	Grip - Handle	6 22 1
37-6570	Wheel - Friction	5 18 1	88-0550-03	Frame - Friction Plate	4 5 1
37-6760	Shaft - Pivot	5 21 1	88-0560	Hub - Frame	4 9 1
37-6780	Shaft - Hex	5 25 1	88-0850	Pulley & Shaft	4 1 1
37-6802	Shaft - Auger	2 55 1	94-2793	Chute - Discharge	1 21 1
37-6830-02	Cover - Bottom	4 17 6	94-8079	Decal - Discharge	2 22 1
37-6850	Bearing - Axle	4 23 2	94-8098	Decal - Escutcheon	6 11 1
37-6890	Pulley	1 16 1	94-8887-03	Handle - Control	7 12 1
37-6900	Cover - Belt	3 1 1	94-8887-03	Handle - Control	6 21 1
37-6962	Gear Case Asm.	2 * 1	94-8892-02	Blade - Scraper	2 36 1
37-6990-03	Shaft & Impeller	1 4 1	95-2698	Decal - Escutcheon Back	7 5 1
37-8770	Bolt - Shoulder	4 14 2	98-2270-03	Auger - R.H.	1 2 1
37-8770	Bolt - Shoulder	5 14 3	98-2271-03	Auger - L.H.	1 * 1
37-8790	Mount - Quadrant Gear	5 10 1	99-5960	Panel - Escutcheon Ass'y	6 10 1
37-8800	Quadrant - Gear	5 13 1	232-50	Tube	4 21 2
37-8820-03	Selector - Speed	6 17 1	233-21	Knob	6 16 1
37-8870	Spring - Friction Plate	4 25 1	237-87	Seal	2 58 1
37-8880	Spring - Traction Engage	5 6 1	241-131	Rim	4 20 2
37-8900-02	Frame - Traction	4 12 1	252-71	Bearing - Thrust	2 42 2
37-8941-03	Ring - Chute	2 30 1	252-76	Bearing - Needle, Thrust	2 45 1
37-8990	Retainer - Belt	3 23 1	252-80	Washer - Thrust	4 3 1
37-9070	Mount - Clutch Rod Rear	4 11 1	252-80	Washer - Thrust	2 50 1
37-9080	V-Belt - Auger	3 27 1	256-32	Bushing	2 49 1
37-9090	V-Belt - Traction	3 26 1	256-86	Bushing	5 3 1
37-9150	Spring	6 13 1	256-237	Bushing	2 53 2
37-9160	Intermediate Gear & Bushing	5 8 1	256-249	Nyliner	7 22 1
38-0800	Plate - Friction	4 13 1	256-322	Bushing	4 6 1
38-4490	Bracket - Traction	5 30 1	257-3	Washer - Thrust	2 44 1
38-4520	Spring - Compression	5 28 1	281-1	Pipe - Plug	2 41 1
38-7820	Bearing	4 10 1	281-7	Plug - Pipe	3 19 1
39-1230	Bracket - Sliding	5 5 1	283-3	Pin - Clevis	6 5 1
39-1250	Cam - Receiver	5 15 1	321-4	Screw - Hex. Hd.	5 16 1
39-1280-03	Mount - Speed Selector	6 25 1	321-9	Screw - Hex. Head	7 16 4
39-1520	Hub - Friction Wheel Mount	5 19 1	321-11	Screw	2 38 2
39-3060	Rod - Lower Traction	5 27 1	322-2	Screw - Hex. Hd.	5 7 4
39-3080	Clevis	6 6 1	322-2	Screw - Hex. Hd.	4 26 6
39-7570	Rod - Speed Selector	6 3 1	322-2	Screw - Hex. Hd.	7 26 4
40-8130	Spacer - Speed Selector	6 14 1	322-7	Screw	6 26 1
40-8160-02	Skid	2 31 2	322-7	Screw	3 22 4
40-8230	Grip - Rod	7 19 1	322-7	Screw - Hex. Hd.	7 23 1
40-8250	Gear - Worm	7 32 1	323-29	Screw	3 10 1
40-8270	Rod - Chute Control	7 1 1	3210-3	Screw	3 25 1
40-8280	Bracket - Chute Worm	7 31 1	3218-1	Nut - Jam	6 7 1
40-8350	Screw - Shoulder	5 32 1	3229-11	Bolt - Carriage	6 15 2
40-9680	Spacer	5 31 1	3230-1	Bolt - Carriage	2 60 9

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3230-18	Bolt - Carriage	1 5 6	3296-29	Nut - Lock	7 24 2
3230-22	Bolt - Carriage	1 19 2	3296-29	Nut - Lock	1 9 13
3230-22	Bolt - Carriage	7 29 1	3296-42	Nut - Lock	7 17 4
3234-13	Screw - Hex. Flange Hd.	7 13 1	3296-42	Nut - Lock	5 33 1
3234-13	Screw - Hex. Flange Hd.	6 18 1	3296-42	Nut - Lock	2 37 2
3242-4	Screw - Set	1 17 2	3296-48	Nut - Lock	5 20 1
3255-8	Washer - Lock Ext. Tooth	3 24 1	3296-56	Nut - Lock	3 7 1
3256-23	Washer	6 9 2	3296-59	Nut - Lock	3 3 1
3256-23	Washer	7 10 1	32115-5	Retainer - Nut	6 8 1
3256-23	Washer	2 23 3	32120-72	Ring - Retaining	2 48 1
3256-23	Washer - Flat	3 21 5	32121-31	Pin - Roll	4 24 2
3256-24	Washer	7 11 1	32121-45	Pin - Roll	5 22 2
3256-24	Washer	6 20 1	32128-13	Nut - Flange Lock	6 12 1
3256-24	Washer - Flat	3 4 1	32128-20	Nut - Flange	2 32 4
3256-68	Washer - Flat	1 11 2	32128-32	Nut - Flange	5 29 1
3257-23	Key	1 15 1	32128-33	Nut - Flange	5 26 2
3257-23	Key - Woodruff	2 59 1	32128-33	Nut - Flange Lock	6 27 2
3257-24	Key	5 23 1	32144-4	Screw - Self Tap. Hex. Hd.	4 16 6
3257-33	Key - Woodruff	2 39 1	32144-4	Screw - Self Tapping	3 17 3
3272-4	Pin - Cotter	6 4 3	32144-41	Screw - Self Tapping	2 56 8
3290-196	Retainer - Nut	7 28 4	32144-70	Screw - Self Tap. Hex. Hd.	5 1 4
3290-238	Washer - Pyramidal	7 30 1	32144-70	Screw - Self Tap. Hex. Hd.	4 8 5
3290-243	Pin - Klik	4 19 2	32144-70	Screw - Self Tapping	2 26 4
3290-320	Nut - Push	7 18 2	32151-36	Ring - Retaining	2 33 2
3290-320	Nut - Push On	3 5 1	32151-61	Ring - Retaining	5 35 1
3290-326	Pushnut	2 29 1	32151-73	Ring - Clip	6 19 1
3290-378	Cable Tie	6 * 1	32151-73	Ring Clip	7 33 1
3290-378	Cable Tie	7 * 1	32151-103	Ring - Snap	4 2 1
3290-456	Washer - Belleville	7 27 4	OPTIONAL EQUIPMENT		
3290-456	Washer - Lock	1 10 2	110 Vac Electric Starter Kit	38036	
3296-16	Nut - Lock	5 12 1	Tire Chain Kit	56-2700	
3296-29	Nut - Lock	5 11 4	Drift Breaker Kit	37-7022	
3296-29	Nut - Lock	4 15 6			
3296-29	Nut - Lock	3 20 4			

[illegible]