



**ProLine**  
**12.5 HP / 36" Mid Size Fixed**  
**Deck Kawasaki**

**Model No. 30193 – 990251 & Up**

---

**Parts Catalog**

## ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

## Contents

| Description                                | Page | Description                             | Page  |
|--------------------------------------------|------|-----------------------------------------|-------|
| Engine & Fuel Tank .....                   | 1    | Engine Kawasaki Model                   |       |
| Transmission, Pulleys And Drive Belt ..... | 2–3  | FB460V Type MS14 .....                  | 9–20  |
| Wheel, Brakes And Traction Belts .....     | 4    | Peerless Transmission Model 700–070A .. | 21–22 |
| Handle Asm .....                           | 5    | Toro Part Number Index .....            | 23–26 |
| Deck, Cover and Deck Drive Belts .....     | 6    | Maintenance .....                       | 27–28 |
| Deck, Drive Pulleys & Caster Wheels .....  | 7    |                                         |       |
| Spindles And Blades .....                  | 8    |                                         |       |

**Note:**

## Accessories

| Description          | Model / Parts No. | Description | Model / Parts No. |
|----------------------|-------------------|-------------|-------------------|
| Recycler Kit .....   | Model No. 30142   |             |                   |
| Bagging Kit .....    | Model No. 30198   |             |                   |
| Low Sail Blade ..... | Part No. E633485  |             |                   |

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation | Meaning                | Abbreviation | Meaning                           |
|--------------|------------------------|--------------|-----------------------------------|
| AR .....     | as required            | HWHTF .....  | hex washer head<br>thread forming |
| ASM .....    | assembly               | INC .....    | incorporated                      |
| CARR .....   | carriage               | LH .....     | left hand                         |
| DEG .....    | degrees                | PH .....     | pan head                          |
| FH .....     | flat head              | PPH .....    | Phillips pan head                 |
| GA .....     | gauge                  | PTO .....    | power take off                    |
| HF .....     | hex flange             | RH .....     | right hand                        |
| HFV .....    | hex flange washer      | SFH .....    | slotted fillister head            |
| HH .....     | hex head               | SH .....     | square head                       |
| HHF .....    | hex head flange        | SHWH .....   | slotted hex washer head           |
| HHST .....   | hex head self tapping  | SPH .....    | slotted pan head                  |
| HJ .....     | hex jam                | STD .....    | standard                          |
| HOC .....    | height-of-cut          | TAP .....    | self tapping                      |
| HS .....     | hex socket             | TH .....     | truss head                        |
| HSBH .....   | hex socket button head | TTH .....    | Torx truss head                   |
| HSFH .....   | hex socket flat head   | WH .....     | wing head                         |
| HS .....     | hex socket head        |              |                                   |
| HWH .....    | hex washer head        |              |                                   |

# Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

## Service Assemblies

Parts within service assemblies have reference numbers in the form  $X:Y$ .  $X$  is the reference number of the service assembly and  $Y$  is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

## Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form  $X (Y)$ .  $X$  is the reference number.  $Y$  in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

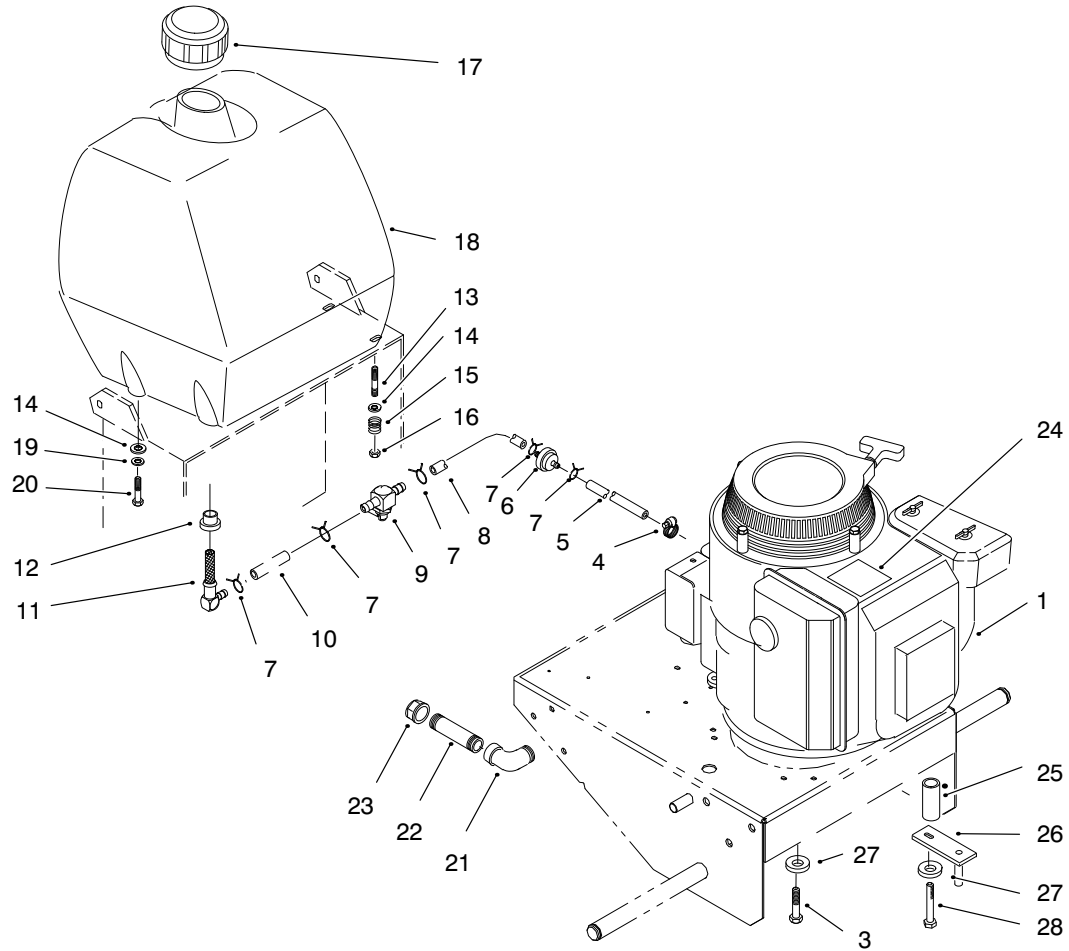


Sheet No.: 2

# Engine & Fuel Tank

| Ref. No. | Part No.  | Qty. | Description        |
|----------|-----------|------|--------------------|
| 1        | E303476   | 1    | Engine             |
| 3        | 33114-025 | 2    | Screw-HH           |
| 4        | E303308   | 1    | Clamp              |
| 5        | E303022   | 1    | Fuel Line-8.5 Inch |
| 6        | E303197   | 1    | Filter             |
| 7        | E303077   | 5    | Clamp              |
| 8        | E603776   | 1    | Fuel-Line          |
| 9        | E603770   | 1    | Valve-Gas          |
| 10       | E603955   | 1    | Fuel-Line          |
| 11       | E543277   | 1    | Elbow              |
| 12       | E513645   | 1    | Bushing            |
| 13       | E633023   | 2    | Stud               |
| 14       | 3256-2    | 4    | Washer-Flat        |
| 15       | E633349   | 2    | Spring-Fuel Tank   |
| 16       | 3296-29   | 2    | Nut-Lock           |
| 17       | E513508   | 1    | Cap-Fuel Tank      |
| 18       | E323551   | 1    | Tank               |
| 19       | 3253-4    | 2    | Washer-Lock        |
| 20       | 322-3     | 2    | Screw-HH           |
| 21       | E303431   | 1    | Elbow              |
| 22       | E323326   | 1    | Nipple             |
| 23       | E543233   | 1    | Cap                |
| 24       | 63-8440   | 1    | Decal-Hot Surface  |
| 25       | E323228   | 2    | Spacer             |
| 26       | E322110   | 2    | Guide-Belt         |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
| 27       | E303334  | 4    | Washer-Lock |
| 28       | E809065  | 2    | Screw-HH    |

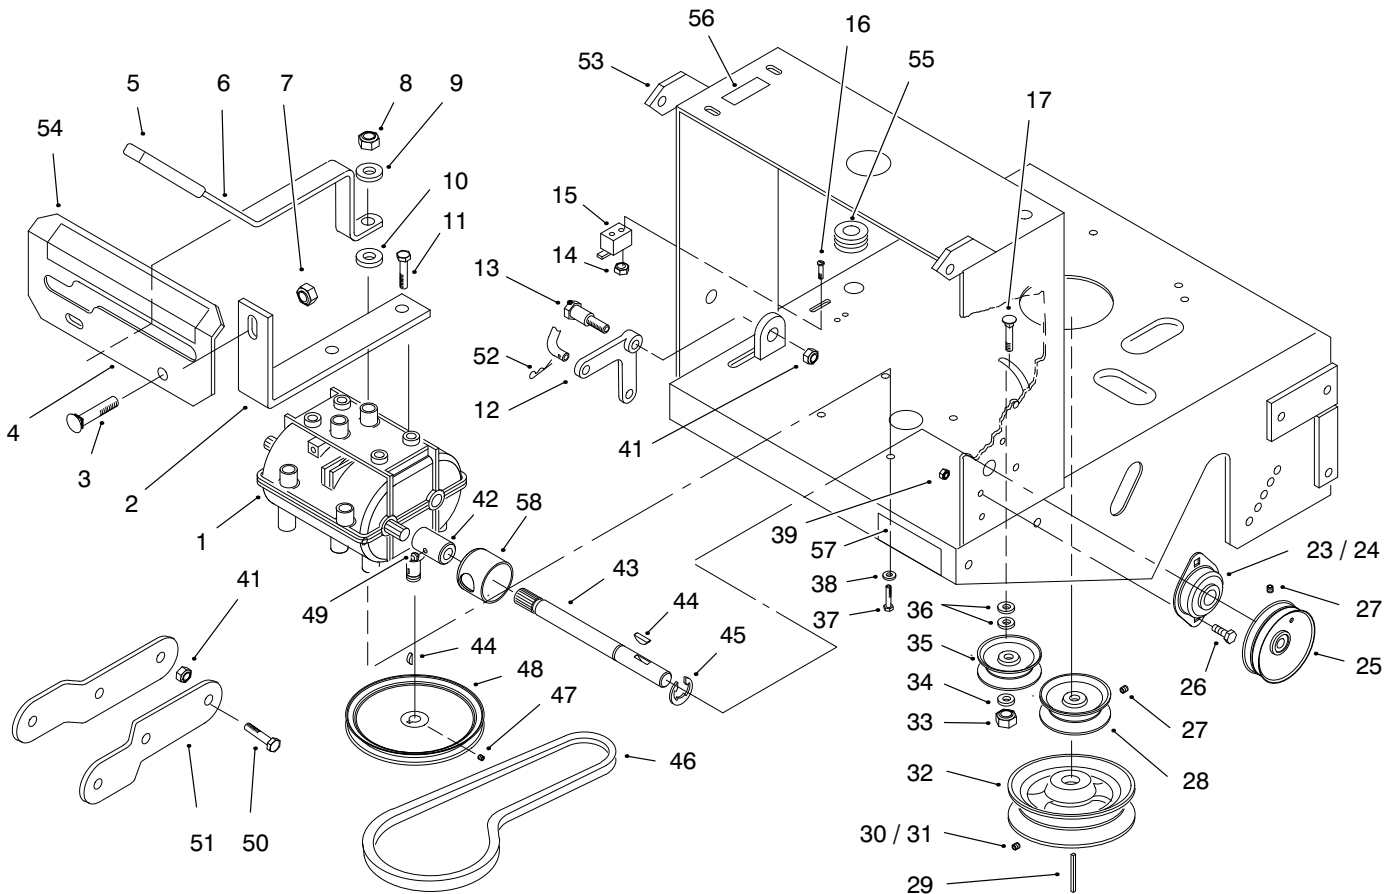


Sheet No.: 3

## Transmission, Pulleys And Drive Belt

| Ref. No. | Part No. | Qty. | Description                                      |
|----------|----------|------|--------------------------------------------------|
| 1        |          | 1    | Transmission—Peerless Obtain Parts From Peerless |
| 2        | E323389  | 2    | Leg—Shifter Lever                                |
| 3        | 3230-1   | 21   | Bolt—CARR                                        |
| 4        | E323387  | 1    | Shifter Plate                                    |
| 5        | E303020  | 1    | Grip                                             |
| 6        | E323570  | 1    | Lever—Shift                                      |
| 7        | 32128-20 | 2    | Nut—Lock                                         |
| 8        | 3296-6   | 1    | Nut—Lock                                         |
| 9        | E303327  | 1    | Washer—Lock                                      |
| 10       | E323379  | 1    | Washer                                           |
| 11       | 32104-32 | 4    | Screw—HH                                         |
| 12       | E303186  | 1    | Bell Crank                                       |
| 13       | E603403  | 1    | Bolt—Shoulder                                    |
| 14       | 32146-18 | 2    | Nut—Lock                                         |
| 15       | E513152  | 1    | Switch—Seat                                      |
| 16       | E803028  | 2    | Screw                                            |
| 17       | E807511  | 1    | Bolt—CARR                                        |
| 23       | E323252  | 2    | Bearing                                          |
| 24       | E323254  | 2    | Flange                                           |
| 25       | E323257  | 2    | Sheave                                           |
| 26       | 321-3    | 4    | Screw—HH                                         |
| 27       | E803310  | 3    | Screw—Set                                        |
| 28       | E323256  | 1    | Sheave                                           |
| 29       | E807264  | 1    | Key                                              |
| 30       | 3242-4   | 1    | Screw—Set                                        |

| Ref. No. | Part No. | Qty. | Description         |
|----------|----------|------|---------------------|
| 31       | 3242-6   | 1    | Screw—Sqh Set       |
| 32       | E303498  | 1    | Pulley              |
| 33       | 32146-2  | 1    | Nut—Hex Lock        |
| 34       | 3256-24  | 1    | Washer—Flat         |
| 35       | E323285  | 1    | Idle Pulley         |
| 36       | 3256-25  | 1    | Washer—Flat         |
| 37       | 322-3    | 4    | Screw—HH            |
| 38       | 3253-4   | 4    | Washer—Lock         |
| 39       | 32146-17 | 4    | Nut—Lock            |
| 41       | 32128-43 | 5    | Nut—Flange          |
| 42       | E323680  | 2    | Coupling            |
| 43       | E323502  | 2    | Output Shaft        |
| 44       | E807009  | 3    | Key                 |
| 45       | E808523  | 2    | Ring—Retaining      |
| 46       | E323630  | 1    | Belt—Trans Drive    |
| 47       | E803293  | 2    | Screw—Set           |
| 48       | E323278  | 1    | Sheave              |
| 49       | 302-58   | 2    | Fitting—Grease      |
| 50       | 323-6    | 4    | Screw—HH            |
| 51       | E323318  | 2    | Hitch Bracket       |
| 52       | 3290-307 | 1    | Pin—Cotter          |
| 53       | E322201  | 1    | Deck—Engine         |
| 54       | E323560  | 1    | Decal—Ground Speed  |
| 55       | E543296  | 1    | Grommet—Fuel Line   |
| 56       | 95-2814  | 1    | Decal—Fuel Shut—Off |

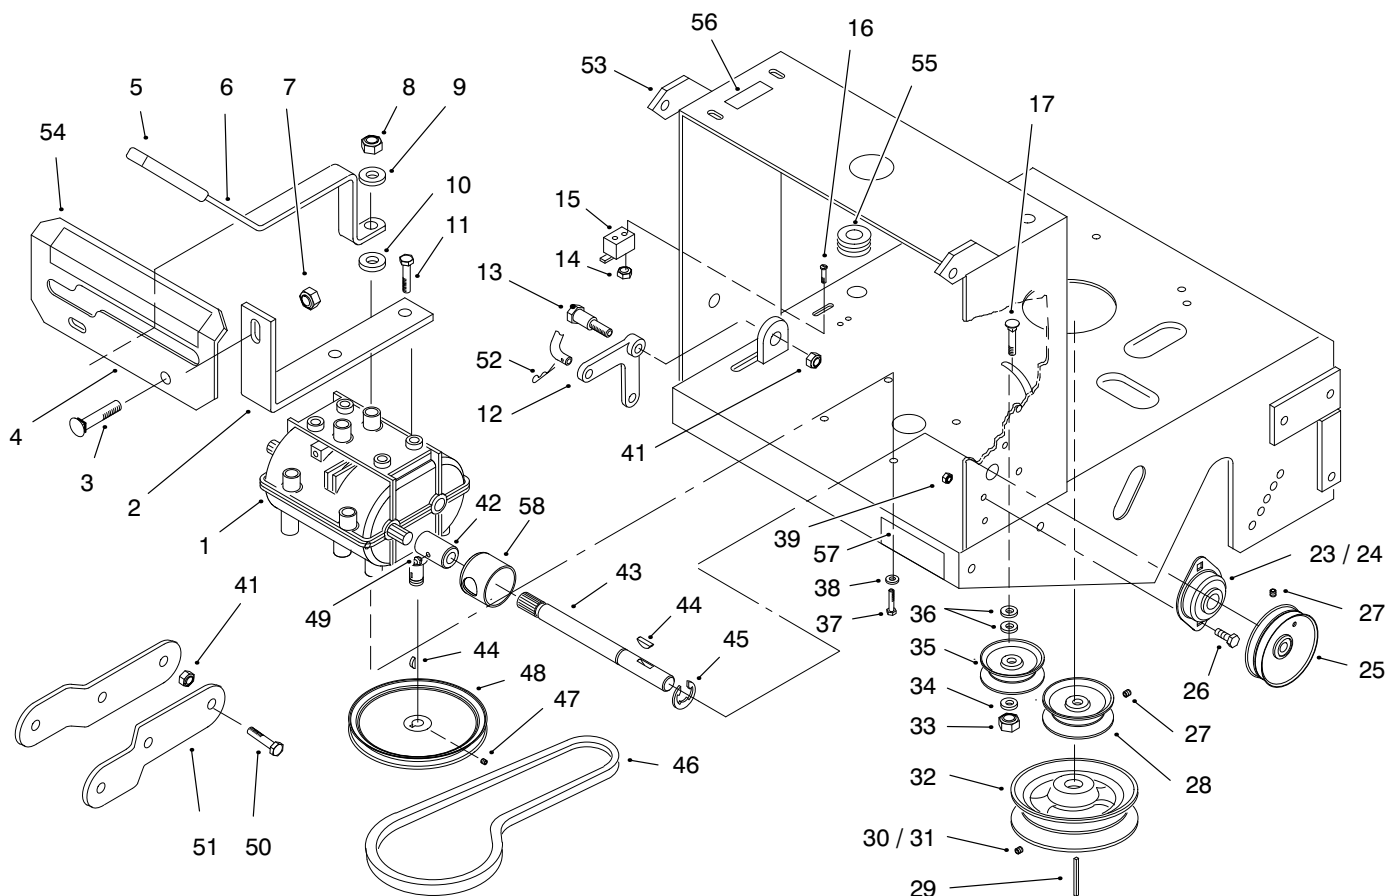


Sheet No.: 3

## Transmission, Pulleys And Drive Belt

| Ref. No. | Part No. | Qty. | Description   |
|----------|----------|------|---------------|
| 57       | E323562  | 1    | Decal—Caution |
| 58       | 51-4220  | 2    | Guard—Coupler |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

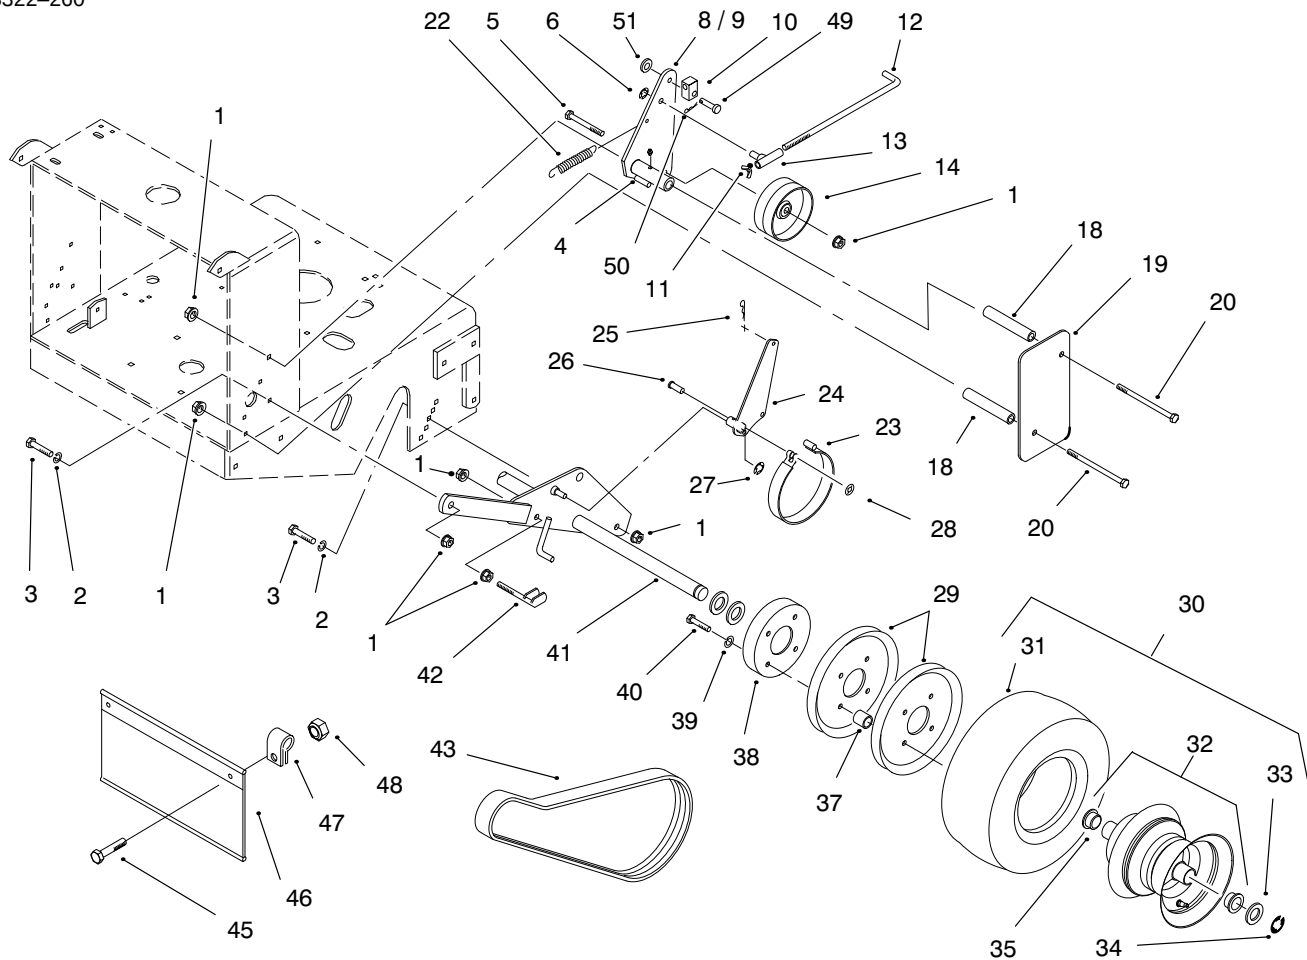


Sheet No.: 4

## Wheel, Brakes And Traction Belts

| Ref. No. | Part No. | Qty. | Description       |
|----------|----------|------|-------------------|
| 1        | 32128-43 | 14   | Nut-Flange        |
| 2        | E303327  | 4    | Washer-Lock       |
| 3        | 323-6    | 4    | Screw-HH          |
| 4        | 302-58   | 2    | Fitting-Grease    |
| 5        | 323-11   | 2    | Screw             |
| 6        | E808522  | 2    | Ring              |
| 8        | E322205  | 1    | Idler Arm ASM LH  |
| 9        | E322206  | 1    | Idler Arm ASM RH  |
| 10       | 74-0521  | 2    | Rod-Fitting       |
| 11       | E513959  | 2    | Wingnut           |
| 12       | E323296  | 2    | Brake Rod         |
| 13       | E322125  | 2    | Swivel            |
| 14       | E323634  | 2    | Idler-Wheel Drive |
| 18       | E323694  | 4    | Spacer            |
| 19       | E323632  | 2    | Shield            |
| 20       | 323-16   | 4    | Screw-HH          |
| 22       | E323574  | 2    | Spring-Extension  |
| 23       | E323595  | 2    | Band-Brake        |
| 24       | E322209  | 2    | Brake Arm ASM     |
| 25       | 3290-307 | 2    | Pin-Cotter        |
| 26       | E323307  | 4    | Pin               |
| 27       | E808501  | 2    | Ring-Retaining    |
| 28       | E803051  | 4    | Nut               |
| 29       | E323253  | 4    | Sheave            |
| 30       |          | 2    | Wheel/Tire ASM    |
| 31       | E303125  | 2    | Tire              |

| Ref. No. | Part No. | Qty. | Description          |
|----------|----------|------|----------------------|
| 32       | E323360  | 2    | Wheel ASM w/Bearings |
| 33       | E523157  | A/R  | Spacer-14 GA         |
| 33       | E543436  | A/R  | Spacer-18 GA         |
| 34       | E808519  | 2    | Ring-Retaining       |
| 35       | E323329  | 4    | Bearing              |
| 37       | E323260  | 8    | Spacer               |
| 38       | E323261  | 2    | Drum-Brake           |
| 39       | 3253-4   | 8    | Washer-Lock          |
| 40       | 322-6    | 8    | Screw-HH             |
| 41       | E322212  | 1    | Axle ASM             |
| 42       | E412358  | 2    | Scraper              |
| 43       | E323631  | 2    | Belt-Drive           |
| 45       | 3210-3   | 2    | Screw-HH             |
| 46       | E323607  | 1    | Shield-Trailing      |
| 47       | 2412-104 | 2    | Clamp                |
| 48       | 32146-4  | 2    | Nut-Lock             |
| 49       | 283-6    | 2    | Pin-Clevis           |
| 50       | 3290-307 | 2    | Pin-Cotter           |
| 51       | 3256-23  | 2    | Washer-Flat          |

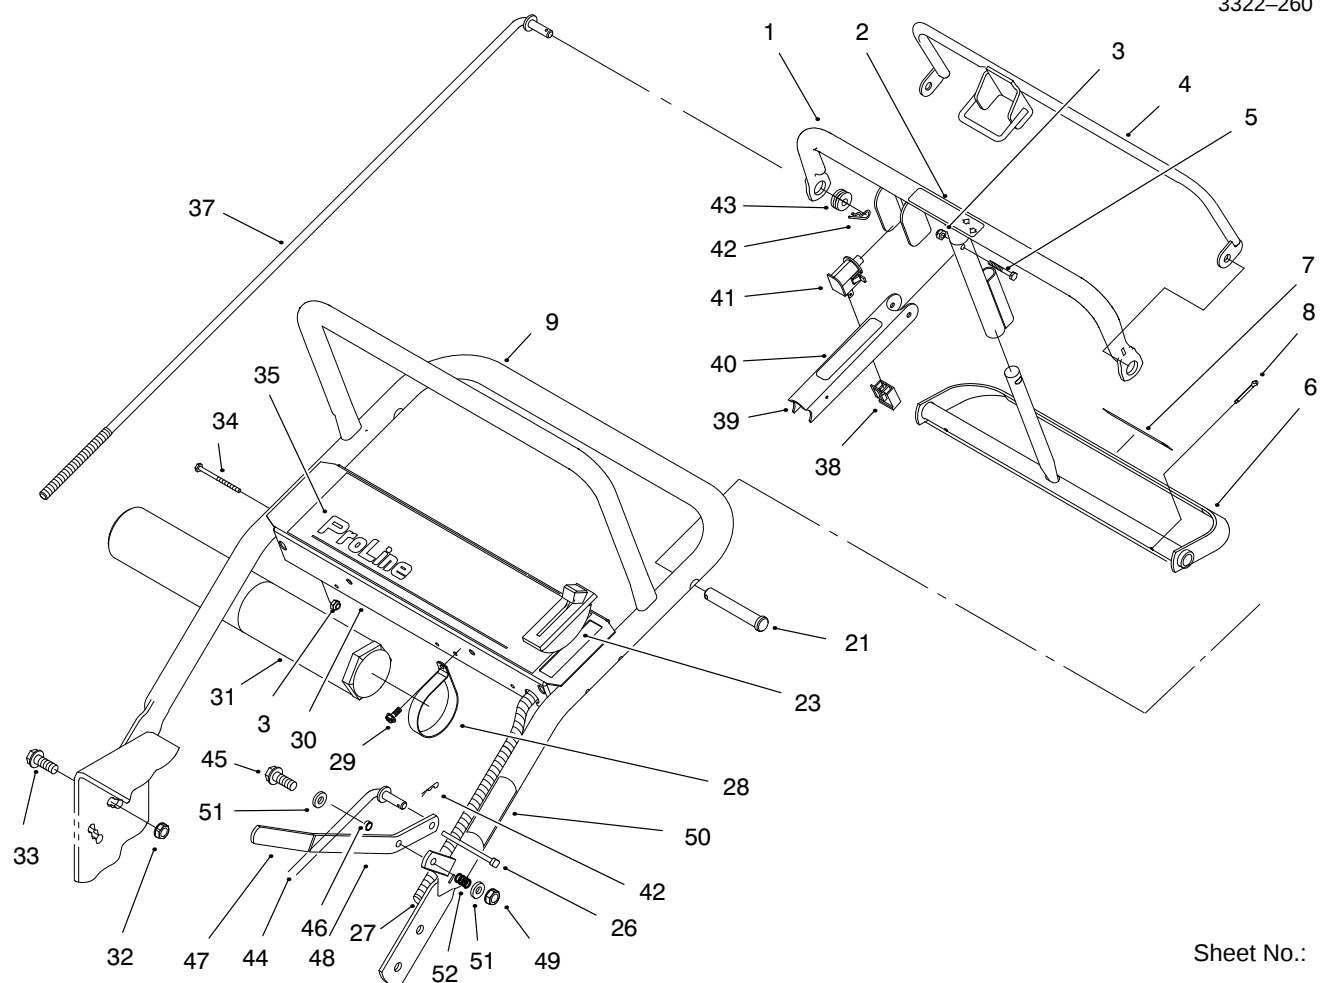


Sheet No.: 5

## Handle Asm

| Ref. No. | Part No. | Qty. | Description              |
|----------|----------|------|--------------------------|
| 1        | E322215  | 1    | Control Bar              |
| 2        | 82-2290  | 1    | Decal-Control Bar        |
| 3        | 3296-2   | 5    | Nut-Lock                 |
| 4        | E322208  | 1    | Bail ASM                 |
| 5        | 32105-1  | 1    | Screw-HH                 |
| 6        | 99-8501  | 1    | Pivot-Control            |
| 7        | 82-2280  | 1    | Decal-Reverse            |
| 8        | 3272-11  | 2    | Pin-Cotter               |
| 9        | E322216  | 1    | Upper Handle ASM         |
| 21       | 283-55   | 2    | Pin-Clevis               |
| 23       | E323637  | 1    | Throttle Control         |
| 26       | 3290-378 | 2    | Tie-Cable                |
| 27       | E323567  | 1    | Wire<br>Harness-Kawasaki |
| 28       | 2412-120 | 2    | Clamp-R                  |
| 29       | 32104-76 | 2    | Screw-Self TAP           |
| 30       | E304259  | 1    | Control Panel ASM        |
| 31       | 74-0720  | 1    | Tube-Manual              |
| 32       | 32128-21 | 4    | Nut-HF                   |
| 33       | 3234-11  | 4    | Screw-HHF                |
| 34       | 32105-14 | 4    | Screw-HH                 |
| 35       | E323564  | 1    | Decal-Panel              |
| 37       | E323569  | 2    | Rod-Control              |
| 38       | 218-595  | 1    | Connector-Body           |
| 39       | E323614  | 1    | Lever-Parking Brake      |
| 40       | E323558  | 1    | Decal-Parking Brake      |

| Ref. No. | Part No. | Qty. | Description               |
|----------|----------|------|---------------------------|
| 41       | 740275   | 1    | Switch-Bail               |
| 42       | 3290-307 | 3    | Pin-Cotter                |
| 43       | 237-141  | 2    | Grommet                   |
| 44       | E323576  | 1    | Linkage-Blade Drive       |
| 45       | 323-10   | 1    | Screw-HH                  |
| 46       | 99-8509  | 1    | Spacer                    |
| 47       | E303020  | 1    | Grip                      |
| 48       | E323573  | 1    | Lever-Blade<br>Engagement |
| 49       | 32146-2  | 1    | Nut-Hex Lock              |
| 50       | E323563  | 1    | Decal-Blade<br>Engagement |
| 51       | 3256-24  | 2    | Washer-Flat               |
| 52       | E303160  | 1    | Spring-Compression        |

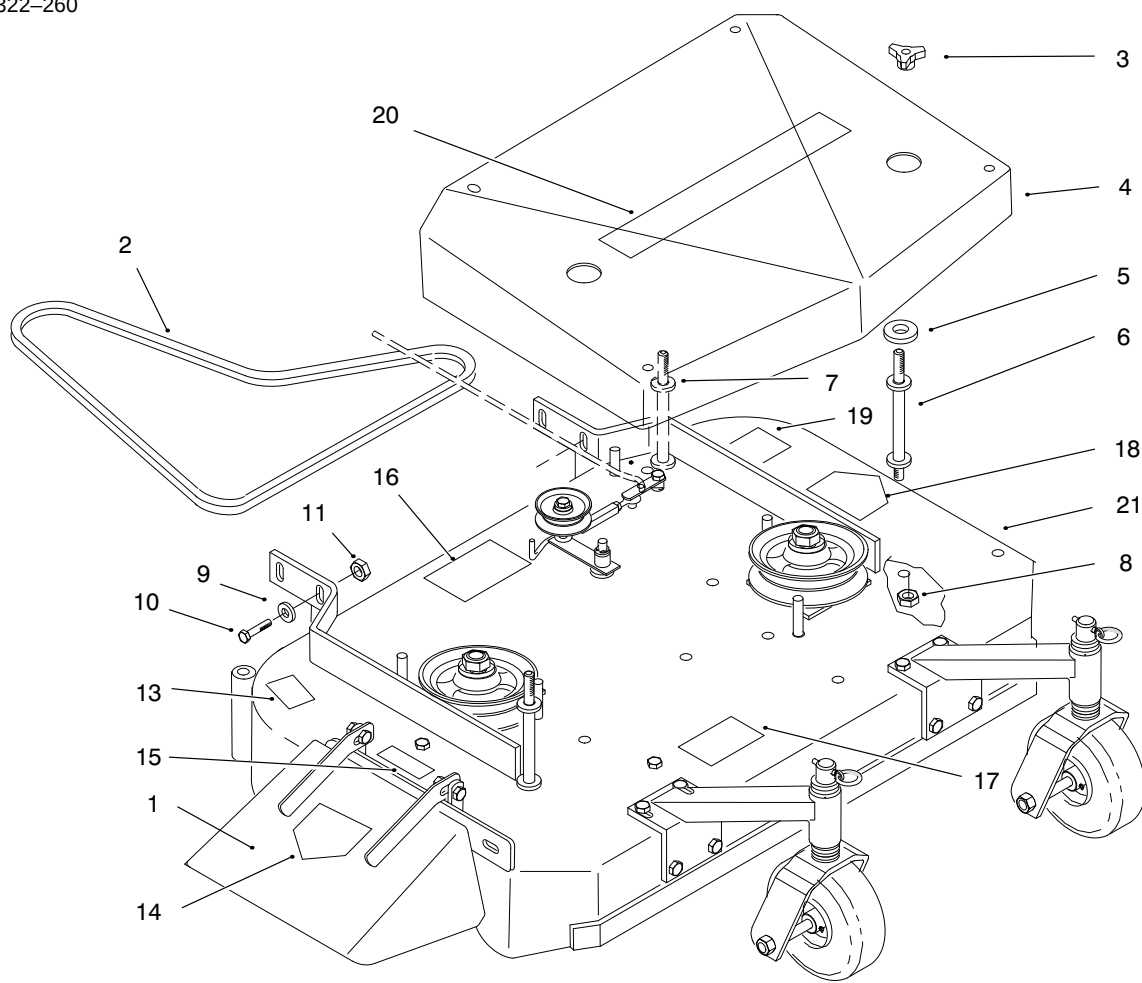


Sheet No.: 6

## Deck, Cover and Deck Drive Belts

| Ref. No. | Part No. | Qty. | Description                |
|----------|----------|------|----------------------------|
| 1        | E304256  | 1    | Discharge Chute<br>w/Decal |
| 2        | E323629  | 1    | Belt-Blade Drive           |
| 3        | E323385  | 4    | Knob                       |
| 4        | E304258  | 1    | Belt Cover w/Decal         |
| 5        | E323417  | 4    | Washer                     |
| 6        | E303537  | 2    | Stud-Belt<br>Shield(Short) |
| 7        | E303536  | 2    | Stud-Belt<br>Shield(Long)  |
| 8        | 32128-20 | 4    | Nut-Lock                   |
| 9        | E303327  | 6    | Washer-Lock                |
| 10       | 323-7    | 6    | Screw-HH                   |
| 11       | 32128-43 | 6    | Nut-Flange                 |
| 13       | 98-3269  | 1    | Decal-Made In USA          |
| 14       | 93-1122  | 1    | Decal-Danger               |
| 15       | 67-5360  | 1    | Decal-Danger               |
| 16       | E323555  | 1    | Decal-Belt Routing         |
| 17       | 66-1340  | 1    | Decal-Discharge            |
| 18       | 43-8480  | 1    | Decal-Danger               |
| 19       | E323659  | 1    | Decal-Torque               |
| 20       | E323566  | 1    | Decal-Proline 36           |
| 21       | E304254  | 1    | Deck / Decal ASM           |


| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

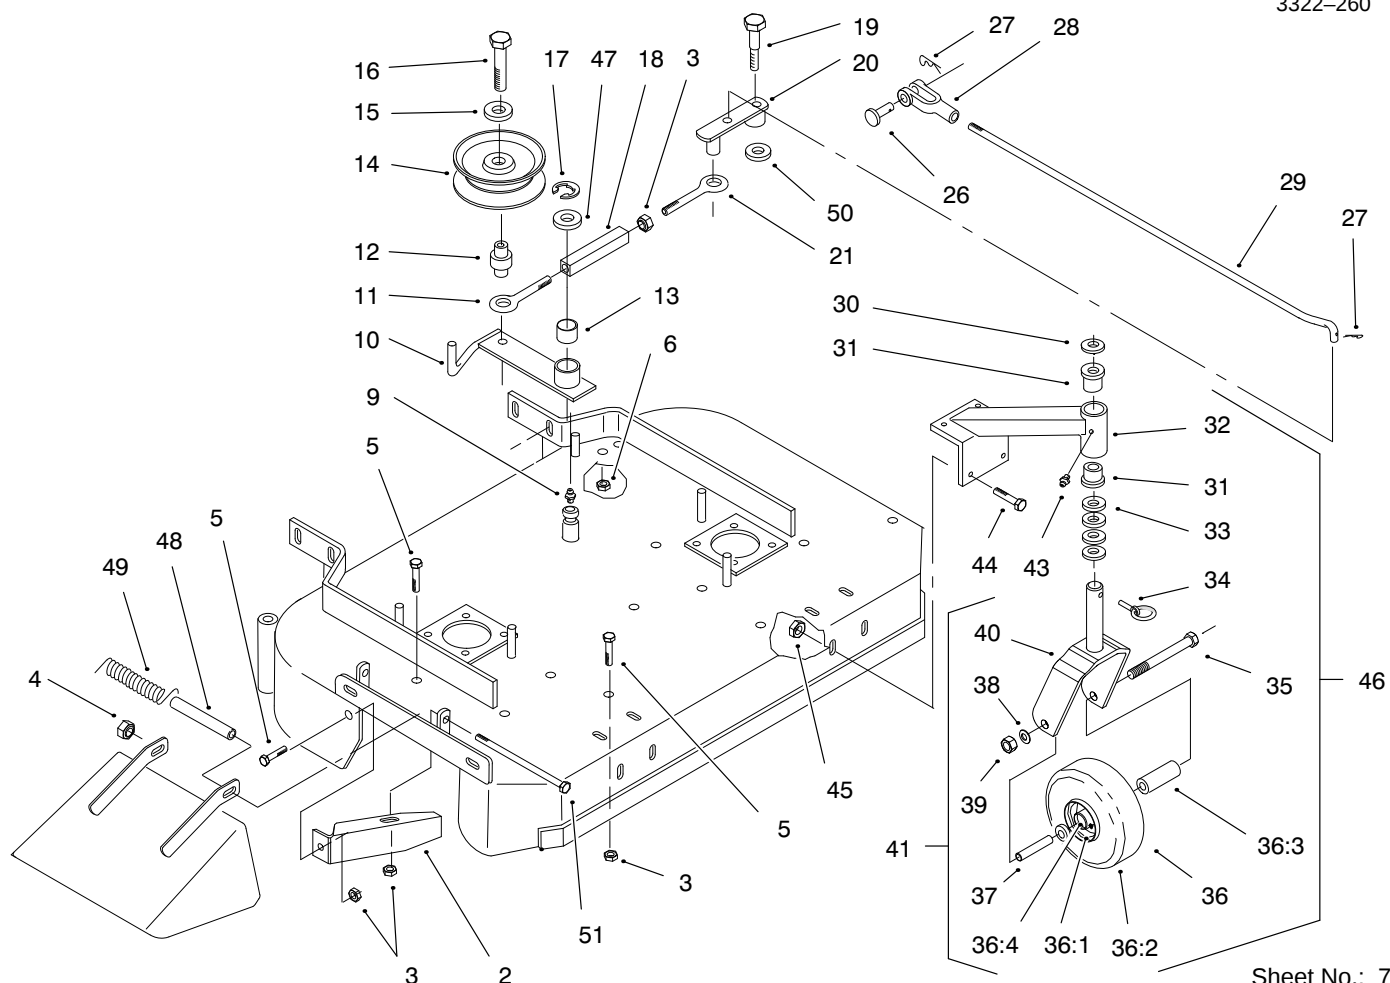

## Deck, Drive Pulleys & Caster Wheels

| Ref. No. | Part No. | Qty. | Description              |
|----------|----------|------|--------------------------|
| 2        | E302189  | 1    | Baffle                   |
| 3        | 32128-20 | 9    | Nut-Lock                 |
| 4        | 3296-29  | 1    | Nut-Lock                 |
| 5        | E800270  | 8    | Screw-HH                 |
| 6        | 32128-20 | 1    | Nut-Lock                 |
| 9        | 302-58   | 1    | Fitting-Grease           |
| 10       | E302129  | 1    | Engagement Arm w/Bushing |
| 11       | E303348  | 1    | Eye Bolt                 |
| 12       | E303434  | 1    | Bushing                  |
| 13       | E303144  | 1    | Bearing                  |
| 14       | E603843  | 1    | Pulley-Idler             |
| 15       | 3256-24  | 1    | Washer-Flat              |
| 16       | E803003  | 1    | Bolt-Whizlock            |
| 17       | E808505  | 1    | Ring-Retaining           |
| 18       | E303236  | 1    | Turnbuckle Body          |
| 19       | E809084  | 1    | Bolt-Shoulder            |
| 20       | E322211  | 1    | Assist Arm ASM           |
| 21       | E303238  | 1    | Eye Bolt                 |
| 26       | E808280  | 1    | Pin-Clevis               |
| 27       | 3290-307 | 2    | Pin-Cotter               |
| 28       | E303105  | 1    | Yoke                     |
| 29       | E323303  | 1    | Linkage-Assist Arm       |
| 30       | E513338  | 2    | Washer                   |
| 31       | E303514  | 4    | Bearing-Flanged          |
| 32       | E302194  | 2    | Support-Caster           |

| Ref. No. | Part No. | Qty. | Description      |
|----------|----------|------|------------------|
| 33       | E303314  | 8    | Spacer           |
| 34       | E809020  | 2    | Pin              |
| 35       | 325-20   | 2    | Screw-HH         |
| 36       |          | 2    | Tire/Wheel ASM   |
| 36:1     | E513807  | 2    | Wheel Hub ASM    |
| 36:2     | E513808  | 2    | Tire             |
| 36:3     | E513809  | 2    | Bearing-Roller   |
| 36:4     | E513810  | 4    | Bushing          |
| 37       | E513547  | 2    | Spacer           |
| 38       | 3253-7   | 2    | Washer-Lock      |
| 39       | 3217-9   | 2    | Nut-HH           |
| 40       | E322145  | 2    | Fork             |
| 41       | E322154  | 2    | Caster Wheel ASM |
| 43       | E811001  | 2    | Zerk             |
| 44       | 323-4    | 8    | Screw-HH         |
| 45       | 32128-43 | 8    | Nut-Flange       |
| 46       | E322153  | 2    | Caster/Mount ASM |
| 47       | E303352  | 1    | Washer-Spindle   |
| 48       | E323572  | 1    | Spacer           |
| 49       | E323575  | 1    | Spring-Deflector |
| 50       | 80-4980  | 1    | Washer           |
| 51       | E800289  | 1    | Screw-HH         |

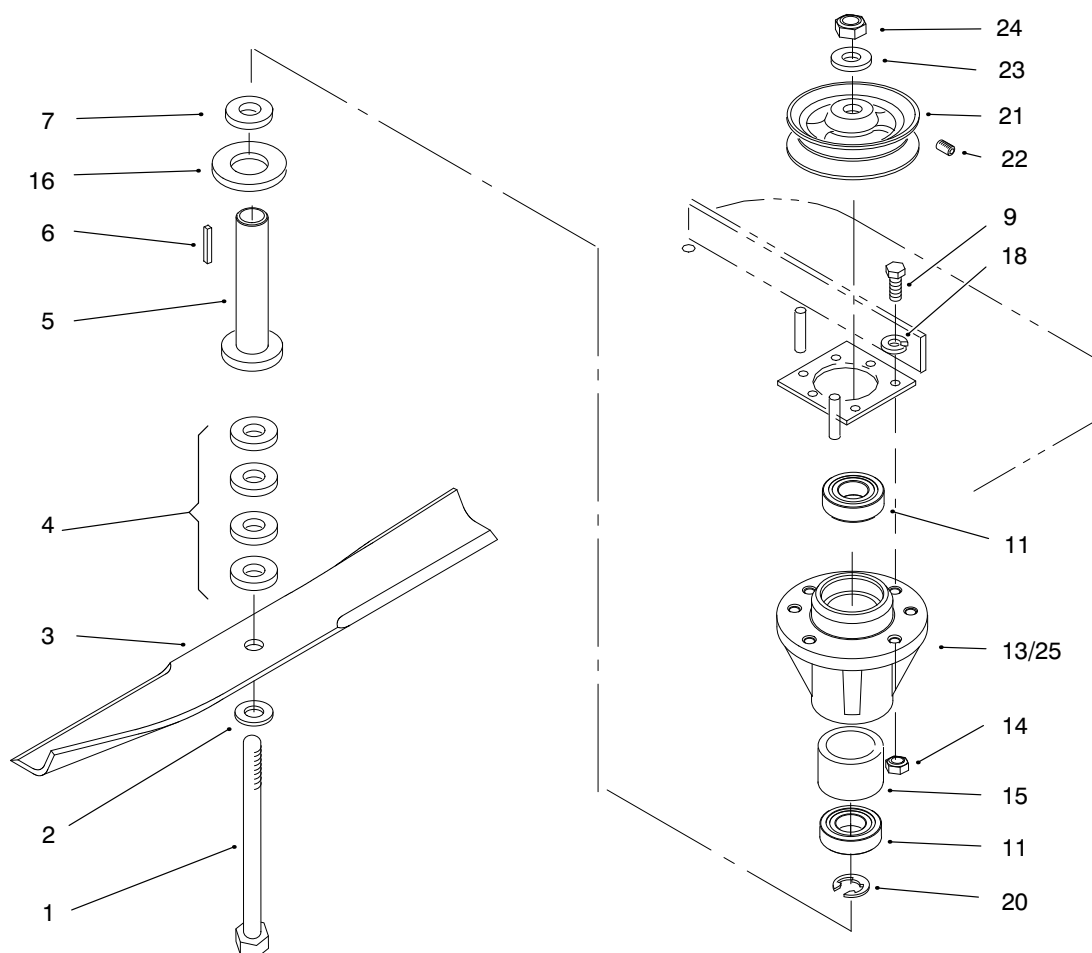


Sheet No.: 8

## Spindles And Blades

| Ref. No. | Part No. | Qty. | Description        |
|----------|----------|------|--------------------|
| 1        | E800861  | 2    | Screw—HH           |
| 2        | E513208  | 2    | Washer—Lock        |
| 3        | E633482  | 2    | Blade              |
| 3        | E633485  | 2    | Blade—Low Lift     |
| 4        | E323539  | 8    | Spacer             |
| 5        | E323529  | 2    | Tube Spindle Short |
| 6        | E807267  | 2    | Key                |
| 7        | E323533  | 2    | Spacer             |
| 9        | 322—6    | 8    | Screw—HH           |
| 11       | E513016  | 4    | Bearing            |
| 13       | E634619  | 2    | Housing—Spindle    |
| 14       | 32128—20 | 8    | Nut—Lock           |
| 15       | E323528  | 2    | Spacer             |
| 16       | E633573  | 2    | Guard              |
| 18       | E303334  | 8    | Washer—Lock        |
| 20       | E808502  | 2    | Ring—Retaining     |
| 21       | E303558  | 2    | Pulley             |
| 22       | E803310  | 2    | Screw—Set          |
| 23       | E323399  | 2    | Spacer             |
| 24       | 3219—6   | 2    | Nut—Hex            |
| 25       | E323532  | 2    | Housing            |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

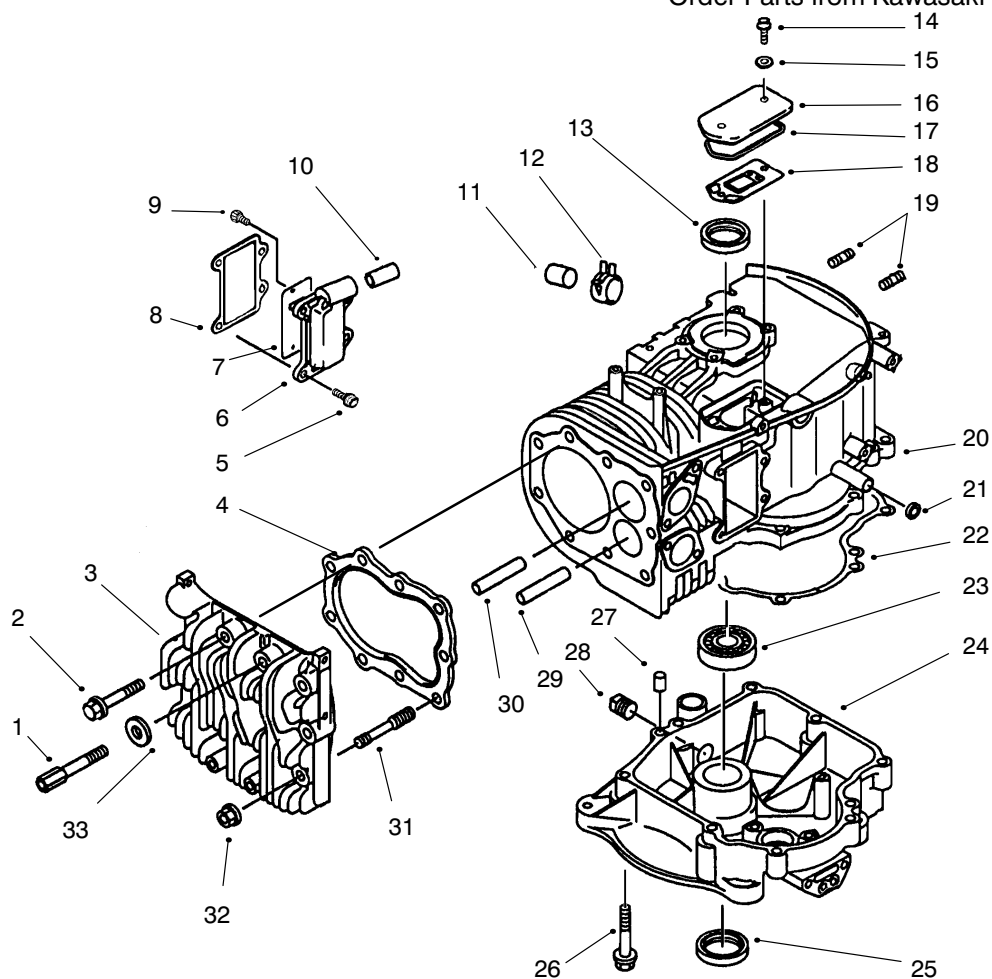


Sheet No.: 201

## Crankcase

| Ref. No. | Part No.   | Qty. | Description         |
|----------|------------|------|---------------------|
| 1        | 92002-2258 | 2    | Bolt                |
| 2        | 130g1055   | 4    | Bolt-Flange         |
| 3        | 11001-2151 | 1    | Head-Cylinder       |
| 4        | 11004-2091 | 1    | Gasket-Head         |
| 5        | 130g0616   | 4    | Bolt-Flange         |
| 6        | 49108-2011 | 1    | Cover-Valve Chamber |
| 7        | 14025-2143 | 1    | Cover               |
| 8        | 11060-2375 | 1    | Gasket              |
| 9        | 92009-2307 | 2    | Screw               |
| 10       | 92059-2142 | 1    | Tube                |
| 11       | 92066-2096 | 1    | Plug                |
| 12       | 92170-2088 | 1    | Clamp               |
| 13       | 92049-2096 | 1    | Seal-Oil            |
| 14       | 92002-2087 | 2    | Bolt                |
| 15       | 11060-2323 | 2    | Gasket              |
| 16       | 14025-2040 | 1    | Cover-Breather      |
| 17       | 11009-2339 | 1    | Gasket-Cover        |
| 18       | 14069-2062 | 1    | Breather            |
| 19       | 92004-2083 | 4    | Stud-6 X 14         |
| 20       | 49120-6108 | 1    | Crankcase-Complete  |
| 21       | 92049-2097 | 1    | Seal-Oil            |
| 22       | 11060-2015 | 1    | Gasket-Crankcase    |
| 23       | 601a6207   | 1    | Bearing-Ball        |
| 24       | 49015-6176 | 1    | Cover-Crankcase     |
| 25       | 92049-2227 | 1    | Seal-Oil            |
| 26       | 130g0845   | 8    | Bolt-Flange         |

| Ref. No. | Part No.   | Qty. | Description         |
|----------|------------|------|---------------------|
| 27       | 92043-1263 | 2    | Pin                 |
| 28       | 92066-2097 | 1    | Plug                |
| 29       | 49002-2071 | 1    | Guide-Valve Exhaust |
| 30       | 49002-2070 | 1    | Guide-Valve Intake  |
| 31       | 92004-2082 | 3    | Stud                |
| 32       | 92015-2115 | 3    | Nut                 |
| 33       | 410b1000   | 2    | Washer-Plain        |

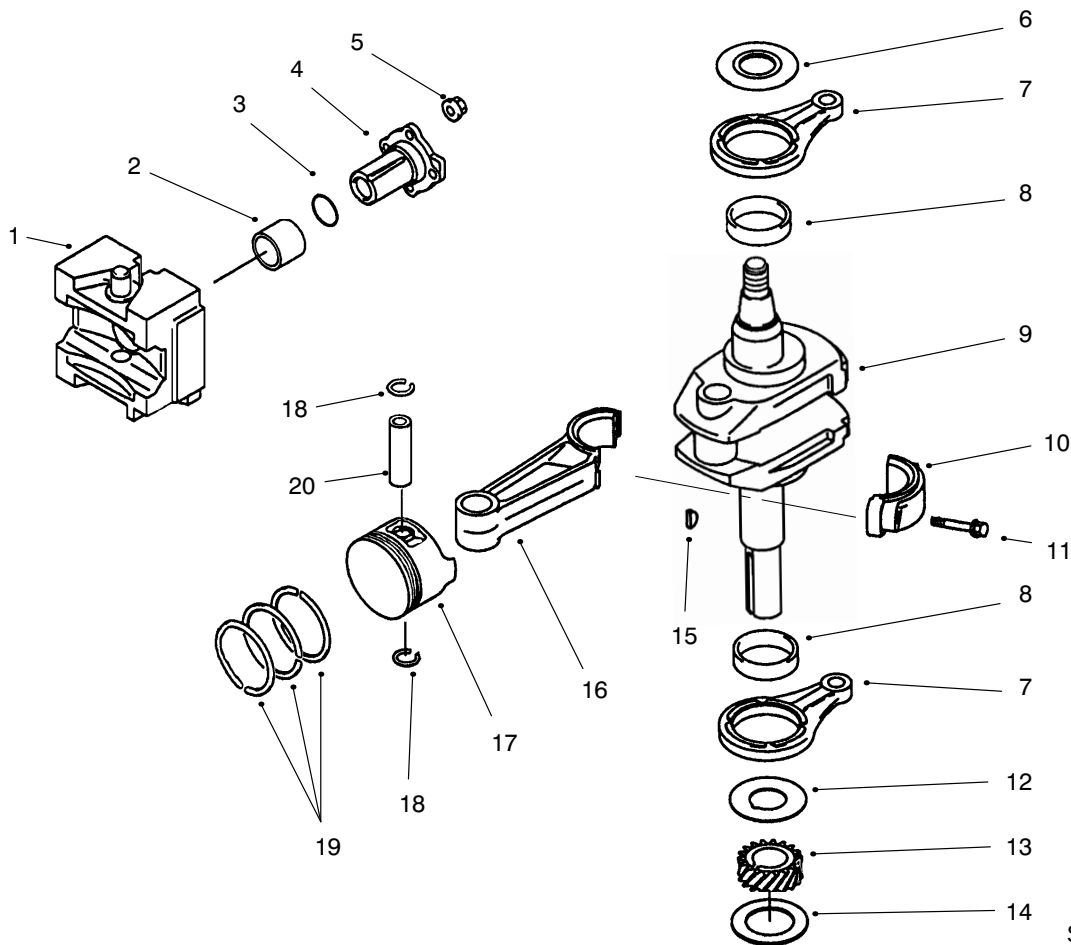


Sheet No.: 202

## Piston / Crankshaft

| Ref. No. | Part No.   | Qty. | Description         |
|----------|------------|------|---------------------|
| 1        | 13042-6006 | 1    | Weight Incl #2      |
| 2        | 92141-2097 | 1    | Bearing-Plane       |
| 3        | 92055-2072 | 1    | O-Ring              |
| 4        | 13107-2253 | 1    | Shaft               |
| 5        | 92015-1193 | 4    | Nut                 |
| 6        | 92026-2164 | 1    | Spacer              |
| 7        | 46102-6007 | 2    | Rod Incl #8         |
| 8        | 92141-2108 | 2    | Bearing-Plane       |
| 9        | 49119-2177 | 1    | Crankshaft ASM      |
| 11       | 92150-2193 | 2    | Bolt                |
| 12       | 92026-2156 | 1    | Spacer              |
| 13       | 59056-2105 | 1    | Gear-Helical        |
| 14       | 92025-2145 | A/R  | Shim T=1.18         |
| 14       | 92025-2146 | A/R  | Shim T=1.25         |
| 14       | 92025-2147 | A/R  | Shim T=1.32         |
| 14       | 92025-2148 | A/R  | Shim T=1.39         |
| 14       | 92025-2149 | A/R  | Shim T=1.46         |
| 14       | 92025-2150 | A/R  | Shim T=1.53         |
| 14       | 92025-2151 | A/R  | Shim T=1.60         |
| 14       | 92025-2152 | A/R  | Shim T=1.67         |
| 14       | 92025-2153 | A/R  | Shim T=1.74         |
| 14       | 92180-2015 | A/R  | Shim T=1.11         |
| 14       | 92180-2016 | A/R  | Shim T=1.81         |
| 15       | 92038-2094 | 1    | Key                 |
| 16       | 13251-6005 | 1    | Rod ASM Incl #10 11 |

| Ref. No. | Part No.   | Qty. | Description              |
|----------|------------|------|--------------------------|
| 16       | 13251-6007 | A/R  | Rod ASM Incl #10 11 0.50 |
| 17       | 13001-2096 | 1    | Piston                   |
| 17       | 13029-2084 | A/R  | Piston 0.25              |
| 17       | 13029-2085 | A/R  | Piston 0.50              |
| 18       | 92033-2176 | 2    | Ring-Snap                |
| 19       | 13008-6009 | 1    | Set-Ring Piston          |
| 19       | 13008-6010 | A/R  | Set-Ring Piston 0.25     |
| 19       | 13008-6011 | A/R  | Set-Ring Piston 0.50     |
| 20       | 13002-2066 | 1    | Pin-Piston               |

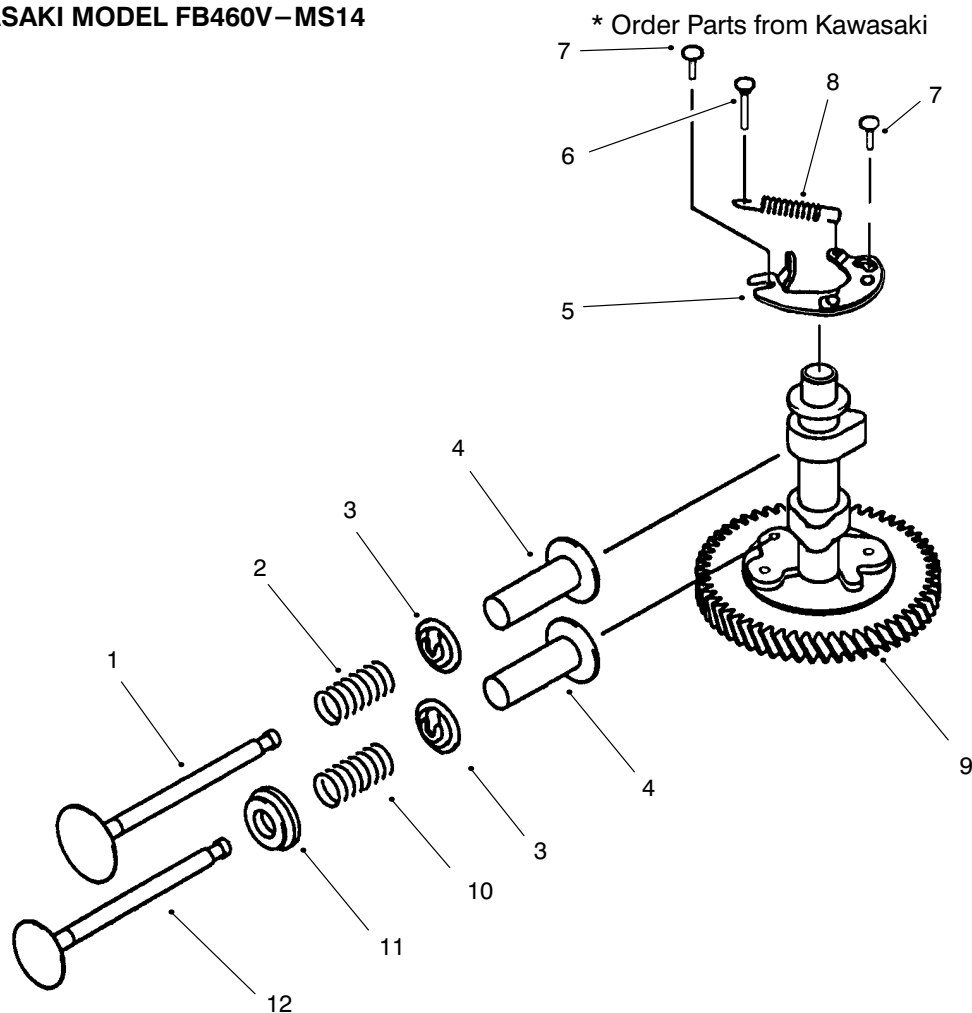


Sheet No.: 203

## Valve / Camshaft

| Ref. No. | Part No.   | Qty. | Description         |
|----------|------------|------|---------------------|
| 1        | 12004-2076 | 1    | Valve-Intake        |
| 2        | 49078-2075 | 1    | Spring-Valve        |
| 3        | 39108-2054 | 2    | Retainer-Spring     |
| 4        | 12032-2058 | 2    | Tappet              |
| 5        | 21118-2068 | 1    | Decompressor        |
| 6        | 92043-2167 | 1    | Pin                 |
| 7        | 92043-2113 | 2    | Pin                 |
| 8        | 92144-2171 | 1    | Spring              |
| 9        | 49118-2134 | 1    | Camshaft Incl # 5-8 |
| 10       | 49078-2074 | 1    | Spring-Valve        |
| 11       | 12039-2052 | 1    | Rotator             |
| 12       | 12005-2066 | 1    | Valve-Exhaust       |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

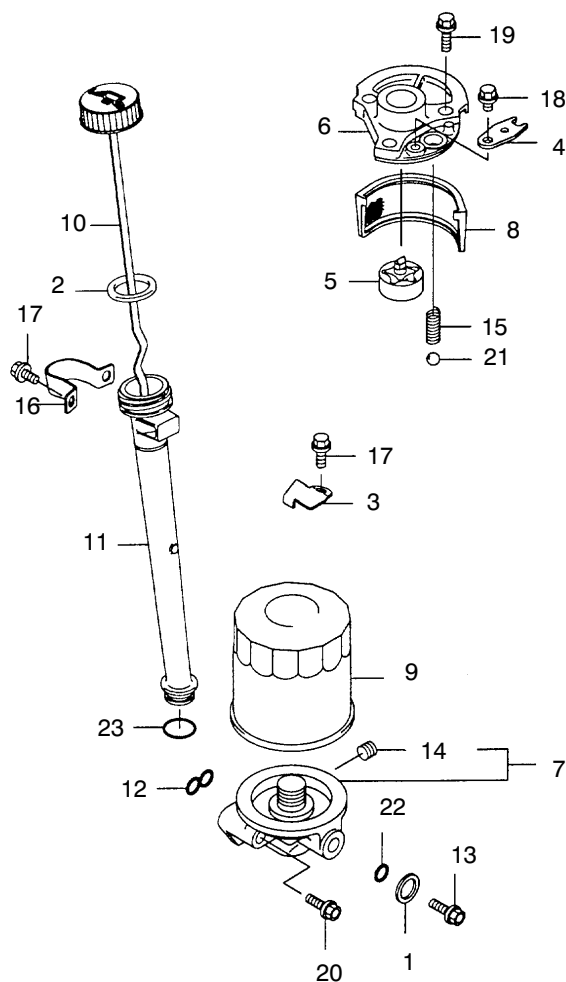


Sheet No.: 204

## Lubrication Equipment

| Ref. No. | Part No.      | Qty. | Description      |
|----------|---------------|------|------------------|
| 1        | 11009-2175    | 1    | Gasket           |
| 2        | 11009-2346    | 1    | Gasket-Oil Gauge |
| 3        | 13169-2359    | 1    | Plate            |
| 4        | 13270-2054    | 1    | Plate            |
| 5        | 16082-2057    | 1    | Pump Assy-Oil    |
| 6        | 16142-6001    | 1    | Cover-Pump       |
| 7        | 23062-6001    | 1    | Bracket-Comp     |
| 8        | 49065-2056    | 1    | Filter-Oil       |
| 9        | 49065-2071    | 1    | Filter-Oil       |
| 10       | 52005-2058    | 1    | Gauge-Oil        |
| 11       | 59231-2059    | 1    | Filler           |
| 12       | 92055-2063    | 1    | Ring-O           |
| 13       | 92066-2093    | 1    | Plug             |
| 14       | 92066-2211    | 1    | Plug             |
| 15       | 92081-2216    | 1    | Spring           |
| 16       | 92170-2014-9H | 1    | Clamp            |
| 17       | 130B0508      | 3    | Bolt-Flanged     |
| 18       | 130B610       | 1    | Bolt-Flanged     |
| 19       | 130G0825      | 3    | Bolt-Flanged     |
| 20       | 130G0845      | 2    | Bolt-Flanged     |
| 21       | 600A1000      | 1    | Ball-Steel       |
| 22       | 670D1507      | 1    | O Ring           |
| 23       | 670D2016      | 1    | O Ring           |




| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

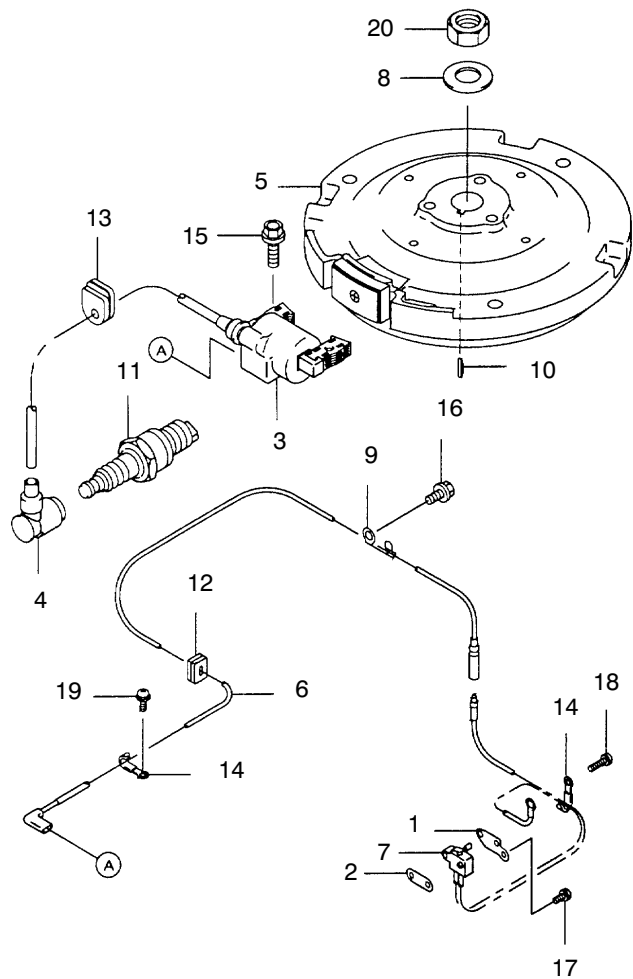

Sheet No.: 206

Electric Equipment

| Ref. No. | Part No.   | Qty. | Description            | Ref. No. | Part No. | Qty. | Description |
|----------|------------|------|------------------------|----------|----------|------|-------------|
| 1        | 13183-2373 | 1    | Plate                  |          |          |      |             |
| 2        | 13183-2374 | 1    | Plate                  |          |          |      |             |
| 3        | 21121-2086 | 1    | Coil-Ignition          |          |          |      |             |
| 4        | 21130-2060 | 1    | Cap-Spark Plug         |          |          |      |             |
| 5        | 21194-2324 | 1    | Flywheel-Comp          |          |          |      |             |
| 6        | 26011-2326 | 1    | Wire-Lead L530         |          |          |      |             |
| 7        | 27010-2167 | 1    | Switch                 |          |          |      |             |
| 8        | 92022-2178 | 1    | Washer                 |          |          |      |             |
| 9        | 92037-2011 | 1    | Clamp                  |          |          |      |             |
| 10       | 92038-2094 | 1    | Key                    |          |          |      |             |
| 11       | 92070-2105 | 1    | Plug-Spark BMR4A (NGK) |          |          |      |             |
| 12       | 92071-2099 | 1    | Grommet                |          |          |      |             |
| 13       | 92071-2100 | 1    | Grommet                |          |          |      |             |
| 14       | 92170-2029 | 2    | Clamp                  |          |          |      |             |
| 15       | 130B0520   | 2    | Bolt-Flanged           |          |          |      |             |
| 16       | 130B0610   | 1    | Bolt-Flanged           |          |          |      |             |
| 17       | 223B0410   | 1    | Screw-Pan Ws Cros      |          |          |      |             |
| 18       | 233B0416   | 1    | Screw-Pan Ws Cros      |          |          |      |             |
| 19       | 234B0408   | 1    | Screw-Pan Wsp          |          |          |      |             |
| 20       | 314G1800   | 1    | Nut-Hex Fine           |          |          |      |             |

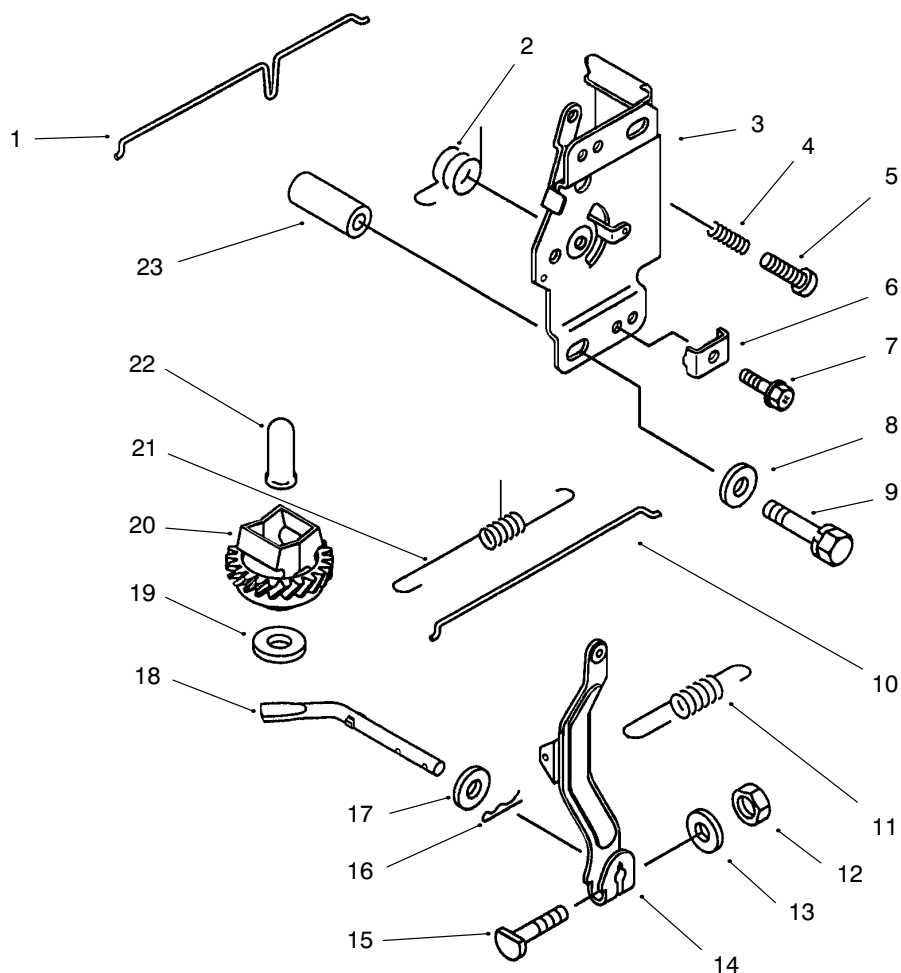


Sheet No.: 207

## Control Equipment

| Ref. No. | Part No.   | Qty. | Description       |
|----------|------------|------|-------------------|
| 1        | 16169-2126 | 1    | Link-choke        |
| 2        | 92081-2316 | 1    | Spring            |
| 3        | 49113-2090 | 1    | Panel Incl #2 4-7 |
| 4        | 92144-2266 | 1    | Spring            |
| 5        | 214b0416   | 1    | Screw             |
| 6        | 92037-2020 | 1    | Clamp             |
| 7        | 92002-2188 | 1    | Bolt              |
| 8        | 92200-2070 | 2    | Washer            |
| 9        | 180b0650   | 2    | Bolt              |
| 10       | 16171-2083 | 1    | Link              |
| 11       | 92144-2008 | 1    | Spring-Governor   |
| 12       | 311b0600   | 1    | Nut-HH            |
| 13       | 411b0600   | 1    | Washer            |
| 14       | 21187-2052 | 1    | Arm ASM           |
| 15       | 92002-2269 | 1    | Bolt              |
| 16       | 554a0600   | 1    | Pin-Snap          |
| 17       | 92200-2029 | 1    | Washer            |
| 18       | 39003-2072 | 1    | Arm-Pivot         |
| 19       | 92200-2036 | 1    | Washer            |
| 20       | 49110-2084 | 1    | Governor ASM      |
| 21       | 92081-2213 | 1    | Spring            |
| 22       | 42036-2060 | 1    | Sleeve            |
| 23       | 92027-2071 | 2    | Collar            |


| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

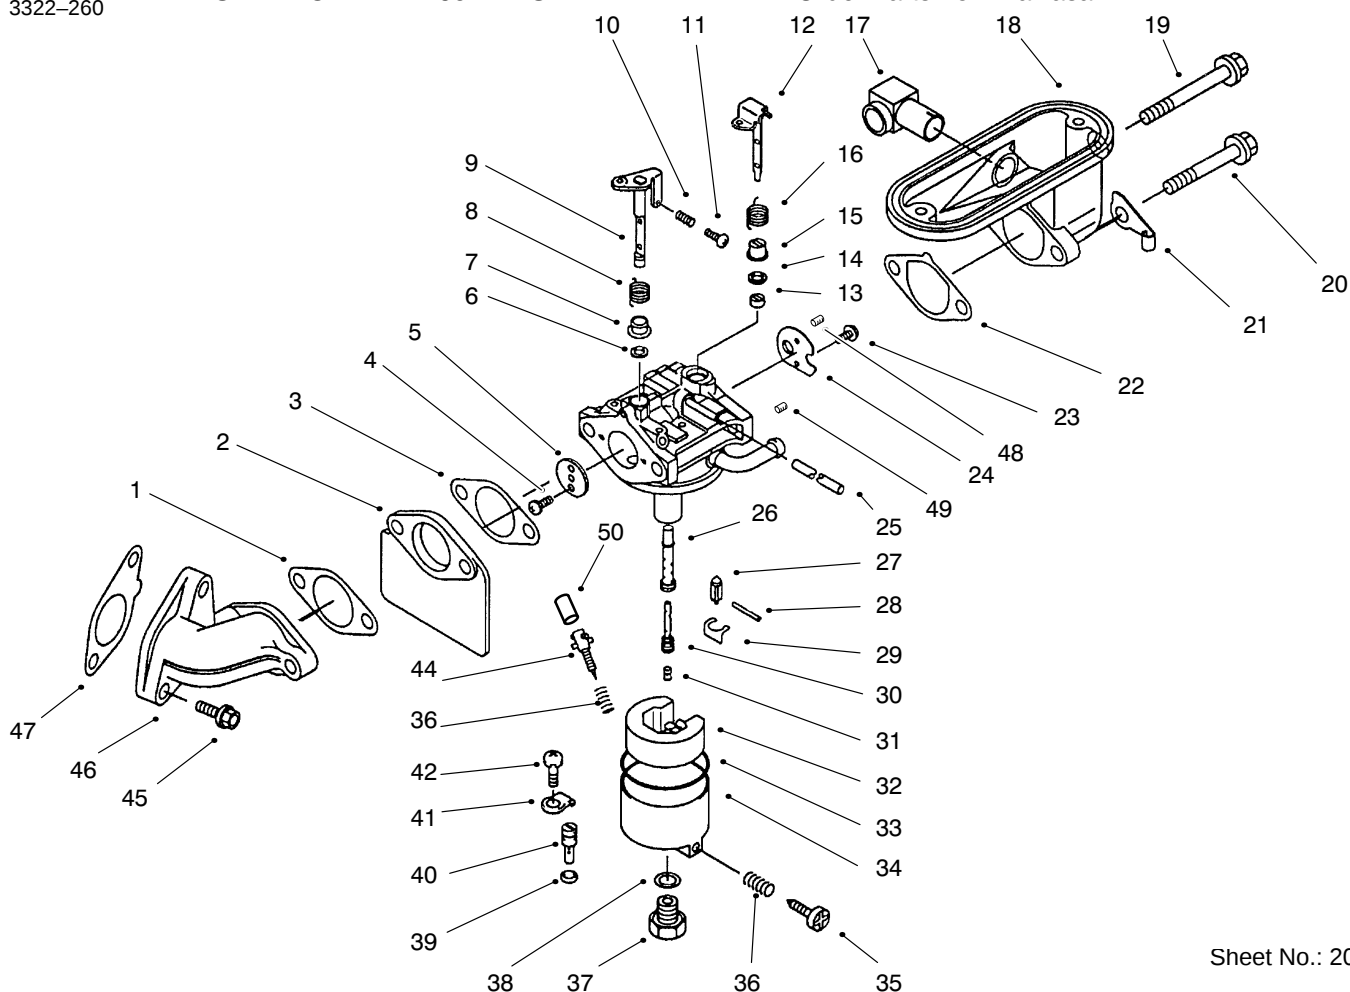

Sheet No.: 208

## Carburetor

| Ref. No. | Part No.   | Qty. | Description         | Ref. No. | Part No.   | Qty. | Description           |
|----------|------------|------|---------------------|----------|------------|------|-----------------------|
| 0        | 15003-2467 | 1    | Carburetor ASM      | 26       | 49121-2207 | 1    | Nozzle-Main #98A      |
| 1        | 11060-2338 | 1    | Gasket-Intake Pipe  | 27       | 16030-2073 | 1    | Valve-Float           |
| 2        | 16073-2091 | 1    | Insulator           | 28       | 92043-2006 | 1    | Pin                   |
| 3        | 11060-2339 | 2    | Gasket-Carburetor   | 29       | 92033-2067 | 1    | Ring-Snap             |
| 4        | 92009-2080 | 2    | Screw               | 30       | 49123-2078 | 1    | Holder-Main Jet       |
| 5        | 16025-2141 | 1    | Valve-Throttle #110 | 31       | 92063-2294 | 1    | Jet-Main              |
| 6        | 92093-2082 | 1    | Seal                | 32       | 16031-2066 | 1    | Float                 |
| 7        | 92027-2025 | 1    | Collar              | 33       | 11009-2024 | 1    | Gasket                |
| 8        | 92081-2077 | 1    | Spring              | 34       | 16020-2109 | 1    | Chamber-Float Incl 35 |
| 9        | 16041-2009 | 1    | Shaft-Throttle      | 35       | 92009-2015 | 1    | Screw                 |
| 10       | 92081-2046 | 1    | Spring              | 36       | 92081-2009 | 2    | Spring                |
| 11       | 92009-2079 | 1    | Screw               | 37       | 92150-2146 | 1    | Bolt                  |
| 12       | 16041-2010 | 1    | Shaft-Choke         | 38       | 11009-2025 | 1    | Gasket                |
| 13       | 92027-2003 | 1    | Collar              | 39       | 16038-024  | 1    | Gasket                |
| 14       | 92093-2069 | 1    | Seal                | 40       | 92064-2108 | 1    | Jet-Pilot             |
| 15       | 92143-2142 | 1    | Collar              | 41       | 13183-2252 | 1    | Plate                 |
| 16       | 92144-2160 | 1    | Spring              | 42       | 92009-2244 | 1    | Screw                 |
| 17       | 59071-2062 | 1    | Joint               | 44       | 16014-2076 | 1    | Screw-Pilot Air       |
| 18       | 16060-2108 | 1    | Pipe-Intake         | 45       | 130g0825   | 2    | Bolt-Flange           |
| 19       | 92002-2254 | 1    | Bolt                | 46       | 16060-2109 | 1    | Pipe-Intake           |
| 20       | 92002-2253 | 1    | Bolt                | 47       | 11060-2337 | 1    | Gasket-Intake Pipe    |
| 21       | 92170-2019 | 1    | Clamp               | 48       | 16035-2063 | 1    | Jet-Air #0.9          |
| 22       | 11060-2338 | 1    | Gasket              | 49       | 16035-2051 | 1    | Jet-Air #1.4          |
| 23       | 92009-2081 | 2    | Screw               | 50       | 39076-2053 | 1    | Limiter               |
| 24       | 16126-2206 | 1    | Valve-Choke         |          |            |      |                       |
| 25       | 92059-2266 | 1    | Tube                |          |            |      |                       |

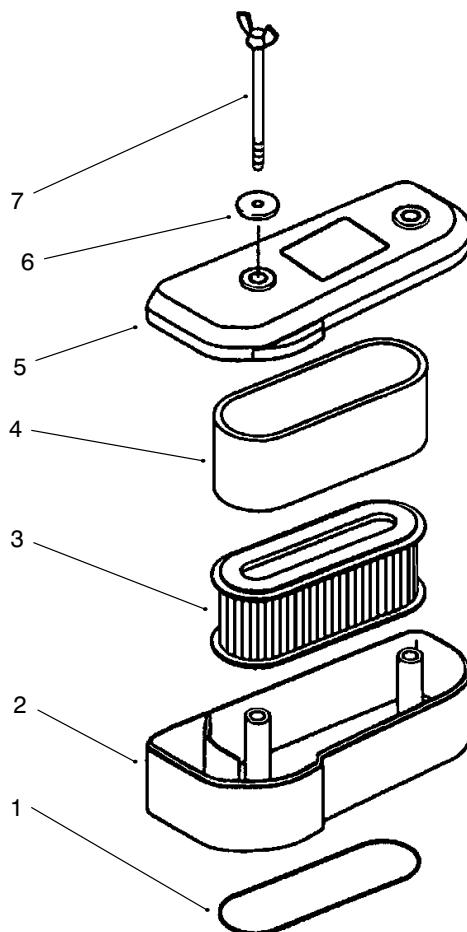


Sheet No.: 210

## Air Filter


| Ref. No. | Part No.   | Qty. | Description        |
|----------|------------|------|--------------------|
| 1        | 11009-2443 | 1    | Gasket-Air Filter  |
| 2        | 11011-2174 | 1    | Case-Air Filter    |
| 3        | 11013-2021 | 1    | Element-Air Filter |
| 4        | 11013-2020 | 1    | Element-Air Filter |
| 5        | 11012-2192 | 1    | Cap-Air Filter     |
| 6        | 92022-2220 | 2    | Washer             |
| 7        | 92002-2230 | 2    | Bolt               |
|          | 11010-2291 | 1    | Filter ASM         |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

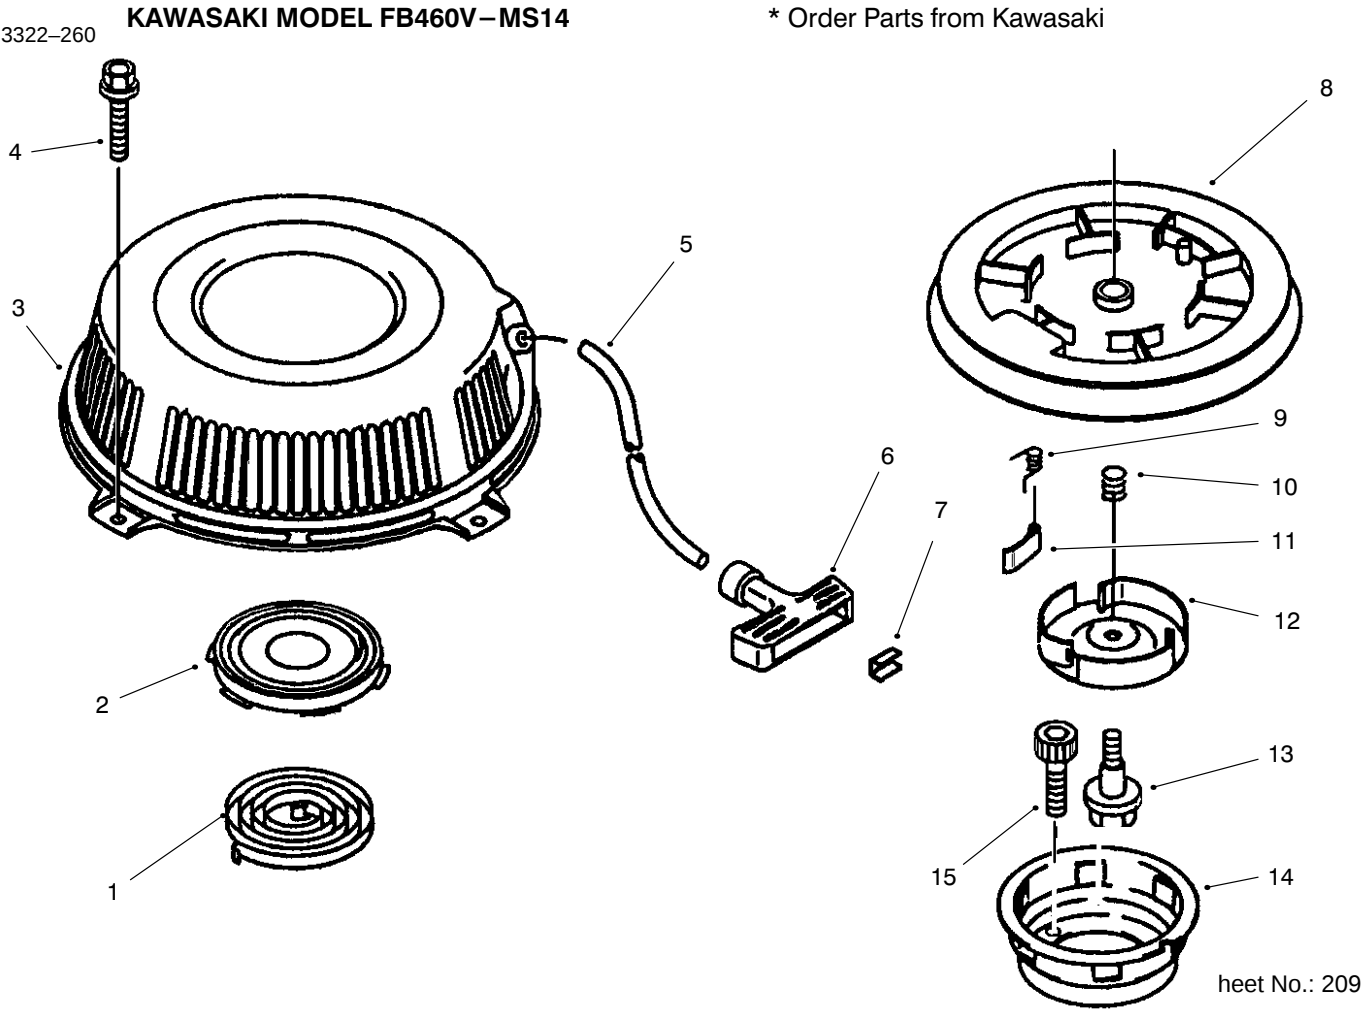

Starter

| Ref. No. | Part No.      | Qty. | Description            | Ref. No. | Part No. | Qty. | Description |
|----------|---------------|------|------------------------|----------|----------|------|-------------|
| 1        | 90281-2267    | 1    | Spring-Recoil          |          |          |      |             |
| 2        | 32099-2060    | 1    | Case-Spring            |          |          |      |             |
| 3        | 32099-2239-yk | 1    | Case-Recoil Starter    |          |          |      |             |
| 4        | 130b0610      | 4    | Bolt-Flange            |          |          |      |             |
| 5        | 59106-2060    | 1    | Rope-Starter           |          |          |      |             |
| 6        | 46075-2059    | 1    | Grip-Starter Rope      |          |          |      |             |
| 7        | 92022-2248    | 1    | Washer                 |          |          |      |             |
| 8        | 59101-2054    | 1    | Reel-Recoil Starter    |          |          |      |             |
| 9        | 92081-2021    | 3    | Spring                 |          |          |      |             |
| 10       | 92081-2268    | 1    | Spring-Return          |          |          |      |             |
| 11       | 13165-2073    | 3    | Pawl-Recoil Starter    |          |          |      |             |
| 12       | 14020-2054    | 1    | Retainer-Recoil        |          |          |      |             |
| 13       | 92001-2027    | 1    | Bolt                   |          |          |      |             |
| 14       | 49080-2144    | 1    | Pulley-Starting        |          |          |      |             |
| 15       | 120p0620      | 3    | Bolt-Socket            |          |          |      |             |
| 16       | 49088-2412-yk | 1    | Starter Incl #1-5 8-14 |          |          |      |             |

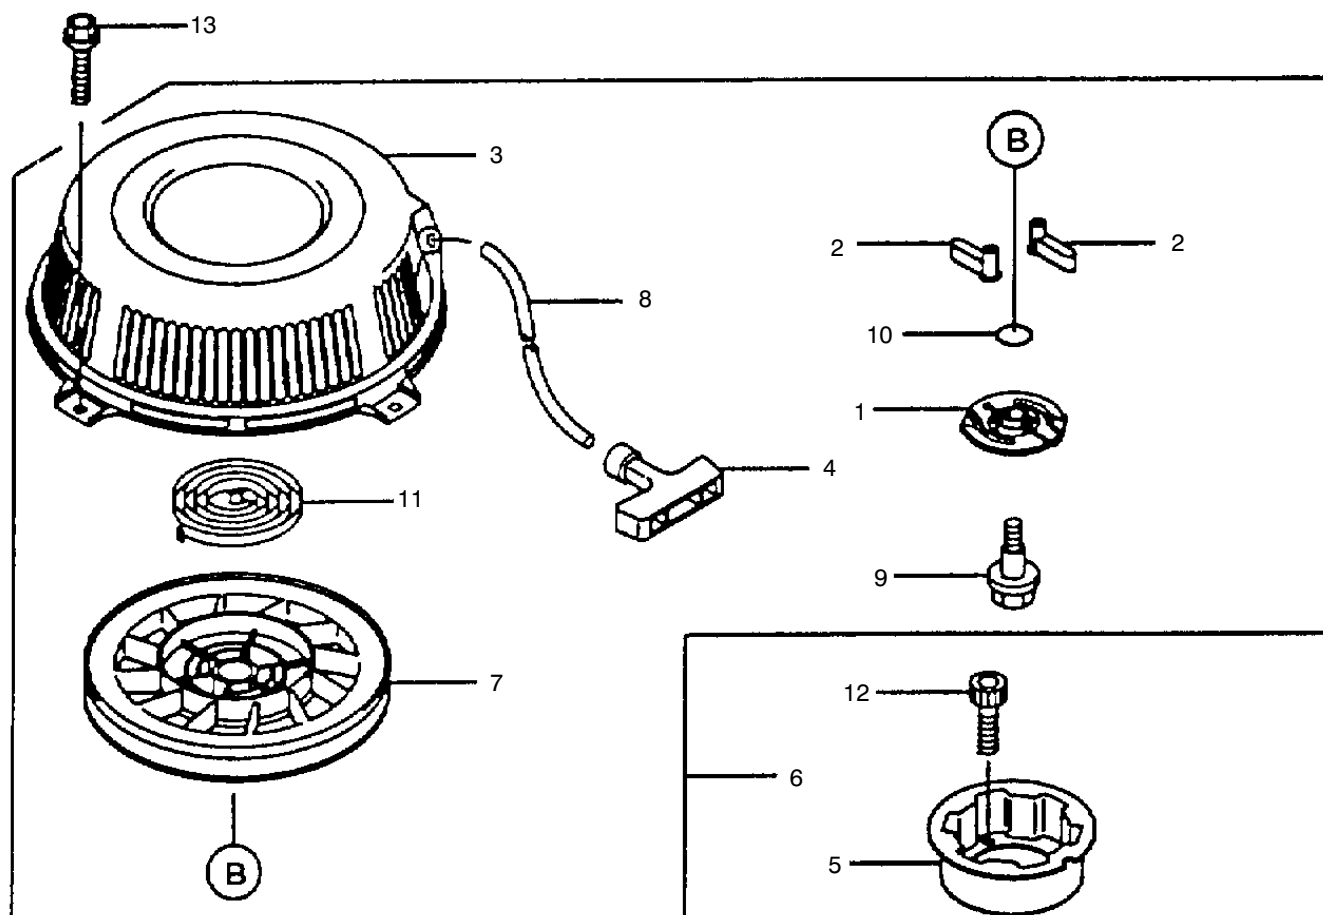


Sheet No.: 209

## Starter

| Ref. No. | Part No.      | Qty. | Description         |
|----------|---------------|------|---------------------|
| 1        | 10370-2102    | 1    | Guide               |
| 2        | 13165-2092    | 2    | Pawl-Recoil Starter |
| 3        | 32099-2308-9H | 1    | Case-Spring         |
| 4        | 46075-2106    | 1    | Grip-Recoil Starter |
| 5        | 49080-2176    | 1    | Pulley-Starting     |
| 6        | 49088-2473-9H | 1    | Starter-Recoil      |
| 7        | 59101-2103    | 1    | Reel-Recoil Starter |
| 8        | 59106-2082    | 1    | Rope                |
| 9        | 92009-2382    | 1    | Screw               |
| 10       | 92033-2175    | 1    | Ring-Snap           |
| 11       | 92144-2399    | 1    | Spring              |
| 12       | 120P0620      | 3    | Bolt-Socket         |
| 13       | 130B0610      | 4    | Bolt-Flanged        |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

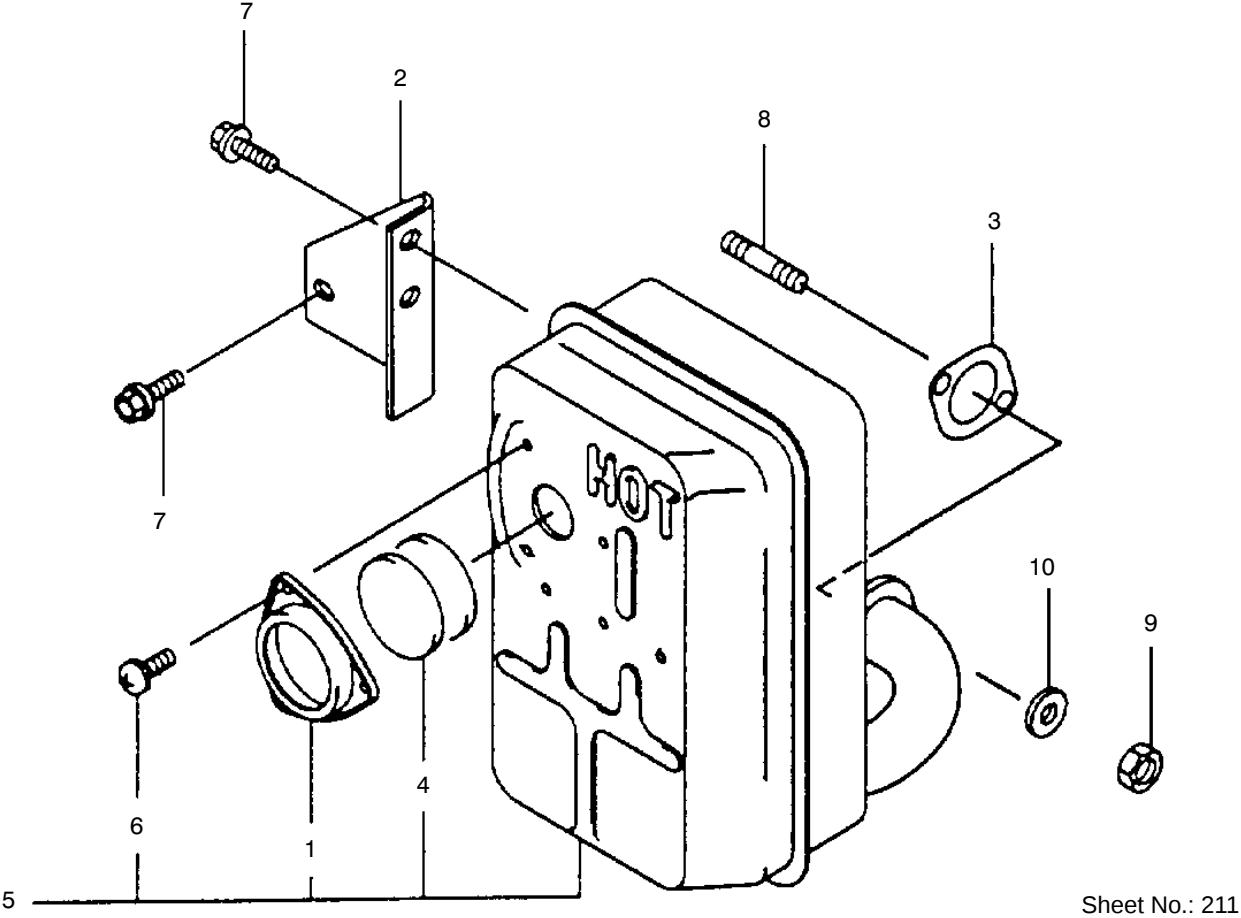

Muffler

| Ref. No. | Part No.      | Qty. | Description        | Ref. No. | Part No. | Qty. | Description |
|----------|---------------|------|--------------------|----------|----------|------|-------------|
| 1        | 11012-2251-9Y | 1    | Cap-Spark Arrester |          |          |      |             |
| 2        | 11046-2163-9Y | 1    | Bracket            |          |          |      |             |
| 3        | 11060-2379    | 1    | Gasket             |          |          |      |             |
| 4        | 18077-2052    | 2    | Arrester-Spark     |          |          |      |             |
| 5        | 49069-2210-9Y | 1    | Muffler Assembly   |          |          |      |             |
| 6        | 92009-2166    | 3    | Screw              |          |          |      |             |
| 7        | 130G0812      | 4    | Bolt-Flanged       |          |          |      |             |
| 8        | 171G0818      | 2    | Bolt-Stud          |          |          |      |             |
| 9        | 317R0800      | 2    | Nut-Hex Small      |          |          |      |             |
| 10       | 461F0800      | 2    | Washer-Spring      |          |          |      |             |



# **PEERLESS TRANSMISSION MODEL 700–070A**

| Ref. No. | Part No. | Description                       | No. Used |
|----------|----------|-----------------------------------|----------|
| 1        | 772083A  | Transmission Cover                | 1        |
| 2        | 780086A  | Needle Bearing                    | 1        |
| 2A       | 780142   | Needle Bearing                    | 1        |
| 3        | 770061A  | Transmission Case                 | 1        |
| 4        | 776134   | Countershaft                      | 1        |
| 8        | 792089A  | Shift Key                         | 4        |
| 9        | 784266   | Shift Collar                      | 1        |
| 10       | 784376   | Shift Rod & Fork                  | 1        |
| 11       | 778154   | Bevel Gear (42 Teeth)             | 1        |
| 12       | 778176   | Bevel Pinion<br>(14 Teeth– Steel) | 1        |
| 20       | 792077A  | Ball 5/16" Dia.                   | 1        |
| 21       | 792078   | Set Screw                         | 1        |
| 22       | 792079   | Spring                            | 1        |
| 24       | 780071   | Thrust Bearing                    | 1        |
| 25       | 792073A  | Screw                             | 6        |
| 27       | 792035   | Retaining Ring                    | 1        |
| 28       | 788040   | Retaining Ring                    | 1        |
| 29       | 780072   | Washer                            | 6        |
| 30       | 780108   | Washer                            | 5        |
| 32       | 792001   | O–Ring                            | 2        |
| 34       | 780105A  | Flanged Bushing                   | 4        |
| 49       | 778146A  | Spur Gear (37 Teeth)              | 1        |
| 50       | 778125   | Spur Gear (35 Teeth)              | 1        |
| 51       | 778239A  | Spur Gear<br>(32 Teeth–Steel)     | 1        |

| Ref. No. | Part No. | Description                                | No. Used |
|----------|----------|--------------------------------------------|----------|
| 52       | 778124A  | Spur Gear (30 Teeth)                       | 1        |
| 53       | 778123A  | Spur Gear (25 Teeth)                       | 1        |
| 56       | 778145   | Spur Gear<br>(12 Teeth–Steel)              | 1        |
| 57       | 778151   | Spur Gear (15 Teeth)                       | 1        |
| 58       | 778240   | Spur Gear<br>(18 Teeth–Steel)              | 1        |
| 59       | 778126A  | Spur Gear (20 Teeth)                       | 1        |
| 60       | 778127A  | Spur Gear (25 Teeth)                       | 1        |
| 65       | 780139   | Washer                                     | 1        |
| 66       | 776135   | Input Shaft (3–11/16" long)                | 1        |
| 67       | 776402   | Shifter & Brake Shaft                      | 1        |
| 71       | 788069   | Square Cut Ring                            | 1        |
| 72       | 792074   | Threaded Plug                              | 1        |
| 81       | 786081   | Roller Chain<br>(No. 41 Chain, 24 Links)   | 1        |
| 82       | 786082   | Sprocket (9 Teeth)                         | 1        |
| 83       | 786083   | Sprocket (18 Teeth)                        | 1        |
| 90       | 788067B  | Grease (32 oz. Bottle<br>Bentonite Grease) | 1        |
| 150      | 510334   | Gasket Eliminator<br>(Loctite #515)        | 1        |
| 178      | 786176   | Coupling (Optional)                        | 1        |
| 179      | 776401   | Connector Shaft (Optional)                 | 1        |

# Toro Part Number Index

| Part No. | Page No. | Ref. No. | Qty. | Description              |
|----------|----------|----------|------|--------------------------|
| 740275   | 5        | 41       | 1    | Switch—Bail              |
| E302129  | 7        | 10       | 1    | Engagement Arm w/Bushing |
| E302189  | 7        | 2        | 1    | Baffle                   |
| E302194  | 7        | 32       | 2    | Support—Caster           |
| E303020  | 2        | 5        | 1    | Grip                     |
| E303020  | 5        | 47       | 1    | Grip                     |
| E303022  | 1        | 5        | 1    | Fuel Line—8.5 Inch       |
| E303077  | 1        | 7        | 5    | Clamp                    |
| E303105  | 7        | 28       | 1    | Yoke                     |
| E303125  | 4        | 31       | 2    | Tire                     |
| E303144  | 7        | 13       | 1    | Bearing                  |
| E303160  | 5        | 52       | 1    | Spring—Compression       |
| E303186  | 2        | 12       | 1    | Bell Crank               |
| E303197  | 1        | 6        | 1    | Filter                   |
| E303236  | 7        | 18       | 1    | Turnbuckle Body          |
| E303238  | 7        | 21       | 1    | Eye Bolt                 |
| E303308  | 1        | 4        | 1    | Clamp                    |
| E303314  | 7        | 33       | 8    | Spacer                   |
| E303327  | 2        | 9        | 1    | Washer—Lock              |
| E303327  | 4        | 2        | 4    | Washer—Lock              |
| E303327  | 6        | 9        | 6    | Washer—Lock              |
| E303334  | 1        | 27       | 4    | Washer—Lock              |
| E303334  | 8        | 18       | 8    | Washer—Lock              |
| E303348  | 7        | 11       | 1    | Eye Bolt                 |
| E303352  | 7        | 47       | 1    | Washer—Spindle           |
| E303431  | 1        | 21       | 1    | Elbow                    |
| E303434  | 7        | 12       | 1    | Bushing                  |
| E303476  | 1        | 1        | 1    | Engine                   |
| E303498  | 2        | 32       | 1    | Pulley                   |
| E303514  | 7        | 31       | 4    | Bearing—Flanged          |
| E303536  | 6        | 7        | 2    | Stud—Belt Shield(Long)   |
| E303537  | 6        | 6        | 2    | Stud—Belt Shield(Short)  |
| E303558  | 8        | 21       | 2    | Pulley                   |
| E304254  | 6        | 21       | 1    | Deck / Decal ASM         |
| E304256  | 6        | 1        | 1    | Discharge Chute w/Decal  |
| E304258  | 6        | 4        | 1    | Belt Cover w/Decal       |
| E304259  | 5        | 30       | 1    | Control Panel ASM        |
| E322110  | 1        | 26       | 2    | Guide—Belt               |
| E322125  | 4        | 13       | 2    | Swivel                   |
| E322145  | 7        | 40       | 2    | Fork                     |
| E322153  | 7        | 46       | 2    | Caster/Mount ASM         |
| E322154  | 7        | 41       | 2    | Caster Wheel ASM         |
| E322201  | 2        | 53       | 1    | Deck—Engine              |
| E322205  | 4        | 8        | 1    | Idler Arm ASM LH         |
| E322206  | 4        | 9        | 1    | Idler Arm ASM RH         |
| E322208  | 5        | 4        | 1    | Bail ASM                 |
| E322209  | 4        | 24       | 2    | Brake Arm ASM            |
| E322211  | 7        | 20       | 1    | Assist Arm ASM           |
| E322212  | 4        | 41       | 1    | Axle ASM                 |
| E322215  | 5        | 1        | 1    | Control Bar              |
| E322216  | 5        | 9        | 1    | Upper Handle ASM         |
| E323228  | 1        | 25       | 2    | Spacer                   |
| E323252  | 2        | 23       | 2    | Bearing                  |
| E323253  | 4        | 29       | 4    | Sheave                   |
| E323254  | 2        | 24       | 2    | Flange                   |
| E323256  | 2        | 28       | 1    | Sheave                   |
| E323257  | 2        | 25       | 2    | Sheave                   |
| E323260  | 4        | 37       | 8    | Spacer                   |
| E323261  | 4        | 38       | 2    | Drum—Brake               |
| E323278  | 2        | 48       | 1    | Sheave                   |
| E323285  | 2        | 35       | 1    | Idler Pulley             |
| E323296  | 4        | 12       | 2    | Brake Rod                |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No. | Page No. | Ref. No. | Qty. | Description            |
|----------|----------|----------|------|------------------------|
| E323303  | 7        | 29       | 1    | Linkage—Assist Arm     |
| E323307  | 4        | 26       | 4    | Pin                    |
| E323318  | 2        | 51       | 2    | Hitch Bracket          |
| E323326  | 1        | 22       | 1    | Nipple                 |
| E323329  | 4        | 35       | 4    | Bearing                |
| E323360  | 4        | 32       | 2    | Wheel ASM w/Bearings   |
| E323379  | 2        | 10       | 1    | Washer                 |
| E323385  | 6        | 3        | 4    | Knob                   |
| E323387  | 2        | 4        | 1    | Shifter Plate          |
| E323389  | 2        | 2        | 2    | Leg—Shifter Lever      |
| E323399  | 8        | 23       | 2    | Spacer                 |
| E323417  | 6        | 5        | 4    | Washer                 |
| E323502  | 2        | 43       | 2    | Output Shaft           |
| E323528  | 8        | 15       | 2    | Spacer                 |
| E323529  | 8        | 5        | 2    | Tube Spindle Short     |
| E323532  | 8        | 25       | 2    | Housing                |
| E323533  | 8        | 7        | 2    | Spacer                 |
| E323539  | 8        | 4        | 8    | Spacer                 |
| E323551  | 1        | 18       | 1    | Tank                   |
| E323555  | 6        | 16       | 1    | Decal—Belt Routing     |
| E323558  | 5        | 40       | 1    | Decal—Parking Brake    |
| E323560  | 2        | 54       | 1    | Decal—Ground Speed     |
| E323562  | 3        | 57       | 1    | Decal—Caution          |
| E323563  | 5        | 50       | 1    | Decal—Blade Engagement |
| E323564  | 5        | 35       | 1    | Decal—Panel            |
| E323566  | 6        | 20       | 1    | Decal—Proline 36       |
| E323567  | 5        | 27       | 1    | Wire Harness—Kawasaki  |
| E323569  | 5        | 37       | 2    | Rod—Control            |
| E323570  | 2        | 6        | 1    | Lever—Shift            |
| E323572  | 7        | 48       | 1    | Spacer                 |
| E323573  | 5        | 48       | 1    | Lever—Blade Engagement |
| E323574  | 4        | 22       | 2    | Spring—Extension       |
| E323575  | 7        | 49       | 1    | Spring—Deflector       |
| E323576  | 5        | 44       | 1    | Linkage—Blade Drive    |
| E323595  | 4        | 23       | 2    | Band—Brake             |
| E323607  | 4        | 46       | 1    | Shield—Trailing        |
| E323614  | 5        | 39       | 1    | Lever—Parking Brake    |
| E323629  | 6        | 2        | 1    | Belt—Blade Drive       |
| E323630  | 2        | 46       | 1    | Belt—Trans Drive       |
| E323631  | 4        | 43       | 2    | Belt—Drive             |
| E323632  | 4        | 19       | 2    | Shield                 |
| E323634  | 4        | 14       | 2    | Idler—Wheel Drive      |
| E323637  | 5        | 23       | 1    | Throttle Control       |
| E323659  | 6        | 19       | 1    | Decal—Torque           |
| E323680  | 2        | 42       | 2    | Coupling               |
| E323694  | 4        | 18       | 4    | Spacer                 |
| E412358  | 4        | 42       | 2    | Scraper                |
| E513016  | 8        | 11       | 4    | Bearing                |
| E513152  | 2        | 15       | 1    | Switch—Seat            |
| E513208  | 8        | 2        | 2    | Washer—Lock            |
| E513338  | 7        | 30       | 2    | Washer                 |
| E513508  | 1        | 17       | 1    | Cap—Fuel Tank          |
| E513547  | 7        | 37       | 2    | Spacer                 |
| E513645  | 1        | 12       | 1    | Bushing                |
| E513807  | 7        | 36:1     | 2    | Wheel Hub ASM          |
| E513808  | 7        | 36:2     | 2    | Tire                   |
| E513809  | 7        | 36:3     | 2    | Bearing—Roller         |
| E513810  | 7        | 36:4     | 4    | Bushing                |
| E513959  | 4        | 11       | 2    | Wingnut                |
| E523157  | 4        | 33       | A/R  | Spacer—14 GA           |
| E543233  | 1        | 23       | 1    | Cap                    |
| E543277  | 1        | 11       | 1    | Elbow                  |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No. | Page No. | Ref. No. | Qty. | Description         |
|----------|----------|----------|------|---------------------|
| E543296  | 2        | 55       | 1    | Grommet—Fuel Line   |
| E543436  | 4        | 33       | A/R  | Spacer—18 GA        |
| E603403  | 2        | 13       | 1    | Bolt—Shoulder       |
| E603770  | 1        | 9        | 1    | Valve—Gas           |
| E603776  | 1        | 8        | 1    | Fuel—Line           |
| E603843  | 7        | 14       | 1    | Pulley—Idler        |
| E603955  | 1        | 10       | 1    | Fuel—Line           |
| E633023  | 1        | 13       | 2    | Stud                |
| E633349  | 1        | 15       | 2    | Spring—Fuel Tank    |
| E633482  | 8        | 3        | 2    | Blade               |
| E633485  | 8        | 3        | 2    | Blade—Low Lift      |
| E633573  | 8        | 16       | 2    | Guard               |
| E634619  | 8        | 13       | 2    | Housing—Spindle     |
| E800270  | 7        | 5        | 8    | Screw—HH            |
| E800289  | 7        | 51       | 1    | Screw—HH            |
| E800861  | 8        | 1        | 2    | Screw—HH            |
| E803003  | 7        | 16       | 1    | Bolt—Whizlock       |
| E803028  | 2        | 16       | 2    | Screw               |
| E803051  | 4        | 28       | 4    | Nut                 |
| E803293  | 2        | 47       | 2    | Screw—Set           |
| E803310  | 2        | 27       | 3    | Screw—Set           |
| E803310  | 8        | 22       | 2    | Screw—Set           |
| E807009  | 2        | 44       | 3    | Key                 |
| E807264  | 2        | 29       | 1    | Key                 |
| E807267  | 8        | 6        | 2    | Key                 |
| E807511  | 2        | 17       | 1    | Bolt—CARR           |
| E808280  | 7        | 26       | 1    | Pin—Clevis          |
| E808501  | 4        | 27       | 2    | Ring—Retaining      |
| E808502  | 8        | 20       | 2    | Ring—Retaining      |
| E808505  | 7        | 17       | 1    | Ring—Retaining      |
| E808519  | 4        | 34       | 2    | Ring—Retaining      |
| E808522  | 4        | 6        | 2    | Ring                |
| E808523  | 2        | 45       | 2    | Ring—Retaining      |
| E809020  | 7        | 34       | 2    | Pin                 |
| E809065  | 1        | 28       | 2    | Screw—HH            |
| E809084  | 7        | 19       | 1    | Bolt—Shoulder       |
| E811001  | 7        | 43       | 2    | Zerk                |
| 43-8480  | 6        | 18       | 1    | Decal—Danger        |
| 51-4220  | 3        | 58       | 2    | Guard—Coupler       |
| 63-8440  | 1        | 24       | 1    | Decal—Hot Surface   |
| 66-1340  | 6        | 17       | 1    | Decal—Discharge     |
| 67-5360  | 6        | 15       | 1    | Decal—Danger        |
| 74-0521  | 4        | 10       | 2    | Rod—Fitting         |
| 74-0720  | 5        | 31       | 1    | Tube—Manual         |
| 80-4980  | 7        | 50       | 1    | Washer              |
| 82-2280  | 5        | 7        | 1    | Decal—Reverse       |
| 82-2290  | 5        | 2        | 1    | Decal—Control Bar   |
| 93-1122  | 6        | 14       | 1    | Decal—Danger        |
| 95-2814  | 2        | 56       | 1    | Decal—Fuel Shut—Off |
| 98-3269  | 6        | 13       | 1    | Decal—Made In USA   |
| 99-8501  | 5        | 6        | 1    | Pivot—Control       |
| 99-8509  | 5        | 46       | 1    | Spacer              |
| 218-595  | 5        | 38       | 1    | Connector—Body      |
| 237-141  | 5        | 43       | 2    | Grommet             |
| 2412-104 | 4        | 47       | 2    | Clamp               |
| 2412-120 | 5        | 28       | 2    | Clamp—R             |
| 283-6    | 4        | 49       | 2    | Pin—Clevis          |
| 283-55   | 5        | 21       | 2    | Pin—Clevis          |
| 302-58   | 2        | 49       | 2    | Fitting—Grease      |
| 302-58   | 4        | 4        | 2    | Fitting—Grease      |
| 302-58   | 7        | 9        | 1    | Fitting—Grease      |
| 321-3    | 2        | 26       | 4    | Screw—HH            |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No.  | Page No. | Ref. No. | Qty. | Description    |
|-----------|----------|----------|------|----------------|
| 322-3     | 1        | 20       | 2    | Screw-HH       |
| 322-3     | 2        | 37       | 4    | Screw-HH       |
| 322-6     | 4        | 40       | 8    | Screw-HH       |
| 322-6     | 8        | 9        | 8    | Screw-HH       |
| 323-4     | 7        | 44       | 8    | Screw-HH       |
| 323-6     | 2        | 50       | 4    | Screw-HH       |
| 323-6     | 4        | 3        | 4    | Screw-HH       |
| 323-7     | 6        | 10       | 6    | Screw-HH       |
| 323-10    | 5        | 45       | 1    | Screw-HH       |
| 323-11    | 4        | 5        | 2    | Screw          |
| 323-16    | 4        | 20       | 4    | Screw-HH       |
| 325-20    | 7        | 35       | 2    | Screw-HH       |
| 3210-3    | 4        | 45       | 2    | Screw-HH       |
| 3217-9    | 7        | 39       | 2    | Nut-HH         |
| 3219-6    | 8        | 24       | 2    | Nut-Hex        |
| 3230-1    | 2        | 3        | 21   | Bolt-CARR      |
| 3234-11   | 5        | 33       | 4    | Screw-HHF      |
| 3242-4    | 2        | 30       | 1    | Screw-Set      |
| 3242-6    | 2        | 31       | 1    | Screw-Sqh Set  |
| 3253-4    | 1        | 19       | 2    | Washer-Lock    |
| 3253-4    | 2        | 38       | 4    | Washer-Lock    |
| 3253-4    | 4        | 39       | 8    | Washer-Lock    |
| 3253-7    | 7        | 38       | 2    | Washer-Lock    |
| 3256-2    | 1        | 14       | 4    | Washer-Flat    |
| 3256-23   | 4        | 51       | 2    | Washer-Flat    |
| 3256-24   | 2        | 34       | 1    | Washer-Flat    |
| 3256-24   | 5        | 51       | 2    | Washer-Flat    |
| 3256-24   | 7        | 15       | 1    | Washer-Flat    |
| 3256-25   | 2        | 36       | 1    | Washer-Flat    |
| 3272-11   | 5        | 8        | 2    | Pin-Cotter     |
| 3290-307  | 2        | 52       | 1    | Pin-Cotter     |
| 3290-307  | 4        | 25       | 2    | Pin-Cotter     |
| 3290-307  | 4        | 50       | 2    | Pin-Cotter     |
| 3290-307  | 5        | 42       | 3    | Pin-Cotter     |
| 3290-307  | 7        | 27       | 2    | Pin-Cotter     |
| 3290-378  | 5        | 26       | 2    | Tie-Cable      |
| 3296-2    | 5        | 3        | 5    | Nut-Lock       |
| 3296-6    | 2        | 8        | 1    | Nut-Lock       |
| 3296-29   | 1        | 16       | 2    | Nut-Lock       |
| 3296-29   | 7        | 4        | 1    | Nut-Lock       |
| 32104-32  | 2        | 11       | 4    | Screw-HH       |
| 32104-76  | 5        | 29       | 2    | Screw-Self TAP |
| 32105-1   | 5        | 5        | 1    | Screw-HH       |
| 32105-14  | 5        | 34       | 4    | Screw-HH       |
| 32128-20  | 2        | 7        | 2    | Nut-Lock       |
| 32128-20  | 6        | 8        | 4    | Nut-Lock       |
| 32128-20  | 7        | 3        | 9    | Nut-Lock       |
| 32128-20  | 7        | 6        | 1    | Nut-Lock       |
| 32128-20  | 8        | 14       | 8    | Nut-Lock       |
| 32128-21  | 5        | 32       | 4    | Nut-HF         |
| 32128-43  | 2        | 41       | 5    | Nut-Flange     |
| 32128-43  | 4        | 1        | 14   | Nut-Flange     |
| 32128-43  | 6        | 11       | 6    | Nut-Flange     |
| 32128-43  | 7        | 45       | 8    | Nut-Flange     |
| 32146-2   | 2        | 33       | 1    | Nut-Hex Lock   |
| 32146-2   | 5        | 49       | 1    | Nut-Hex Lock   |
| 32146-4   | 4        | 48       | 2    | Nut-Lock       |
| 32146-17  | 2        | 39       | 4    | Nut-Lock       |
| 32146-18  | 2        | 14       | 2    | Nut-Lock       |
| 33114-025 | 1        | 3        | 2    | Screw-HH       |

\*Not Illustrated

[illegible]

28