



Form No. 3422-241 Rev A

Count on it.

Parts Catalog

52in Side Discharge Mower Groundsmaster® 200, 3320 and 3280-D Series Traction Unit

Model No. 30555—Serial No. 401220001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Deck and Spindle Assembly 4

Drive Spindle Assembly No. 27-0870 5

Deck Assembly 6

Cover and Gearbox Assembly 7


Gearbox Assembly No. 131-6083 8

Carrier Frame Assembly 9

Tire and Bearing Assembly No. 68-8970 10

Pivot Pin and Spacer Assembly 11

Attachments and Accessories 12

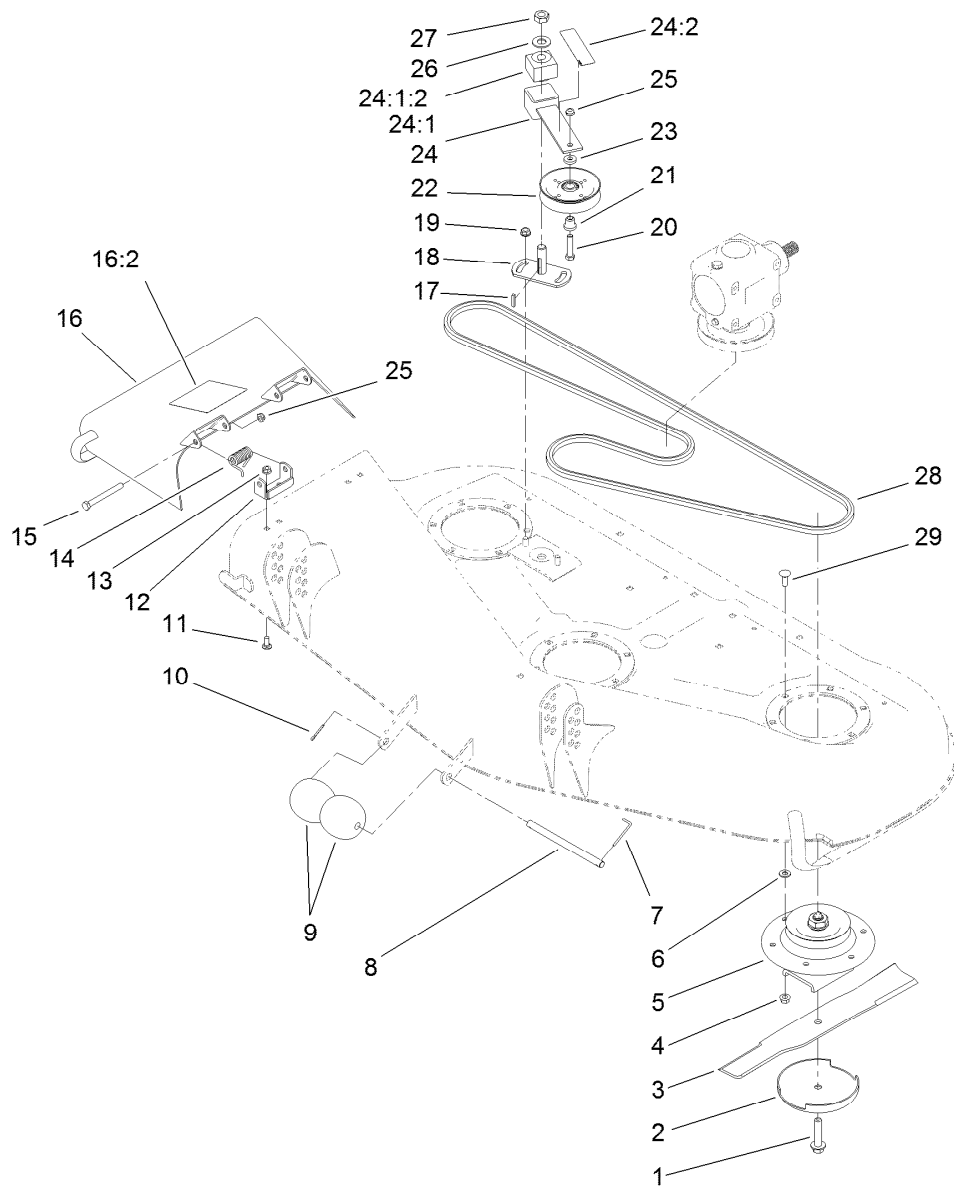


Deck and Spindle Assembly

Ref.	Part Number	Qty.	Description
1	92-5816	3	Bolt-Blade
2	72-9361	3	Cup-Scalp, Anti
3	104-1301	3	Blade-Atomic
3	27-0990-03	3	Blade-18 Inch
3	44-5480	3	Blade-High Sail
3	56-2390-03	3	Blade-18 Inch
4	32128-21	18	Nut-HF
5	27-0870	3	Spindle ASM
6	3256-24	4	Washer-Flat
7	57-0690	1	Pin-Special
8	40-6400	1	Shaft-Roller
9	29-4820	2	Roller
10	3272-11	1	Pin-Cotter
11	3230-23	4	Screw-CARR
12	29-5590-01	2	Bracket-Pivot
13	32128-20	4	Nut-HF
14	40-6230	2	Spring
15	3211-15	2	Screw-HH


Ref.	Part Number	Qty.	Description
16	93-8714	1	Deflector ASM
16:2	120-6604	1	Decal-Danger
17	5-1077	1	Key-Square
18	28-9060	1	Plate-Idler
19	3290-357	2	Nut-HHF, Whiz
20	3211-8	1	Screw-HH
21	65-5950	1	Bushing-Pulley
22	65-5940	1	Pulley-Idler
23	7-0081	1	Washer-Flat
24	100-6178	1	Idler Arm ASM
24:1		1	Arm-Idler ●
24:1:2	27-8490	1	Bushing-Rubber
24:2	117-4979	1	Decal-Warning
25	3296-5	3	Nut-Hex
26	3256-27	1	Washer-Flat
27	3296-33	1	Nut-Lock, NI
28	27-1160	1	V-Belt
29	3231-22	18	Screw-CARR

● Not serviced separately

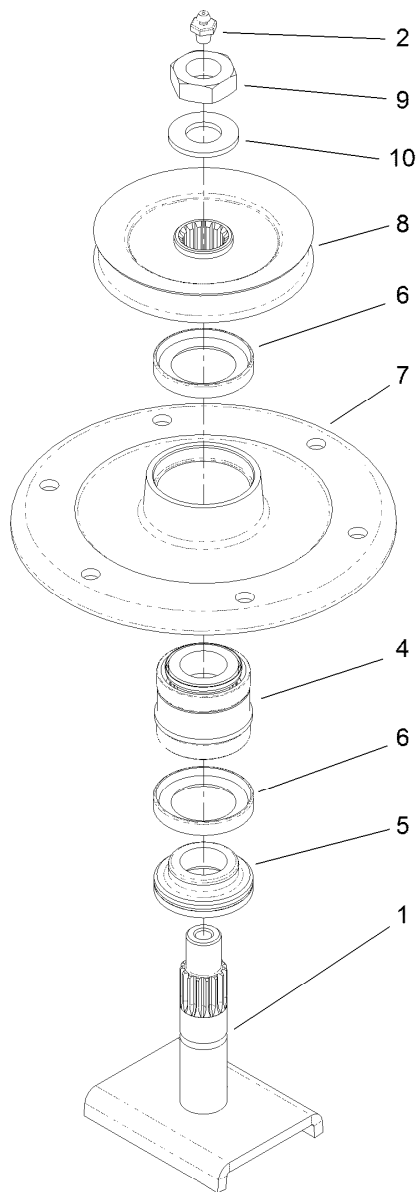

Drive Spindle Assembly No. 27-0870


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	27-0920-03	1	Shaft ASM
2	302-2	1	Fitting-Grease
4	46-8530	1	Bearing ASM
5	27-0950	1	Spacer
6	253-139	2	Seal-Oil
7	61-4160	1	Housing-Spindle
8	27-0970	1	Pulley And Hub ASM
9	32146-20	1	Nut-Hex
10	106-0776	1	Washer-Pinion

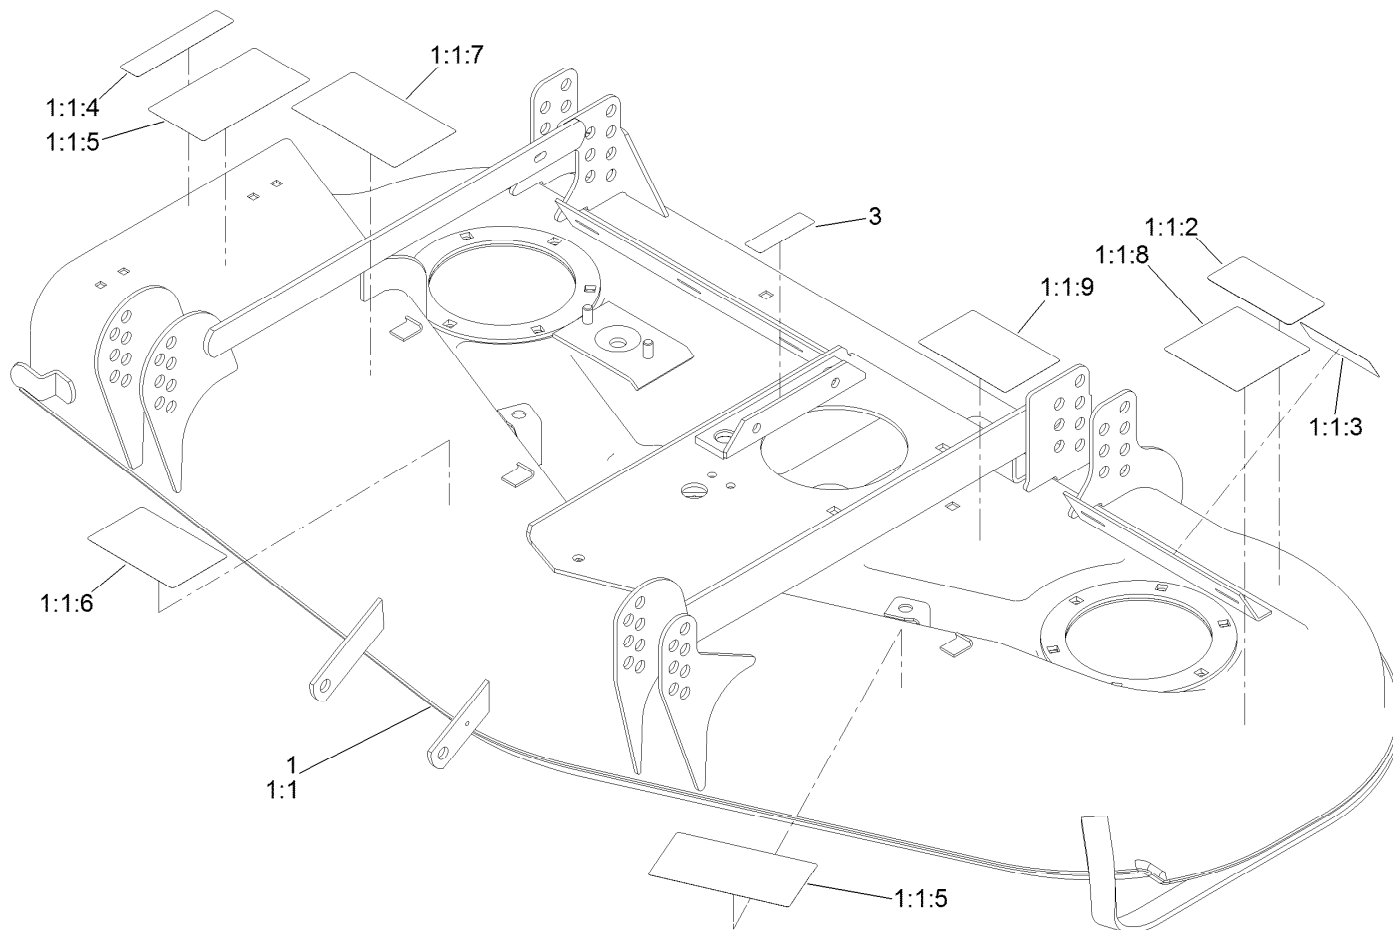

Deck Assembly


Ref.	Part Number	Qty.	Description
1	131-6096	1	52 Inch Deck ASM
1:1		1	Deck ASM ●
1:1:2	93-7818	1	Decal-Torque, Blade Bolt
1:1:3	117-4979	1	Decal-Warning
1:1:4	107-2916	1	Decal-Warning
1:1:5	107-2908	2	Decal-Danger, Combination
1:1:6	51-3960	1	Decal
1:1:7	105-9551	1	Decal-Warning
1:1:8	120-6604	1	Decal-Danger
1:1:9	99-5171	1	Decal-Belt Routing
3	93-6697	1	Decal-Lube

● Not serviced separately

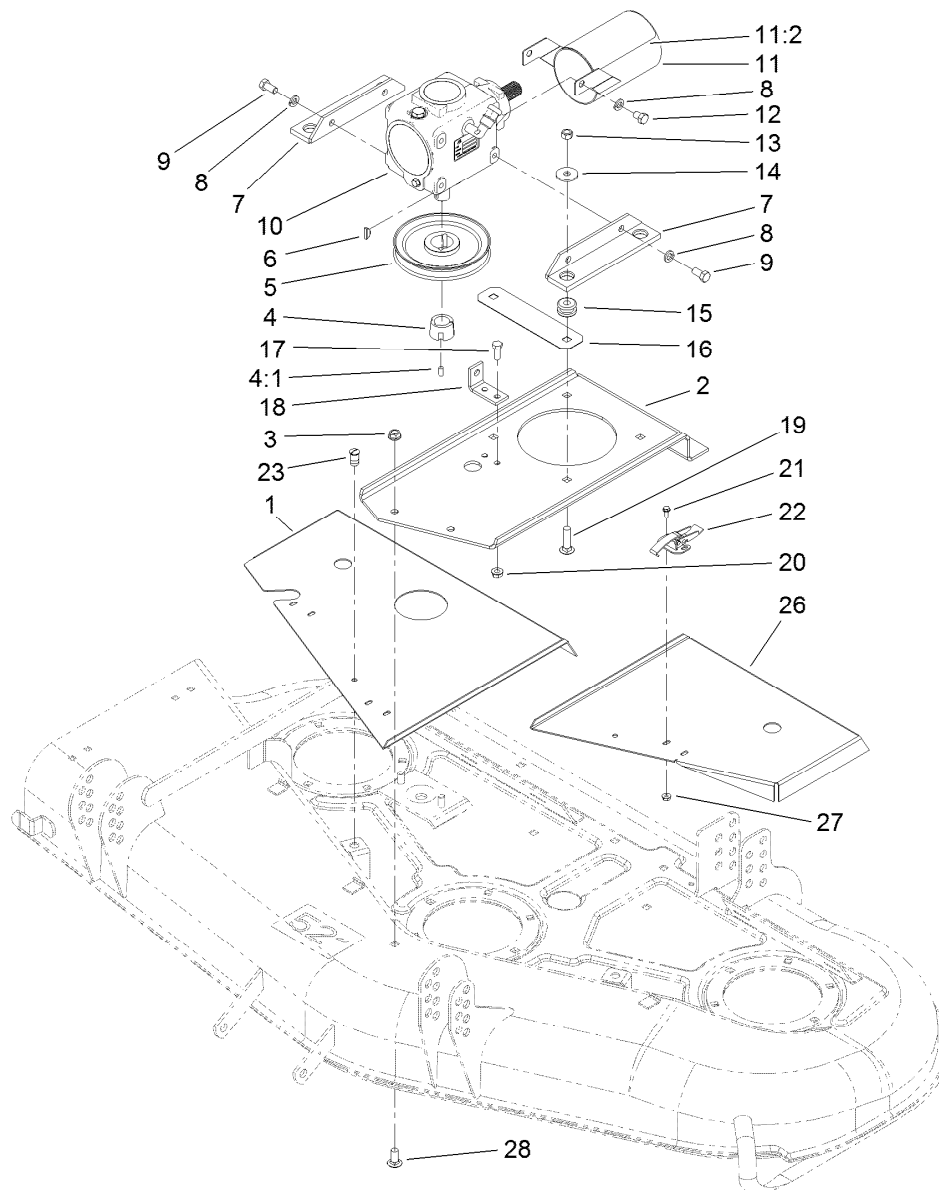

Cover and Gearbox Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	119-4763-01	1	Cover-Belt, RH	14	63-8410	4	Washer
2	72-9230-01	1	Base-Case, Gear	15	63-9750	4	Mount
3	3290-357	4	Nut-HHF, Whiz	16	68-9890-01	1	Cover-Gearbox, Front
4	27-6140	1	Bushing-Lock, Taper	17	322-4	2	Screw-HH
4:1	3245-9	2	Screw-Set, HSH	18	72-9240-01	1	Bracket-Extension
5	63-9900-03	1	Gearbox Pulley ASM	19	3231-26	4	Screw-CARR
6	3257-5	1	Key-Woodruff	20	32128-20	2	Nut-HF
7	68-8560-03	2	Bracket-Gearbox	21	3290-321	6	Screw-HWH
8	3253-21	6	Washer-Lock	22	249-21	3	Clamp-Slotted
9	323-4	4	Screw-HH	23	117-6989	2	Fractional Turn Oval Head Stud ASM
10	131-6083	1	Gearbox ASM	26	119-4762-01	1	Cover-Belt, LH
11	107-2904	1	PTO Guard ASM	27	32128-17	6	Nut-Lock, Flange
11:2	107-2915	1	Decal-Danger	28	3231-27	4	Screw-CARR
12	323-2	2	Screw-HH				
13	125-5069	4	Nut-Hex				

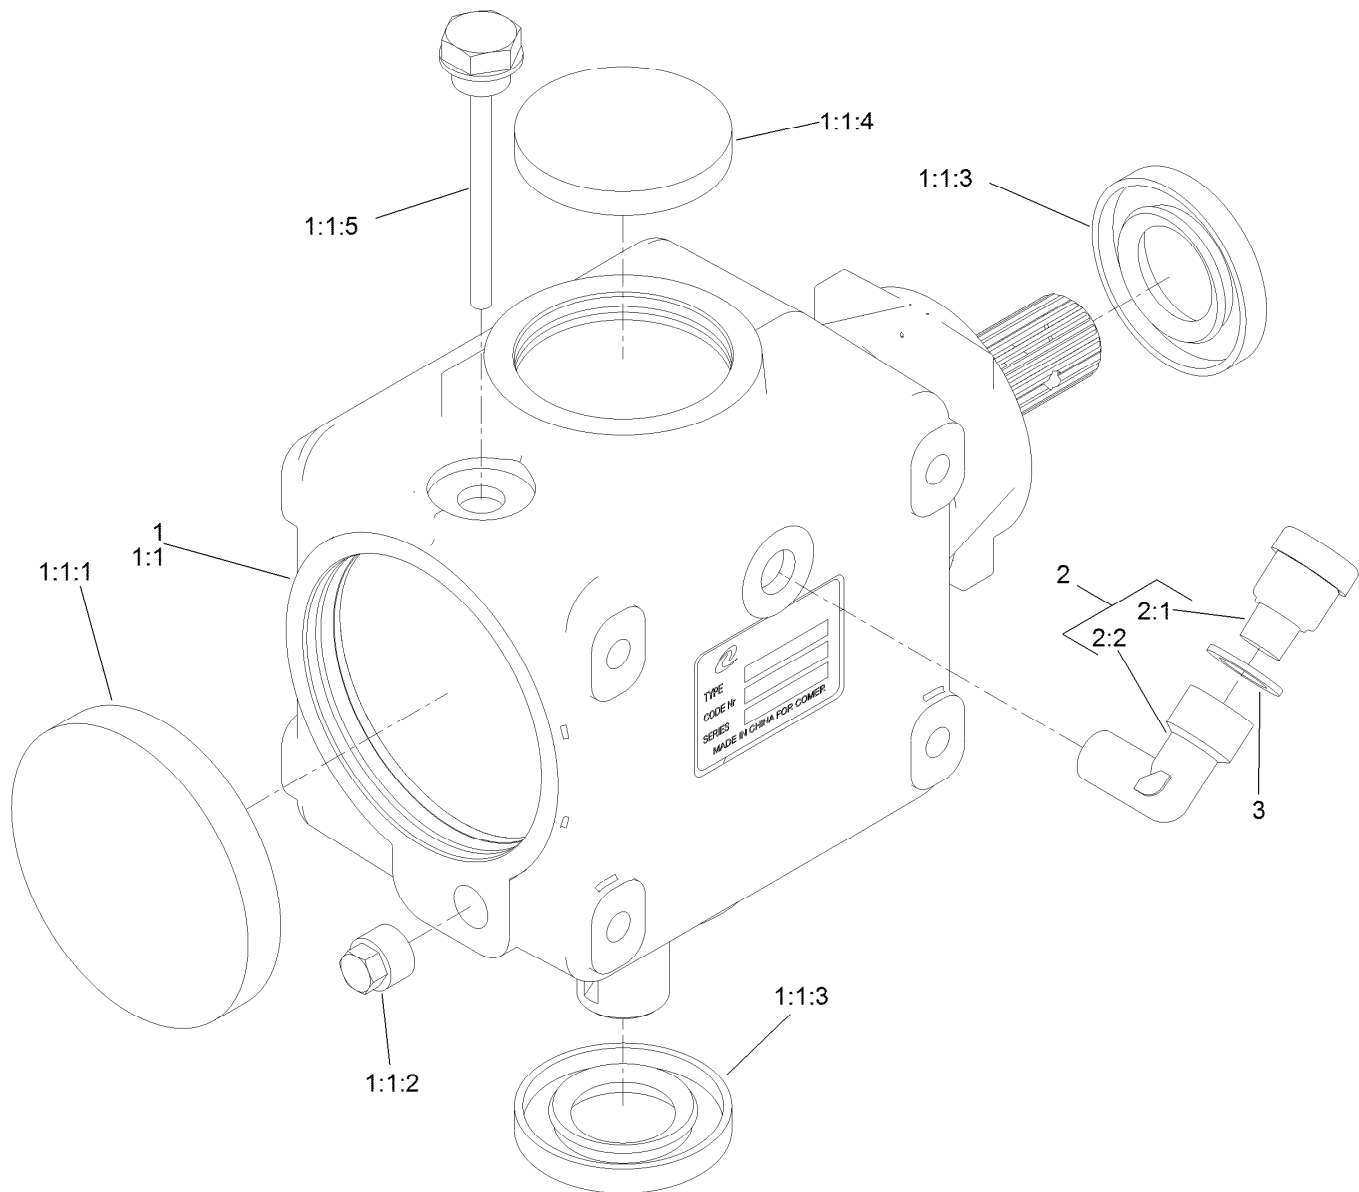

Gearbox Assembly No. 131-6083


Ref.	Part Number	Qty.	Description
1		1	Gearbox ASM ●
1:1		1	Gearbox ASM ●
1:1:1	107-2932	1	Cap-Oil
1:1:2	107-2933	2	Plug
1:1:3	117-9247	2	Seal
1:1:4	107-2935	1	Cap-Oil
1:1:5	110-8283	1	Plug-Filler, Dipstick
2		1	Breather Plug ASM (F/W Gearbox) ●
2:1	131-6920	1	Plug-Breather
2:2	131-6997	1	Elbow-90 DEG
3	130-4899	1	Washer

● Not serviced separately

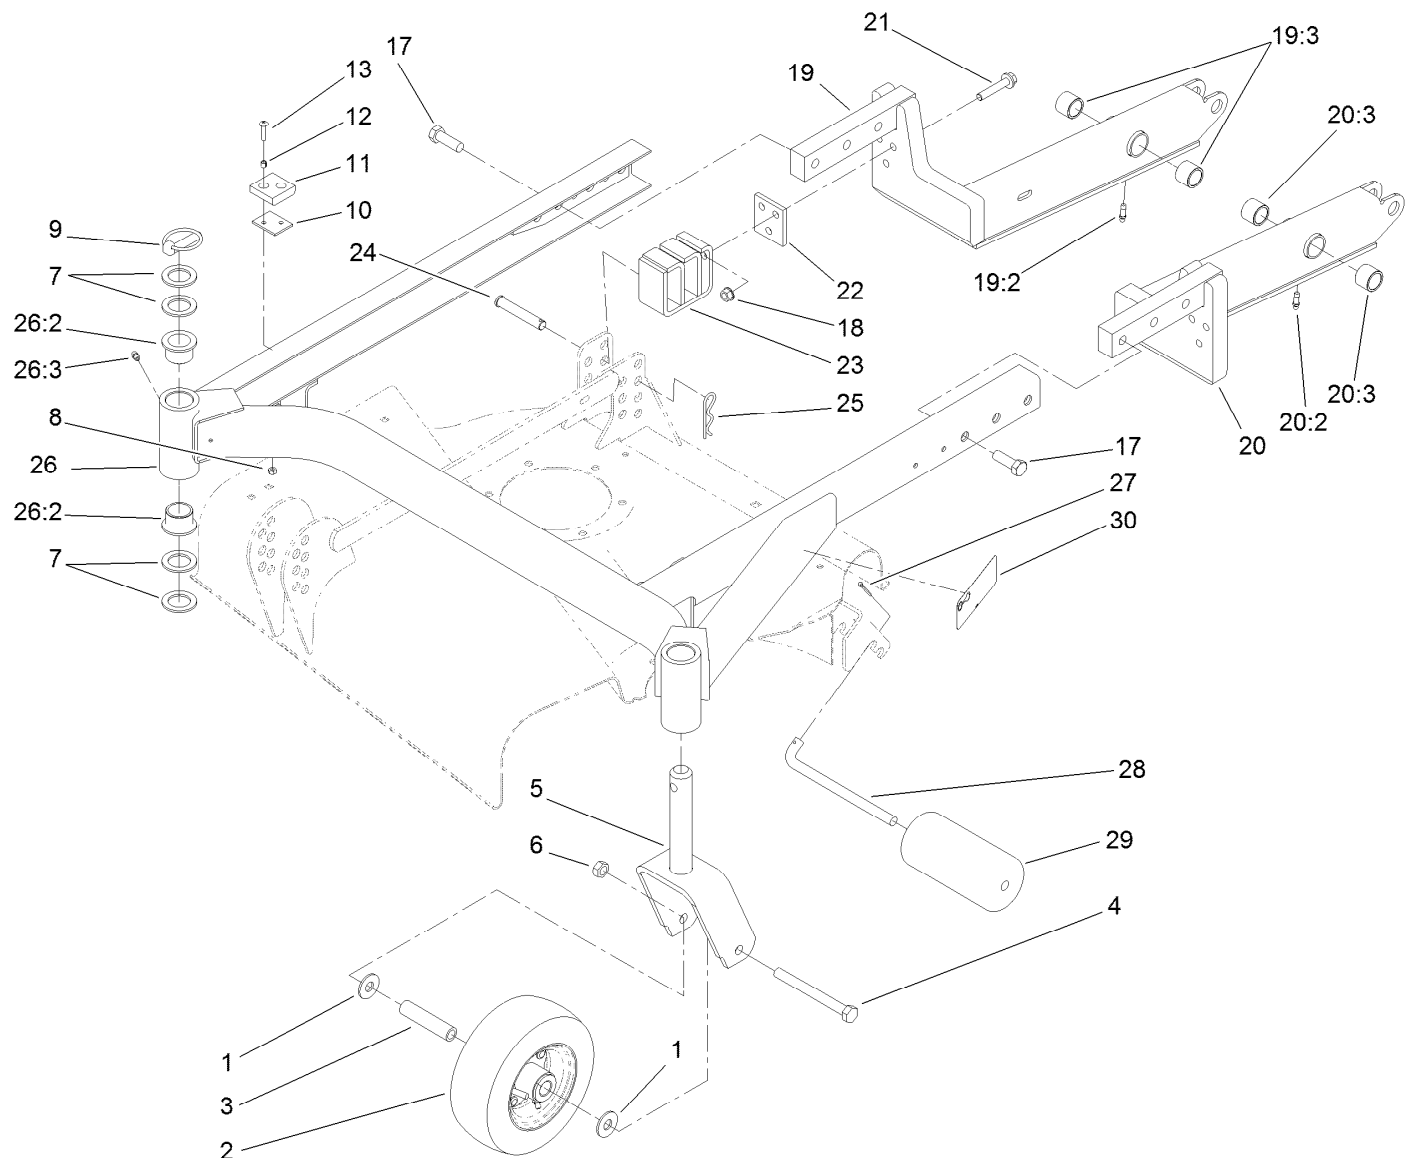

Carrier Frame Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	3256-6	4	Washer-Flat	19:3	92-5648	2	Bushing
2	68-8970	2	Tire And Bearing ASM	20	76-3090	1	LH Lift Arm ASM
3	68-8980	2	Spanner-Tire	20:2	302-62	1	Fitting-Grease
4	325-19	2	Screw-HH	20:3	92-5648	2	Bushing
5	68-8900-01	2	Front Castor Fork ASM	21	66-9302	6	Screw-HHF, Whiz
6	32153-5	2	Nut-Hex	22	83-4580-01	2	Spacer-Cradle
7	3-6781	8	Washer-Thrust	23	83-4520-01	2	Rear Cradle ASM
8	3296-2	4	Nut-Lock, NI	24	283-55	4	Pin-Clevis
9	283-71	2	Pin-Lynch	25	3290-355	4	Pin-Hair
10	42-6200	3	Shim-Cushion	26	83-4550	1	52-Inch Carrier Frame ASM
11	40-0330	2	Cushion-Rubber	26:2	94-1291	4	Bushing
12	40-9520	4	Spacer	26:3	302-5	2	Fitting-Grease
13	32122-28	4	Screw	27	3272-11	2	Pin-Cotter
17	325-32	6	Screw-HH	28	40-0340	2	Shaft-Roller, Rear
18	32128-40	6	Nut-Flange	29	36-1740	2	Roller-Deck
19	76-3080	1	RH Lift Arm ASM	30	93-7819	1	Decal-HOC
19:2	302-62	1	Fitting-Grease				

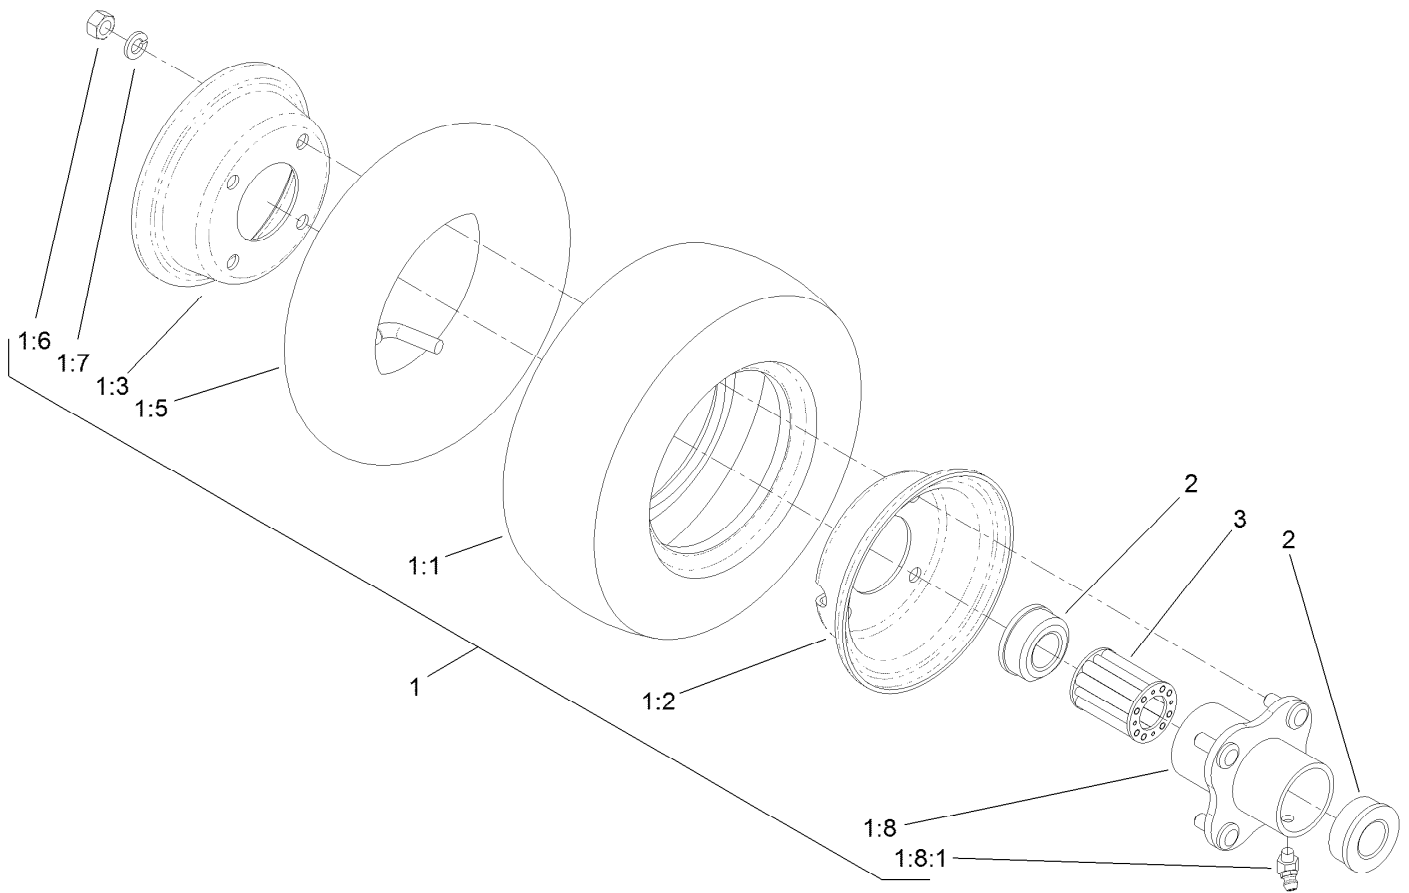

Tire and Bearing Assembly No. 68-8970

Ref.	Part Number	Qty.	Description
1		1	Pneumatic Wheel ASM ●
1:1	68-8960	1	Tire
1:2	68-8920	1	Female Wheel Half
1:3	68-8930	1	Male Wheel Half
1:5	68-8950	1	Tube-Inner (W/Valve)
1:6	3219-2	4	Nut-Hex
1:7	3253-4	4	Washer-Lock
1:8	68-8940	1	Hub-Center
1:8:1	302-11	1	Fitting-Lube, 45 DEG
2	62-5580	2	Bearing-Outside
3	131-5528	1	Bearing-Roller

● Not serviced separately

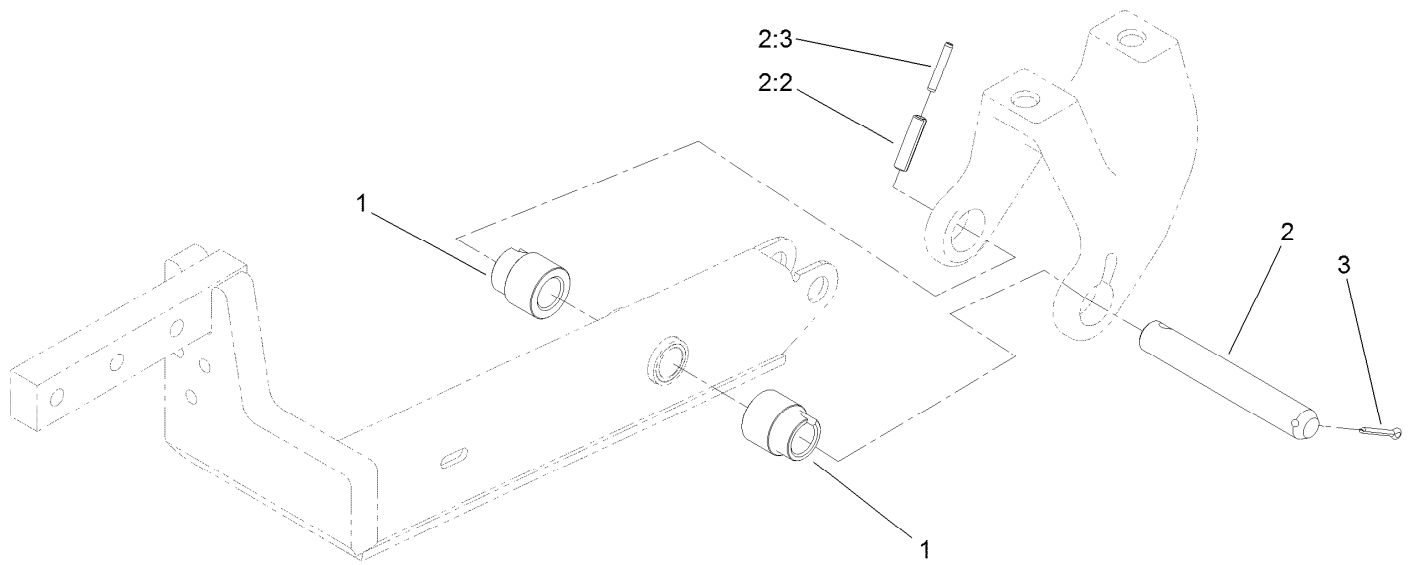

Pivot Pin and Spacer Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	98-7926	4	Spacer-Lift Arm
2	98-2348	2	Pivot Pin ASM
2:2	32121-49	1	Pin-Roll
2:3	32121-71	1	Pin-Spring
3	3272-17	2	Pin-Cotter

Attachments and Accessories

For 30555 52in Side Discharge Mower Groundsmaster 200, 3320 and 3280-D Series Traction Unit

Product Name	Model/Part
Blade-Atomic	104-1301
18in Blade Service Pack	108-1477
Castor Wheel	27-1050
52 Inch Blower Kit	30502
Blade-High Sail	44-5480
Blade-18in	56-2390-03
Recycler Kit	59225
Tire and Bearing Asm	68-8970
Blade and Belt Kit	95-3070
Caster Wheel Kit	95-3077
Spindle Kit	95-3078

Notes:

Notes:

Notes:



Count on it.