



ProLine
15 HP / 48" Mid Size Fixed
Deck Kohler

Model No. 30197 – 990001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Engine & Fuel Tank	1	Spindles And Blades	9
Transmission, Pulleys And Drive Belt	2–3	Center Spindles And Blade	10
Wheel, Brakes And Traction Belts	4	Peerless Transmission Model 700–07A	11–12
Handle Asm	5	Toro Part Number Index	13–17
Deck, Cover and Deck Drive Belts	6	Maintenance	18–20
Deck, Drive Pulleys And Deflector	7	Note:	
Brake Assembly	8		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Recycler Kit	Model No. 30143		
Bagging Kit	Model No. 30198		
Low Sail Blade	Part Number E403149		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSR	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

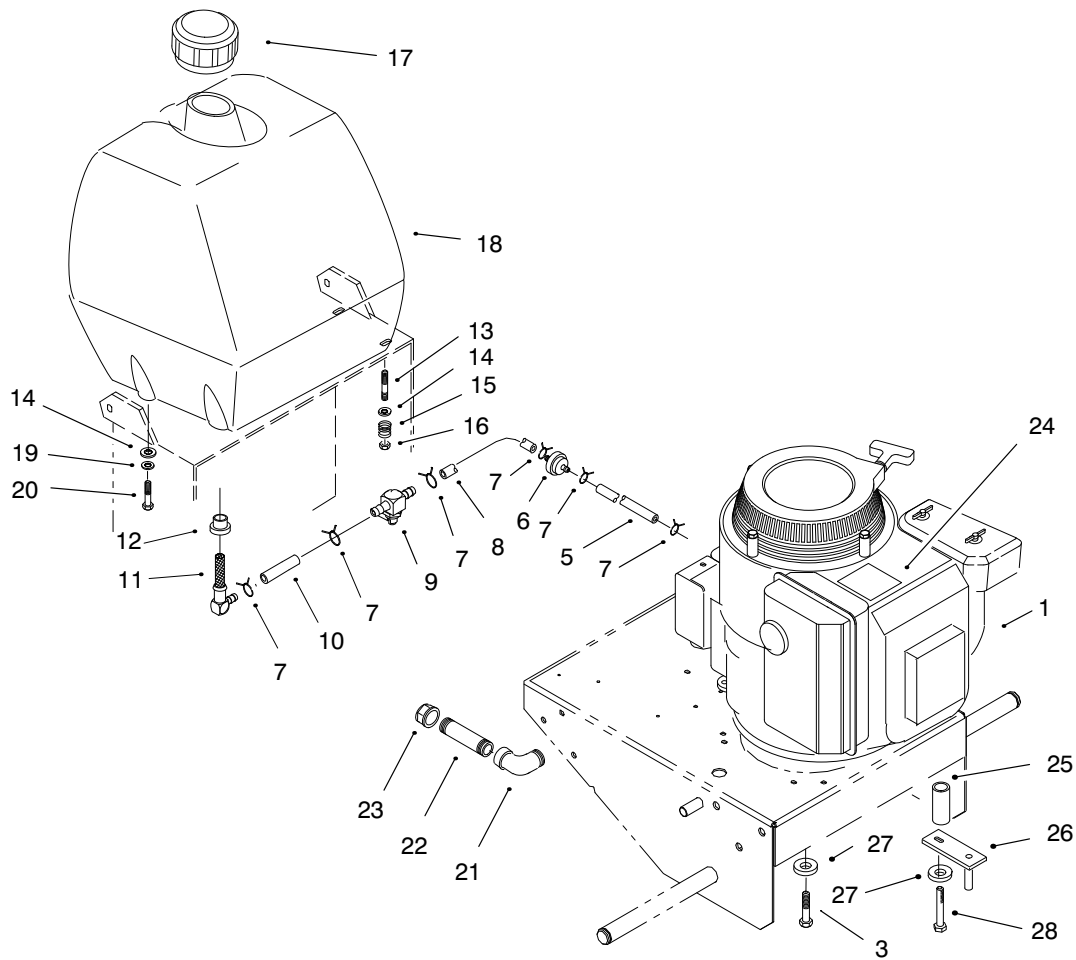


Sheet No.: 2

Engine & Fuel Tank

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1		1	Engine 15hp Kohler Command (Obtain Parts From Kohler Model Cv15t-41542	26	E322110	3	Guide-Belt
3	33114-025	1	Screw-HH	27	E303334	4	Washer-Lock
5	E603954	1	Hose-Fuel	28	E809065	3	Screw-HH
6	E303197	1	Filter				
7	E303077	6	Clamp				
8	E603776	1	Fuel-Line				
9	E603770	1	Valve-Gas				
10	E603955	1	Fuel-Line				
11	E543277	1	Elbow				
12	E513645	1	Bushing				
13	E633023	2	Stud				
14	3256-2	4	Washer-Flat				
15	E633349	2	Spring-Fuel Tank				
16	3296-29	2	Nut-Lock				
17	E513508	1	Cap-Fuel Tank				
18	E323551	1	Tank				
19	3253-4	2	Washer-Lock				
20	322-3	2	Screw-HH				
21	E303431	1	Elbow				
22	E323326	1	Nipple				
23	E543233	1	Cap				
24	63-8440	1	Decal-Hot Surface				
25	E323228	3	Spacer				

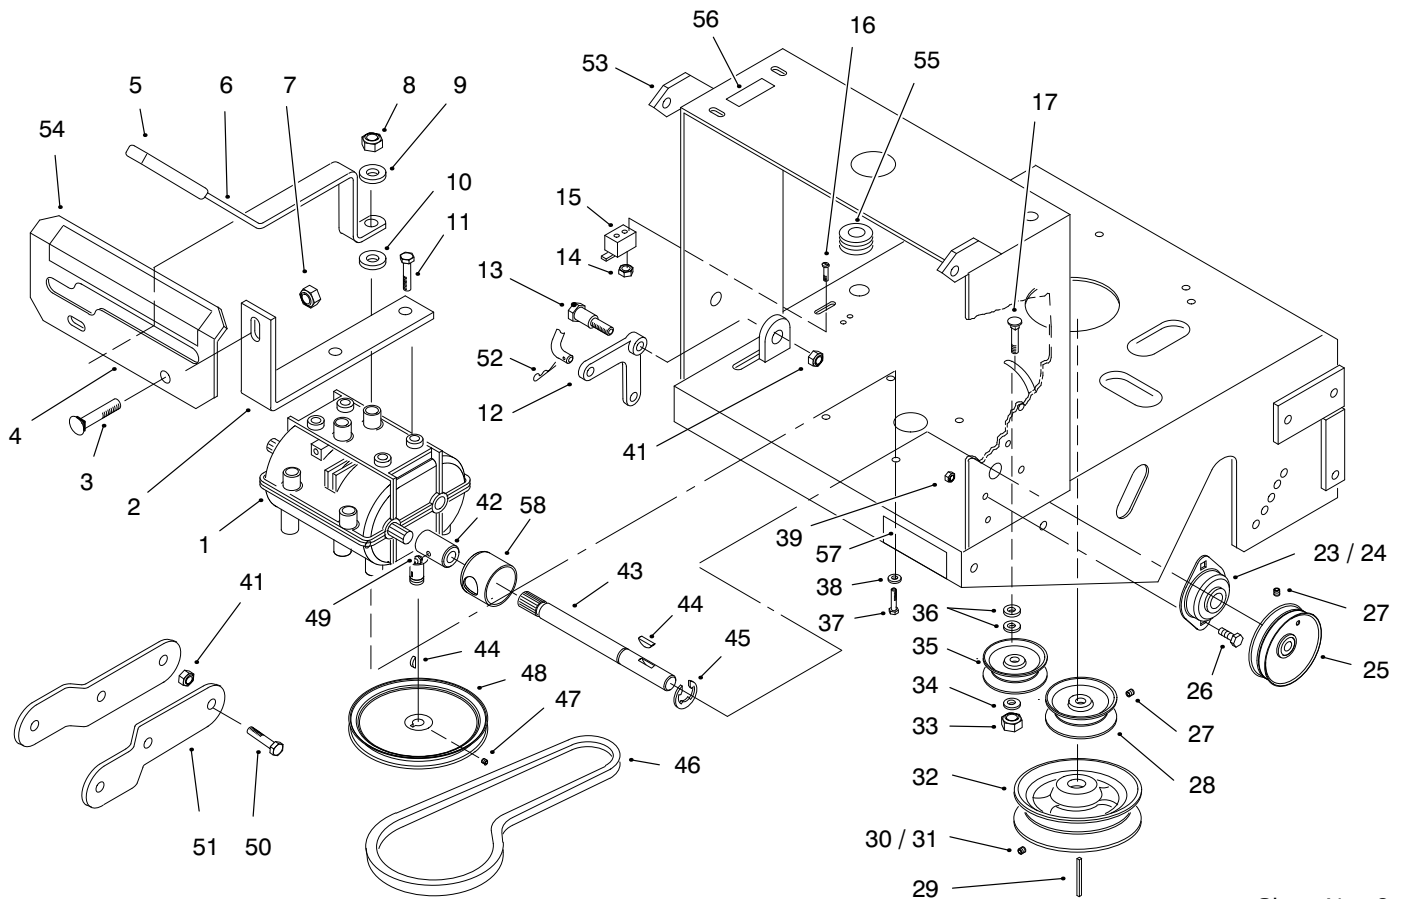

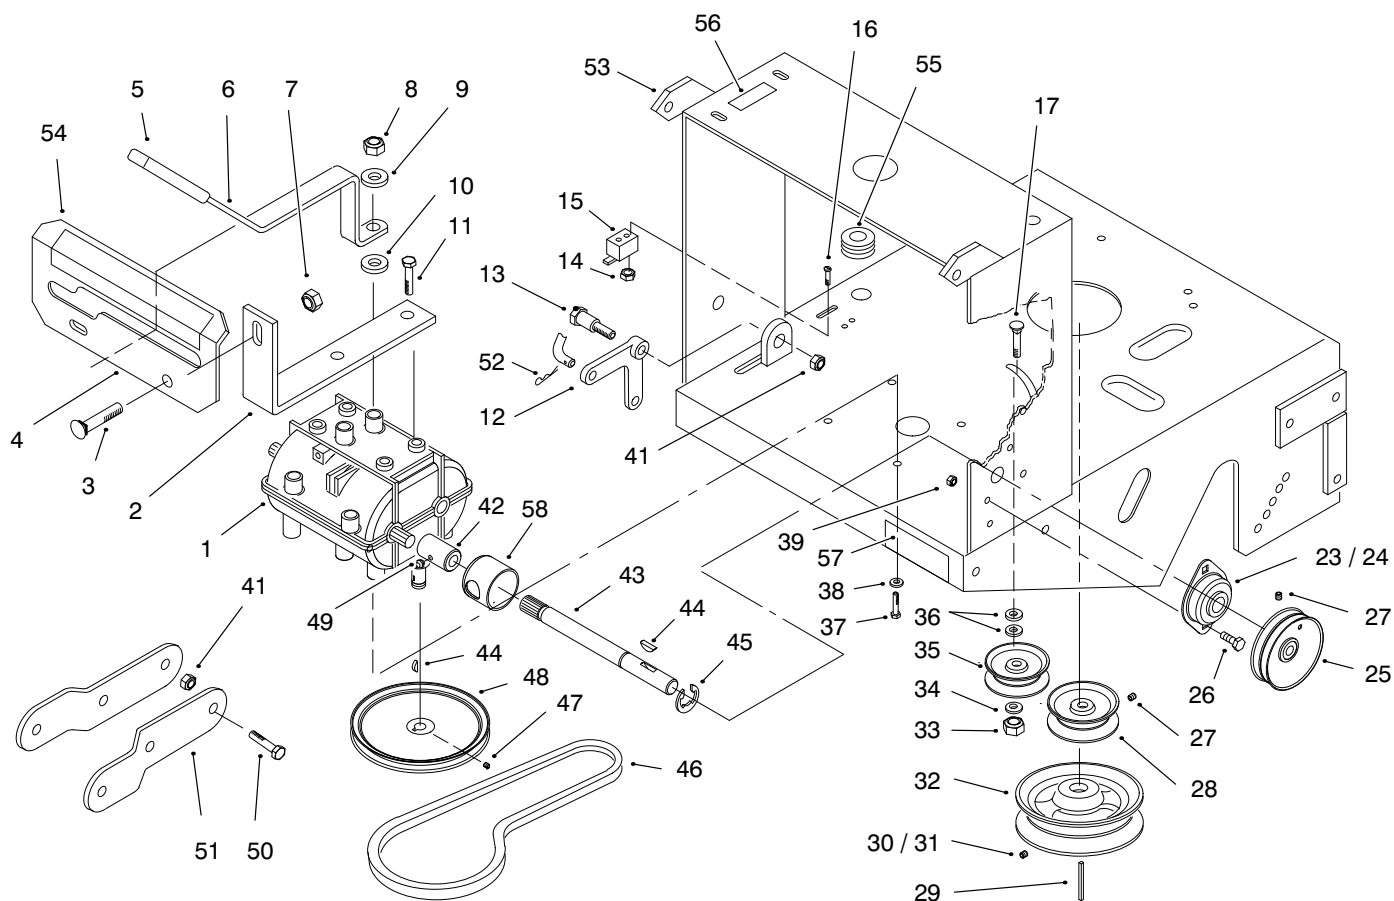


Sheet No.: 3

Transmission, Pulleys And Drive Belt (cont.)

Ref. No.	Part No.	Qty.	Description
56	95-2814	1	Decal-Fuel Shut-Off
57	E323562	1	Decal-Caution
58	51-4220	2	Guard-Coupler

Ref. No.	Part No.	Qty.	Description

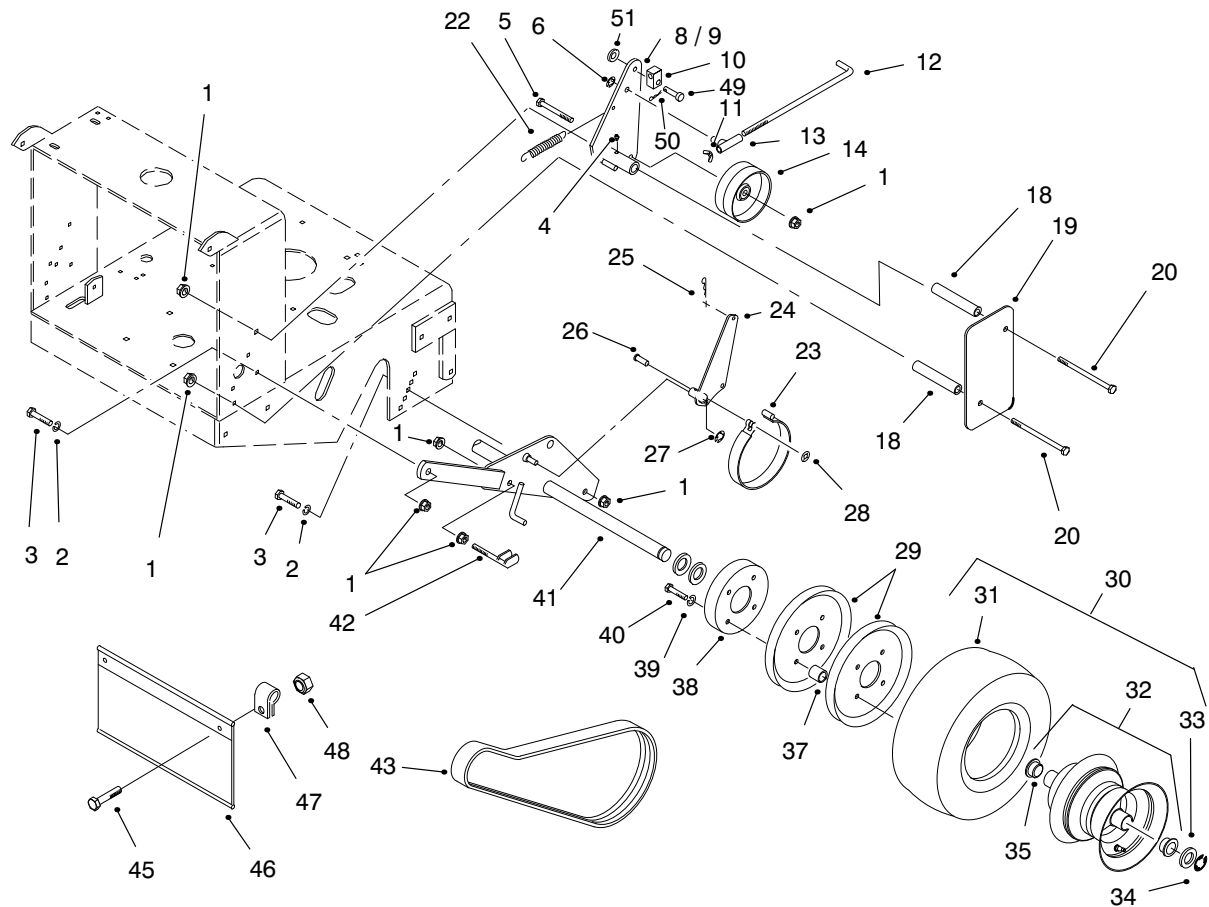


Sheet No.: 4

Wheel, Brakes And Traction Belts

Ref. No.	Part No.	Qty.	Description
1	32128-43	14	Nut-Flange
2	E303327	4	Washer-Lock
3	323-6	4	Screw-HH
4	302-58	2	Fitting-Grease
5	323-11	2	Screw
6	E808522	2	Ring
8	E322205	1	Idler Arm ASM LH
9	E322206	1	Idler Arm ASM RH
10	74-0521	2	Rod-Fitting
11	E513959	2	Wingnut
12	E323296	2	Brake Rod
13	E323694	2	Swivel
14	E323634	2	Idler-Wheel Drive
18	E323197	4	Spacer
19	E323632	2	Shield
20	323-16	4	Screw-HH
22	E323574	2	Spring-Extension
23	E323595	2	Band-Brake
24	E322209	2	Brake Arm ASM
25	3290-307	2	Pin-Cotter
26	E323307	4	Pin
27	E808501	2	Ring-Retaining
28	E803051	4	Nut
29	E323253	4	Sheave
30		2	Wheel/Tire ASM
31	E303125	2	Tire

Ref. No.	Part No.	Qty.	Description
32	E323360	2	Wheel ASM w/Bearings
33	E523157	A/R	Spacer-14 GA
33	E543436	A/R	Spacer-18 GA
34	E808519	2	Ring-Retaining
35	E323329	4	Bearing
37	E323260	8	Spacer
38	E323261	2	Drum-Brake
39	3253-4	8	Washer-Lock
40	322-6	8	Screw-HH
41	E322212	1	Axle ASM
42	E412358	2	Scraper
43	E323631	2	Belt-Drive
45	3210-3	2	Screw-HH
46	E323607	1	Shield-Trailing
47	2412-104	2	Clamp
48	32146-4	2	Nut-Lock
49	283-6	2	Pin-Clevis
50	3290-307	2	Pin-Cotter
51	3256-23	2	Washer-Flat

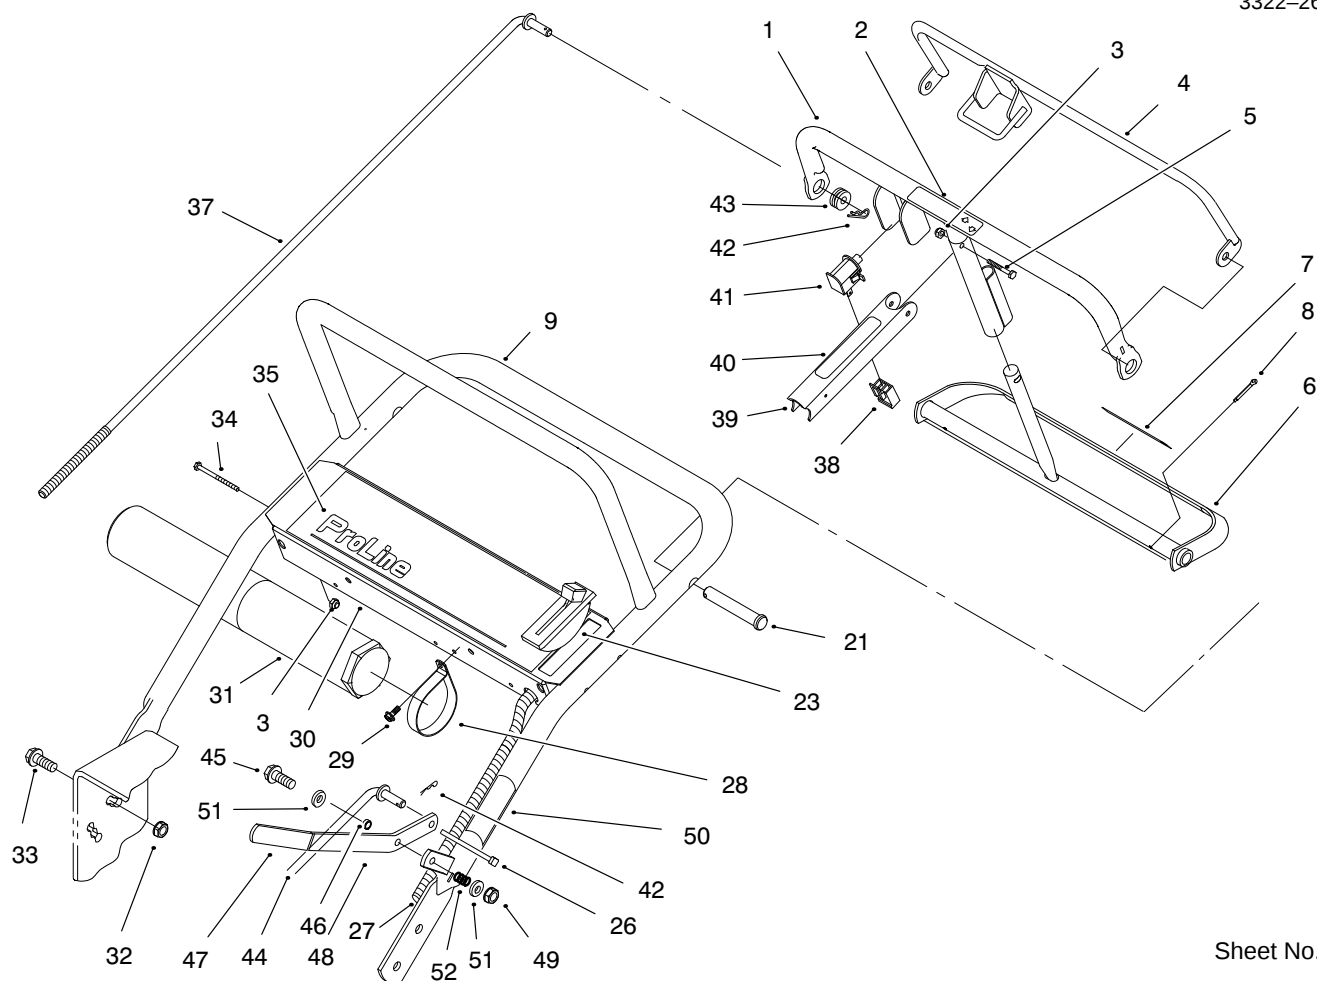


Sheet No.: 5

Handle Asm

Ref. No.	Part No.	Qty.	Description
1	E322215	1	Control Bar
2	82-2290	1	Decal-Control Bar
3	3296-2	5	Nut-Lock
4	E322208	1	Bail ASM
5	32105-1	1	Screw-HH
6	99-8501	1	Pivot-Control
7	82-2280	1	Decal-Reverse
8	3272-11	2	Pin-Cotter
9	E322216	1	Upper Handle ASM
21	283-55	2	Pin-Clevis
23	E323637	1	Throttle Control
26	3290-378	2	Tie-Cable
27	E323568	1	Wire Harness-Kohler
28	2412-120	2	Clamp-R
29	32104-76	2	Screw-Self TAP
30	E304259	1	Control Panel ASM
31	74-0720	1	Tube-Manual
32	32128-21	4	Nut-HF
33	3234-11	4	Screw-HHF
34	32105-14	4	Screw-HH
35	E323564	1	Decal-Panel
37	E323569	2	Rod-Control
38	218-595	1	Connector-Body
39	E323614	1	Lever-Parking Brake
40	E323558	1	Decal-Parking Brake
41	740275	1	Switch-Bail

Ref. No.	Part No.	Qty.	Description
42	3290-307	3	Pin-Cotter
43	237-141	2	Grommet
44	E323576	1	Linkage-Blade Drive
45	323-10	1	Screw-HH
46	99-8509	1	Spacer
47	E303020	1	Grip
48	E323573	1	Lever-Blade Engagement
49	32146-2	1	Nut-Hex Lock
50	E323563	1	Decal-Blade Engagement
51	3256-24	2	Washer-Flat
52	E303160	1	Spring-Compression

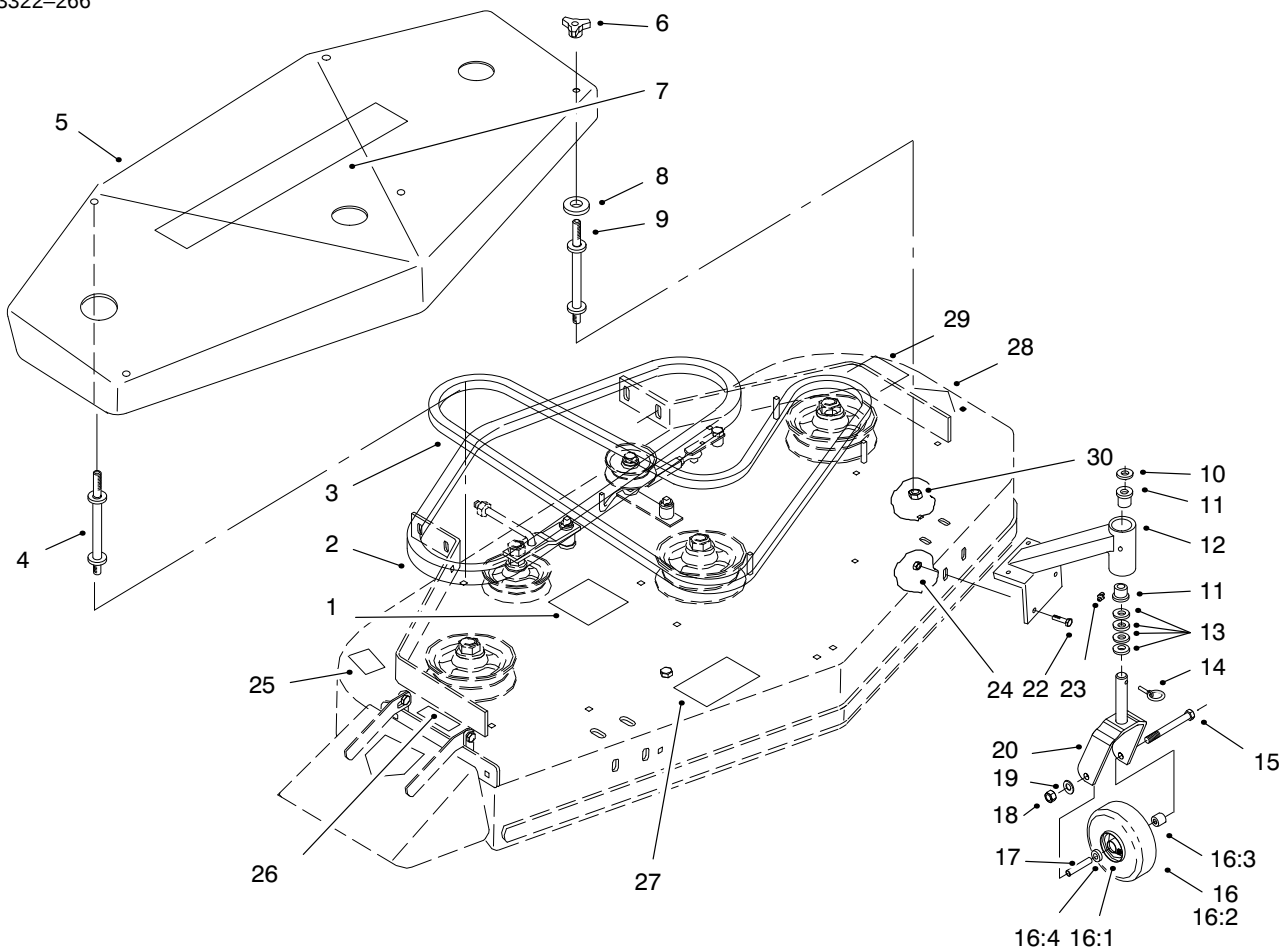


Sheet No.: 10

Deck, Cover and Deck Drive Belts

Ref. No.	Part No.	Qty.	Description
1	E323594	1	Decal-Belt Routing
2	E403164	1	Belt-Blade Drive
3	E403163	1	Belt-Blade Drive
4	E303536	3	Stud-Belt Shield(Long)
5	E404246	1	Belt Cover w/Decal
6	E323385	5	Knob
7	E323561	1	Decal-Proline 48
8	E323417	5	Washer
9	E303537	2	Stud-Belt Shield(Short)
10	E513338	2	Washer
11	E303514	4	Bearing-Flanged
12	E302194	2	Support-Caster
13	E303314	8	Spacer
14	E809020	2	Pin
15	325-20	2	Screw-HH
16		2	Tire/Wheel ASM
16:1	E513807	2	Wheel Hub ASM
16:2	E513808	2	Tire
16:3	E513809	2	Bearing-Roller
16:4	E513810	4	Bushing
17	E513547	2	Spacer
18	3217-9	2	Nut-HH
19	3253-7	2	Washer-Lock
20	E322145	2	Fork


Ref. No.	Part No.	Qty.	Description
22	323-4	8	Screw-HH
23	E811001	2	Zerk
24	32128-43	8	Nut-Flange
25	98-3269	1	Decal-Made In USA
26	67-5360	1	Decal-Danger
27	66-1340	1	Decal-Discharge
28	43-8480	1	Decal-Danger
29	E323659	1	Decal-Torque
30	32128-20	5	Nut-Lock

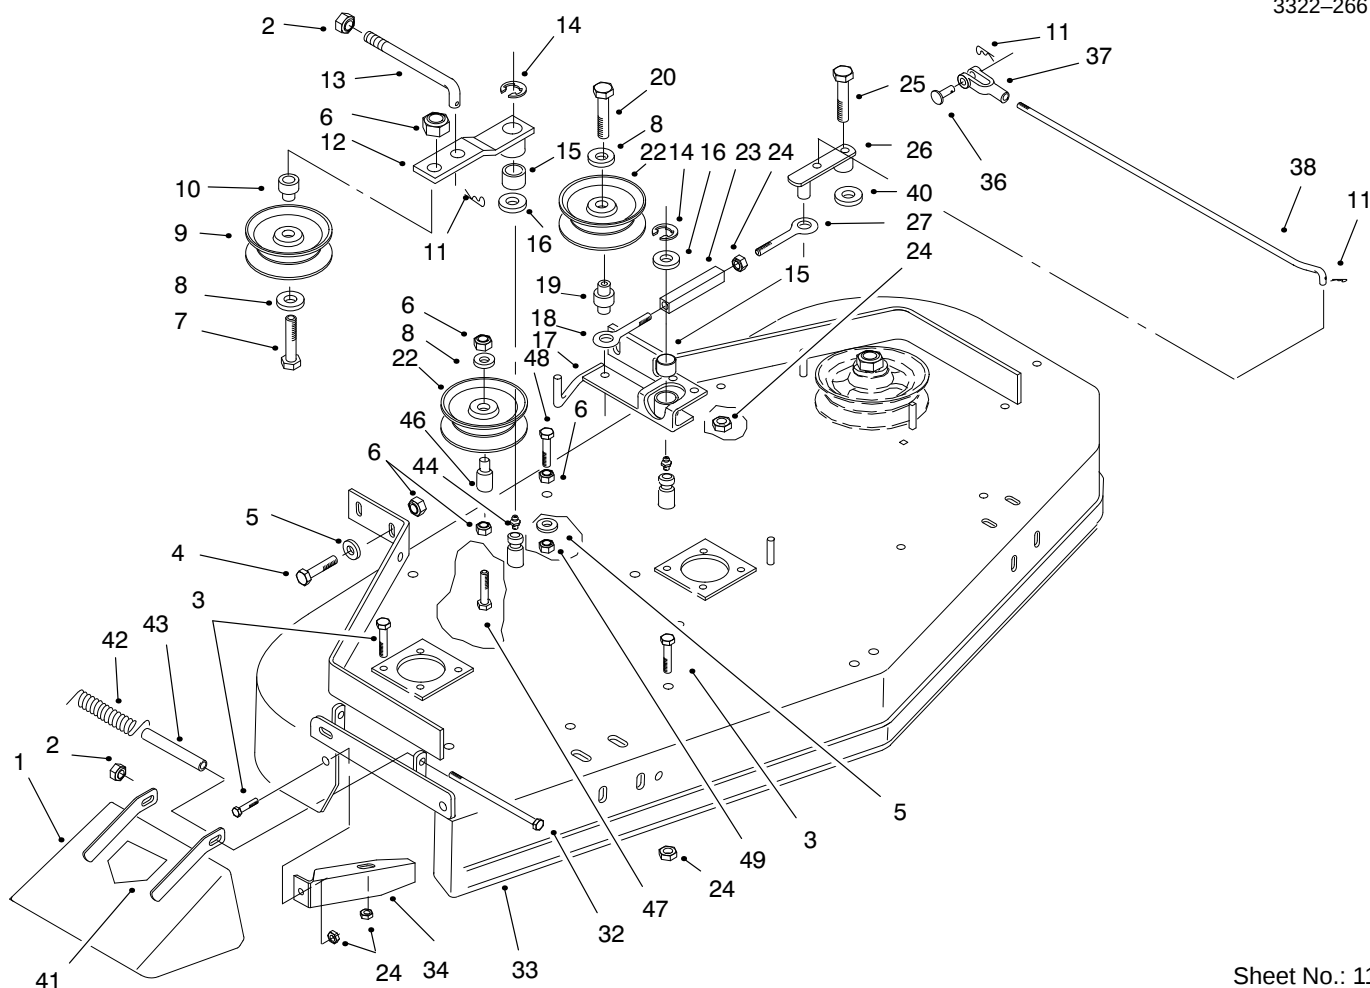

Sheet No.: 11

Deck, Drive Pulleys And Deflector

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	E404245	1	Discharge Chute w/Decal	26	E322211	1	Assist Arm ASM
2	3296-29	2	Nut-Lock	27	E303238	1	Eye Bolt
3	E800270	10	Screw-HH	32	E800291	1	Screw-HH
4	323-7	6	Screw-HH	33	E404244	1	Deck ASM w/ Decals
5	E303327	7	Washer-Lock	34	E402107	1	Baffle Weldment
6	32128-43	10	Nut-Flange	36	E808280	1	Pin-Clevis
7	323-9	1	Screw-HH	37	E303105	1	Yoke
8	3256-24	3	Washer-Flat	38	E323303	1	Linkage-Assist Arm
9	E403119	1	Pulley-Idler	40	80-4980	1	Washer
10	E603496	1	Bushing	41	93-1122	1	Decal-Danger
11	3290-307	3	Pin-Cotter	42	E323575	1	Spring-Deflector
12	E402053	1	Idler Arm Assembly	43	E323636	1	Spacer-Spring
13	E403107	1	Rod-Tension	44	302-58	2	Fitting-Grease
14	E808505	2	Ring-Retaining	46	E543879	1	Bushing
15	E303144	2	Bearing	47	E800029	1	TAP Bolt
16	E303352	2	Washer-Spindle	48	323-13	1	Screw-HH
17	E324344	1	Engagement Arm w/Bushing	49	32146-2	1	Nut-Hex Lock
18	E303348	1	Eye Bolt				
19	E303434	1	Bushing				
20	E803003	1	Bolt-Whizlock				
22	E603843	2	Pulley-Idler				
23	E303236	1	Turnbuckle Body				
24	32128-20	12	Nut-Lock				
25	E809084	1	Bolt-Shoulder				

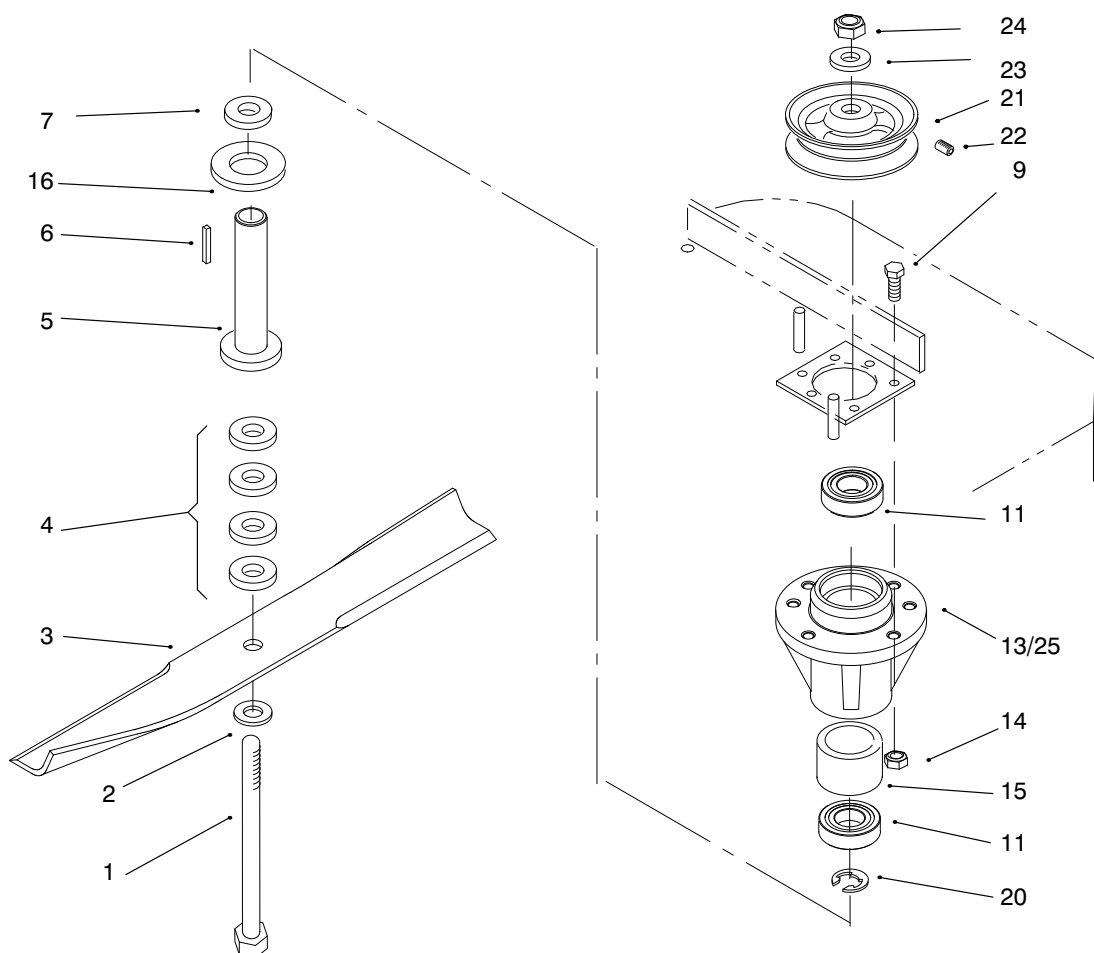


Sheet No.: 8

Spindles And Blades

Ref. No.	Part No.	Qty.	Description
1	E800861	2	Screw—HH
2	E513208	2	Washer—Lock
3	E323515	2	Blade—High Lift
3	E403149	2	Blade—Low Lift
4	E323539	8	Spacer
5	E323529	2	Tube Spindle Short
6	E807267	2	Key
7	E323533	2	Spacer
9	323—7	12	Screw—HH
11	E513016	4	Bearing
13	E634619	2	Housing—Spindle
14	32146—2	12	Nut—Hex Lock
15	E323528	2	Spacer
16	E633573	2	Guard
20	E403167	2	Ring—Retaining
21	E303558	2	Pulley
22	E803310	2	Screw—Set
23	E323399	2	Spacer
24	3219—6	2	Nut—Hex
25	E323532	2	Housing

Ref. No.	Part No.	Qty.	Description

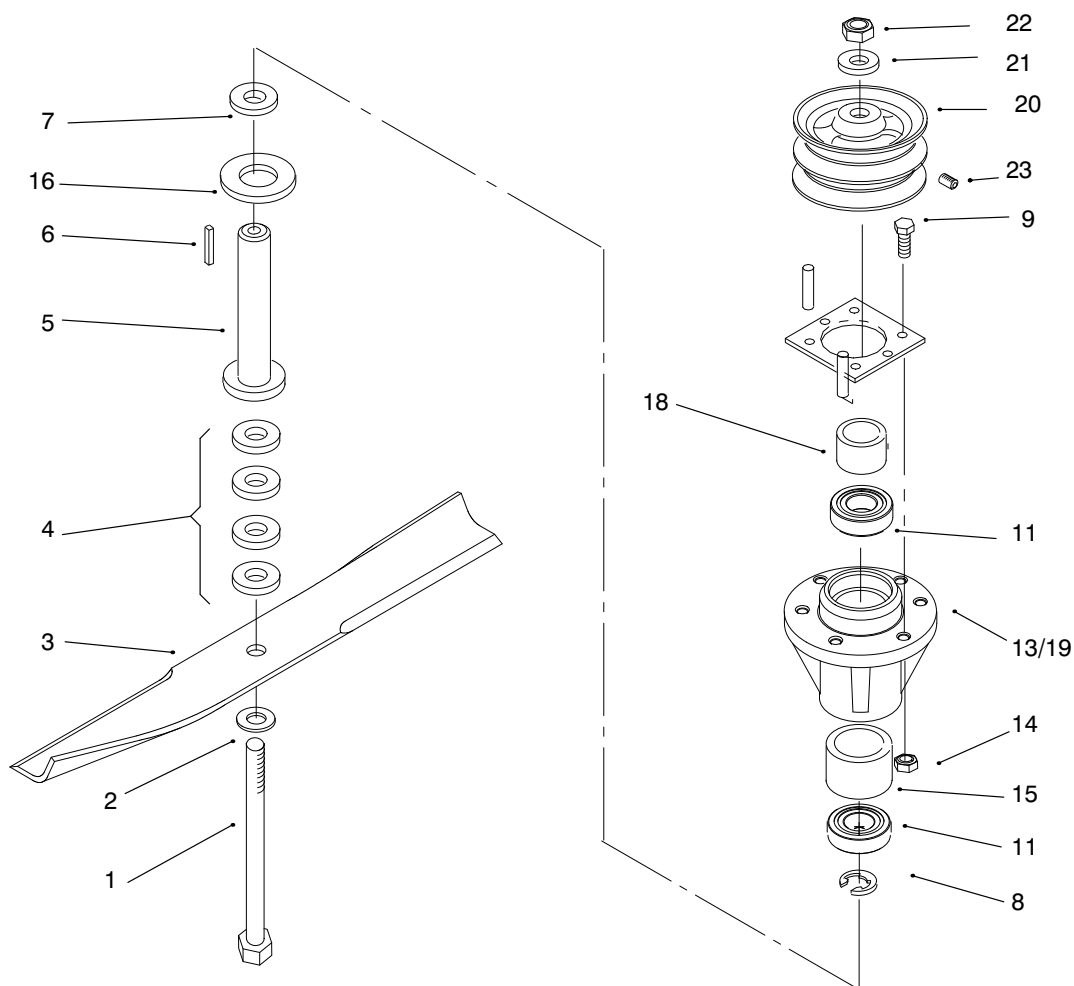


Sheet No.: 9

Center Spindles And Blade

Ref. No.	Part No.	Qty.	Description
1	E800862	1	Screw-Hhcs
2	E513208	1	Washer-Lock
3	E323515	1	Blade-High Lift
3	E403149	1	Blade-Low Lift
4	E323539	4	Spacer
5	E323530	1	Tube-Spindle Long
6	E807267	1	Key
7	E323533	1	Spacer
8	E808502	1	Ring-Retaining
9	323-7	6	Screw-HH
11	E513016	2	Bearing
13	E323532	1	Housing
14	32146-2	6	Nut-Hex Lock
15	E323528	1	Spacer
16	E633573	1	Guard
18	E323538	1	Spacer-Sheave/Bear ng
19	E634619	1	Housing-Spindle
20	E403133	1	Sheave-Double Groove
21	E323399	1	Spacer
22	3219-6	1	Nut-Hex
23	E803310	1	Screw-Set

Ref. No.	Part No.	Qty.	Description

PEERLESS TRANSMISSION MODEL 700-070A

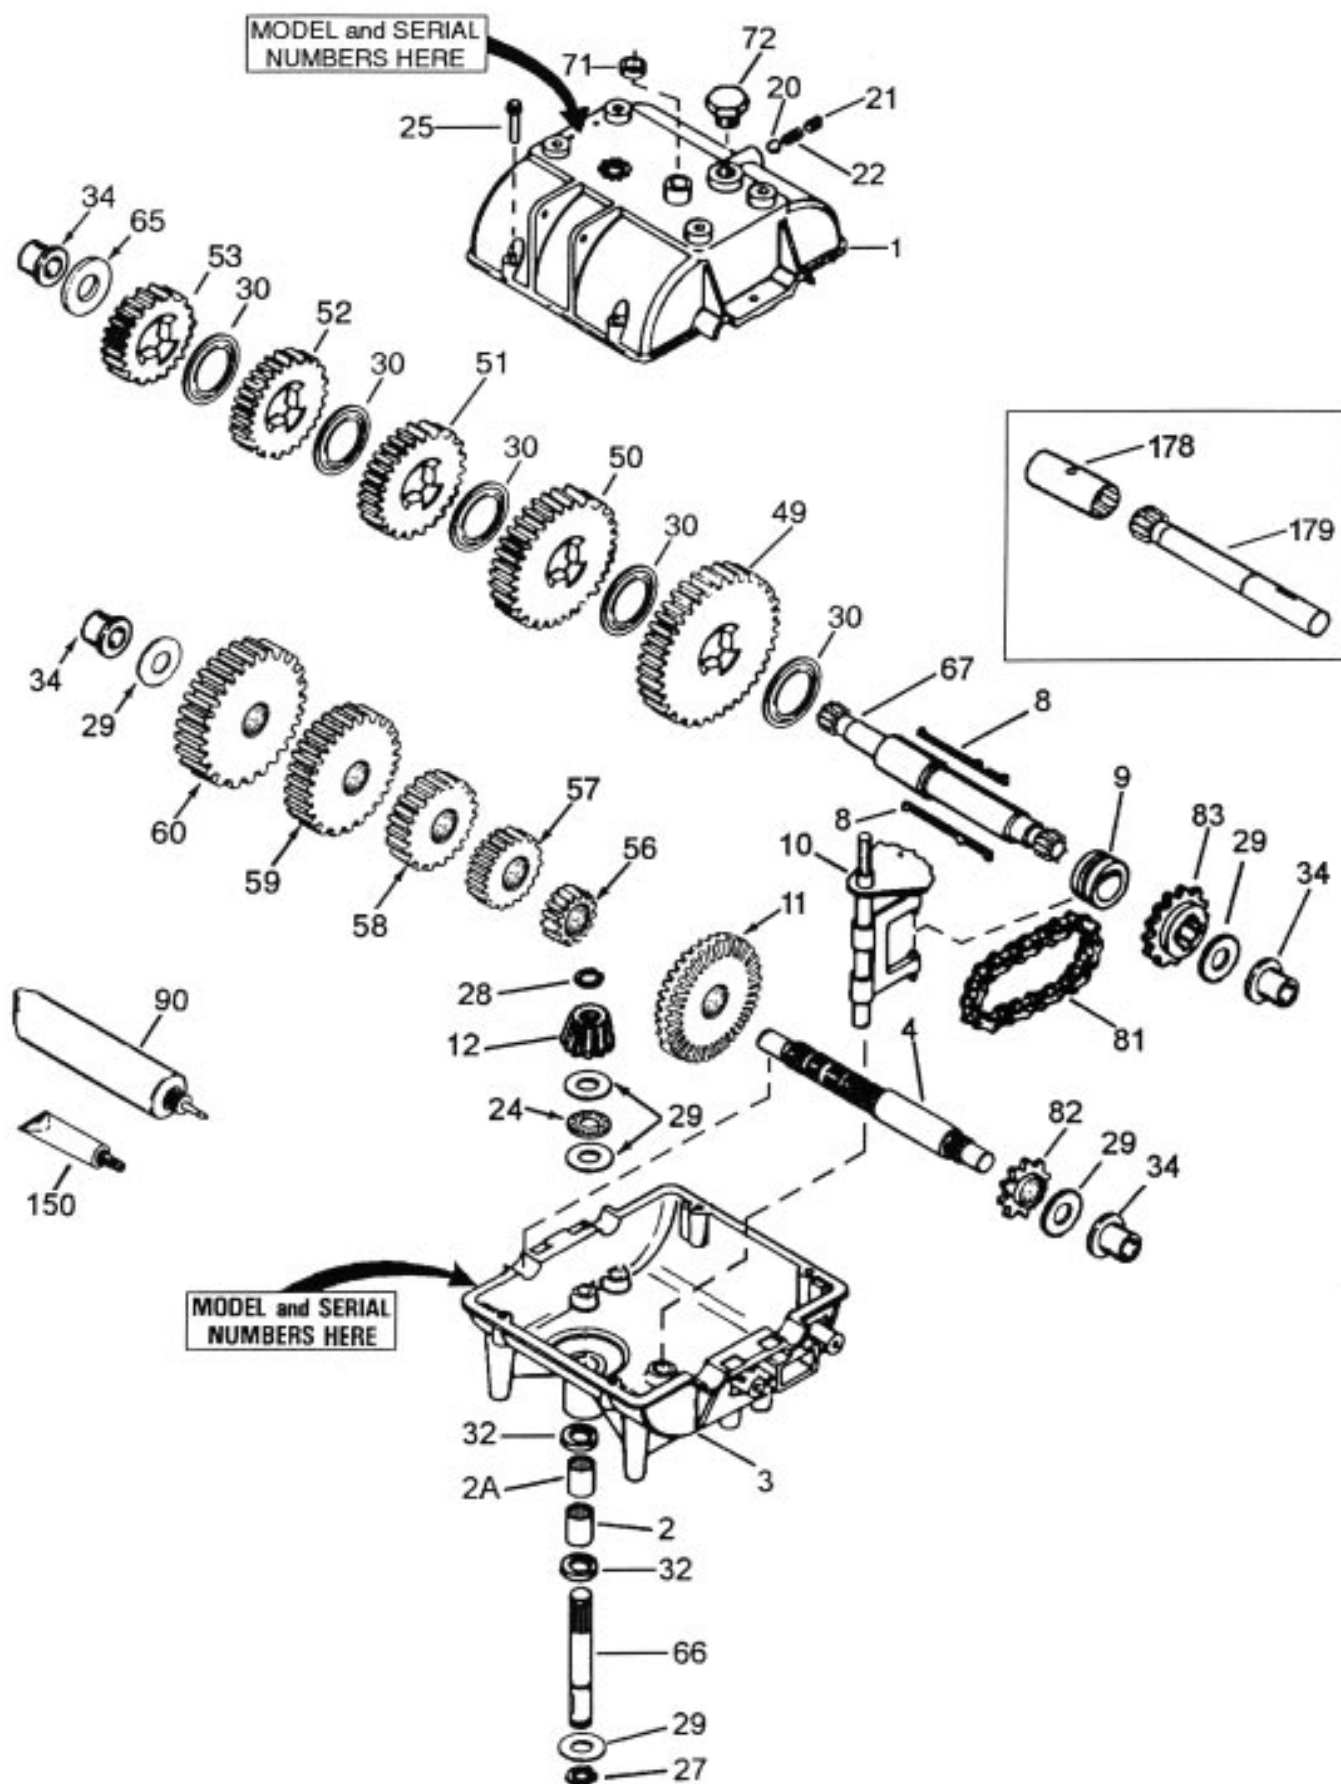

PEERLESS TRANSMISSION MODEL 700-070A

Ref. No.	Part No.	Description	No. Used
1	772083A	Transmission Cover	1
2	780086A	Needle Bearing	1
2A	780142	Needle Bearing	1
3	770061A	Transmission Case	1
4	776134	Countershaft	1
8	792089A	Shift Key	4
9	784266	Shift Collar	1
10	784376	Shift Rod & Fork	1
11	778154	Bevel Gear (42 Teeth)	1
12	778176	Bevel Pinion (14 Teeth- Steel)	1
20	792077A	Ball 5/16" Dia.	1
21	792078	Set Screw	1
22	792079	Spring	1
24	780071	Thrust Bearing	1
25	792073A	Screw	6
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	6
30	780108	Washer	5
32	792001	O-Ring	2
34	780105A	Flanged Bushing	4
49	778146A	Spur Gear (37 Teeth)	1
50	778125	Spur Gear (35 Teeth)	1
51	778239A	Spur Gear (32 Teeth-Steel)	1

Ref. No.	Part No.	Description	No. Used
52	778124A	Spur Gear (30 Teeth)	1
53	778123A	Spur Gear (25 Teeth)	1
56	778145	Spur Gear (12 Teeth-Steel)	1
57	778151	Spur Gear (15 Teeth)	1
58	778240	Spur Gear (18 Teeth-Steel)	1
59	778126A	Spur Gear (20 Teeth)	1
60	778127A	Spur Gear (25 Teeth)	1
65	780139	Washer	1
66	776135	Input Shaft (3-11/16" long)	1
67	776402	Shifter & Brake Shaft	1
71	788069	Square Cut Ring	1
72	792074	Threaded Plug	1
81	786081	Roller Chain (No. 41 Chain, 24 Links)	1
82	786082	Sprocket (9 Teeth)	1
83	786083	Sprocket (18 Teeth)	1
90	788067B	Grease (32 oz. Bottle Bentonite Grease)	1
150	510334	Gasket Eliminator (Loctite #515)	1
178	786176	Coupling (Optional)	1
179	776401	Connector Shaft (Optional)	1

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
740275	5	41	1	Switch—Bail
E302194	6	12	2	Support—Caster
E303020	2	5	1	Grip
E303020	5	47	1	Grip
E303077	1	7	6	Clamp
E303105	7	37	1	Yoke
E303125	4	31	2	Tire
E303144	7	15	2	Bearing
E303160	5	52	1	Spring—Compression
E303186	2	12	1	Bell Crank
E303197	1	6	1	Filter
E303236	7	23	1	Turnbuckle Body
E303238	7	27	1	Eye Bolt
E303314	6	13	8	Spacer
E303327	2	9	1	Washer—Lock
E303327	4	2	4	Washer—Lock
E303327	7	5	7	Washer—Lock
E303334	1	27	4	Washer—Lock
E303348	7	18	1	Eye Bolt
E303352	7	16	2	Washer—Spindle
E303431	1	21	1	Elbow
E303434	7	19	1	Bushing
E303514	6	11	4	Bearing—Flanged
E303536	6	4	3	Stud—Belt Shield(Long)
E303537	6	9	2	Stud—Belt Shield(Short)
E303558	9	21	2	Pulley
E304259	5	30	1	Control Panel ASM
E322110	1	26	3	Guide—Belt
E322145	6	20	2	Fork
E322201	2	53	1	Deck—Engine
E322205	4	8	1	Idler Arm ASM LH
E322206	4	9	1	Idler Arm ASM RH
E322208	5	4	1	Bail ASM
E322209	4	24	2	Brake Arm ASM
E322211	7	26	1	Assist Arm ASM
E322212	4	41	1	Axle ASM
E322215	5	1	1	Control Bar
E322216	5	9	1	Upper Handle ASM
E323197	4	18	4	Spacer
E323228	1	25	3	Spacer
E323252	2	23	2	Bearing
E323253	4	29	4	Sheave
E323254	2	24	2	Flange
E323256	2	28	1	Sheave
E323257	2	25	2	Sheave
E323260	4	37	8	Spacer
E323261	4	38	2	Drum—Brake
E323278	2	48	1	Sheave
E323285	2	35	1	Idler Pulley
E323296	4	12	2	Brake Rod
E323303	7	38	1	Linkage—Assist Arm
E323307	4	26	4	Pin
E323318	2	51	2	Hitch Bracket
E323326	1	22	1	Nipple
E323329	4	35	4	Bearing
E323360	4	32	2	Wheel ASM w/Bearings
E323379	2	10	1	Washer
E323385	6	6	5	Knob
E323387	2	4	1	Shifter Plate
E323389	2	2	2	Leg—Shifter Lever
E323399	9	23	2	Spacer
E323399	10	21	1	Spacer

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
E323417	6	8	5	Washer
E323502	2	43	2	Output Shaft
E323515	9	3	2	Blade—High Lift
E323515	10	3	1	Blade—High Lift
E323528	9	15	2	Spacer
E323528	10	15	1	Spacer
E323529	9	5	2	Tube Spindle Short
E323530	10	5	1	Tube—Spindle Long
E323532	9	25	2	Housing
E323532	10	13	1	Housing
E323533	9	7	2	Spacer
E323533	10	7	1	Spacer
E323538	10	18	1	Spacer—Sheave/Bearing
E323539	9	4	8	Spacer
E323539	10	4	4	Spacer
E323551	1	18	1	Tank
E323558	5	40	1	Decal—Parking Brake
E323560	2	54	1	Decal—Ground Speed
E323561	6	7	1	Decal—Proline 48
E323562	3	57	1	Decal—Caution
E323563	5	50	1	Decal—Blade Engagement
E323564	5	35	1	Decal—Panel
E323568	5	27	1	Wire Harness—Kohler
E323569	5	37	2	Rod—Control
E323570	2	6	1	Lever—Shift
E323573	5	48	1	Lever—Blade Engagement
E323574	4	22	2	Spring—Extension
E323575	7	42	1	Spring—Deflector
E323576	5	44	1	Linkage—Blade Drive
E323594	6	1	1	Decal—Belt Routing
E323595	4	23	2	Band—Brake
E323600	8	6	1	Rod—Brake
E323601	8	2	1	Rod—Brake
E323607	4	46	1	Shield—Trailing
E323614	5	39	1	Lever—Parking Brake
E323630	2	46	1	Belt—Trans Drive
E323631	4	43	2	Belt—Drive
E323632	4	19	2	Shield
E323634	4	14	2	Idler—Wheel Drive
E323636	7	43	1	Spacer—Spring
E323637	5	23	1	Throttle Control
E323659	6	29	1	Decal—Torque
E323680	2	58	2	Coupling
E323694	4	13	2	Swivel
E324305	8	1	2	Brake ASM
E324344	7	17	1	Engagement Arm w/Bushing
E402053	7	12	1	Idler Arm Assembly
E402107	7	34	1	Baffle Weldment
E403087	2	32	1	Pulley
E403107	7	13	1	Rod—Tension
E403119	7	9	1	Pulley—Idler
E403133	10	20	1	Sheave—Double Groove
E403149	9	3	2	Blade—Low Lift
E403149	10	3	1	Blade—Low Lift
E403163	6	3	1	Belt—Blade Drive
E403164	6	2	1	Belt—Blade Drive
E403167	9	20	2	Ring—Retaining
E404244	7	33	1	Deck ASM w/ Decals
E404245	7	1	1	Discharge Chute w/Decal
E404246	6	5	1	Belt Cover w/Decal
E412358	4	42	2	Scraper
E513016	9	11	4	Bearing

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
E513016	10	11	2	Bearing
E513152	2	15	1	Switch—Seat
E513208	9	2	2	Washer—Lock
E513208	10	2	1	Washer—Lock
E513338	6	10	2	Washer
E513508	1	17	1	Cap—Fuel Tank
E513547	6	17	2	Spacer
E513645	1	12	1	Bushing
E513807	6	16:1	2	Wheel Hub ASM
E513808	6	16:2	2	Tire
E513809	6	16:3	2	Bearing—Roller
E513810	6	16:4	4	Bushing
E513959	4	11	2	Wingnut
E523157	4	33	A/R	Spacer—14 GA
E543233	1	23	1	Cap
E543277	1	11	1	Elbow
E543296	2	55	1	Grommet—Fuel Line
E543436	4	33	A/R	Spacer—18 GA
E543879	7	46	1	Bushing
E603403	2	13	1	Bolt—Shoulder
E603496	7	10	1	Bushing
E603770	1	9	1	Valve—Gas
E603776	1	8	1	Fuel—Line
E603843	7	22	2	Pulley—Idler
E603954	1	5	1	Hose—Fuel
E603955	1	10	1	Fuel—Line
E633023	1	13	2	Stud
E633349	1	15	2	Spring—Fuel Tank
E633573	9	16	2	Guard
E633573	10	16	1	Guard
E634619	9	13	2	Housing—Spindle
E634619	10	19	1	Housing—Spindle
E800029	7	47	1	TAP Bolt
E800270	7	3	10	Screw—HH
E800291	7	32	1	Screw—HH
E800861	9	1	2	Screw—HH
E800862	10	1	1	Screw—Hhcs
E803003	7	20	1	Bolt—Whizlock
E803028	2	16	2	Screw
E803051	4	28	4	Nut
E803293	2	47	2	Screw—Set
E803310	2	27	3	Screw—Set
E803310	9	22	2	Screw—Set
E803310	10	23	1	Screw—Set
E807009	2	44	3	Key
E807264	2	29	1	Key
E807267	9	6	2	Key
E807267	10	6	1	Key
E807511	2	17	1	Bolt—CARR
E808280	7	36	1	Pin—Clevis
E808501	4	27	2	Ring—Retaining
E808502	10	8	1	Ring—Retaining
E808505	7	14	2	Ring—Retaining
E808519	4	34	2	Ring—Retaining
E808522	4	6	2	Ring
E808523	2	45	2	Ring—Retaining
E809020	6	14	2	Pin
E809065	1	28	3	Screw—HH
E809084	7	25	1	Bolt—Shoulder
E811001	6	23	2	Zerk
43-8480	6	28	1	Decal—Danger
51-4220	3	42	2	Guard—Coupler

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
63-8440	1	24	1	Decal-Hot Surface
66-1340	6	27	1	Decal-Discharge
67-0710	8	3	2	Ball-Swivel
67-5360	6	26	1	Decal-Danger
74-0521	4	10	2	Rod-Fitting
74-0720	5	31	1	Tube-Manual
80-4980	7	40	1	Washer
82-2280	5	7	1	Decal-Reverse
82-2290	5	2	1	Decal-Control Bar
93-1122	7	41	1	Decal-Danger
95-2814	3	56	1	Decal-Fuel Shut-Off
98-3269	6	25	1	Decal-Made In USA
99-8501	5	6	1	Pivot-Control
99-8509	5	46	1	Spacer
218-595	5	38	1	Connector-Body
237-141	5	43	2	Grommet
2412-104	4	47	2	Clamp
2412-120	5	28	2	Clamp-R
283-6	4	49	2	Pin-Clevis
283-55	5	21	2	Pin-Clevis
302-58	2	49	2	Fitting-Grease
302-58	4	4	2	Fitting-Grease
302-58	7	44	2	Fitting-Grease
321-3	2	26	4	Screw-HH
322-3	1	20	2	Screw-HH
322-3	2	37	4	Screw-HH
322-3	8	5	4	Screw-HH
322-6	4	40	8	Screw-HH
323-4	6	22	8	Screw-HH
323-6	2	50	4	Screw-HH
323-6	4	3	4	Screw-HH
323-7	7	4	6	Screw-HH
323-7	9	9	12	Screw-HH
323-7	10	9	6	Screw-HH
323-9	7	7	1	Screw-HH
323-10	5	45	1	Screw-HH
323-11	4	5	2	Screw
323-13	7	48	1	Screw-HH
323-16	4	20	4	Screw-HH
325-20	6	15	2	Screw-HH
3210-3	4	45	2	Screw-HH
3217-9	6	18	2	Nut-HH
3219-6	9	24	2	Nut-Hex
3219-6	10	22	1	Nut-Hex
3230-1	2	3	21	Bolt-CARR
3234-11	5	33	4	Screw-HHF
3242-4	2	30	1	Screw-Set
3242-6	2	31	1	Screw-Sqh Set
3253-4	1	19	2	Washer-Lock
3253-4	2	38	4	Washer-Lock
3253-4	4	39	8	Washer-Lock
3253-7	6	19	2	Washer-Lock
3256-2	1	14	4	Washer-Flat
3256-23	4	51	2	Washer-Flat
3256-24	2	34	1	Washer-Flat
3256-24	5	51	2	Washer-Flat
3256-24	7	8	3	Washer-Flat
3256-25	2	36	1	Washer-Flat
3272-11	5	8	2	Pin-Cotter
3290-307	2	52	1	Pin-Cotter
3290-307	4	25	2	Pin-Cotter
3290-307	4	50	2	Pin-Cotter

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3290-307	5	42	3	Pin-Cotter
3290-307	7	11	3	Pin-Cotter
3290-378	5	26	2	Tie-Cable
3296-2	5	3	5	Nut-Lock
3296-6	2	8	1	Nut-Lock
3296-29	1	16	2	Nut-Lock
3296-29	7	2	2	Nut-Lock
3296-29	8	4	4	Nut-Lock
3296-42	8	7	2	Nut-Lock
32104-32	2	11	4	Screw-HH
32104-76	5	29	2	Screw-Self TAP
32105-1	5	5	1	Screw-HH
32105-14	5	34	4	Screw-HH
32128-20	2	7	2	Nut-Lock
32128-20	6	30	5	Nut-Lock
32128-20	7	24	12	Nut-Lock
32128-21	5	32	4	Nut-HF
32128-43	2	41	5	Nut-Flange
32128-43	4	1	14	Nut-Flange
32128-43	6	24	8	Nut-Flange
32128-43	7	6	10	Nut-Flange
32146-2	2	33	1	Nut-Hex Lock
32146-2	5	49	1	Nut-Hex Lock
32146-2	7	49	1	Nut-Hex Lock
32146-2	9	14	12	Nut-Hex Lock
32146-2	10	14	6	Nut-Hex Lock
32146-4	4	48	2	Nut-Lock
32146-17	2	39	4	Nut-Lock
32146-18	2	14	2	Nut-Lock
33114-025	1	3	1	Screw-HH

[illegible]

[illegible]

[illegible]