

# **LAWN-BOY®**

**Silver Series**

## **Walk-Behind Mower**

**Model No. 10260-9900001 & Up**

---

# **Parts Catalog**

## ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

## Contents

Description	Page	Description	Page
Housing & Wheel Assembly .....	1	Recoil Starter Assembly 590694 .....	8
Engine & Blade Assembly .....	2	Recoil Starter Assembly 590737 (Optional) .....	9
Handle Assembly .....	3	Lawn-Boy Part Number Index .....	10
Carburetor No. 640118 .....	4	Maintenance .....	11-13
Engine LEV120-361003A .....	5-7	<b>Note:</b>	

## Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit .....	Model No. 89817	Leaf Shredder Kit .....	Model No. 89860
Rear Bagging Kit .....	Model No. 89800	Leaf Bag Kit w/Chute .....	Model No. 89811
Leaf Bag .....	Model No. 89804		

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR .....	as required	INC .....	incorporated
ASM .....	assembly	LH .....	left hand
CARR .....	carriage	NI .....	nylon insert
DEG .....	degrees	PPH .....	Phillips pan head
FH .....	flat head	PTH .....	Phillips truss head
GA .....	gauge	PTO .....	power take off
HF .....	hex flange	RH .....	right hand
HH .....	hex head	SFH .....	slotted fillister head
HHF .....	hex head flange	SHH .....	slotted hex head
HLH .....	hex lag head	SQH .....	square head
HJ .....	hex jam	SHWH .....	slotted hex washer head
HOC .....	height-of-cut	SPH .....	slotted pan head
HS .....	hex socket	SRH .....	slotted round head
HSBH .....	hex socket button head	STD .....	standard
HSFH .....	hex socket flat head	TAP .....	self tapping
HSH .....	hex socket head	TTH .....	Torx truss head
HWH .....	hex washer head	WH .....	wing head
HWHTF .....	hex washer head thread forming		

## Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

## Service Assemblies

Parts within service assemblies have reference numbers in the form  $X:Y$ .  $X$  is the reference number of the service assembly and  $Y$  is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in part lists and as callouts in illustrations.

## Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form  $X (Y)$ .  $X$  is the reference number.  $Y$  in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

3322-465

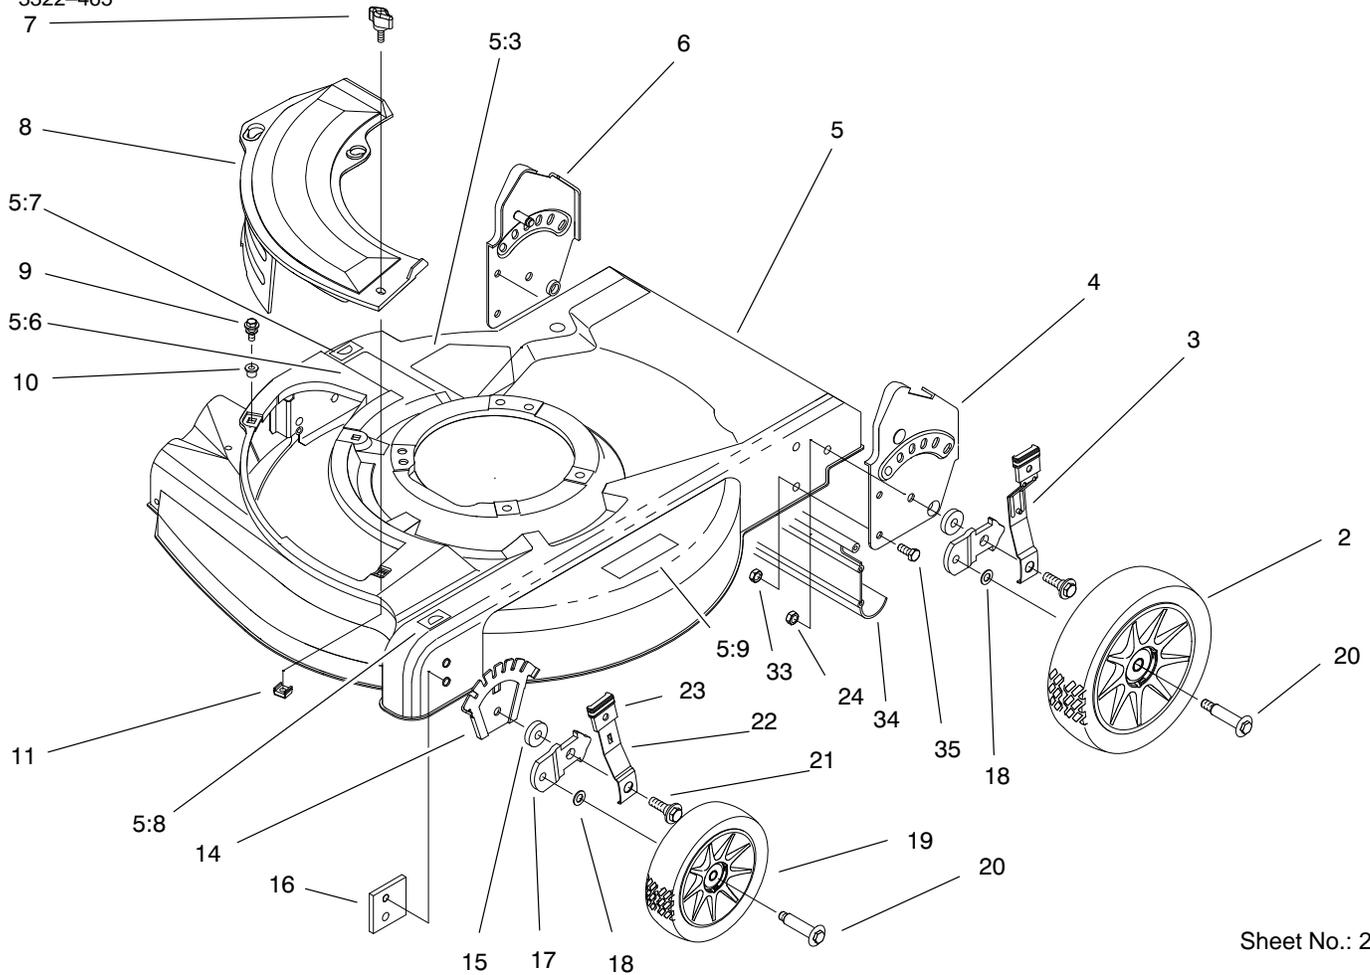

Sheet No.: 2


## Housing & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
2	95-7437	2	Tire-8"
3	92-1005	2	Spring Arm ASM - Rear
4	92-7743	1	LH Handle Brkt ASM
5	98-4471	1	ASM-Hsg/Baffle w/Decals
5:3	43-8480	1	Decal-Danger
5:6	99-6018	1	Decal - Warning
5:7	92-2914	1	Decal - HOC R
5:8	92-2915	1	Decal - HOC L
5:9	93-7250	1	Decal - Safety Instruct
6	92-7742	1	RH Handle Brkt ASM
7	98-8332	1	Knob
8	92-8630	1	Plate-Mulch
9	614677	2	Screw- Sems
10	94-1610	2	Grommet - Plastic
11	613765	1	Nut-Cage
14	92-4881-03	2	Plate - Hght Adj
15	92-4890	4	Washer - Wheel
16	92-7731	2	Plate - Baffle
17	95-7403-03	4	Bracket-Wheel Ht Adj
18	40-1940	4	Washer-Wheel Bolt
19	95-7436	2	Tire-6"
20	92-1099	4	Bolt-Shoulder 6" Wheel
21	614672	4	Bolt-Shoulder

Ref. No.	Part No.	Qty.	Description
22	614687	2	Arm-Front Spring
23	92-1008	4	Knob-Height Adj Lever
24	3296-39	2	Nut-Lock NI
26	614249	1	Strap-Tie Sm
33	3296-29	4	Nut-Lock NI
34	92-8647	1	Shield - Trailing
35	322-3	4	Screw-HH
36	95-7052	1	Plate - Chute Opening






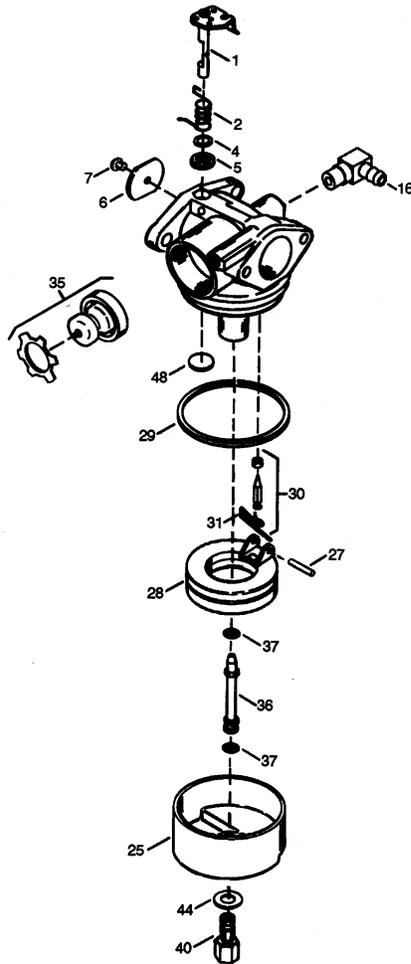

## Carburetor No. 640118

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
0	640118	1	Carburetor				
1	631615	1	Throttle Shaft & Lever Assembly				
2	631767	1	Throttle Return Spring				
4	631184	1	Dust Seal Washer				
5	631183	1	Dust Seal (Throttle)				
6	632504	1	Throttle Shutter				
7	650506	1	Shutter Screw				
16	631807	1	Fuel Fitting				
25	631867	1	Float Bowl				
27	631024	1	Float Shaft				
28	632019	1	Float				
29	631028	1	Float Bowl "O" Ring				
30	631021	1	Inlet Needle, Seat, & Clip (Incl. 31)				
31	631022	1	Spring Clip				
35	36045A	1	Primer Bulb/Retainer Ring				
36	632735	1	Main Nozzle Tube				
37	632547	2	O-Ring, Main Nozzle Tube				
40	632743	1	High Speed Bowl Nut				
44	27110	1	Bowl Nut Washer				
48	631027	1	Welch Plug, Atmospheric Vent				

# Engine LEV100-345001B

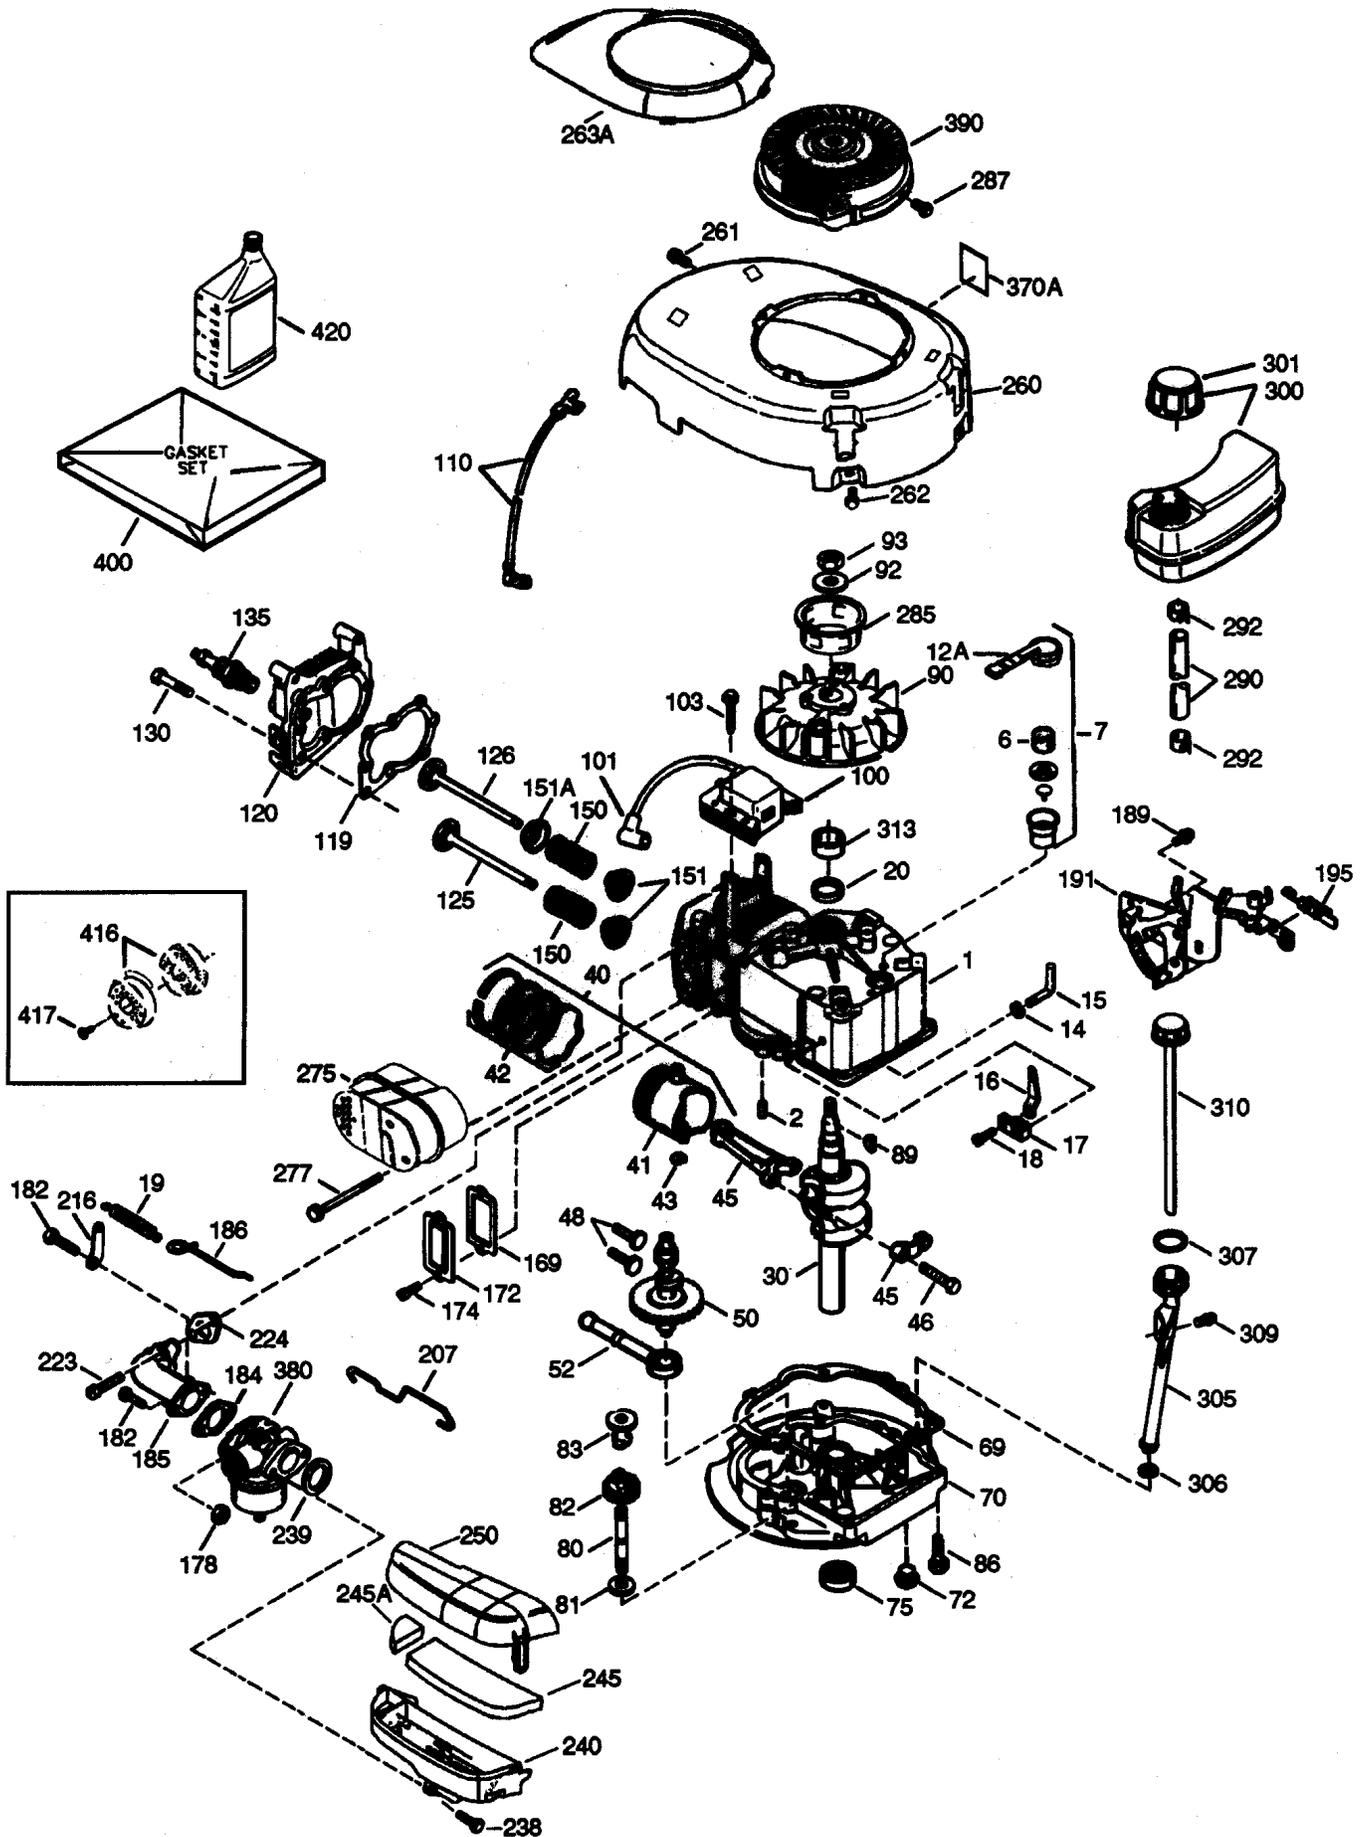


# Engine LEV100-345001B

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	37027	1	Cylinder (Incl. 2 & 20)	120	36788	1	Cylinder Head
2	26727	2	Dowel Pin	125	36779	1	Exhaust Valve (Std.) (Incl. 151)
6	33734	1	Breather Element	125	36780	1	Exhaust Valve (1/32" OS) (Incl. 151)
7	36557	1	Breather Body ASM (Incl. 6 & 12A)	126	36781	1	Intake Valve (Std.) (Incl. 151)
12A	36558	1	Breather Cover & Tube (Incl. 12B)	126	36782	1	Intake Valve (1/32" OS) (Incl. 151)
14	28277	1	Washer	130	6021A	6	Screw
15	30589	1	Governor Rod (Incl. 14)	135	35395	1	Resistor Spark Plug (RJ19LM)
16	34839A	1	Governor Lever	150	35991	2	Valve Spring
17	31335	1	Governor Lever Clamp	151	31673	2	Valve Spring Cap
18	651018	1	Screw	151A	40017	1	Intake Valve Seal
19	36281	1	Extension Spring	169	36783	1	Valve Cover Gasket
20	32600	1	Oil Seal	172	36784	1	Valve Cover
30	37124	1	Crankshaft	174	30200	2	Screw
40	35544A	1	Piston, Pin & Ring Set (Std.)	178	29752	2	Nut & Lock Washer
40	33545A	1	Piston, Pin & Ring Set (.010" OS)	182	6201	2	Screw
40	35546	1	Piston, Pin & Ring Set (.020" OS)	184	26756	1	Carburetor To Intake Pipe Gasket
41	35541	1	Piston & Pin ASM (Std.) (Incl. 43)	185	36785	1	Intake Pipe
41	35542	1	Piston & Pin ASM (.010" OS) (Incl. 43)	186	32653	1	Governor Link
41	35543	1	Piston & Pin ASM (.020" OS) (Incl. 43)	189	650839	2	Screw
42	35547A	1	Ring Set (Std.)	191	36559	1	S.E. Brake Bracket (Incl. 195)
42	35548A	1	Ring Set (.010" OS)	195	610973	1	Terminal
42	35549	1	Ring Set (.020" OS)	207	34336	1	Throttle Link
43	20381	2	Piston Pin Retaining Ring	216	33086	1	R.P.M. Adjusting Lever
45	36777	1	Connecting Rod ASM (Incl. 46)	223	650451	2	Screw
46	32610A	2	Connecting Rod Bolt	224	36786	1	Intake Pipe Gasket
48	27241	2	Valve Lifter	238	650806	2	Screw
50	37032	1	Camshaft (MCR)	239	34338	1	Air Cleaner Gasket
52	29914	1	Oil Pump ASM	240	37115	1	Air Cleaner Body
69	35261	1	Mounting Flange Gasket	245	37116	1	Air Cleaner Filter
70	36995	1	Mounting Flange (Incl. 72 thru 83)	245A	37117	1	Air Cleaner Filter
72	36083	1	Oil Drain Plug	250	37118	1	Air Cleaner Cover
75	27897	1	Oil Seal	260	37125	1	Blower Housing
80	30574A	1	Governor Shaft	261	30200	2	Screw
81	30590A	1	Washer	262	650831	2	Screw
82	30591	1	Governor Gear ASM (Incl. 81)	263A	36758	1	Starter Grill
83	30588A	1	Governor Spool	275	36790	1	Muffler
86	650488	6	Screw	277	650988	2	Screw
89	611004	1	Flywheel Key	285	35000A	1	Starter Cup
90	611112	1	Flywheel	287	650926	2	Screw
92	650815	1	Belleville Washer	290	34357	1	Fuel Line
93	650816	1	Flywheel Nut	292	26460	2	Fuel Line Clamp
100	34443B	1	Solid State Ignition	300	35586	1	Fuel Tank (Incl. 292 & 301)
101	610118	1	Spark Plug Cover	301	36246	1	Fuel Cap
103	651007	2	Screw, Torx T-15	305	35577	1	Oil Fill Tube
110	37047	1	Ground Wire	306	36996	1	"O"-Ring
119	37028	1	Cylinder Head Gasket	307	35499	1	"O"-Ring
				309	650562	1	Screw
				310	36801	1	Dipstick
				313	34080	1	Spacer
				370A	36261	1	Lubrication Decal
				380	640118	1	Carburetor (Incl. 184)

## Engine LEV100-345001B

Ref. No.	Part No.	Qty.	Description
390	590694	1	Rewind Starter (NOTE: This engine could have been built with 590737 starter.
400	37029	1	Gasket Set (Incl. Items Marked PK in Notes) Incl. part #'s 26756 (1), 28833 (1), 34338 (1), 35261 (1), 36783 (1), 36786 (1), 36832 (1), 37128 (1).
416	36085	1	Spark Arrestor Kit (Incl. 417) (Optional)
417	650760	1	Screw (Optional)
420	730225	1	SAE 30 4-Cycle Engine Oil (Quart)

Ref. No.	Part No.	Qty.	Description

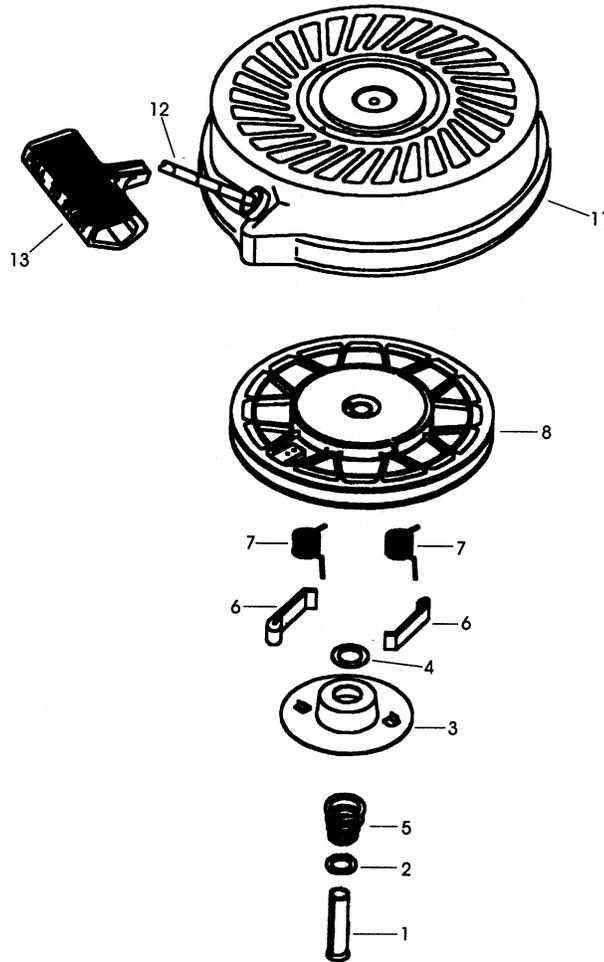

## Recoil Starter Assembly 590694

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
0	590694	1	Recoil Starter				
1	590599A	1	Spring Pin (Incl. 4)				
2	590600	1	Washer				
3	590696	1	Retainer				
4	590601	2	Washer				
5	590697	1	Brake Spring				
6	590698	2	Starter Dog				
7	590699	2	Dog Spring				
8	590700	1	Pulley & Rewind Spring ASM				
11	590695	1	Starter Housing ASM (40 degree grommet)				
12	590535	1	Starter Rope ( 98" X 9/64" dia.)				
13	590701	1	Starter Handle				



# Lawn – Boy Part Number Index

Part No.	Pg. No.	Ref. No.	Qty.	Description	Part No.	Pg. No.	Ref. No.	Qty.	Description
603164	2	4	1	Nut-Blade	93-3653	3	5	1	Guard – Handle
612543	2	5	1	Blade-21" Whirl	93-4184-03	3	12	1	Bail – Brake
613765	1	11	1	Nut-Cage	93-7250	1	5:9	1	Decal – Safety Instruct
614249	1	26	1	Strap-Tie Sm	93-7383	3	16	1	Rope – Guide
614249	3	6	2	Strap-Tie Sm	94-1610	1	10	2	Grommet – Plastic
614672	1	21	4	Bolt-Shoulder	94-6066-03	2	9	1	Guard – Muffler
614677	1	9	2	Screw- Sems	95-1713-05	3	13	1	Handle – Upper
614687	1	22	2	Arm-Front Spring	95-1726	2	2	3	Screw-Taptite w/Patch
614697	3	2	2	Screw-HH	95-7052	1	36	1	Plate – Chute Opening
677525	2	1	1	Plate & Collar ASM	95-7403-03	1	17	4	Bracket-Wheel Ht Adj
40-1940	1	18	4	Washer-Wheel Bolt	95-7436	1	19	2	Tire-6"
43-8480	1	5:3	1	Decal-Danger	95-7437	1	2	2	Tire-8"
65-2690	2	10	1	Decal-Hot Surface	95-7448	2	8	1	Decal – Recoil
92-1005	1	3	2	Spring Arm ASM – Rear	98-1560	3	18	1	ASM Brake Cable
92-1008	1	23	4	Knob-Height Adj Lever	98-1566	2	12	1	Decal – Deck
92-1099	1	20	4	Bolt-Shoulder 6" Wheel	98-4471	1	5	1	ASM-Hsg/Baffle w/Decals
92-2914	1	5:7	1	Decal – HOC R	98-7134	3	3	2	Knob-Handle
92-2915	1	5:8	1	Decal – HOC L	98-8332	1	7	1	Knob
92-4881-03	1	14	2	Plate – Hght Adj	99-6018	1	5:6	1	Decal – Warning
92-4890	1	15	4	Washer – Wheel	321-50	3	15	1	Screw-HH
92-5412	3	8	1	Stop-Pivot	322-3	1	35	4	Screw-HH
92-7731	1	16	2	Plate – Baffle	3296-29	1	33	4	Nut-Lock NI
92-7742	1	6	1	RH Handle Brkt ASM	3296-39	1	24	2	Nut-Lock NI
92-7743	1	4	1	LH Handle Brkt ASM	3296-73	3	4	1	Nut-Lock
92-8630	1	8	1	Plate-Mulch	32144-85	2	11	1	Screw-TAP
92-8647	1	34	1	Shield – Trailing	614643-05	3	19	1	Section-Lower Handle





