



**21" Recycler<sup>®</sup>**

**Walk Behind Mower**

**Model No. 20010 – 9900001 & Up**

---

*PROTOTYPE*

**Parts Catalog**

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

| Description                                    | Page | Description                      | Page  |
|------------------------------------------------|------|----------------------------------|-------|
| Housing, Handle Brackets, & Wheel Assembly . . | 1    | Toro Part Number Index . . . . . | 11-12 |
| Engine & Blade Assembly . . . . .              | 2    | Maintenance . . . . .            | 13    |
| Handle & Controls Assembly . . . . .           | 3    |                                  |       |
| Engine Briggs & Stratton                       |      |                                  |       |
| Model 12H802-1767-E1 . . . . .                 | 4-10 |                                  |       |

Note:

Accessories

| Description                    | Model / Parts No. | Description | Model / Parts No. |
|--------------------------------|-------------------|-------------|-------------------|
| Recycler Bagging Kit . . . . . | Model No. 59299   |             |                   |
| Chute Plug Kit . . . . .       | Model No. 59134   |             |                   |

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation   | Meaning                | Abbreviation    | Meaning                           |
|----------------|------------------------|-----------------|-----------------------------------|
| AR . . . . .   | as required            | HWHTF . . . . . | hex washer head<br>thread forming |
| ASM . . . . .  | assembly               | INC . . . . .   | incorporated                      |
| CARR . . . . . | carriage               | LH . . . . .    | left hand                         |
| DEG . . . . .  | degrees                | PH . . . . .    | pan head                          |
| FH . . . . .   | flat head              | PPH . . . . .   | Phillips pan head                 |
| GA . . . . .   | gauge                  | PTO . . . . .   | power take off                    |
| HF . . . . .   | hex flange             | RH . . . . .    | right hand                        |
| HFW . . . . .  | hex flange washer      | SFH . . . . .   | slotted fillister head            |
| HH . . . . .   | hex head               | SH . . . . .    | square head                       |
| HHF . . . . .  | hex head flange        | SHWH . . . . .  | slotted hex washer head           |
| HHST . . . . . | hex head self tapping  | SPH . . . . .   | slotted pan head                  |
| HJ . . . . .   | hex jam                | STD . . . . .   | standard                          |
| HOC . . . . .  | height-of-cut          | TAP . . . . .   | self tapping                      |
| HS . . . . .   | hex socket             | TH . . . . .    | truss head                        |
| HSBH . . . . . | hex socket button head | TTH . . . . .   | Torx truss head                   |
| HSFH . . . . . | hex socket flat head   | WH . . . . .    | wing head                         |
| HSH . . . . .  | hex socket head        |                 |                                   |
| HWH . . . . .  | hex washer head        |                 |                                   |

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

## Service Assemblies

Parts within service assemblies have reference numbers in the form  $X:Y$ .  $X$  is the reference number of the service assembly and  $Y$  is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in part lists and as callouts in illustrations.

## Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form  $X(Y)$ .  $X$  is the reference number.  $Y$  in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

*PROTOTYPE*

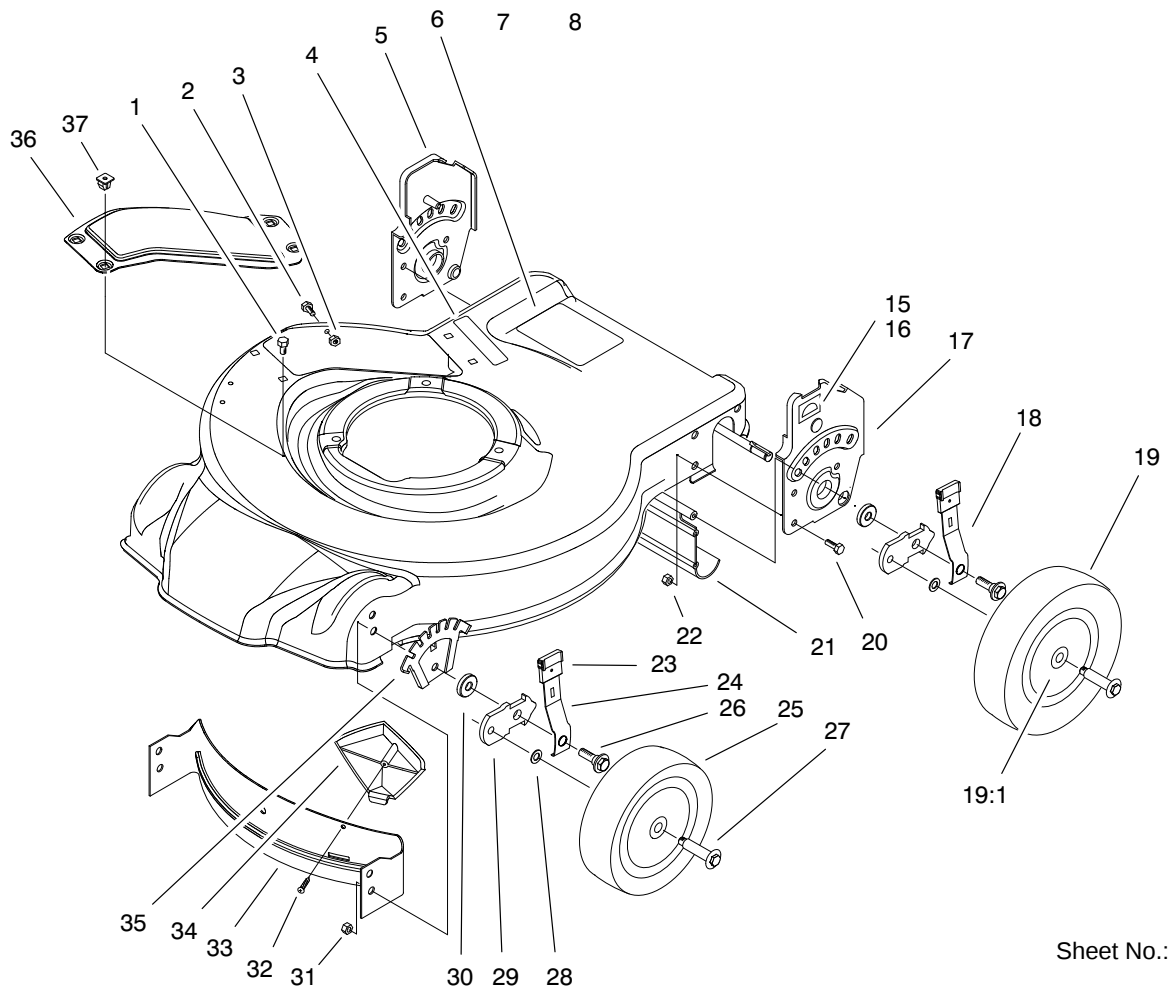


Sheet No.:2

## Housing, Handle Brackets, & Wheel Assembly

| Ref. No. | Part No.   | Qty. | Description             |
|----------|------------|------|-------------------------|
| 1        | 32144-4    | 3    | Screw-HH                |
| 2        | 32105-27   | 1    | Screw                   |
| 3        | 3296-2     | 1    | Nut-Lock Esna           |
| 4        | 99-6018    | 1    | Decal - Warning         |
| 5        | 93-0236    | 1    | ASM - RH Handle Bracket |
| 6        | 93-0248    | 1    | Decal - Warning         |
| 15       | 92-2915    | 1    | Decal - HOC L           |
| 16       | 92-2914    | 1    | Decal - HOC R           |
| 17       | 93-0235    | 1    | ASM - LH Handle Bracket |
| 18       | 92-1005    | 2    | Spring Arm ASM - Rear   |
| 19       | 92-9592    | 2    | Assembly - 8" Wheel     |
| 19:1     | 27-6250    | 2    | Bushing (614409 Lb#)    |
| 20       | 322-3      | 4    | Screw-HH                |
| 21       | 92-8647    | 1    | Shield - Trailing       |
| 22       | 3296-29    | 4    | Nut-Lock Ni             |
| 23       | 92-1008    | 4    | Knob-Height Adj Lever   |
| 24       | 614687     | 2    | Arm-Front Spring        |
| 25       | 92-9591    | 2    | Assembly - 7" Wheel     |
| 26       | 614650     | 4    | Bolt-Shoulder           |
| 27       | 614672     | 4    | Bolt-Shoulder           |
| 28       | 40-1940    | 4    | Washer-Wheel Bolt       |
| 29       | 95-7403-03 | 4    | Brkt-Whl Ht Adj         |


| Ref. No. | Part No.   | Qty. | Description       |
|----------|------------|------|-------------------|
| 30       | 92-4890    | 4    | Washer - Wheel    |
| 31       | 3296-39    | 4    | Nut-Lock Ni       |
| 32       | 93-0231    | 1    | Screw - PPH       |
| 33       | 93-0222-03 | 1    | Baffle - Front    |
| 34       | 93-0216    | 1    | Kicker - Front    |
| 35       | 92-4881-03 | 2    | Plate - Hght Adj  |
| 36       | 93-0230-01 | 1    | Cover - Recycling |
| 37       | 93-0242    | 4    | Grommet           |

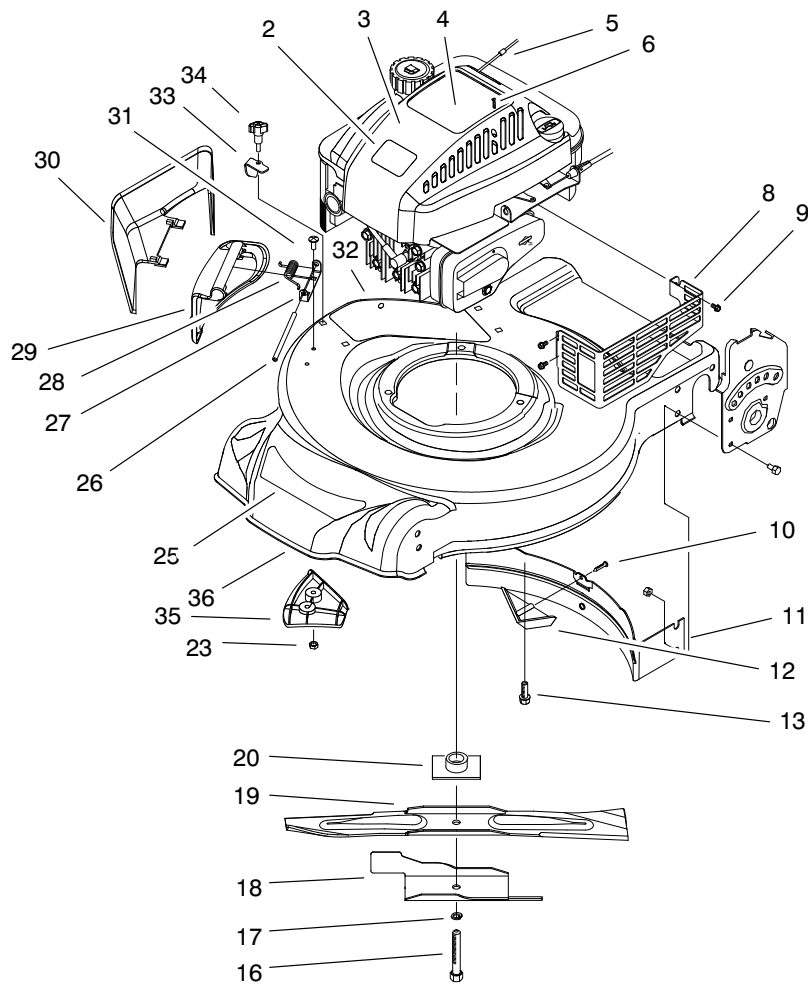

Sheet No.:3

## Engine & Blade Assembly

| Ref. No. | Part No.   | Qty. | Description                          | Ref. No. | Part No.    | Qty. | Description                           |
|----------|------------|------|--------------------------------------|----------|-------------|------|---------------------------------------|
| 2        | 98-3206    | 1    | Nameplate – Toro                     | 28       | 99-5293     | 1    | Spring-Torsion (Steel Side Discharge) |
| 3        | 93-0243    | 1    | Shroud-Quantum Wedge                 | 29       | 99-5294     | 1    | Cover-Side (Steel Side Discharge)     |
| 4        | 99-6013    | 1    | Decal – Recoil                       | 30       | 99-5295     | 1    | Chute-Side (Side Discharge)           |
| 5        | 2210-316   | 1    | Stop-Rope F/W Engine                 | 31       | 3229-11     | 2    | Screw-CARR                            |
| 6        | 32144-121  | 2    | Screw-Pan Hd                         | 32       | 43-8480     | 1    | Decal-Danger                          |
| 8        | 82-8550-03 | 1    | Shield-Muffler                       | 33       | 100-1589-03 | 1    | Clamp-Door                            |
| 9        | 32144-73   | 3    | Screw                                | 34       | 98-8332     | 1    | Knob                                  |
| 10       | 93-0231    | 1    | Screw – PPH                          | 35       | 99-6349     | 1    | Baffle                                |
| 11       | 93-0223-03 | 1    | Baffle – Rear (Black)                | 36       | 100-1181    | 1    | Housing (Service)                     |
| 12       | 93-0217    | 1    | Kicker – Rear                        |          |             |      |                                       |
| 13       | 95-1726    | 3    | Screw-Taptite w/Patch                |          |             |      |                                       |
| 16       | 95-1748    | 1    | Screw-Blade                          |          |             |      |                                       |
| 17       | 3253-22    | 1    | Washer-Lock/Sp                       |          |             |      |                                       |
| 18       | 93-0219-03 | 1    | Accelerator                          |          |             |      |                                       |
| 19       | 93-0241    | 1    | Blade – Steel Deck (Raw)             |          |             |      |                                       |
| 20       | 99-5287    | 1    | ASM-Blade Driver                     |          |             |      |                                       |
| 23       | 3296-42    | 2    | Nut-Lock Ni                          |          |             |      |                                       |
| 25       | 99-6011    | 1    | Decal – Deck                         |          |             |      |                                       |
| 26       | 99-5291    | 1    | Rod-Cover (Steel Side Discharge)     |          |             |      |                                       |
| 27       | 99-5292    | 1    | Bracket-Cover (Steel Side Discharge) |          |             |      |                                       |

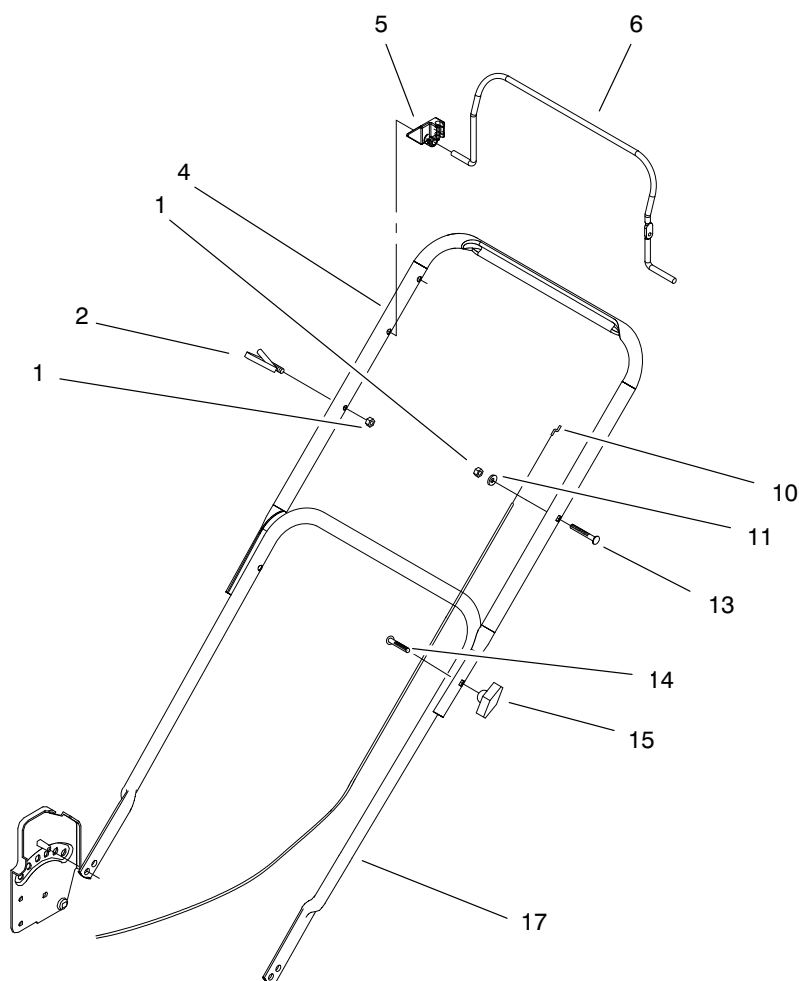


Sheet No.:5

## Handle & Controls Assembly

| Ref. No. | Part No.   | Qty. | Description    |
|----------|------------|------|----------------|
| 1        | 3296-73    | 2    | Nut-Lock       |
| 2        | 86-9671    | 1    | Guide-Rope     |
| 4        | 99-1569-05 | 1    | Handle-Upper   |
| 5        | 94-6097    | 1    | Stop           |
| 6        | 99-1570-03 | 1    | Bail-Brake     |
| 10       | 99-5229    | 1    | Cable-Brake    |
| 11       | 3256-1     | 1    | Washer-Flat    |
| 13       | 95-4453    | 1    | Screw - Handle |
| 14       | 92-2260    | 2    | Screw-Handle   |
| 15       | 98-7134    | 2    | Knob-Handle    |
| 17       | 99-6021-05 | 1    | Lower Handle   |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
| OTOTYPE  |          |      |             |

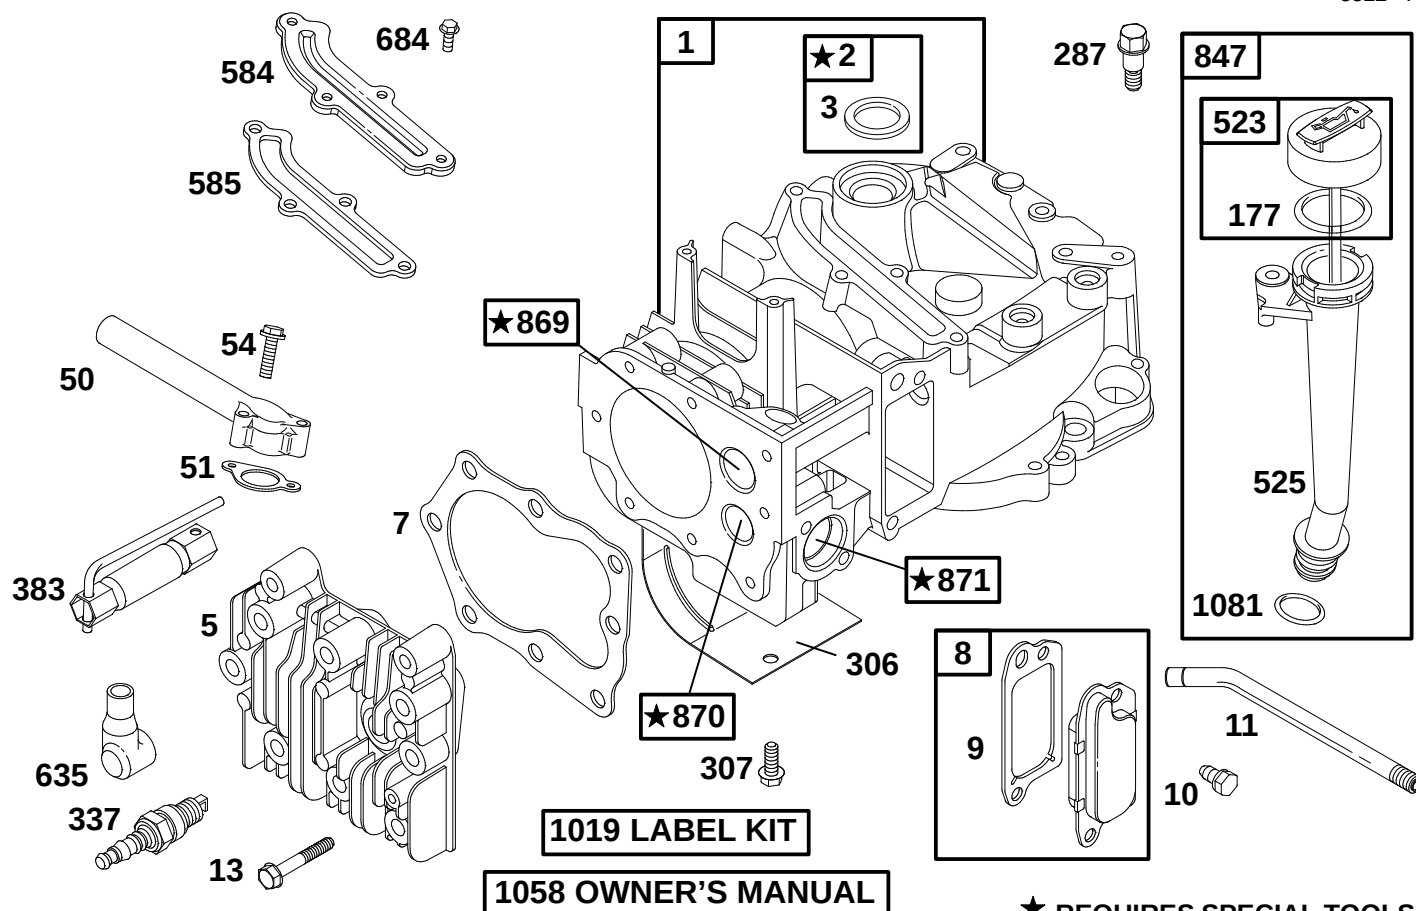

Assemblies include all parts shown in frames.


★ **REQUIRES SPECIAL TOOLS  
TO INSTALL. SEE REPAIR  
INSTRUCTION MANUAL.**

# ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

| Ref. No. | Part No. | Description          | No. Used | Ref. No. | Part No. | Description              | No. Used |
|----------|----------|----------------------|----------|----------|----------|--------------------------|----------|
| 1        | 493260   | Cylinder Assembly    | 1        | 307      | 690345   | Screw                    | 1        |
| 2        | 399269   | Bushing              | 1        |          |          | (Cylinder Shield)        | 1        |
| ★3       | 299819   | Seal—Oil             | 1        | 337      | 802592   | Sparkplug                | 1        |
| 5        | 691160   | Cylinder Head        | 1        | 383      | 89838    | Wrench—Sparkplug         | 1        |
| ★†7      | 272916   | Cylinder Head Gasket | 1        | 523      | 495264   | Dipstick                 | 1        |
| 8        | 495786   | Breather Assembly    | 1        | 525      | 495265   | Dipstick Tube            | 1        |
| ★†9      | 272481   | Breather Gasket      | 1        | 584      | 692342   | Breather Passage Cover   | 1        |
| 10       | 94650    | Screw                | 1        | ★585     | 272238   | Breather Passage Gasket  | 1        |
|          |          | (Breather Assy)      | 1        | 635      | 66538    | Boot—Sparkplug           | 1        |
| 11       | 231685   | Breather Tube        | 1        | 684      | 94515    | Screw                    | 1        |
| 13       | 94547    | Screw                | 1        |          |          | (Breather Passage Cover) | 1        |
|          |          | (Cylinder Head)      | 1        | 847      | 495263   | Dipstick/Tube Assembly   | 1        |
| 50       | 497465   | Intake Manifold      | 1        | 869      | 691155   | Seat—Valve               | 1        |
| ★51      | 272199   | Intake Gasket        | 1        |          |          | (Intake)                 | 1        |
| 54       | 94526    | Screw                | 1        | 870      | 690380   | Seat—Valve               | 1        |
|          |          | (Intake Manifold)    | 1        |          |          | (Exhaust )               | 1        |
| ★177     | 280393   | O-Ring Seal          | 1        | 871      | 262001   | Bushing—Guide            | 1        |
| 287      | 94511    | Screw                | 1        | 1019     | 494256   | Label Kit                | 1        |
|          |          | (Dipstick Tube)      | 1        | 1058     | 273693   | Owner's Manual           | 1        |
| 306      | 690450   | Shield—Cylinder      | 1        | ★1081    | 280966   | O-Ring Seal              | 1        |

- ★ Included in Gasket Set—See Ref. 358.
- Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.  
† Included in Valve Overhaul Gasket Set—See Ref. 1095.

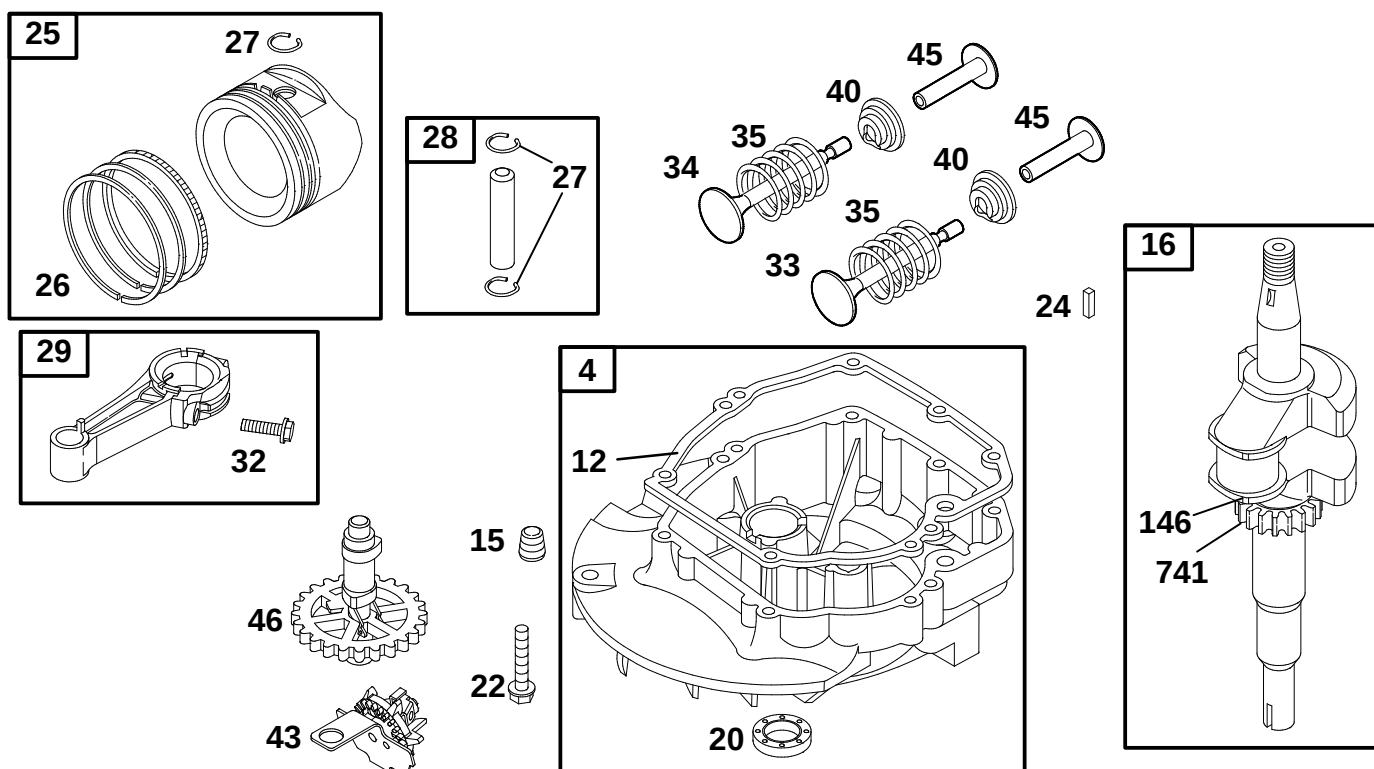

Assemblies include all parts shown in frames.


## ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

| Ref. No. | Part No. | Description                           | No. Used |
|----------|----------|---------------------------------------|----------|
| 4        | 493279   | Engine Sump                           | 1        |
| ★12      | 272198   | Crankcase Gasket                      | 1        |
| 15       | 94880    | Oil Drain Plug                        | 1        |
| 16       | 694079   | Crankshaft                            | 1        |
| ★20      | 399781   | Oil Seal                              | 1        |
| 22       | 94220    | Screw (Engine Sump)                   | 1        |
|          | 94612    | Screw (Used in Hole Nearest Breather) | 1        |
| 24       | 222698   | Key-Flywheel                          | 1        |
| 25       | 499429   | Piston Assembly (Standard)            | 1        |
|          | 499430   | Piston Assembly (.010" O.S.)          | 1        |
|          | 499431   | Piston Assembly (.020" O.S.)          | 1        |
|          | 499432   | Piston Assembly (.030" O.S.)          | 1        |
| 26       | 499425   | Ring Set (Standard)                   | 1        |
|          | 499426   | Ring Set (.010" O.S.)                 | 1        |

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
|          | 499427   | Ring Set (.020" O.S.)     | 1        |
|          | 499428   | Ring Set (.030" O.S.)     | 1        |
| 27       | 263190   | Piston Pin Lock           | 1        |
| 28       | 499423   | Piston Pin (Standard)     | 1        |
|          | 298908   | Piston Pin (.005" O.S.)   | 1        |
| 29       | 499424   | Connecting Rod (Standard) | 1        |
| 32       | 94699    | Screw (Connecting Rod)    | 1        |
| 33       | 262651   | Exhaust Valve             | 1        |
| 34       | 262652   | Intake Valve              | 1        |
| 35       | 262224   | Valve Spring              | 1        |
| 40       | 93312    | Retainer-Valve            | 1        |
| 43       | 493737   | Governor/Oil Slinger      | 1        |
| 45       | 262204   | Valve Tappet              | 1        |
| 46       | 498275   | Camshaft                  | 1        |
| 146      | 94388    | Key-Timing                | 1        |
| 741      | 262598   | Gear-Timing               | 1        |

★ Included in Gasket Set-See Ref. 358.  
 ● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.  
 † Included in Valve Overhaul Gasket Set-See Ref. 1095.

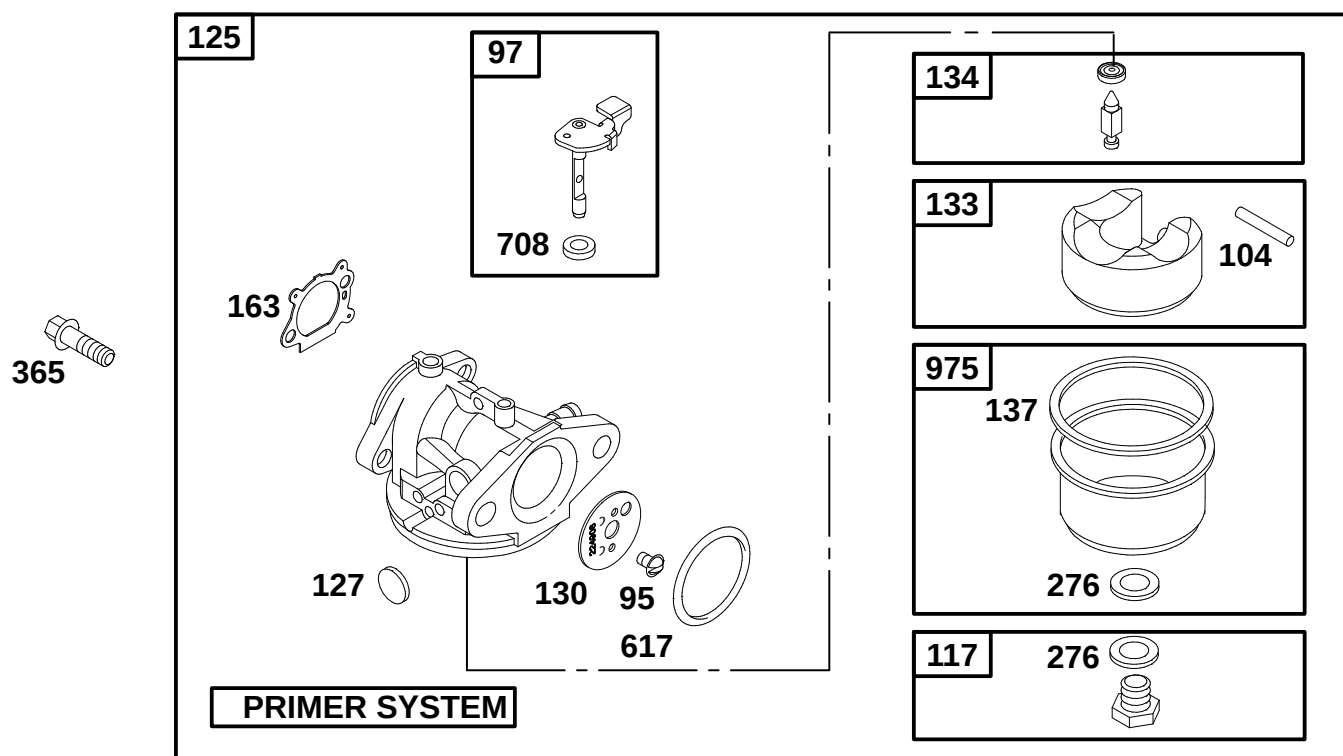

Assemblies include all parts shown in frames.

# ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

| Ref. No. | Part No. | Description                        | No. Used |
|----------|----------|------------------------------------|----------|
| 95       | 94098    | Screw<br>(Throttle Valve)          | 1        |
| 97       | 493267   | Shaft – Throttle                   | 1        |
| ●104     | 691242   | Pin – Float Hinge                  | 1        |
| 117      | 494870   | Main Jet<br>(Standard)             |          |
|          | 497315   | Main Jet<br>(High Altitude)        | 1        |
| 125      | 498170   | Carburetor                         | 1        |
| ●127     |          | Plug – Welch<br>(Sold in Kit Only) | 1        |


| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| 130      | 691203   | Valve – Throttle      | 1        |
| 133      | 398187   | Float – Carburetor    | 1        |
| ●134     | 398188   | Needle/Seat Kit       | 1        |
| ●◆137    | 693981   | Gasket – Float Bowl   | 1        |
| ★●◆163   | 272653   | Gasket – Air Cleaner  | 1        |
| ●◆276    | 271716   | Sealing Washer        | 1        |
| 365      | 94525    | Screw<br>(Carburetor) | 1        |
| ●◆617    | 270344   | O – Ring Seal         | 1        |
| ●◆708    | 691321   | Seal – Dust           | 1        |
| 975      | 493640   | Bowl – Float          | 1        |

★ Included in Gasket Set—See Ref. 358.

- Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.

† Included in Valve Overhaul Gasket Set—See Ref. 1095.

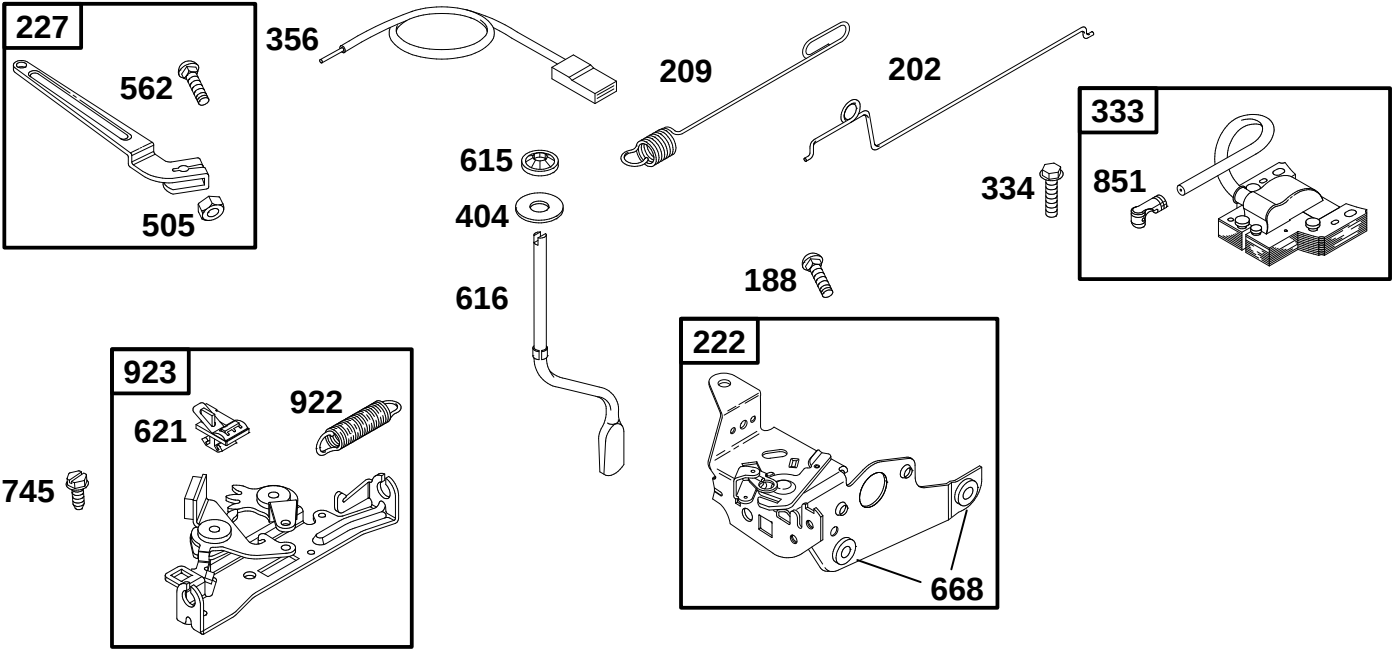

Assemblies include all parts shown in frames.


**ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1**

| Ref. No. | Part No. | Description                     | No. Used |
|----------|----------|---------------------------------|----------|
| 188      | 94644    | Screw<br>(Control Bracket)      | 1        |
| 202      | 262579   | Link-Mechanical Governor        | 1        |
| 209      | 691292   | Spring-Governor                 | 1        |
| 222      | 499835   | Bracket-Control                 | 1        |
| 227      | 492349   | Governor Control Lever          | 1        |
| 333      | 802574   | Armature-Magneto                | 1        |
| 334      | 94731    | Screw<br>(Armature-Magneto)     | 1        |
| 356      | 497833   | Wire-Stop                       | 1        |
| 404      | 67072    | Washer<br>(Governor Crank)      | 1        |
| 505      | 231082   | Nut<br>(Governor Control Lever) | 1        |

| Ref. No. | Part No. | Description                      | No. Used |
|----------|----------|----------------------------------|----------|
| 562      | 92613    | Bolt<br>(Governor Control Lever) | 1        |
| 615      | 94474    | Retainer-Governor Shaft          | 1        |
| 616      | 691306   | Crank-Governor                   | 1        |
| 621      | 396847   | Switch-Stop                      | 1        |
| ★668     | 493823   | Spacer<br>(Includes 2)           | 1        |
| 745      | 94512    | Screw(Brake)                     | 1        |
| 851      | 493880   | Terminal-Cable                   | 1        |
| 922      | 262640   | Spring-Brake                     | 1        |
| 923      | 493442   | Brake                            | 1        |

★ Included in Gasket Set-See Ref. 358.  
● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.  
† Included in Valve Overhaul Gasket Set-See Ref. 1095.

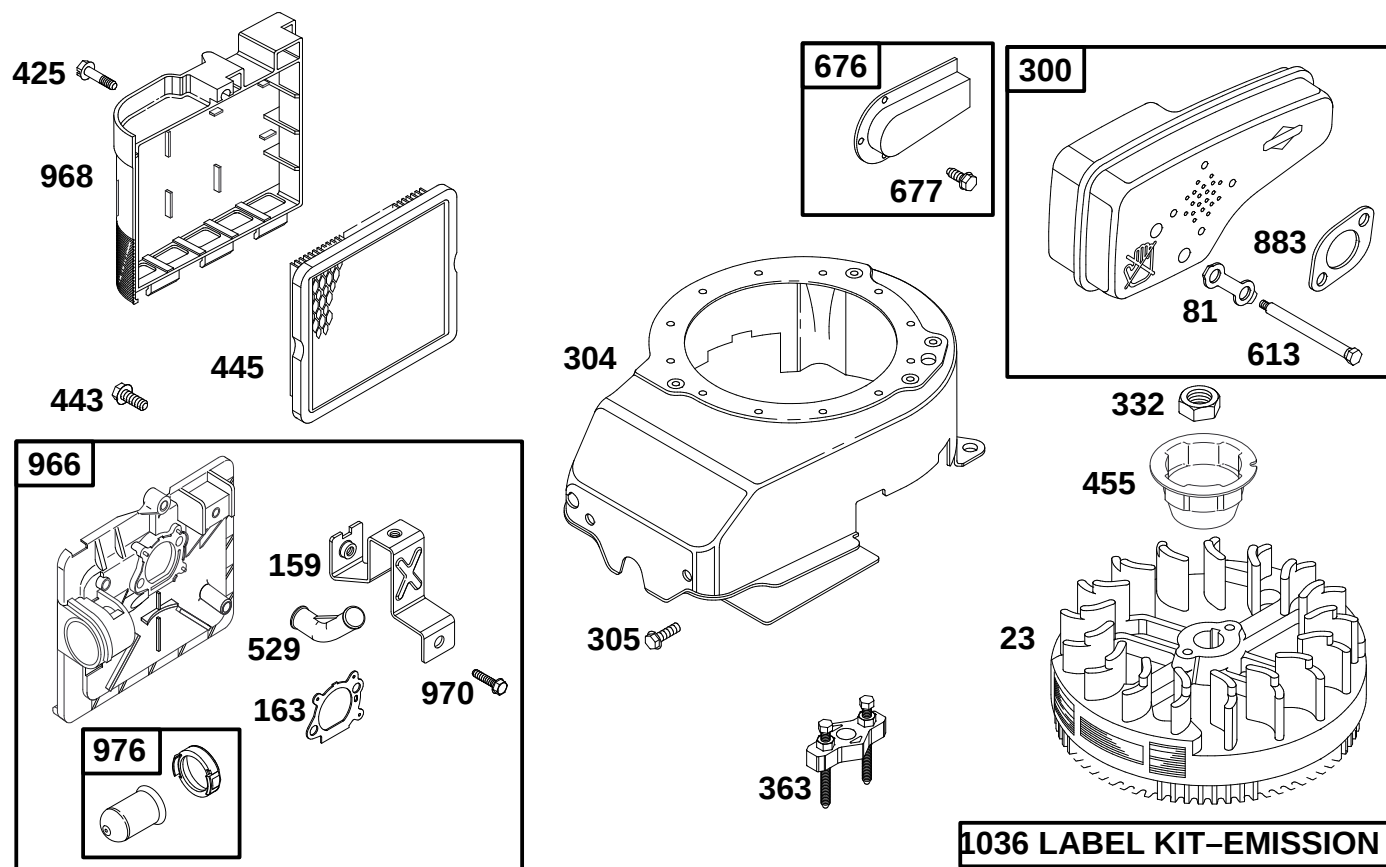

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1


| Ref. No. | Part No. | Description                | No. Used | Ref. No. | Part No. | Description                | No. Used |
|----------|----------|----------------------------|----------|----------|----------|----------------------------|----------|
| 23       | 693821   | Flywheel                   | 1        | 455      | 691219   | Cup - Flywheel             | 1        |
| 81       | 223664   | Muffler Screw Lock         | 1        | 529      | 281299   | Grommet                    | 1        |
| 159      | 224815   | Air Cleaner Primer Bracket | 1        | 613      | 94231    | Screw (Exhaust Muffler)    | 1        |
| ★◆163    | 272653   | Gasket - Air Cleaner       | 1        | 676      | 493871   | Deflector - Muffler        | 1        |
| 300      | 497838   | Muffler - Exhaust          | 1        | 677      | 94896    | Screw (Deflector)          | 1        |
| 304      | 493293   | Housing - Blower           | 1        | ★†883    | 272253   | Gasket - Exhaust           | 1        |
| 305      | 94744    | Screw (Blower Housing)     | 1        | 966      | 496116   | Base - A/C Primer          | 1        |
| 332      | 92284    | Nut (Flywheel)             | 1        | 968      | 281340   | Cover - Air Cleaner        | 1        |
| 363      | 19069    | Flywheel - Puller          | 1        | 970      | 94749    | Screw (A/C Primer Bracket) | 1        |
| 425      | 94872    | Screw (Air Cleaner Cover)  | 1        | 976      | 496115   | Primer - Carburetor        | 1        |
| 443      | 94873    | Screw (Air Cleaner Base)   | 1        | 1036     | 499341   | Label Kit - Emission       | 1        |
| 445      | 491588   | Filter - A/C Cartridge     | 1        |          |          |                            |          |

★ Included in Gasket Set - See Ref. 358.

◆ Included in Carburetor Kit - See Ref. 121.

◆ Included in Carburetor Gasket Set - See Ref. 977.

† Included in Valve Overhaul Gasket Set - See Ref. 1095.

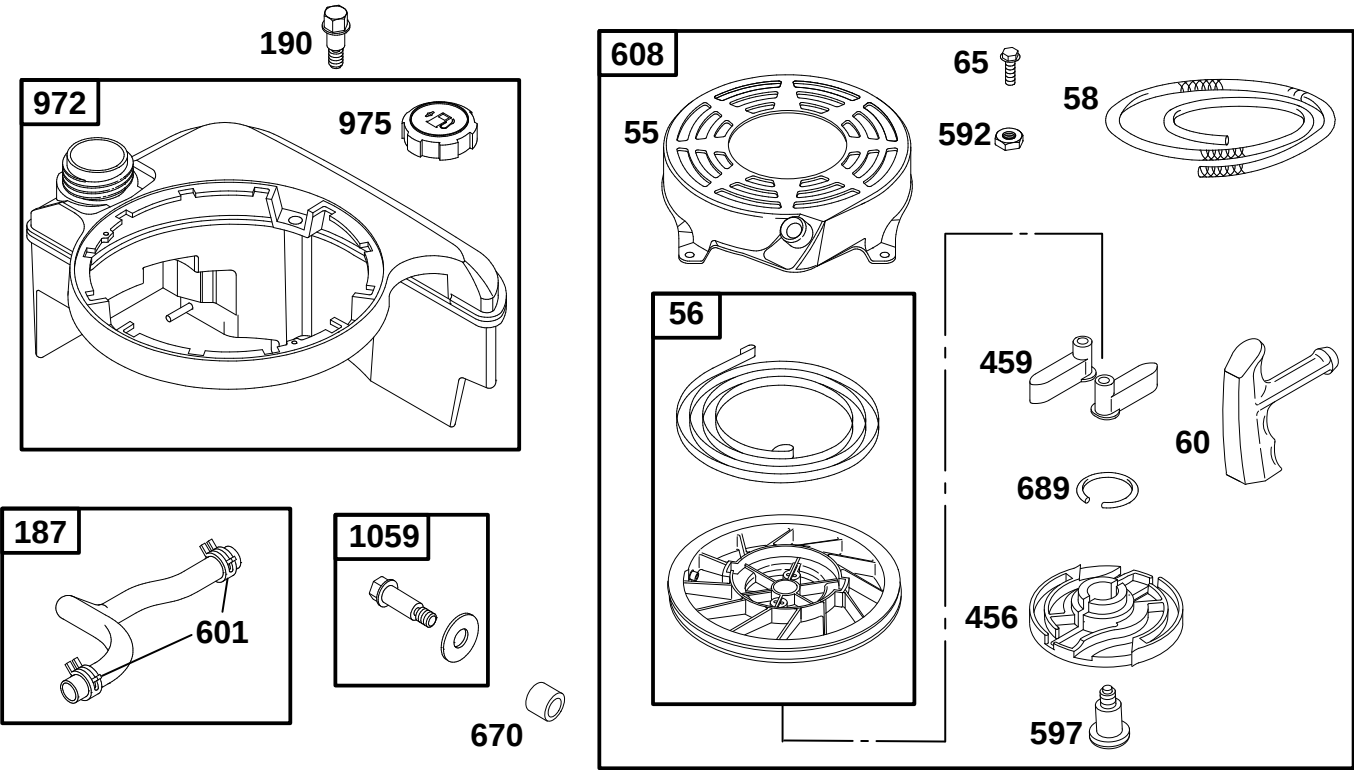

Assemblies include all parts shown in frames.





# ENGINE BRIGGS & STRATTON MODEL12H802-1767-E1

| Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------|----------|
| 55       | 497440   | Rewind Starter Housing | 1        |
| 56       | 498144   | Assy-Pulley/Spring     | 1        |
| 58       | 280399   | Starter Rope           | 1        |
| 60       | 281434   | Starter Rope Grip      | 1        |
| 65       | 94686    | Screw                  | 1        |
|          |          | (Rewind Starter)       | 1        |
| 187      | 492792   | Line-Fuel              | 1        |
| 190      | 94511    | Screw-Shoulder         | 1        |
| 456      | 281503   | Plate-Pawl Friction    | 1        |
| 459      | 281505   | Pawl-Ratchet           | 1        |
| 592      | 92987    | Nut                    | 1        |
|          |          | (Rewind Starter)       | 1        |

| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| 597      | 94943    | Screw                 | 1        |
|          |          | (Pawl Friction Plate) | 1        |
| 601      | 95162    | Clamp-Fuel Line       | 1        |
| 608      | 497680   | Starter-Rewind        | 1        |
| 670      | 280512   | Spacer-Fuel Tank      | 1        |
| 689      | 263073   | Spring-Friction       | 1        |
| 972      | 495224   | Tank-Fuel             | 1        |
| 975      | 397974   | Cap-Fuel Tank         | 1        |
| 1059     | 398540   | Screw/Washer Kit      | 1        |

★ Included in Gasket Set-See Ref. 358.  
● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.  
† Included in Valve Overhaul Gasket Set-See Ref. 1095.

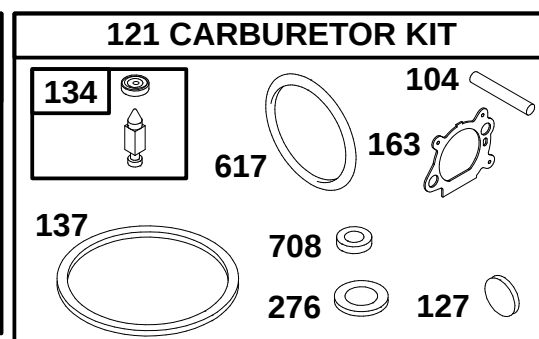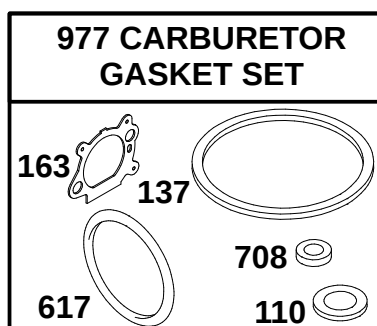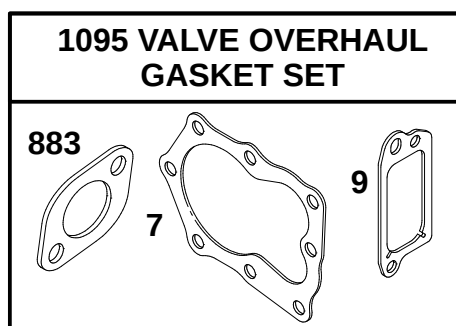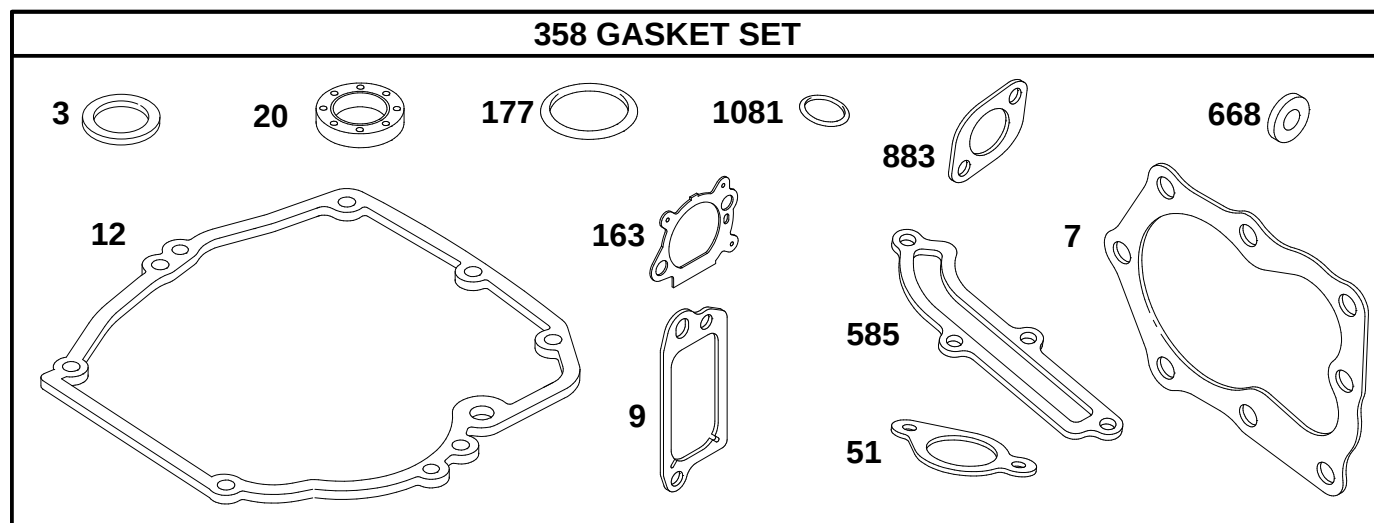

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

| Ref. No. | Part No. | Description                  | No. Used |
|----------|----------|------------------------------|----------|
| 3        | ★299819  | Oil Seal                     | 1        |
| ★†7      | 272916   | Cylinder Head Gasket         | 1        |
| ★†9      | 272481   | Breather Gasket              | 1        |
| ★12      | 272198   | Crankcase Gasket             | 1        |
| ★20      | 399781   | Oil Seal                     | 1        |
| ★51      | 272199   | Intake Gasket                | 1        |
| ●104     | 231371   | Pin-Float Hinge              | 1        |
| ●◆276    | 271716   | Sealing Washer               | 1        |
| ★177     | 280393   | O-Ring Seal                  | 1        |
| 121      | 498260   | Carburetor Kit               | 1        |
| ●127     |          | Plug-Welch(Sold in Kit Only) | 1        |
| ●134     | 398188   | Needle/Seat Kit              | 1        |

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| ◆◆137    | 693981   | Gasket-Bowl               | 1        |
| ★◆◆163   | 272653   | Gasket-Air Cleaner        | 1        |
| 358      | 497316   | Gasket Set                | 1        |
| ★585     | 272238   | Breather Passage Gasket   | 1        |
| ◆◆617    | 270344   | O-Ring Seal               | 1        |
| ◆◆708    | 691321   | Seal-Dust                 | 1        |
| ★668     | 493823   | Spacer(Includes 2)        | 1        |
| ★†883    | 272253   | Gasket-Exhaust            | 1        |
| 977      | 498261   | Gasket Set-Carburetor     | 1        |
| ★1081    | 280966   | O-Ring Seal               | 1        |
| 1095     | 498528   | Gasket Set-Valve Overhaul | 1        |

★ Included in Gasket Set-See Ref. 358.

● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.

† Included in Valve Overhaul Gasket Set-See Ref. 1095.

# Toro Part Number Index

| Part No.    | Page No. | Ref. No. | Qty. | Description                           |
|-------------|----------|----------|------|---------------------------------------|
| 614650      | 1        | 26       | 4    | Bolt-Shoulder                         |
| 614672      | 1        | 27       | 4    | Bolt-Shoulder                         |
| 614687      | 1        | 24       | 2    | Arm-Front Spring                      |
| 27-6250     | 1        | 19:1     | 2    | Bushing (614409 Lb#)                  |
| 40-1940     | 1        | 28       | 4    | Washer-Wheel Bolt                     |
| 43-8480     | 2        | 32       | 1    | Decal-Danger                          |
| 82-8550-03  | 2        | 8        | 1    | Shield-Muffler                        |
| 86-9671     | 3        | 2        | 1    | Guide-Rope                            |
| 92-1005     | 1        | 18       | 2    | Spring Arm ASM - Rear                 |
| 92-1008     | 1        | 23       | 4    | Knob-Height Adj Lever                 |
| 92-2260     | 3        | 14       | 2    | Screw-Handle                          |
| 92-2914     | 1        | 16       | 1    | Decal - HOC R                         |
| 92-2915     | 1        | 15       | 1    | Decal - HOC L                         |
| 92-4881-03  | 1        | 35       | 2    | Plate - Hght Adj                      |
| 92-4890     | 1        | 30       | 4    | Washer - Wheel                        |
| 92-8647     | 1        | 21       | 1    | Shield - Trailing                     |
| 92-9591     | 1        | 25       | 2    | Assembly - 7" Wheel                   |
| 92-9592     | 1        | 19       | 2    | Assembly - 8" Wheel                   |
| 93-0216     | 1        | 34       | 1    | Kicker - Front                        |
| 93-0217     | 2        | 12       | 1    | Kicker - Rear                         |
| 93-0219-03  | 2        | 18       | 1    | Accelerator                           |
| 93-0222-03  | 1        | 33       | 1    | Baffle - Front                        |
| 93-0223-03  | 2        | 11       | 1    | Baffle - Rear (Black)                 |
| 93-0230-01  | 1        | 36       | 1    | Cover - Recycling                     |
| 93-0231     | 1        | 32       | 1    | Screw - PPH                           |
| 93-0231     | 2        | 10       | 1    | Screw - PPH                           |
| 93-0235     | 1        | 17       | 1    | ASM - LH Handle Bracket               |
| 93-0236     | 1        | 5        | 1    | ASM - RH Handle Bracket               |
| 93-0241     | 2        | 19       | 1    | Blade - Steel Deck (Raw)              |
| 93-0242     | 1        | 37       | 4    | Grommet                               |
| 93-0243     | 2        | 3        | 1    | Shroud-Quantum Wedge                  |
| 93-0248     | 1        | 6        | 1    | Decal - Warning                       |
| 94-6097     | 3        | 5        | 1    | Stop                                  |
| 95-1726     | 2        | 13       | 3    | Screw-Taptite w/Patch                 |
| 95-1748     | 2        | 16       | 1    | Screw-Blade                           |
| 95-4453     | 3        | 13       | 1    | Screw - Handle                        |
| 95-7403-03  | 1        | 29       | 4    | Brkt-Whl Ht Adj                       |
| 98-3206     | 2        | 2        | 1    | Nameplate - Toro                      |
| 98-7134     | 3        | 15       | 2    | Knob-Handle                           |
| 98-8332     | 2        | 34       | 1    | Knob                                  |
| 99-1569-05  | 3        | 4        | 1    | Handle-Upper                          |
| 99-1570-03  | 3        | 6        | 1    | Bail-Brake                            |
| 99-5229     | 3        | 10       | 1    | Cable-Brake                           |
| 99-5287     | 2        | 20       | 1    | ASM-Blade Driver                      |
| 99-5291     | 2        | 26       | 1    | Rod-Cover (Steel Side Discharge)      |
| 99-5292     | 2        | 27       | 1    | Bracket-Cover (Steel Side Discharge)  |
| 99-5293     | 2        | 28       | 1    | Spring-Torsion (Steel Side Discharge) |
| 99-5294     | 2        | 29       | 1    | Cover-Side (Steel Side Discharge)     |
| 99-5295     | 2        | 30       | 1    | Chute-Side (Side Discharge)           |
| 99-6011     | 2        | 25       | 1    | Decal - Deck                          |
| 99-6013     | 2        | 4        | 1    | Decal - Recoil                        |
| 99-6018     | 1        | 4        | 1    | Decal - Warning                       |
| 99-6021-05  | 3        | 17       | 1    | Lower Handle                          |
| 99-6349     | 2        | 35       | 1    | Baffle                                |
| 100-1181    | 2        | 36       | 1    | Housing (Service)                     |
| 100-1589-03 | 2        | 33       | 1    | Clamp-Door                            |
| 2210-316    | 2        | 5        | 1    | Stop-Rope F/W Engine                  |
| 322-3       | 1        | 20       | 4    | Screw-HH                              |
| 3229-11     | 2        | 31       | 2    | Screw-CARR                            |
| 3253-22     | 2        | 17       | 1    | Washer-Lock/Sp                        |
| 3256-1      | 3        | 11       | 1    | Washer-Flat                           |
| 3296-2      | 1        | 3        | 1    | Nut-Lock Esna                         |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No.  | Page No. | Ref. No. | Qty. | Description  |
|-----------|----------|----------|------|--------------|
| 3296-29   | 1        | 22       | 4    | Nut-Lock Ni  |
| 3296-39   | 1        | 31       | 4    | Nut-Lock Ni  |
| 3296-42   | 2        | 23       | 2    | Nut-Lock Ni  |
| 3296-73   | 3        | 1        | 2    | Nut-Lock     |
| 32105-27  | 1        | 2        | 1    | Screw        |
| 32144-4   | 1        | 1        | 3    | Screw-HH     |
| 32144-73  | 2        | 9        | 3    | Screw        |
| 32144-121 | 2        | 6        | 2    | Screw-Pan Hd |

PROTOTYPE

PROTOTYPE