



Z-Master

Compact Series Z147 International with 44" Side Discharge Mower

Model No. 74270—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Front Frame Assembly	3	Valve/Camshaft Assembly	19
Height of Cut Handle and Plates	4	Valve/Camshaft Assembly	20
Main Frame	5	Piston/Crankshaft Assembly	21
Fuel System	6	Lubrication–Equipment Assembly	22
Parking Brake System	7	Cooling–Equipment Assembly	23
Motion Control System	8	Cooling–Equipment Assembly	24
Hydraulics	9	Electric–Equipment Assembly	25
Pump Idler and Belts	10	Electric–Equipment Assembly	26
Engine and Clutch	11	Control–Equipment Assembly	27
Electrical System	12	Control–Equipment Assembly	28
44" Deck	13	Carburetor Assembly	29
44" Deck and Spindle Assembly	14	Carburetor Assembly	30
Idler Pulleys / Lift Strut, Chains	15	Air–Filter/Muffler Assembly	31
Recycler Assembly	16	Fuel–Tank/Fuel–Valve Assembly	32
Cylinder/Crankcase Assembly	17	Starter/Decals	33
Cylinder/Crankcase Assembly	18		


Accessories

Description	Model / Part No.	Description	Model / Part No.
Striping Kit	30121	Hitch Kit	99–8924
High Back Suspension Seat	74210		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

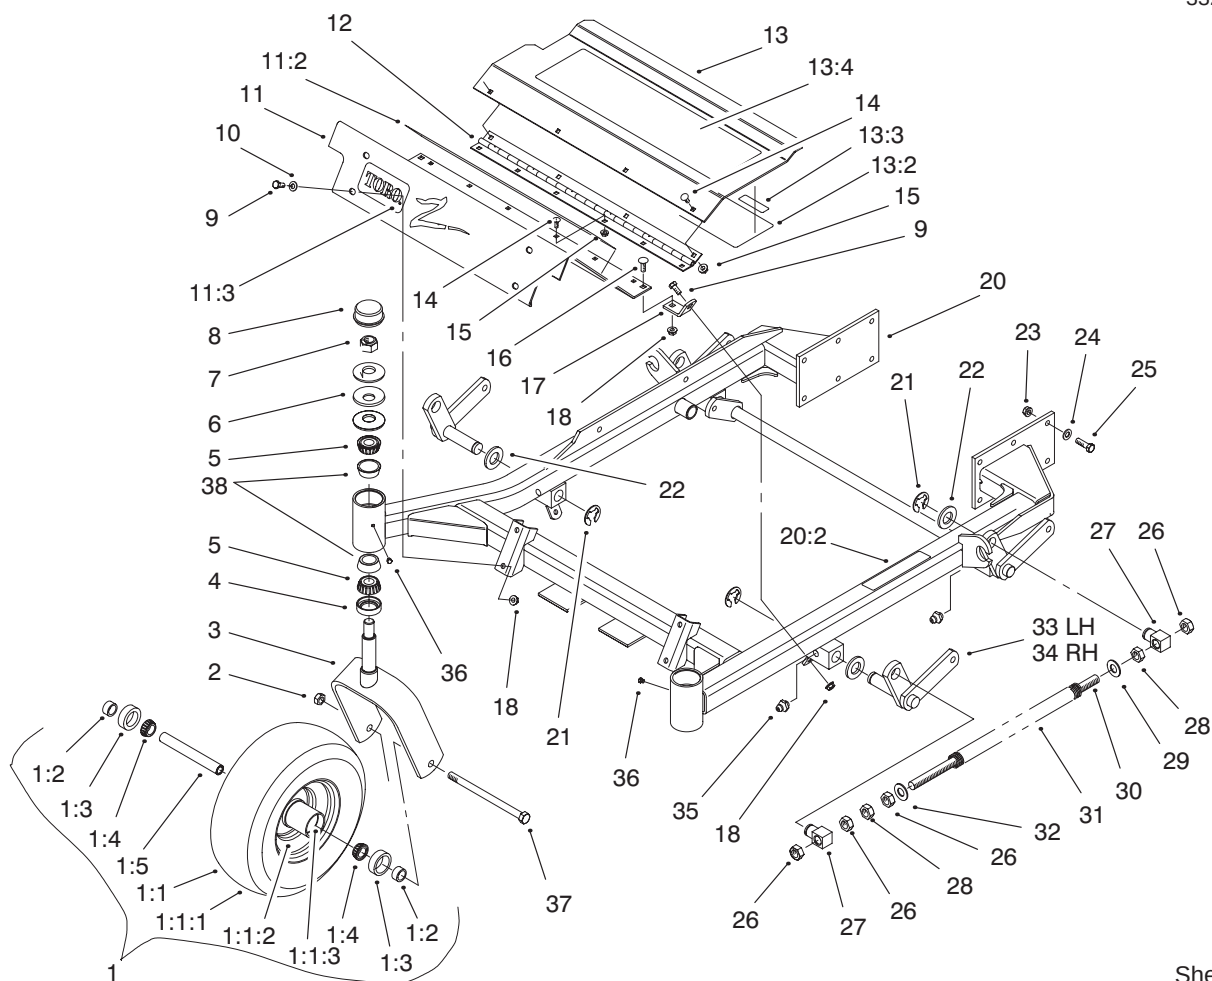


Sheet No.:2

Front Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	E632586	2	Caster Wheel ASM
1:1	E633582	1	Wheel & Tire ASM
1:1:1	E633002	1	Tire
1:1:2	E633583	1	Wheel
1:1:3	254-79	2	Bearing-Roller, Cup
1:2	E633581	2	Spacer-Bearing
1:3	E633580	2	Seal-Bearing
1:4	254-78	2	Cone-Bearing
1:5	E633579	1	Spacer-Caster, Front
2	3296-45	2	Nut-Lock NI
3	E632511	2	Caster
4	E543511	2	Seal-Grease
5	254-94	4	Bearing-Taper/Cone
6	E633508	6	Washer-Bellevue
7	3296-51	2	Nut-Lock NI
8	E543513	2	Cap-Grease
9	322-3	6	Screw-HH
10	3256-23	4	Washer-Flat
11	99-3940	1	Floorpan-Front
11:2	E633553	1	Pad-Antiskid
11:3	E633737	1	Decal- Z-Master
12	E653049	1	Hinge-Floorpan
13	100-3957	1	Footrest ASM
13:2	99-8940	1	Decal-Service
13:3	98-1977	1	Decal - Warning Ce
13:4	E633553	1	Pad-Antiskid


Ref. No.	Part No.	Qty.	Description
14	3229-10	10	Screw-CARR
15	32128-33	10	Nut-HF
16	3230-1	2	Screw-CARR
17	99-3870-01	2	Bracket-Floorpan
18	32128-20	8	Nut-HF
20	100-3958	1	Front Frame ASM
20:2	99-8943	1	Decal-Warning
21	32151-103	6	Ring-Snap
22	3256-29	6	Washer-Flat
23	3290-357	12	Nut-Flange, Lock
24	E303327	12	Washer-Spring, Disc
25	323-7	12	Screw-HH
26	3217-11	8	Nut-Hex
27	E633441	4	Swivel-Mount, Deck
28	3218-6	4	Nut-Jam
29	3256-7	2	Washer-Flat
30	E653011	2	Rod-Deck Lift
31	E653009	2	Spring-Assist, Lift
32	3256-27	2	Washer-Flat
33	99-3871-01	1	LH Lift Arm ASM
34	99-3872-01	1	RH Lift Arm ASM
35	302-58	4	Zerk
36	E811010	2	Plug-Swivel, Caster
37	E800339	2	Screw-HH
38	254-72	4	Bearing-Taper/Cup

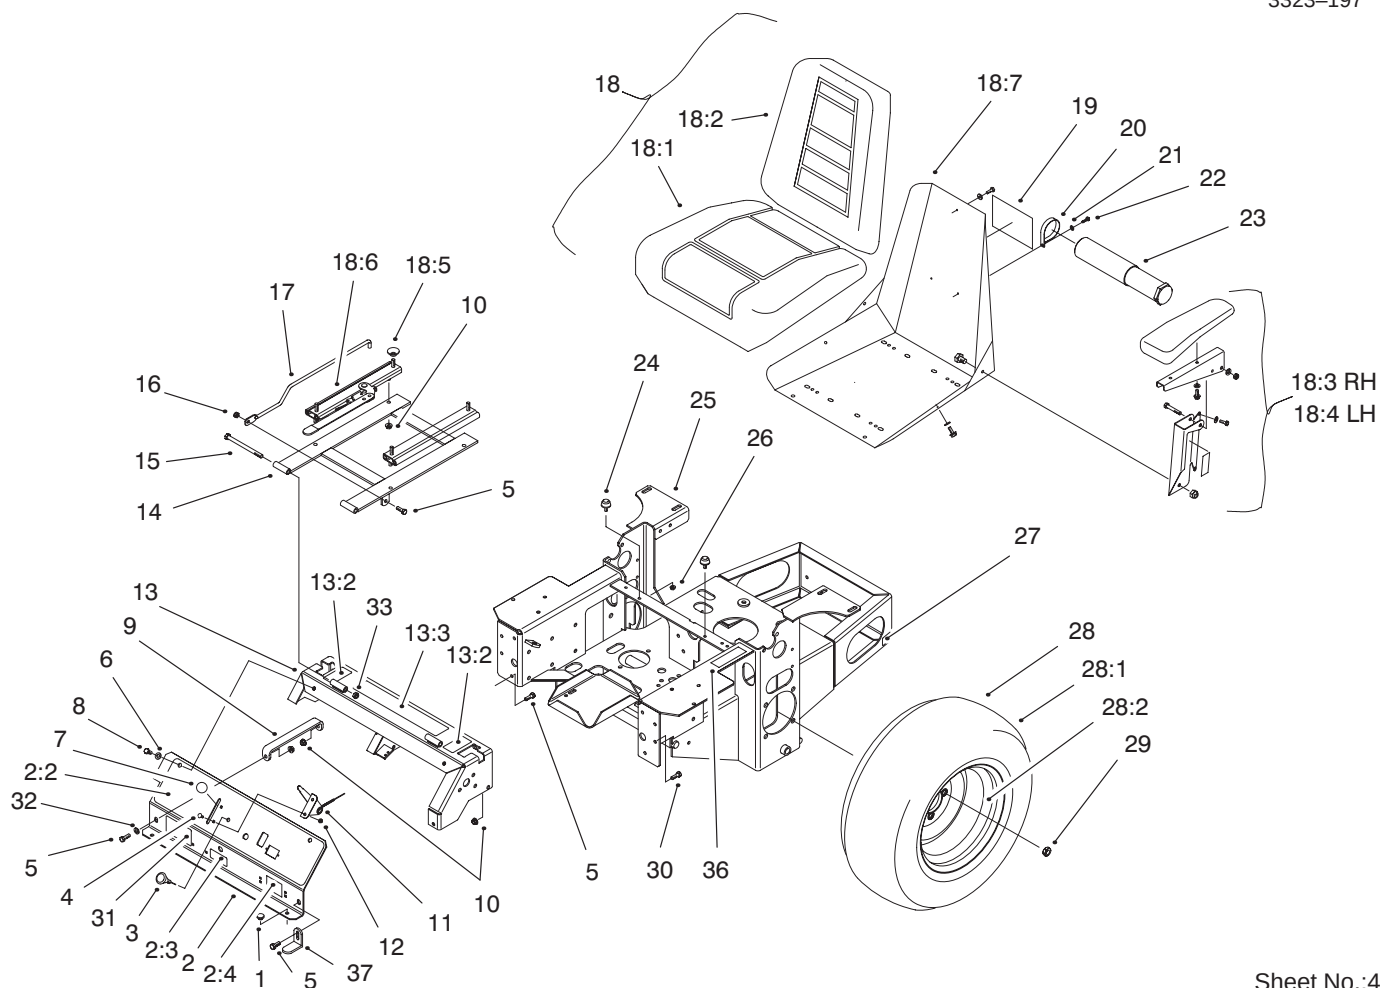

Sheet No.:4

Main Frame

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	E513658	2	Bumper-Catcher, Grass	18:1	E543407	1	Cushion-Seat
2	100-3959	1	Control Panel ASM	18:2	E633709	1	Cushion-Backrest
2:2	99-8945	1	Decal-Control Panel	18:3	E633710	1	Armrest-RH
2:3	99-8937	1	Decal-Fuel Valve	18:4	E633711	1	Armrest-LH
2:4	98-4387	1	Decal-Protection, Ear	18:5	E543401	4	Spacer-Track
3	E603336	1	Control-Choke, Push-Pull	18:6	E643255	1	Track-Locking, 4"
4	E807513	2	Bolt-CARR	18:7	E633859	1	Frame-Seat
5	322-5	4	Screw-HH	19	93-7340	1	Decal-Toro
6	3256-23	2	Washer-Flat	20	2412-120	2	R-Clamp
7	E513592	1	Knob-Ball, Red	21	3256-14	2	Washer-Flat
8	322-3	2	Screw-HH	22	32144-34	2	Screw-Forming, Thread
9	E653089	1	Bracket-Panel, Instrument	23	74-0720	1	Tube-Manual
10	32128-20	12	Nut-HF	24	E523420	2	Bumper
11	E633696	1	Cable-Throttle	25	E652470	1	Frame-Main
12	3296-2	2	Nut-Lock	26	32128-33	2	Nut-HF
13	100-3960	1	Console ASM	27	93-8069	2	Decal-Hot Surface
13:2	99-8936	2	Decal-Motion Control	28	E653010	2	Wheel And Tire ASM
13:3	99-8944	1	Decal-Battery	28:1	E653160	1	Tire
14	E632187	1	Frame-Seat	28:2	E653158	1	Wheel
15	321-21	2	Screw-HH	29	E513011	8	Nut-Wheel
16	3296-29	1	Nut-Lock, NI	30	322-2	6	Screw-HH
17	E653495	1	Rod-Hold Up, Seat	31	99-4603	1	Decal-Z147
18	E633705	1	Seat ASM	32	3256-3	2	Washer-Flat
				33	3296-39	2	Nut-Lock, NI
				36	99-8938	1	Decal-Drive Release
				37	99-8947-01	1	Stop-Cover

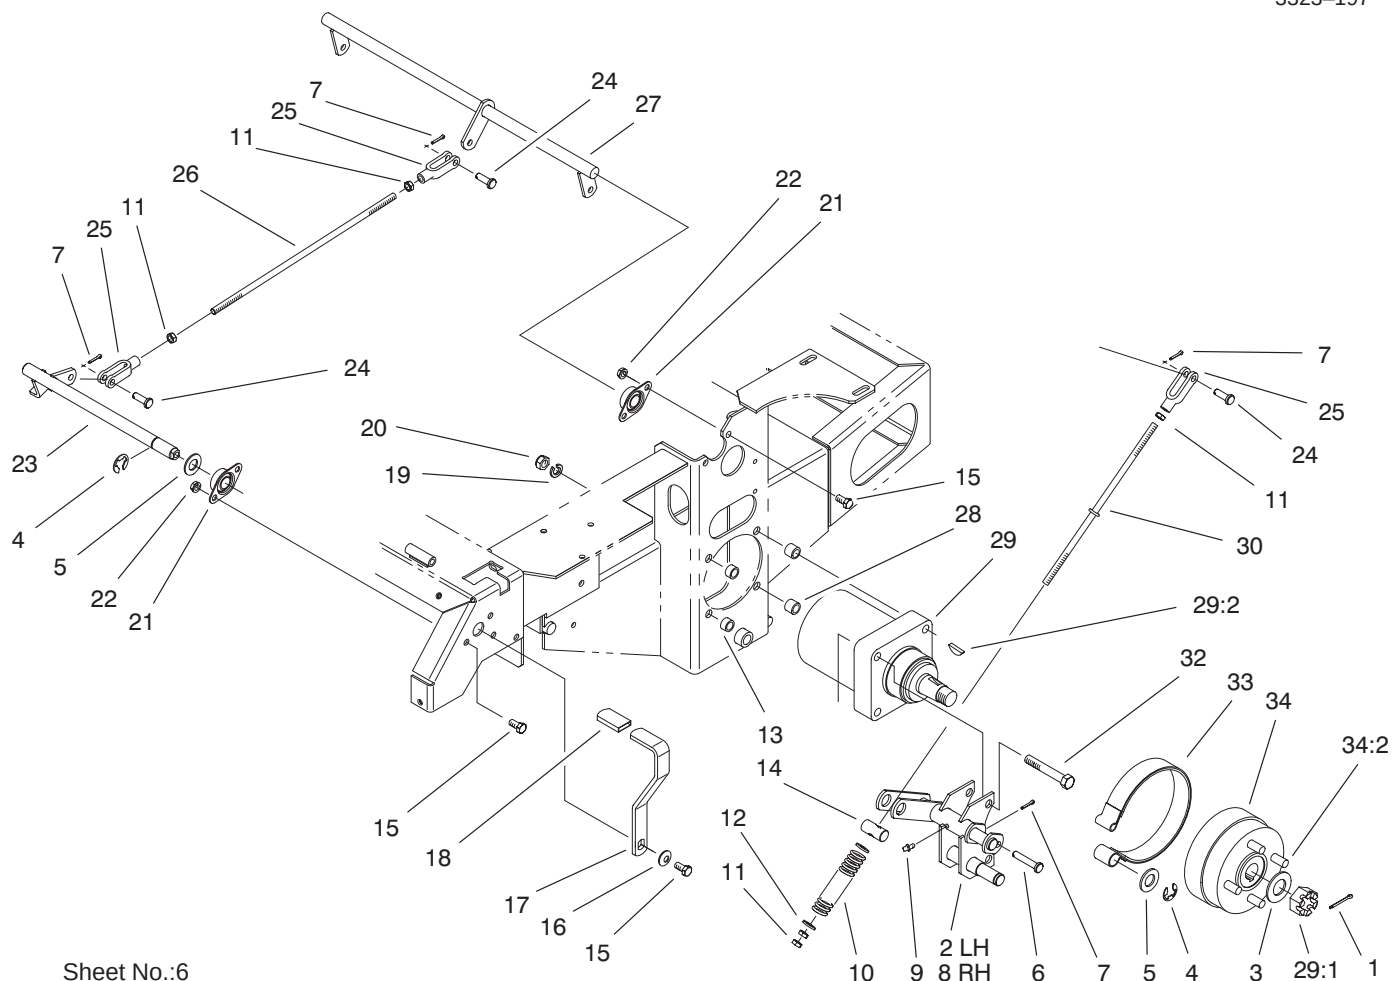


Sheet No.:6

Parking Brake System

Ref. No.	Part No.	Qty.	Description
1	E806800	2	Pin-Cotter
2	E652134	1	Bracket-Brake, LH
3	E523157	2	Spacer
4	E808514	3	Ring-Retaining
5	3256-28	3	Washer-Flat
6	E808283	2	Pin-Clevis
7	3272-10	6	Pin-Cotter
8	E652135	1	Bracket-Brake, RH
9	E811007	2	Fitting-Grease
10	E633454	2	Spring-Brake
11	3219-3	8	Nut-Hex
12	3256-4	4	Washer-Flat
13	E653069	4	Spacer
14	E633144	2	Pin-Trunion
15	323-4	9	Screw-HH
16	E303327	1	Washer-Spring, Disc
17	E653074	1	Handle-Brake, Park
18	E633268	1	Grip-Lever, Brake
19	3253-7	8	Washer-Lock/Sp
20	3217-9	8	Nut-Hex
21	E633102	4	Bearing-Flange, Side
22	3290-357	8	Nut-Flange, Lock
23	E652085	1	Shaft-Brake
24	E808285	4	Pin-Clevis
25	E633131	4	Yoke-Linkage, Brake

Ref. No.	Part No.	Qty.	Description
26	E653061	1	Linkage-Handle, Brake
27	E652073	1	Crank-Brake
28	E653068	4	Spacer
29	E523328	2	Motor-Wheel
29:1	E809036	1	Nut-Castle
29:2	E807020	1	Key-Woodruff
30	E633477	2	Rod-Brake
32	325-13	8	Screw-HH
33	E633693	2	Band-Brake
34	E634927	2	Hub And Drum ASM
34:2	E633926	4	Stud-Wheel

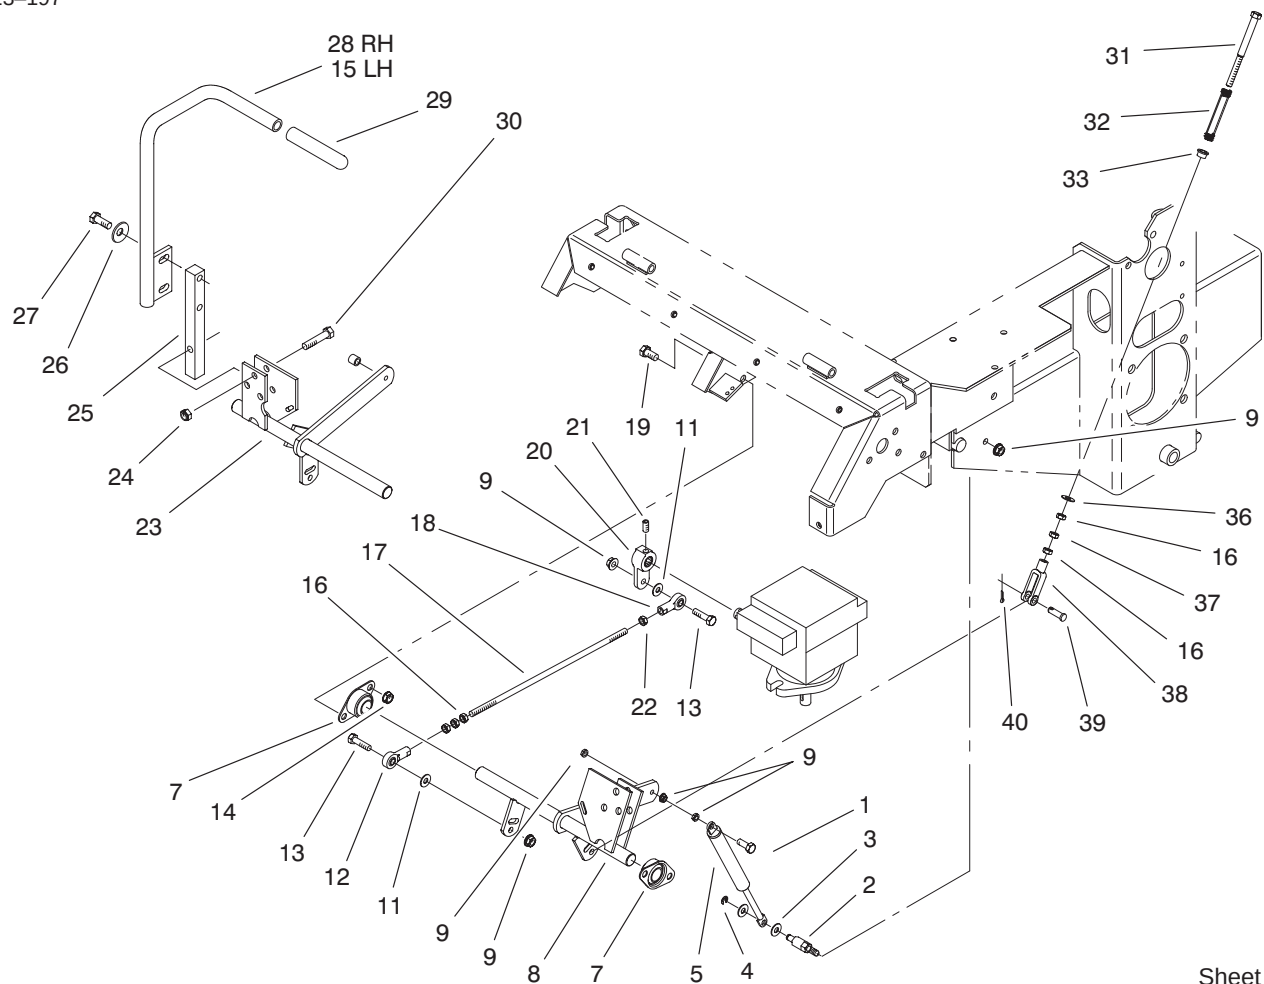


Sheet No.:7

Motion Control System

Ref. No.	Part No.	Qty.	Description
1	322-17	2	Screw-HH
2	E653316	2	Pin-Dampner
3	3256-23	6	Washer-Flat
4	E808512	2	E-Ring
5	E523027	2	Damper-Control
7	E633102	4	Bearing-Flange, Side
8	E652467	1	Motion Control, LH
9	32128-20	12	Nut-HF
11	3256-3	4	Washer-Flat
12	E543017	2	Joint-Ball
13	322-6	4	Screw-HH
14	3290-357	8	Nut-Flange, Lock
15	E632191	1	Lever-LH
16	3219-2	10	Nut-Hex
17	E653046	2	Link-Control, Pump
18	E633152	2	Joint-Ball, LH Thread
19	323-4	8	Screw-HH
20	E653092	2	Arm-Control, Pump
21	E803022	2	Screw
22	E804524	2	Nut
23	E652466	1	Motion Control, RH
24	3296-39	6	Nut-Lock, NI
25	E633177	2	Arm
26	E303327	4	Washer-Spring, Disc
27	323-6	4	Screw-HH
28	E632193	1	Lever-RH

Ref. No.	Part No.	Qty.	Description
29	E633257	2	Grip-Control, Motion
30	323-9	6	Screw-HH
31	E603737	2	Bolt-Return, Neutral
32	E603807	2	Spring-Return, Neutral
33	E603735	2	Bushing-Flanged, Nylon
36	3256-2	2	Washer-Flat
37	3220-2	2	Nut-Jam
38	E303105	2	Yoke-Adjustable
39	E808280	2	Pin-Clevis
40	3272-5	2	Pin-Cotter

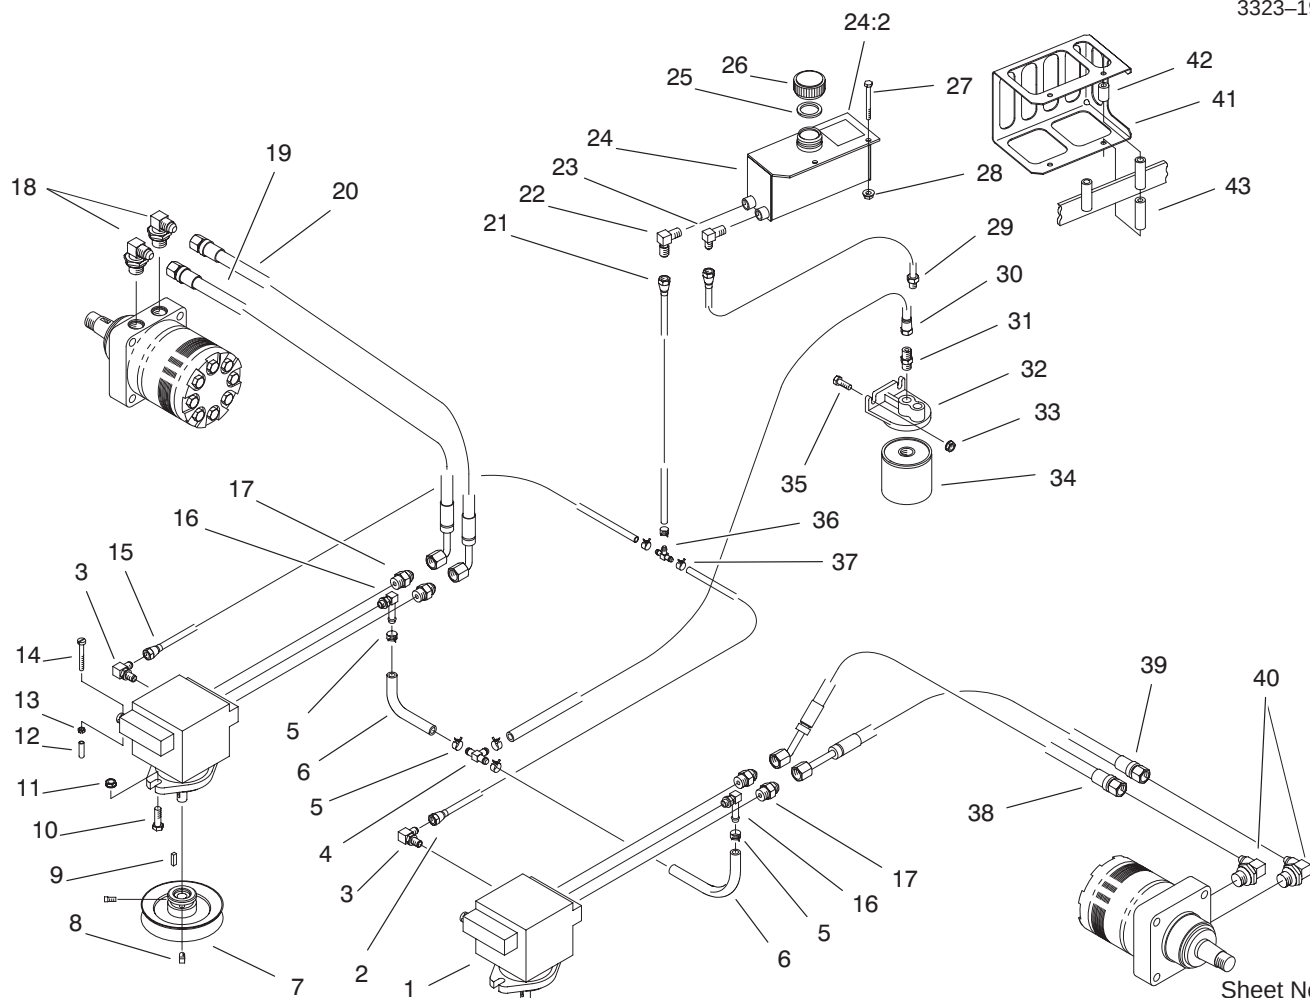


Sheet No.:8

Hydraulics

Ref. No.	Part No.	Qty.	Description
1	E603841	2	Pump-Hydro
2	E632285	1	Hose-Pressure, Low
3	E513840	2	Elbow-90°
4	E603721	1	Fitting
5	E603827	5	Clamp-Hose
6	E413273	2	Hose-Pressure, Low
7	E653156	2	Sheave w/Hub
8	3242-4	4	Screw-Set,SQH
9	E807272	2	Key
10	323-7	4	Screw-HH
11	3290-357	4	Nut-Flange, Lock
12	E613073	2	Grip
13	3296-42	2	Nut-Lock
14	E801063	4	Screw-PPH
15	E632286	1	Hose-Pressure, Low
16	E603989	2	Elbow
17	E603990	4	Adapter
18	E633605	2	Elbow 90°
19	100-3964	1	Hose-Front
20	100-3965	1	Hose-Rear
21	E654144	1	Hose
22	E603987	1	Elbow
23	E603988	1	Elbow
24	100-3953	1	Hydraulic Tank ASM
24:2	100-3952	1	Decal-Hydraulic Tank, Hot Surface

Ref. No.	Part No.	Qty.	Description
25	E523103	1	Gasket-Tank/Cap
26	E513167	1	Cap-Reservior, Hydraulic
27	E800266	2	Screw-HH
28	32128-33	2	Nut-HF
29	E654320	1	Hose
30	E654509	1	Hose ASM
31	E513510	1	Connector-Male
32	E603720	1	Head-Filter
33	32128-20	2	Nut-HF
34	E633750	1	Filter-Hydro
34	E633752	1	Filter-Hydro, Winter
35	322-5	2	Screw-HH
36	E603722	1	Fitting
37	E603826	3	Clamp-Hose
38	100-3966	1	Hose-Rear
39	100-3968	1	Hose-LH
40	E633786	2	Elbow 90°
41	99-8927-03	1	Shield-Heat, Hydro Res
42	99-8935	2	Spacer
43	99-8934	2	Spacer

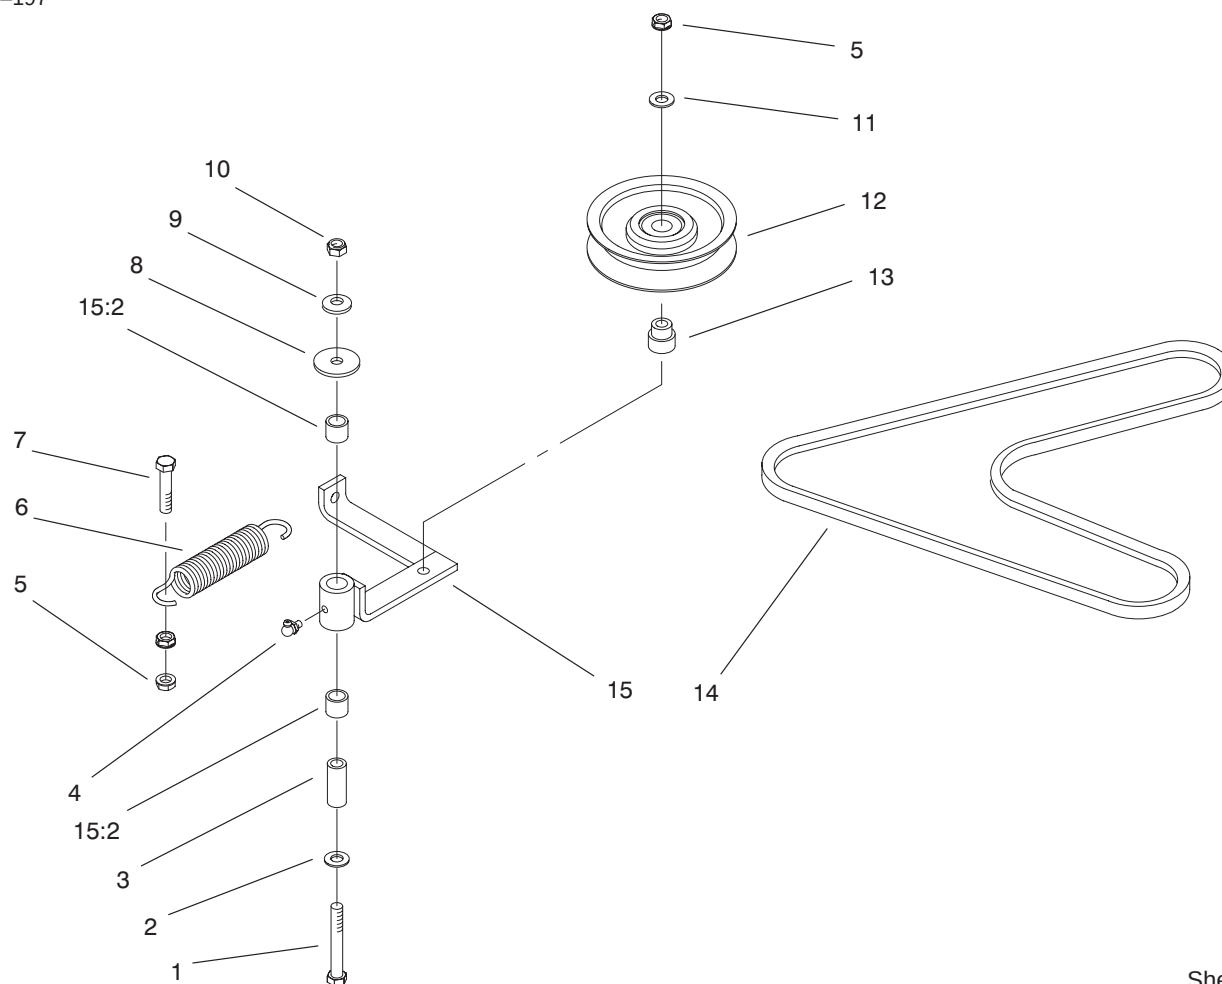


Sheet No.:9

Pump Idler and Belts

Ref. No.	Part No.	Qty.	Description
1	323-13	1	Screw-HH
2	3256-4	1	Washer-Flat
3	E603044	1	Bushing
4	E811008	1	Fitting-Grease
5	3290-357	3	Nut-Flange, Lock
6	E603414	1	Spring-Extension
7	323-9	1	Screw-HH
8	E213069	1	Washer
9	E303327	1	Washer-Spring, Disc
10	3296-39	1	Nut-Lock, NI
11	3256-24	1	Washer-Flat
12	E603843	1	Pulley-Idler
13	E603496	1	Bushing-Idler
14	E653283	1	Belt-Drive, Pump
15	E654143	1	Idler Arm w/Bushings, Zerk
15:2	E513034	2	Bearing-Pivot

Ref. No.	Part No.	Qty.	Description

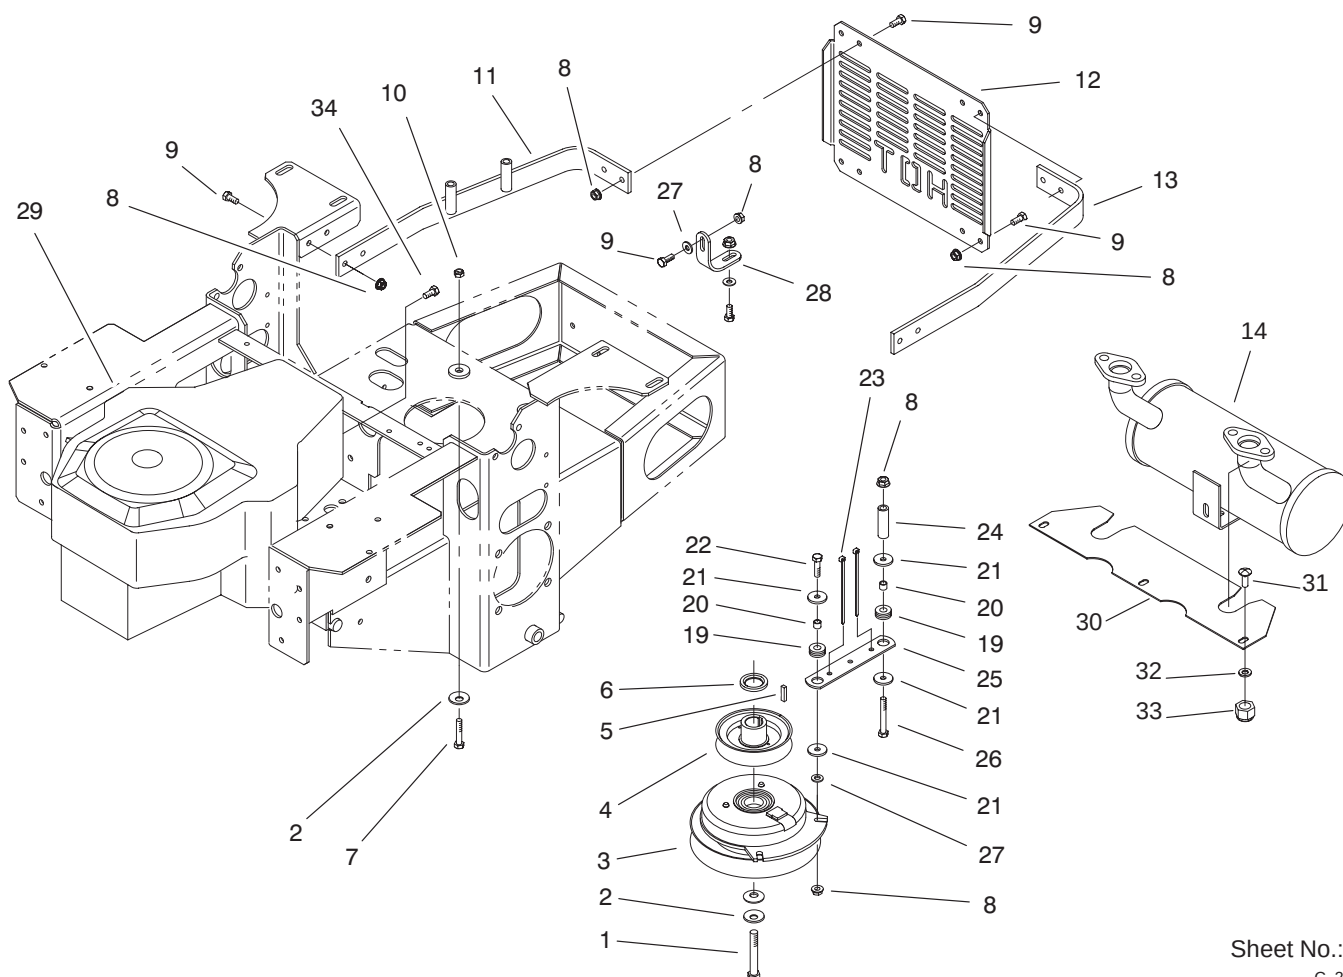


Sheet No.:10
C-2898

Engine and Clutch

Ref. No.	Part No.	Qty.	Description
1	E800820	1	Screw-HH
2	E603610	2	Washer-Spring, Disc
3	E653048	1	Clutch
4	E653035	1	Sheave-Pump Drive
5	E807259	1	Key
6	E543214	1	Spacer-Crankshaft
7	322-9	4	Screw-HH
8	32128-20	16	Nut-HF
9	322-3	14	Screw-HH
10	3296-29	4	Nut-Lock,NI
11	E652146	1	Strap-Guard, Engine
12	E653095	1	Shield-Guard, Engine
13	E653093	1	Strap-Guard, Engine
14	E653194	1	Muffler
19	E633630	2	Grommet
20	E633545	2	Spacer-Grommet
21	E613235	4	Washer
22	322-6	1	Screw-HH
23	E303335	2	Tie-Plastic
24	E523406	1	Bushing-Mount, Seat
25	E633543	1	Strap-Clutch/Brake
26	322-22	1	Screw-HH
27	3256-3	3	Washer-Flat
28	E653196	1	Bracket-Support, Muffler

Ref. No.	Part No.	Qty.	Description
29	E653162	1	Engine-17hp Kawasaki (Fh500v-As10)
30	E653565	1	Heat Shield-17 Ka
31	3230-1	3	Screw-CARR
32	3256-23	3	Washer-Flat
33	3296-29	3	Nut-Lock,NI
34	E809109	2	Screw Torx Hd

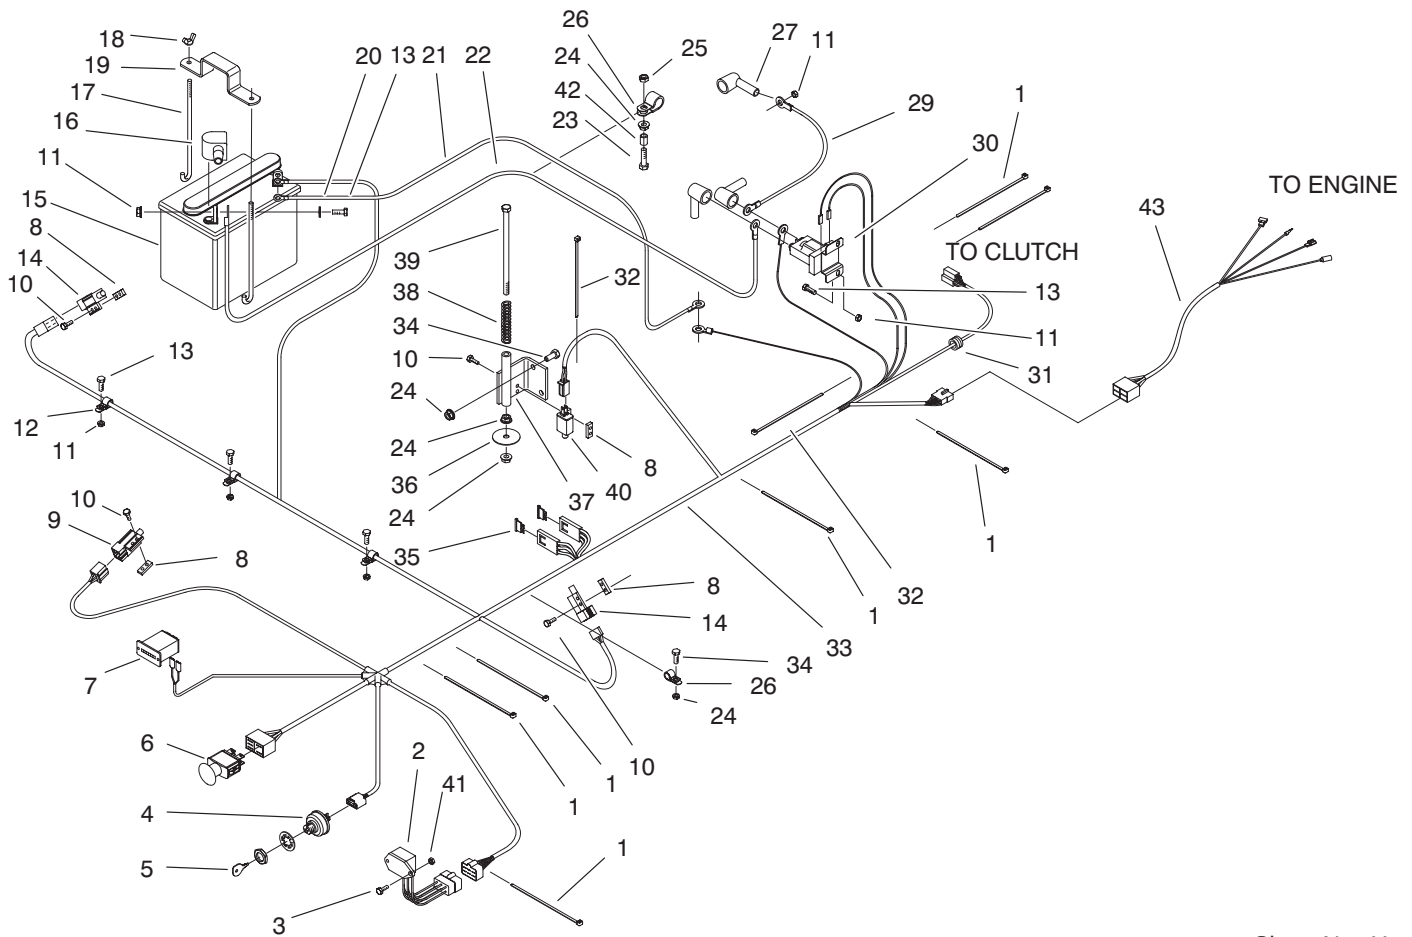


Sheet No.:11

Electrical System

Ref. No.	Part No.	Qty.	Description
1	E303335	7	Tie-Plastic
2	E543316	1	Module-Safety
3	E807533	2	Bolt-CARR
4	E543070	1	Switch-Ignition
5	63-8360	2	Key-Ignition
6	E633673	1	Switch-PTO
7	E513374	1	Meter-Hours, Engine
8	E633181	4	Plate-Tapped
9	E633110	1	Switch-Brake
10	32104-81	8	Screw-Head, Pan
11	32128-33	8	Nut-HF
12	E323229	3	Clip-Loom
13	321-4	7	Screw-HH
14	E633111	2	Switch-Lever, Drive
15	E603479	1	Battery-12v
16	E543391	1	Insulator-Battery
17	E633651	2	Bolt-Hold Down, Battery
18	E543792	2	Wingnut-Nyloc
19	E633652	1	Strap-Hold Down, Battery
20	3256-2	2	Washer-Flat
21	E523282	1	Cable-Ground
22	E523281	1	Cable-Battery
23	E800279	1	Bolt-TAP
24	32128-20	6	Nut-HF


Ref. No.	Part No.	Qty.	Description
25	E804256	1	Nut-Hex, Nyloc
26	E633396	2	Clip-Loom
27	E543393	3	Insulator-Solenoid
29	E633306	1	Wire-Starter
30	E513075	1	Switch-Solenoid, 12v
31	E543286	1	Grommet
32	E303287	2	Tie-Plastic
33	E653154	1	Harness-Wiring
34	322-3	3	Screw-HH
35	E816001	2	Fuse-Blade Type, 20 Amp
36	E653036	1	Washer
37	E652072	1	Bracket-Switch, Seat
38	E523415	1	Spring-Switch, Seat
39	E800282	1	Screw-HH
40	E513152	1	Switch-Seat
41	3296-2	2	Nut-Lock
42	E633082	1	Bushing-Lever, Lift
43	E613262	1	Harness-Wire

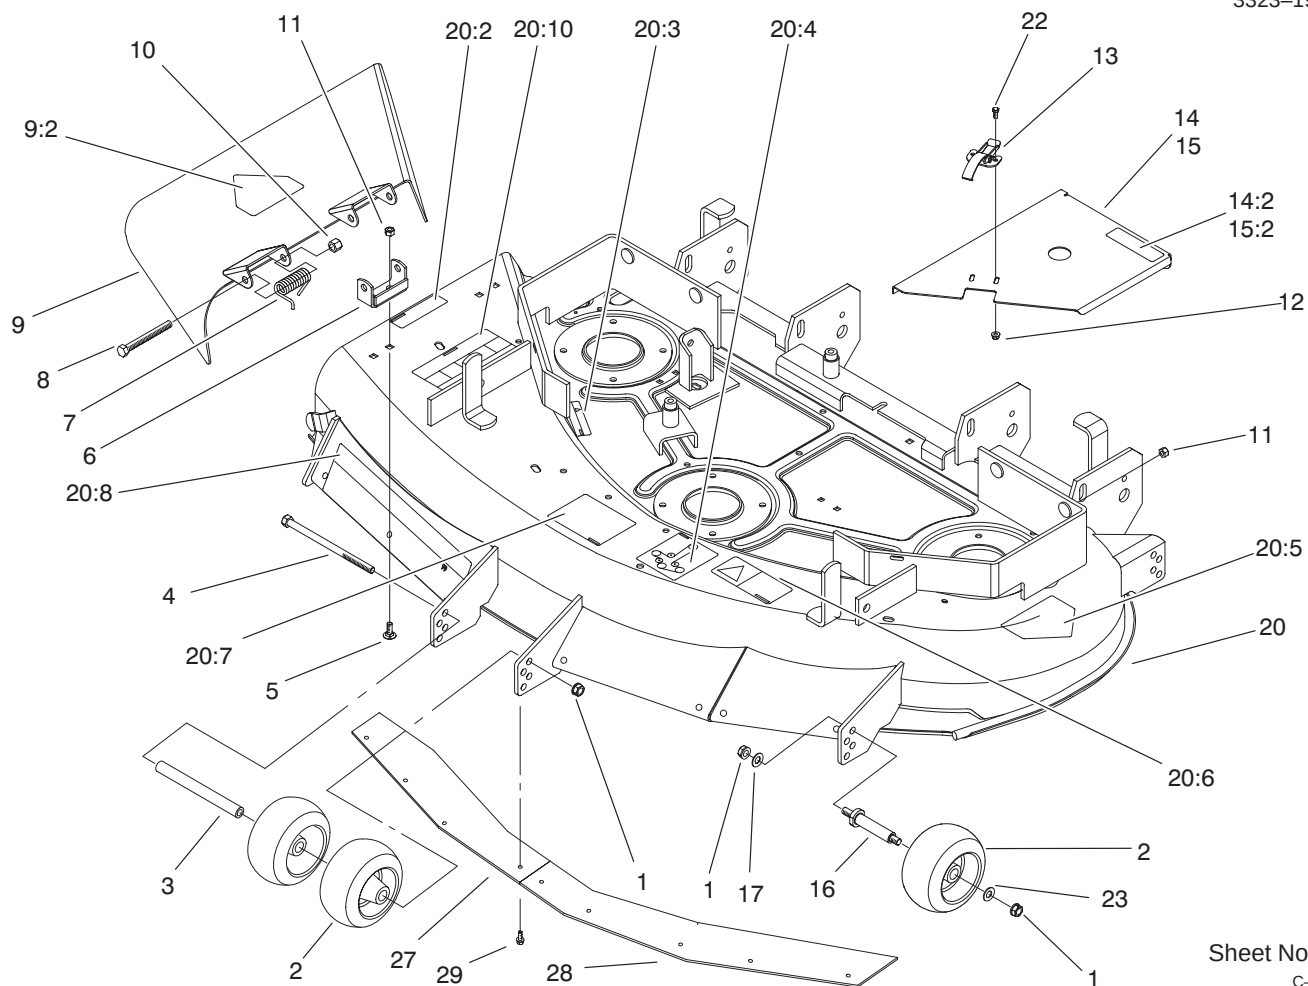

Sheet No.:12
C-2899

44" Deck

Ref. No.	Part No.	Qty.	Description
1	3290-357	7	Nut-Flange, Lock
2	68-2730	5	Wheel-Gage
3	98-5967	1	Spacer-Wheel
4	323-28	1	Screw-HH
5	3230-18	4	Screw-CARR
6	29-5590-01	2	Bracket-Pivot
7	40-6230	2	Spring
8	3211-15	2	Screw-HH
9	100-4295	1	Discharge Chute w/Decal-Ce
9:2	93-7316	1	Decal - Danger
10	3296-5	2	Nut-Lock, NI
11	32152-1	8	Nut-Lock
12	32128-17	4	Nut-Flange, Lock
13	249-21	2	Clamp-Slotted
14	100-3961	1	LH Cover ASM
14:2	98-1977	1	Decal - Warning Ce
15	100-3962	1	RH Cover ASM
15:2	98-1977	1	Decal - Warning Ce
16	99-2842	3	Spacer-Wheel
17	E303327	3	Washer-Spring, Disc
20	99-8948	1	44" Deck ASM w/Decals-Intl
20:2	93-7828	1	Decal-Caution
20:3	98-1977	3	Decal - Warning Ce
20:4	99-3943	1	Decal-Routing, Belt

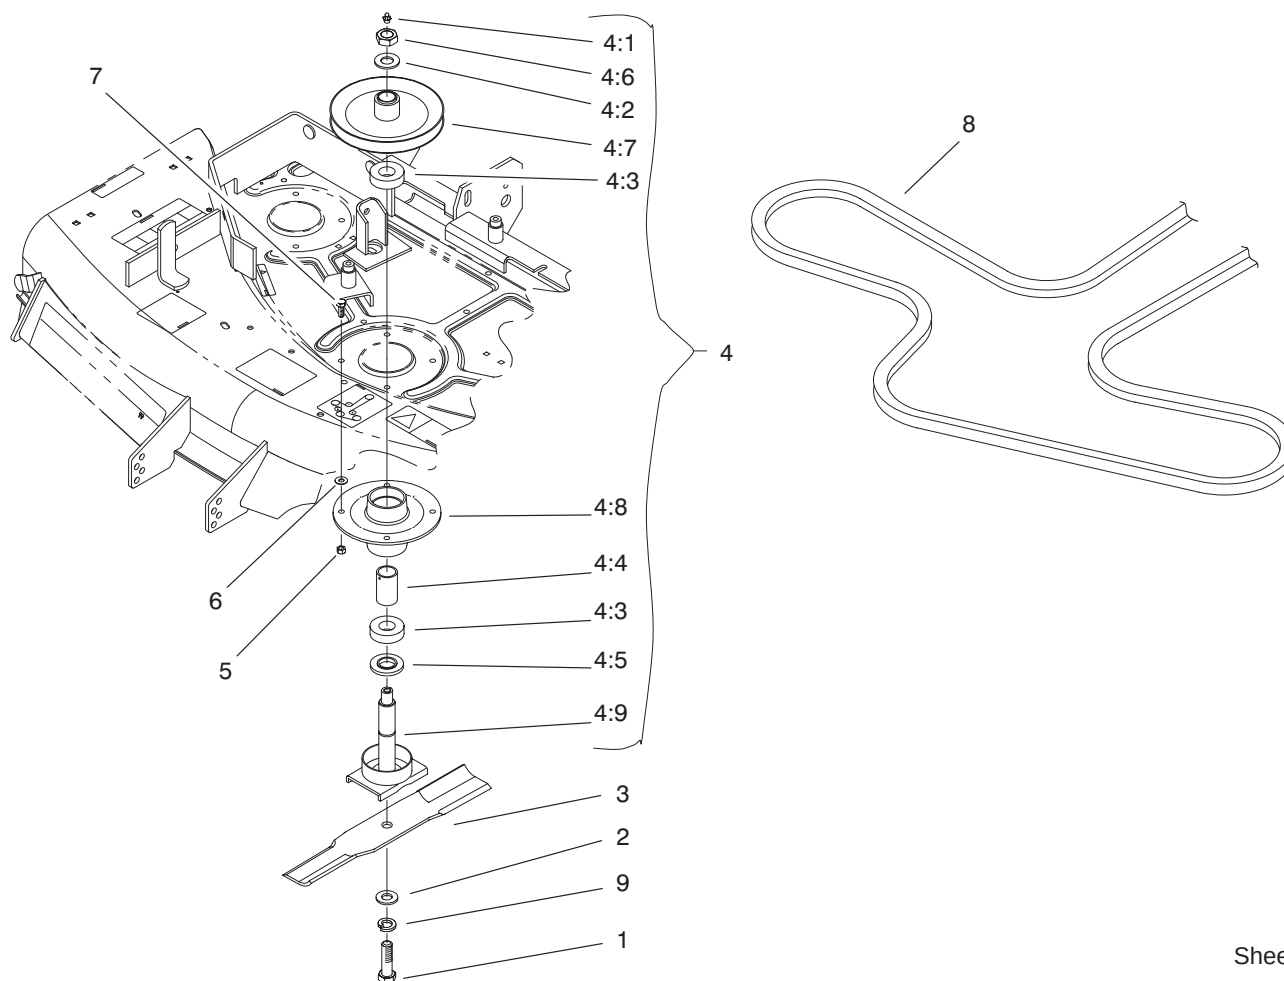


Sheet No.:13

44" Deck and Spindle Assembly

Ref. No.	Part No.	Qty.	Description
1	51-4060	3	Blade Screw
2	3256-27	3	Washer-Flat
3	54-0010	3	Blade 15.5"
4	100-3977	1	Spindle Housing ASM
4:1	302-2	1	Fitting-Grease
4:2	7-4150	1	Washer-Pinion
4:3	251-257	2	Bearing
4:4	67-7580	1	Spacer-Bearing
4:5	67-7570	1	Spacer-Spindle
4:6	32146-20	1	Nut-Jam
4:7	100-3975	1	Pulley And Hub ASM
4:8	67-7590	1	Spindle Housing
4:9	100-3974	1	Spindle Shaft ASM
5	32152-1	12	Nut-Lock
6	3256-2	4	Washer-Flat
7	322-4	12	Screw-HH
8	99-3913	1	Belt-44" Deck
9	3253-8	3	Washer-Lock/Sp

Ref. No.	Part No.	Qty.	Description

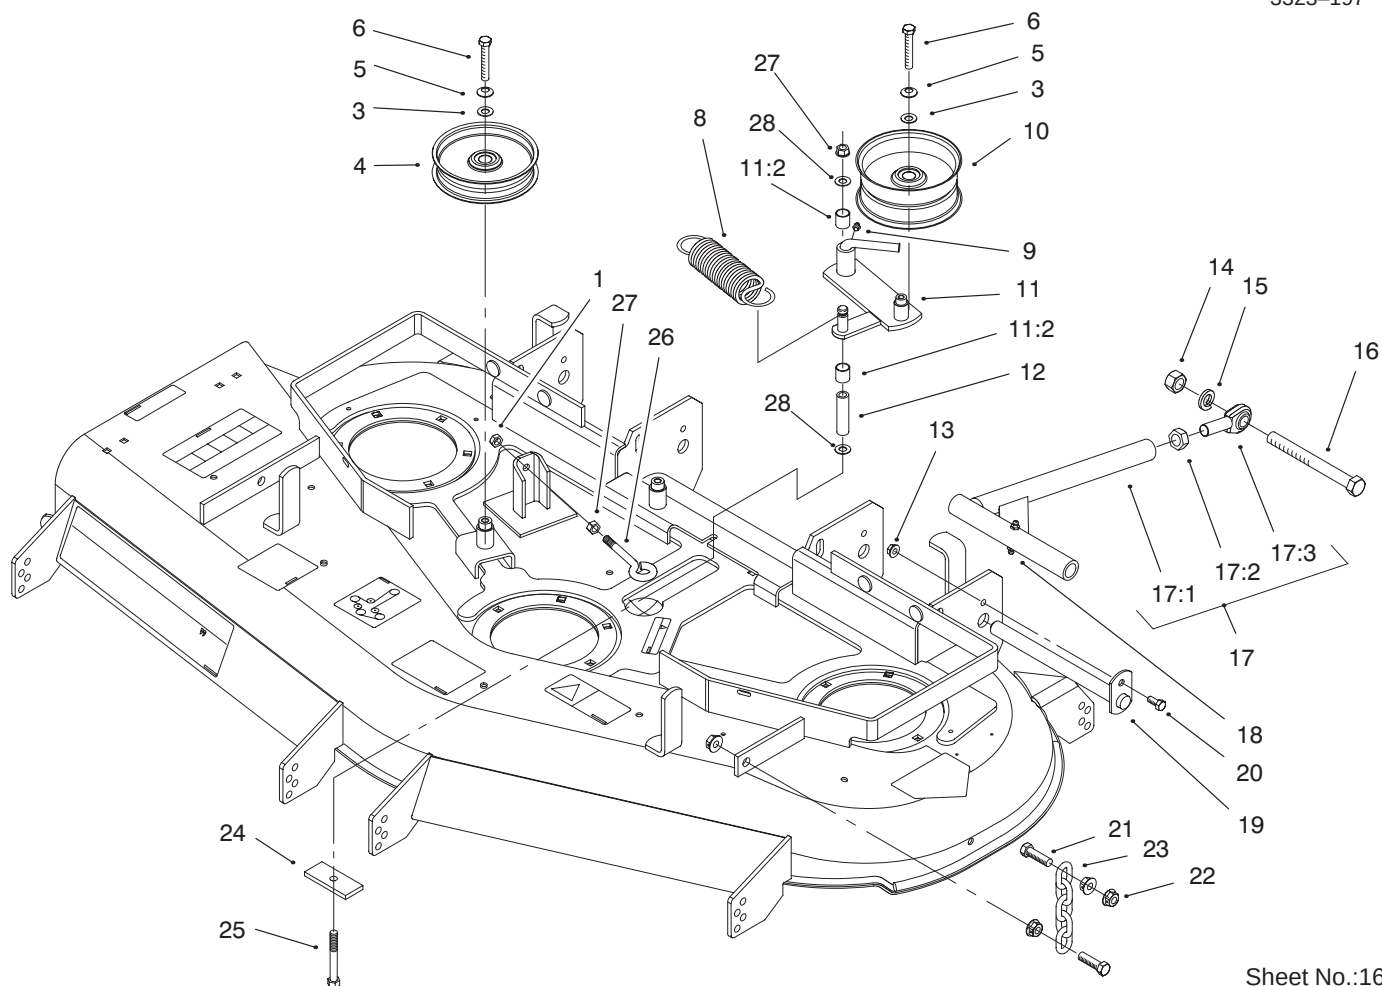


Sheet No.:16

Idler Pulleys / Lift Strut, Chains

Ref. No.	Part No.	Qty.	Description
1	3217-7	1	Nut-Hex
3	3256-24	3	Washer-Flat
4	E613098	2	Pulley-Idler
5	E303327	3	Washer-Spring, Disc
6	323-6	3	Screw-HH
8	E633151	1	Spring-Extension
9	E811008	1	Fitting-Grease
10	99-8912	1	Pulley-Idler, Flat
11	99-8914	1	Idler Arm ASM
11:2	E513034	2	Bearing-Pivot
12	E603384	1	Bushing-Pivot, Idler
13	3296-41	2	Nut-Lock NI
14	3217-11	2	Nut-Hex
15	3253-8	2	Washer-Lock/Sp
16	E800344	2	Screw-HH
17	E634726	2	Strut ASM
17:1	E632690	1	Strut
17:2	3219-6	1	Nut-Hex
17:3	E633029	1	End-Rod, Spherical
18	302-58	4	Zerk
19	E632199	2	Pin-Strut, Deck
20	322-3	2	Screw-HH
21	324-6	8	Screw-HH
22	32128-37	16	Nut-Hex Flange
23	E633447	4	Chain-Lift, Deck
24	99-3946-01	1	Plate-Retainer, Bolt

Ref. No.	Part No.	Qty.	Description
25	E800805	1	Screw-HH
26	94-2547	1	Eyebolt
27	3296-39	2	Nut-Lock, NI
28	E809107	2	Washer-Hardened

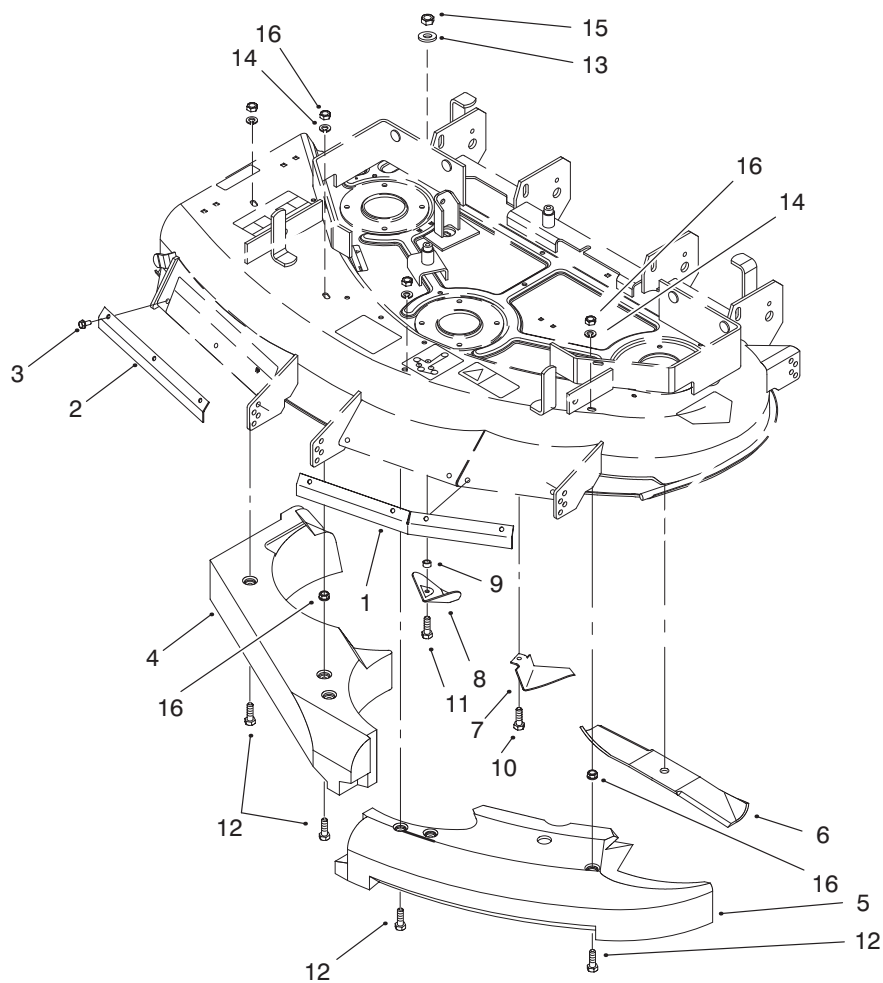

Sheet No.:18


C-2900

Recycler Assembly

Ref. No.	Part No.	Qty.	Description
1	99-4578	1	Guard-Left,Int'l
2	99-4579	1	Guard-Right, Int'l
3	32144-14	7	Screw-HWH
4	93-7651	1	Baffle-RH
5	93-7652	1	Baffle-LH
6	92-7952	3	Blade-Recycler
7	93-1196	1	Kicker - Rear Center
8	84-5760	3	Plate-Kicker
9	59-4310	3	Spacer
10	322-2	1	Screw-HH
11	322-5	3	Screw-HH
12	322-6	4	Screw-HH
13	3256-23	4	Washer-Flat
14	3290-456	4	Washer-Belleville
15	3296-29	4	Nut-Lock,Nl
16	32149-1	8	Nut-keps

Ref. No.	Part No.	Qty.	Description


Cylinder/Crankcase Assembly Kawasaki FH500V-AS10

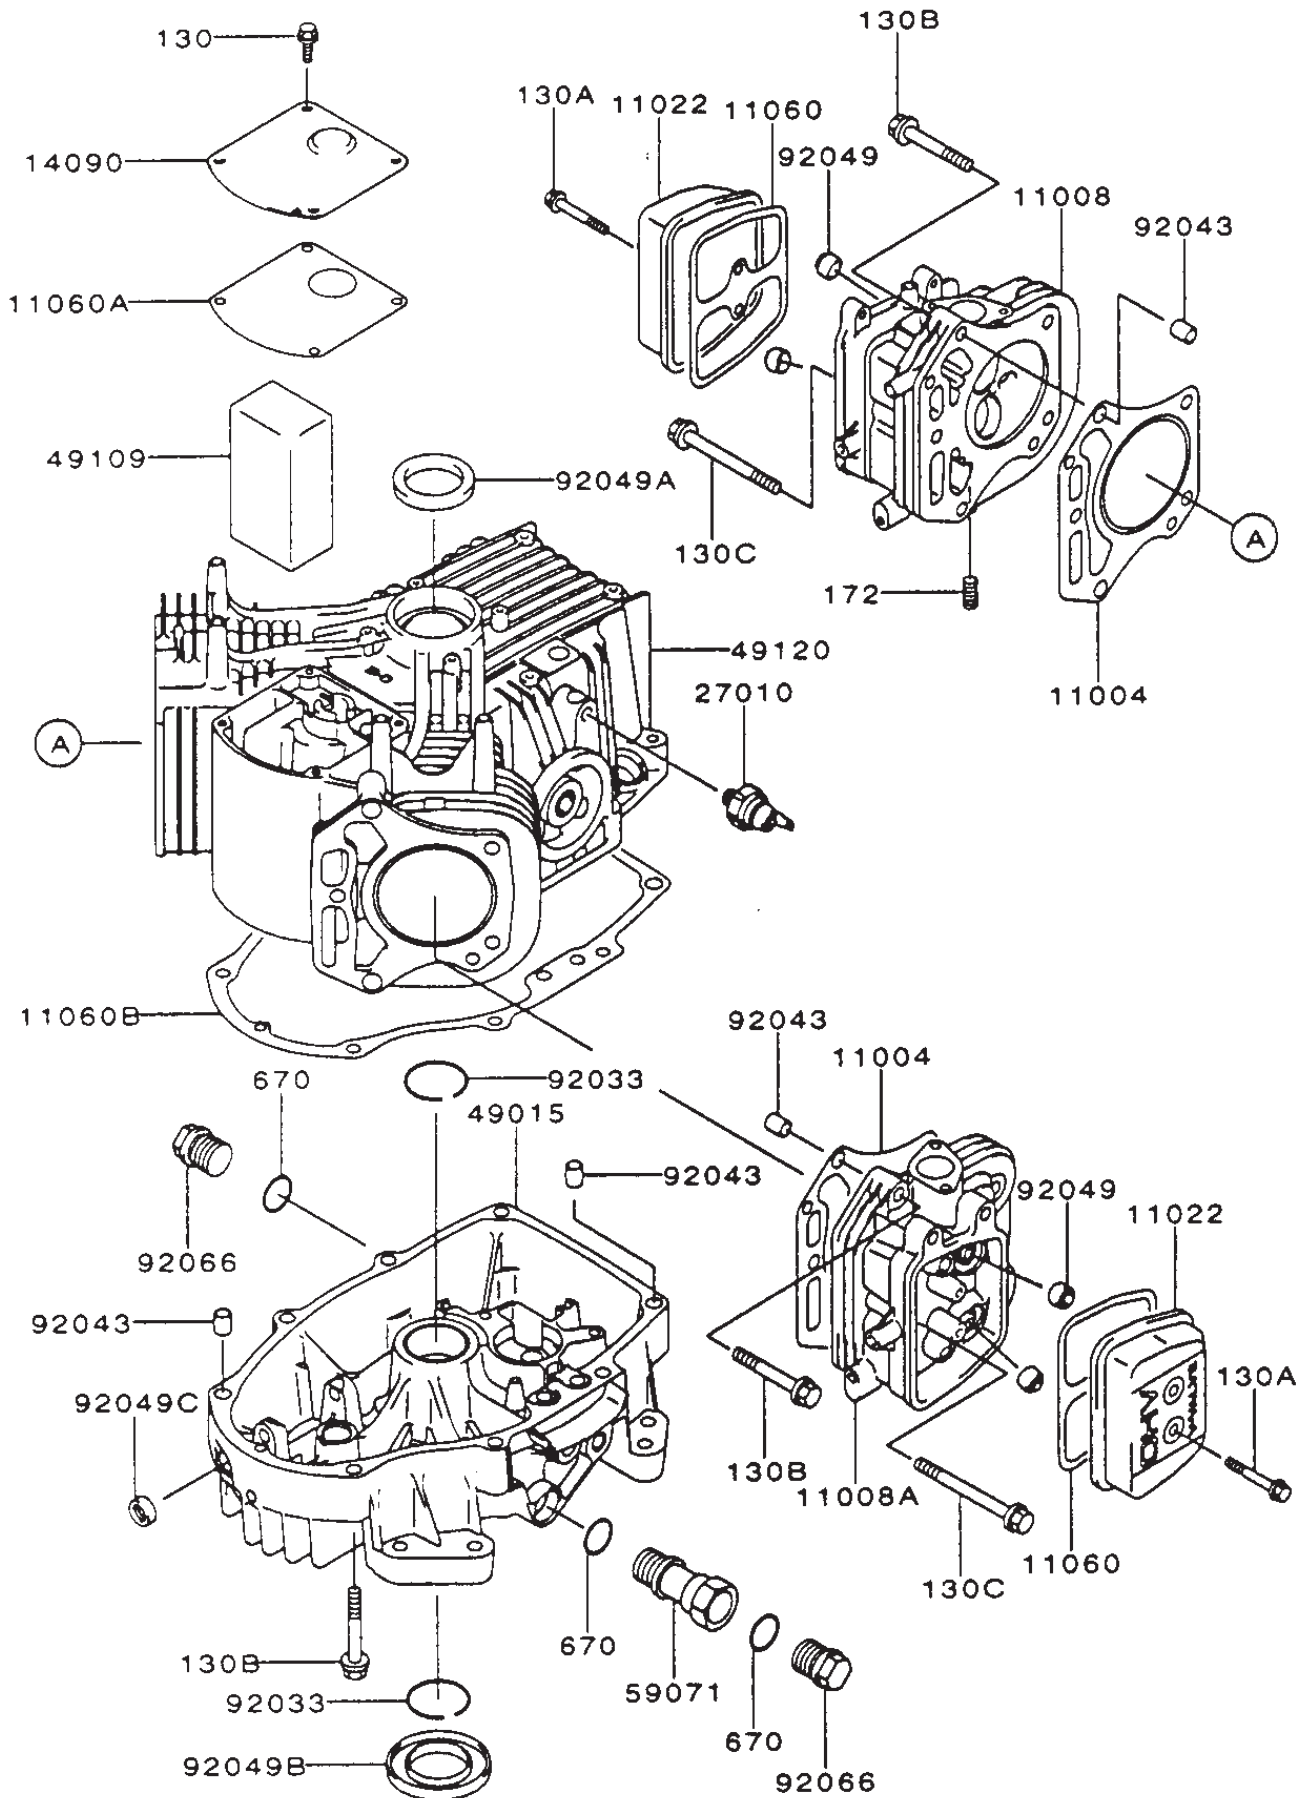

Cylinder/Crankcase Assembly Kawasaki FH500V-AS10


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11004	11004-7001	2	Gasket-Head				
11008	11008-7001	1	Head-Comp-Cylinder No. 1				
11008A	11008-7002	1	Head-Comp-Cylinder No. 2				
11022	11022-7001	2	Case-Rocker				
11060	11060-7001	2	Gasket, Rocker Case				
11060A	11060-7002	1	Gasket, Breather				
11060B	11060-7007	1	Gasket, Crankcase Cover				
14090	14090-7001	1	Cover, Breather				
27010	27010-7001	1	Switch				
49015	49015-6205	1	Cover-Crankcase				
49109	49109-7001	1	Element-Breather				
49120	49120-6117	1	Crankcase-Comp				
59071	59071-7003	1	Joint				
92033	92033-7003	2	Ring-Snap				
92043	92043-7001	6	Pin				
92049	92049-7001	4	Seal-Oil				
92049A	92049-7002	1	Seal-Oil				
92049B	92049-7004	1	Seal-Oil				
92049C	92049-7005	1	Seal-Oil				
92066	92066-7003	2	Plug				
130	130B0612	4	Bolt-Flanged				
130A	130B0640	4	Bolt-Flanged				
130B	130T0850	16	Bolt-Flanged				
130C	130T0875	2	Bolt-Flanged				
172	172G0818	4	Bolt-Stud				
670	670D2016	3	O-Ring				

Valve/Camshaft Assembly Kawasaki FH500V-AS10

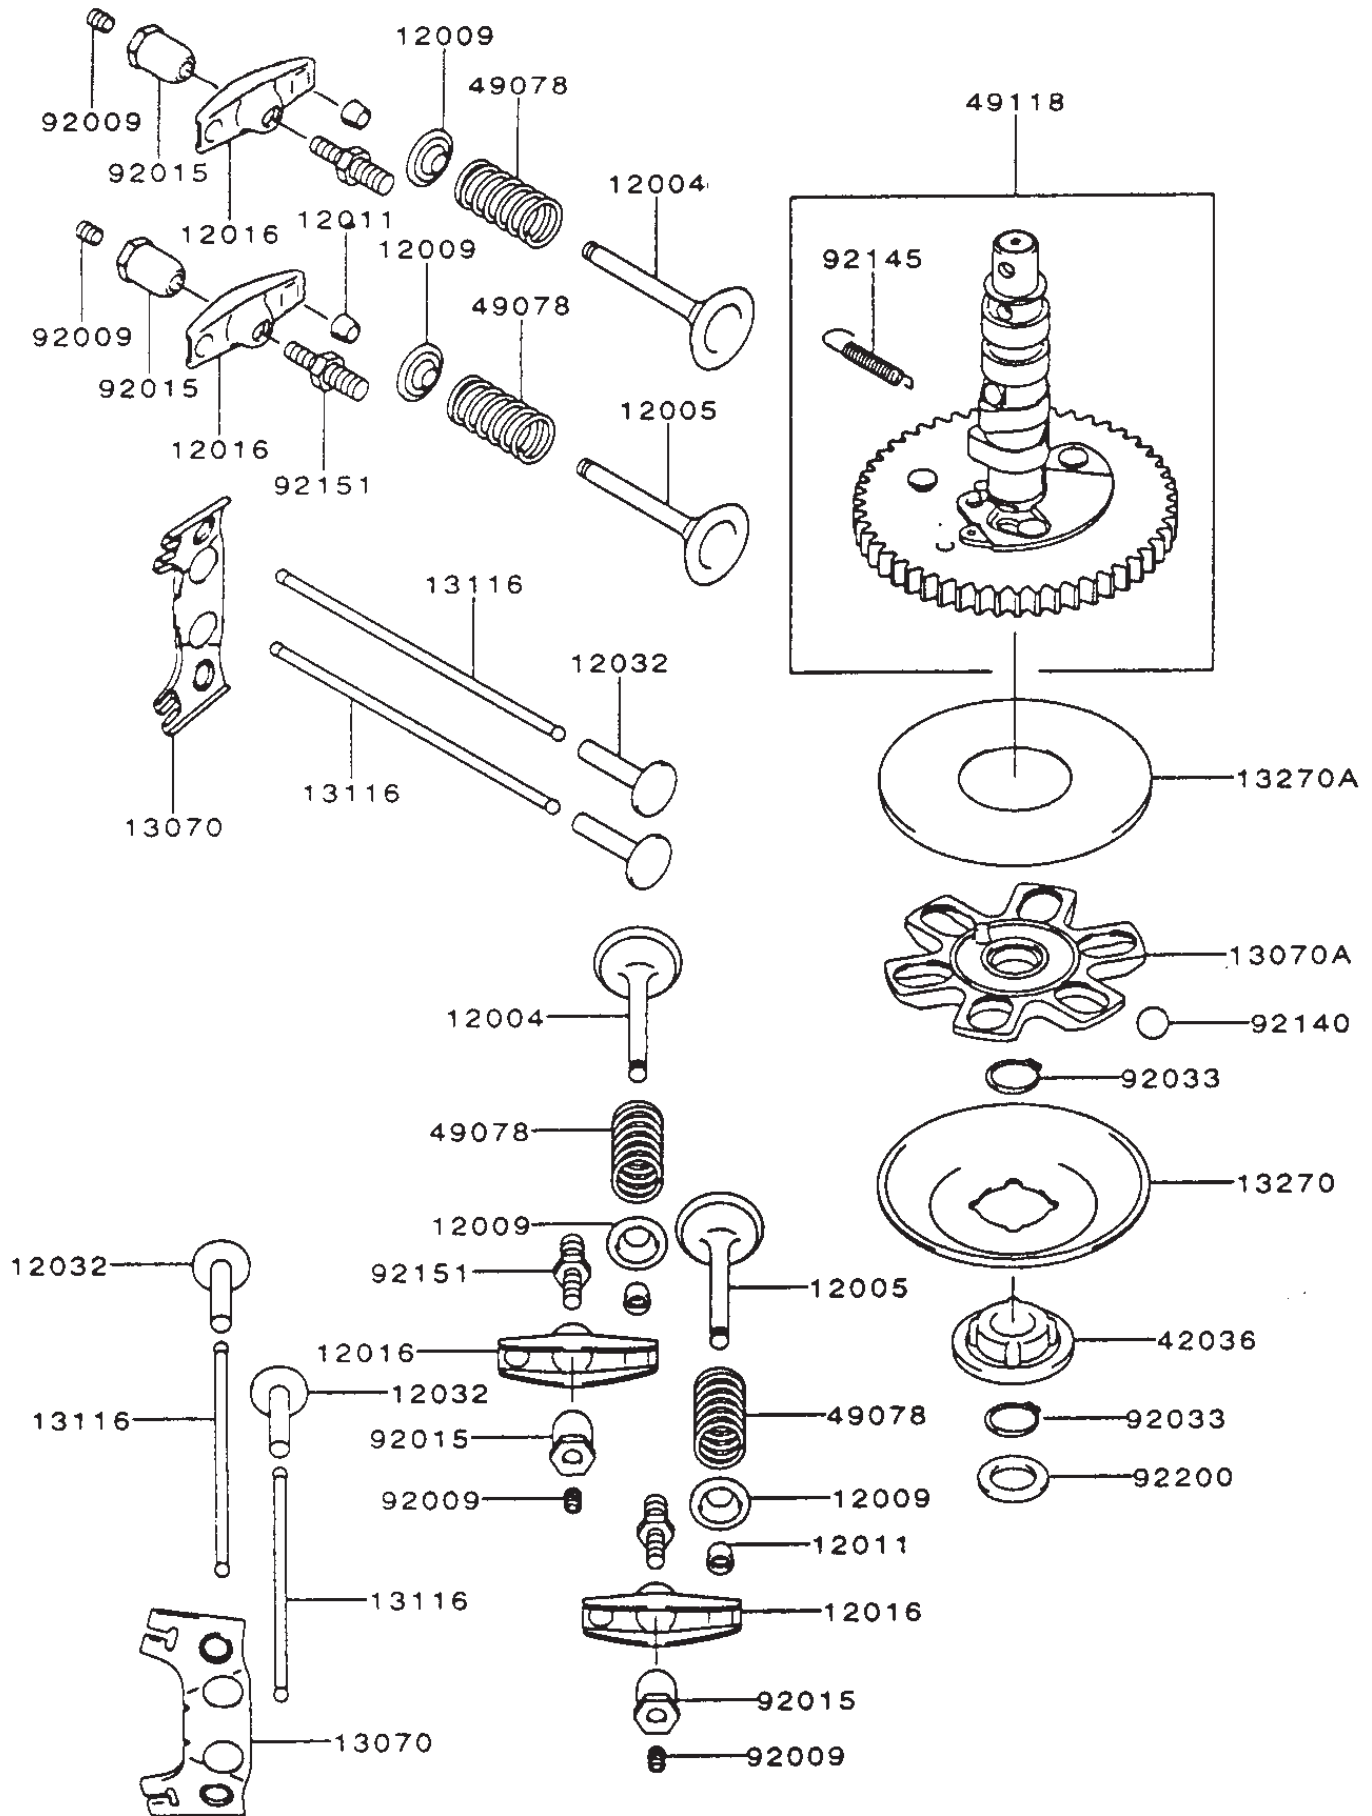

Ref. No.	Part No.	Qty.	Description
12004	12004-7001	2	Valve-Intake
12005	12005-7001	2	Valve-Exhaust
12009	12009-7001	4	Retainer-Valve Spring
12011	12011-2056	8	Collet
12016	12016-7001	4	Arm-Rocker
12032	12032-7001	4	Tappet
13070	13070-7001	2	Guide
13070A	13070-7002	1	Guide
13116	13116-2057	4	Rod-Push
13270	13270-7002	1	Plate
13270A	13270-7003	1	Plate
42036	42036-7001	1	Sleeve
49078	49078-7001	4	Spring-Engine Valve
49118	49118-7002	1	Camshaft-Comp
92009	92009-2341	4	Screw
92015	92015-2253	4	Nut
92033	92033-7001	2	Ring-Snap
92140	92140-7002	6	Ball
92145	92145-7001	1	Spring
92151	92151-7001	4	Bolt
92200	92200-7001	1	Washer

Ref. No.	Part No.	Qty.	Description

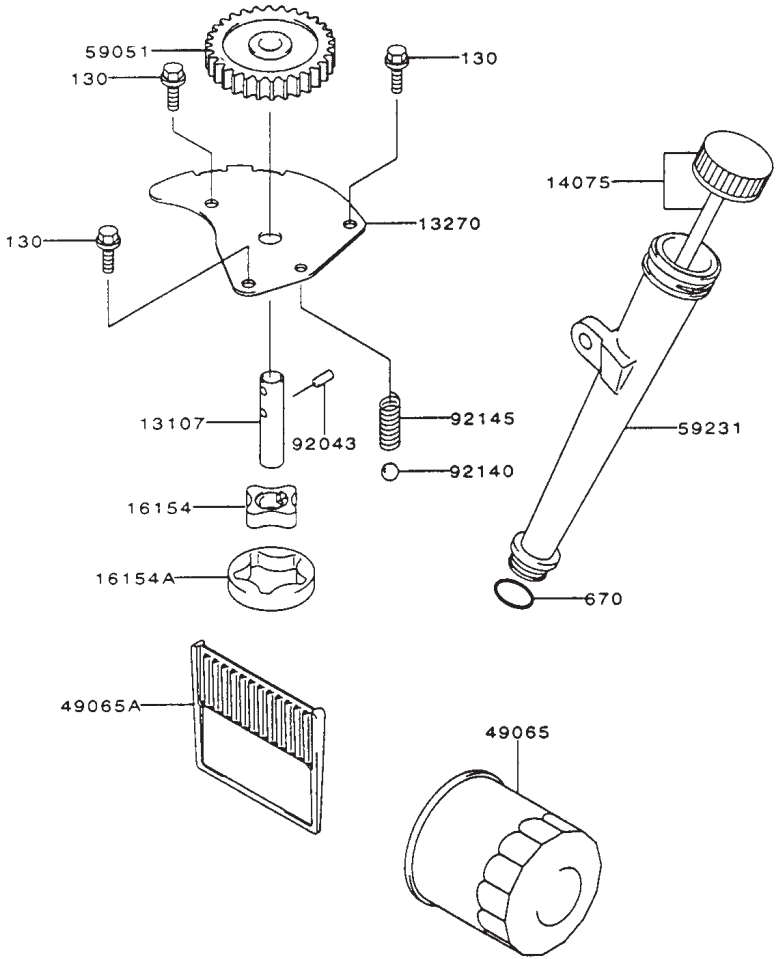


Lubrication-Equipment Assembly Kawasaki FH500V-AS10

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13107	13107-2099	1	Shaft, Oil Pump				
13270	13270-7004	1	Plate				
14075	14075-7001	1	Cap-Assy				
16154	16154-2053	1	Rotor-Pump, Out				
16154A	16154-2054	1	Rotor-Pump, Out				
49065	49065-2078	1	Filter-Oil				
49065A	49065-7001	1	Filter-Oil				
59051	59051-7004	1	Gear-Spur				
59231	59231-7001	1	Filler				
92043	92043-7003	1	Pin				
92140	92140-7003	1	Ball				
92145	92145-7002	1	Spring				
130	130B0612	3	Bolt-Flanged				
670	670D2016	1	O-Ring				

Ref. No.	Part No.	Qty.	Description
14037	14037-7003	1	Screen
14037A	14037-7003-9H	1	Screen
23062	23062-7002	1	Bracket-Comp
49089	49089-7001	1	Shroud-Engine
49089A	49089-7002	1	Shroud-Engine
49089B	49089-7003	1	Shroud-Engine
55020	55020-7001	1	Guard
59041	59041-7001	1	Fan
59066	59066-7002	1	Housing-Fan
92004	92004-2148	2	Stud
92015	92015-1170	4	Nut
92026	92026-7001	3	Spacer, 6.2x7.9x5
92026A	92026-7003	1	Spacer, 6.5x7.9x10.5
92026B	92026-7004	1	Spacer
92151	92151-7009	3	Bolt, 6x10
130	130B0612	5	Bolt-Flanged
130A	130B0616	2	Bolt-Flanged
130B	130B0620	1	Bolt-Flanged
130C	130B0625	2	Bolt-Flanged
130D	130B0816	1	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description

Electric-Equipment Assembly Kawasaki FH500V-AS10

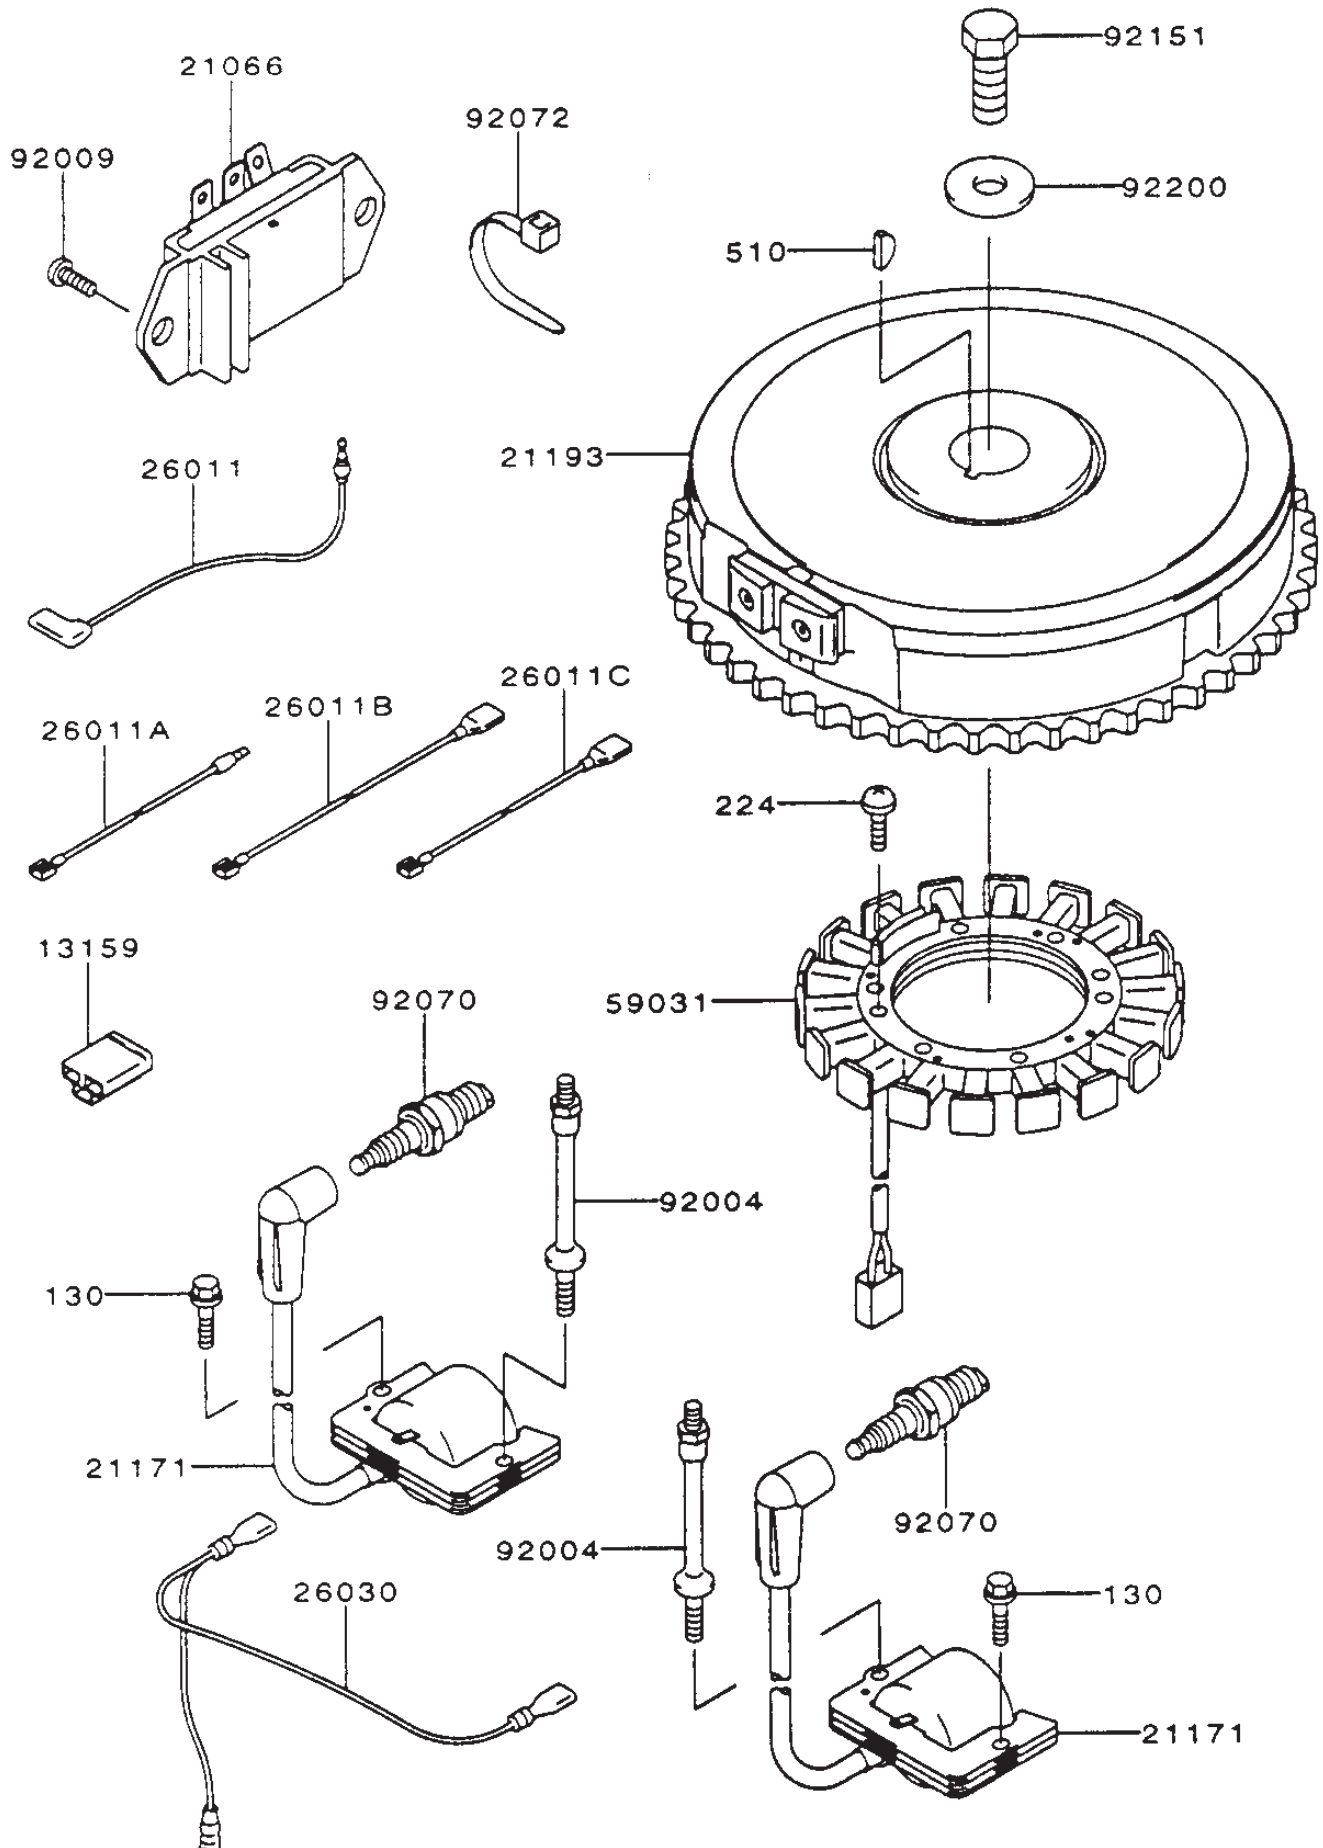


Electric-Equipment Assembly Kawasaki FH500V-AS10

Ref. No.	Part No.	Qty.	Description
13159	13159-7001	1	Connector
21066	21066-7001	1	Regulator-Voltage
21171	21171-7001	2	Coil-Assy-Ignition
21193	21193-7001	1	Flywheel-Assy
26011	26011-7001	1	Wire-Lead
26011A	26011-7002	1	Wire-Lead
26011B	26011-7003	1	Wire-Lead
26011C	26011-7004	1	Wire-Lead
26030	26030-7001	1	Harness
59031	59031-7001	1	Coil-Charging
92004	92004-2147	2	Stud
92009	92009-2308	2	Screw
92070	92070-7001	2	Plug-Spark (RCJ8Y)
92072	92072-7001	2	Band
92151	92151-2097	1	Bolt, 12x30
92220	92220-7002	1	Washer
130	130B0620	1	Bolt-Flanged
224	224B0520	4	Screw-Pan-WP-Cros
510	510A5100	1	Key-Woodruff

Ref. No.	Part No.	Qty.	Description

Control-Equipment Assembly Kawasaki FH500V-AS10

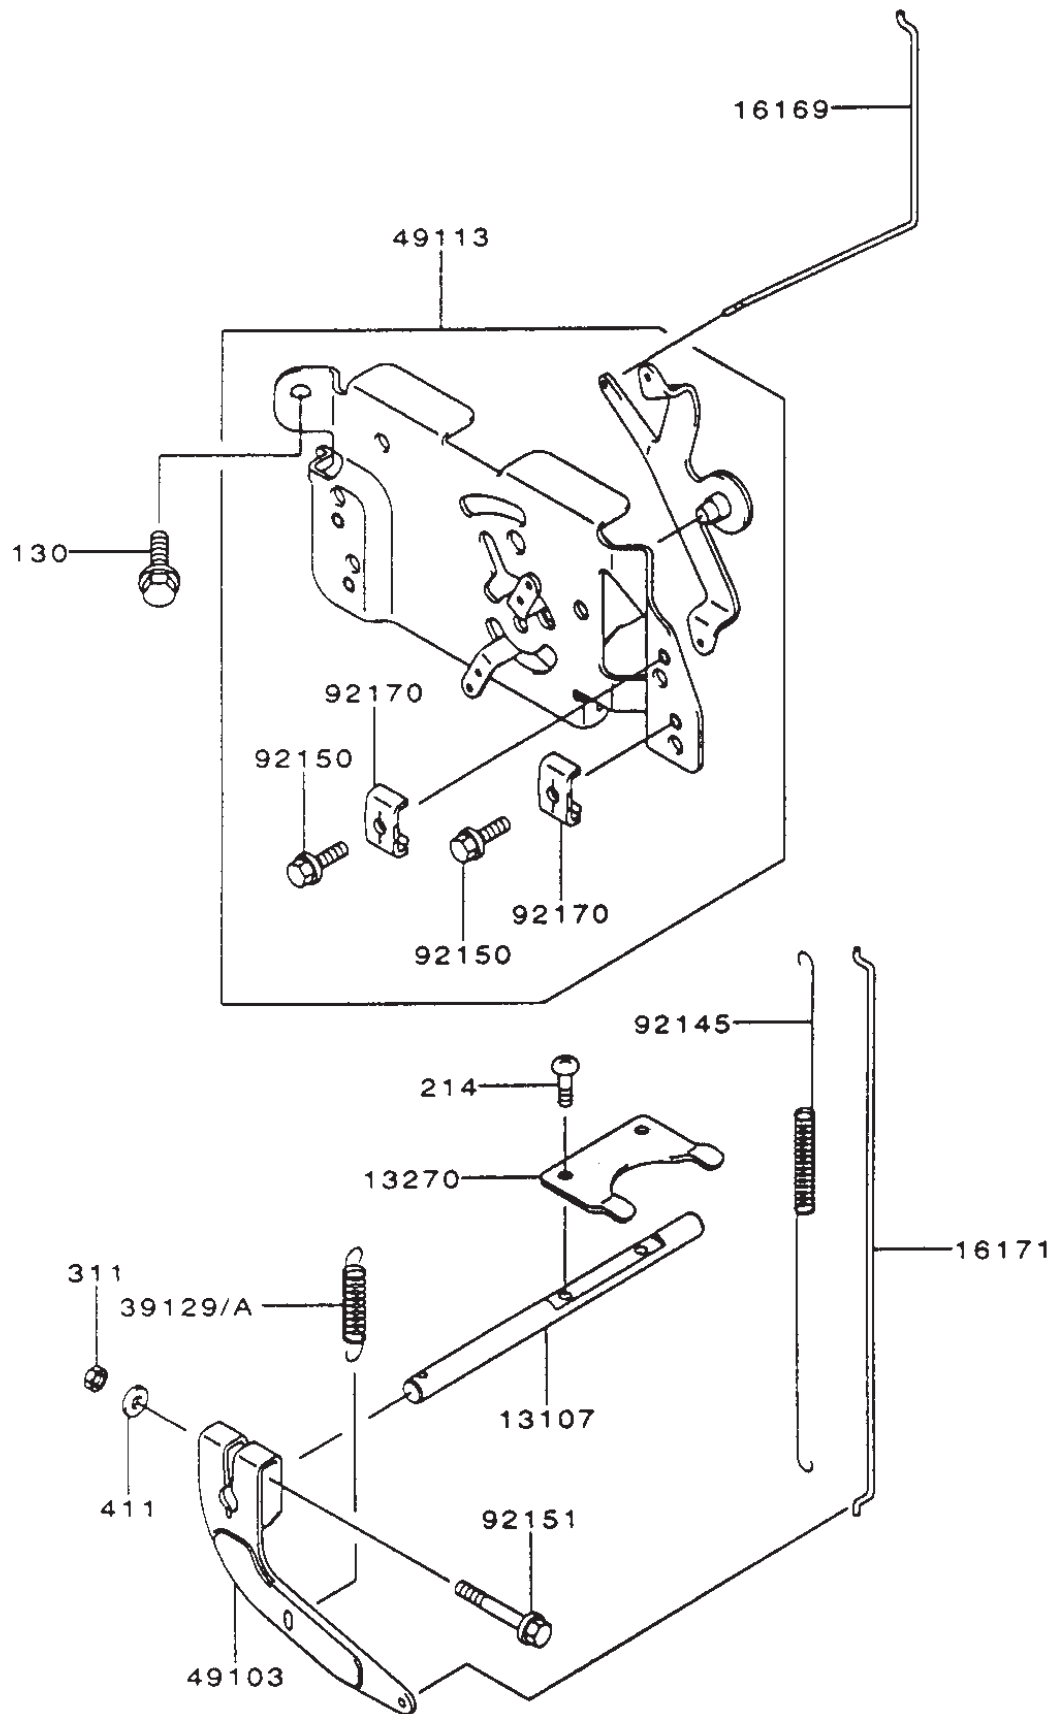


Ref. No.	Part No.	Qty.	Description
13107	13107-7002	1	Shaft
13270	13270-7006	1	Plate
16169	16169-7001	1	Link-Choke
16171	16171-7001	1	Link
39129	39129-7002	1	Spring-Governor
39129A	39129-7003	1	Spring-Governor
49103	49103-7001	1	Arm-Governor
49113	49113-7002	1	Panel-Comp-Control
92145	92145-7003	1	Spring
92150	92150-2182	2	Bolt, 5x18
92151	92151-7006	1	Bolt, 6x30
92170	92170-7001	2	Clamp
130	130B0612	2	Bolt-Flanged
214	214B0408	2	Screw-Pan
311	311B0600	1	Nut-Hex
411	411B0600	1	Washer-Plain

Ref. No.	Part No.	Qty.	Description

Carburetor Assembly Kawasaki FH500V-AS10


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11003	11003-2105	1	Seat-Valve				
11060	11060-2406	1	Gasket				
11060A	11060-7003	2	Gasket, Insulator				
11060B	11060-7004	1	Gasket, Air Filter				
11060C	11060-7005	2	Gasket				
11065	11065-2061	1	Cap				
15003	15003-2632	1	Carburetor-Assy				
16014	16014-2080	1	Screw-Pilot Air				
16020	16020-2141	1	Chamber-Float				
16021	16021-2060	1	Screw-Throttlestop				
16025	16025-2193	1	Valve-Throttle, #130				
16030	16030-2067	1	Valve-Float				
16031	16031-2066	1	Float				
16035	16035-2060	1	Jet-Air, #1.7				
16035A	16035-2061	1	Jet-Air, #1.2				
16041	16041-2252	1	Shaft-Carburetor, Choke				
16041A	16041-2253	1	Shaft-Carburetor Throttle				
16073	16073-7001	1	Insulator				
16126	16126-2218	1	Valve				
21188	21188-2011	1	Solenoid				
26011	26011-2281	1	Wire-Lead				
39076	39076-2053	1	Limiter				
43058	43058-3716	1	Ring				
49121	49121-2222	1	Nozzle-Main				
59076	59076-7001	1	Manifold-Intake				
92009	92009-2015	1	Screw				
92009A	92009-2024	2	Screw				
92009B	92009-2081	1	Screw				
92009C	92009-2400	1	Screw				
92022	92022-2231	1	Washer				
92022A	92022-2239	1	Washer				
92027	92027-2025	1	Collar				
92033	92033-2067	1	Ring-Snap				
92043	92043-2226	1	Pin				
92063	92063-2358	1	Jet-Main				
92064	92064-2125	1	Jet-Pilot				
92081	92081-2009	2	Spring				
92093	92093-2002	1	Seal				
92145	92145-2061	1	Spring				
92170	92170-2023	1	Clamp				
92191	92191-2067	1	Tube				
130	130B0635	4	Bolt-Flanged				
172	172G0685	2	Bolt-Stud				
214	214B0510	1	Screw-Pan				
482	482L400	1	Circlip-Type-E				

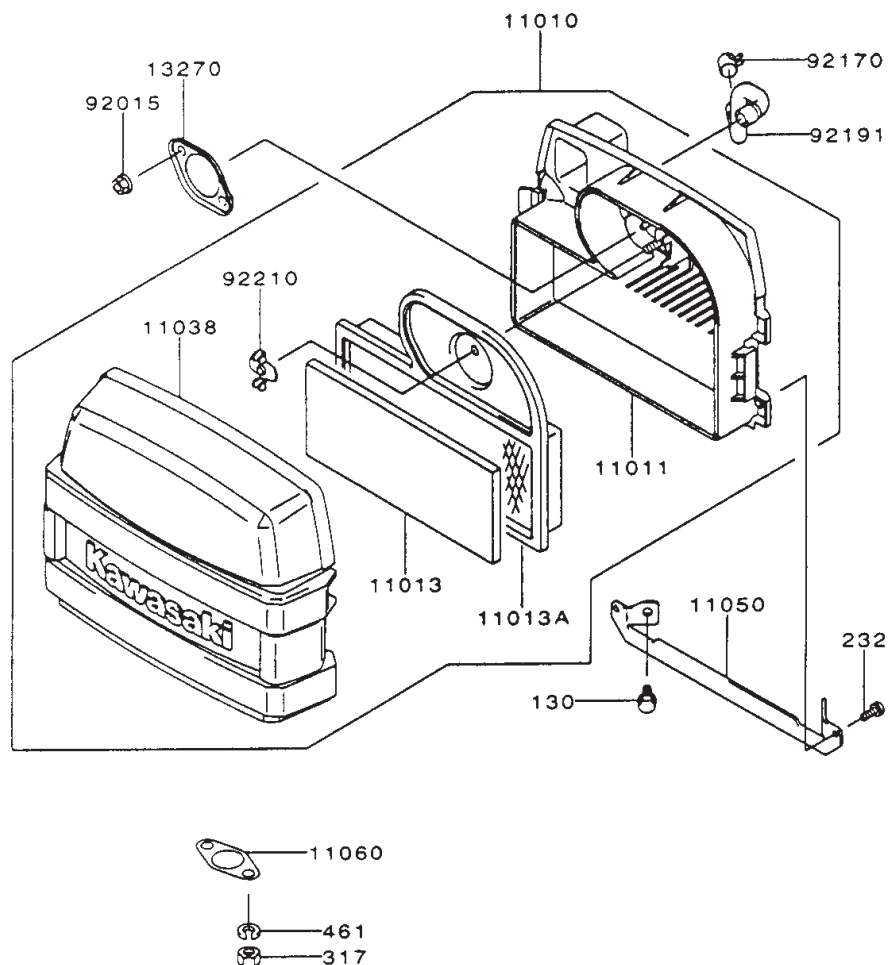

Air-Filter/Muffler Assembly Kawasaki FH500V-AS10



Ref. No.	Part No.	Qty.	Description
11010	11010-7001	1	Filter-Assy-Air
11011	11011-7001	1	Case-Air Filter
11013	11013-7001	1	Element-Air Filter
11013A	11013-7002	1	Element-Air Filter
11038	11038-7001	1	Case-Assy-Air Filter
11050	11050-7006	1	Bracket
11060	11060-7006	2	Gasket, Muffler
13270	13270-7001	1	Plate
92015	92015-1193	2	Nut
92170	92170-7003	1	Clamp
92191	92191-7001	1	Tube
92210	92210-7004	1	Nut
130	130B0612	2	Bolt-Flanged
232	232B0514	2	Screw-Pan-WS
317	317R0800	4	Nut-Hex-Small
461	461F0800	4	Washer-Spring

Ref. No.	Part No.	Qty.	Description

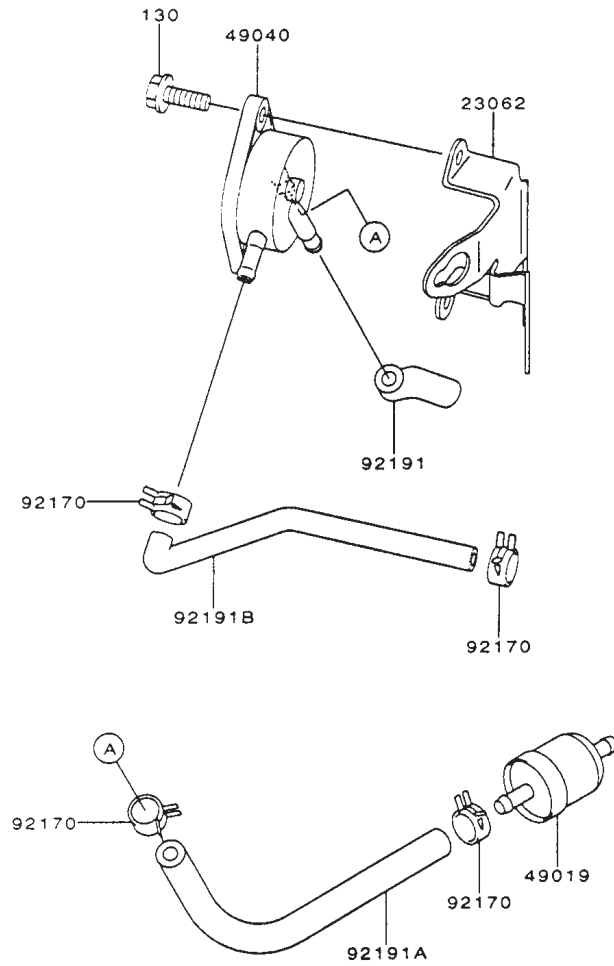

Fuel-Tank/Fuel-Valve Assembly Kawasaki FH500V-AS10

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
23062	23062-7001-9H	1	Bracket-Comp				
49019	49019-7001	1	Filter-Fuel				
49040	49040-2075	1	Pump-Fuel				
92170	92170-2088	4	Clamp				
92191	92191-7002	1	Tube				
92191A	92191-7003	1	Tube,6.35x12.7x160				
92191B	92191-7004	1	Tube				
130	130B0620	2	Bolt-Flanged				

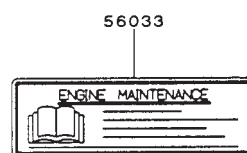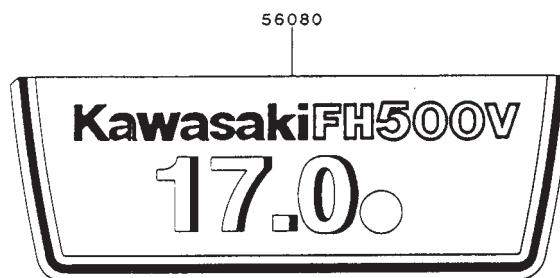

Ref. No.	Part No.	Qty.	Description
21163	21163-7001	1	Starter-Electric
130	130B0816	2	Bolt-Flanged
56033	56033-7001	1	Decal-Manual
56080	56080-7001	1	Decal-Brand

Ref. No.	Part No.	Qty.	Description

Maintenance Record

[illegible]

