Form No. 3323–212

Proline Mid–Size Traction Unit

13 HP Kohler Gear Drive

Model No. 30159—991180 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 1999
All Rights Reserved

Contents

Description	Page
Fuel Tank and Idler Bracket Assembly	3
Transmission and Idler Pulley Assembly	4
Brake, Wheel Pulley and Wheel Assembly	5
Wheel And Tire Assembly	6
Handle and Control Panel Assembly	7
Engine Assembly	8
Clutch Assembly No. 54–3200	9
Crankcase	10
Oil Pan / Lubrication	11
Cylinder Head, Valves And Breather	12
Ignition / Electrical	13
Blower Housing And Baffles	14
Starter System	15
Fuel System	16
Engine Controls	17
Air Cleaner	18
Exhaust	19
Electric Schematic	20


Accessories

Description	Model / Part No.
32” Deck	30133
37” Recycler Deck	30137
44” Cutting Unit	30149
36” Cutting Unit	30135
44” Recycling Kit	59220
Bagging Kit for 32” Deck	30124
Bagging Kit for 36” Deck	30125
Bagging Kit for 37” Deck (Cloth Bag)	30129
Bagging Kit for 37” Deck (Steel Hopper)	30130
Bagging Kit for 44”/52” Deck	30128
Front Weight Kit–36”/37” Decks	80–3350
Steerable Sulky	30123

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

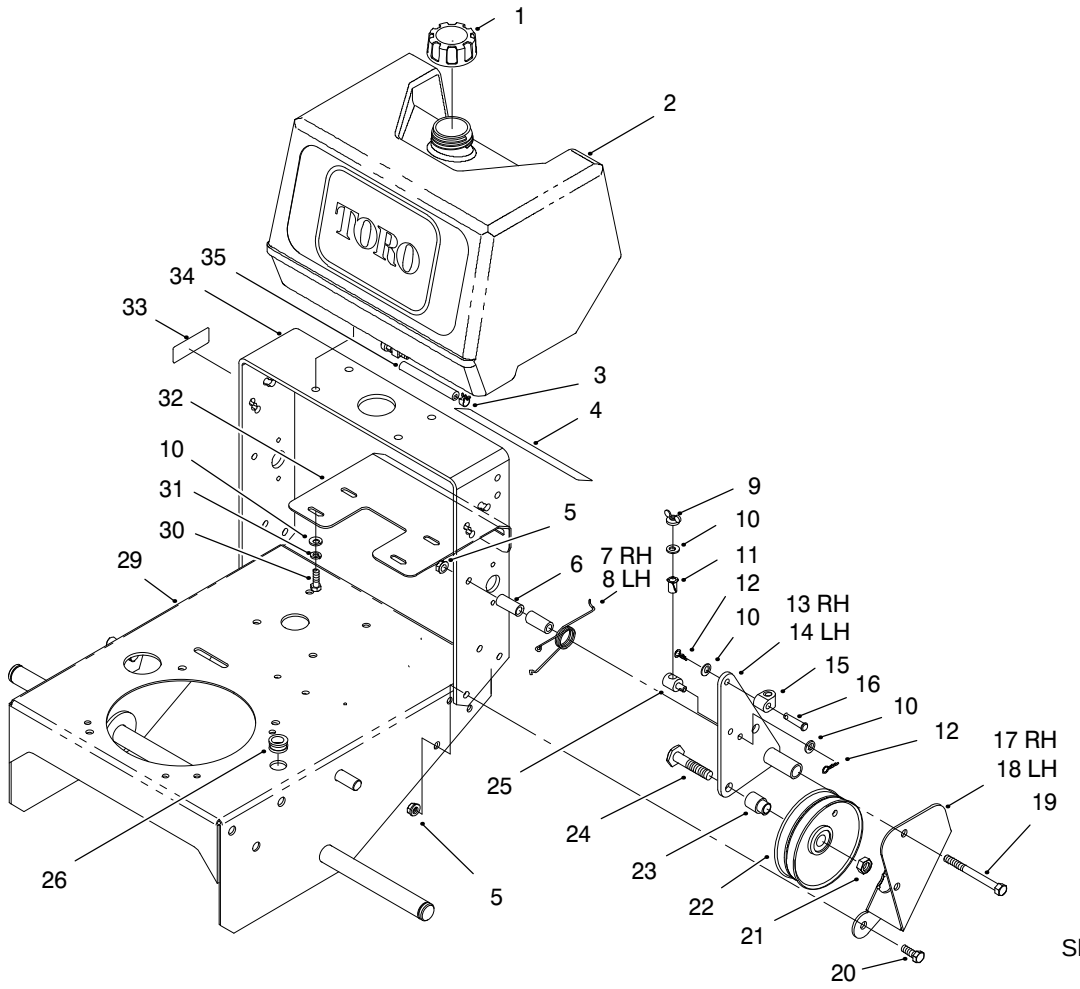


Sheet No.: 2

Fuel Tank and Idler Bracket Assembly

Ref. No.	Part No.	Qty.	Description
1	55–3570	1	Cap–Fuel
2	95–2802	1	Tank–Fuel
3	2412–98	2	Clamp–Hose
4	82–7750	1	Decal–Ground Speed
5	3296–39	8	Nut–Lock
6	74–0040	4	Spacer–Pivot
7	51–4370	1	Spring–RH
8	51–4380	1	Spring–LH
9	32103–25	2	Nut–Wing
10	3256–23	10	Washer–Flat
11	52–2890	2	Bushing–Flanged
12	3290–307	4	Pin–Cotter
13	74–0230–01	1	Idler Bracket RH
14	74–0220–01	1	Idler Bracket LH
15	74–0521	2	Rod–Fitting
16	283–6	2	Pin–Clevis
17	67–6370–01	1	Bracket–RH
18	67–6380–01	1	Bracket–LH
19	323–16	2	Screw–HH
20	323–6	6	Screw–HH
21	3296–23	2	Nut–Lock
22	95–2800	2	Pulley–Idler
23	95–2801	2	Spacer–Pulley
24	51–4450	2	Screw–Leveler
25	68–9690	2	Fitting Rod
26	237–124	1	Grommet

Ref. No.	Part No.	Qty.	Description
29	93–1161–01	1	Frame
30	322–4	4	Screw–HH
31	3253–4	4	Washer–Lock
32	66–7400–01	1	Plate–Control
33	95–2814	1	Decal–Fuel Shut–Off
34	74–0360–01	1	Frame–Rear
35	47–2964	1	Hose–Gas

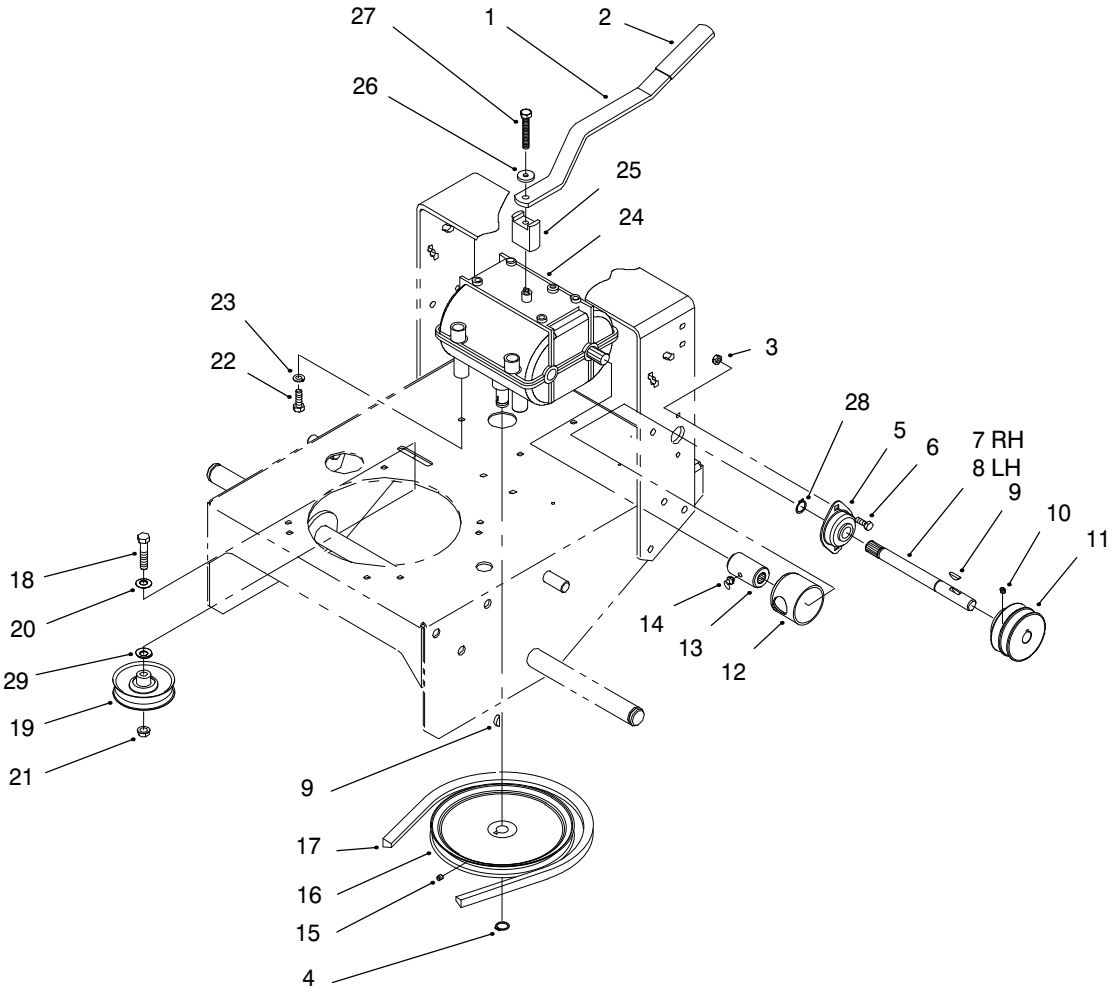


Sheet No.: 3

Transmission and Idler Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	74–0320–01	1	Lever–Shift
2	47–1970	1	Grip–Engagement
3	3296–42	4	Nut–Lock
4	32120–64	1	Ring–Retaining
5	51–4270	2	Bearing–Shaft Ext
6	321–4	4	Screw–HH
7	98–0788	1	Shaft–RH
8	98–0787	1	Shaft–LH
9	3257–5	3	Key–Woodruff
10	3245–3	2	Screw–HSH
11	74–0480	2	Pulley–Drive ASM
12	51–4220	2	Guard–Coupler
13	98–0789	2	Coupler
14	302–5	2	Fitting–Grease
15	3245–1	1	Screw–Set
16	51–4190	1	Pulley–Drive
17	26–9671	1	”v” Belt
18	323–9	1	Screw–HH
19	51–4810	1	Pulley–Idler
20	3256–24	1	Washer–Flat
21	32128–21	1	Nut–HF
22	322–2	4	Screw–HH
23	3253–4	4	Washer–Lock
† 24	98–0791	1	Transmission–Peerless (model #700–082)
25	72–2190	1	Mount–Shift Lever

Ref. No.	Part No.	Qty.	Description
26	7–5461	1	Spacer–Transmission
27	329–10	1	Screw
28	32151–62	2	Ring–Retaining
29	3256–24	1	Washer–Flat

† Obtain locally from Peerless

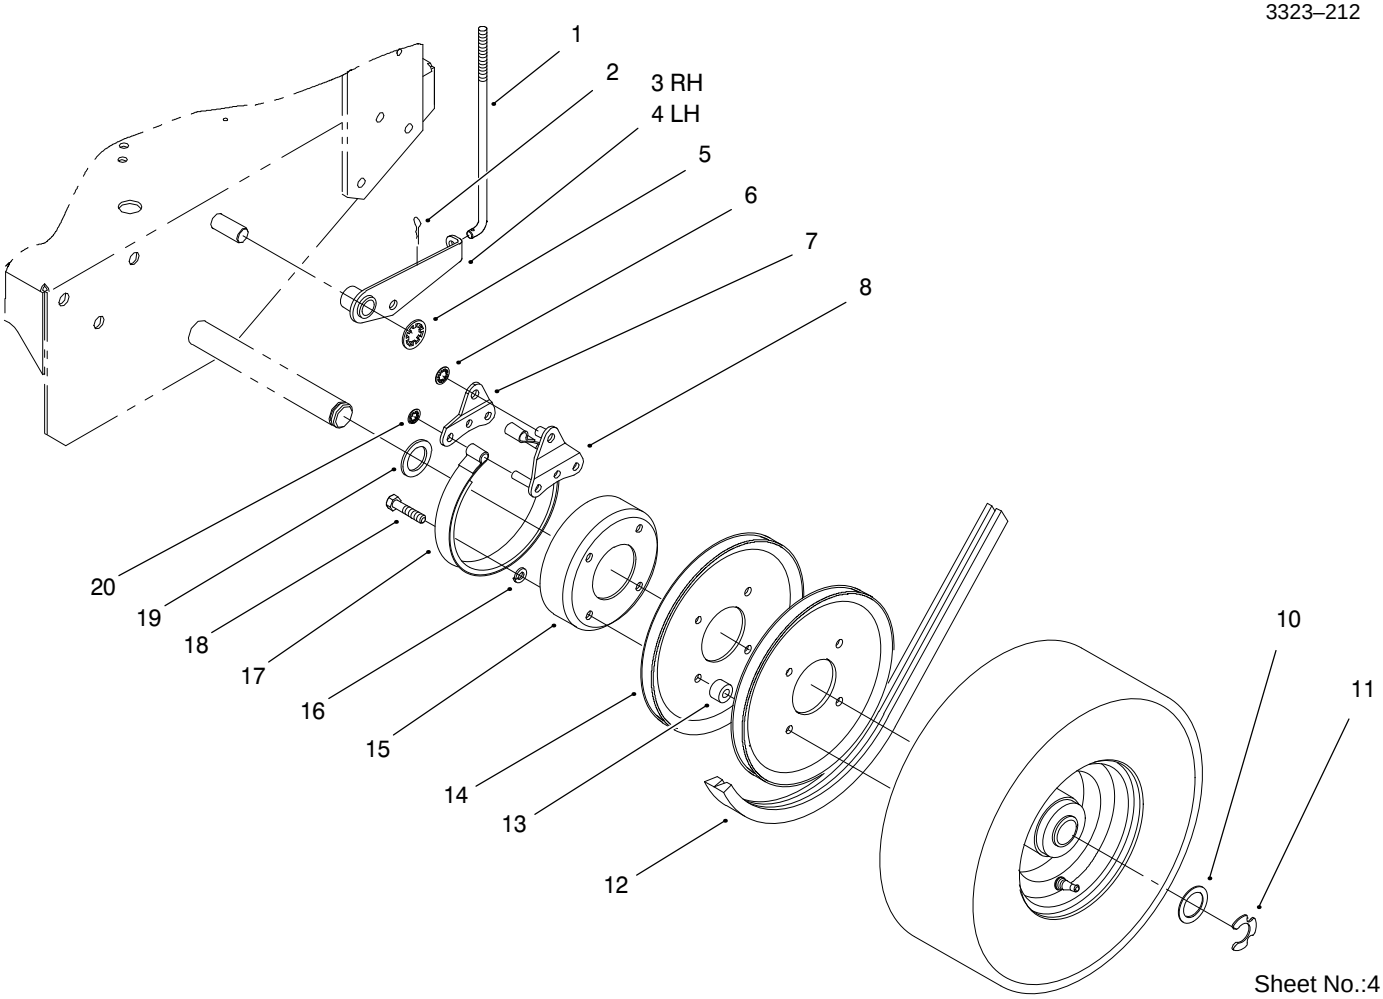


Sheet No.:4

Brake, Wheel Pulley and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	51–4580	2	Rod–Brake
2	3290–307	2	Pin–Cotter
3	67–6400–01	1	Arm–Brake RH
4	67–6420–01	1	Arm–Brake LH
5	32151–40	2	Ring–Retaining
6	32151–56	2	Ring–Retaining
7	51–4660–01	2	Plate–Brake Link
8	51–4650–01	2	Link–Brake
10	10–8110	A/R	Washer–Thrust
11	32151–91	2	Ring–Retaining
12	51–4291	2	”v” Belt
13	51–4170	8	Spacer–Pulley
14	51–4160–03	4	Pulley–Wheel
15	51–4180–03	2	Drum–Brake
16	3253–4	8	Washer–Lock
17	51–4700	2	Band–Brake
18	322–7	8	Screw–HH
19	51–4230	2	Washer–Wheel
20	32151–72	4	Ring–Retaining

Ref. No.	Part No.	Qty.	Description

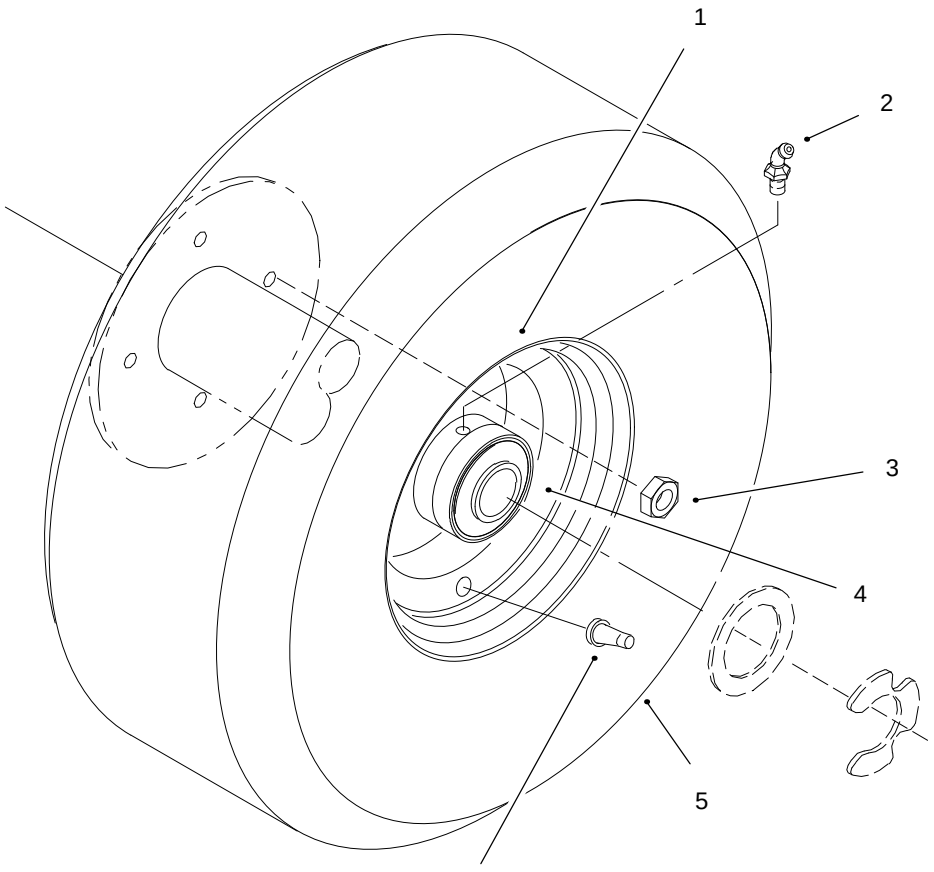


Sheet No.: 500

Wheel And Tire Assembly

Ref. No.	Part No.	Qty.	Description
1	242–80	2	Rim
2	302–11	2	Fitting–Grease
3	3296–29	8	Nut–Lock
4	92–1746	4	Bearing
5	231–117	2	Tire–15x6
6	232–27	2	Valve Stem

Ref. No.	Part No.	Qty.	Description

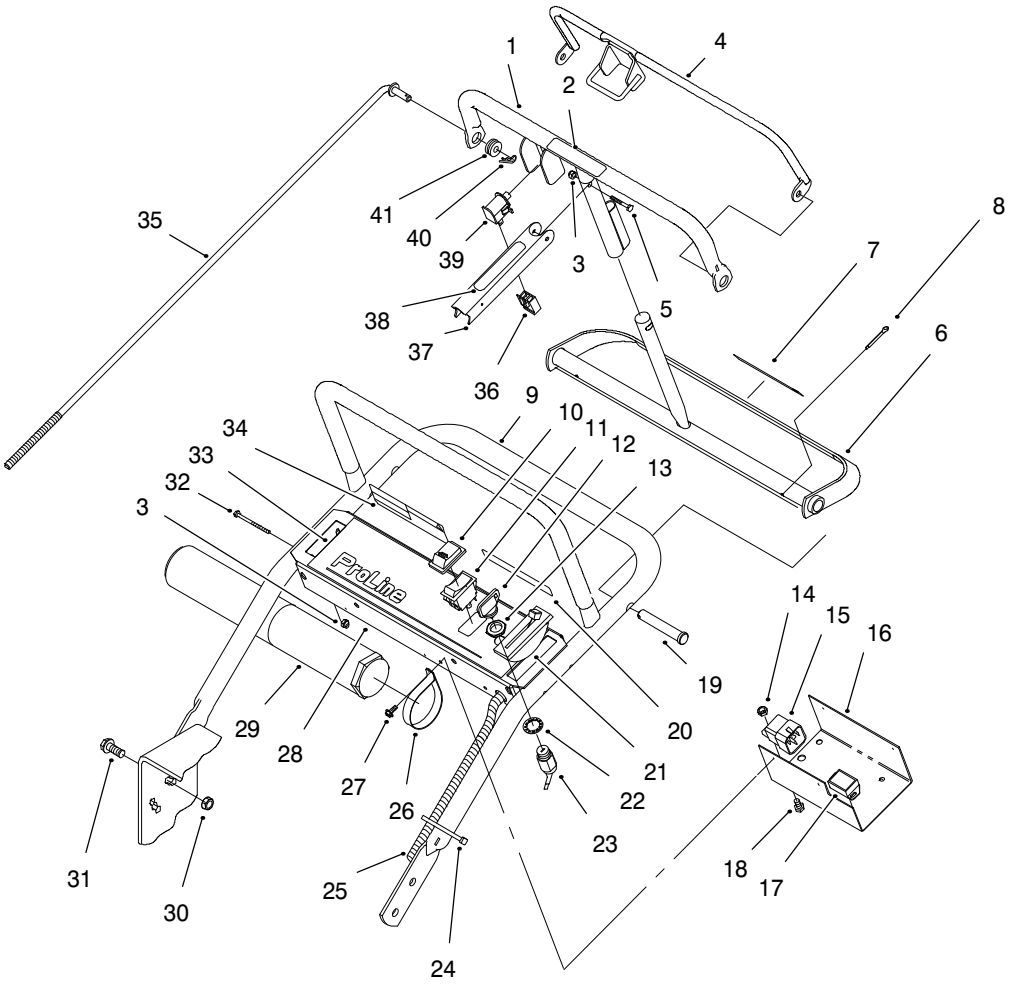


Sheet No.: 5

Handle and Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	82–7690–03	1	Bar
2	82–2290	1	Decal–Control Bar
3	3296–2	5	Nut–Lock
4	82–7680–03	1	Bail
5	32105–1	1	Screw–HH
6	99–8501–03	1	Control Pivot
7	82–2280	1	Decal–Reverse
8	3272–11	2	Pin–Cotter
9	67–6440–01	1	Handle–Upper
10	82–3820	1	Boot–Switch
11	82–2300	1	Switch
12	63–8360	2	Key–Ignition
13	218–461	1	Nut–HH (F/W Sw)
14	3296–42	1	Nut–Lock
15	63–7590	1	Relay
16	93–1187–03	1	Panel–Bottom
17	94–9666	1	Module
18	321–2	1	Screw–HH
19	283–55	2	Pin–Clevis
20	65–3090	1	Decal–Manual
21	74–0630	1	Control–Throttle
22	3254–5	1	Washer–Lock
23	29–5560	1	Switch–On/Off
24	3290–378	2	Tie–Cable
25	95–2803	1	Wire Harness
26	2412–120	2	Clamp–R


Ref. No.	Part No.	Qty.	Description
27	32104–76	4	Screw–Self TAP
28	82–2180–03	1	Panel–Control
29	74–0720	1	Tube–Manual
30	32128–21	4	Nut–HF
31	3234–11	4	Screw–HHF
32	32105–14	4	Screw–HH
33	82–7730	1	Decal–Panel Proline
34	71–1280	1	Decal–Warning
35	82–7632	2	Rod–Control
36	218–595	1	Connector–Body
37	51–4850–03	1	Lever–Parking Brake
38	52–2010	1	Decal–Parking Lever
39	82–2190	1	Switch–Bail
40	3290–307	2	Pin–Cotter
41	237–141	2	Grommet

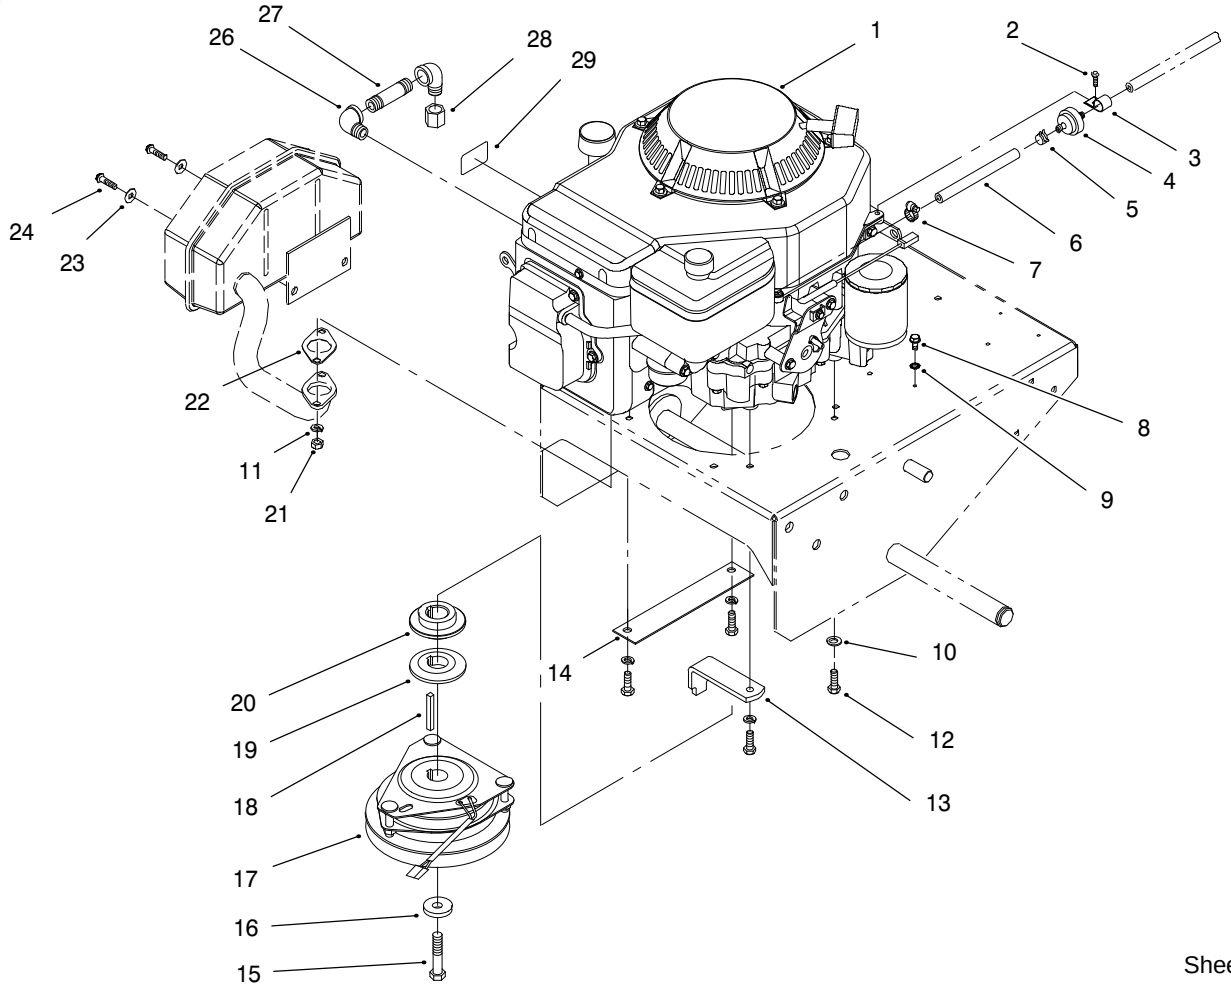

Sheet No.: 6

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1		1	Engine–13 Hp Kohler (CV13T SP 21524)
2	32144–19	1	Screw–HH
3	2412–87	1	Clamp–Cable
4	56–6360	1	Filter–Fuel
5	2412–98	1	Clamp–Hose
6	47–2982	1	Hose–Fuel
7	2412–108	1	Clamp–Hose
8	12–3270	1	Screw–HH
9	3255–7	1	Washer–Lk
10	3256–23	1	Washer–Flat
11	3253–4	2	Washer–Lock/sp
12	33114–025	4	Screw–HH
13	51–4540–03	1	Retainer–Clutch
14	74–0930–01	1	Guard–Pulley
15	3212–9	1	Screw–HH
16	112843	1	Washer–PTO
17	54–3200	1	Clutch/Brake
18	608006	1	Key
19	74–0050	1	Sheave–Lower
20	74–0060	1	Sheave–Upper
21	93–7034	2	Nut–Muffler
22	93–7032	1	Gasket–Exhaust
23	3256–78	2	Washer–Flat
24	93–7033	2	Screw–Muffler
26	74–0950	2	Elbow
27	289–20	1	Nipple–Pipe
28	288–4	1	Cap–Pipe
29	63–8440	1	Decal–Hot Surface

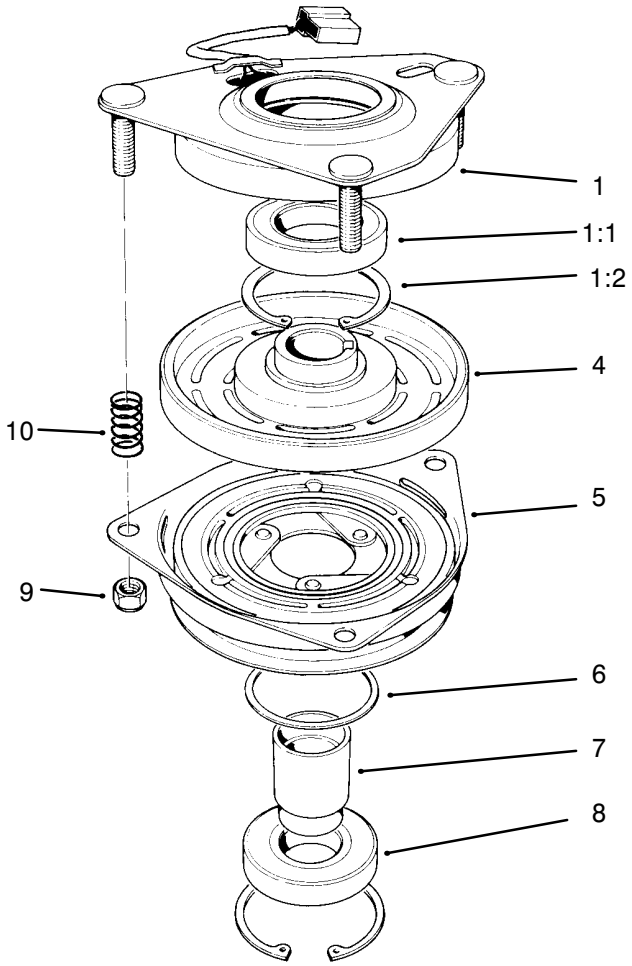


Sheet No.: 301

Clutch Assembly No. 54–3200

Ref. No.	Part No.	Qty.	Description
1	54–0230	1	Field ASM
1:1	251–292	1	Bearing
1:2	44–8310	2	Ring–Retaining
4	44–8360	1	Field Coil & Bearing
5	44–8370	1	Armature & Pulley ASM
6	44–8330	1	Spacer–Pulley Bearing
7	44–8340	1	Collar–Bearing
8	251–291	1	Bearing–Pulley
9	3296–6	3	Nut–Lock
10	44–8320	3	Spring

Ref. No.	Part No.	Qty.	Description

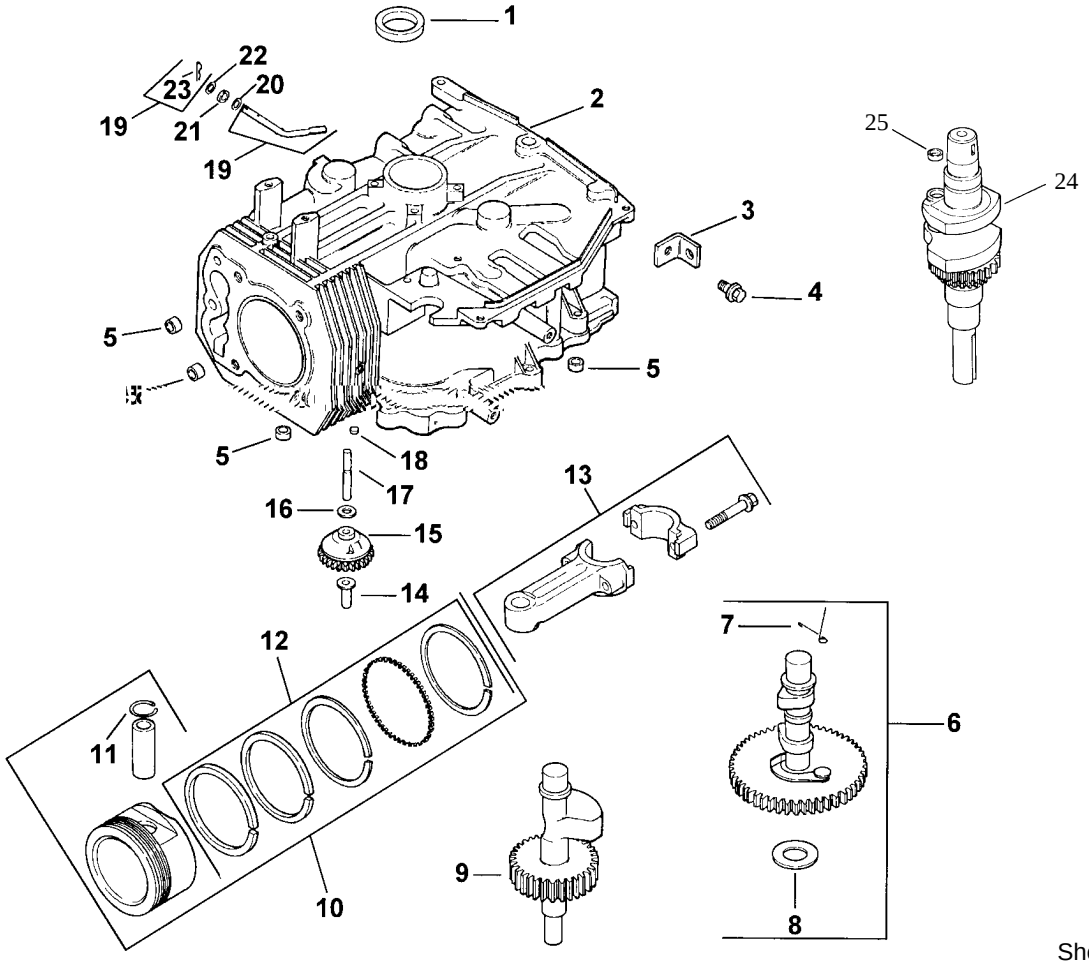


Sheet No.: 2 01

Crankcase

Ref. No.	Part No.	Qty.	Description
1	12 032 03	1	Seal–Crankshaft
2	12 522 33	1	Shortblock
3	12 445 02	1	Strap–Lifting
4	M–0839025	1	Screw M8x1.25x22
5	12 380 17	4	Dowel–Locating
6	12 755 49	1	Kit–Camshaft INC 7–8
7	12 089 31	1	Spring–Actuating
8	12 422 07	A/R	Shim–Camshaft A/R
8	12 422 08	1	Shim–Camshaft A/R
8	12 422 09	A/R	Shim–Camshaft A/R
8	12 422 10	A/R	Shim–Camshaft A/R
8	12 422 11	A/R	Shim–Camshaft A/R
8	12 422 12	A/R	Shim–Camshaft A/R
8	12 422 13	A/R	Shim–Camshaft A/R
9	12 144 27	1	Shaft–Balance
10	12 847 01	1	Set Piston w/Ring STD
10	12 847 02	1	Set–Piston w/Ring .25
10	12 847 03	1	Set–Piston w/Ring .50
11	12 018 02	2	Retainer–Piston Pin
12	12 108 01	1	Ring Set STD
12	12 108 02	1	Ring Set .25
12	12 108 03	1	Ring Set .50
13	12 067 05	1	Rod Connecting STD
13	12 067 06	1	Rod Connecting .25

Ref. No.	Part No.	Qty.	Description
14	12 380 01	1	Pin–Governor Regulating
15	12 043 05	1	Gear–Governor ASM
16	M–0631005	1	Washer–Governor
17	12 144 02	1	Shaft–Governor Gear
18	52 139 09	1	Plug–Cup
19	12 755 64	1	Kit – Shaft–Governor Cross (Incl. Ref.#23)
20	X–25–102	1	Washer–Flat
21	12 032 01	1	Seal–Governor Shaft
22	M–0631015	1	Washer–Governor Shaft
23	12 154 05	1	Clip – Hitch Pin
24	12 014 30	1	Crankshaft ASM
25	12 139 01	1	Plug–Cup
*	12 030 02	1	Bearing – Crankshaft 0.25
*	12 030 03	1	Bearing – Crankshaft 0.50
*	12 755 83	1	Set – Gasket

* Not Illustrated
Kohler Engine Model CV13T SP 21524
Obtain parts from kohler

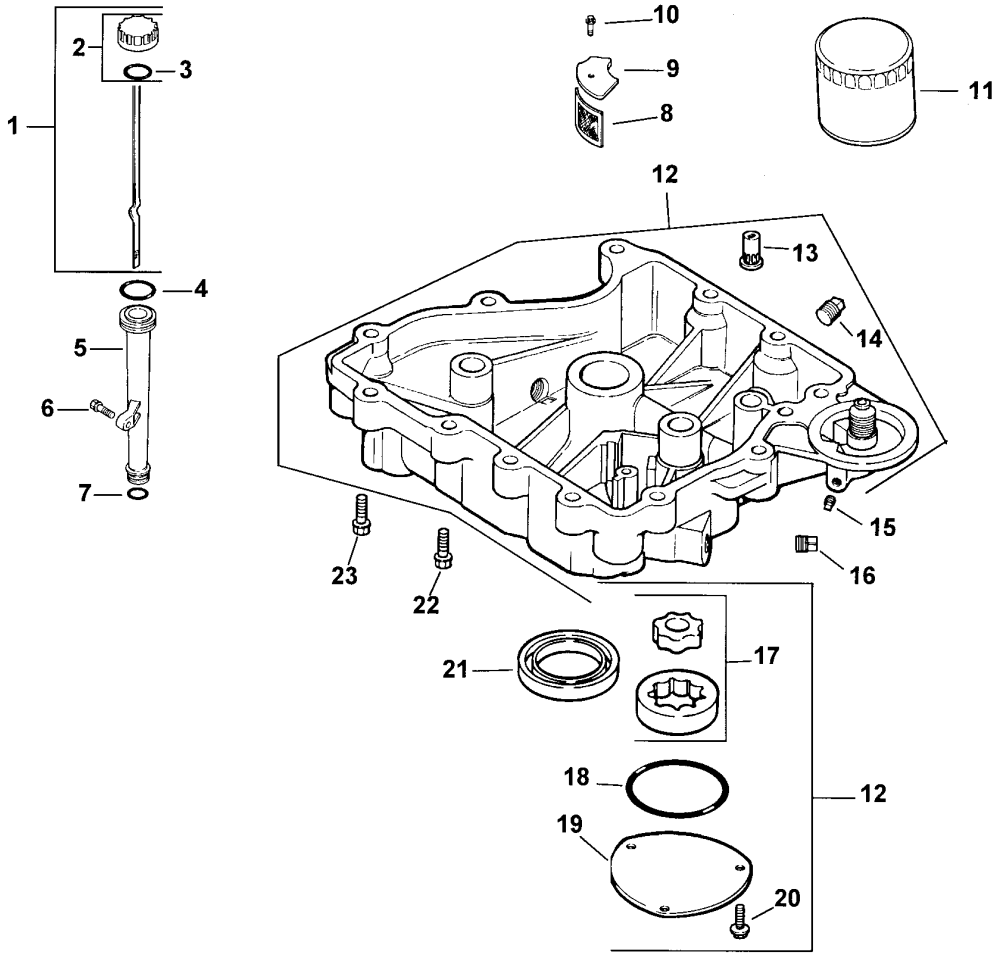


Sheet No.: 2 02

Oil Pan / Lubrication

Ref. No.	Part No.	Qty.	Description
1	12 038 01	1	Dipstick INC 2–3
2	25 755 13	1	Kit–Oil Cap INC 3
3	12 153 03	1	O Ring–Fill Cap
4	12 153 02	1	O Ring–Upper Fill Tube
5	12 123 04	1	Tube–Oil Fill
6	M–0545020	1	Screw M5x0.8x20
7	12 153 01	2	O Ring–Lower Fill Tube
8	25 162 07	1	Screen–Oil
9	12 096 03	1	Cover–Oil Pickup Screen
10	M–0545016	1	Screw M5x0.8x16
11	52 050 02	1	Filter–Oil
12	12 755 45	1	Pan – Oil (Incl. Ref. #13, 14, 17–20)
13	25 462 09	1	Valve – Oil Pressure
14	X–75–2	2	Plug–1/4nptf
15	X–75–1	2	Plug–1/8nptf
16	X–75–10	2	Plug–SH 3/8 NPTF
17	12 393 01	1	Pump–Oil
18	12 153 06	1	O Ring–Oil Pump Cover
19	12 096 34	1	Cover–Oil Pump
20	M–0545016	3	Screw M5x0.8x16
21	12 032 03	1	Seal–Crankshaft
22	24 086 16	11	Screw–M8X1.25X45
23	24 068 17	1	Screw–M5X1.25X45

*Not illustrated
Kohler Engine Model CV13T SP 21524
Obtain parts from kohler

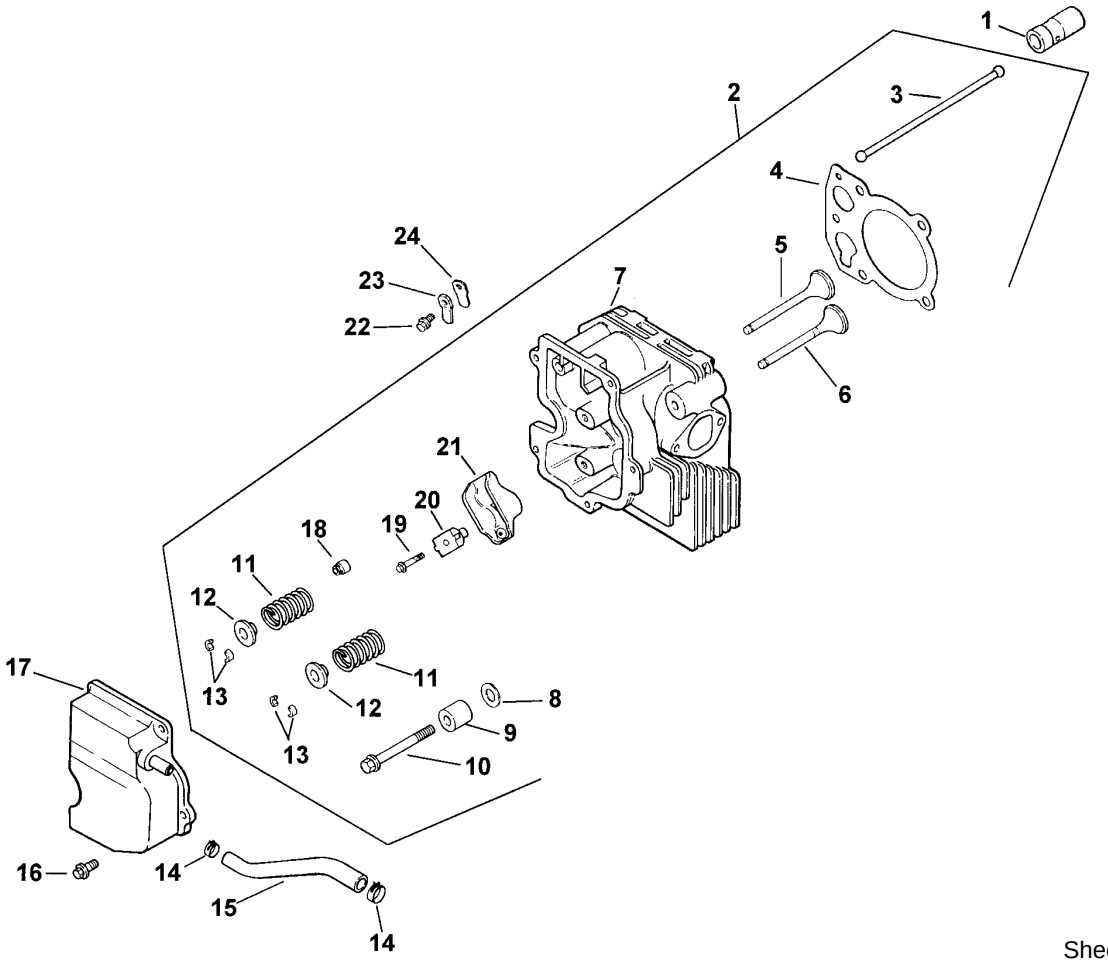

Sheet No.: 2 03

Cylinder Head, Valves And Breather


Ref. No.	Part No.	Qty.	Description
1	12 351 02	2	Lifter–Valve
2	12 755 81	1	Kit–Cylinder Head
3	12 411 01	2	Rod–Push
4	12 041 08	1	Gasket–Cylinder Head
5	12 017 01	1	Valve–Intake STD
5	12 017 02	1	Valve–Intake .25
6	12 016 01	1	Valve–Exhaust STD
6	12 016 02	1	Valve–Exhaust .25
7	12 318 19	1	Head – Cylinder
8	12 468 05	1	Washer–Flat
9	12 112 13	1	Spacer–Head Bolt Exhaust
10	12 086 15	5	Screw M10x1.5x80
11	12 089 01	1	Spring–Valve
12	12 173 01	2	Cap–Valve Spring
13	12 755 03	2	Kit–Retainer
14	X–426–9	2	Clamp–Hose
15	12 326 03	1	Hose–Breather
16	M–0645020	3	Screw–HH M6x1.0x20
17	12 096 07	1	Cover–Valve w/Nipple
18	24 023 05	1	Seal–Valve Spring
19	M–0640034	2	Screw M6x1.0x34
20	12 599 03	2	Pivot – Rocker Arm
21	25 186 01	2	Arm–Rocker
22	M–0545010	1	Screw M5x0.8x10
23	12 018 01	1	Retainer–Breather

Ref. No.	Part No.	Qty.	Description
			Reed
24	12 402 02	1	Reed–Breather

*Not illustrated

Kohler Engine Model CV13T SP 21524

Obtain parts from kohler

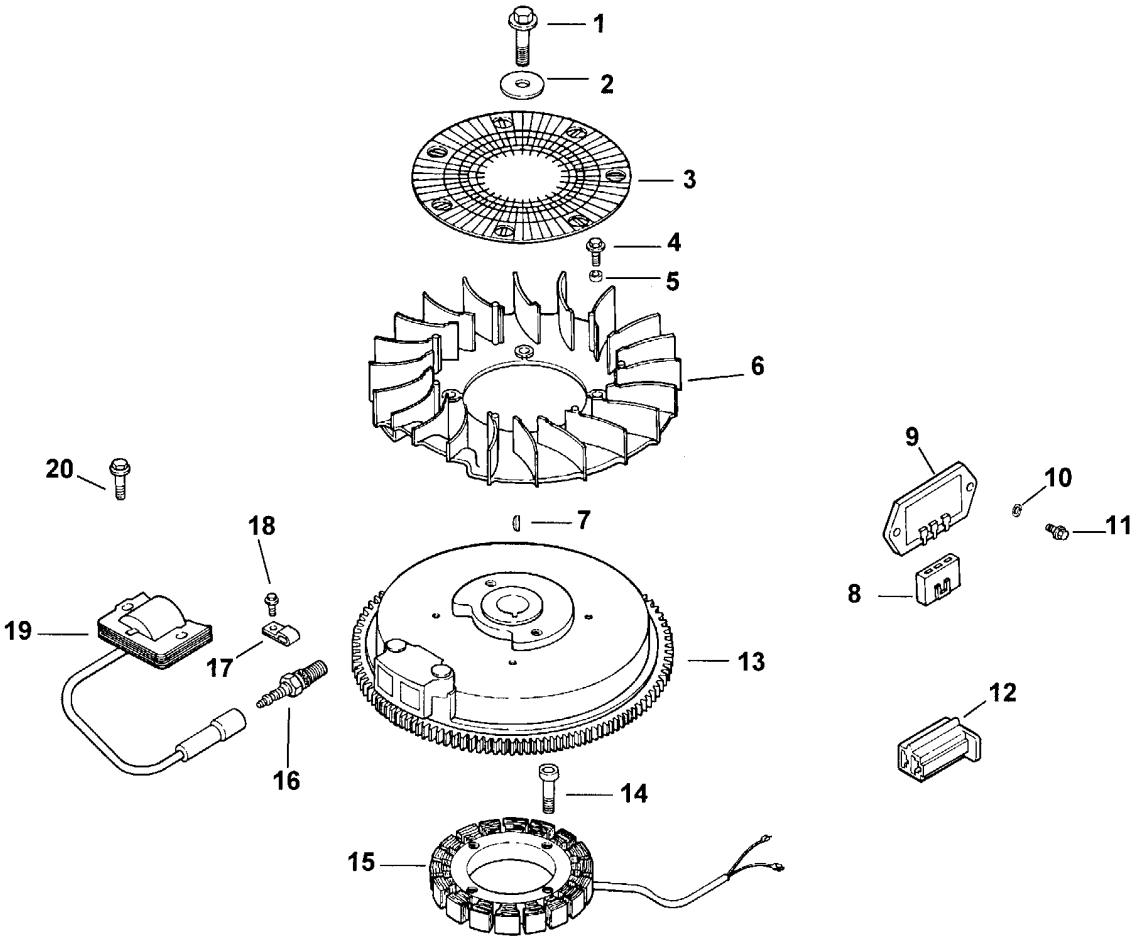

Sheet No.: 2 04


Ignition / Electrical

Ref. No.	Part No.	Qty.	Description
1	12 086 14	1	Screw–Flywheel Mounting
2	12 486 03	1	Washer–Flat
3	12 162 03	1	Screen–Grass
4	M–0639016	4	Screw M6x1.0x16
5	12 112 01	4	Spacer–Fan
6	12 157 02	1	Fan
7	X–42–15	1	Key
8	236602	1	Connector–Regulator
9	12 403 01	1	Rectifier–Unregulated
10	X–22–11	2	Washer – Lock
11	M–0639016	2	Screw M6x1.0x16
12	41 155 03	1	Connector
13	12 025 15	1	Flywheel ASM
14	M–0548025	4	Screw M5x0.8x25
15	54 755 09	1	Kit – Stator–15 Amp (Incl. Bracket P/N #24 126 71)
16	12 132 02	1	Spark Plug
17	X–728–1	2	Clip–Kill Lead
18	M–0545010	1	Screw M5x0.8x10
19	12 584 02	1	Module–Ignition
20	M–0545020	2	Screw M5x0.8x20
*	X–25–5	1	Washer
	12 518 01	1	Lead–White
*	25 518 05	1	Lead–Black
*	25 518 29	1	Lead–Black
*	24 126 71	1	Bracket – Stator Wire

* Not illustrated

Kohler Engine Model CV13T SP 21524

Obtain parts from kohler

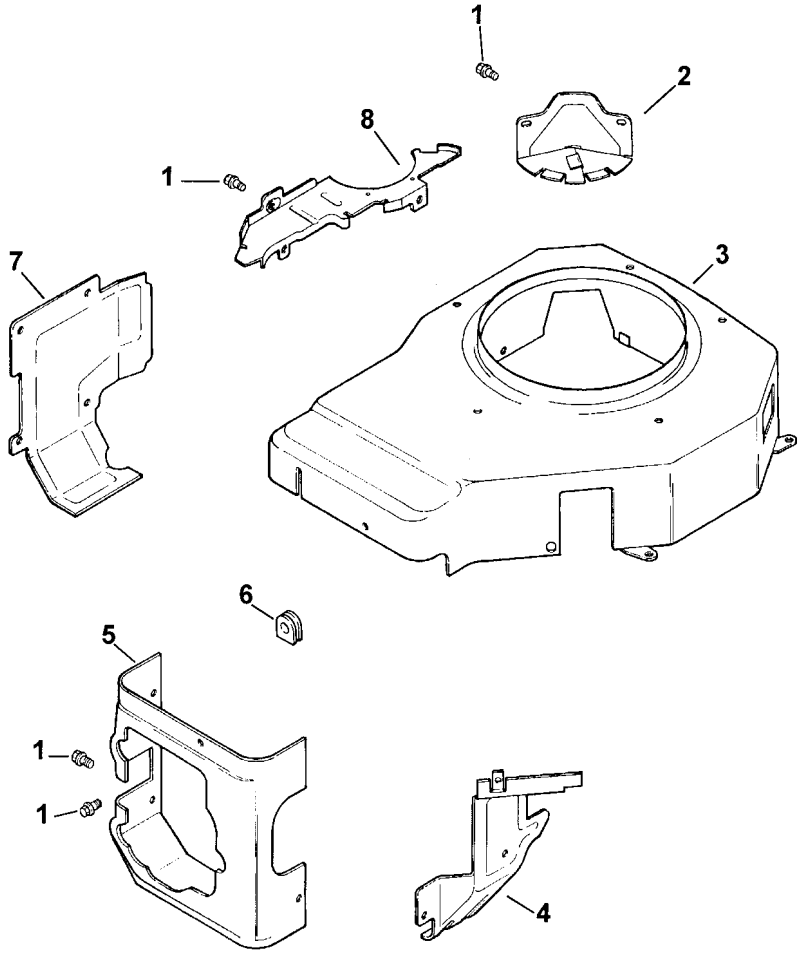

Sheet No.: 2 05

Blower Housing And Baffles


Ref. No.	Part No.	Qty.	Description
1	M–0545010	15	Screw M5x0.8x10
2	12 096 29	1	Cover–Starter
3	12 027 37	1	Housing–Blower
4	12 063 05	1	Baffle–Carburetor
5	12 063 08	1	Baffle–Cyl. Head
6	12 313 03	1	Grommet–Blower
7	12 063 01	1	Baffle–Cylinder
8	12 146 07	1	Plate–Blower Housing
*	12 133 66	1	Decal–Horsepower

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Kohler Engine Model CV13T SP 21524

Obtain parts from kohler

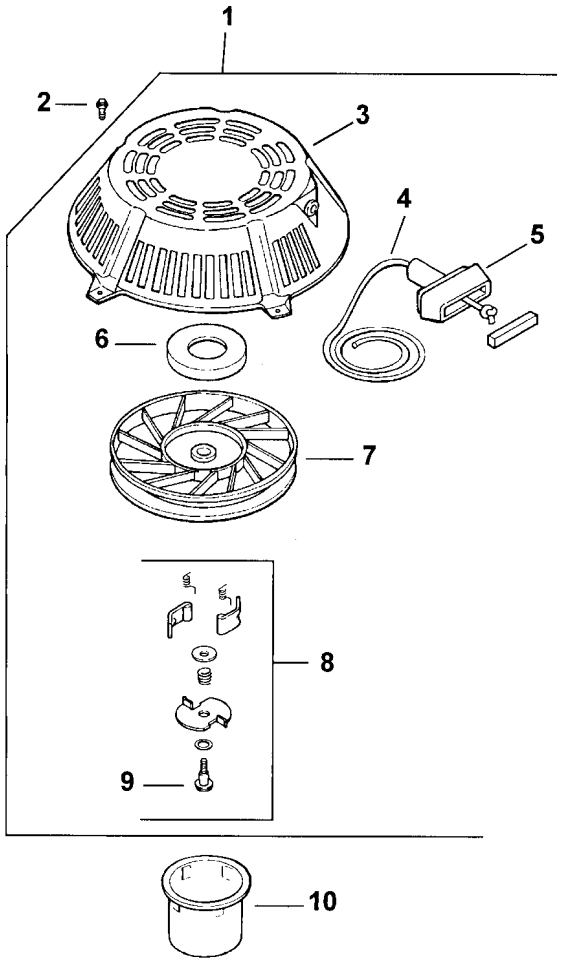

Sheet No.: 2 06

Starter System


Ref. No.	Part No.	Qty.	Description
1	12 165 01	1	Starter Incl 3–9
2	M–0545010	5	Screw M5x0.8x10
3	12 081 01	1	Housing–Starter
4	12 160 01	1	Rope–Starter
5	25 166 01	1	Handle–Recoil
6	12 089 06	1	Spring & Keeper
7	12 093 01	1	Pulley
8	12 757 06	1	Kit–Dog Replacement (incl. Ref.#9)
9	41 086 09	1	Screw–Posidrive
10	15 109 01	1	Cup–Driver
*	12 113 07	1	Decal–Starting

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Kohler Engine Model CV13T SP 21524

Obtain parts from kohler

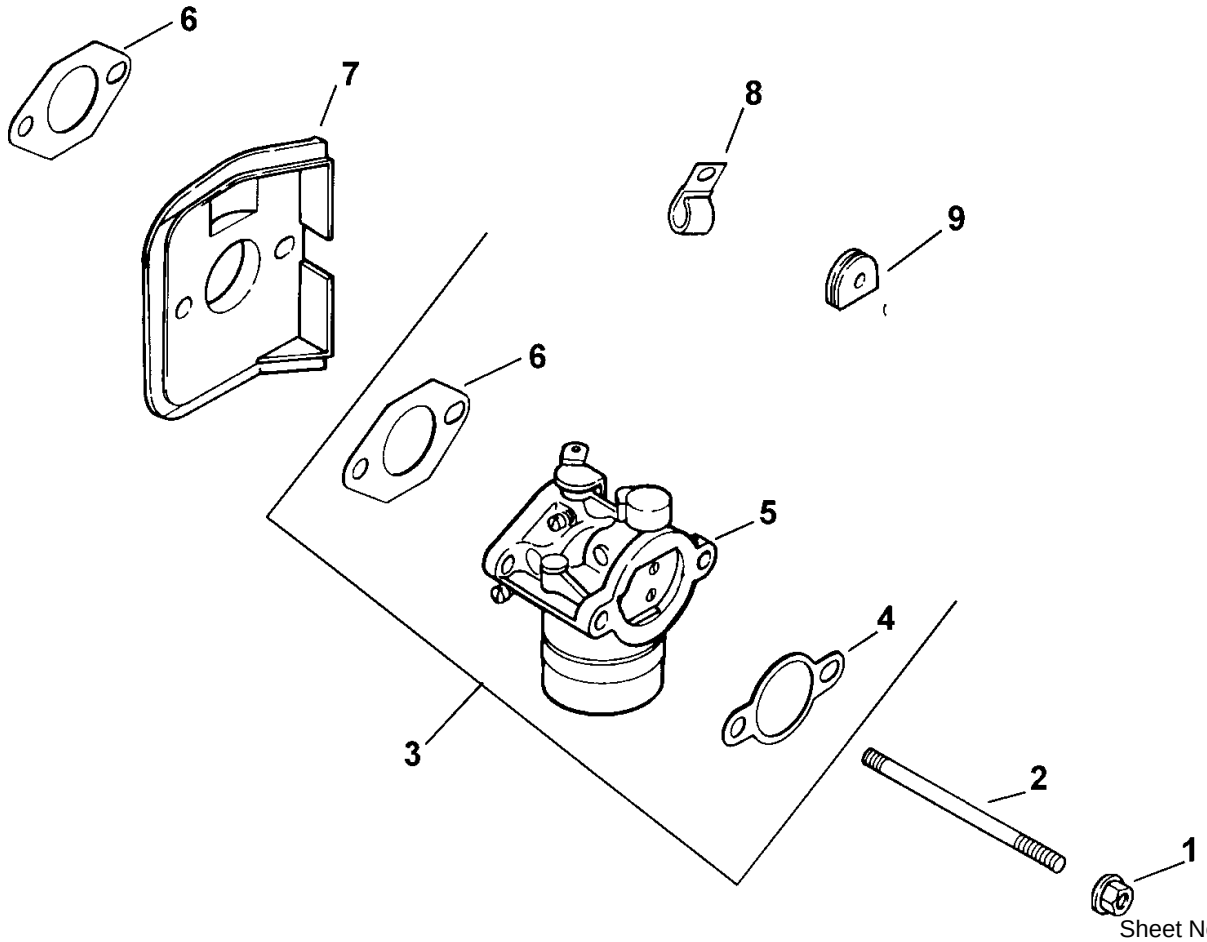

Sheet No.: 2 08

Fuel System


Ref. No.	Part No.	Qty.	Description
1	M–0641060	2	Nut M6x1.0
2	M–0629122	2	Stud M6x1.0x110
3	12 853 78	1	Kit–Carburetor w/Gaskets
4	12 041 02	1	Gasket–Air Cleaner
5	12 053 78	1	Carburetor ASM
6	12 041 01	2	Gasket–Carburetor
7	12 265 04	1	Deflector–Heat
8	47 154 01	1	Clip–Cable
9	12 313 01	1	Grommet
*	12 757 02	1	Kit–Float
*	12 757 08	1	Kit–Choke Repair
*	12 757 03	1	Kit–Carburetor Repair

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Kohler Engine Model CV13T SP 21524

Obtain parts from kohler

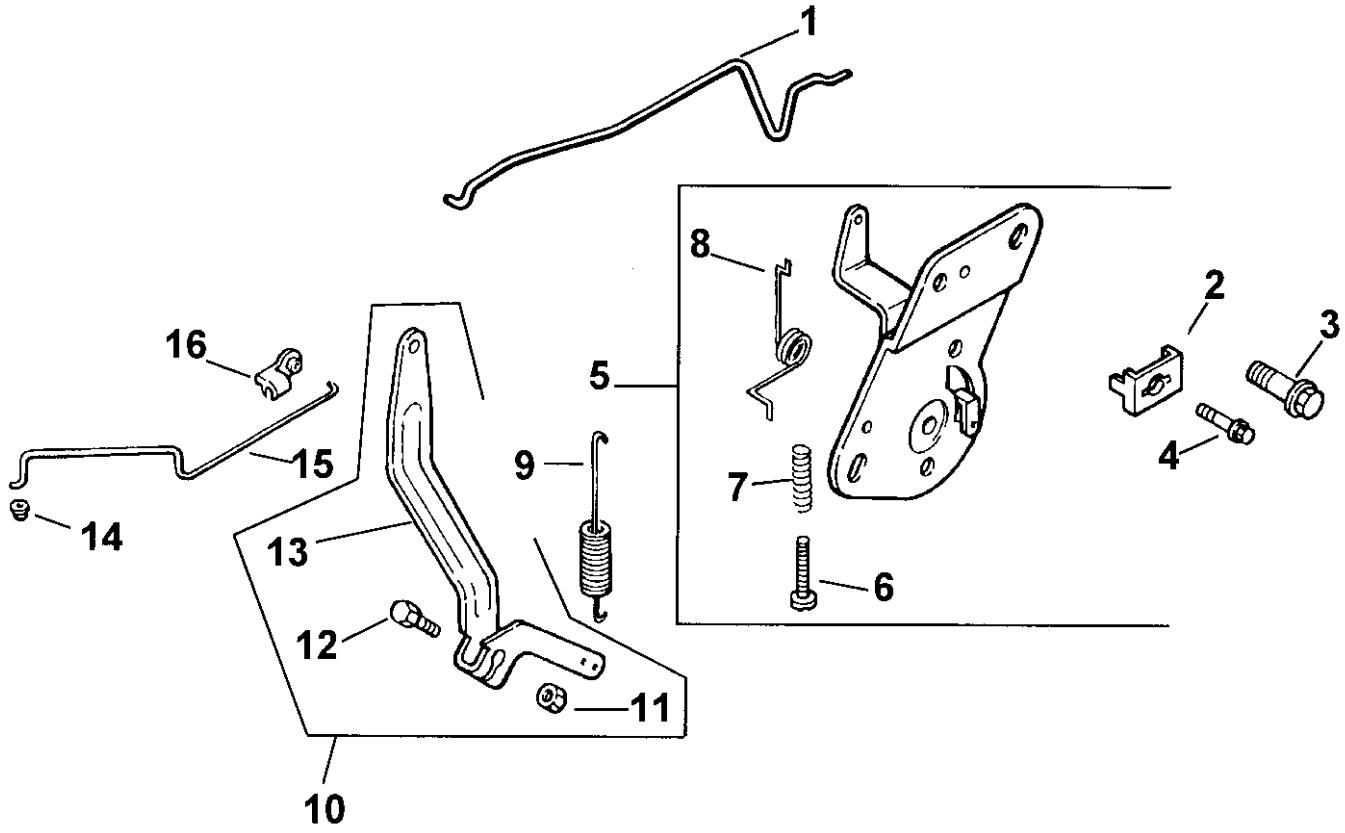


Sheet No.: 2 09

Engine Controls

Ref. No.	Part No.	Qty.	Description
1	12 079 07	1	Linkage–Choke
2	12 237 01	1	Clamp–Cable
3	M–0664020	2	Screw M6X1.0X20
4	M–0645016	1	Screw–HH M6x1.0x16
5	12 536 01	1	Control–Speed
6	SM–0443025	1	Screw
7	12 089 11	1	Spring
8	12 089 23	1	Spring–Choke Return
9	12 089 19	1	Spring–Governor
10	12 755 83	1	Kit – Governor Lever (Incl. Ref.#11–13)
11	12 100 07	1	Nut
12	52 211 04	1	Bolt – Round HD
13	12 090 26	1	Lever–Governor
14	25 158 08	1	Bushing–Linkage
15	12 079 01	1	Linkage–Throttle
16	25 158 11	1	Bushing–Linkage

Ref. No.	Part No.	Qty.	Description

Kohler Engine Model CV13T SP 21524
Obtain parts from kohler

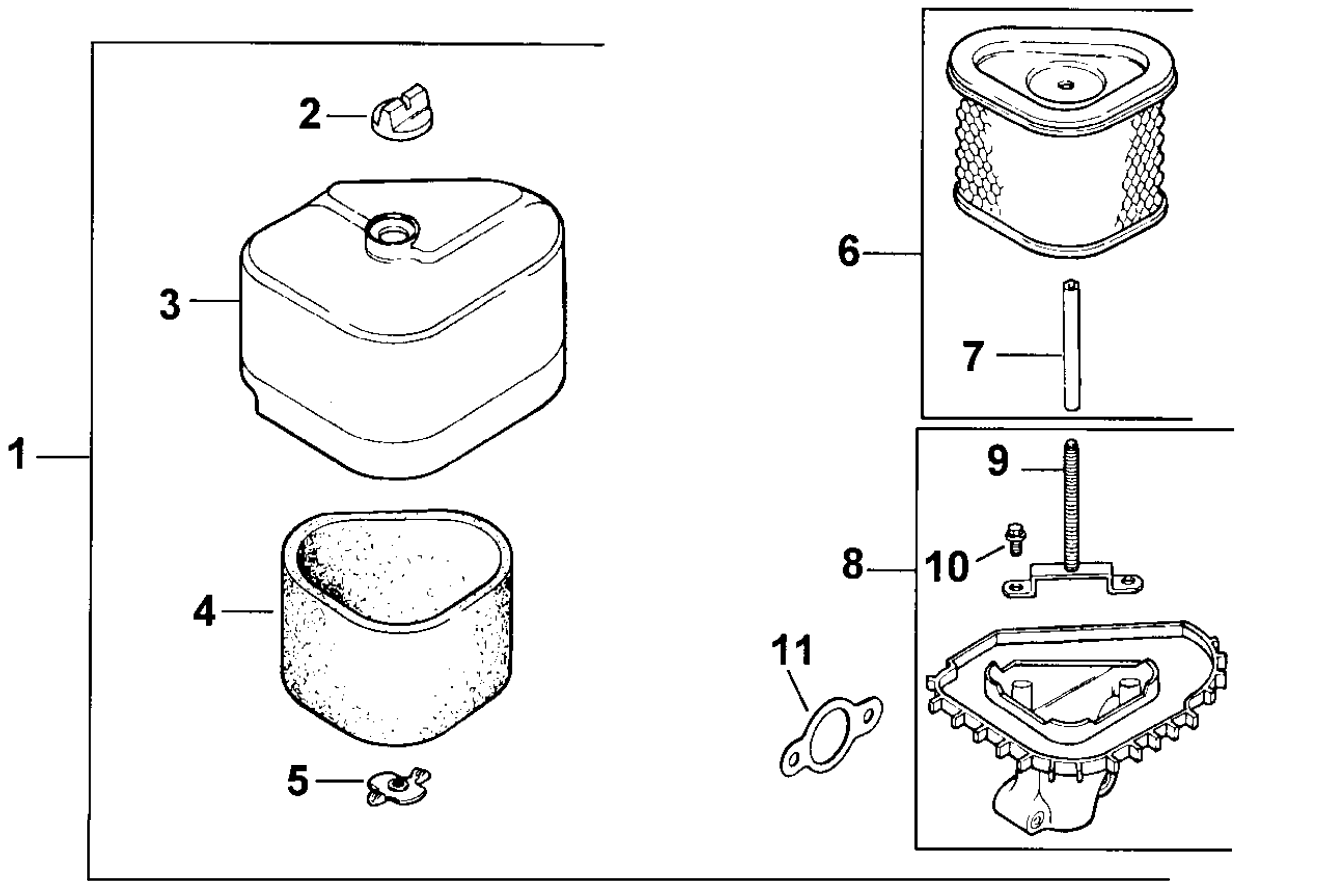

Sheet No.: 207

Air Cleaner


Ref. No.	Part No.	Qty.	Description
1	12 734 02	1	Kit–Air Cleaner (Incl. Ref.# 2–11)
2	25 341 03	1	Knob–Cover
3	12 096 16	1	Cover–Air Cleaner
4	12 083 12	1	Precleaner–Element
5	12 100 01	1	Nut–Wing
6	12 083 10	1	Element–Air Cleaner (Incl. Ref.#7)
7	12 032 11	1	Seal
8	12 094 07	1	Base–Air Cleaner (Incl. Ref.#9, 10)
9	12 072 04	1	Stud–Mounting Plate
10	12 086 01	1	Screw–Mounting Plate
11	12 041 02	1	Gasket–Air Cleaner
*	12 113 04	1	Decal–Air Cleaner

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Kohler Engine Model CV13T SP 21524

Obtain parts from kohler

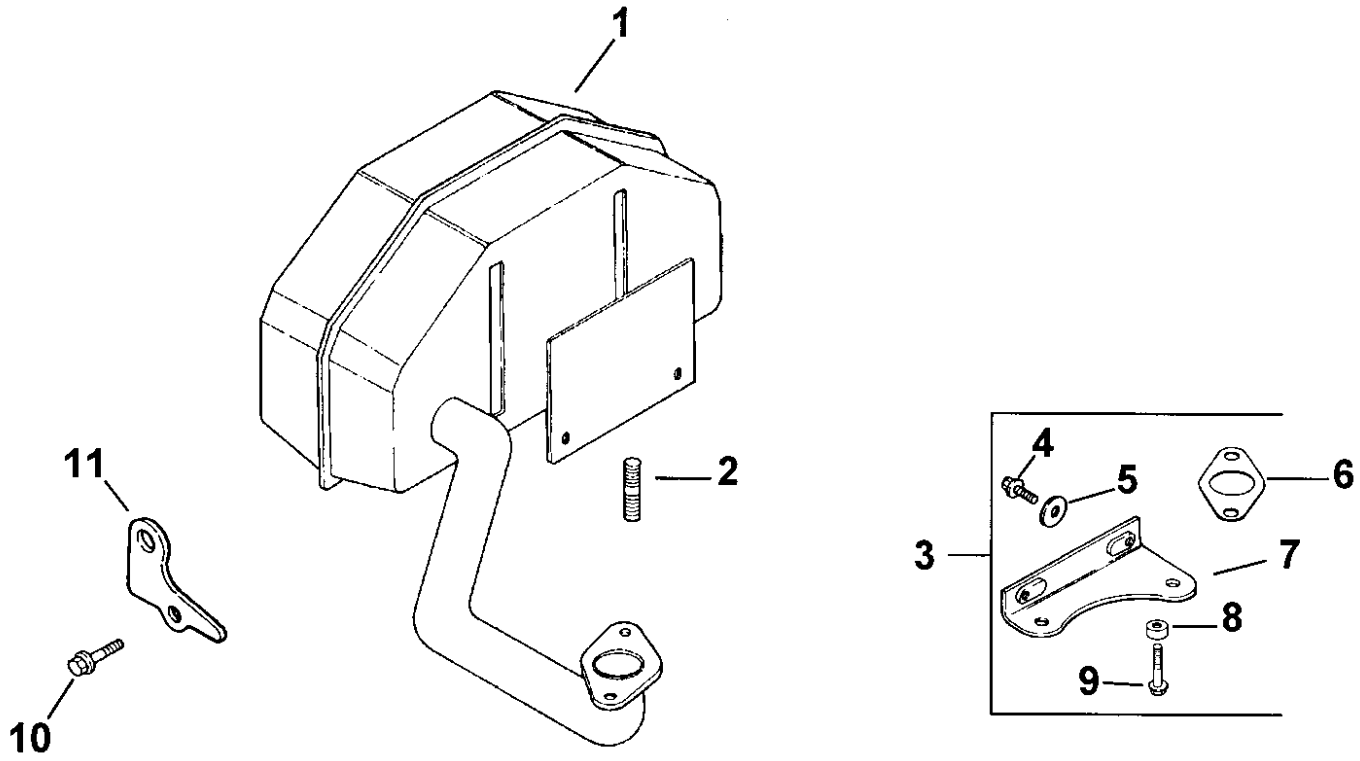

Sheet No.: 2 10

Exhaust

Ref. No.	Part No.	Qty.	Description
1	12 068 03	1	Muffler
2	M–0829033	2	Stud M8x1.25x20
3	12 755 30	1	Kit–Bracket (Incl. Ref.#4–9)
4	M–0650012	2	Screw
5	X–25–52	2	Washer
6	12 041 03	1	Gasket – Exhaust
7	12 126 55	1	Bracket–Muffler
8	12 468 01	1	Washer
9	12 086 13	1	Screw
10	M–0645025	1	Screw
11	12 445 06	1	Strap–Lifting


Ref. No.	Part No.	Qty.	Description

* Not illustrated

Kohler Engine Model CV13T SP 21524

Obtain parts from kohler

3323–212

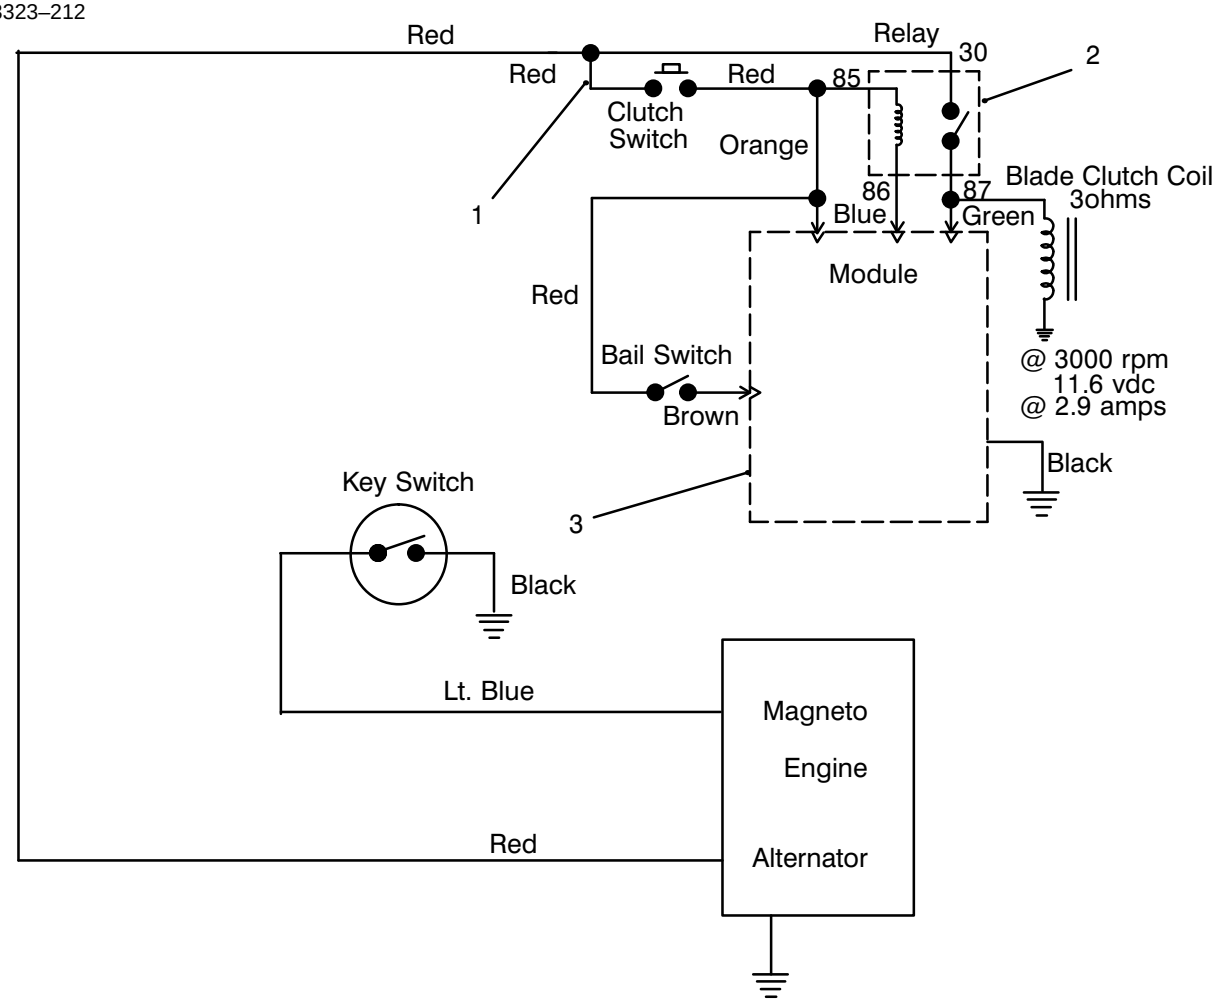

Electric Schematic

Ref. No.	Part No.	Qty.	Description
1	95−2803	1	Wire Harness
2	63−7590	1	Relay
3	94−9666	1	Module − Interlock

Ref. No.	Part No.	Qty.	Description

Maintenance Record

Date								

Maintenance Record

Date								

Maintenance Record

Date								


TORO®