
# LAZER Z® E-SERIES

**Model No. LZE751CKA604A1—Serial No. 404314159 and Up**

**Picture below may not reflect actual product.**

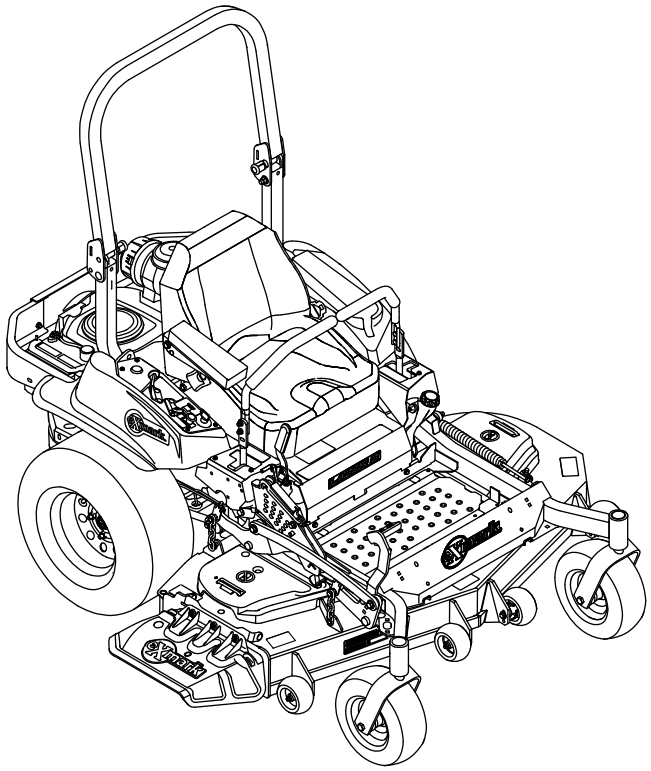

# Parts Manual

Part No. 4504-127 Rev. B

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

**© 2019—Exmark Mfg. Co., Inc.**
**2101 Ashland Ave**
**Beatrice, NE 68310**



**Contact us at www.Exmark.com.**
**Printed in the USA.**
**All Rights Reserved**





If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

# Contents

Complete Deck Assembly . . . . . 4
Deck Assembly . . . . . 6
Deck W/Decals Assembly No. 116-4232 . . . . . 8
Idler Assembly . . . . . 10
E-Series Decal . . . . . 12
Main Frame Assembly . . . . . 14
Roll-Over Protection System . . . . . 16
Roll-Over Protection System Assembly No. 116-0230 . . . . . 18
Front Caster and Fork Assembly . . . . . 20
Caster Wheel and Fork Assembly . . . . . 22
Deck Lift Assembly . . . . . 24
Height-of-Cut Assembly No. 109-7438 . . . . . 26
Console Assembly . . . . . 28
Motion Control Assembly . . . . . 30
Park Brake Assembly . . . . . 32
Rear Wheel Assembly . . . . . 34
Seat Assembly . . . . . 36
Seat Assembly (cont.) . . . . . 38
Fuel Assembly . . . . . 40
Fuel Tank Assembly . . . . . 42
Engine Assembly . . . . . 44
Hydraulic Assembly . . . . . 46
LH Hydro Assembly No. 126-1323 . . . . . 48
RH Hydro Assembly No. 126-1324 . . . . . 50
Pump Idler Assembly No. 116-1255 . . . . . 52
Electrical Assembly . . . . . 54


# Complete Deck Assembly

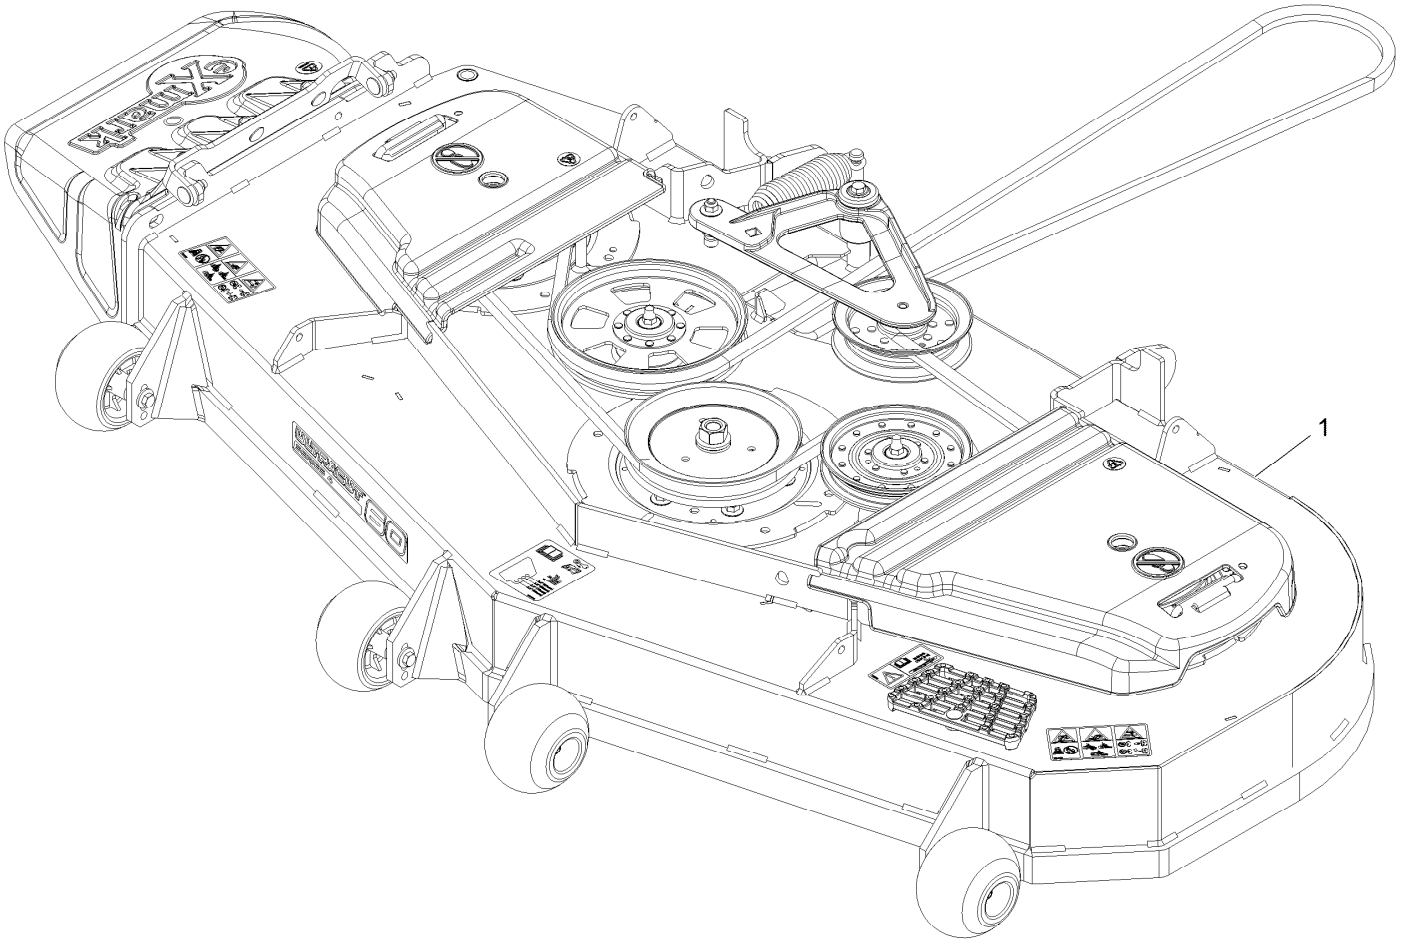

# Complete Deck Assembly (continued)

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 116-3599 | 1 | ASM,604 Deck Complete |

# Deck Assembly

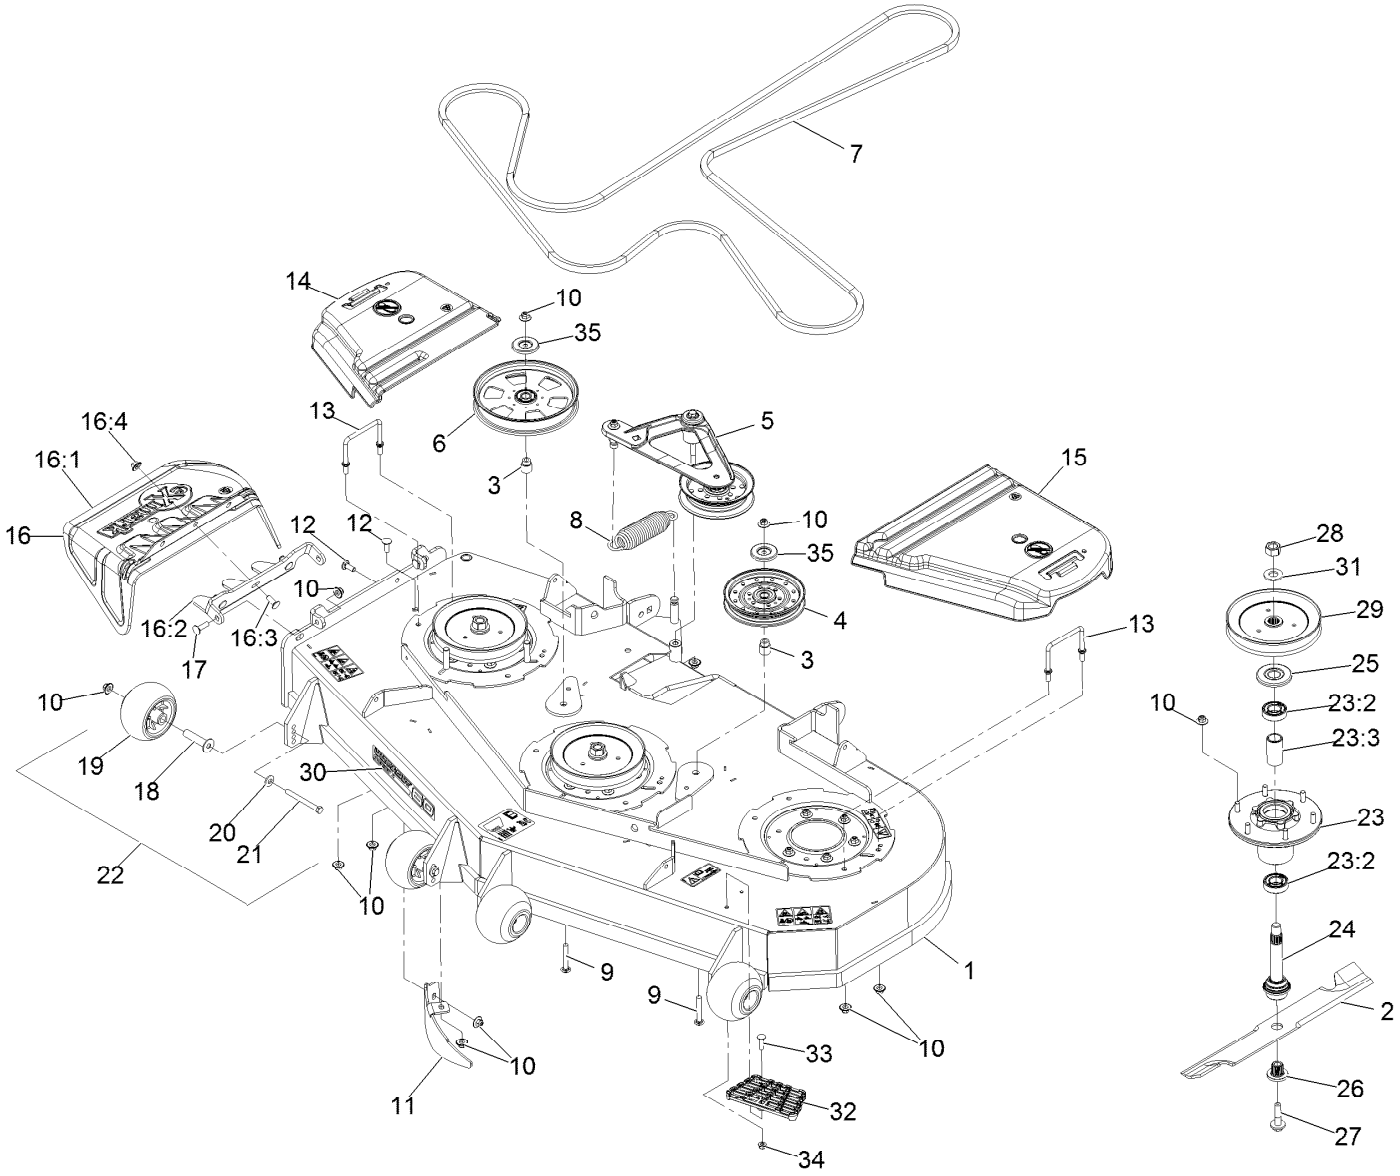

# Deck Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-4232 | 1 | Deck ASM,W/Decals 60 |
| 2 | 103-6383 | 3 | Blade, Solid ● |
| 2 | 103-6388 | 3 | Blade, Low Lift ● |
| 2 | 103-6393 | 3 | Blade, Mulching ◆ |
| 2 | 103-6403 | 3 | Blade, Notched |
| 2 | 116-5174 | 3 | Blade-Extreme 2, 20.50" ● |
| 3 | 1-633456 | 2 | Bushing, Idler |
| 4 | 126-7685 | 1 | Idler-Pulley |
| 5 | 116-3755 | 1 | Deck Idler ASM |
| 6 | 116-9639 | 1 | Pulley-Idler, Flat |
| 7 | 135-5774 | 1 | Belt,V-5V-198.75 |
| 8 | 116-6317 | 1 | Spring-Extension |
| 9 | 3231-44 | 2 | Bolt-Carriage 3/8-16 X 2 1/2 |
| 10 | 109-6658 | 32 | Nut-Nyloc 3/8-16 Flg |
| 11 | 116-5614-01 | 1 | Dogleg - Lz60 |
| 12 | 3231-22 | 2 | Bolt-Carriage 3/8-16 X 1 |
| 13 | 109-6982 | 2 | Wireform-Cover |
| 14 | 116-0094 | 1 | Cover-Belt, RH |
| 15 | 109-6938 | 1 | Cover-Belt, LH |
| 16 | 109-7188 | 1 | ASM,Discharge Chute |
| 16:1 | 109-2738 | 1 | Chute, Discharge |
| 16:2 | 109-8675-01 | 1 | Bracket,Discharge Chute |
| 16:3 | 3231-22 | 3 | Bolt-Carriage 3/8-16 X 1 |
| 16:4 | 109-6658 | 3 | Nut-Nyloc 3/8-16 Flg |
| 17 | 3231-28 | 2 | Bolt-Carriage 3/8-16 X 1 1/4 |
| 18 | 116-8131 | 4 | Axle, Roller |
| 19 | 103-8415 | 4 | Roller-Anti-Scalp |
| 20 | 98-5975 | 4 | Washer-Spring Disc 3/8 |
| 21 | 116-9362 | 4 | Screw-HH 3/8-16 X 3 3/4 GR 8 |
| 22 | 116-9981 | 3 | Kit, Anti-Scalp Roller |
| 23 | 116-3344 | 3 | ASM-Cutter Hsg With Bearings |
| 23:2 | 116-0720 | 2 | Bearing-Ball |
| 23:3 | 116-3312 | 1 | Spacer-Bearing |
| 24 | 116-3341 | 3 | ASM-Spindle And Seal |
| 25 | 116-1286 | 3 | Guard,Bearing Top .989 |
| 26 | 103-3037 | 3 | Bushing, Splined |
| 27 | 109-9220 | 3 | Screw-Sems 1/2-20 X 2.19 ■❑ |
| 28 | 116-7306 | 3 | Nut-Hex ▲ |
| 29 | 116-0676 | 3 | Sheave,Blade Drive 7.25 |
| 30 | 126-6589 | 1 | Decal, 604 |
| 31 | 103-2802 | 3 | Washer-Spring Disc 3/4 |
| 32 | 126-4781-03 | 1 | Step-Deck |
| 33 | 3230-3 | 1 | Bolt-Carriage 5/16-18 X 1 1/4 |
| 34 | 104-8300 | 1 | Nut-Nyloc 5/16-18 Flg |
| 35 | 126-8043 | 2 | Shield-Dust |

● Optional Equipment


■ Torque to 50-60 ft-lb

▲ Torque to 130-160 ft-lb

◆ Requires installation of mulch kit for proper mulching. See your Exmark dealer for details.

❑ Apply lubricant to threads as needed to prevent seizing. Copper based anti-seize preferable. Grease is an acceptable substitute.


# Deck W/Decals Assembly No. 116-4232

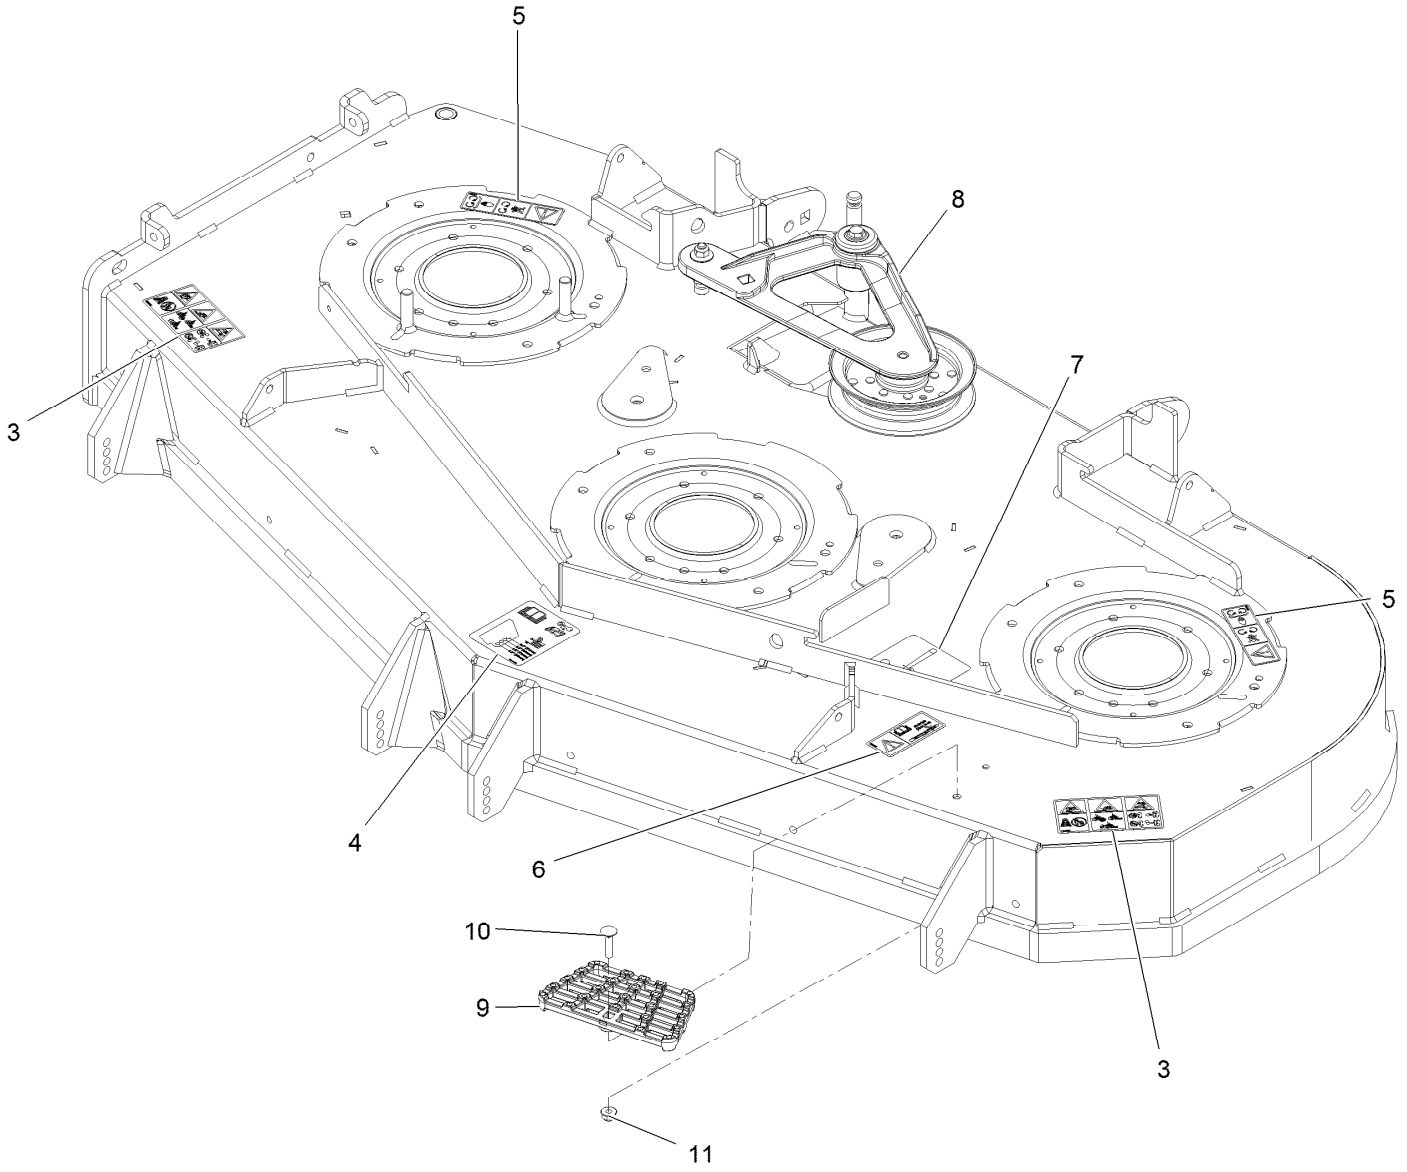

# Deck W/Decals Assembly No. 116-4232 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 3 | 126-6464 | 2 | Decal-Danger Thrown Objects |
| 4 | 109-6036 | 1 | Decal-Roller, Anti-Scalp |
| 5 | 112-9028 | 2 | Decal-Cover, Missing |
| 6 | 116-8283 | 1 | Decal-Bolt Torque |
| 7 | 116-8727 | 1 | Decal-Belt Routing |
| 8 | 116-3755 | 1 | Deck Idler ASM |
| 9 | 126-4781-03 | 1 | Step-Deck |
| 10 | 3230-3 | 1 | Bolt-Carriage 5/16-18 X 1 1/4 |
| 11 | 104-8300 | 1 | Nut-Nyloc 5/16-18 Flg |


# Idler Assembly

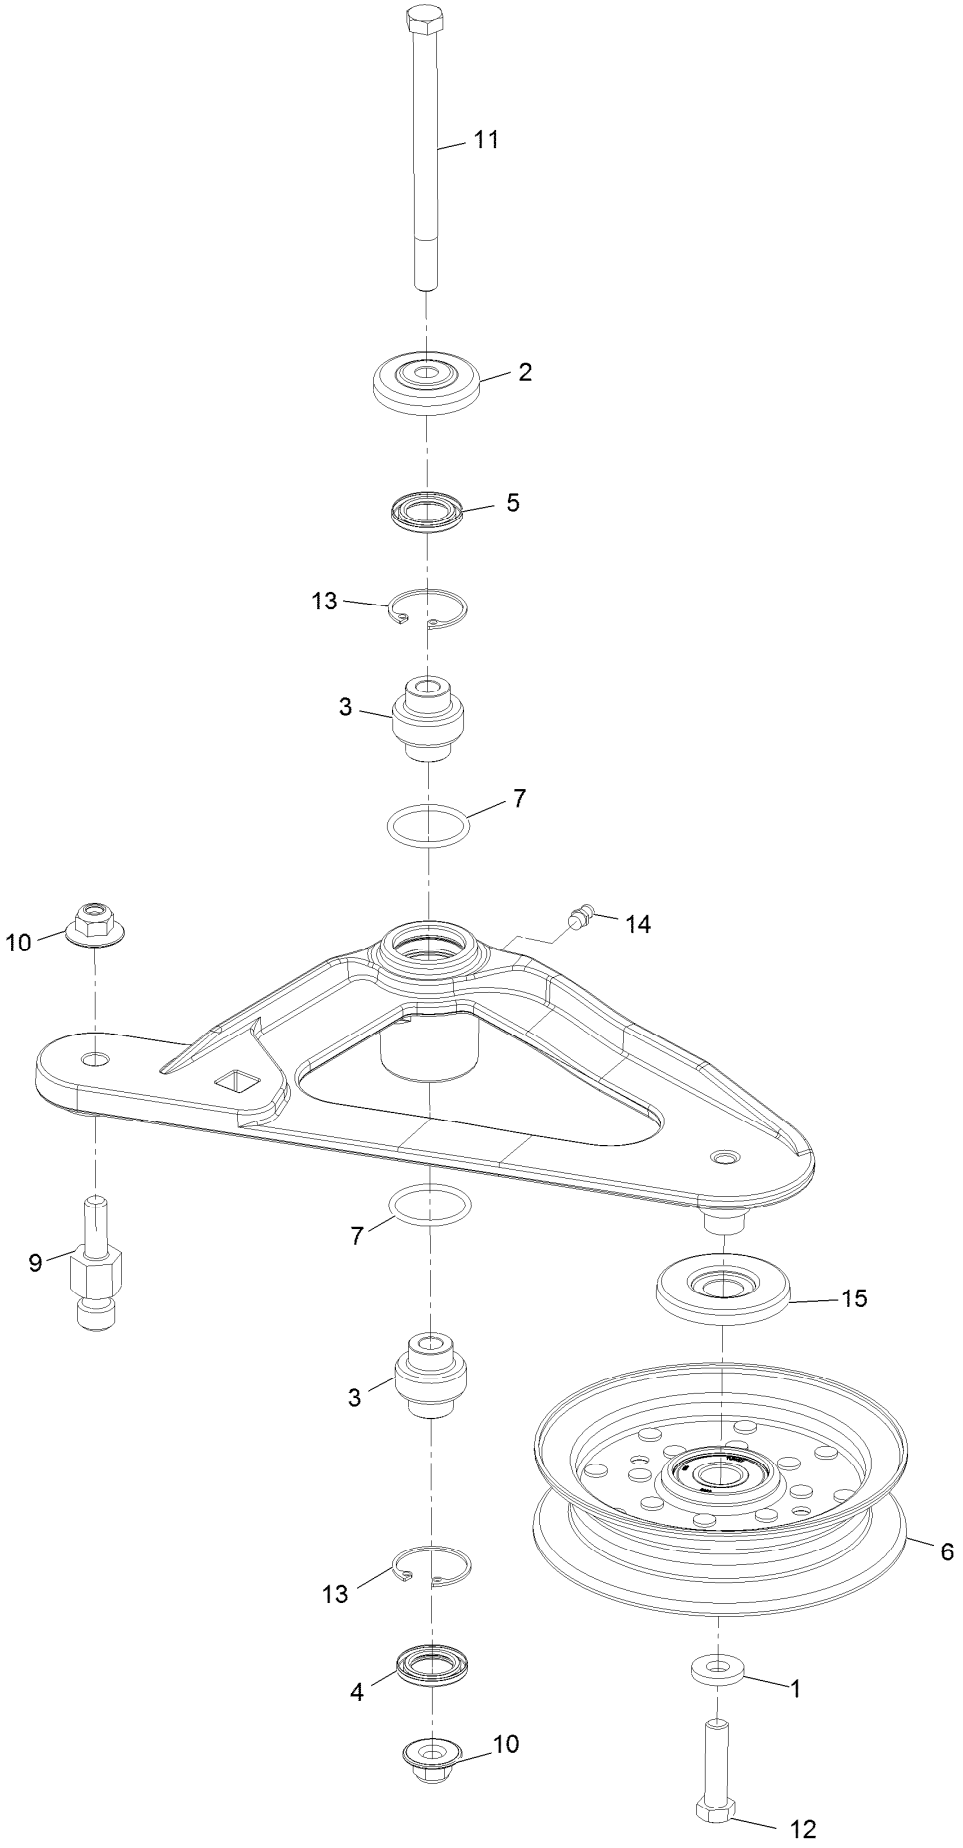

# Idler Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 43-0940 | 1 | Spacer |
| 2 | 103-2916 | 1 | Guard-Top |
| 3 | 103-3504 | 2 | Bearing-Spherical |
| 4 | 103-3505 | 1 | Seal-Lip, Double |
| 5 | 103-3506 | 1 | Seal-Lip, Single |
| 6 | 126-9196 | 1 | Idler-Pulley, Flat |
| 7 | 106-7159 | 2 | O-Ring |
| 9 | 126-0423 | 1 | Pin-Spring, Anchor |
| 10 | 109-6658 | 2 | Nut-Flange, NI |
| 11 | 109-7409 | 1 | Screw-Shoulder, HH |
| 12 | 323-8 | 1 | Screw-HH |
| 13 | 32120-10 | 2 | Ring-Snap |
| 14 | 302-19 | 1 | Fitting-Grease |
| 15 | 126-9195 | 1 | Shield-Guard, Dust |


# E-Series Decal

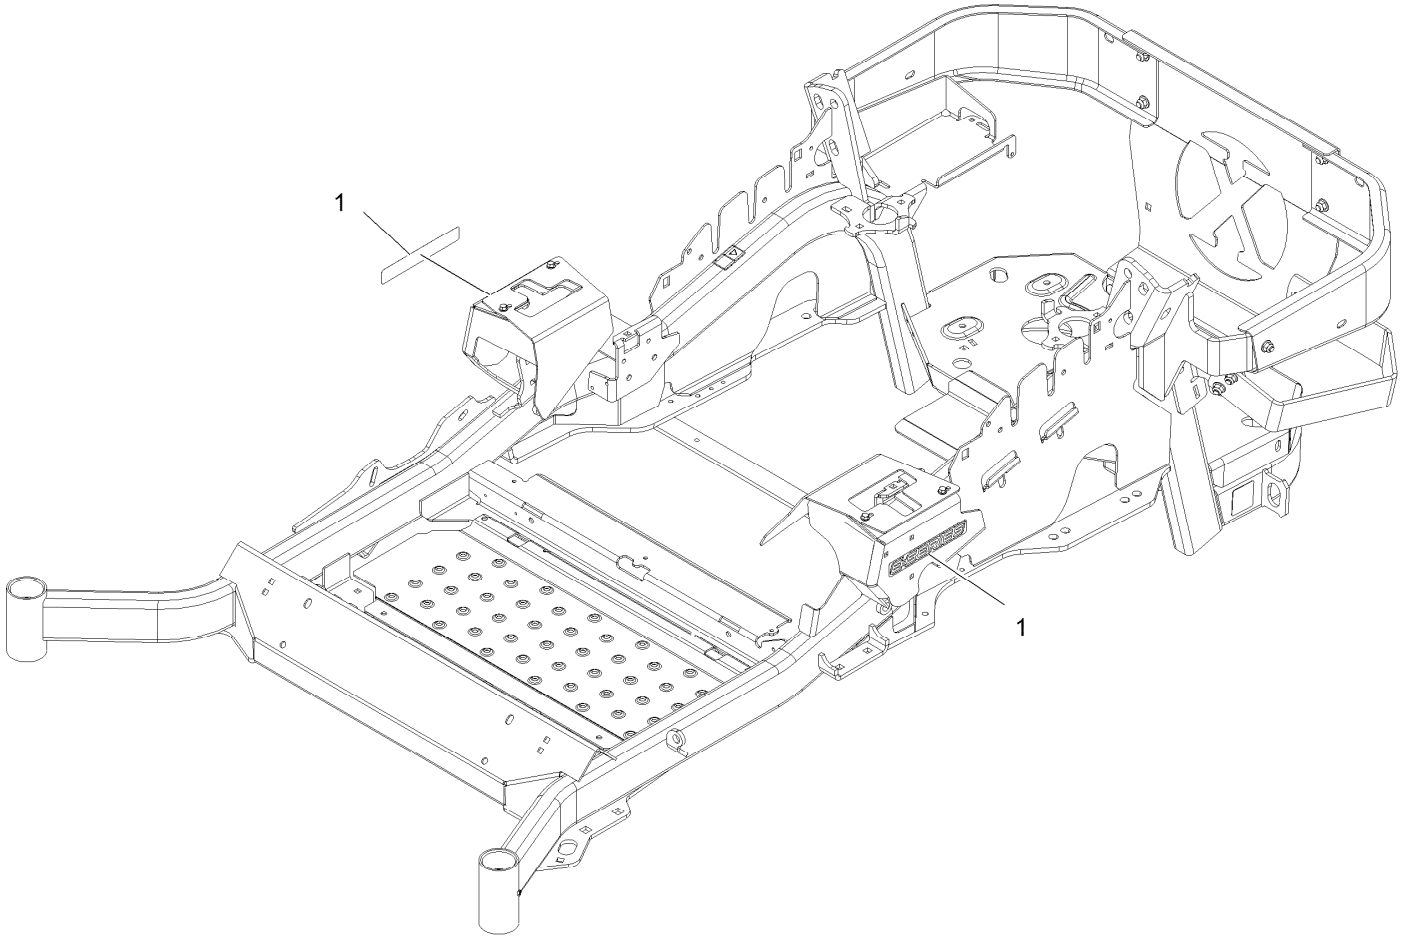

# E-Series Decal (continued)

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 126-6571 | 2 | Decal-E-Series |


# Main Frame Assembly

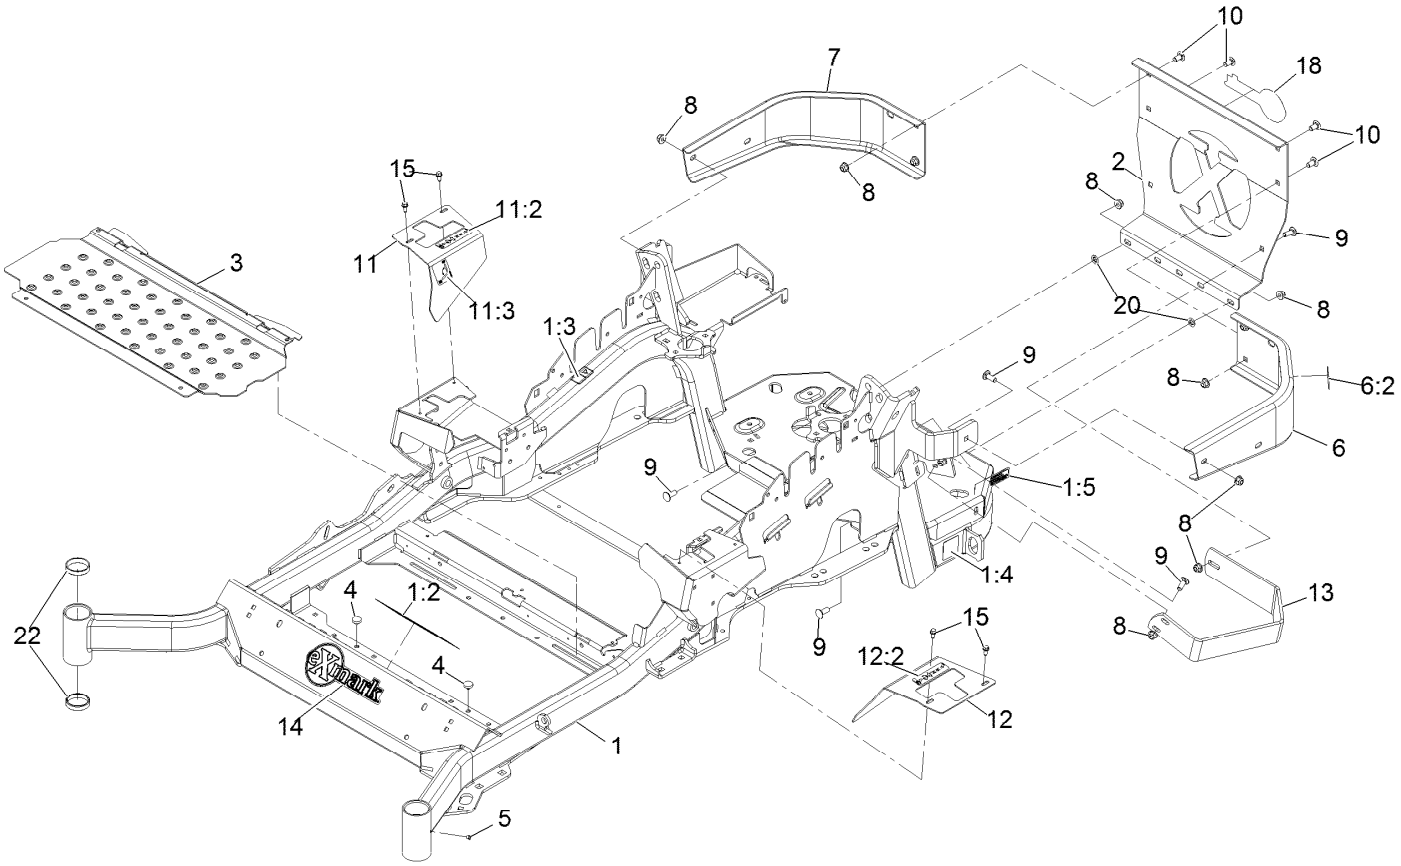

# Main Frame Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-5902 | 1 | Mainframe ASM |
| 1:2 | 132-0871 | 1 | Decal-Danger |
| 1:3 | 106-5517 | 2 | Decal-Warning |
| 1:4 | 106-2655 | 2 | Decal-Hazard, Pinched Finger |
| 1:5 | 133-8062 | 1 | Decal-Arrestor, Spark |
| 2 | 109-8863-03 | 1 | Plate,Rear Guard |
| 3 | 116-8898-01 | 1 | Floorpan |
| 4 | 1-513658 | 2 | Bumper |
| 5 | 1-811010 | 2 | Plug |
| 6 | 116-0180 | 1 | LH Bumper ASM |
| 6:2 | 106-5517 | 1 | Decal-Warning |
| 7 | 116-0057-03 | 1 | Bumper-RH |
| 8 | 104-8301 | 11 | Nut-Nyloc 3/8-16 Flg |
| 9 | 3231-22 | 7 | Bolt-Carriage 3/8-16 X 1 |
| 10 | 3231-21 | 4 | Bolt-Carriage 3/8-16 X 3/4 |
| 11 | 116-5899 | 1 | RH Motion Control Cover ASM |
| 11:2 | 99-8936 | 1 | Decal-Control, Motion |
| 11:3 | 116-5988 | 1 | Decal-Park Brake, CE |
| 12 | 116-0580 | 1 | LH Motion Control Cover ASM |
| 12:2 | 99-8936 | 1 | Decal-Control, Motion |
| 13 | 126-2067-03 | 1 | Guard-Muffler |
| 14 | 135-2274 | 1 | Decal-Exmark |
| 15 | 32144-10 | 4 | Screw-HWH 1/4-20 X .62 |
| 18 | 126-6965 | 1 | Decal-Exmark Logo |
| 20 | 107-3154 | 2 | Nut-Push 3/8-16 |
| 22 | 1-543508 | 4 | Cup-Bearing Tapered Roller |


# Roll-Over Protection System

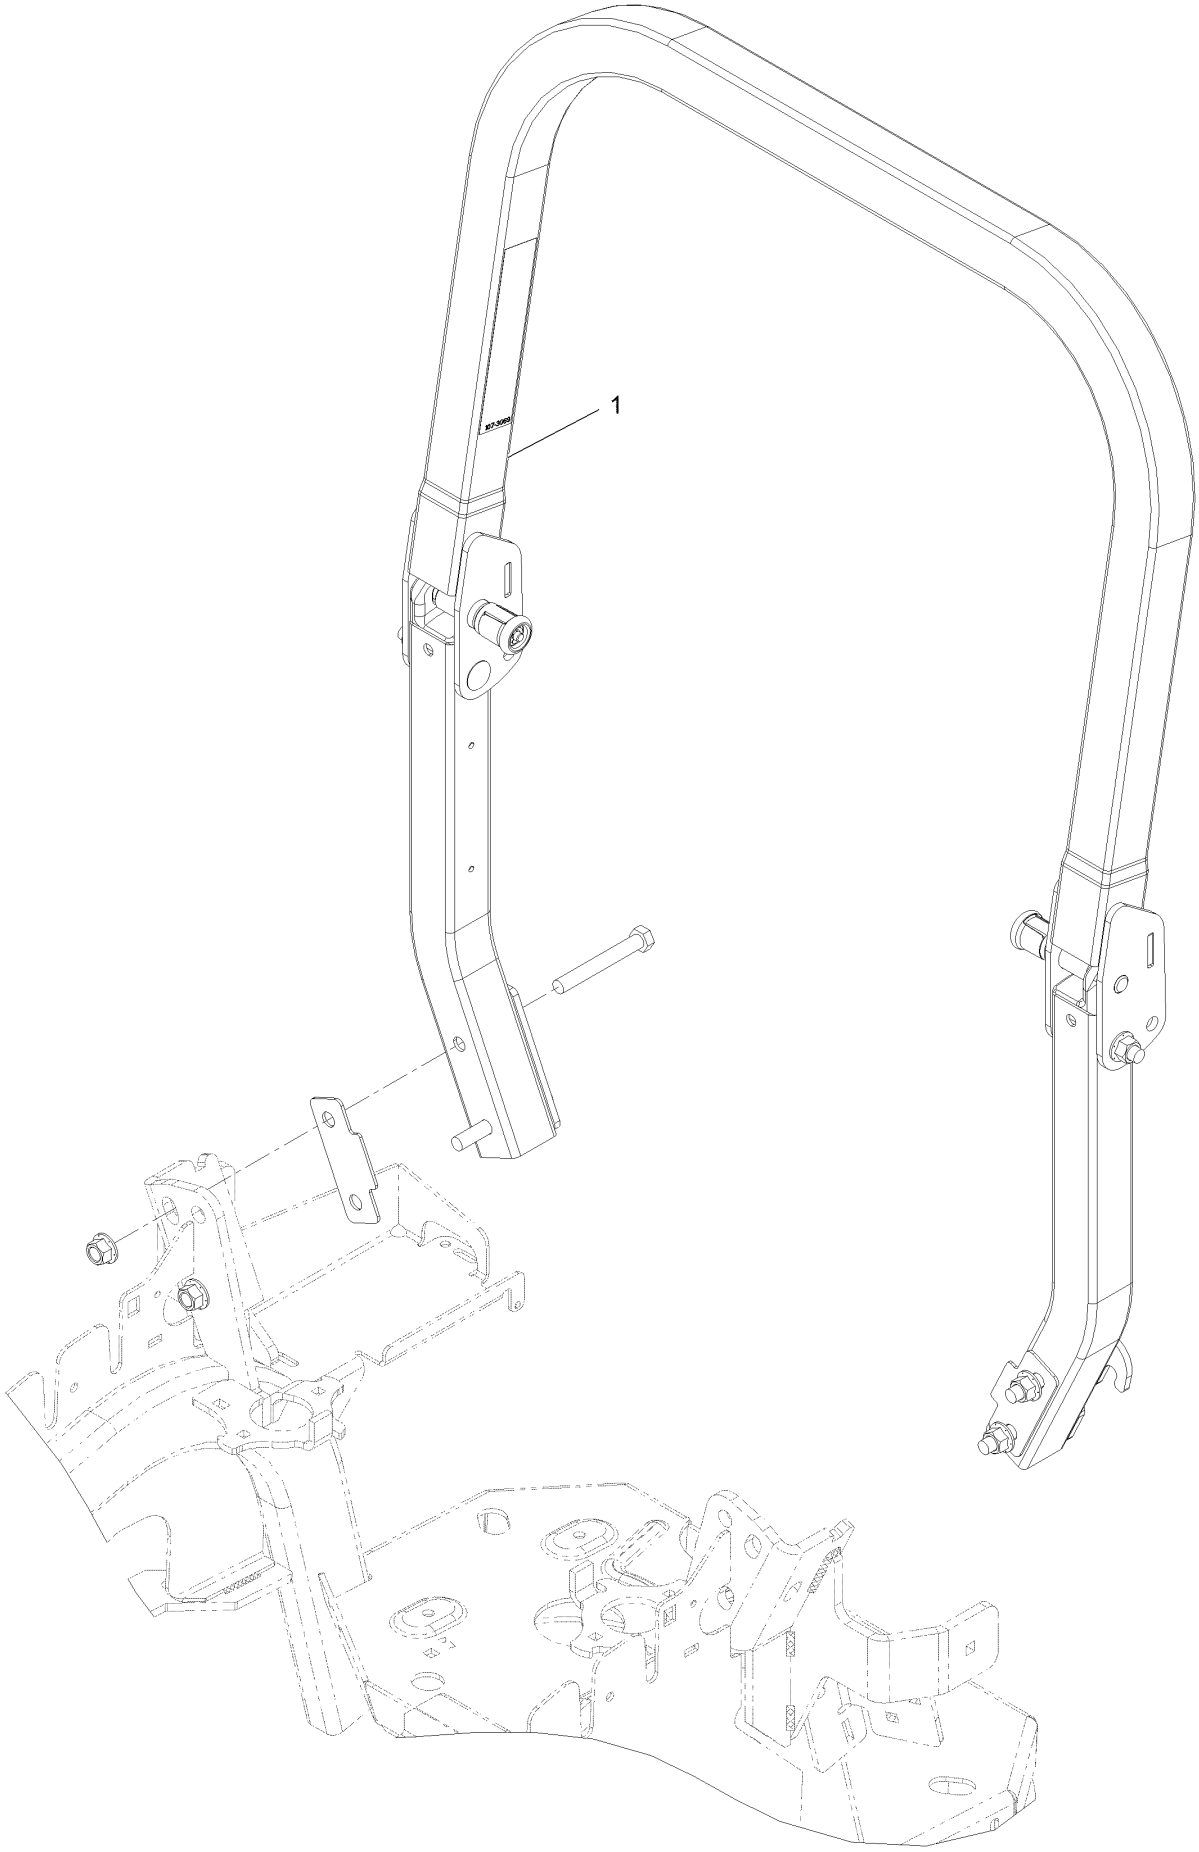

# Roll-Over Protection System (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-0230 | 1 | ASM,ROPS Service Exmark |


# Roll-Over Protection System Assembly No. 116-0230

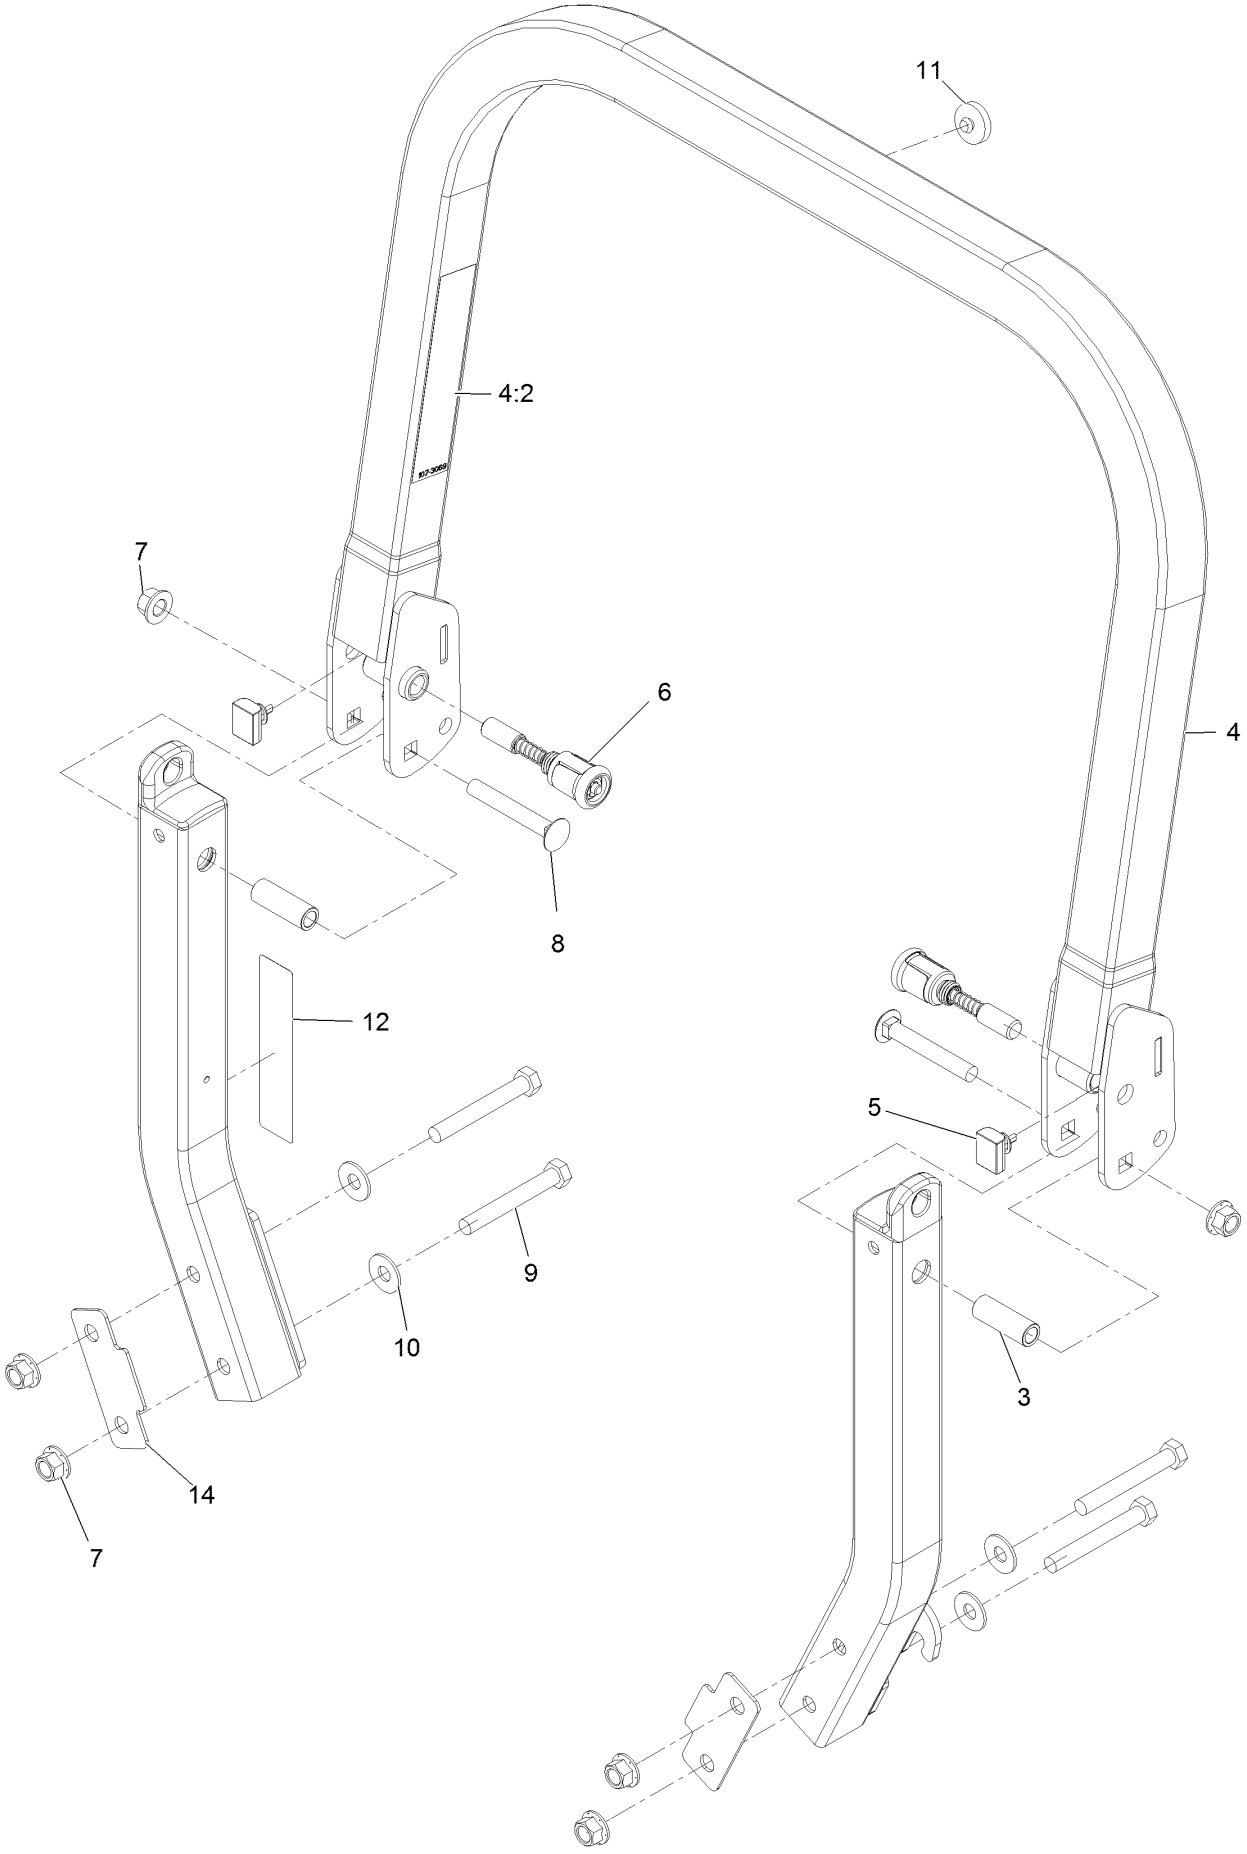

# Roll-Over Protection System Assembly No. 116-0230 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 3 | 109-6653 | 2 | Spacer |
| 4 | 116-0019 | 1 | Upper ROPS ASM |
| 4:2 | 107-3069 | 1 | Decal-Warning |
| 5 | 109-5337 | 2 | Bumper-ROPS |
| 6 | 116-0104 | 2 | Pin-Spring |
| 7 | 99-5107 | 6 | Nut-Lock 1/2-13 |
| 8 | 3233-10 | 2 | Bolt-Carriage 1/2-13 X 3 1/2 |
| 9 | 325-35 | 4 | Screw-HH |
| 10 | 109-9505 | 4 | Washer, Spring Disc 1/2 |
| 11 | 109-9233 | 1 | Bumper-Push-In, Rubber |
| 12 | 117-0346 | 1 | Decal-Caution, Fuel Vent |
| 14 | 116-0960 | 2 | Spacer |

# Front Caster and Fork Assembly

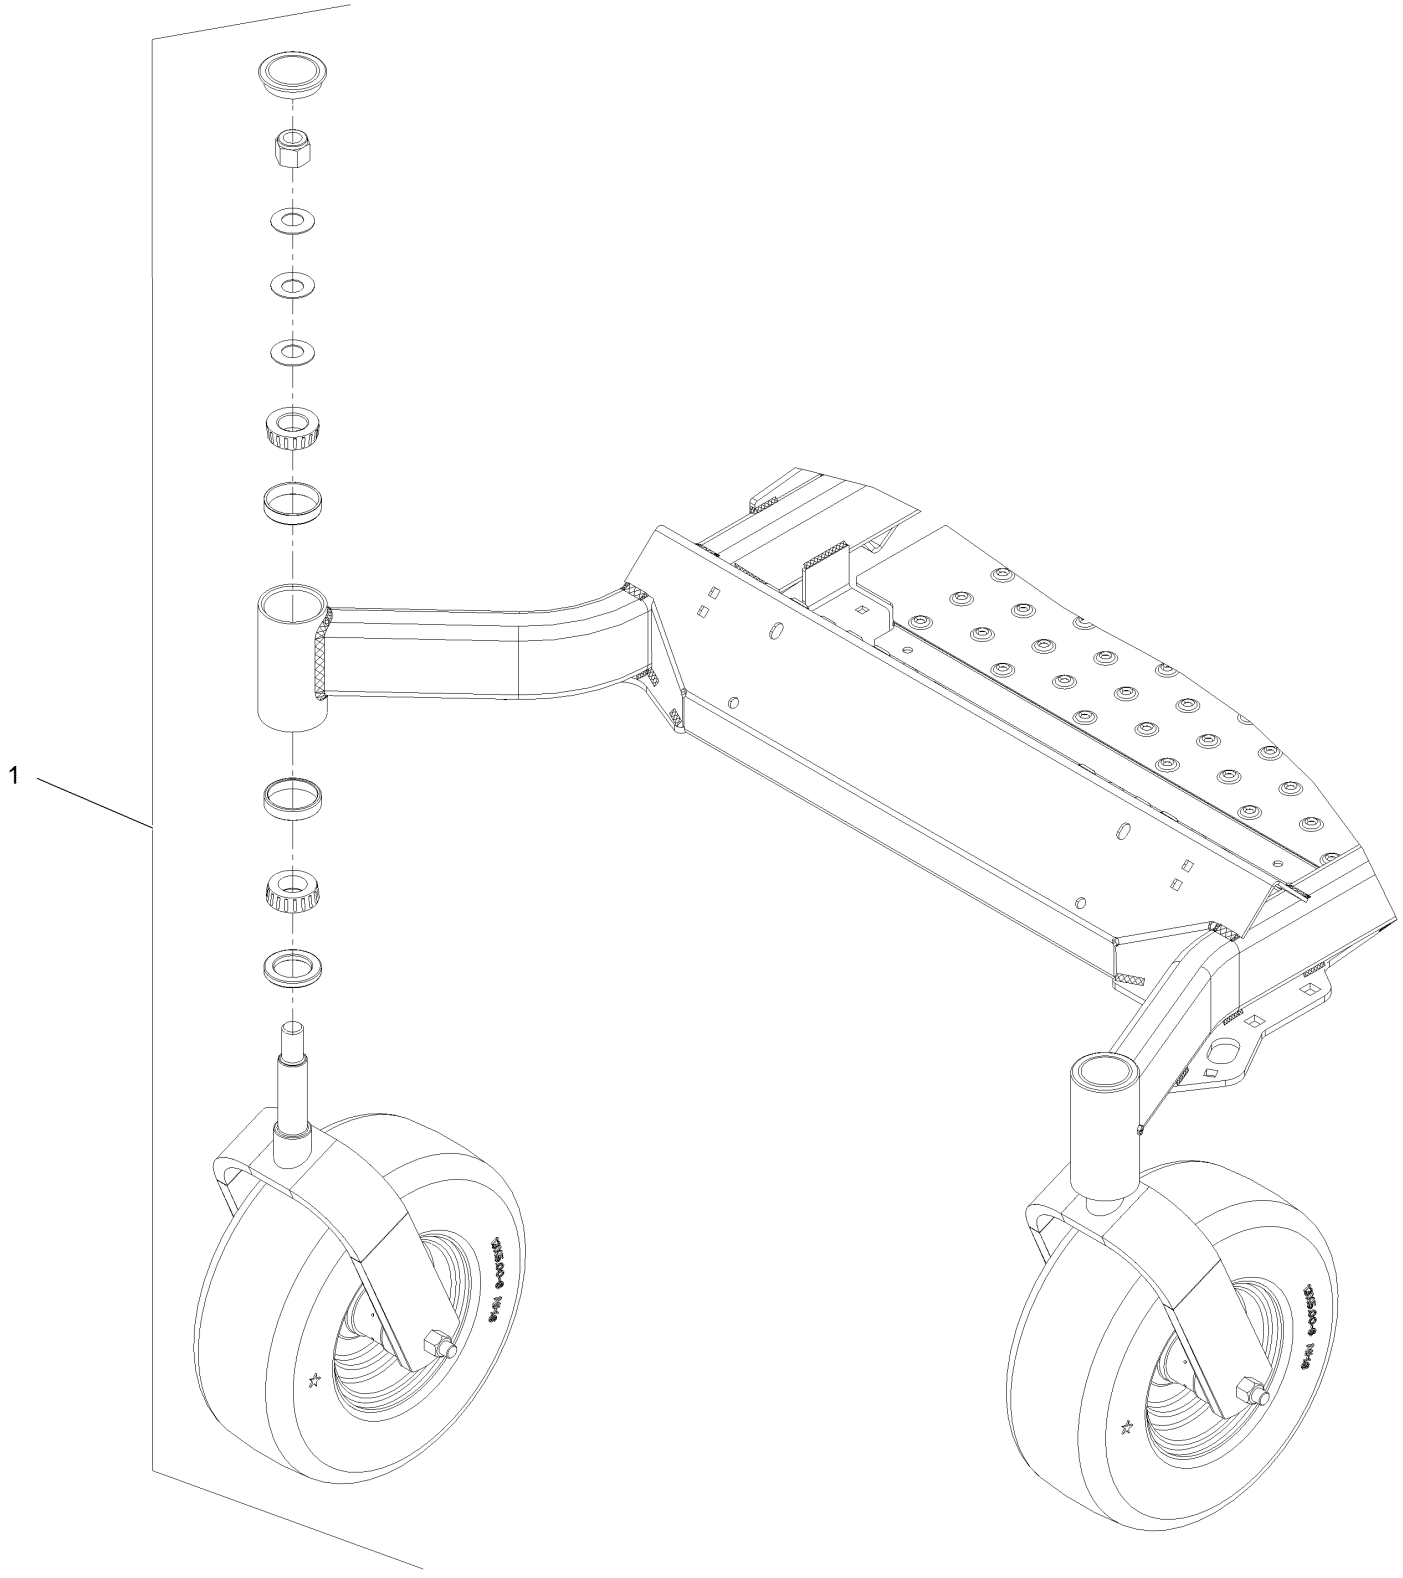


# Front Caster and Fork Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | | 2 | Front Caster And Fork ASM ● |

● Not serviced separately

# Caster Wheel and Fork Assembly

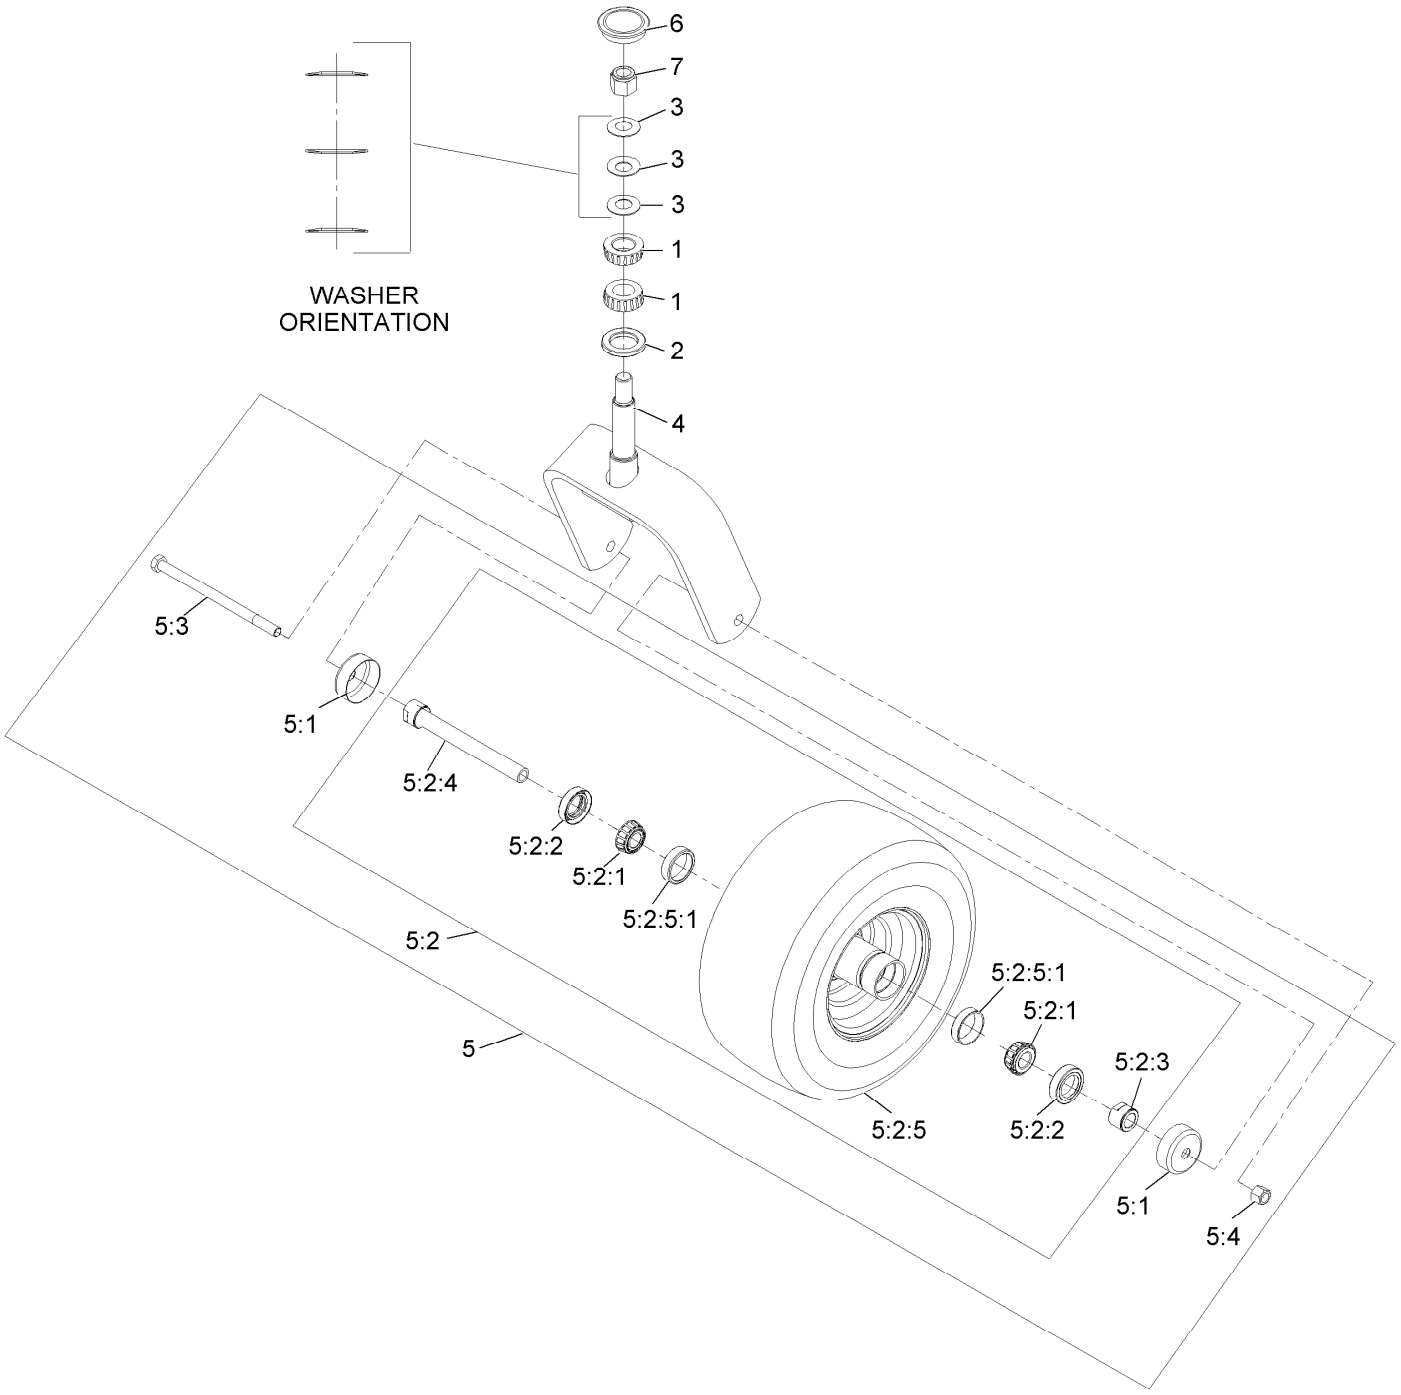


# Caster Wheel and Fork Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 1-543509 | 2 | Bearing-Roller, Tapered |
| 2 | 116-5647 | 1 | Seal-Grease |
| 3 | 1-633508 | 3 | Washer-Bellville |
| 4 | 116-6707-01 | 1 | Caster |
| 5 | 109-9127 | 1 | Wheel & Tire ASM |
| 5:1 | 103-2768 | 2 | Guard-Seal |
| 5:2 | | 1 | Wheel And Tire ASM ● |
| 5:2:1 | 1-633585 | 2 | Bearing-Cone, Taper |
| 5:2:2 | 103-0063 | 2 | Seal-Caster |
| 5:2:3 | 103-3051 | 1 | Spacer-Nut ■ |
| 5:2:4 | 126-5361 | 1 | Axle Caster ASM |
| 5:2:5 | | 1 | Wheel And Tire ASM ● |
| 5:2:5:1 | 1-633584 | 2 | Bearing-Cup |
| 5:3 | 325-39 | 1 | Screw-HH |
| 5:4 | 3296-23 | 1 | Nut-Lock, NI |
| 6 | 103-4882 | 1 | Cap-Grease |
| 7 | 3296-51 | 1 | Nut-Lock, NI |

● Not serviced separately
■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


# Deck Lift Assembly

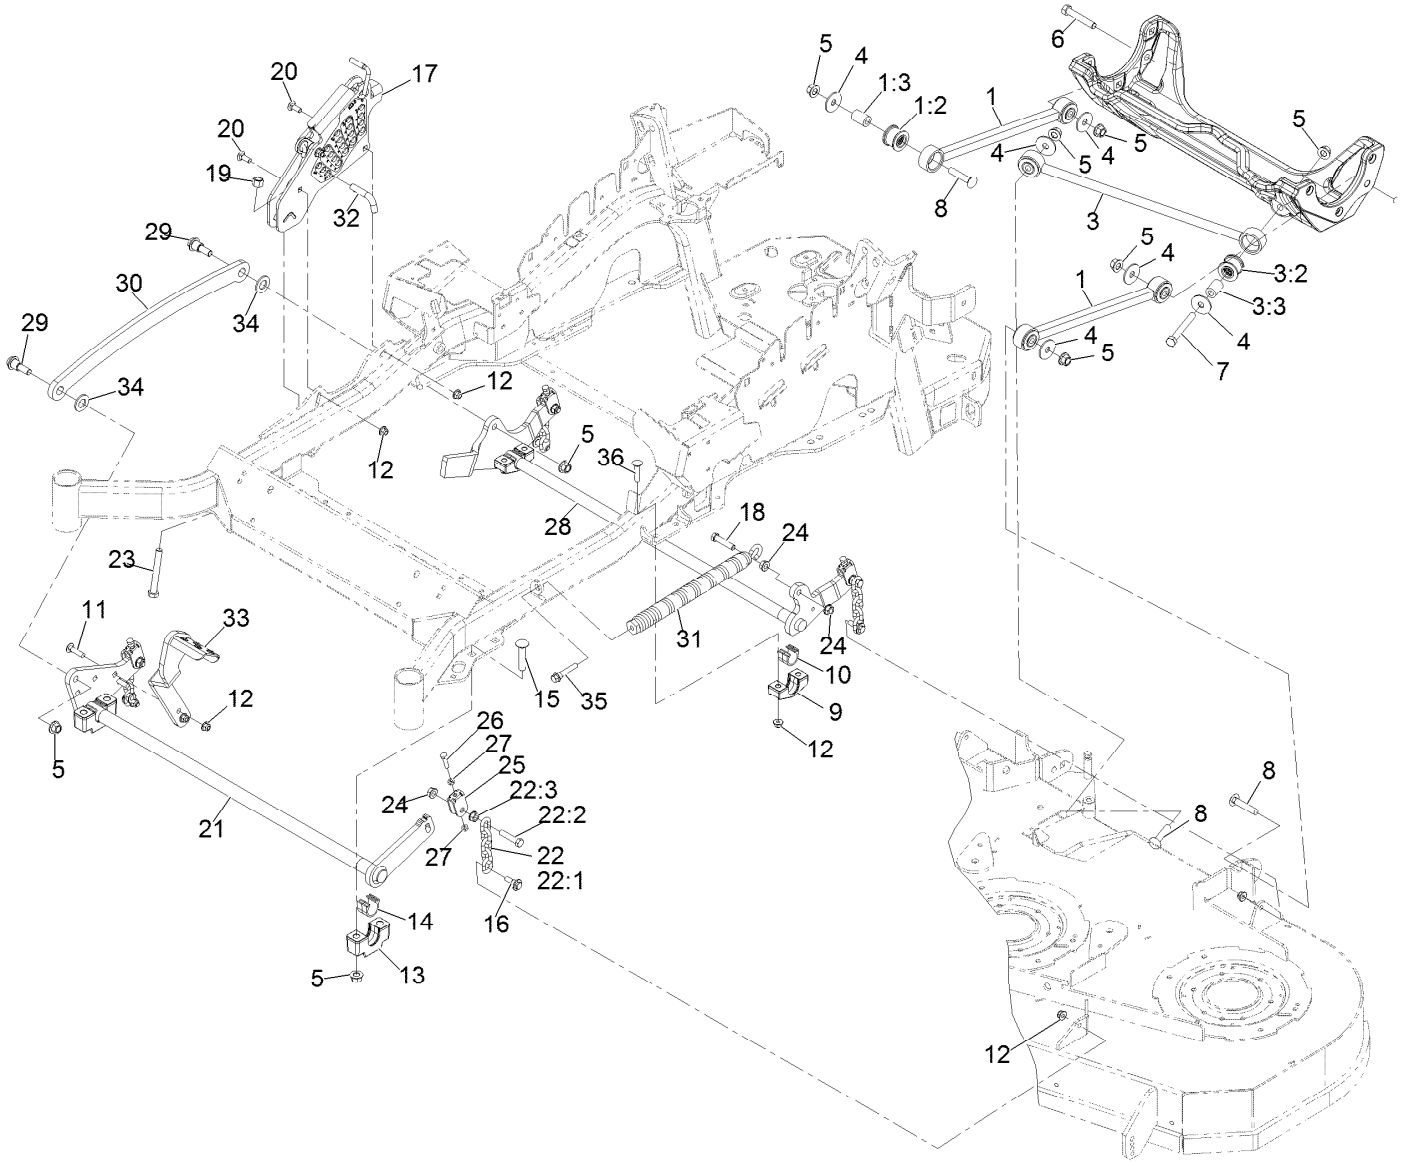

# Deck Lift Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-2031 | 2 | Long Strut ASM |
| 1:2 | 109-5009 | 2 | Bushing-Suspension, Rubber |
| 1:3 | 109-5010 | 2 | Spacer |
| 3 | 109-5013 | 1 | Panhard Rod ASM |
| 3:2 | 109-5009 | 2 | Bushing-Suspension, Rubber |
| 3:3 | 109-5010 | 2 | Spacer |
| 4 | 86-1990 | 6 | Washer |
| 5 | 99-5107 | 12 | Nut-Lock 1/2-13 |
| 6 | 325-12 | 2 | Screw-HH 1/2-13 X 3 |
| 7 | 325-17 | 1 | Screw-HH 1/2-13 X 4 |
| 8 | 3233-34 | 3 | Bolt-Carriage 1/2-13 X 2 1/2 |
| 9 | 127-0553 | 2 | Support-Cross Shaft, Bearing Rear |
| 10 | 109-7173 | 2 | Bearing-Cross Shaft, Rear |
| 11 | 3231-4 | 2 | Bolt-Carriage 3/8-16 X 1 1/2 |
| 12 | 104-8301 | 12 | Nut-Nyloc 3/8-16 Flg |
| 13 | 109-9409 | 2 | Support-Cross Shaft, Bearing |
| 14 | 109-9410 | 2 | Bearing-Cross Shaft, Front |
| 15 | 116-1700 | 4 | Bolt-Carriage 1/2-13 X 2 1/2 Spl Neck |
| 16 | 109-9840 | 4 | Screw-Hex Flange 3/8-16 X .80 |
| 17 | 109-7438 | 1 | HOC ASM |
| 18 | 109-9065 | 1 | Screw-HH 7/16-14 X 2 |
| 19 | 3296-23 | 1 | Nut-Nyloc 1/2-13 |
| 20 | 3231-2 | 2 | Bolt-Carriage 3/8-16 X 1 |
| 21 | 126-2475-03 | 1 | Decklift-Front |
| 22 | 116-0756 | 4 | Deck Lift Chain ASM |
| 22:1 | 1-633447 | 1 | Chain-Lift, Deck |
| 22:2 | 109-9065 | 1 | Screw-HH 7/16-14 X 2 |
| 22:3 | 32128-37 | 1 | Nut-Whizlock 7/16-14 |
| 23 | 116-0559 | 1 | Bolt-HH 1/2-13 X 4 Tap |
| 24 | 32128-37 | 6 | Nut-Whizlock 7/16-14 |
| 25 | 109-9066 | 4 | Yoke-Adjust, Deck |
| 26 | 322-47 | 4 | Screw-HH 5/16-18 X 1 1/4 |
| 27 | 3218-2 | 8 | Nut-Jam 5/16-18 |
| 28 | 116-0459-03 | 1 | Lift-Deck, Rear |
| 29 | 116-0780 | 2 | Screw-Shoulder HHF 1/2-13 X 1.12 |
| 30 | 116-0797-03 | 1 | Link-Lift, Deck |
| 31 | 116-0000 | 1 | Spring-Extension |
| 32 | 116-5584 | 1 | Pin-HOC |
| 33 | 116-1919-01 | 1 | Lever-Foot |
| 34 | 3256-28 | 2 | Washer-3/4 SAE |
| 35 | 92-7674 | 1 | Screw-Shcs 3/8-16 X 2.212 |
| 36 | 3231-7 | 4 | Bolt-Carriage 3/8-16 X 2 1/4 |


# Height-of-Cut Assembly No. 109-7438

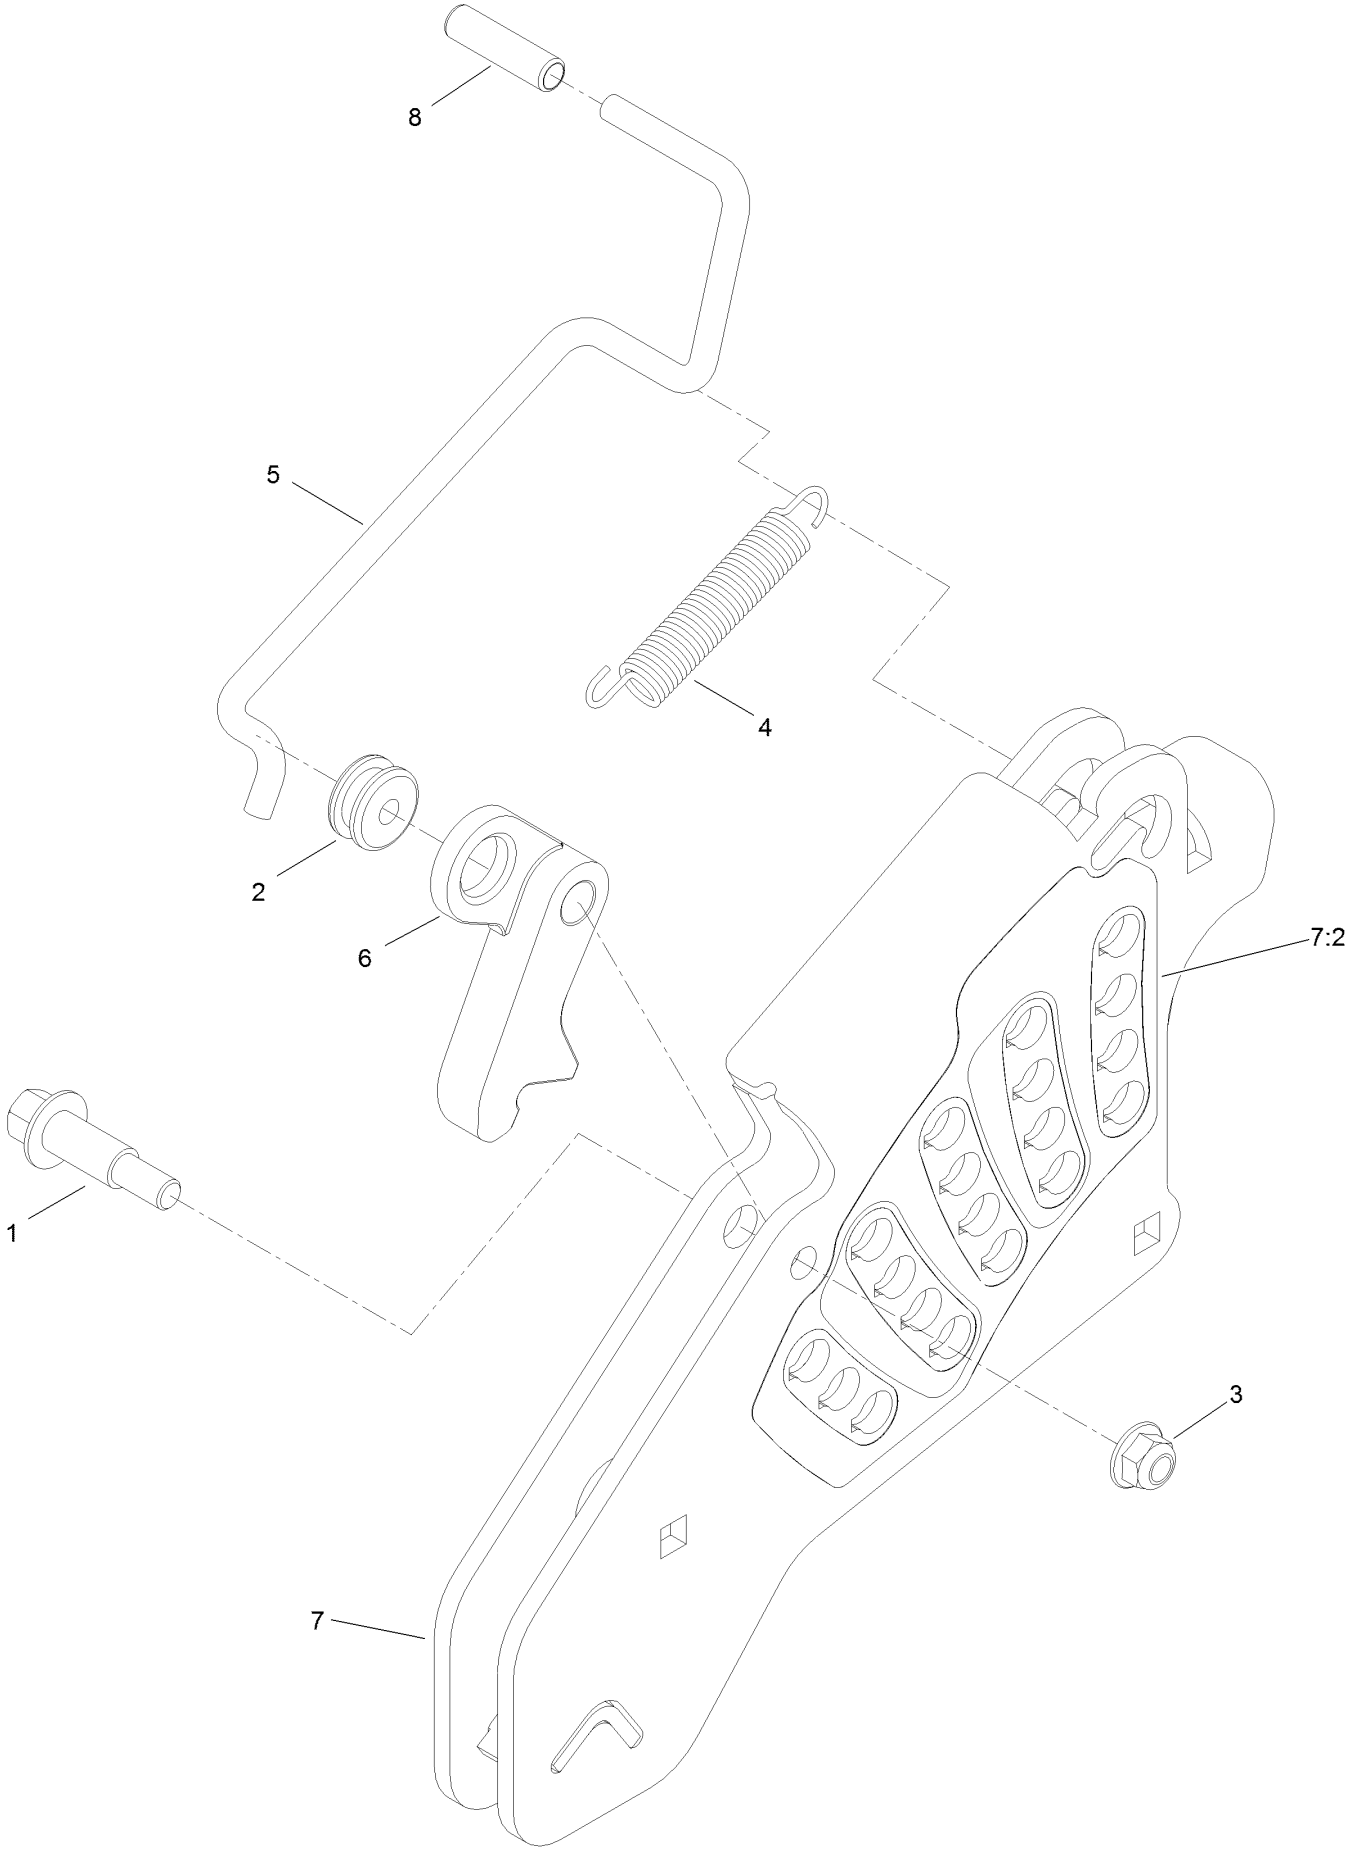

# Height-of-Cut Assembly No. 109-7438 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 62-1330 | 1 | Bolt-Shoulder |
| 2 | 109-7130 | 1 | Grommet |
| 3 | 104-8301 | 1 | Nut-HF, NI |
| 4 | 109-7124 | 1 | Spring-Extension |
| 5 | 109-7128 | 1 | Rod-Lock, Transport |
| 6 | 116-0118 | 1 | Pawl-Transport, HOC |
| 7 | 109-7335 | 1 | HOC Plate ASM |
| 7:2 | 126-4398 | 1 | Decal-HOC |
| 8 | 109-8250 | 1 | Grip-Lever |


# Console Assembly

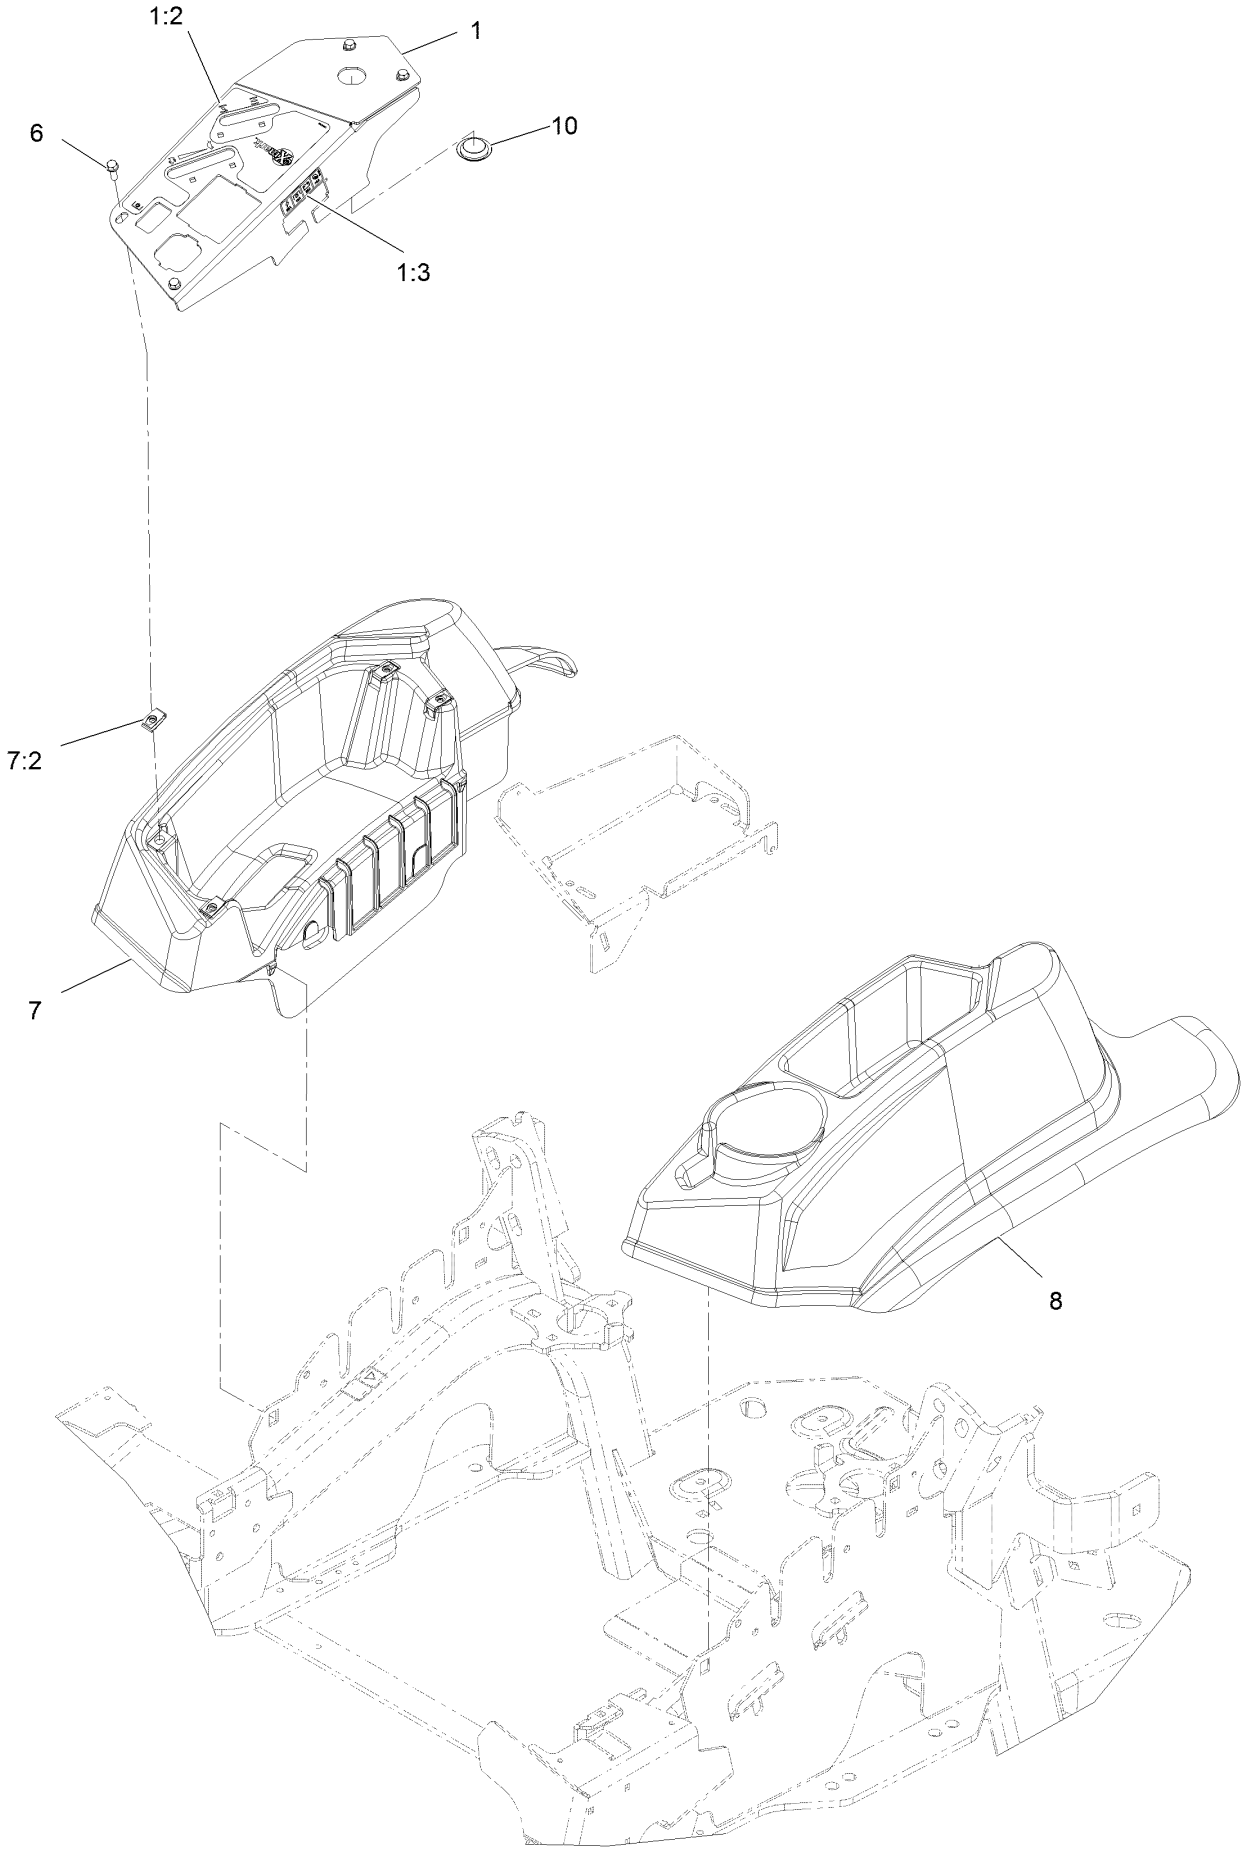

# Console Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 109-8484 | 1 | Console,Panel W/Decal |
| 1:2 | 116-8724 | 1 | Decal-Control Panel Non-EFI |
| 1:3 | 114-4466 | 1 | Decal-Fuses |
| 6 | 32105-15 | 4 | Screw-Machine 1/4-20 X 3/4 |
| 7 | 116-1278 | 1 | Console,RH As ASM |
| 7:2 | 107069 | 4 | Nut-Retainer-Panel 1/4-20 |
| 8 | 109-9457 | 1 | Console, LH As |
| 10 | 116-1875 | 1 | Plug-Plastic |

# Motion Control Assembly

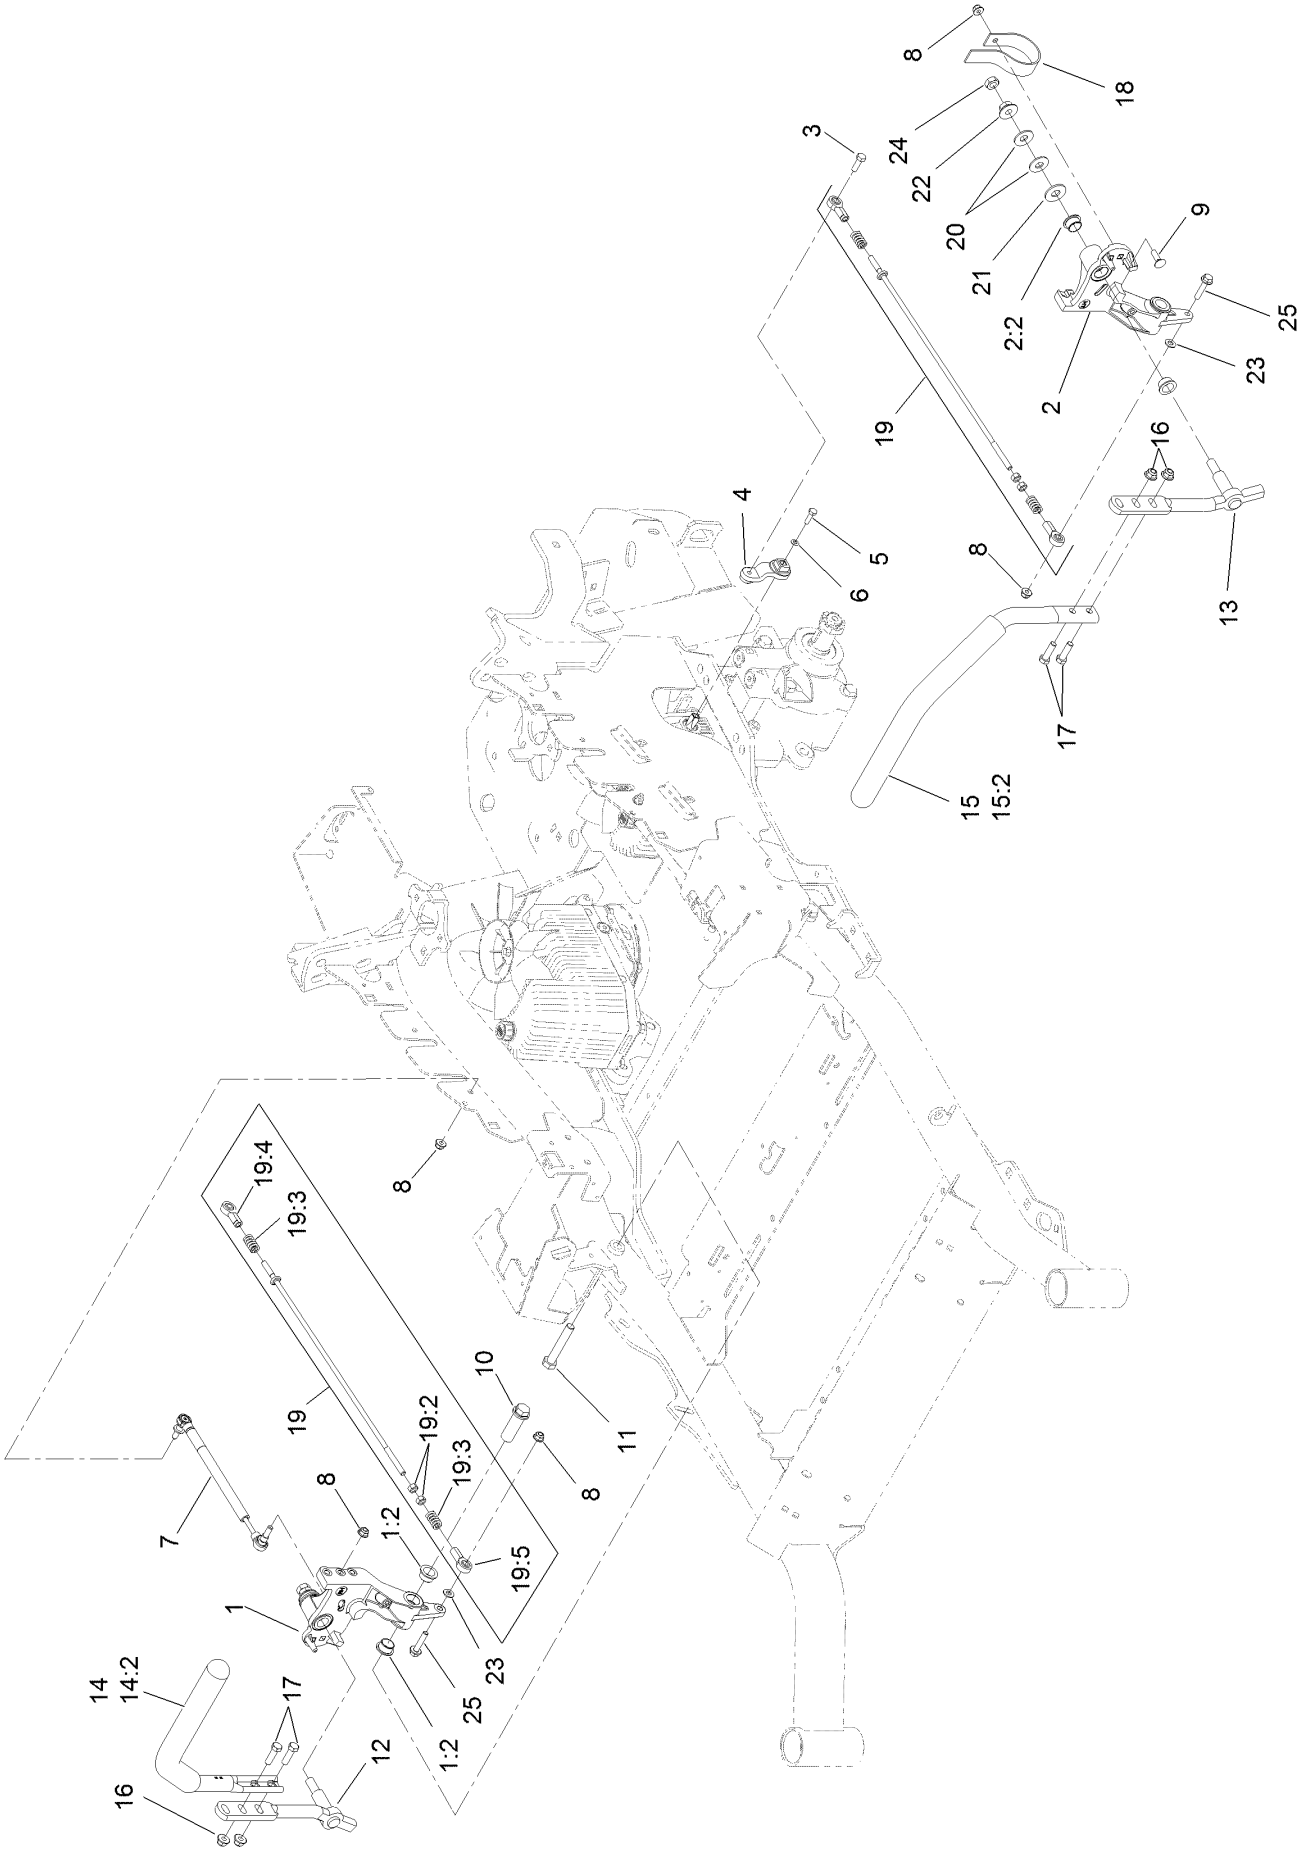


# Motion Control Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-0880 | 1 | RH Motion Control And Bushing ASM |
| 1:2 | 109-8054 | 4 | Bushing-Flange |
| 2 | 116-0881 | 1 | LH Motion Control And Bushing ASM |
| 2:2 | 109-8054 | 4 | Bushing-Flange |
| 3 | 116-0648 | 2 | Screw-HH, Thread Locking ● |
| 4 | 109-4581 | 2 | Arm-Control, Pump |
| 5 | 9080046 | 2 | Screw-HH ● |
| 6 | 1-303435 | 2 | Washer-Spring |
| 7 | 116-0027 | 2 | Damper-Control, Motion |
| 8 | 104-8300 | 8 | Nut-HF, NI |
| 9 | 3230-2 | 2 | Bolt-CARR |
| 10 | 109-5891 | 2 | Hub-Threaded |
| 11 | 325-12 | 2 | Screw-HH |
| 12 | 116-0039 | 1 | Lever-Control Motion, RH |
| 13 | 116-0040 | 1 | Lever-Control Motion, LH |
| 14 | 135-4371 | 1 | RH Handle ASM |
| 14:2 | 109-5668 | 1 | Grip-Lever, Control |
| 15 | 135-4373 | 1 | LH Handle ASM |
| 15:2 | 109-5668 | 1 | Grip-Lever, Control |
| 16 | 104-8301 | 4 | Nut-HF, NI |
| 17 | 323-7 | 4 | Screw-HH |
| 18 | 109-5575 | 2 | Spring-Leaf |
| 19 | 109-8107 | 2 | Pump Linkage Rear ASM |
| 19:2 | 3219-2 | 2 | Nut-Hex |
| 19:3 | 1-323245 | 2 | Spring-Compression |
| 19:4 | 1-633152 | 1 | Balljoint-LH |
| 19:5 | 1-543017 | 1 | Balljoint-RH |
| 20 | 109-9505 | 4 | Washer-Spring |
| 21 | 3256-6 | 2 | Washer-Flat |
| 22 | 32128-56 | 2 | Nut-HF |
| 23 | 3256-23 | 2 | Washer-Plain |
| 24 | 3218-5 | 2 | Nut-Jam |
| 25 | 115-1794 | 2 | Screw-HHF |

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

# Park Brake Assembly

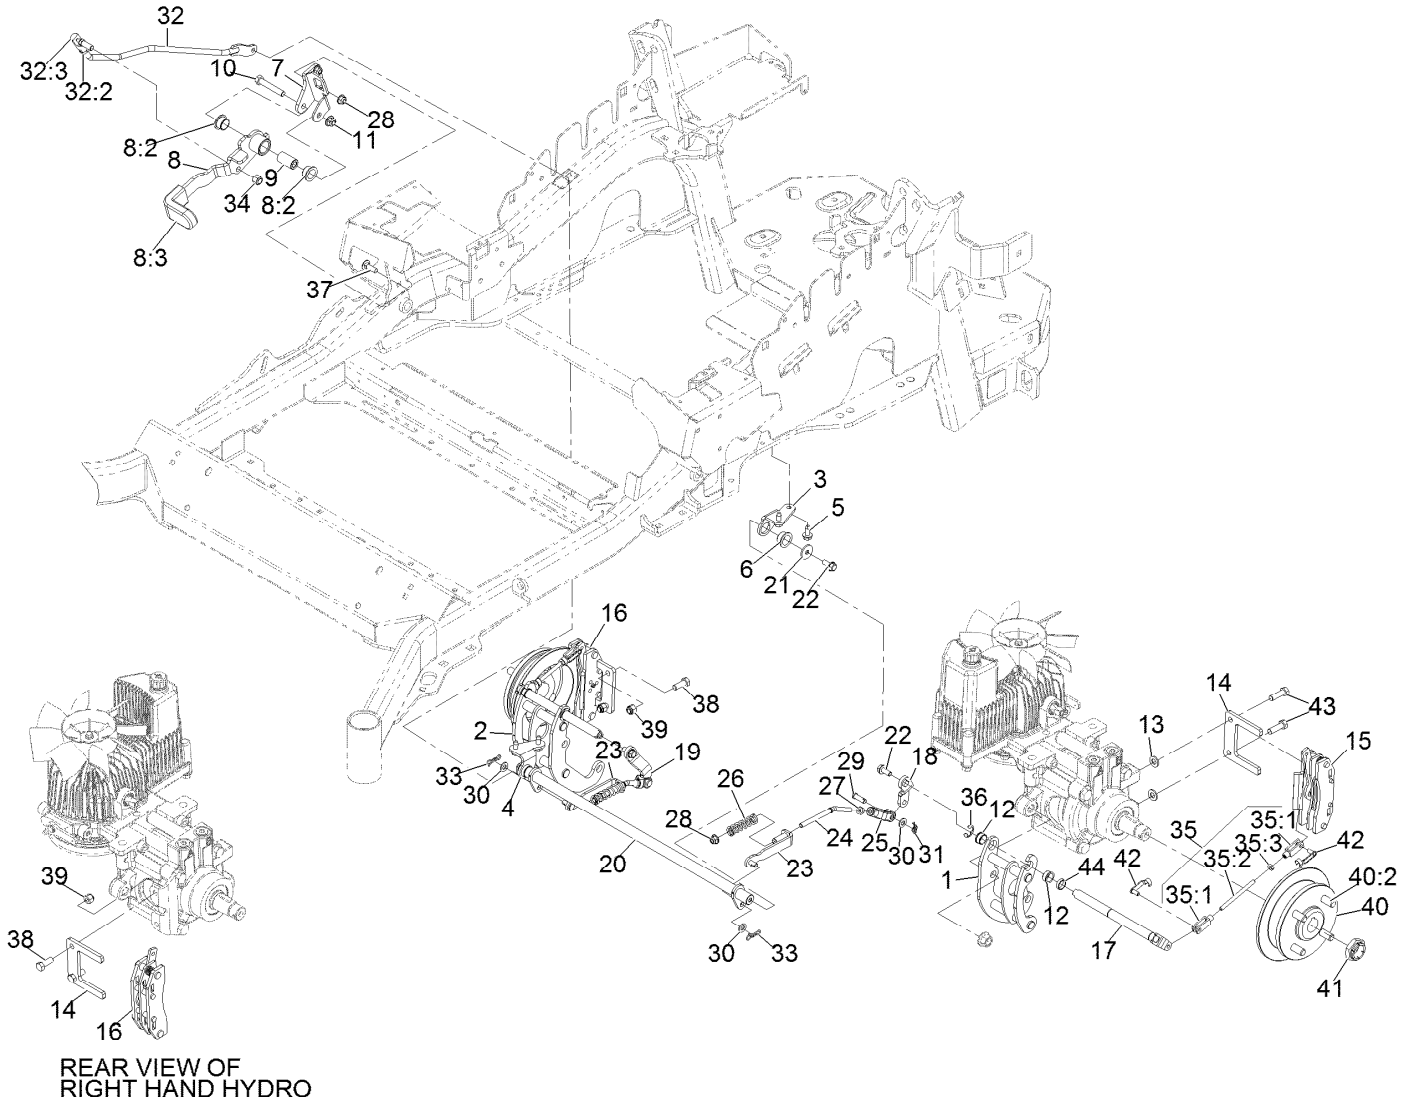



REAR VIEW OF
RIGHT HAND HYDRO

# Park Brake Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 126-4248 | 1 | Mount-Bellcrank, LH |
| 2 | 126-4249 | 1 | Mount-Bellcrank, RH |
| 3 | 116-9681 | 1 | Mount-Pivot, LH |
| 4 | 116-9682 | 1 | Mount-Pivot, RH |
| 5 | 32144-70 | 4 | Screw-HWH 5/16-18 X 3/4 Tf |
| 6 | 109-8054 | 2 | Bushing-Flanged |
| 7 | 116-9096-01 | 1 | Bracket-Mount |
| 8 | 132-9406 | 1 | Brake Lever ASM W/ Grip |
| 8:2 | 109-8054 | 2 | Bushing-Flanged |
| 8:3 | 132-4749 | 1 | Grip-Lever |
| 9 | 116-9117 | 1 | Handle-Pivot, Brake |
| 10 | 323-11 | 1 | Screw-HH 3/8-16 X 2 1/4 |
| 11 | 104-8301 | 1 | Nut-Nyloc 3/8-16 Flg |
| 12 | 126-6199 | 4 | Bushing |
| 13 | 3256-24 | 2 | Washer-3/8 SAE |
| 14 | 109-0958 | 2 | Plate-Mount, Brake |
| 15 | 109-2889 | 1 | Caliper-Brake |
| 16 | 116-9103 | 1 | Caliper-Brake, RH |
| 17 | 126-4251 | 2 | Bellcrank |
| 18 | 126-3715 | 1 | Arm-Inner, LH |
| 19 | 126-3716 | 1 | Arm-Inner, RH |
| 20 | 116-9080 | 1 | Shaft-Cross |
| 21 | 115-7109 | 2 | Washer-Flat |
| 22 | 98-9940 | 4 | Screw-HHF |
| 23 | 116-9608 | 2 | Bracket-L |
| 24 | 116-9086 | 2 | Linkage-Mid |
| 25 | 126-3693 | 2 | Yoke-Offset |
| 26 | 116-9085 | 2 | Spring-Compression |
| 27 | 3220-2 | 2 | Nut-Jam 5/16-24 |
| 28 | 104-8300 | 4 | Nut-Nyloc 5/16-18 Flg |
| 29 | 1-808280 | 2 | Pin-Clevis 5/16 X 1 49/64 |
| 30 | 3256-23 | 4 | Washer-5/16 SAE |
| 31 | 116-6639 | 2 | Pin-Cotter, Locking |
| 32 | 116-9102 | 1 | Front Linkage ASM |
| 32:2 | 94-7572 | 1 | End-Tie Rod, RH |
| 32:3 | 3220-3 | 1 | Nut-Jam 3/8-24 |
| 33 | 119-1415 | 2 | Pin-Cotter, Locking |
| 34 | 3296-6 | 1 | Nut-Nyloc 3/8-24 |
| 35 | 126-7587 | 2 | Rear Linkage ASM |
| 35:1 | 126-7588 | 2 | Yoke |
| 35:2 | 116-9069 | 1 | Linkage, Rear |
| 35:3 | 3220-1 | 1 | Nut-Jam 1/4-28 |
| 36 | 32120-19 | 2 | E-Ring |
| 37 | 3230-2 | 2 | Bolt-Carriage 5/16-18 X 1 |
| 38 | 323-6 | 2 | Screw-HH 3/8-16 X 1 |
| 39 | 3296-39 | 2 | Nut-Nyloc 3/8-16 |
| 40 | 116-1746 | 2 | Wheel Hub ASM |
| 40:2 | 116-1696 | 4 | Stud-Wheel |
| 41 | 116-1399 | 2 | Locknut |
| 42 | 126-6395 | 4 | Pin-Clevis, Spring |
| 43 | 92-5727 | 2 | Screw-HH 3/8-16 X 1 1/4 Patch Lock |
| 44 | 126-6200 | 2 | Spacer |


# Rear Wheel Assembly

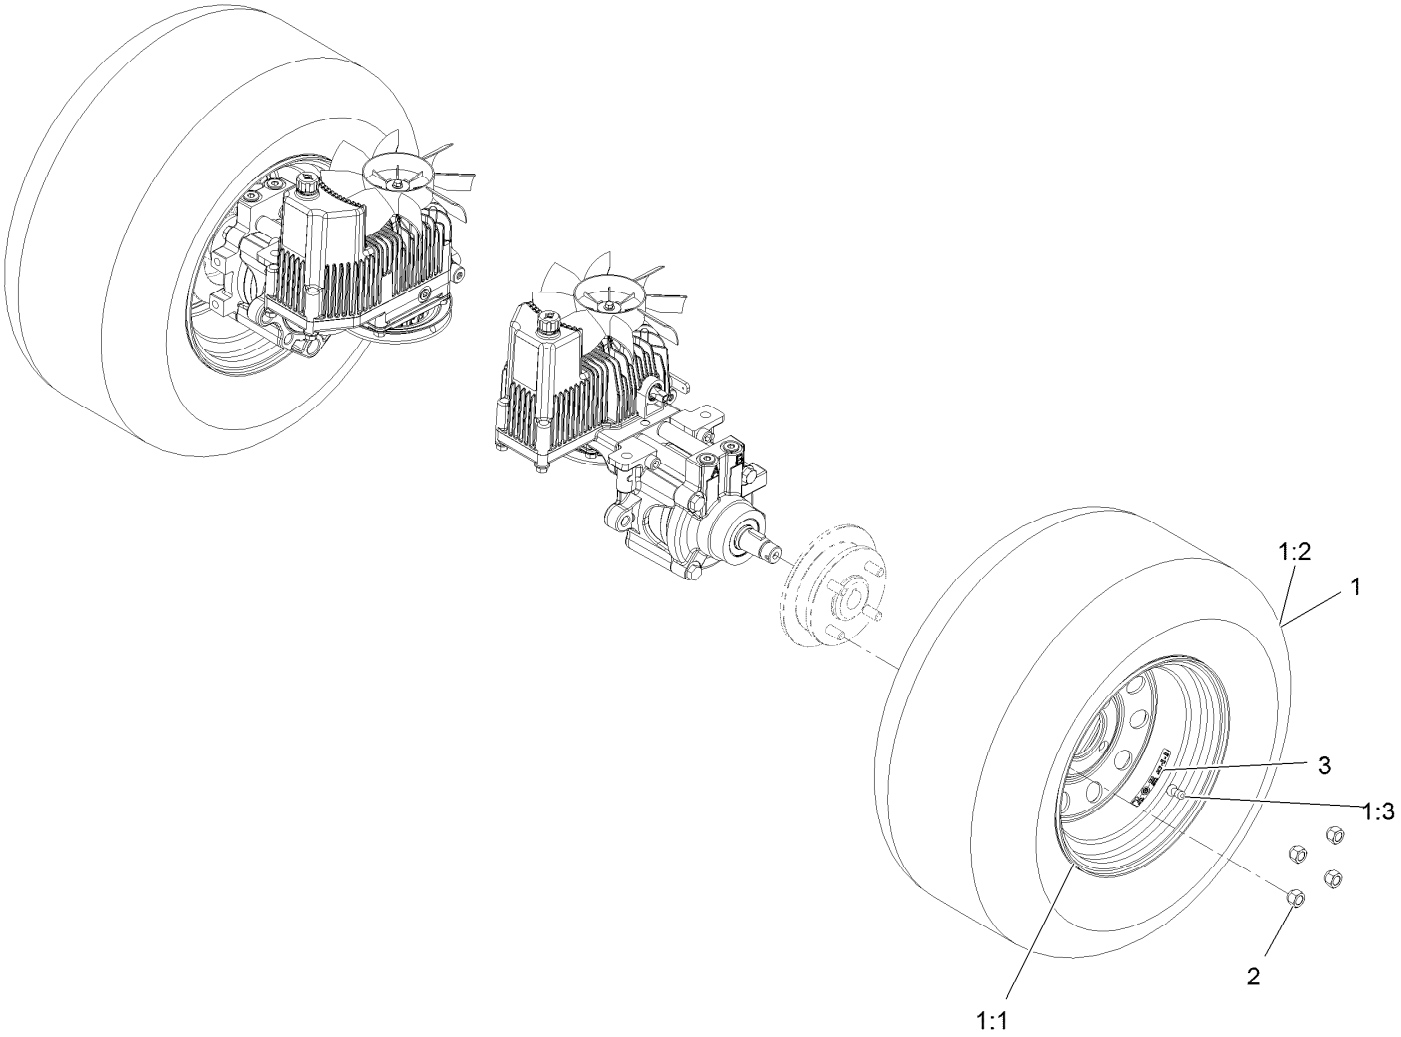

# Rear Wheel Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-8294 | 2 | ASM-Wheel And Tire |
| 1:1 | 116-8295 | 1 | ASM-Rim 60 |
| 1:2 | 116-8296 | 1 | Tire-Drive |
| 1:3 | 232-27 | 1 | Stem-Valve |
| 2 | 242-50 | 8 | Nut-Lug 1/2-20 |
| 3 | 126-2055 | 2 | Decal-Torque, Wheel Hub Lug |


# Seat Assembly

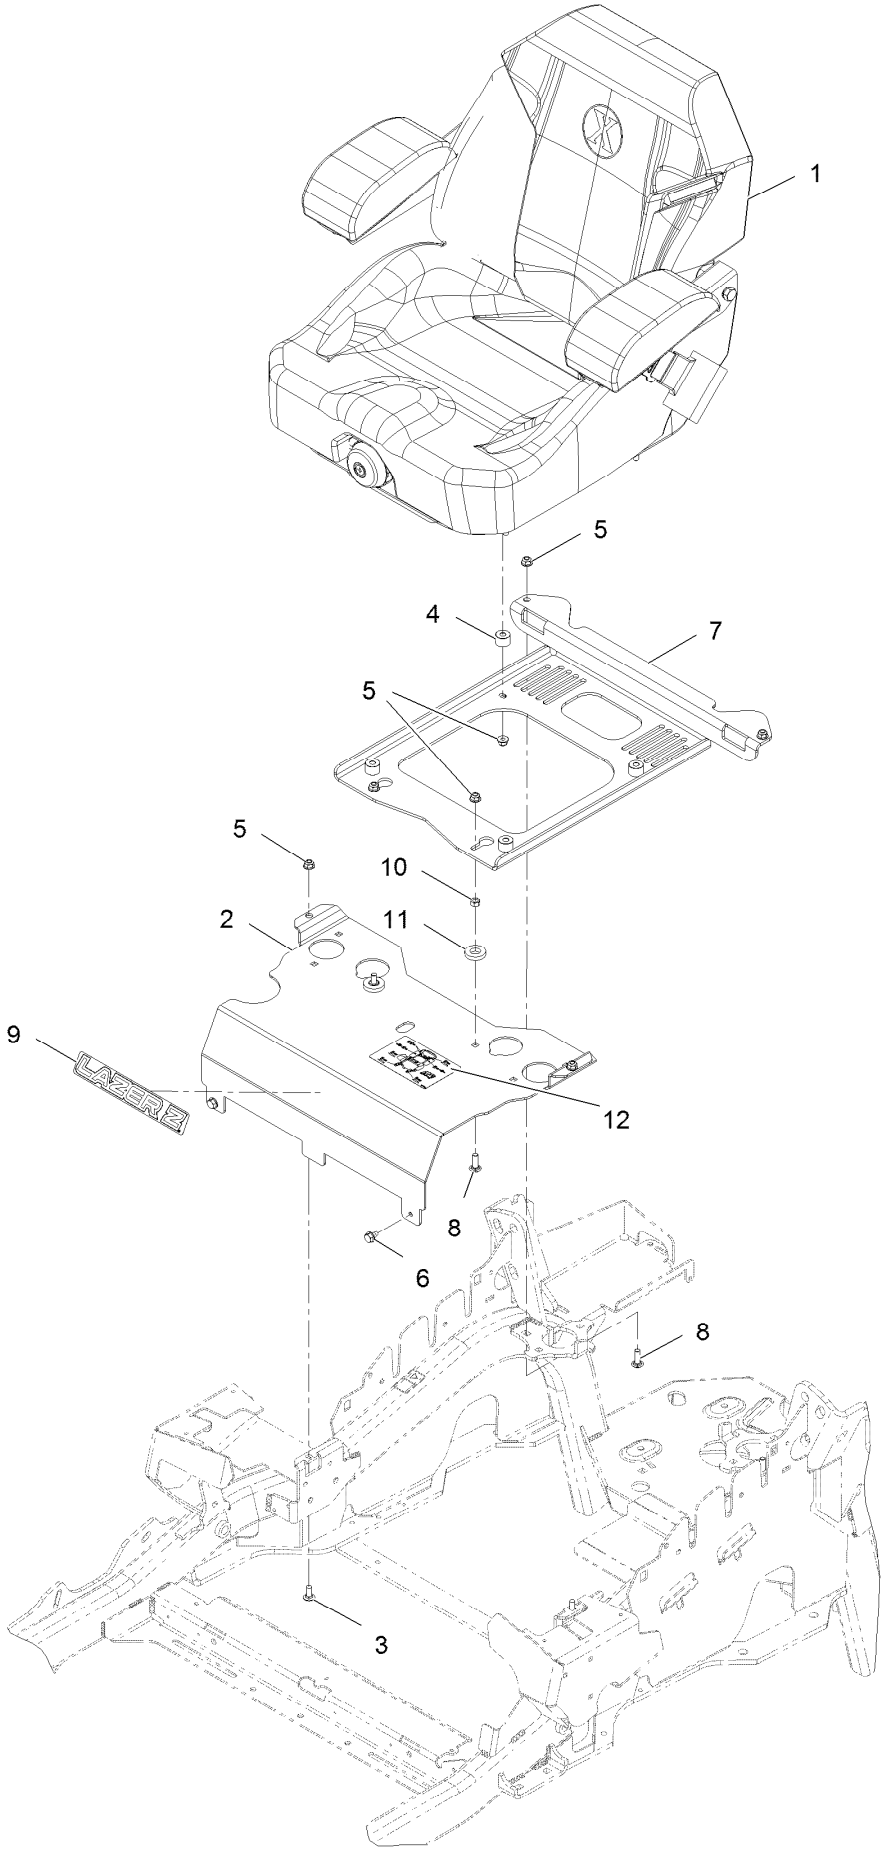

# Seat Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-8912 | 1 | Kit-Suspension Seat |
| 2 | 116-2130-03 | 1 | Panel-Front, Seat Mount |
| 3 | 3230-23 | 2 | Bolt-Carriage 5/16-18 X 3/4 Short Neck |
| 4 | 116-9329 | 4 | Spacer |
| 5 | 104-8300 | 10 | Nut-Nyloc 5/16-18 Flg |
| 6 | 9266934 | 2 | Screw-HWH 5/16 X 1/2 Tf |
| 7 | 116-0192-03 | 1 | Plate-Support, Seat |
| 8 | 3230-22 | 4 | Bolt-Carriage 5/16-18 X 1 Sp |
| 9 | 126-6574 | 1 | Decal, Lazer Model |
| 10 | 3217-6 | 2 | Nut-Hex 5/16-18 |
| 11 | 1-323539 | 2 | Spacer-Blade Drive |
| 12 | 114-4465 | 1 | Decal-Service Aid |

# Seat Assembly (cont.)

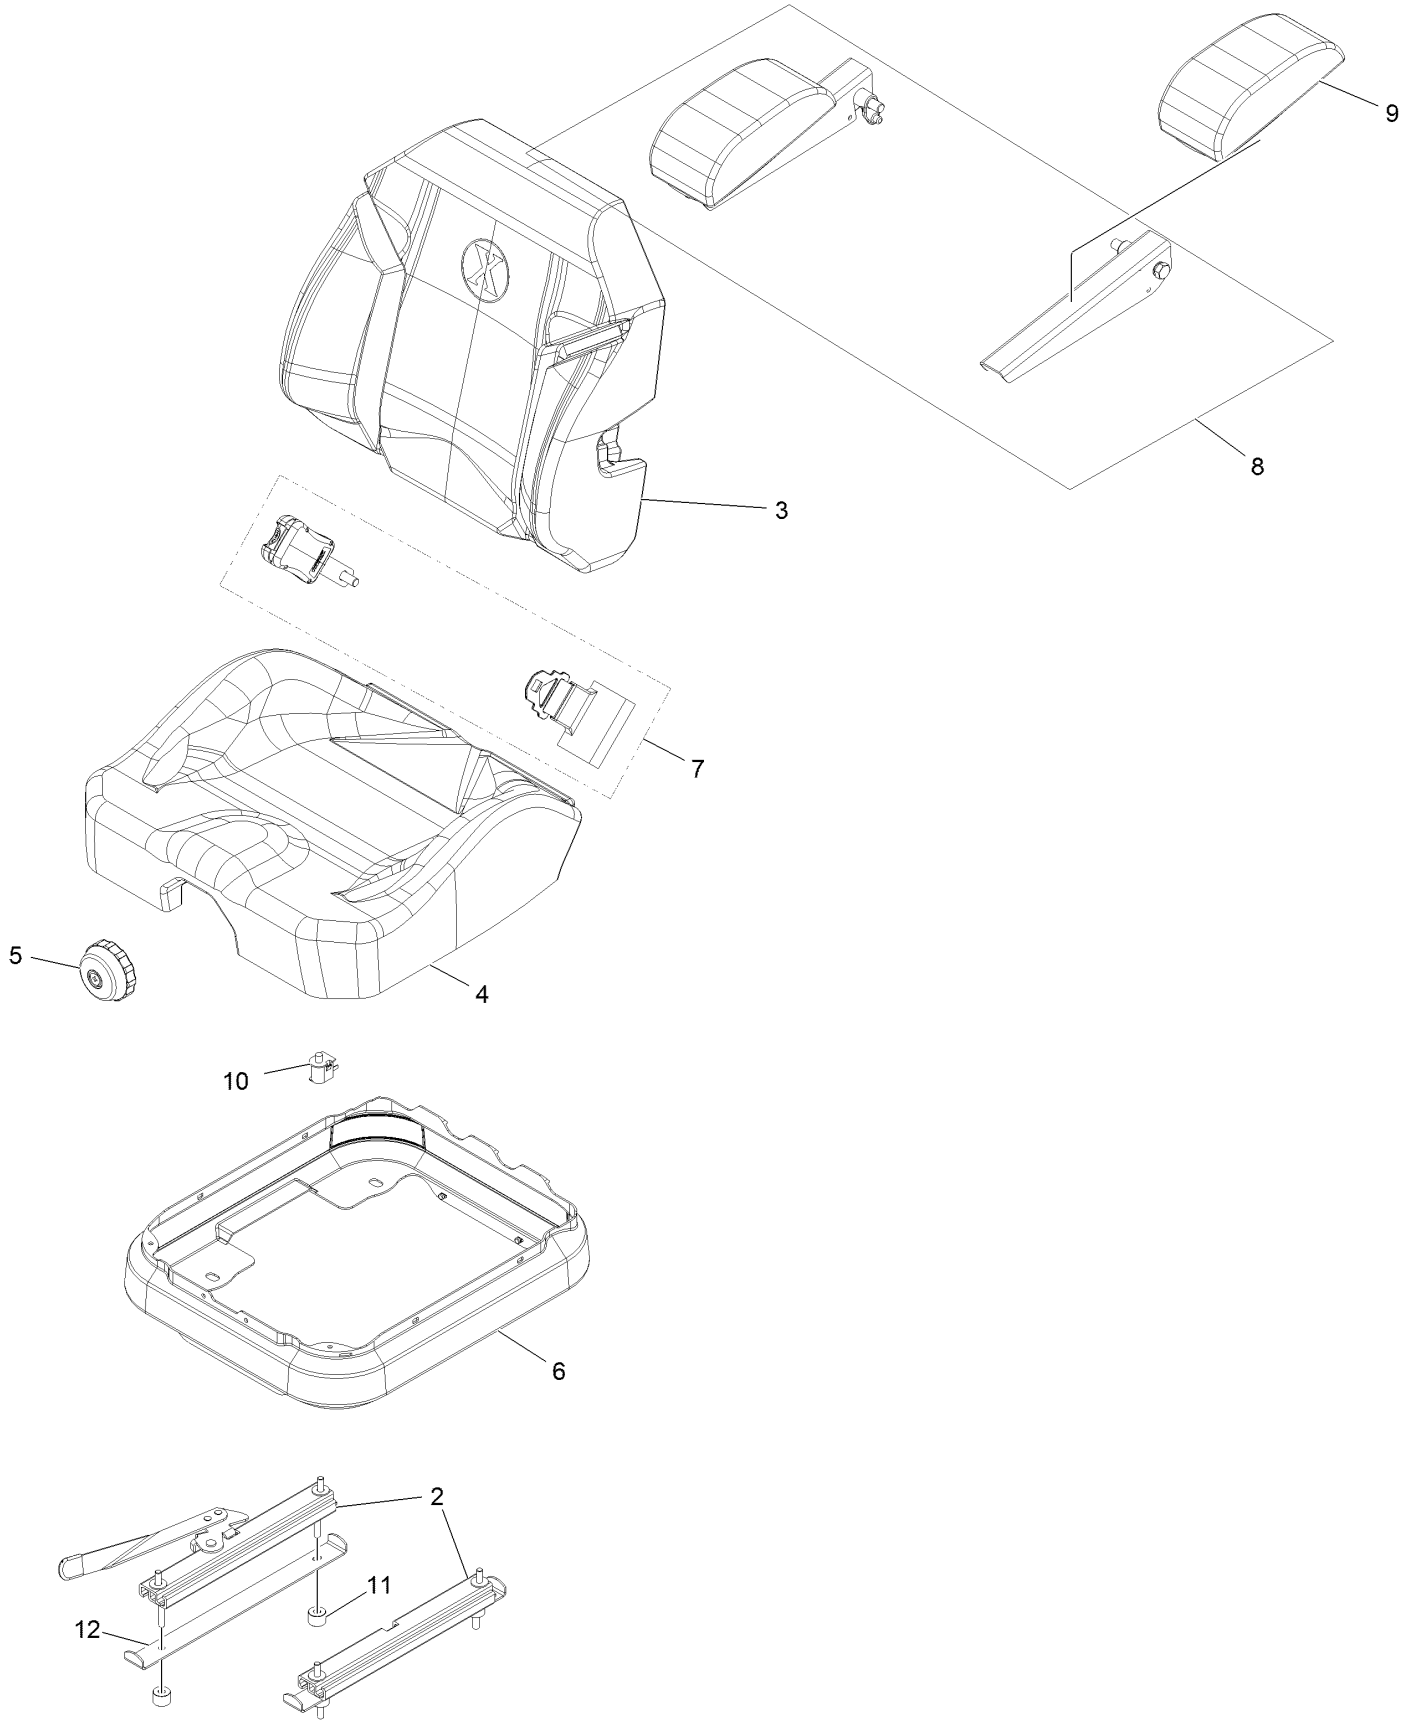


# Seat Assembly (cont.) (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 116-8910 | 1 | Seat Track Set |
| 3 | 116-8908 | 1 | Cover-Back 311463Vn500 |
| 4 | 116-8909 | 1 | Cover-Cushion 311464Vn500 |
| 5 | 116-8911 | 1 | Knob-Adjuster |
| 6 | 116-5659 | 1 | Cover-Suspension Bellows |
| 7 | 126-2061 | 1 | Seat Belt Service Kit |
| 8 | 116-8906 | 1 | Kit-Arm Rest Set |
| 9 | 116-8905 | 1 | Kit-Arm Rest Pads |
| 10 | 82-2190 | 1 | Switch |
| 11 | 116-9329 | 4 | Spacer |
| 12 | 126-9918-03 | 2 | Stop, Seat ● |

● Used on Diesel models only


# Fuel Assembly

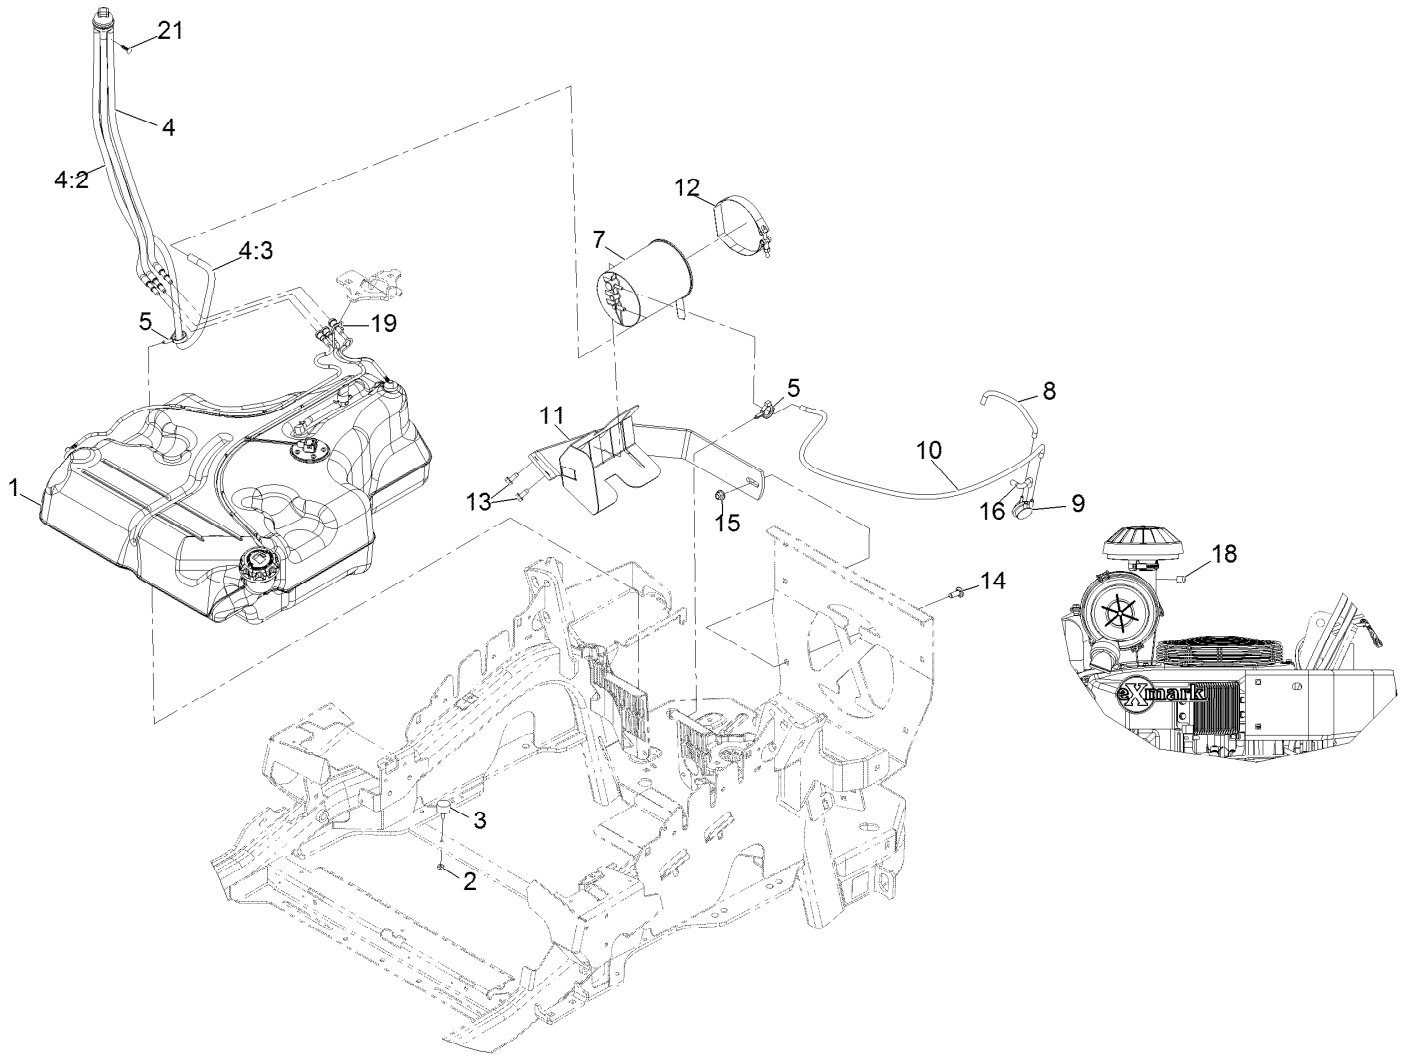

# Fuel Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 126-9156 | 1 | ASM-8 Gallon Fuel Tank |
| 2 | 3218-1 | 2 | Nut-Jam 1/4-20 |
| 3 | 1-523420 | 2 | Bumper |
| 4 | 127-0583 | 1 | Fuel Manifold Vent ASM |
| 4:2 | 109-0302 | 3 | Hose-Fuel Line 24" |
| 4:3 | 108-5376 | 1 | Hose-Fuel |
| 5 | 105-1853 | 2 | Clamp-Hose |
| 7 | 116-1442 | 1 | Canister-Carbon, 1200Cc |
| 8 | 135-3415 | 1 | Hose-Vent,Formed |
| 9 | 116-2232 | 1 | Valve-Control, Vacuum |
| 10 | 135-3417 | 1 | Hose,Vent,Formed |
| 11 | 116-1433-03 | 1 | Mount-Canister |
| 12 | 116-2228 | 1 | Clamp, T-Bolt |
| 13 | 32144-70 | 2 | Screw-HWH 5/16-18 X 3/4 Tf |
| 14 | 3231-22 | 1 | Bolt-Carriage 3/8-16 X 1 |
| 15 | 104-8301 | 1 | Nut-Nyloc 3/8-16 Flg |
| 16 | 119-8502 | 1 | Hose-Vent, Formed |
| 18 | 116-4464 | 1 | Plug-Port |
| 19 | 116-6005 | 1 | Retainer-Line, Vapor |
| 21 | 125-8067 | 1 | Plug-Plastic |


# Fuel Tank Assembly

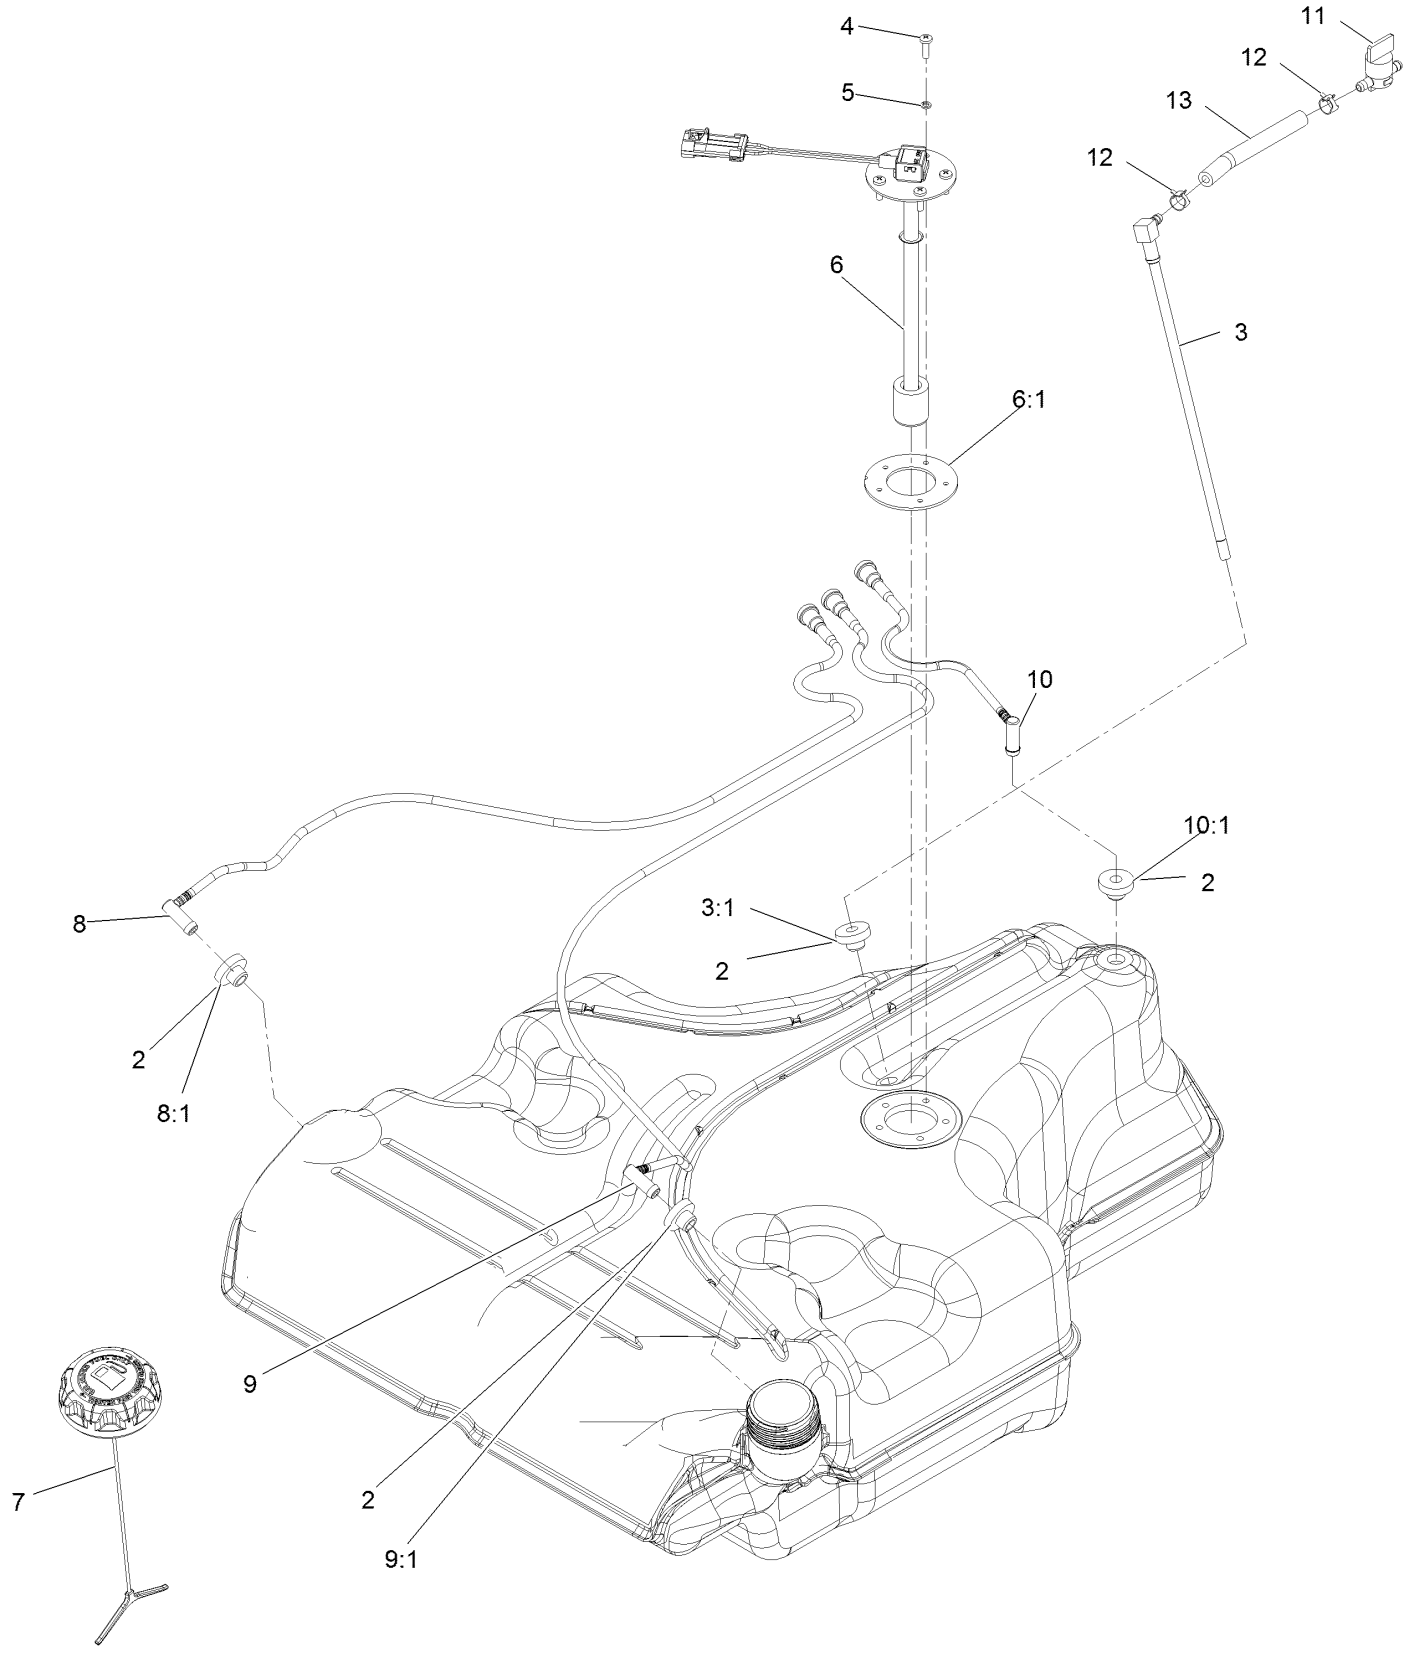

# Fuel Tank Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 46-6560 | 4 | Bushing |
| 3 | 116-2459 | 1 | Fuel Line Kit (With Grommet) |
| 3:1 | 46-6560 | 1 | Bushing |
| 4 | 3290-500 | 5 | Screw-PPH #10-24 X 5/8 |
| 5 | 3253-17 | 5 | Washer-Lock 3/16 |
| 6 | 126-3949 | 1 | Sender-Level, Fuel (W/Gasket) |
| 6:1 | 126-3950 | 1 | Gasket-Sender |
| 7 | 126-1789 | 1 | Cap-Fuel, Ratcheting |
| 8 | 116-2460 | 1 | RH Vent Line Kit (With Grommet) |
| 8:1 | 46-6560 | 1 | Bushing |
| 9 | 116-2461 | 1 | LH Vent Line Kit (With Grommet) |
| 9:1 | 46-6560 | 1 | Bushing |
| 10 | 116-2462 | 1 | Rear Vent Line Kit (With Grommet) |
| 10:1 | 46-6560 | 1 | Bushing |
| 11 | 1-603770 | 1 | Valve-Fuel |
| 12 | 2412-98 | 2 | Clamp-Hose |
| 13 | 109-0650 | 1 | Hose-Fuel |

# Engine Assembly

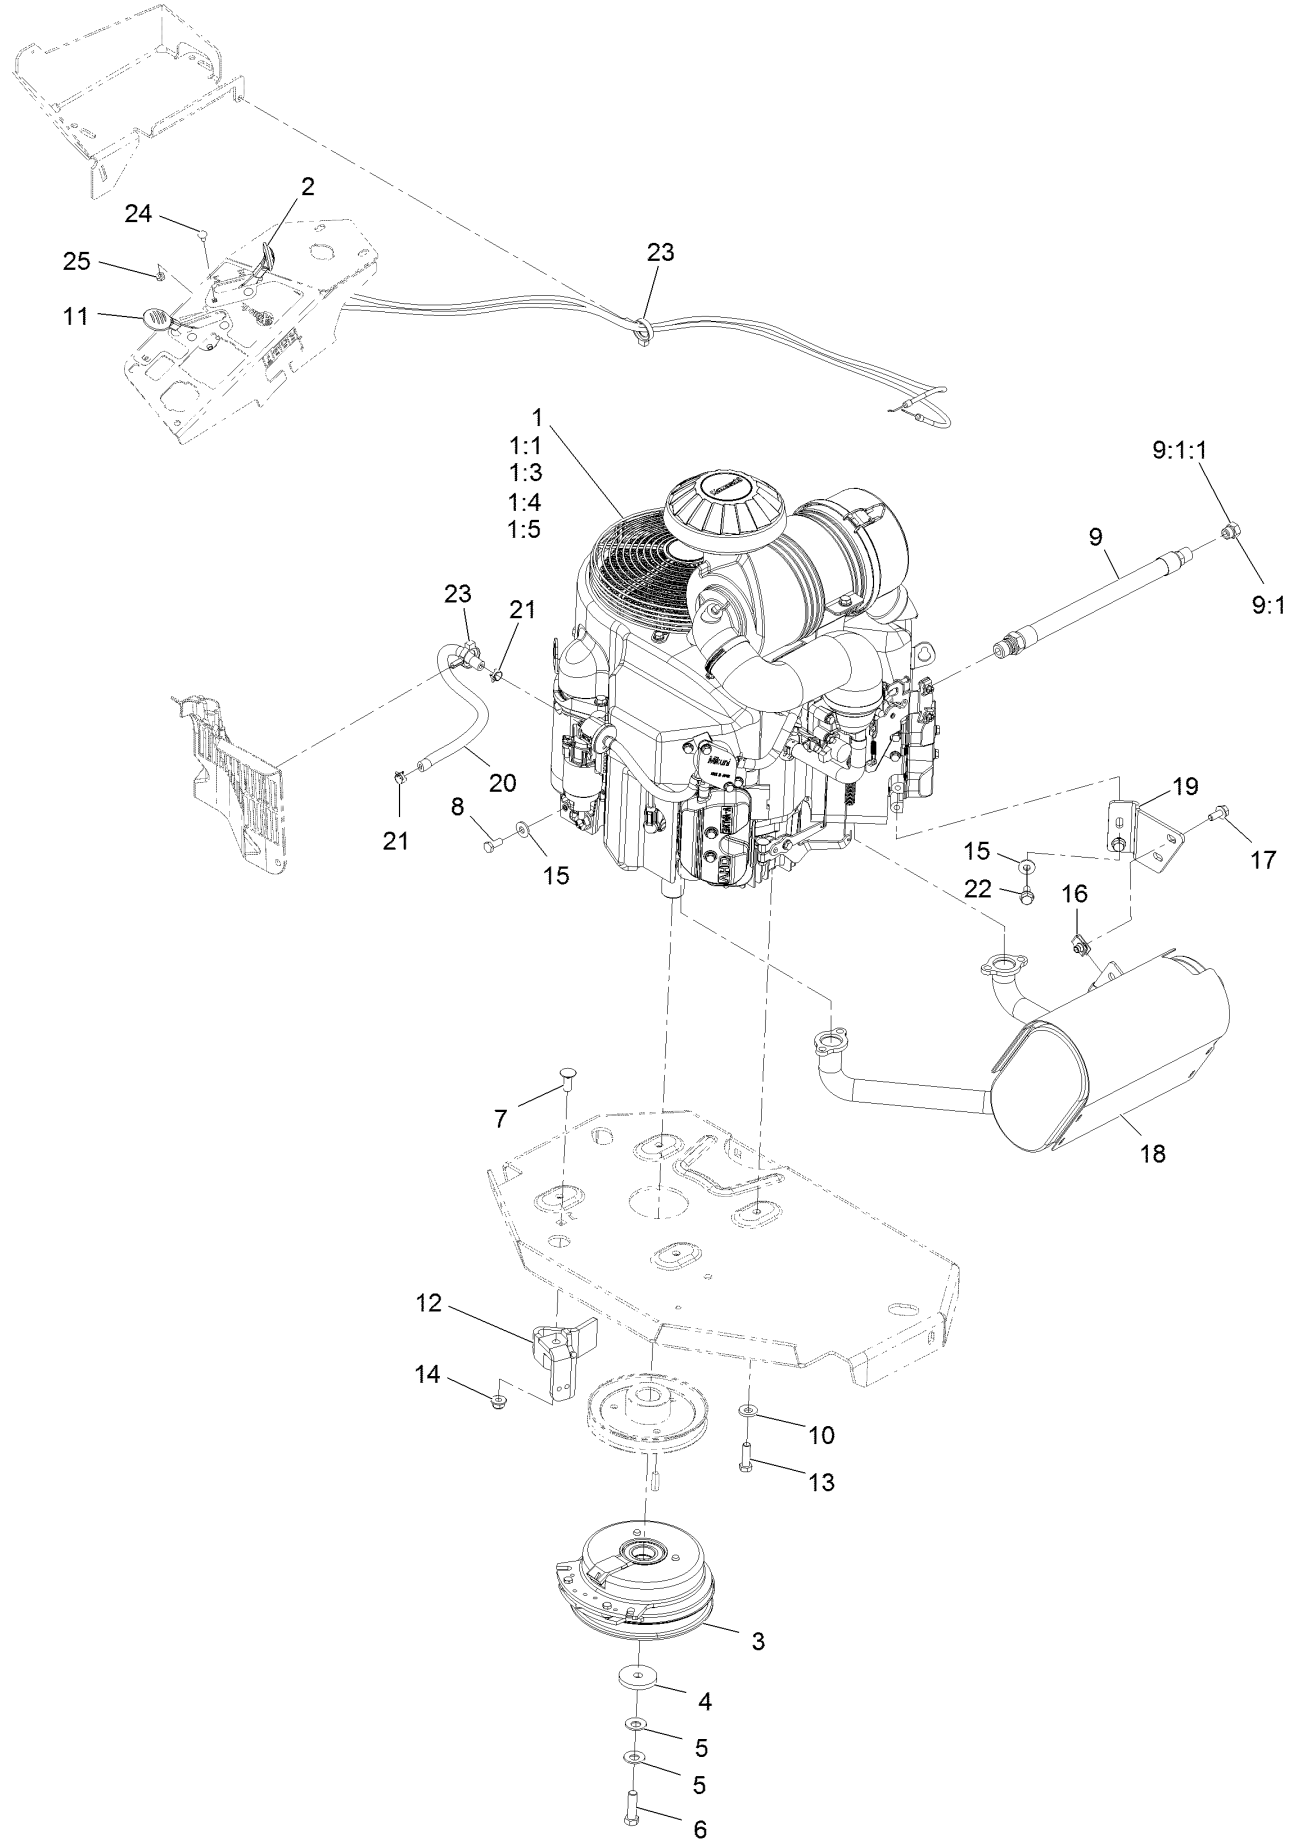


# Engine Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Engine-Kawasaki Fx751 ■▲ |
| 1:1 | | 1 | Kawasaki 49065-2078 Engine Oil Filter ■▲ |
| 1:3 | | 1 | Kawasaki 49019-7001 Fuel Filter ■▲ |
| 1:4 | | 1 | Kawasaki 11013-7039 Safety Filter ■▲ |
| 1:5 | | 1 | Kawasaki 11013-7038 Air Filter ■▲ |
| 2 | 109-8167 | 1 | ASM, Choke Cable |
| 3 | 116-1620 | 1 | Clutch Kit |
| 4 | 109-6919 | 1 | Washer-Clutch |
| 5 | 1-603610 | 2 | Washer-Spring |
| 6 | 109-9761 | 1 | Screw-HH ◆ |
| 7 | 3231-22 | 1 | Screw-CARR |
| 8 | 33114-020 | 1 | Screw-HH |
| 9 | 116-4924 | 1 | Engine Oil Drain Hose ASM |
| 9:1 | 353-508 | 1 | Plug-HH ● |
| 9:1:1 | 237-42 | 1 | O-Ring |
| 10 | 98-5975 | 4 | Washer-Belleville |
| 11 | 116-1972 | 1 | ASM,Throttle Cable |
| 12 | 116-2612-01 | 1 | Clutch-Anchor |
| 13 | 323-7 | 4 | Screw-HH |
| 14 | 104-8301 | 1 | Nut-HF, NI |
| 15 | 1-303334 | 3 | Washer-Spring |
| 16 | 94-2413 | 2 | Nut-U |
| 17 | 3234-5 | 2 | Screw-HHF |
| 18 | 116-1712 | 1 | Muffler |
| 19 | 116-0203 | 1 | Bracket-Muffler |
| 20 | 109-0296 | 1 | Hose-Fuel |
| 21 | 2412-98 | 2 | Clamp-Hose |
| 22 | 95-4184 | 2 | Screw-HHF |
| 23 | 105-1853 | 2 | Clamp-Hose |
| 24 | 1-807513 | 4 | Bolt-CARR |
| 25 | 3296-2 | 4 | Nut-Lock, NI |

● Torque to 24-26 ft-lb
▲ Obtain parts from www.kawpowerepc.com
◆ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.
■ Not serviced separately

# Hydraulic Assembly

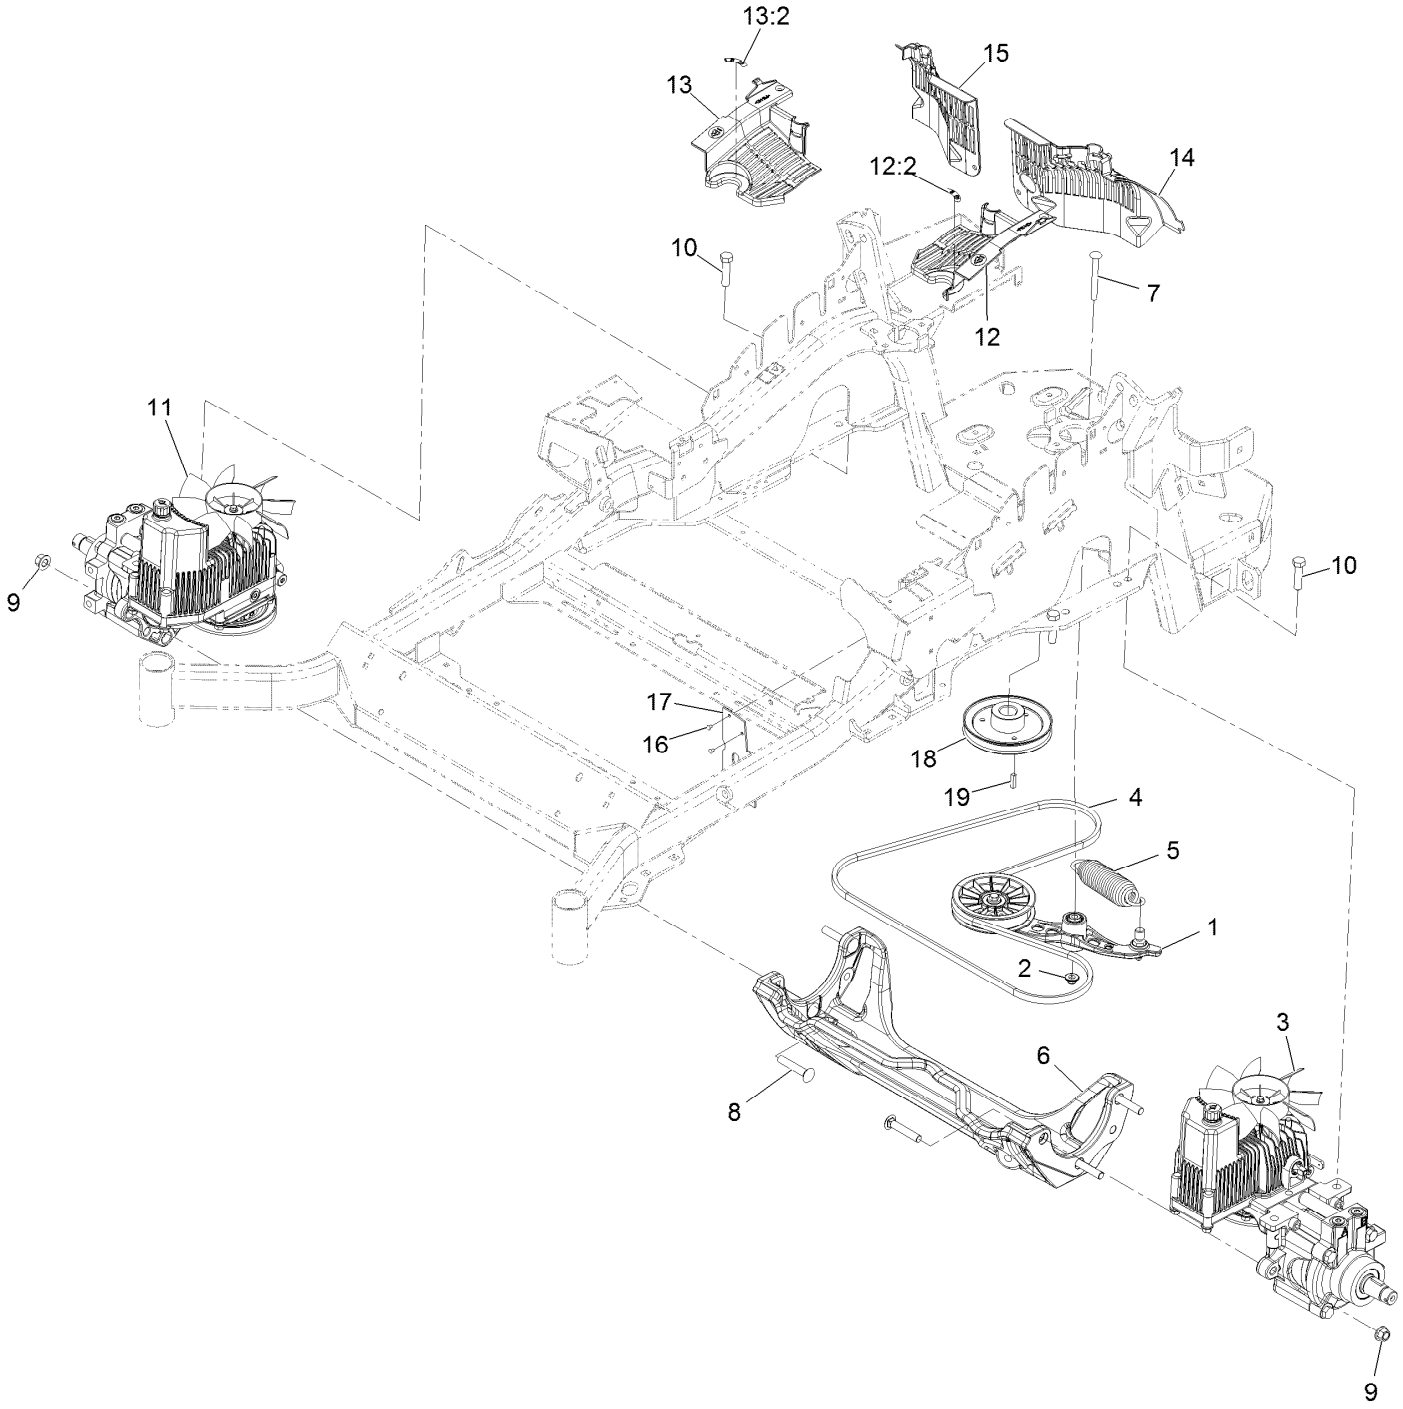


# Hydraulic Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-1255 | 1 | Pump Idler ASM |
| 2 | 109-6658 | 1 | Nut-Nyloc 3/8-16 Flg |
| 3 | 126-1323 | 1 | LH Hydro ASM (12Cc W/ Shock) |
| 4 | 126-9835 | 1 | Belt-V |
| 5 | 116-6317 | 1 | Spring-Extension |
| 6 | 116-7558 | 1 | Cradle-Hydro |
| 7 | 116-1502 | 1 | Bolt-Carriage Shoulder 3/8-16 X 3 1/2 |
| 8 | 126-0095 | 6 | Bolt-Carriage 1/2-13 X 2 3/4 |
| 9 | 99-5107 | 6 | Nut-Lock 1/2-13 |
| 10 | 325-8 | 4 | Screw-HH 1/2-13 X 1 1/4 |
| 11 | 126-1324 | 1 | RH Hydro ASM (12Cc W/ Shock) |
| 12 | 116-0170 | 1 | LH Hydro Guard ASM |
| 12:2 | 116-8726 | 1 | Decal-Oil, Hydro |
| 13 | 116-0171 | 1 | RH Hydro Guard ASM |
| 13:2 | 116-8726 | 1 | Decal-Oil, Hydro |
| 14 | 109-9057 | 1 | Guard-Hydro, Rear (LH) |
| 15 | 109-9058 | 1 | Guard-Hydro, Rear (RH) |
| 16 | 1-803035 | 2 | Rivet 3/16 X 1/4 |
| 17 | 116-2362 | 1 | Deflector-Air Flow |
| 18 | 109-9905 | 1 | Sheave |
| 19 | 1-807259 | 1 | Key-Machine 1/4 X 1/4 X 1 |
| 99 | 109-9828 | 1 | Bottle-Oil, 32Oz Hydraulic ● |
| 99 | 116-0164 | 1 | Filter-Hydro ● |
| 99 | 116-1218 | 1 | Bottle,Oil 1 Gallon Hydraulic ● |
| 99 | 126-8103 | 1 | Kit, Hydro Service ● |
| 99:1 | 116-1218 | 1 | Bottle,Oil 1 Gallon Hydraulic ● |
| 99:3 | 116-0164 | 2 | Filter-Hydro ● |

● Not illustrated

# LH Hydro Assembly No. 126-1323

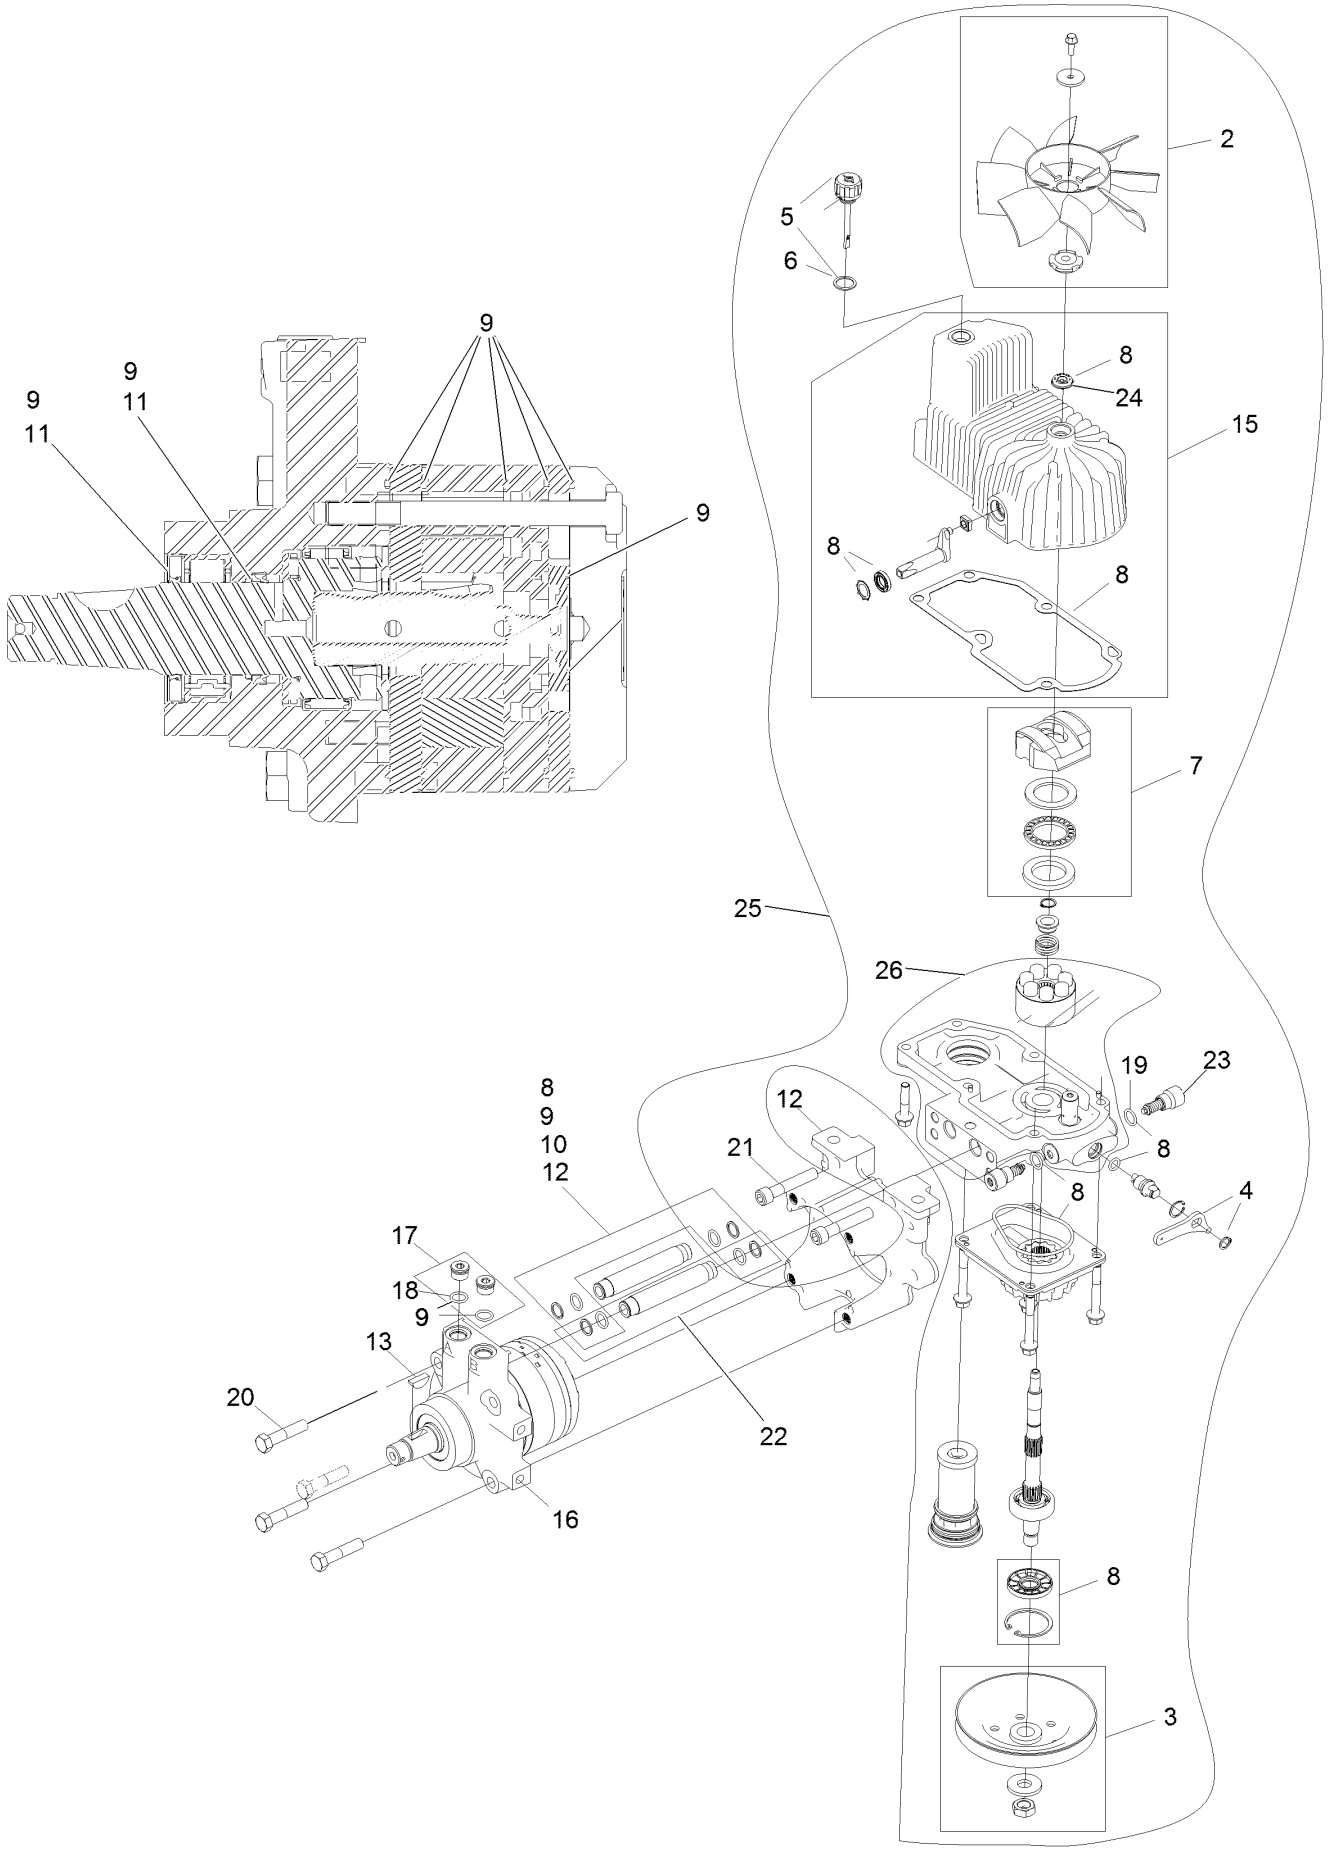


# LH Hydro Assembly No. 126-1323 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 116-0233 | 1 | Fan Kit |
| 3 | 116-0234 | 1 | Pulley Kit |
| 4 | 116-0235 | 1 | Handle-Bypass Valve, Hydro |
| 5 | 116-0236 | 1 | Dipstick-Hydro W/Gasket |
| 6 | 116-0237 | 1 | Gasket-Dipstick, Hydro |
| 7 | 116-1367 | 1 | Swash Block Kit |
| 8 | 116-1368 | 1 | Pump Seal Kit |
| 9 | 116-1369 | 1 | Motor Seal Kit |
| 10 | 116-1370 | 1 | Tube Seal Kit |
| 11 | 116-1371 | 1 | Output Shaft Seal Kit |
| 12 | 116-5469 | 1 | Nose Cup-Uht |
| 13 | 3257-42 | 1 | Key-Woodruff 5/16 X 1 |
| 15 | 116-3287 | 1 | Housing-LH |
| 16 | 116-8915 | 1 | Motor-Hydraulic LH 240Cc |
| 17 | 116-7901 | 1 | Magnetic Plugs Service Kit |
| 18 | 76-1900 | 2 | O-Ring |
| 19 | 116-8662 | 2 | O-Ring-Check Valve |
| 20 | 116-8974 | 4 | Screw-HH 1/2-20 X 2 1/4 |
| 21 | 116-8975 | 2 | Screw-HSH 1/2-20 X 2 3/4 |
| 22 | 116-9922 | 2 | Hydraulic Tube Kit |
| 23 | 126-7466 | 2 | Shock Valve, 12Cc Hydro |
| 24 | 126-7711 | 1 | Seal-Fan Drive |
| 25 | 135-6827 | 1 | Kit, Pump Section 12Cc LH |
| 26 | 135-6831 | 1 | Kit, Rotating Grp 12Cc LH |
| 99 | 116-1373 | 1 | Flow Test Kit ● |
| 99 | 116-4245 | 1 | Puller-Pulley ● |

● Not illustrated

# RH Hydro Assembly No. 126-1324

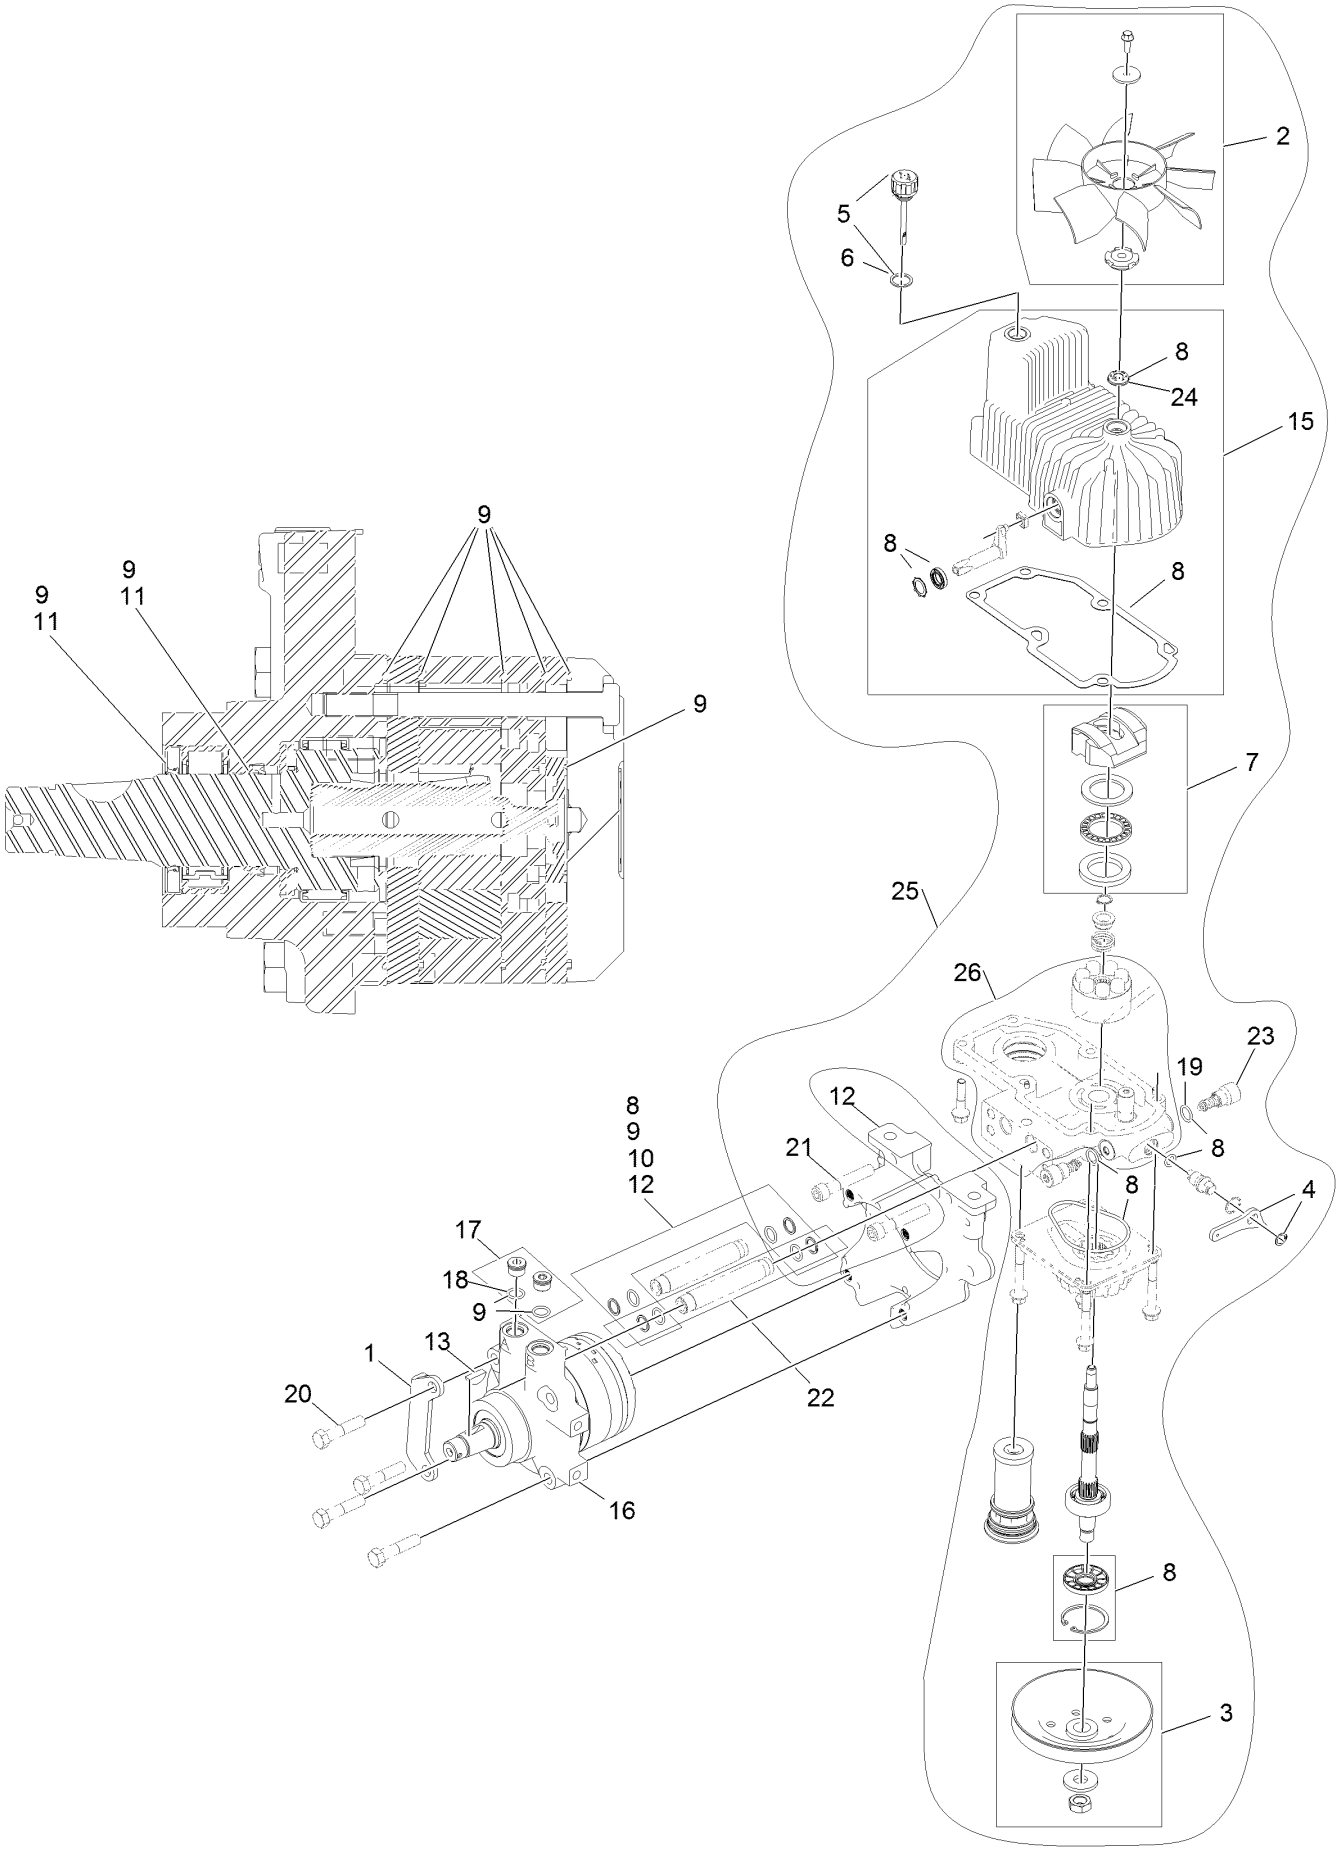


# RH Hydro Assembly No. 126-1324 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-9063 | 1 | Mount-Shoe, Horse |
| 2 | 116-0233 | 1 | Fan Kit |
| 3 | 116-0234 | 1 | Pulley Kit |
| 4 | 116-0235 | 1 | Handle-Bypass Valve, Hydro |
| 5 | 116-0236 | 1 | Dipstick-Hydro W/Gasket |
| 6 | 116-0237 | 1 | Gasket-Dipstick, Hydro |
| 7 | 116-1367 | 1 | Swash Block Kit |
| 8 | 116-1368 | 1 | Pump Seal Kit |
| 9 | 116-1369 | 1 | Motor Seal Kit |
| 10 | 116-1370 | 1 | Tube Seal Kit |
| 11 | 116-1371 | 1 | Output Shaft Seal Kit |
| 12 | 116-5469 | 1 | Nose Cup-Uht |
| 13 | 3257-42 | 1 | Key-Woodruff 5/16 X 1 |
| 15 | 116-3288 | 1 | Housing-RH |
| 16 | 116-8916 | 1 | Motor-Hydraulic RH 240Cc |
| 17 | 116-7901 | 1 | Magnetic Plugs Service Kit |
| 18 | 76-1900 | 2 | O-Ring |
| 19 | 116-8662 | 2 | O-Ring-Check Valve |
| 20 | 116-8974 | 4 | Screw-HH 1/2-20 X 2 1/4 |
| 21 | 116-8975 | 2 | Screw-HSH 1/2-20 X 2 3/4 |
| 22 | 116-9922 | 2 | Hydraulic Tube Kit |
| 23 | 126-7466 | 2 | Shock Valve, 12Cc Hydro |
| 24 | 126-7711 | 1 | Seal-Fan Drive |
| 25 | 135-6826 | 1 | Kit, Pump Section 12Cc RH |
| 26 | 135-6830 | 1 | Kit, Rotating Grp 12Cc RH |
| 99 | 116-1373 | 1 | Flow Test Kit ● |
| 99 | 116-4245 | 1 | Puller-Pulley ● |

● Not illustrated


# Pump Idler Assembly No. 116-1255

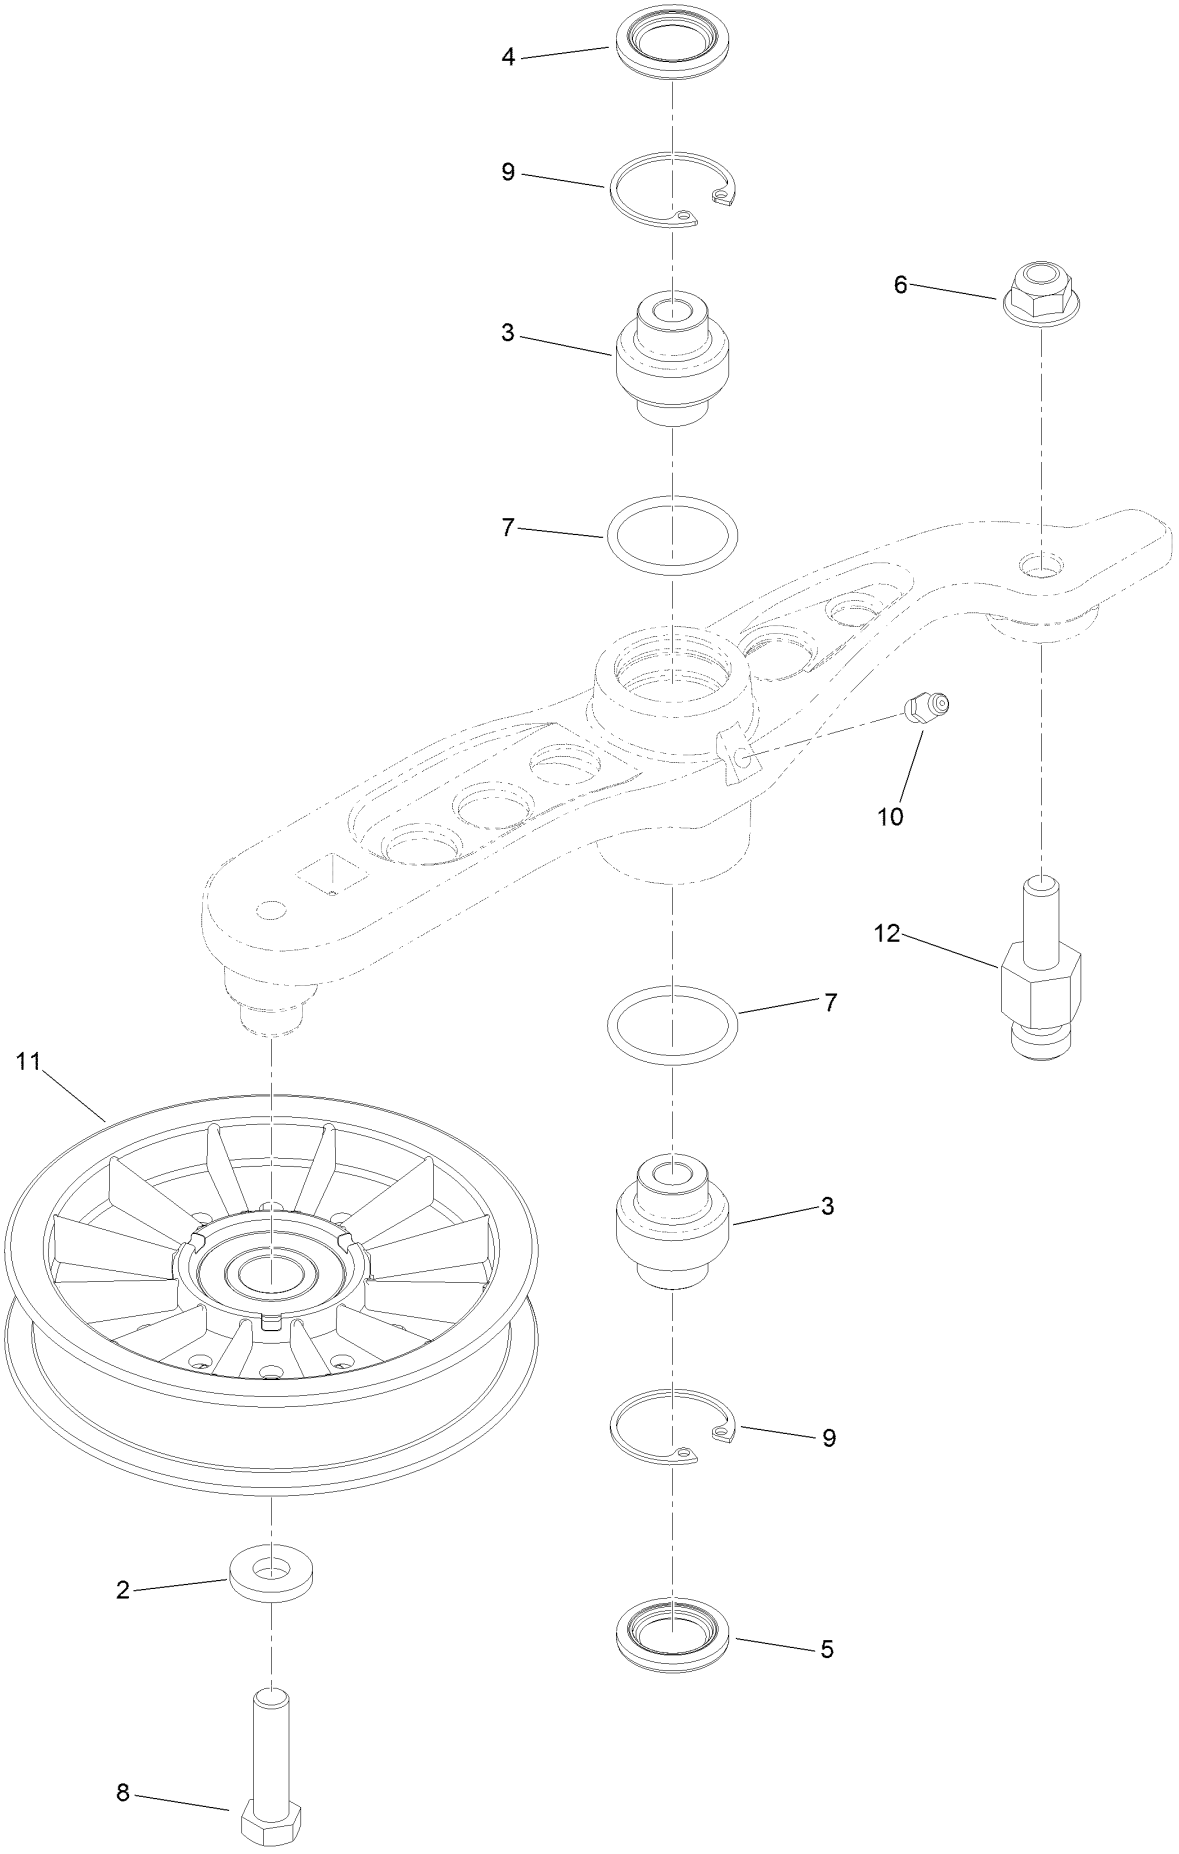

# Pump Idler Assembly No. 116-1255 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 43-0940 | 1 | Spacer |
| 3 | 103-3504 | 2 | Bearing-Spherical |
| 4 | 103-3505 | 1 | Seal-Lip, Double |
| 5 | 103-3506 | 1 | Seal-Lip, Single |
| 6 | 109-6658 | 1 | Nut-Flange, NI |
| 7 | 106-7159 | 2 | O-Ring |
| 8 | 323-8 | 1 | Screw-HH |
| 9 | 32120-10 | 2 | Ring-Snap |
| 10 | 302-19 | 1 | Fitting-Grease |
| 11 | 109-8076 | 1 | Pulley-Idler |
| 12 | 132-4724 | 1 | Pin-Anchor, Spring |

# Electrical Assembly

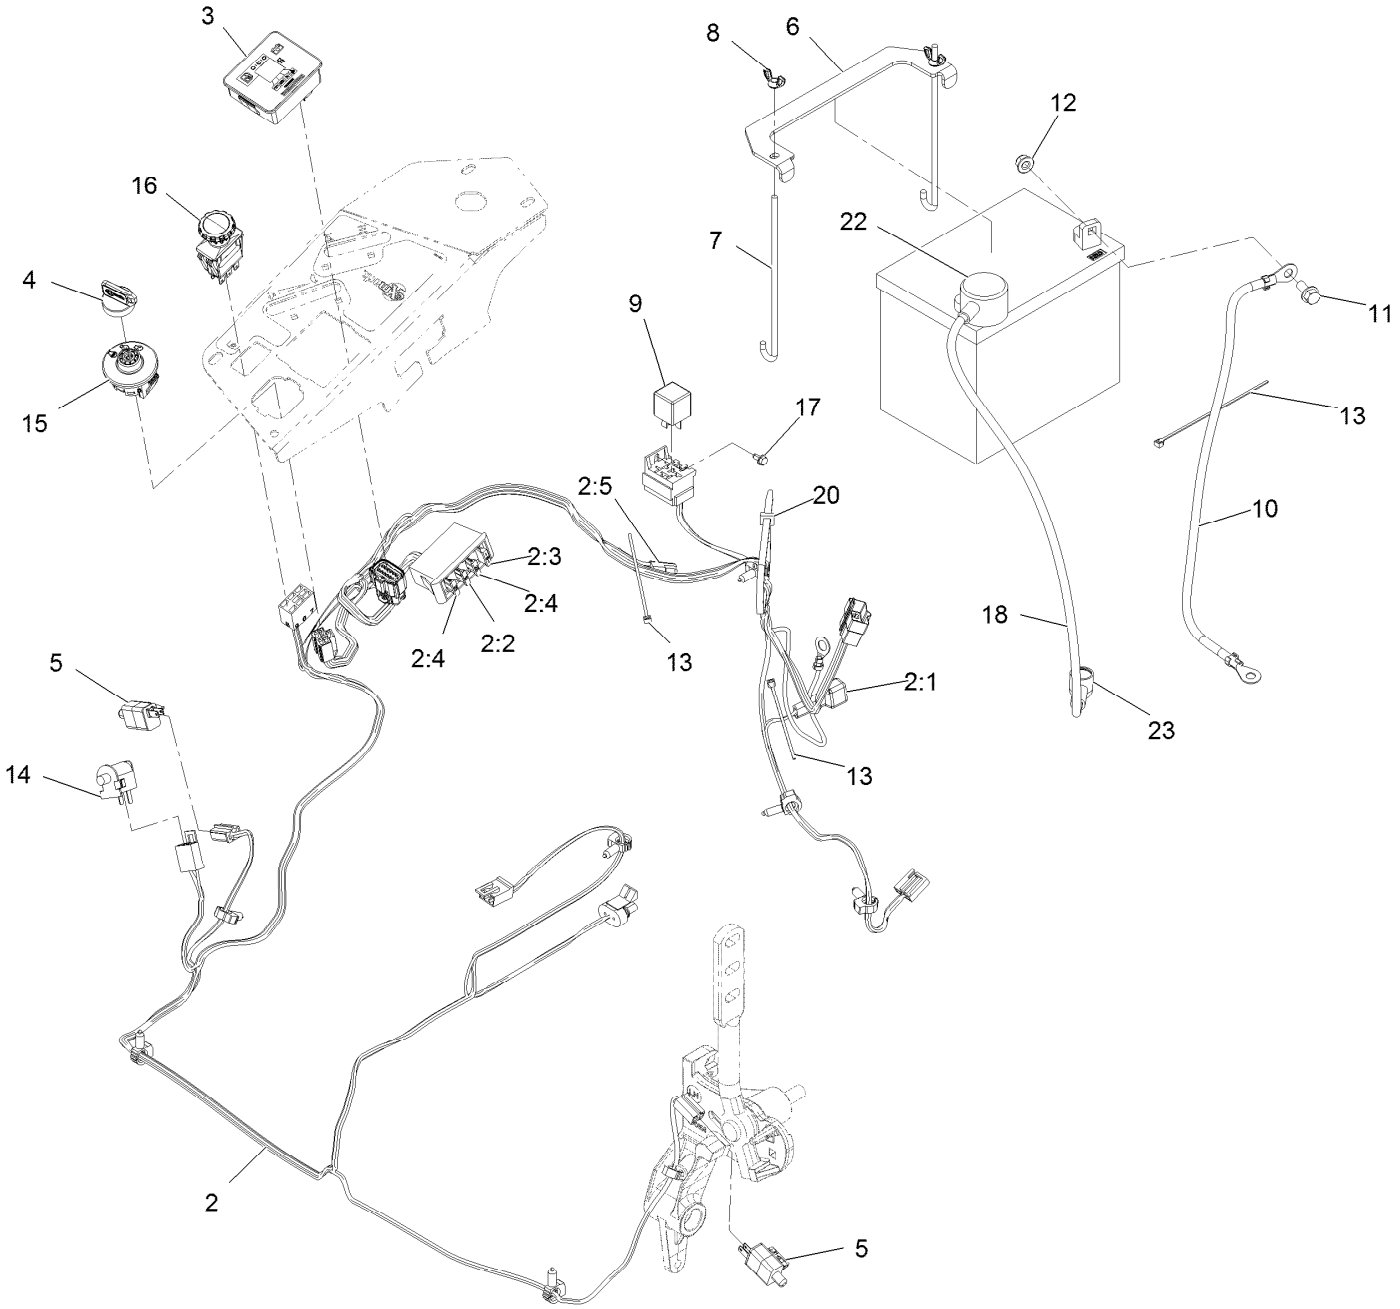

# Electrical Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 116-6009 | 1 | Harness-Wire, Main ● |
| 2:1 | 103-3895 | 1 | Diode |
| 2:2 | 218-578 | 1 | Fuse-Blade, 10 Amp |
| 2:3 | 109355 | 1 | Fuse-Blade, 15 Amp |
| 2:4 | 109102 | 2 | Fuse-Blade, 25 Amp |
| 2:5 | 116-0053 | 1 | Cap-Plug |
| 3 | 117-3882 | 1 | Fuel/Hour Meter ASM |
| 4 | 1-603511 | 1 | Key-Ignition |
| 4 | 103-2106 | 1 | Key-Exmark Logo |
| 5 | 110-6765 | 2 | Switch |
| 6 | 116-0042-03 | 1 | Strap-Tie Down, Battery |
| 7 | 1-633651 | 2 | Bolt-Holddown |
| 8 | 1-543792 | 2 | Wingnut-Nyloc 1/4-20 |
| 9 | 1-643275 | 1 | Relay-12Vdc 40 Amp |
| 10 | 114-1218 | 1 | Cable-Battery, Negative |
| 11 | 3234-5 | 2 | Screw-HH Flg 5/16-18 X 3/4 |
| 12 | 104-8300 | 2 | Nut-Nyloc 5/16-18 Flg |
| 13 | 1-303287 | 3 | Tie-Cable 5 1/2 (Small) |
| 14 | 82-2190 | 1 | Switch |
| 15 | 137-4100 | 1 | Switch-Ignition |
| 16 | 116-0124 | 1 | Switch-PTO, 10 Amp |
| 17 | 104-2065 | 1 | Screw-HWH #10-24 X 3/8 |
| 18 | 115-3864 | 1 | Cable-Battery, Positive |
| 20 | 1-303335 | 1 | Tie-Cable 7 15/16 (Large) |
| 22 | 109-2407 | 1 | Insulator-Battery |
| 23 | 1-543393 | 1 | Insulator-Solenoid |

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

## Notes:

## Notes:

## Notes:

# MAXIMIZE THE PERFORMANCE OF YOUR EXMARK MACHINE.




## EXMARK® PREMIUM ENGINE OIL

Exmark now offers a family of engine oil viscosities to perform well in any environment. Each viscosity has the same synthetic formulation to give you what you need in punishing conditions. We designed each grade to the highest quality, making it ideal even for diesel applications. Coupled with Exmark Premium Fuel Treatment, we have the performance products to make your machine hum.

### EXMARK PREMIUM ENGINE OIL SAE 30/10W-30

- Meets zero shear requirements of a straight grade SAE 30 as well as the cold temp properties of a 10W-30.
- Most versatile oil in the industry.
- Superior corrosion protection over conventional oil - even in corrosive, humid environments.

### EXMARK PREMIUM ENGINE OIL SAE 10W-50

- Full synthetic formulation gives you peak performance. Don't settle for less.
- Wide span multi-grade combines easy starting in cold weather with maximum protection in high temperature operation.
- Reduce friction & wear over standard mineral formulations.

### EXMARK PREMIUM ENGINE OIL UTV FORMULATION

- 4-cycle high-temp formulation.
- Heavier viscosity, full synthetic, perfect for your UTV.

### EXMARK PREMIUM ENGINE OIL SAE 20W-50

- Perfect for your big block engine, or any application in severe service.
- Same full synthetic formulation as all other Exmark Premium viscosities.
- Also effective for use in severe service small block engines.

### EXMARK PREMIUM ENGINE OIL SAE 0W-40

- The perfect choice for when the weather turns cold or unpredictable, and your Exmark UTV has to perform.
- Commercial quality for severe service.
- Advanced additive package helps prevent corrosion from long-term storage.

### EXMARK PREMIUM UTV EXTREME CONDITIONS GEAR OIL

- SAE 80W-90, designed to keep your UTV performing at its peak.
- Shear stable, hypoid gear lube.
- Includes a premium additive system to combat wear, oxidation, rust & corrosion.

***Available from your local Exmark dealer. Find your closest dealer at exmark.com***

## EXMARK ACCESSORIES AND OPTIONS*

### MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
FULL SUSPENSION SEAT
DECK LIFT ASSIST KIT
HITCH KIT
LIGHT KIT
12V POWER PORT
MICRO-MULCH SYSTEM
OPERATOR CONTROLLED DISCHARGE
SUN SHADE
TRASH CONTAINER
TURF STRIPER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM

### OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
DUAL-TAIL WHEEL
FLOOR PAN EXTENDER
HITCH KIT
LIGHT KIT
MICRO-MULCH SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)
SNOW BLADE
SNOWBLOWER
SUN SHADE
TRASH CONTAINER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM
WEATHER CAB

### WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER
MICRO-MULCH SYSTEM
TURF STRIPER
STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No. Label Here (Included in the Literature Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

**© 2019 Exmark Mfg. Co., Inc.**
**All Rights Reserved**

**2101 Ashland Ave**
**Beatrice, NE 68310**
**(402) 223-6375**
**Fax (402) 223-5489**

**Part No. 4504-127 Rev. B**
**Printed in the USA.**

**www.exmark.com**