

LAWN-BOY®

Silver Series® 21" Walk-Behind Mower Model No. 10335-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing, Handle Brkt & Wheel Assembly	3	Carburetor No. 640119	9
Gear Case Assembly	4	Engine LEV120–361003A	10–12
Gear Case & Wheel Assembly	5	Recoil Starter Assembly 590702	13
Engine & Blade Assembly	6	Recoil Starter Assembly 590739 (Optional)	14
Handle & Controls Assembly	7	Maintenance	15
Grass Bagging Assembly	8		


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	Model No. 89817	Leaf Shredder Kit	Model No. 89860
Leaf Bag	Model No. 89804	Leaf Bag Kit w/Chute	Model No. 89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

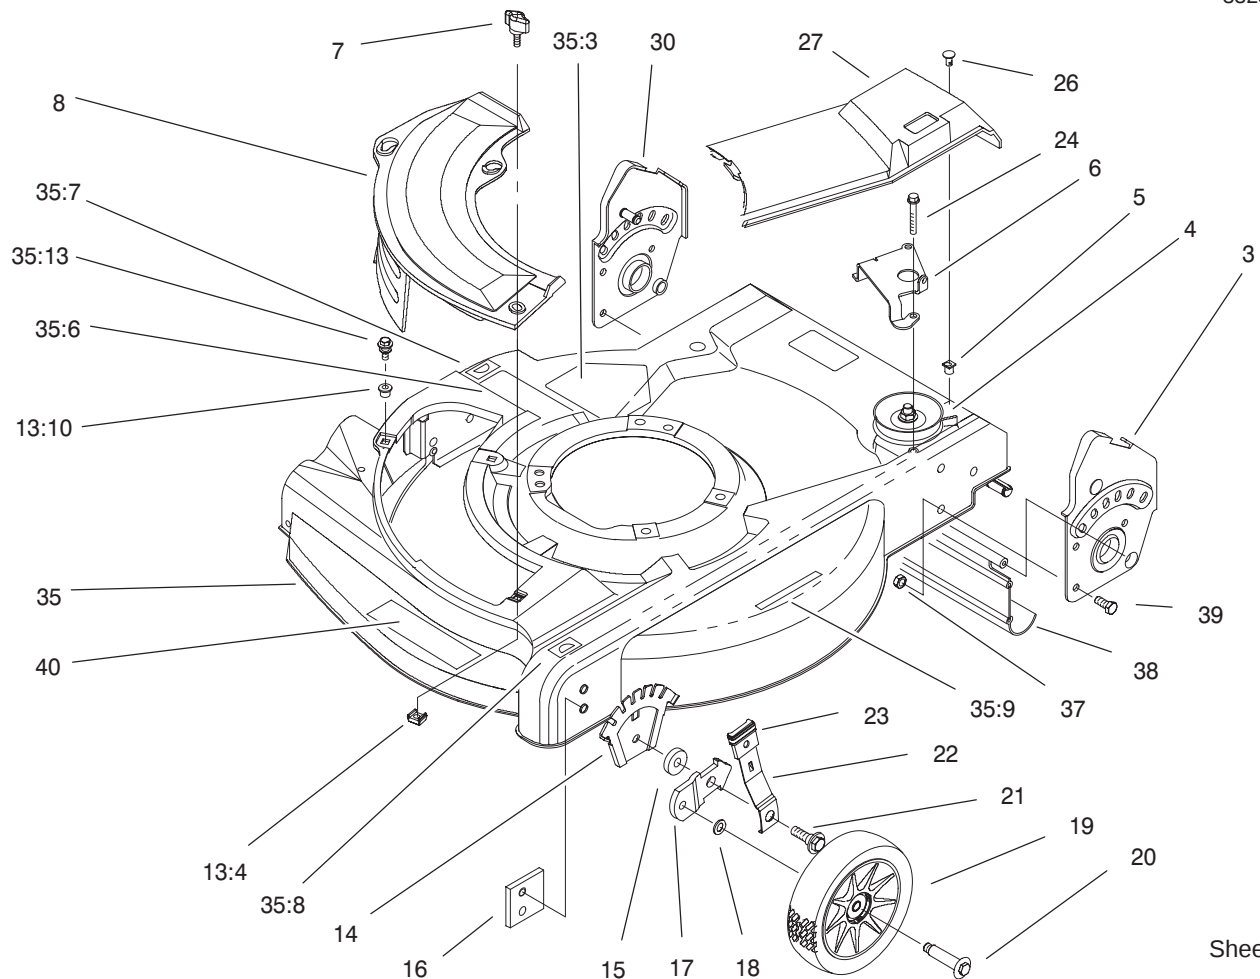


Sheet No.:2

Housing, Handle Brkt & Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
3	92-7724	1	LH Handle Bracket ASM	35	98-4477	1	ASM-Hsg/Baffle w/Decals
4	92-7735	1	Gear Case Assembly	35:3	43-8480	1	Decal-Danger
5	605120	1	Grommet	35:4	613765	1	Nut-Cage
6	92-7728-03	1	Guide - Transmission	35:6	99-6018	1	Decal - Warning
7	98-8332	1	Knob	35:7	92-2914	1	Decal - HOC, RH
8	92-8630	1	Plate-Mulch	35:8	92-2915	1	Decal - HOC, LH
14	92-4881-03	2	Plate - Height Adjustment	35:9	93-7250	1	Decal-Warning
15	92-4890	2	Washer - Wheel	35:10	94-1610	2	Grommet - Plastic
16	92-7731	2	Plate - Baffle	35:13	614677	2	Screw- Sems
17	95-7403-03	2	Bracket-Wheel Height Adjustment	37	3296-29	6	Nut-Lock, NI
18	40-1940	2	Washer	38	92-8647	1	Shield - Trailing
19	684776	2	Wheel & Tire ASM	39	322-3	6	Screw-HH
20	92-1099	2	Bolt-Shoulder	40	100-6385	1	Decal-Deck
21	614672	2	Bolt-Shoulder	*	95-7052	1	Plate - Chute Opening
22	614687	2	Arm-Front Spring				
23	92-1008	4	Knob-Lever, Height Adjustment				
24	65-5221	2	Screw-Thread Forming				
26	92-9665	1	Screw				
27	95-7068	1	Cover - Drive				
30	92-7723	1	RH Handle Bracket ASM				

* Not illustrated

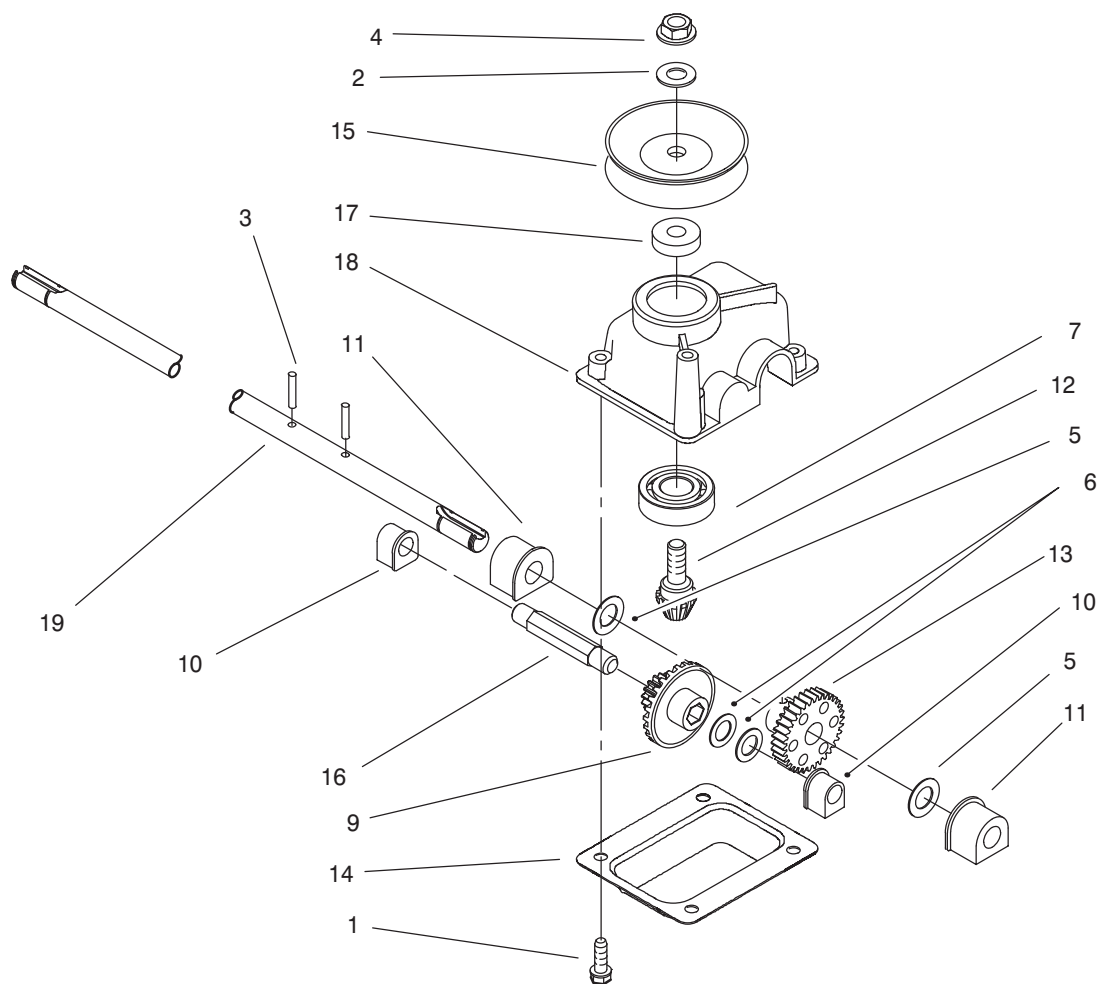


Sheet No.:A1

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-4	4	Screw-HH
2	3256-24	1	Washer-Flat
3	3285-19	2	Pin-Groove
4	3296-5	1	Nut-Lock, NI
5	36-4780	2	Washer
6	36-4791	2	Washer-Thrust
7	38-7820	1	Bearing-Ball
9	55-3760	1	Gear-15t Spur, 37t Bevel
10	60-8750	2	Bushing
11	60-8850	2	Bushing-Output
12	60-8890	1	Gear-Bevel, Pinion
13	614596	1	Gear-34t
14	614668-03	1	Cover-Gear Case
15	614669	2	Half-Pulley
16	614696	1	Shaft-Intermediate
17	62-6660	1	Spacer
18	92-7727	1	Gearcase
19	93-0239	1	Shaft - Output


Ref. No.	Part No.	Qty.	Description

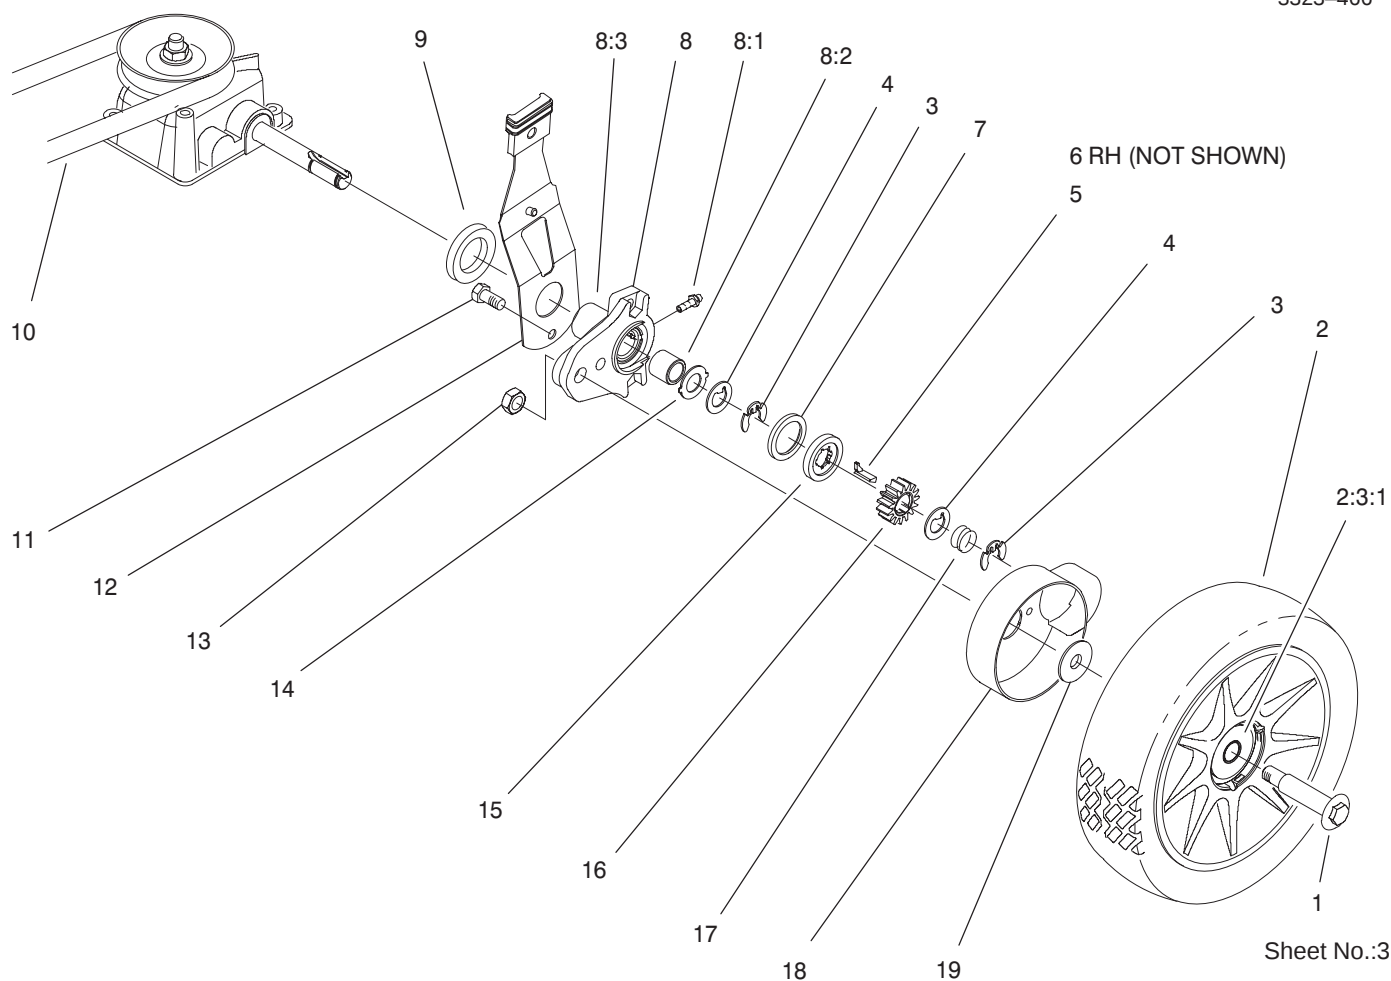

Gear Case & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	8" Wheel & Tire ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Ring-Klip, Sp
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Arm ASM-Rear Height Adjustment
8:1	302-56	1	Fitting-Zerk
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
9	614447	2	Spacer-Axle Shaft
10	93-7381	1	V-Belt
11	32144-85	2	Screw-HH
12	92-1004	2	Rear Spring Arm ASM
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel
19	614426	2	Washer-Stepped

Ref. No.	Part No.	Qty.	Description

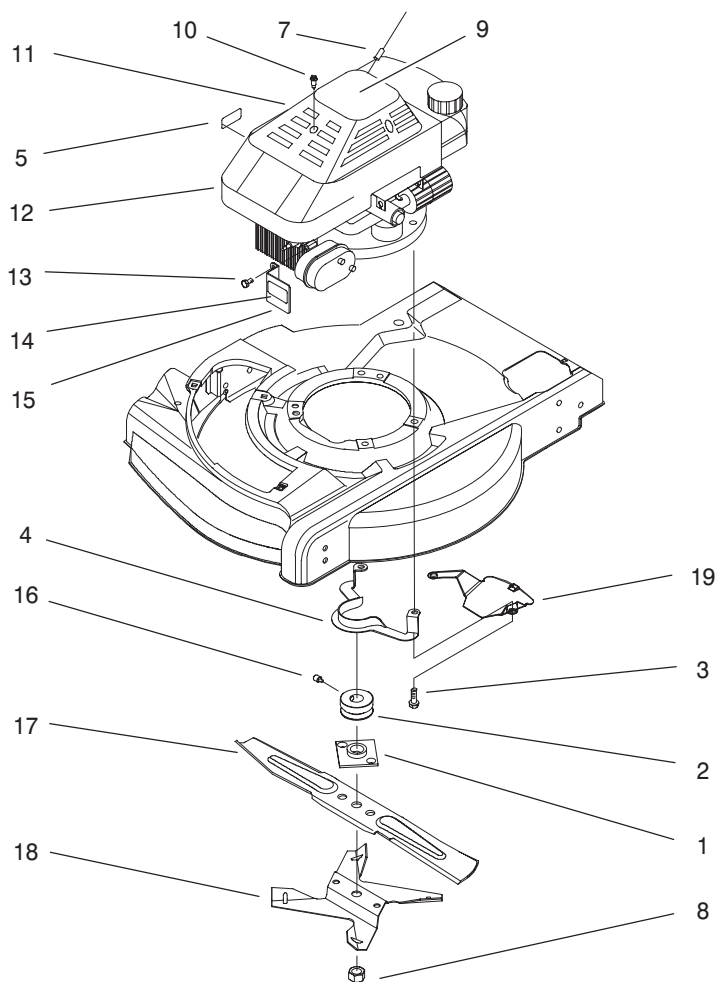


Sheet No.:4

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	677525	1	Plate & Collar ASM
2	92-9575	1	Pulley
3	95-1726	3	Screw-Taptite w/Patch
4	92-1024-03	1	Guide-Belt
5	92-4851	1	Decal- Oil Instr.
7	92-1701	1	Rope - Stop
8	603164	1	Nut-Blade
9	95-5591	1	Decal - Recoil
10	92-4852	4	Screw - Recoil Cover
11	92-4854	1	Cover - Starter
12	94-6088-02	1	Shroud - Engine
13	32144-85	1	Screw-HH
14	65-2690	1	Decal-Surface, Hot
15	94-6066-03	1	Guard - Muffler
15	95-5569	1	ASM - Muffler Guard
16	104-0214	1	Screw-Set,Cone Point
17	612543	1	Blade
18	99-6351-03	1	Fan - Mulching
19	93-4196-03	1	Shield - Grass


Ref. No.	Part No.	Qty.	Description

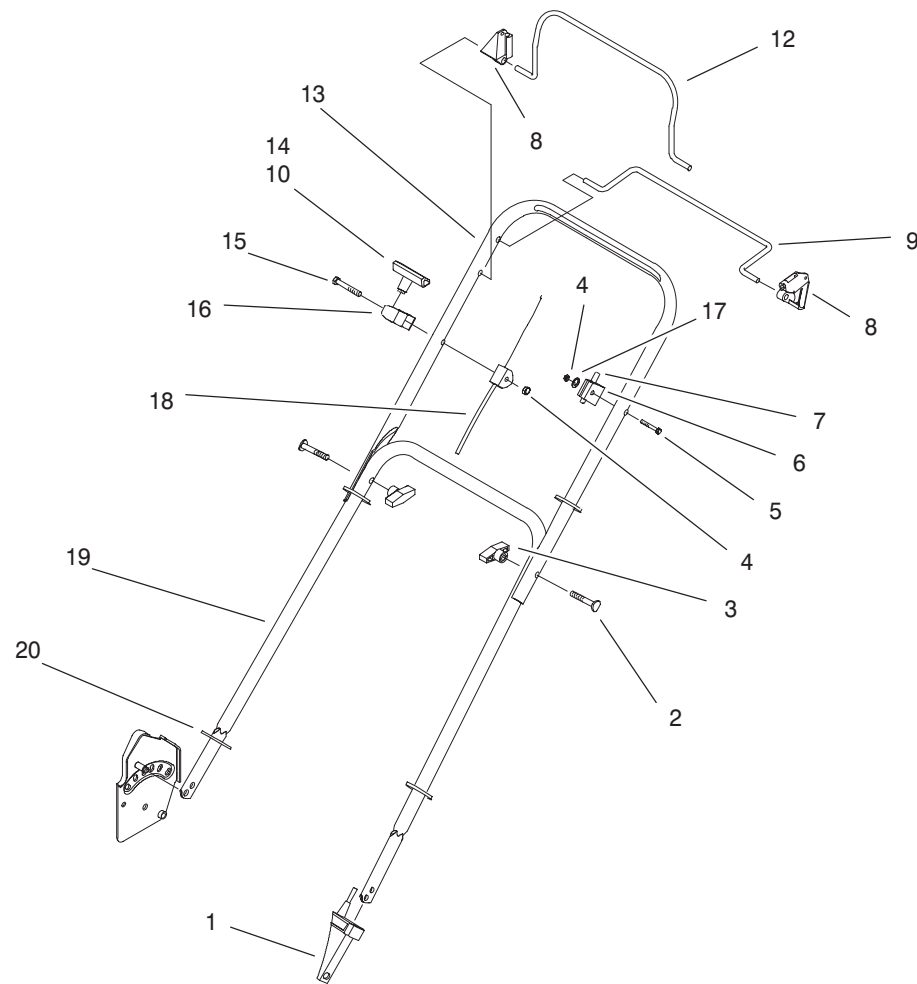

Sheet No.:5

Handle & Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	93-7380	1	Anchor – Cable
2	614697	2	Screw
3	98-7134	2	Knob-Handle
4	3296-73	2	Nut-Lock, NI
5	92-2266	1	Screw-Handle
6	92-7729	1	Anchor-Upper Sp Cable
7	100-5982	1	Cable-Ground Speed
8	92-5412	2	Stop-Pivot
9	92-1001-03	1	Bail-Control
10	92-5424	1	Staple-Handle
12	93-4184-03	1	Bail – Brake
13	100-2888-05	1	Handle-Upper
14	92-4853	1	Handle-Starter
15	321-50	1	Screw-HH
16	93-7383	1	Rope – Guide
17	3256-1	1	Washer-Flat
18	100-5989	1	Brake Cable ASM.
19	614643-05	1	Section-Lower Handle
20	93-3653	1	Guard – Handle

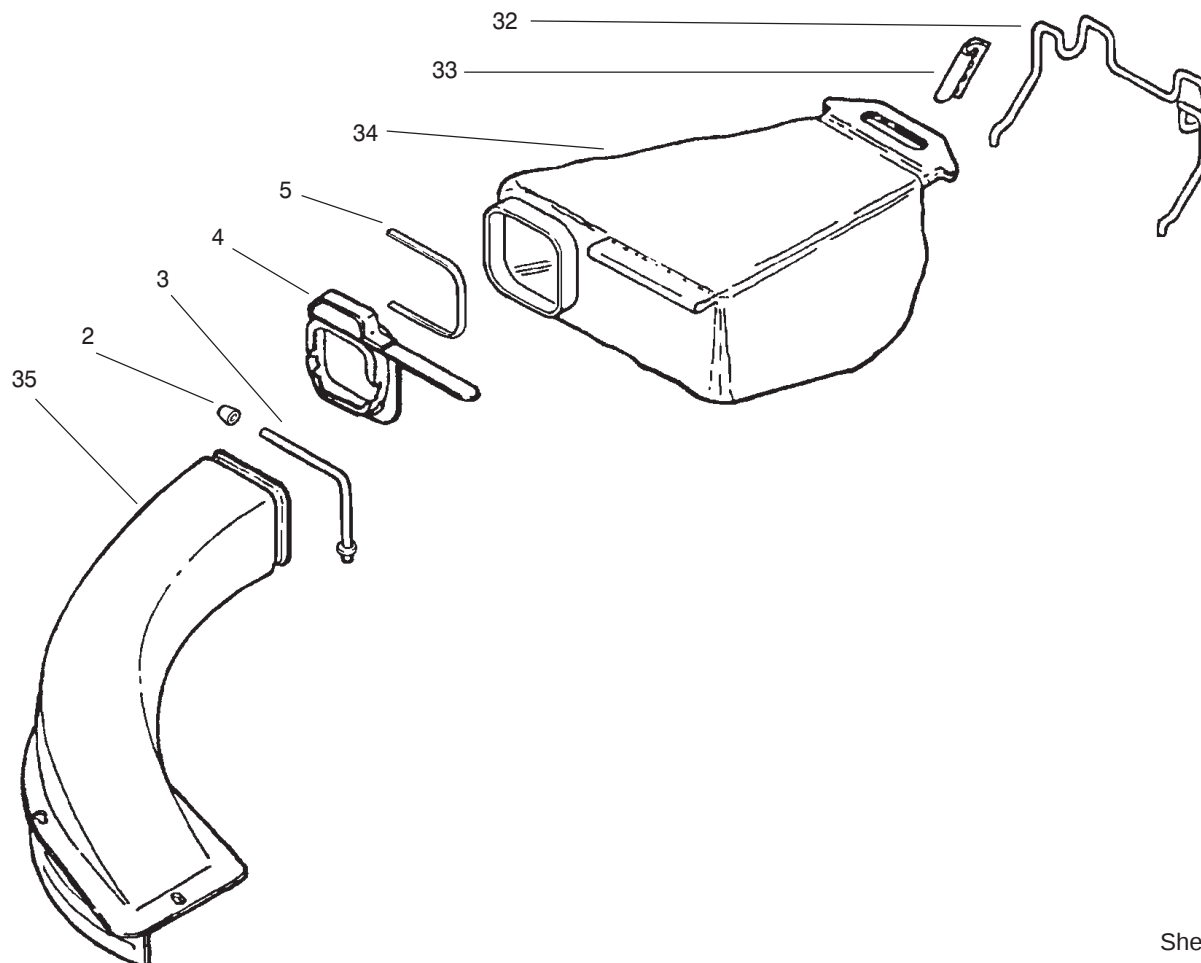


Sheet No.:A2

Grass Bagging Assembly

Ref. No.	Part No.	Qty.	Description
2	614589	1	Nut-Cap
3	614591	1	Support-Chute
4	684727-03	1	ASM-Adapter
5	614700	1	Tie Strap
32	613455	1	Wire Hanger,
33	613462-03	2	Clamp-Hanger
34	100-6361	1	Bag & Adapter ASM.
35	684729	1	Chute & Support
*	100-6362	1	Replacement Bag ASM.


Ref. No.	Part No.	Qty.	Description

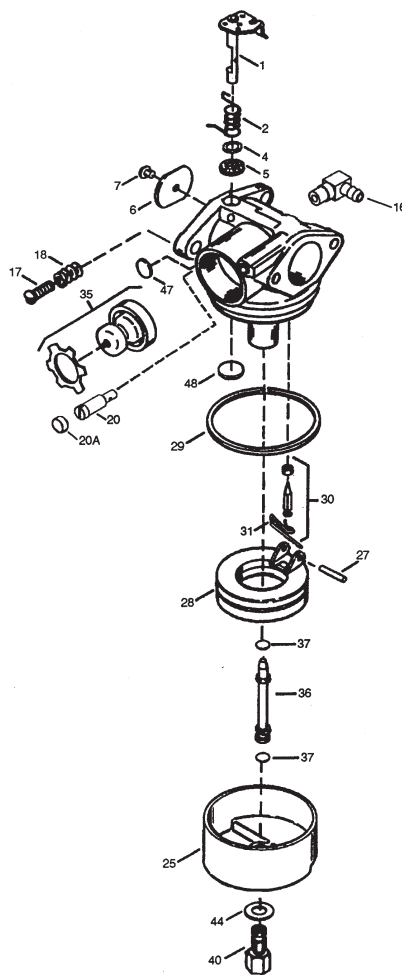

Carburetor No. 640119

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
0	640119	1	Carburetor	37	632547	2	O-Ring, Main Nozzle Tube
1	631615	1	Throttle Shaft & Lever Assembly	40	640028	1	High Speed Bowl Nut
2	631767	1	Throttle Return Spring	44	27110	1	Bowl Nut Washer
4	631184	1	Dust Seal Washer	47	630748	1	Welch Plug, Idle Mixture Well
5	631183	1	Dust Seal (Throttle)	48	631027	1	Welch Plug, Atmospheric Vent
6	640070	1	Throttle Shutter				
7	650506	1	Shutter Screw				
16	631807	1	Fuel Fitting				
17	651025	1	Throttle Crack Screw/Idle Speed Screw				
18	630766	1	Tension Spring				
20	640016	1	Idle Restrictor Screw				
20A	640053	1	Idle Restrictor Screw Cap				
25	631867	1	Float Bowl				
27	631024	1	Float Shaft				
28	632019	1	Float				
29	631028	1	Float Bowl "O" Ring				
30	631021	1	Inlet Needle, Seat, & Clip (Incl. 31)				
31	631022	1	Spring Clip				
35	36045A	1	Primer Bulb/Retainer Ring				
36	632735	1	Main Nozzle Tube				

Engine LEV120-361003A

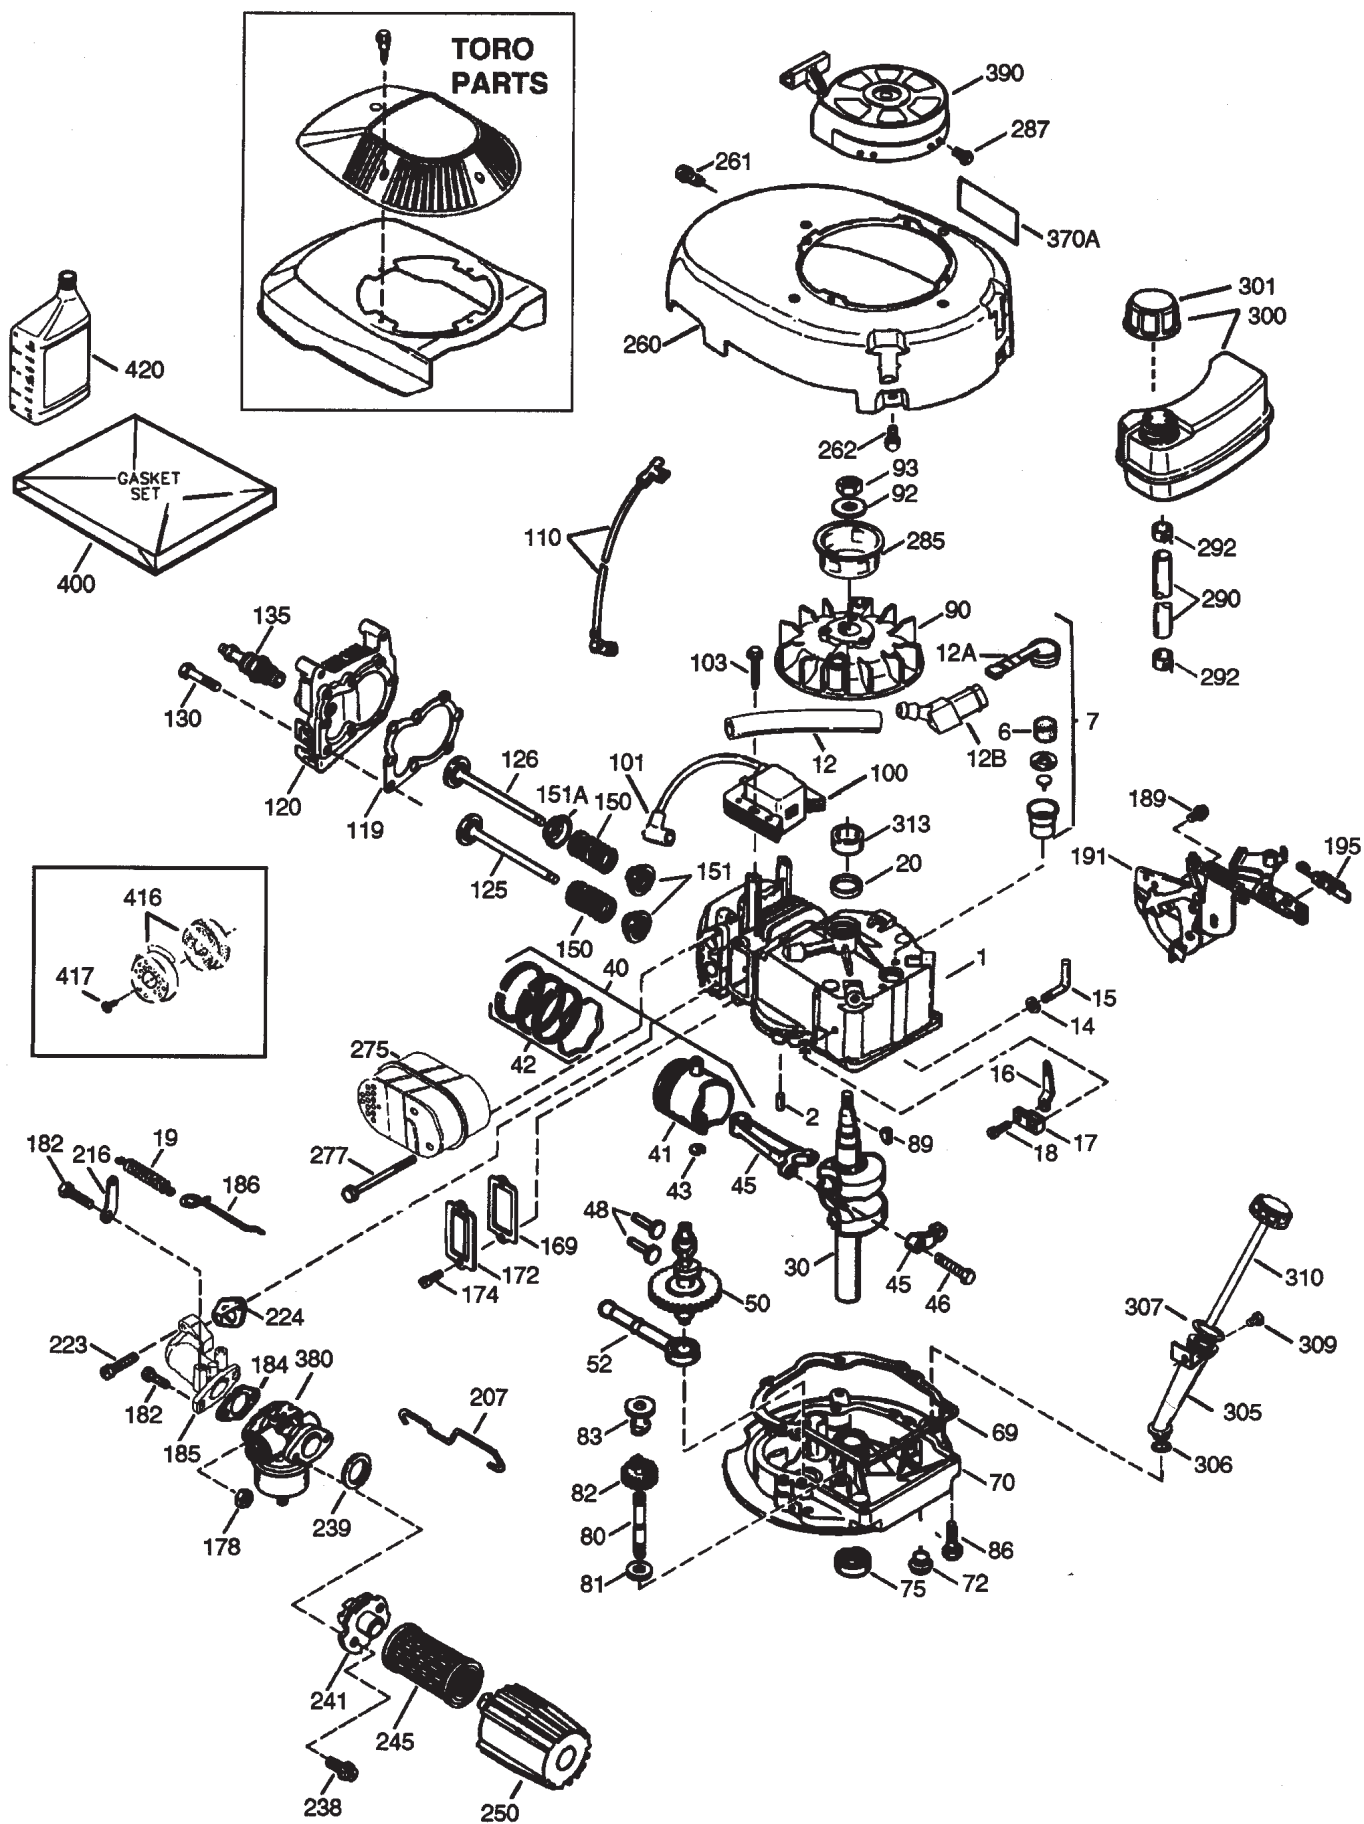


Engine LEV120-361003A

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	36774	1	Cylinder (Incl. 2 & 20)	125	36779	1	Exhaust Valve (Std.) (Incl. 151)
2	26727	2	Dowel Pin	125	36780	1	Exhaust Valve (1/32" OS) (Incl. 151)
6	33734	1	Breather Element	126	36781	1	Intake Valve (Std.) (Incl. 151)
7	36557	1	Breather Body ASM (Incl. 6 & 12A)	126	36782	1	Intake Valve (1/32" OS) (Incl. 151)
12	36775	1	Breather Tube	130	6021A	6	Screw
12A	36558	1	Breather Cover & Tube (Incl. 12B)	135	35395	1	Resistor Spark Plug (RJ19LM)
12B	36694	1	Breather Tube Elbow	150	35991	2	Valve Spring
14	28277	1	Washer	151	31673	2	Valve Spring Cap
15	30589	1	Governor Rod (Incl. 14)	151A	40017	1	Intake Valve Seal
16	34839A	1	Governor Lever	169	36783	1	Valve Cover Gasket
17	31335	1	Governor Lever Clamp	172	36784	1	Valve Cover
18	651018	1	Screw	174	30200	2	Screw
19	36281	1	Extension Spring	178	29752	2	Nut & Lock Washer
20	32600	1	Oil Seal	182	6201	2	Screw
30	36597	1	Crankshaft	184	26756	1	Carburetor To Intake Pipe Gasket
40	40027	1	Piston, Pin & Ring Set (Std.)	185	36785	1	Intake Pipe
40	40028	1	Piston, Pin & Ring Set (.010" OS)	186	32653	1	Governor Link
41	40025	1	Piston & Pin ASM (Std.) (Incl. 43)	189	650839	2	Screw
41	40026	1	Piston & Pin ASM (.010" OS) (Incl. 43)	191	36559	1	S.E. Brake Bracket (Incl. 195)
42	40006	1	Ring Set (Std.)	195	610973	1	Terminal
42	40007	1	Ring Set (.010" OS)	207	34336	1	Throttle Link
43	20381	2	Piston Pin Retaining Ring	216	33086	1	R.P.M. Adjusting Lever
45	36777	1	Connecting Rod ASM (Incl. 46)	223	650451	2	Screw
46	32610A	2	Connecting Rod Bolt	224	36786	1	Intake Pipe Gasket
48	27241	2	Valve Lifter	238	650932	2	Screw
50	36778	1	Camshaft (MCR)	239	34338	1	Air Cleaner Gasket
52	29914	1	Oil Pump ASM	241	35797	1	Air Cleaner Collar
69	35261	1	Mounting Flange Gasket	245	35066	1	Air Cleaner Filter
70	36995	1	Mounting Flange (Incl. 72 thru 83)	250	35986	1	Air Cleaner Cover
72	36083	1	Oil Drain Plug	260	36999	1	Blower Housing
75	27897	1	Oil Seal	261	30200	2	Screw
80	30574A	1	Governor Shaft	262	650831	2	Screw
81	30590A	1	Washer	275	36790	1	Muffler
82	30591	1	Governor Gear ASM (Incl. 81)	277	650988	2	Screw
83	30588A	1	Governor Spool	285	35000A	1	Starter Cup
86	650488	6	Screw	287	650926	2	Screw
89	611004	1	Flywheel Key	290	34357	1	Fuel Line
90	611112	1	Flywheel	292	26460	2	Fuel Line Clamp
92	650815	1	Belleville Washer	300	35586	1	Fuel Tank (Incl. 292 & 301)
93	650816	1	Flywheel Nut	301	36246	1	Fuel Cap
100	34443B	1	Solid State Ignition	305	35819A	1	Oil Fill Tube
101	610118	1	Spark Plug Cover	306	36996	1	"O"-Ring
103	651007	2	Screw, Torx T-15	307	35499	1	"O"-Ring
110	37047	1	Ground Wire	309	651014	1	Screw
119	36787	1	Cylinder Head Gasket	310	36259	1	Dipstick
120	36825	1	Cylinder Head	313	34080	1	Spacer
				370A	36261	1	Lubrication Decal
				380	640119	1	Carburetor (Incl. 184)

Engine LEV120-361003A


Ref. No.	Part No.	Qty.	Description
390	590702	1	Rewind Starter (NOTE: This engine could have been built with 590739 starter. Refer to the design of the rope pulley strength ribs for part identification. Individual starter parts do not interchange. Refer to service bulletin 116.)
400	36792B	1	Gasket Set (Incl. Items Marked PK in Notes) Incl. part # 26756 (1), 28833 (1) 34338 (1), 36783 (1), 36786 (1) 36787 (1), 36832 (1), 36996 (1), 37130 (1).
416	36085	1	Spark Arrestor Kit (Incl. 417) (Optional)
417	650760	1	Screw (Optional)
420	730225	1	SAE 30 4-Cycle Engine Oil (Quart)

Ref. No.	Part No.	Qty.	Description

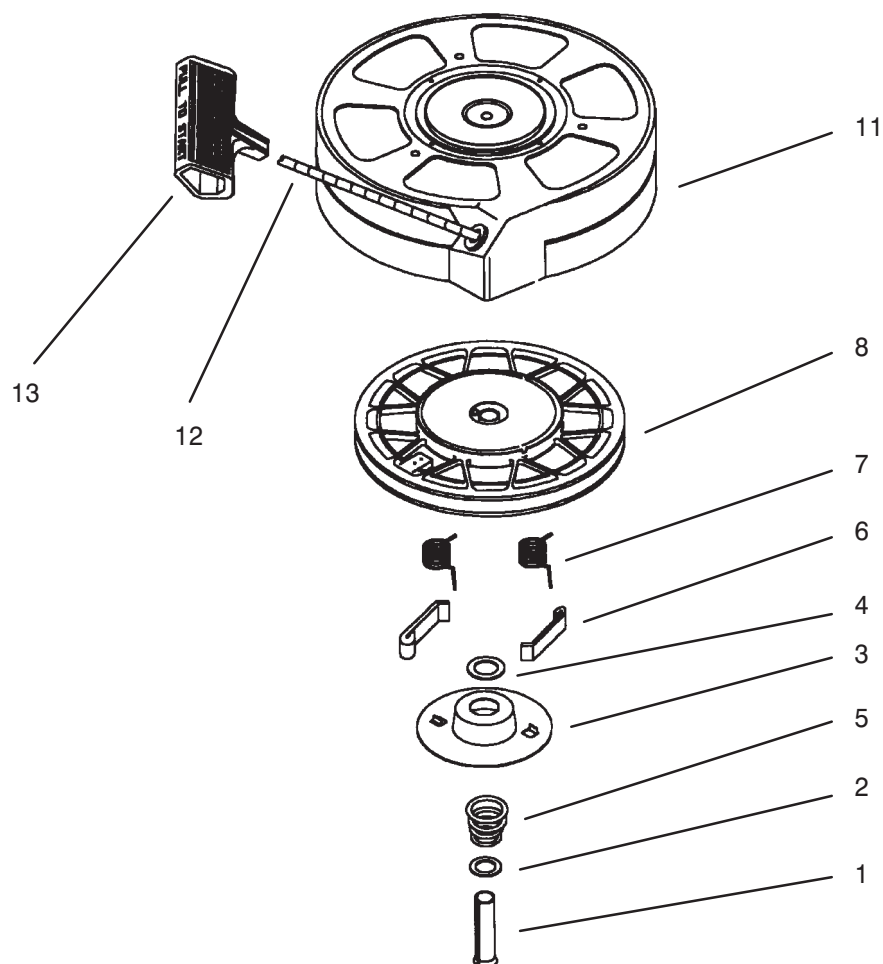

Recoil Starter Assembly 590702

Ref. No.	Part No.	Qty.	Description
0	590702	1	Recoil Starter
1	590599A	1	Spring Pin (Incl. 4)
2	590600	1	Washer
3	590696	1	Retainer
4	590601	2	Washer
5	590697	1	Brake Spring
6	590698	2	Starter Dog
7	590699	2	Dog Spring
8	590700	1	Pulley & Rewind Spring ASM
11	590703	1	Starter Housing ASM (40 degree grommet)
12	590535	1	Starter Rope (98" X 9/64" dia.)
13	590701	1	Starter Handle

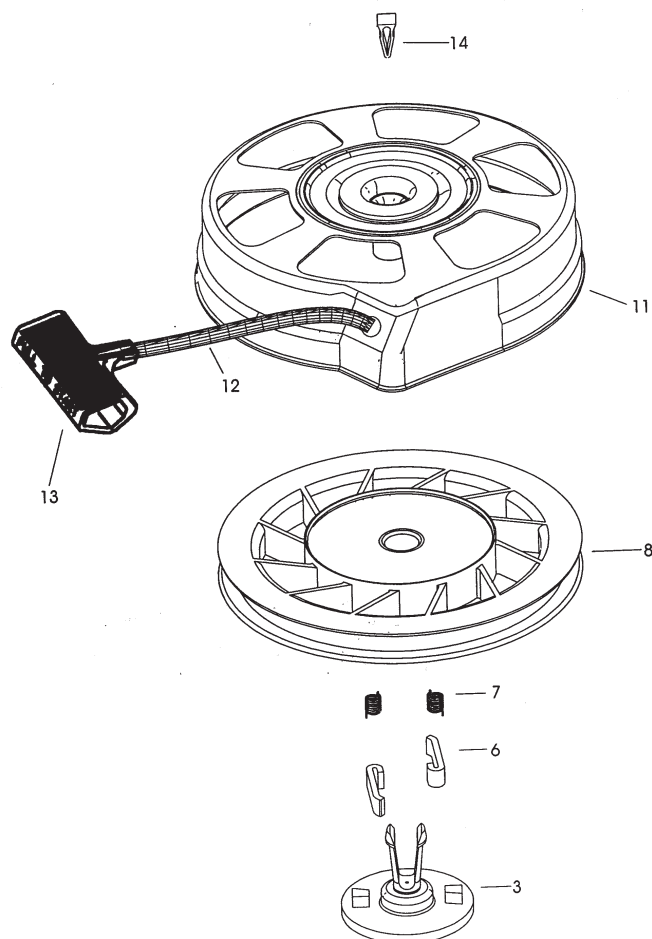

Recoil Starter Assembly 590739 (Optional)

Ref. No.	Part No.	Qty.	Description
0	590739	1	Rewind Starter
3	590740	1	Retainer
6	590616	2	Starter Dog
7	590617	2	Dog Spring
8	590618A	1	Pulley & Rewind Spring ASM
11	590638	1	Starter Housing ASM (40 degree grommet)
12	590535	1	Starter Rope (Length 98" x 9/64" dia.)
13	590701	1	Starter Handle
14	590741	1	Locking Tab

Ref. No.	Part No.	Qty.	Description

Maintenance Record

[illegible]

LAWN-BOY®