



Count on it.

Parts Catalog

RT600 Traction Unit

Model No. 25430A—Serial No. 315000001 and Up

Model No. 25430C—Serial No. 315000001 and Up

Model No. 25430W—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly	4
Axle and Driveshaft Assembly	6
Front Axle Assembly No. AU124914	8
Pinion Group Assembly No. 131-7040	10
Wheel Hub Group Assembly No. 131-7035	12
Wheel Hub Group Assembly No. 131-7036	14
Brake Group Assembly No. 131-6900	16
Rear Axle Assembly No. AU124920	18
Pinion Group Assembly No. 131-7037	20
Differential Group Assembly No. 131-7038	22
Gearbox Group Assembly No. 131-7039	24
Drive Shaft Assembly No. AU126653	26
Engine Assembly	28
Engine Service Parts	30
Radiator and Fan Assembly	32
Air Cleaner and Exhaust Assembly	34
Air Cleaner Assembly No. 112-7329	36
Steering Assembly	38
Priority Flow Divider Valve Assembly No. AUH672904	40
Hydraulic Steering Valve Assembly No. AU141535A1	42
Lockout Valve Assembly No. AUH672547	44
Hydraulic Tank and Tandem Pump Assembly	46
Front Pump Assembly Tandem Pump No. AU125034	48
Rear Pump Assembly Tandem Pump No. AU125034	50
Hydraulic Tank Assembly No. 127-1242	52
Bulkhead and Hose Mounting Assembly	54
Directional Valve and Hydraulic Hose Assembly	56
Oil Filter and 60 CC Hi Motor Assembly	58
Hydraulic Motor Assembly No. AU125010	60
Solenoid Valve and Hose Assembly	62
Fuel Tank Assembly	64
Ground Drive Control Assembly	66
Ground Drive Linkage Assembly	68
Roll-Over Protection System and Platform Assembly	70
Seat and Mounting Assembly	72
Hydraulic Control Valve Assembly No. AU125537	74
Dash and Trim Assembly	76
Main Electrical Assembly	78
Instrument Panel Electrical Assembly	80
Instrument Panel Assembly No. AU125255	82
Battery and Cable Assembly	84
Parking Brake Assembly	86
Hydraulic Release Cylinder Assembly No. AU126603	88
Backfill Blade Assembly	90
Hydraulic Cylinder Assembly No. AU103989A1	92
Hydraulic Cylinder Assembly No. AUH674312	94
Hydraulic Cylinder Assembly No. AU125681	96
Backfill Blade Hose Assembly	98
Attachments and Accessories	100


Frame Assembly

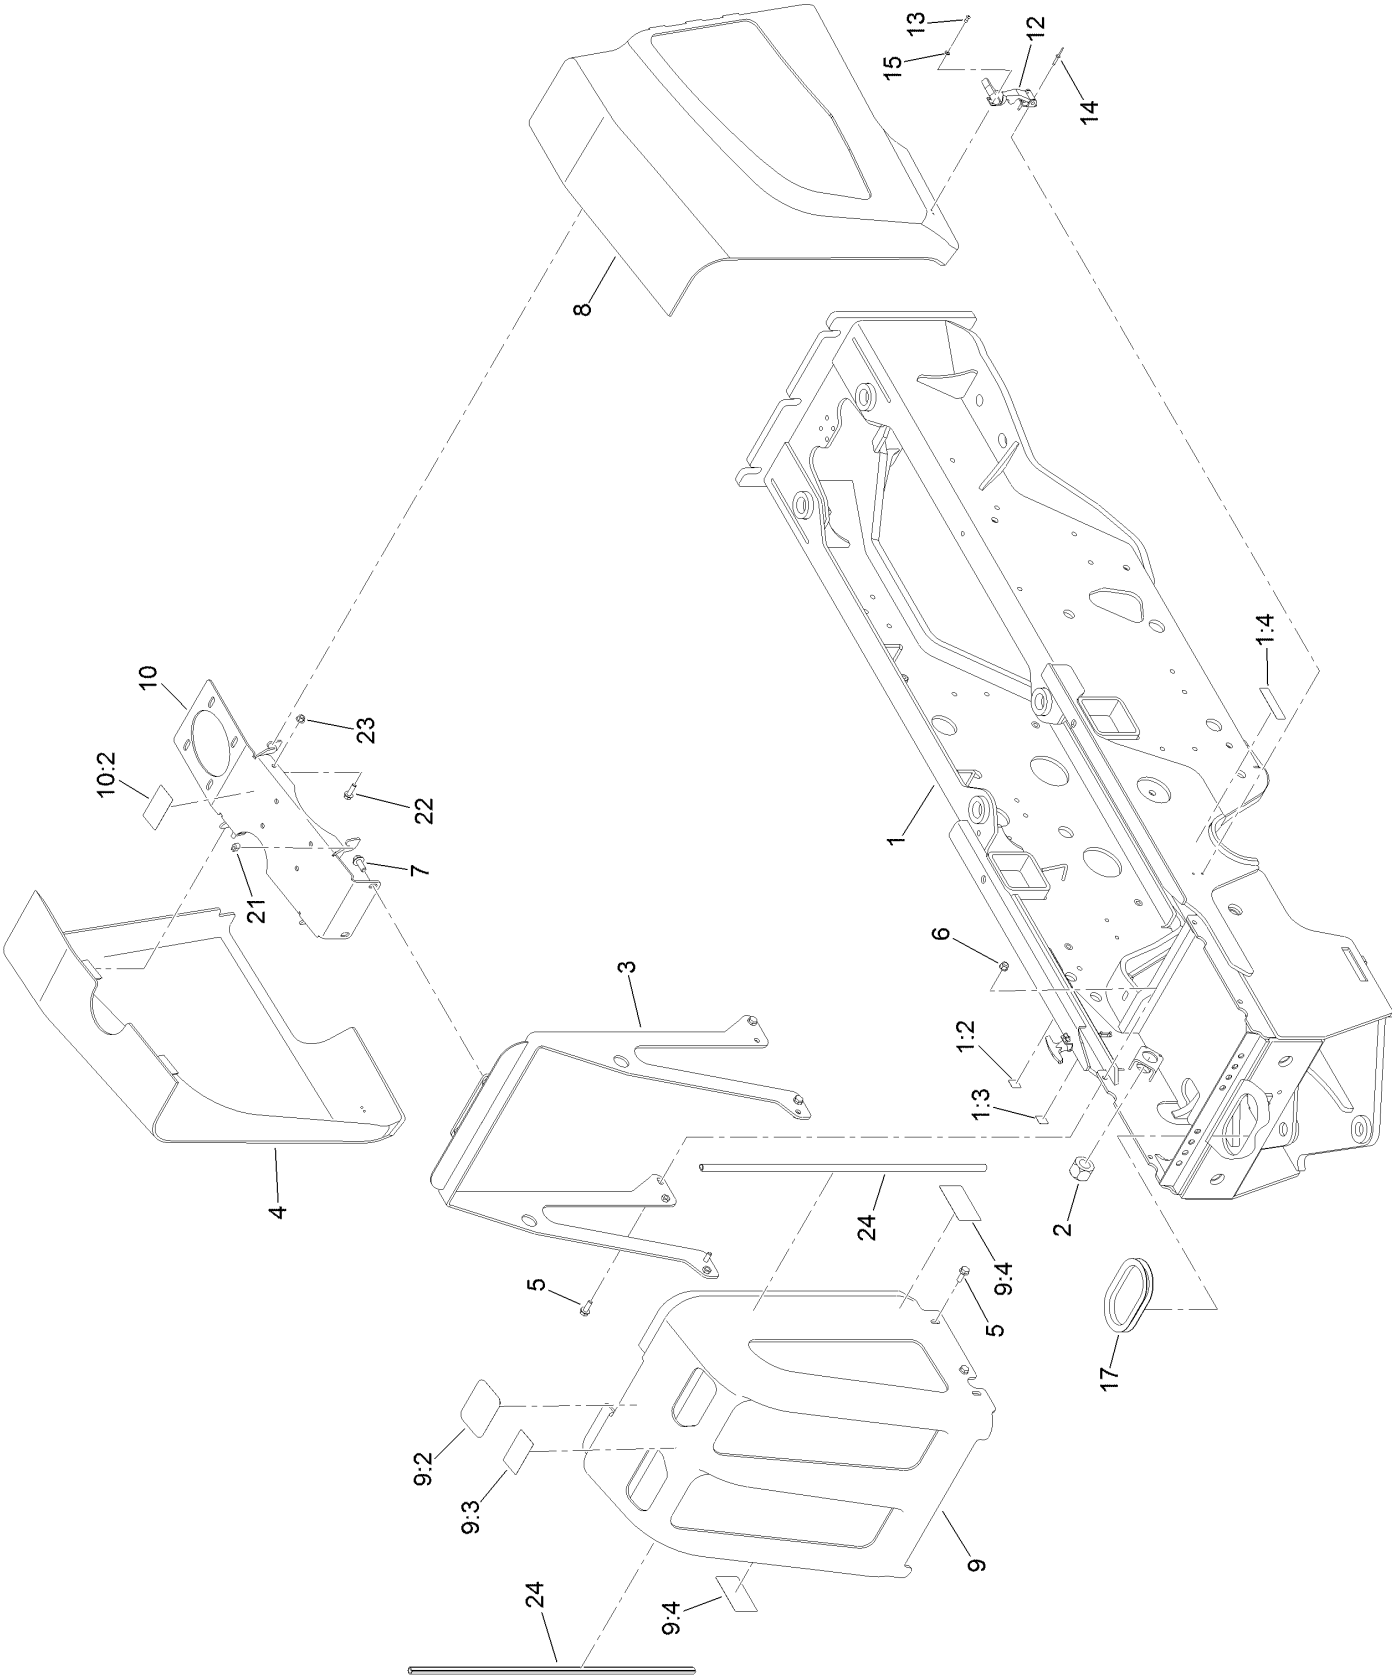

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1240	1	Chassis Frame ASM	9:3	125-8479	1	Decal-Warning, Radiator
1:2	125-8481	1	Decal-Fluid, Hydraulic (Out)	9:4	125-6689	2	Decal-Warning, Fan
1:3	125-8482	1	Decal-Fluid, Hydraulic (In)	10	125-6749	1	Hood Support ASM
1:4	117-2718	1	Decal-Arrester, Spark	10:2	125-4963	1	Decal-Surface, Hot
2	AU232-41120	4	Nut-Hex	12	AUH672204	2	Latch-Draw, Flexible
3	AU125441-03	1	Support-Hood	13	103-0138	4	Rivet-Pop
4	136-3994	1	Rt600 Right Hood	14	107-0386	4	Rivet-Blind
5	33105-030	8	Screw-HHF	15	3269-26	4	Washer-Plain
6	103-9511	4	Nut-Lock, NI	17	127-1284	2	Trim-Edge
7	33106-030	2	Screw-HHF	21	130-8858	4	Trim-Bumper
8	136-3995	1	Rt600 Left Hood	22	3234-24	2	Screw-HHF
9	136-5451	1	Nose-Clip W/Decals	23	32128-36	2	Nut-HF
9:2	67-1300	1	Decal	24	115-0423	2	Seal-Bulb


Axle and Driveshaft Assembly

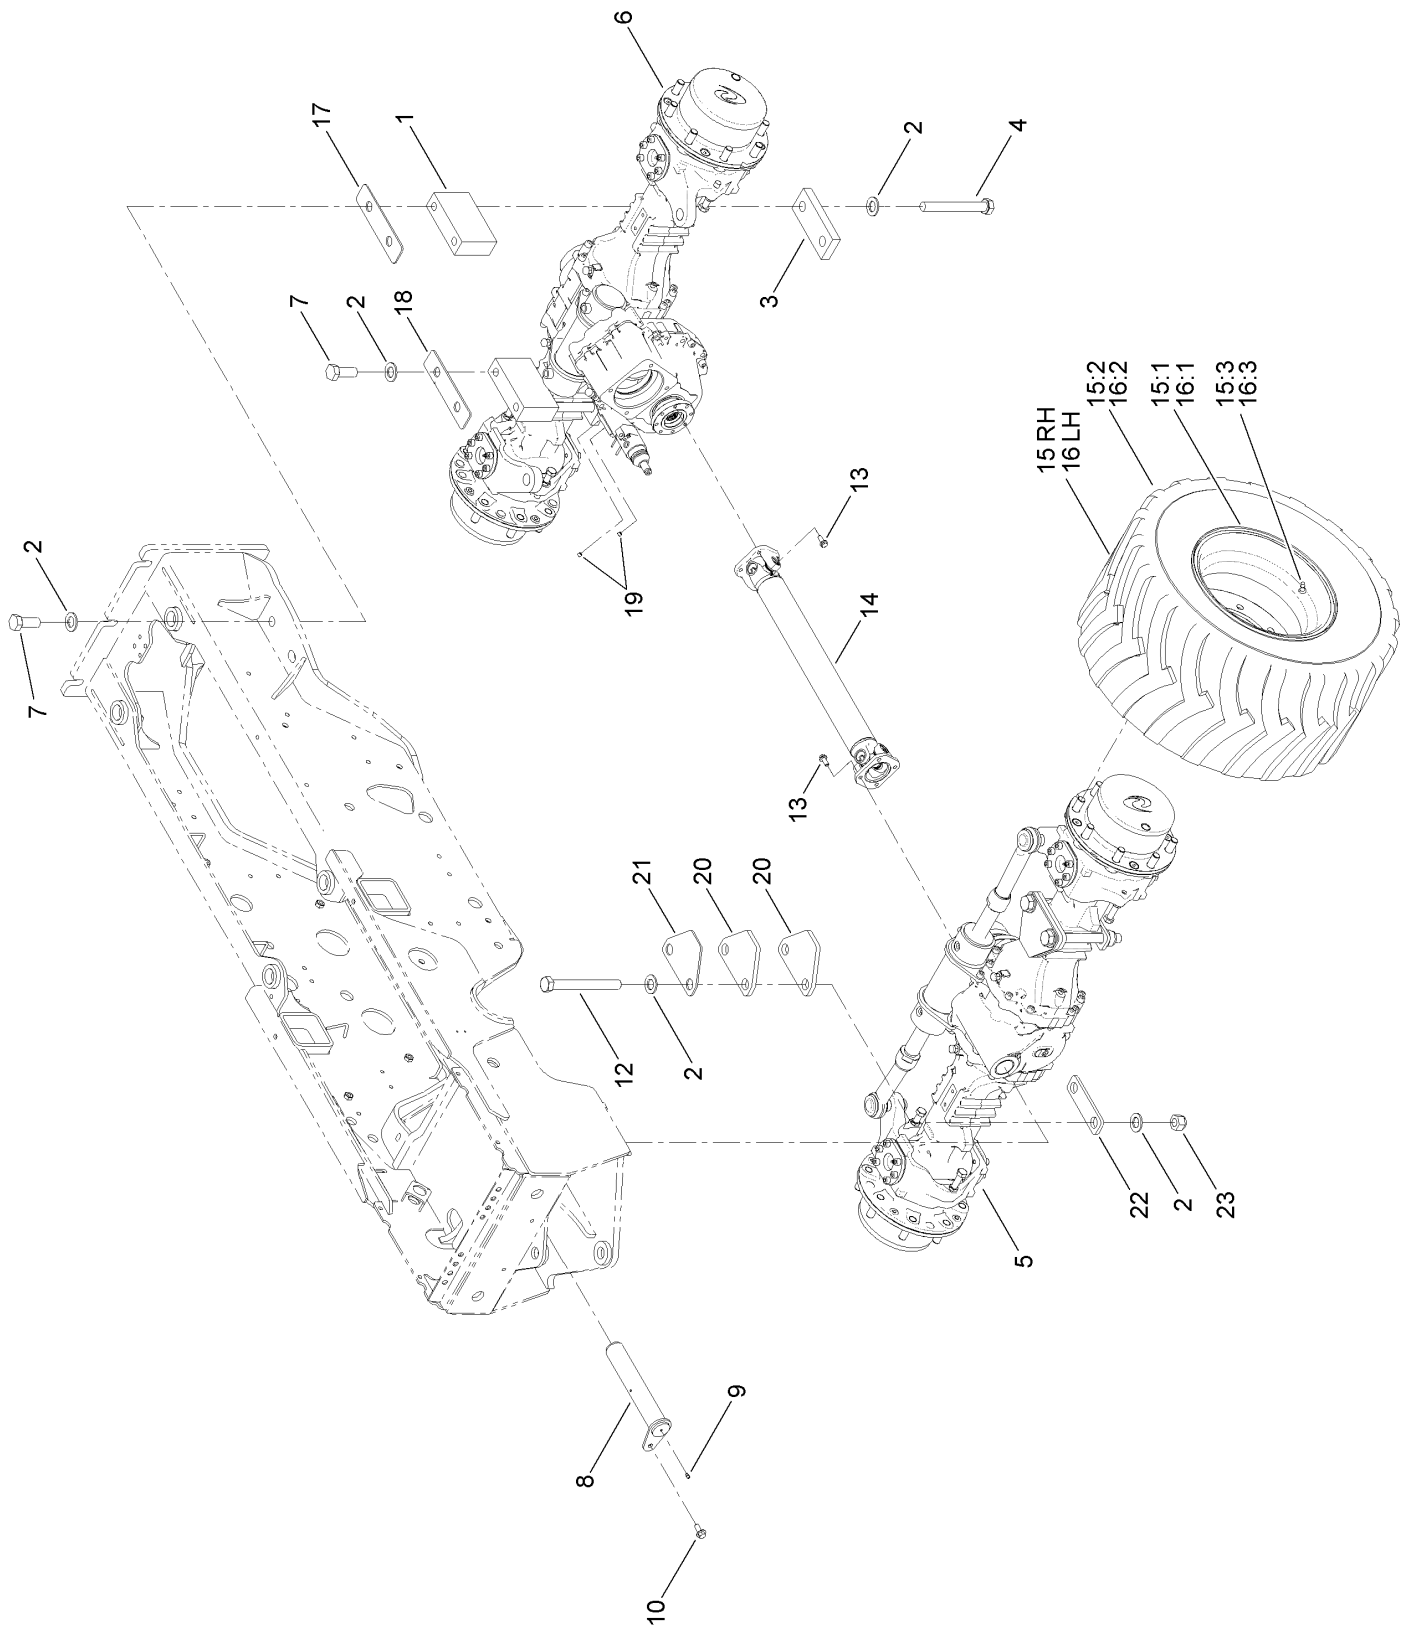

Axle and Driveshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU125288-03	2	Spacer-Axle	15:1	127-1260	1	Wheel
2	AUH426833	16	Washer	15:2	127-1261	1	Tire-31 Inch
3	AU125289-03	2	Bar-Clamp	15:3	232-24	1	Stem-Valve
4	AU413-16128	4	Screw-Cap	16	127-1262	2	LH Wheel And Tire ASM
5	AU124914-03	1	Front Axle ASM	16:1	127-1260	1	Wheel
6	AU124920-03	1	Rear Axle ASM	16:2	127-1261	1	Tire-31 Inch
7	AU426-1640	4	Bolt	16:3	232-24	1	Stem-Valve
8	AU125429	1	Pin	17	127-1286-03	1	Plate-Spacer
9	302-5	1	Fitting-Grease	18	AU125582-03	1	Plate-Spacer
10	33106-030	1	Screw-HHF	19	285-17	2	Plug-Pipe
12	AU426-16144	4	Bolt-HH	20	130-8845-03	4	Plate-Pivot, Stop (.500)
13	108-1531	8	Screw-HHF	21	130-8846-03	2	Plate-Pivot, Stop (.188)
14	AU126653	1	Front Axle Drive Shaft ASM	22	130-8847-03	2	Spacer-Plate, Axle (.375)
15	127-1263	2	RH Wheel And Tire ASM	23	104-2024	4	Nut-Hex, NI


Front Axle Assembly No. AU124914

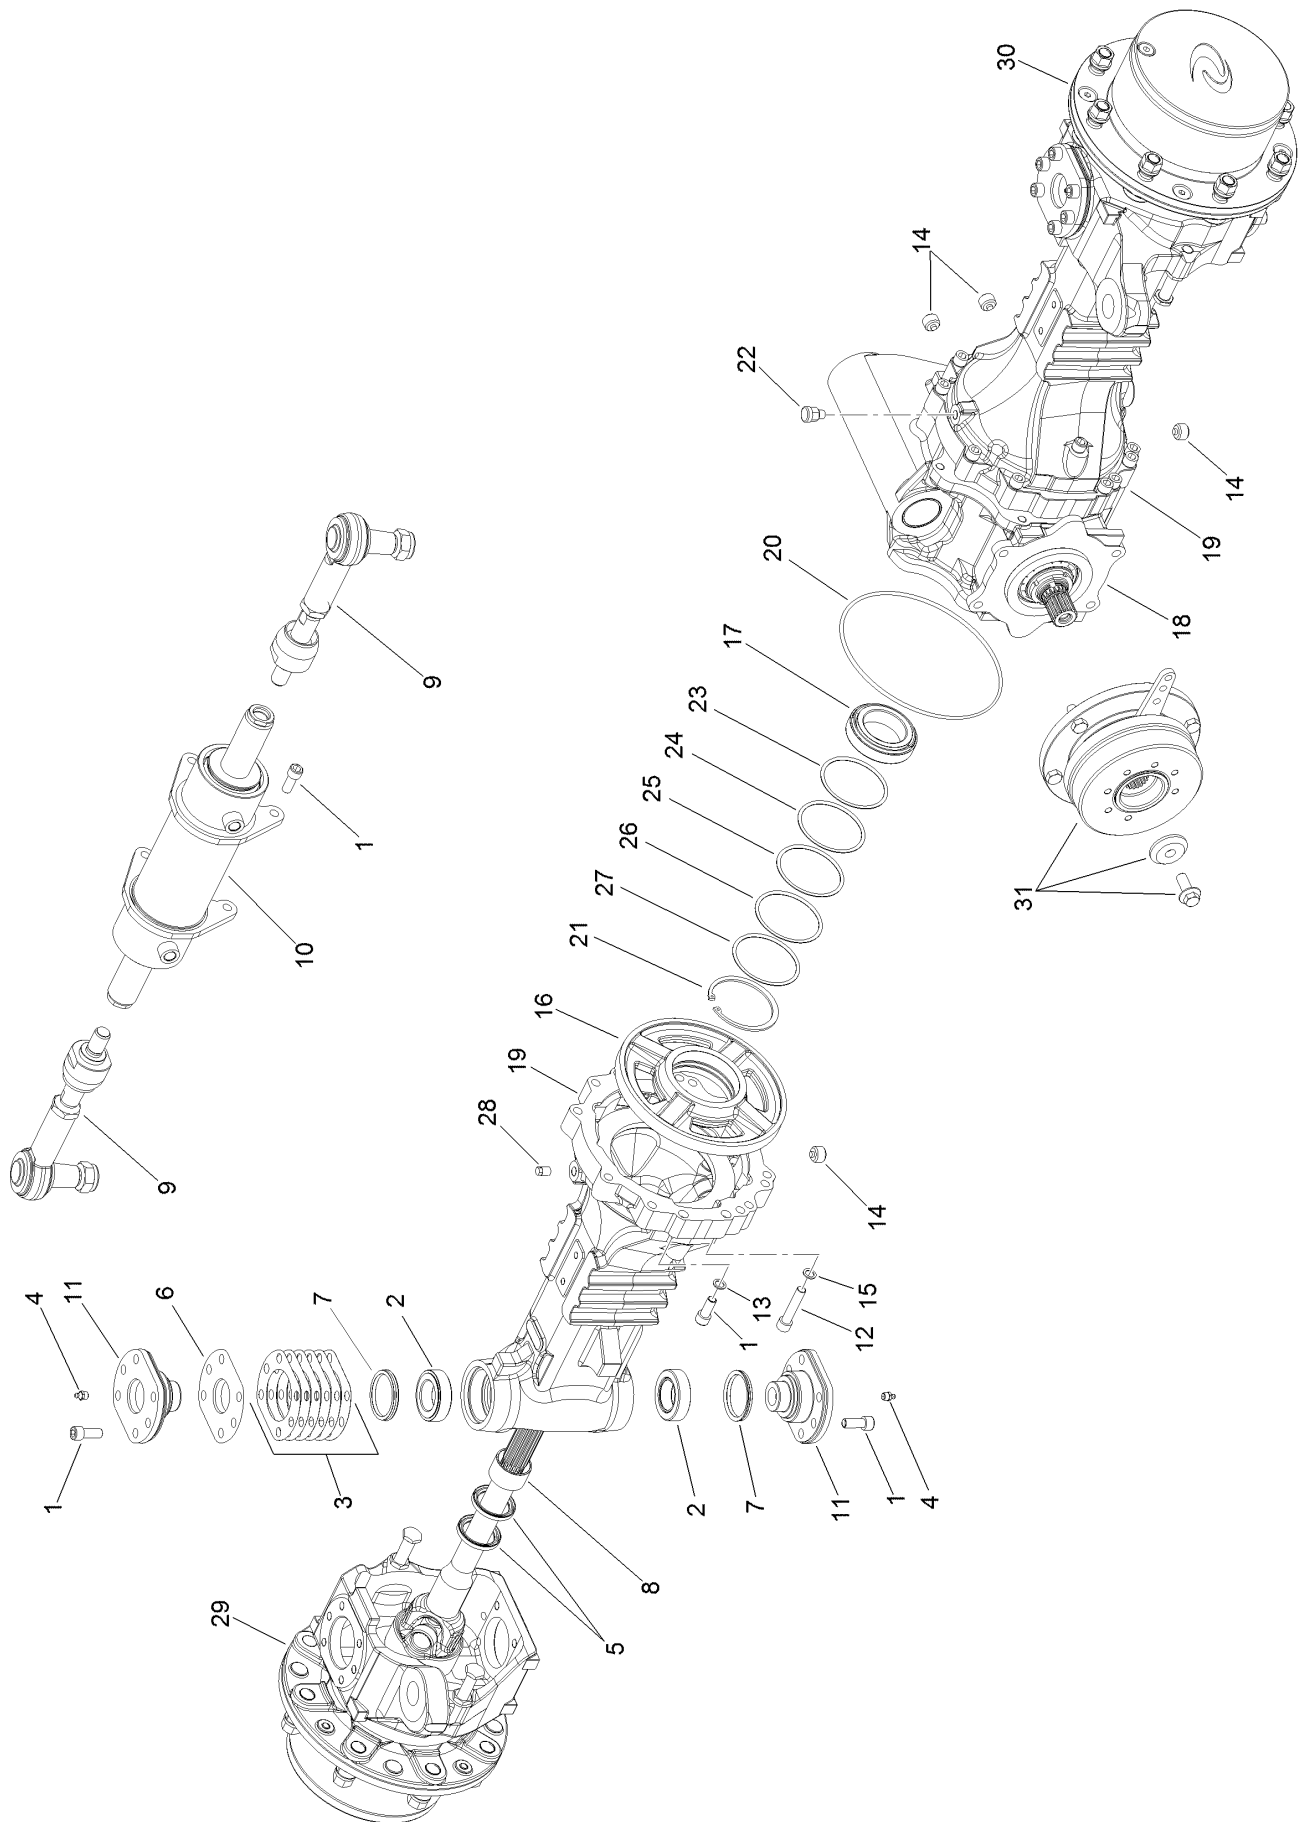

Front Axle Assembly No. AU124914 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-6901	32	Screw-Soc HD	17	131-6917	2	Bearing
2	131-6902	4	Joint-Ball	18	131-7040	1	Pinion Group
3	131-6903	10	Shim-Joint, Articulated (0.2)	19	131-6918	2	Housing-Side
4	131-6904	4	Greaser	20	131-6927	2	O-Ring
5	131-6905	4	Seal-Oil	21	131-6919	2	Ring-Snap
6	131-6906	2	Shim-Joint, Articulated (0.1)	22	131-6920	1	Plug-Breather
7	131-6907	4	V-Ring	23	131-6921	2	Shim (1.0)
8	131-6908	2	Bushing	24	131-6922	2	Shim (0.2)
9	131-6909	2	Rod-Tie	25	131-6923	2	Shim (0.3)
10	131-6910	1	Cylinder-Steering	26	131-6924	2	Shim (0.35)
11	131-6911	4	Pin-Flanged	27	131-6925	2	Shim (0.5)
12	131-6912	24	Bolt	28	131-6926	1	Plug
13	131-6913	4	Washer-Copper	29	131-7035	1	Wheel Hub Group
14	131-6914	4	Plug-Magnetic	30	131-7036	1	Wheel Hub Group
15	131-6915	24	Washer-Schnorr	31	131-6900	1	Brake Group
16	131-6916	2	Flange-Differential				


Pinion Group Assembly No. 131-7040

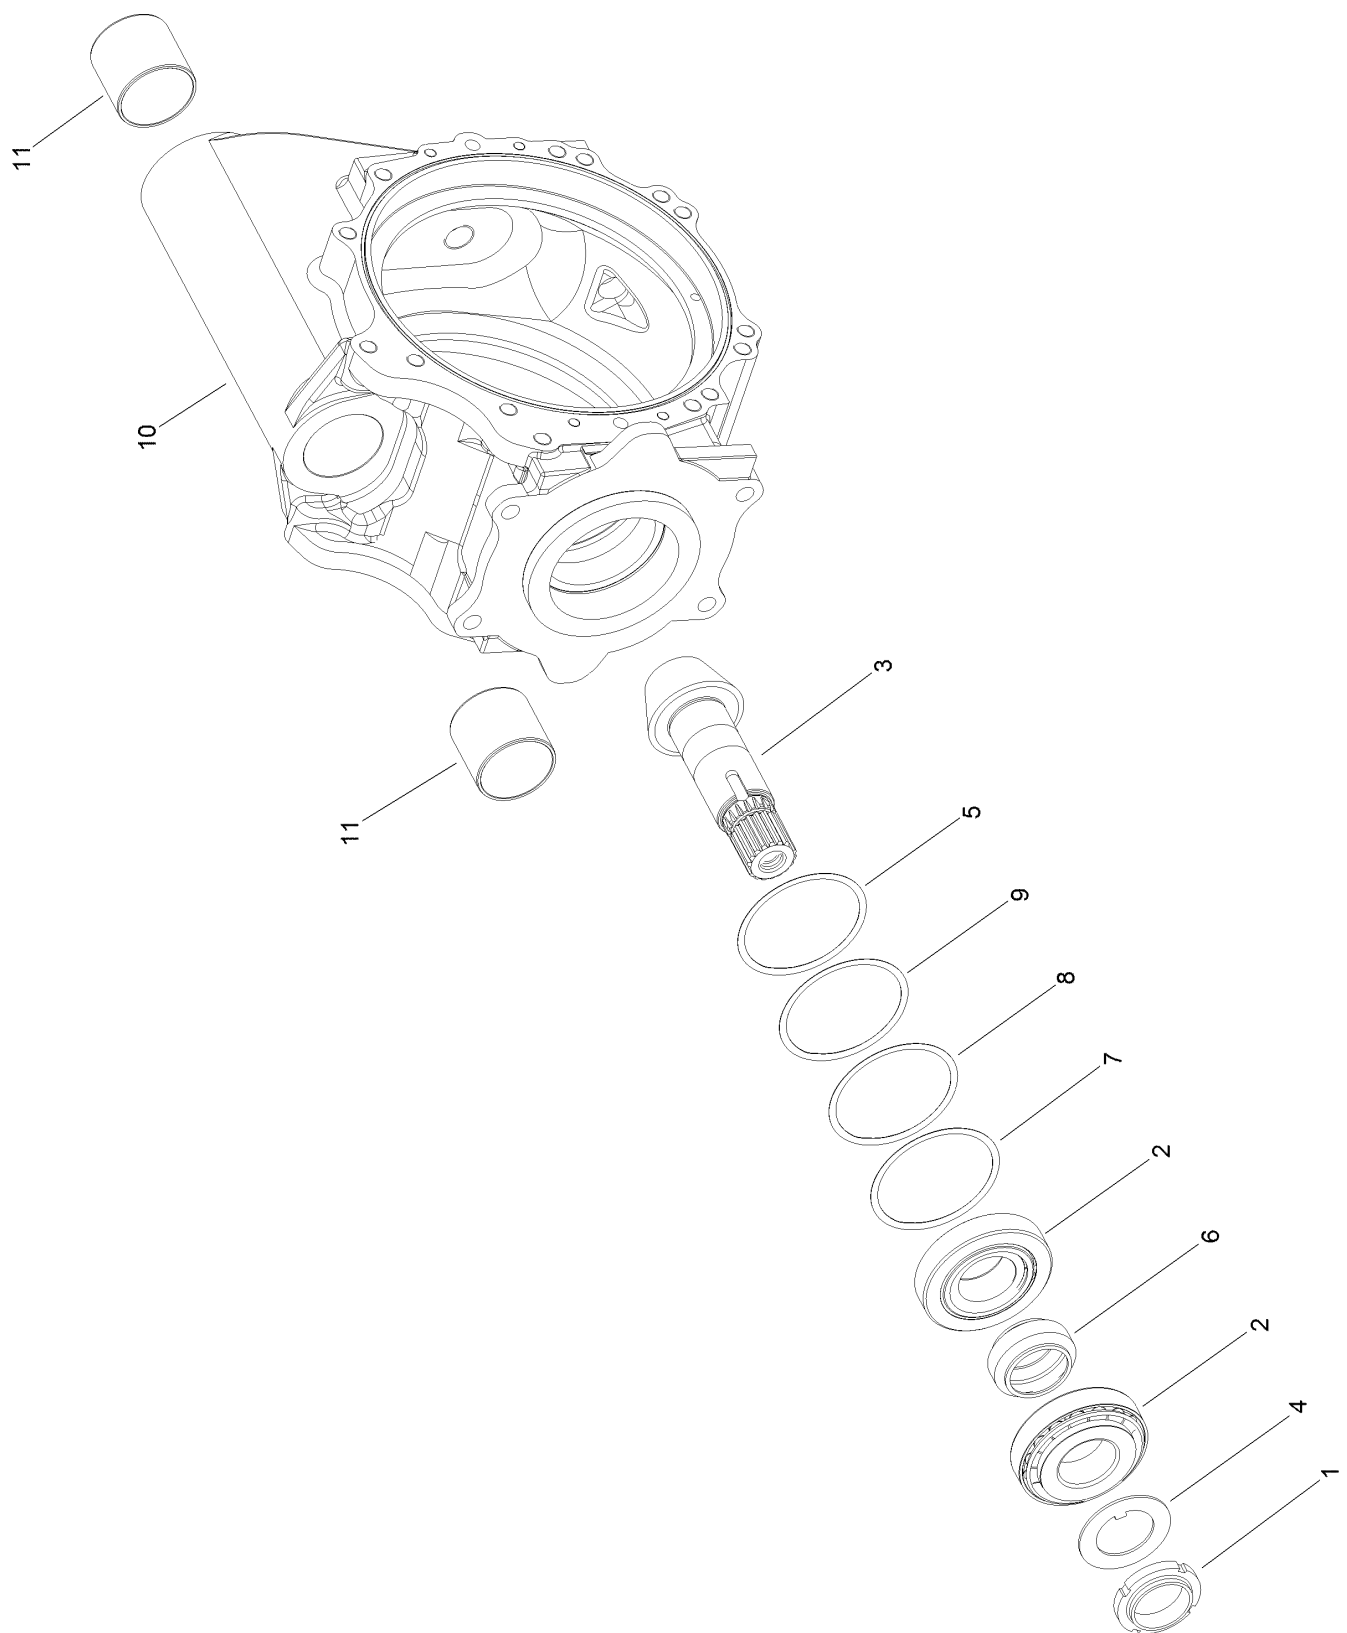

Pinion Group Assembly No. 131-7040 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-7007	1	Nut-Lock	7	131-7013	1	Shim (0.35)
2	131-7008	2	Bearing-Roller, Taper	8	131-7014	1	Shim (0.3)
3	131-7009	1	Pinion-Bevel	9	131-7015	1	Shim (0.4)
4	131-7010	1	Washer-Rotation, Anti	10	131-7017	1	Housing-Central, Upper Pivot
5	131-7011	1	Shim (0.5)	11	131-7018	2	Bushing
6	131-7012	1	Spacer-Deformable				


Wheel Hub Group Assembly No. 131-7035

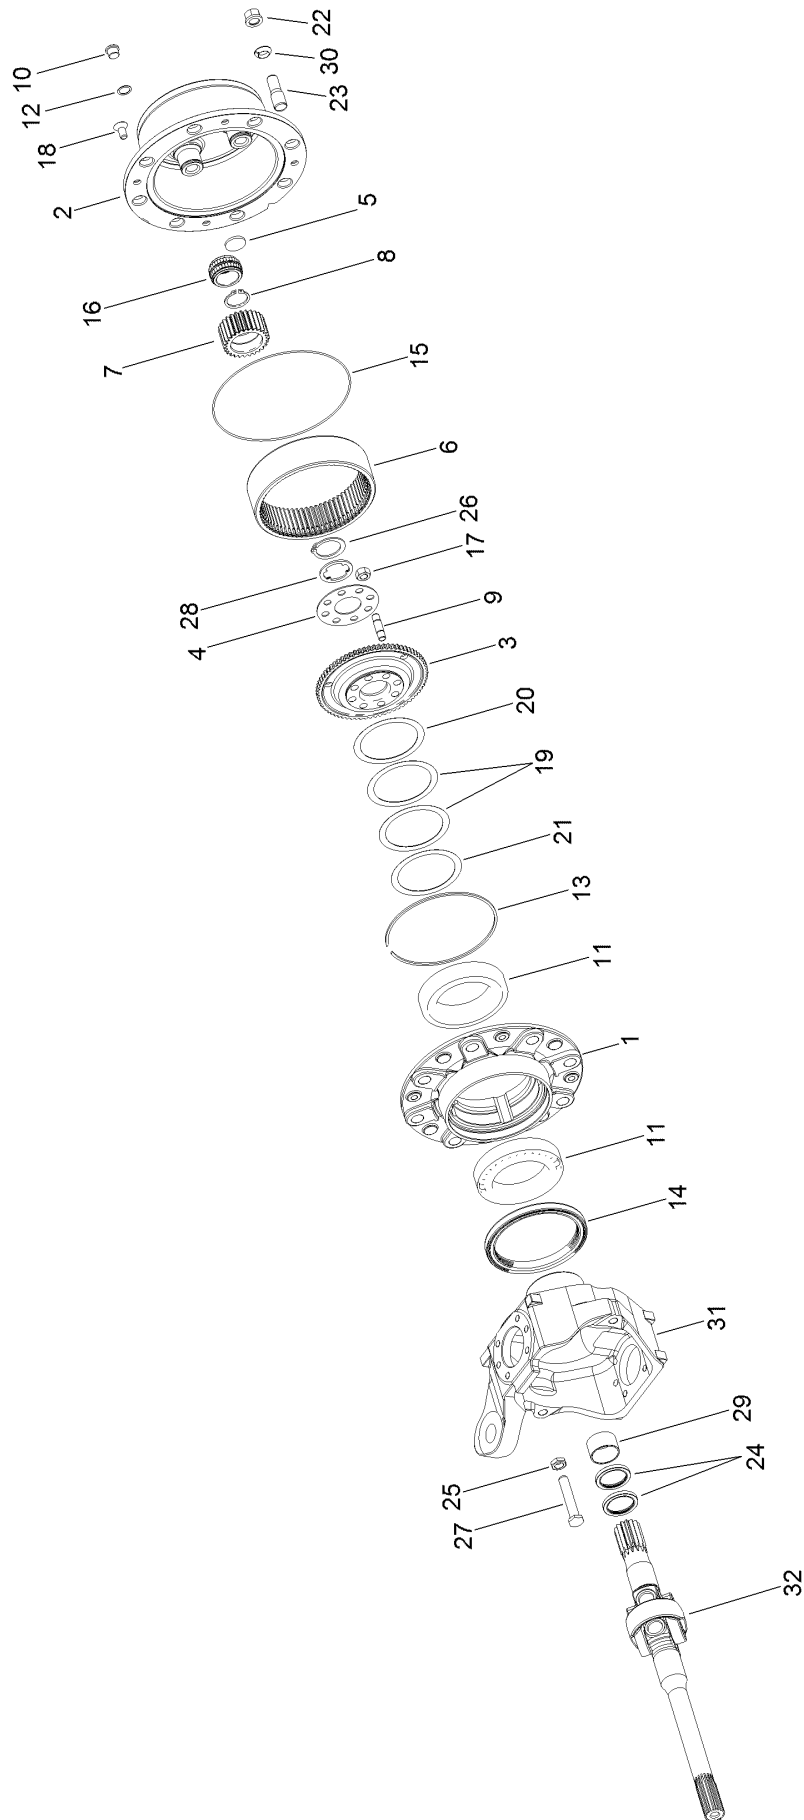

Wheel Hub Group Assembly No. 131-7035 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-6933	1	Hub-Wheel	17	131-6948	8	Nut
2	131-6934	1	Hub-Planetary	18	131-6949	4	Screw
3	131-6935	1	Flange-Crown	19	131-6950	2	Shim (0.2)
4	131-6936	1	Ring-Crown	20	131-6951	1	Shim (0.1)
5	131-6937	1	Shim-Crown, Wheel	21	131-6952	1	Shim (0.35)
6	131-6938	1	Wheel-Crown	22	131-6953	8	Nut
7	131-6939	3	Gear-Planetary	23	131-6954	8	Bolt-Stud
8	131-6940	3	Ring-Snap	24	131-6905	2	Seal-Oil
9	131-6941	8	Bolt-Stud	25	131-6955	2	Nut
10	131-6942	1	Cap	26	131-6956	1	Ring-Snap
11	131-6943	2	Bearing	27	131-6957	2	Screw-End, Steering
12	131-6944	1	Washer-Copper	28	131-6958	1	Shim-Crown
13	131-6945	1	Ring-Retaining	29	131-6908	1	Bushing
14	131-6946	1	Seal-Oil	30	131-6960	8	Washer-Elastic
15	131-6927	1	O-Ring	31	131-6961	1	Joint-LH, Articulated
16	131-6947	3	Bearing-Roller	32	131-6962	1	Shaft-Drive


Wheel Hub Group Assembly No. 131-7036

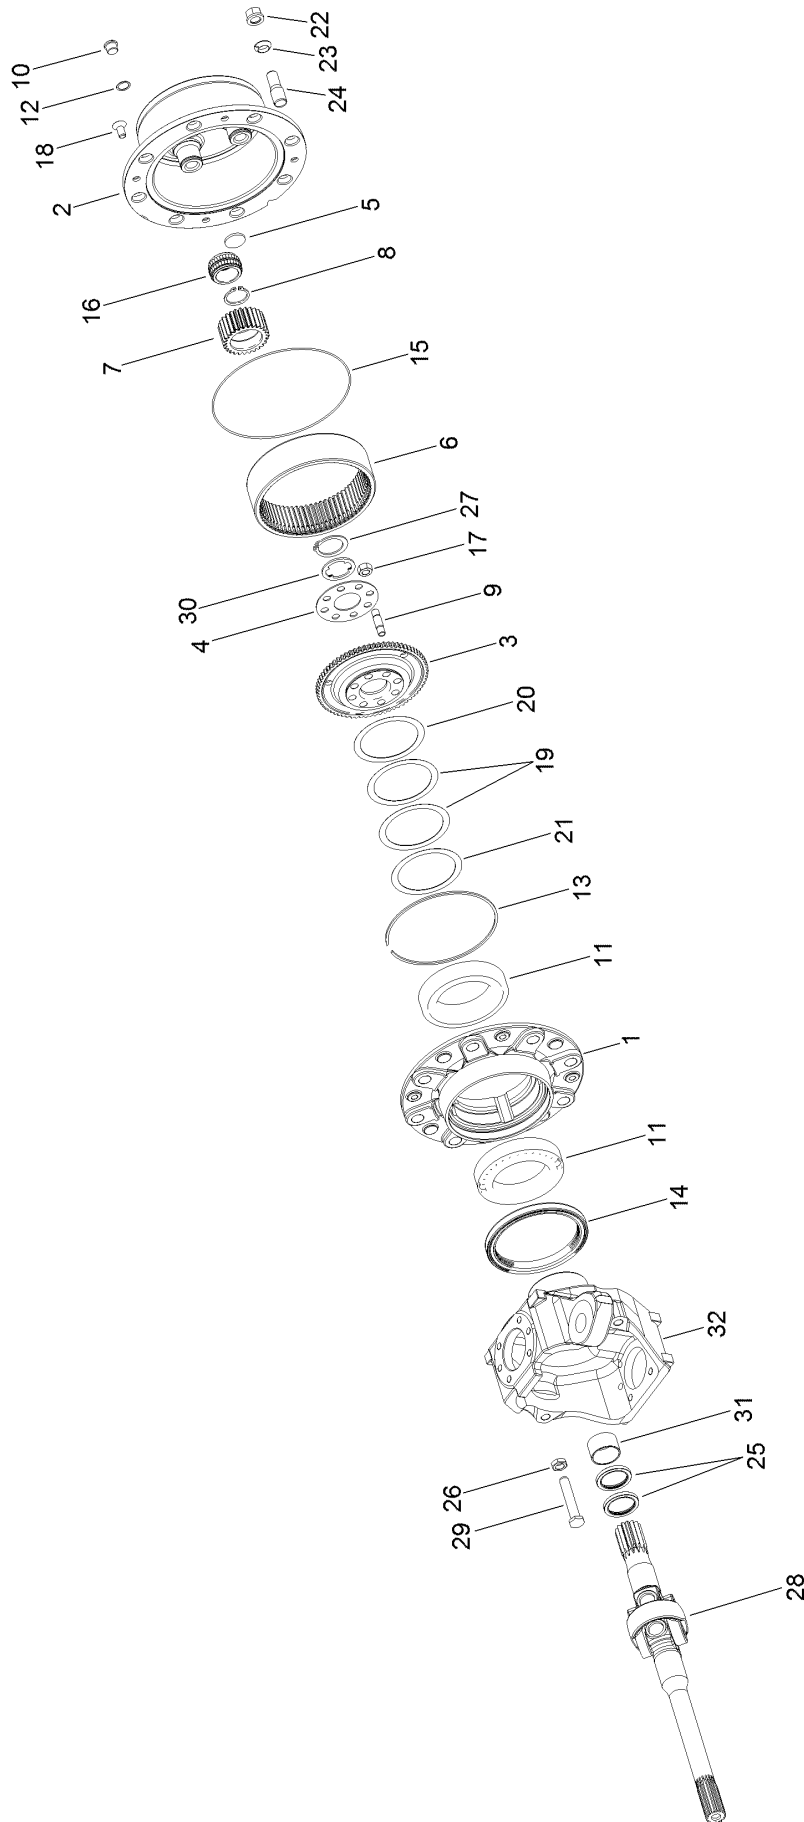

Wheel Hub Group Assembly No. 131-7036 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-6933	1	Hub-Wheel	17	131-6948	8	Nut
2	131-6934	1	Hub-Planetary	18	131-6949	4	Screw
3	131-6935	1	Flange-Crown	19	131-6950	2	Shim (0.2)
4	131-6936	1	Ring-Crown	20	131-6951	1	Shim (0.1)
5	131-6937	1	Shim-Crown, Wheel	21	131-6952	1	Shim (0.35)
6	131-6938	1	Wheel-Crown	22	131-6953	8	Nut
7	131-6939	3	Gear-Planetary	23	131-6960	8	Washer-Elastic
8	131-6940	3	Ring-Snap	24	131-6954	8	Bolt-Stud
9	131-6941	8	Bolt-Stud	25	131-6905	2	Seal-Oil
10	131-6942	1	Cap	26	131-6955	2	Nut
11	131-6943	2	Bearing	27	131-6956	1	Ring-Snap
12	131-6944	1	Washer-Copper	28	131-6962	1	Shaft-Drive
13	131-6945	1	Ring-Retaining	29	131-6957	2	Screw-End, Steering
14	131-6946	1	Seal-Oil	30	131-6958	1	Shim-Crown
15	131-6927	1	O-Ring	31	131-6908	1	Bushing
16	131-6947	3	Bearing-Roller	32	131-6963	1	Joint-RH, Articulated


Brake Group Assembly No. 131-6900

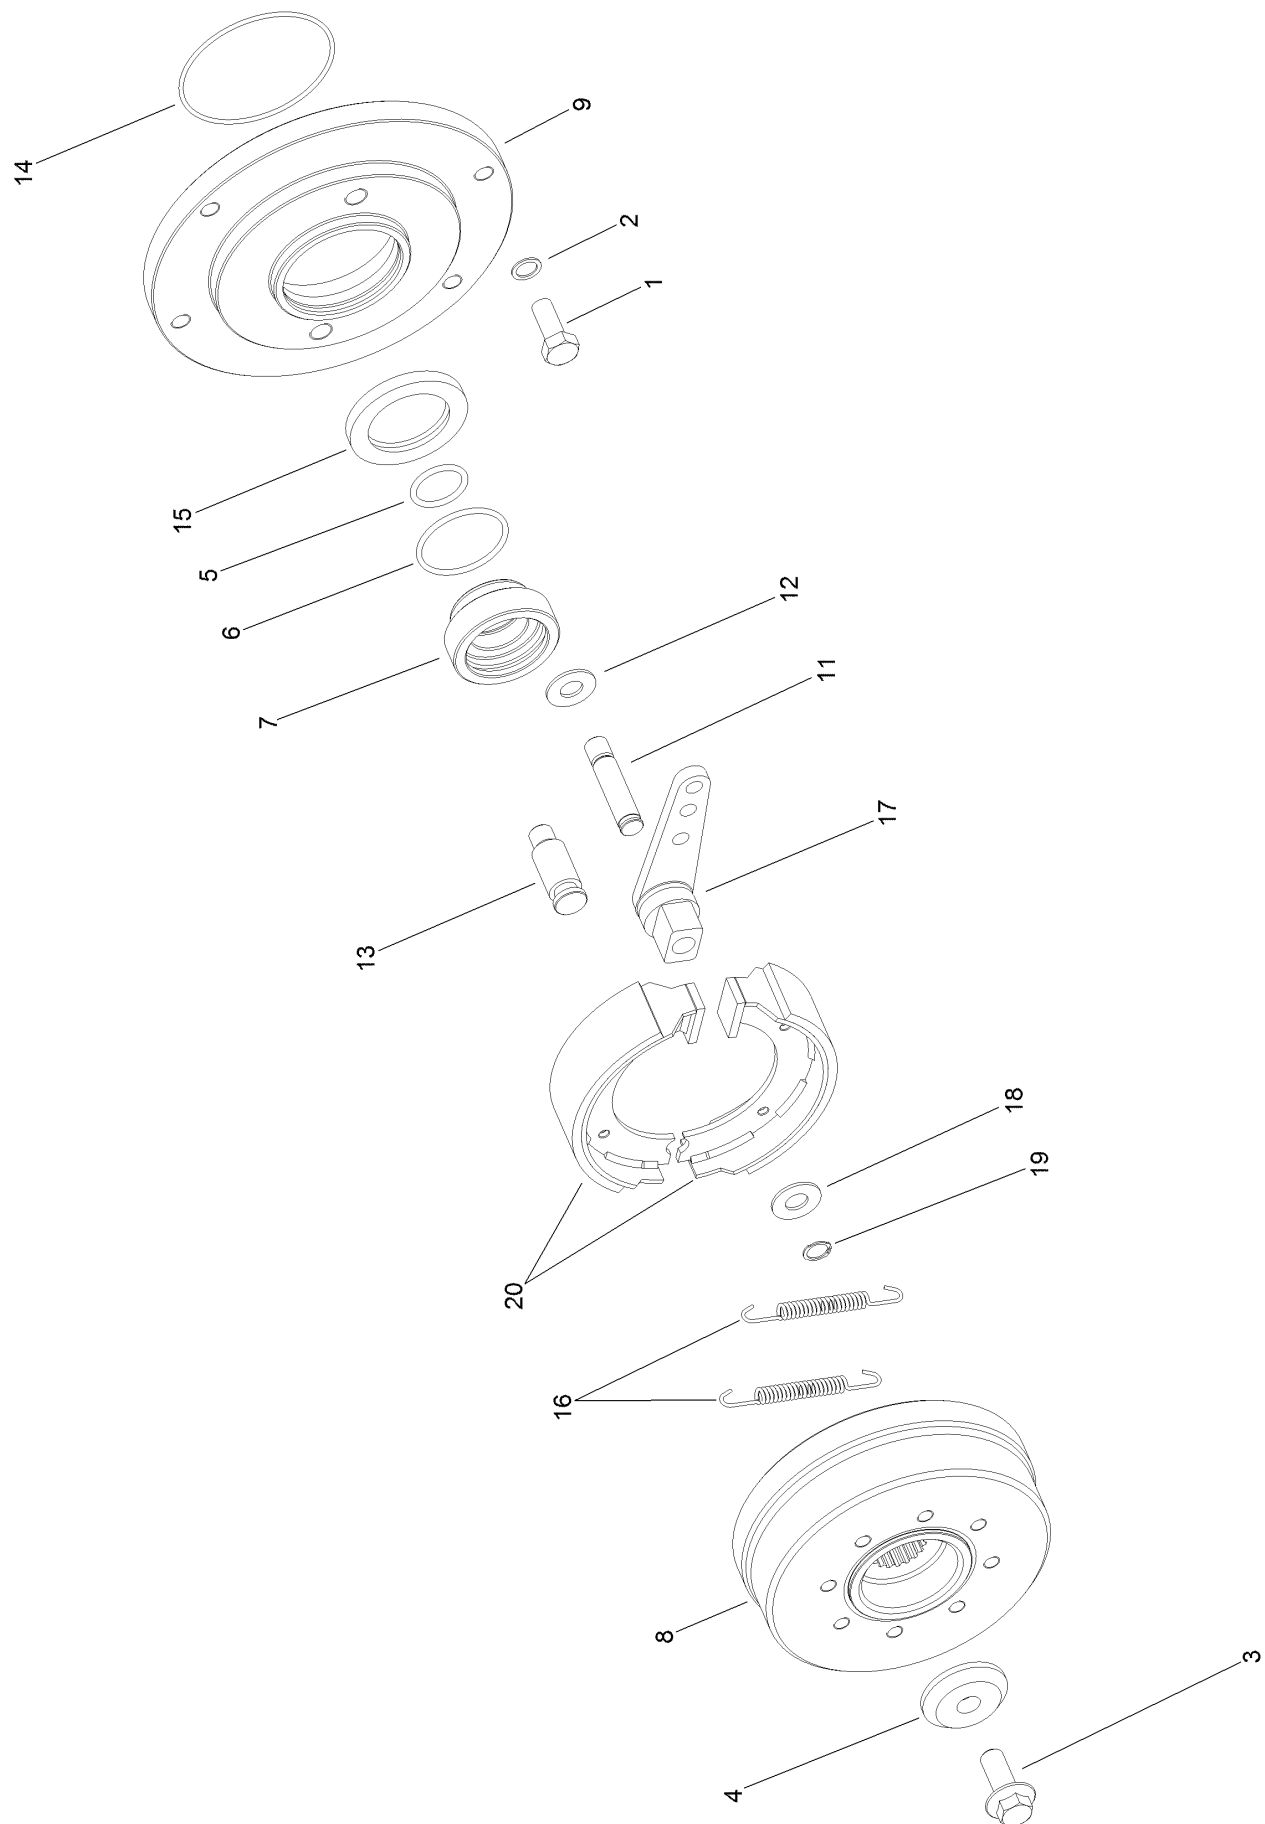

Brake Group Assembly No. 131-6900 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-7019	4	Screw	12	131-7026	1	Washer-Axial
2	131-6915	4	Washer-Schnorr	13	131-7027	1	Shaft-Pivot, Brake
3	131-6999	1	Screw-Flanged	14	131-7028	1	O-Ring
4	131-7000	1	Washer-Pinion	15	131-7029	1	Seal-Oil
5	131-7004	1	O-Ring	16	131-7030	2	Spring-Brake
6	131-7020	1	O-Ring	17	131-7031	1	Lever-Brake
7	131-7021	1	Seal-Housing	18	131-7032	1	Washer-Lever, Brake
8	131-7022	1	Drum-Brake	19	131-7033	1	Ring-Snap
9	131-7023	1	Flange-Brake	20	131-7034	2	Shoe-Brake
11	131-7025	1	Pivot-Lever, Brake				


Rear Axle Assembly No. AU124920

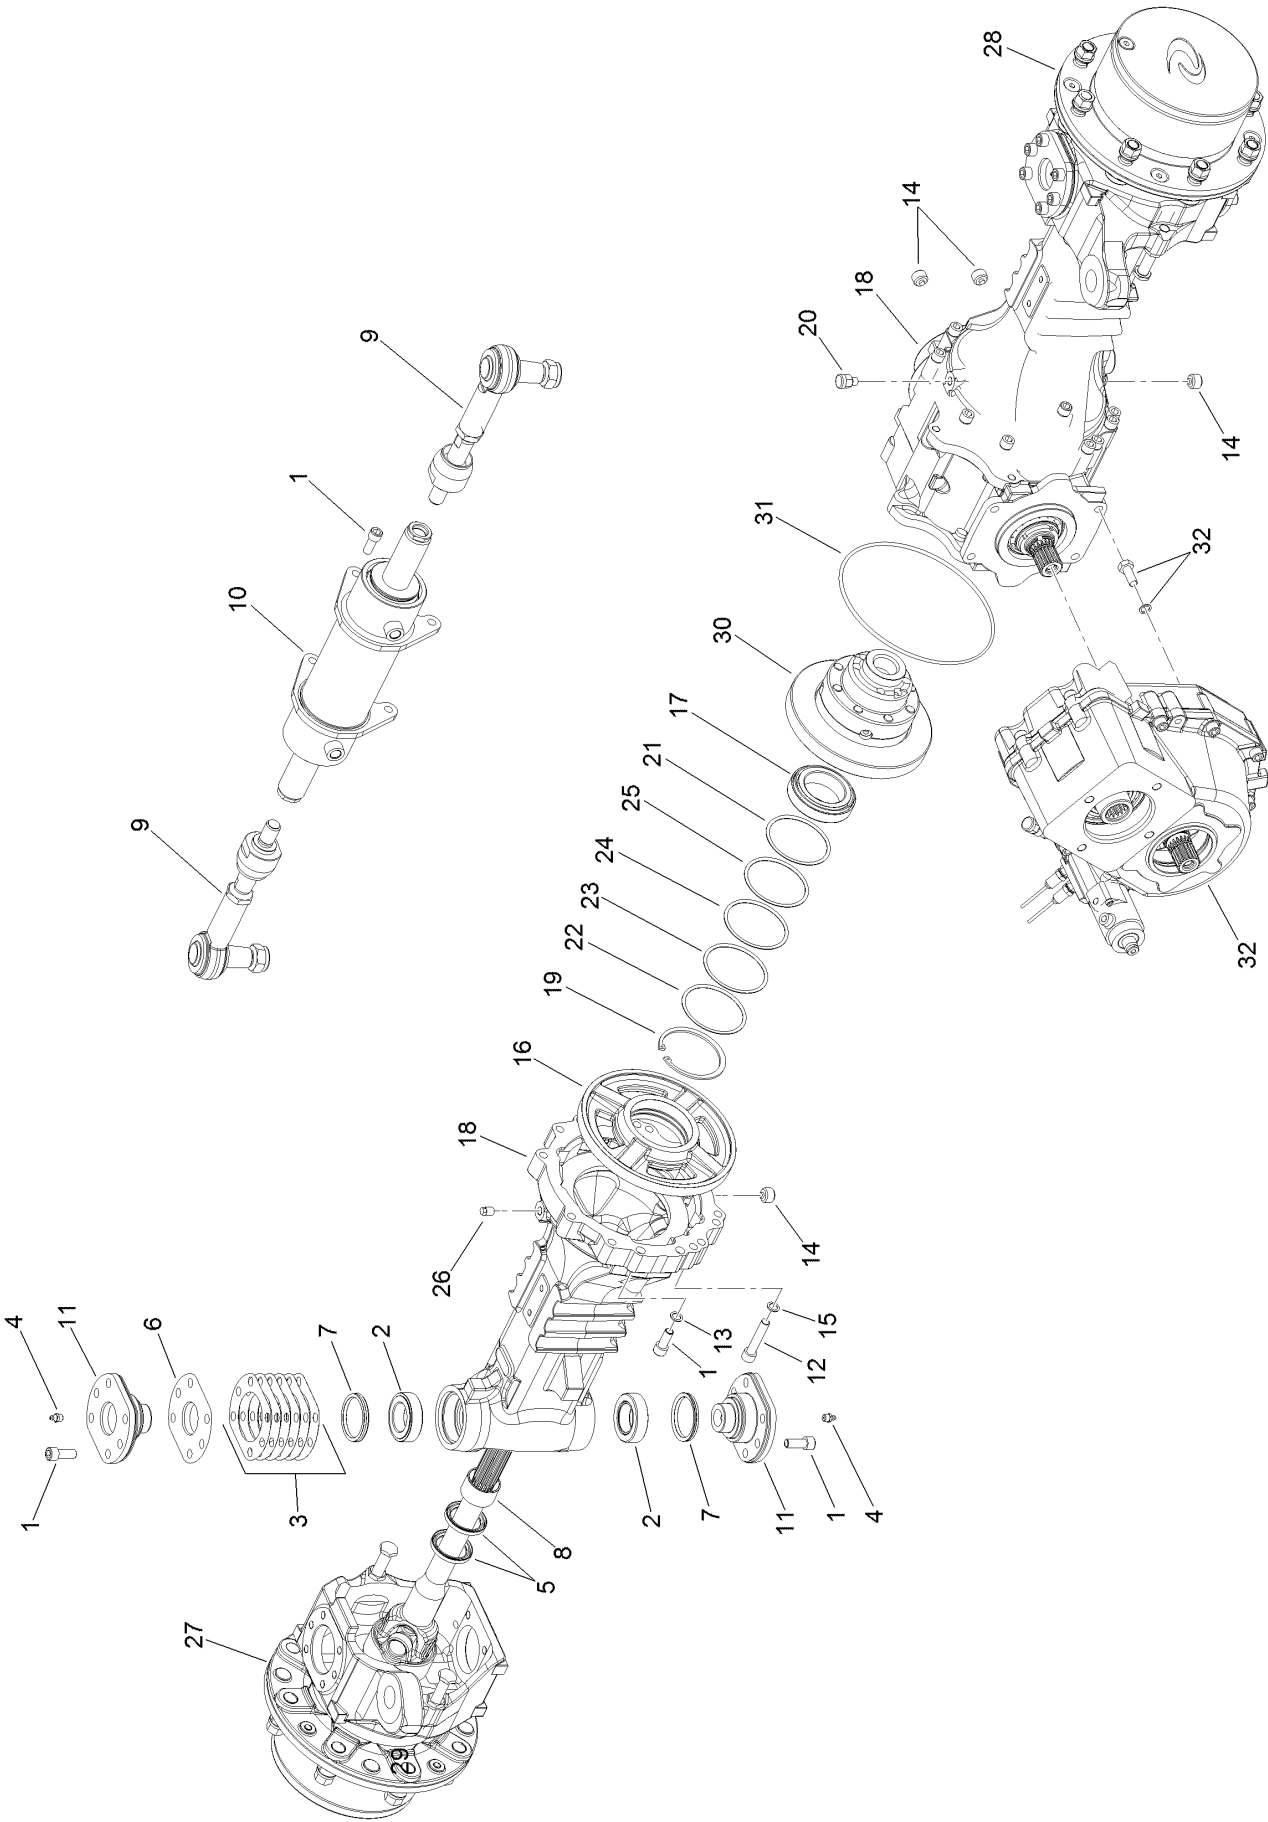

Rear Axle Assembly No. AU124920 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-6901	32	Screw-Soc HD	17	131-6917	2	Bearing
2	131-6902	4	Joint-Ball	18	131-6918	2	Housing-Side
3	131-6903	10	Shim-Joint, Articulated (0.2)	19	131-6919	2	Ring-Snap
4	131-6904	4	Greaser	20	131-6920	1	Plug-Breather
5	131-6905	4	Seal-Oil	21	131-6921	2	Shim (1.0)
6	131-6906	2	Shim-Joint, Articulated (0.1)	22	131-6922	2	Shim (0.2)
7	131-6907	4	V-Ring	23	131-6923	2	Shim (0.3)
8	131-6908	2	Bushing	24	131-6924	2	Shim (0.35)
9	131-6909	2	Rod-Tie	25	131-6925	2	Shim (0.5)
10	131-6910	1	Cylinder-Steering	26	131-6926	1	Plug
11	131-6911	4	Pin-Flanged	27	131-6927	2	O-Ring
12	131-6912	24	Bolt	28	131-7035	1	Wheel Hub Group
13	131-6913	4	Washer-Copper	29	131-7036	1	Wheel Hub Group
14	131-6914	4	Plug-Magnetic	30	131-7037	1	Pinion Group
15	131-6915	24	Washer-Schnorr	31	131-7038	1	Differential Group
16	131-6916	2	Flange-Differential	32	131-7039	1	Gearbox Group

Pinion Group Assembly No. 131-7037

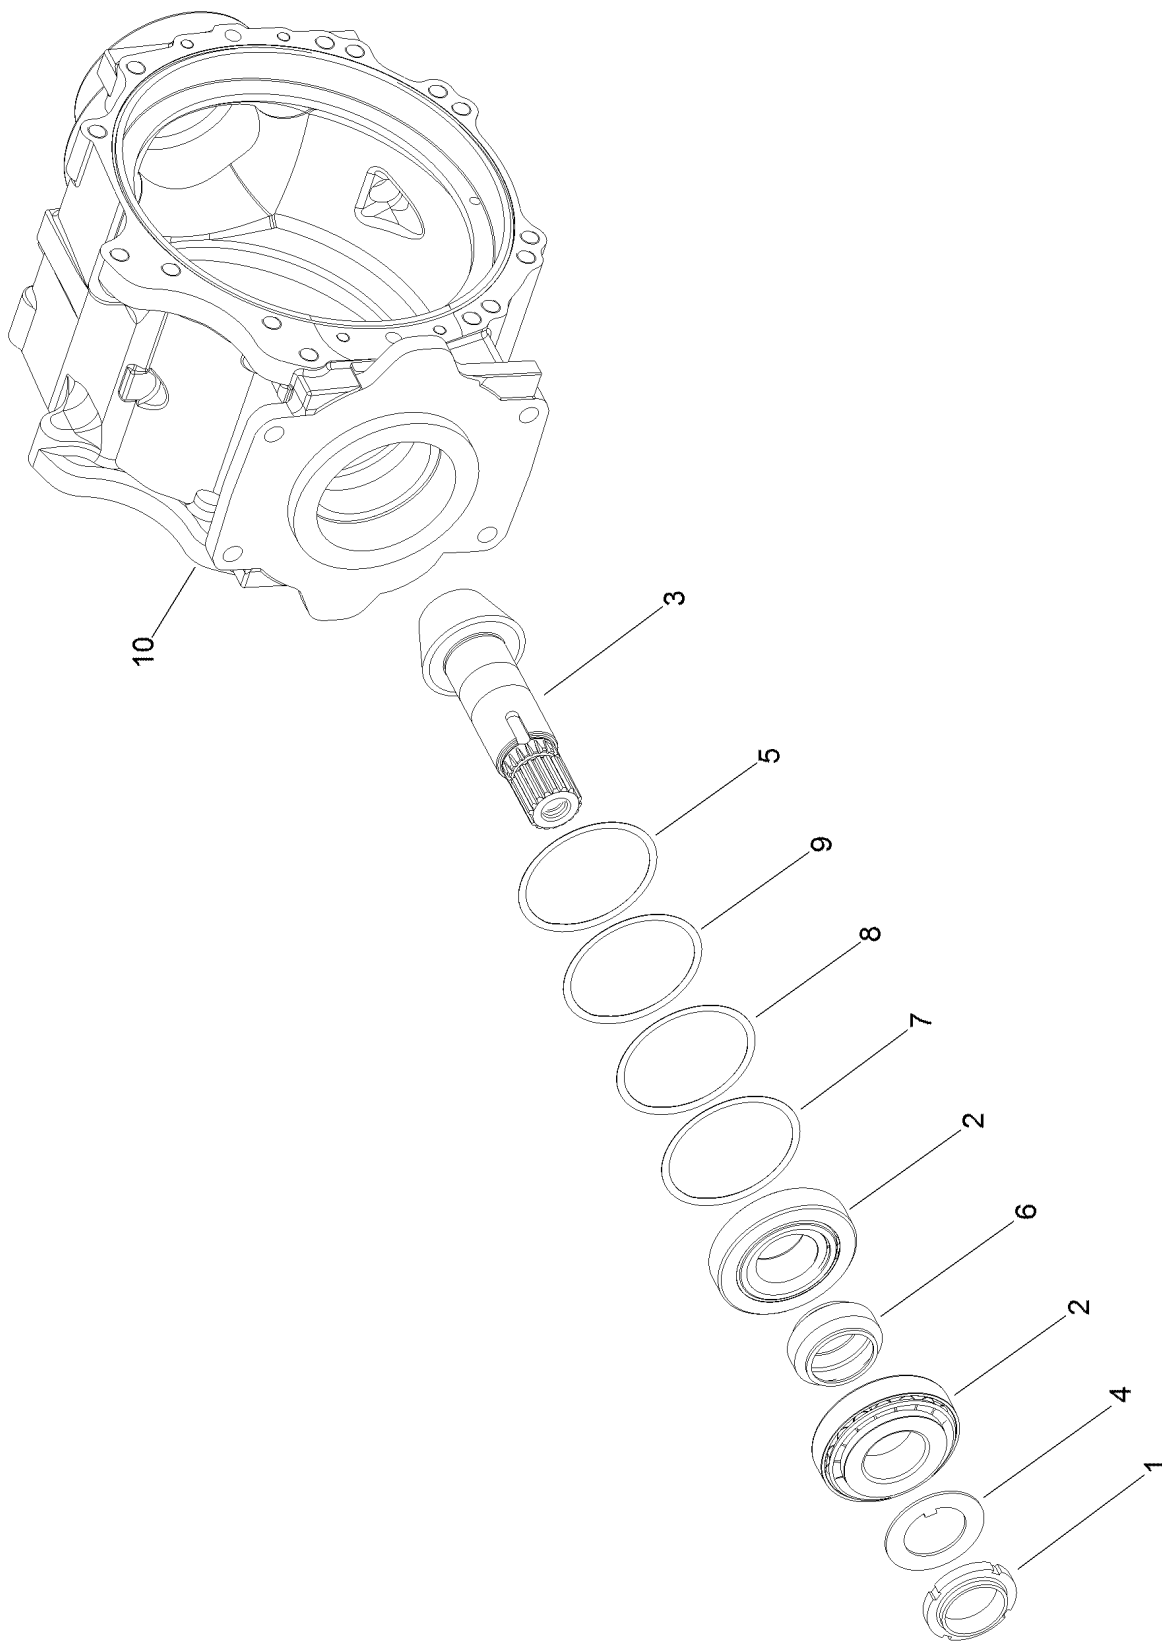


Pinion Group Assembly No. 131-7037 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-7007	1	Nut-Lock
2	131-7008	2	Bearing-Roller, Taper
3	131-7009	1	Pinion-Bevel
4	131-7010	1	Washer-Rotation, Anti
5	131-7011	1	Shim (0.5)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	131-7012	1	Spacer-Deformable
7	131-7013	1	Shim (0.35)
8	131-7014	1	Shim (0.3)
9	131-7015	1	Shim (0.4)
10	131-7016	1	Housing-Central

Differential Group Assembly No. 131-7038

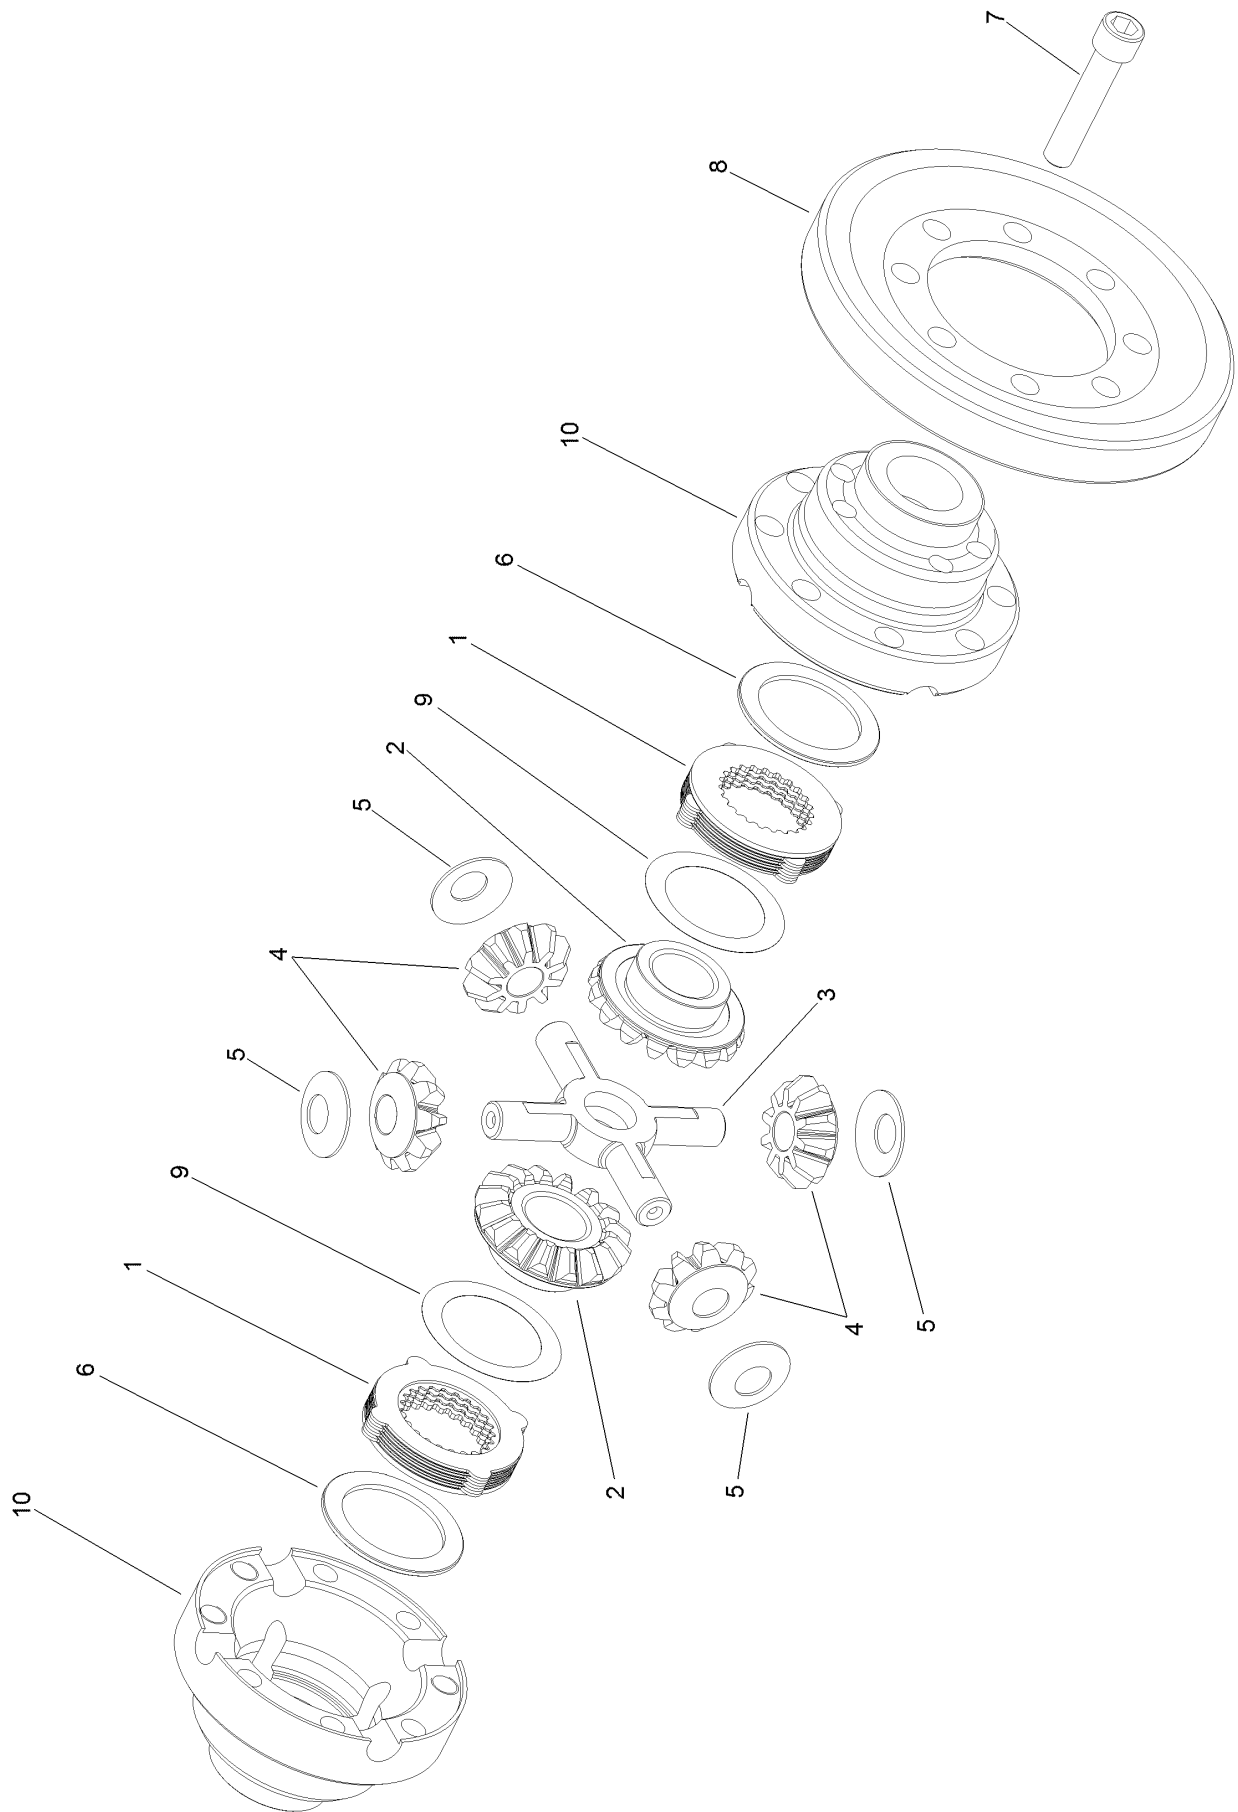


Differential Group Assembly No. 131-7038 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-6928	2	Package-Disc
2	131-6929	2	Wheel-Crown
3	131-6930	1	Gear-Spider
4	131-6931	4	Pinion-Side
5	131-6932	4	Shim-Pinion, Side

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	131-6964	2	Washer-Pinion
7	131-6965	8	Screw-Socket
8	131-6966	1	Crown-Bevel
9	131-6967	2	Shim (0.2)
10	131-6968	1	Housing-Differential


Gearbox Group Assembly No. 131-7039

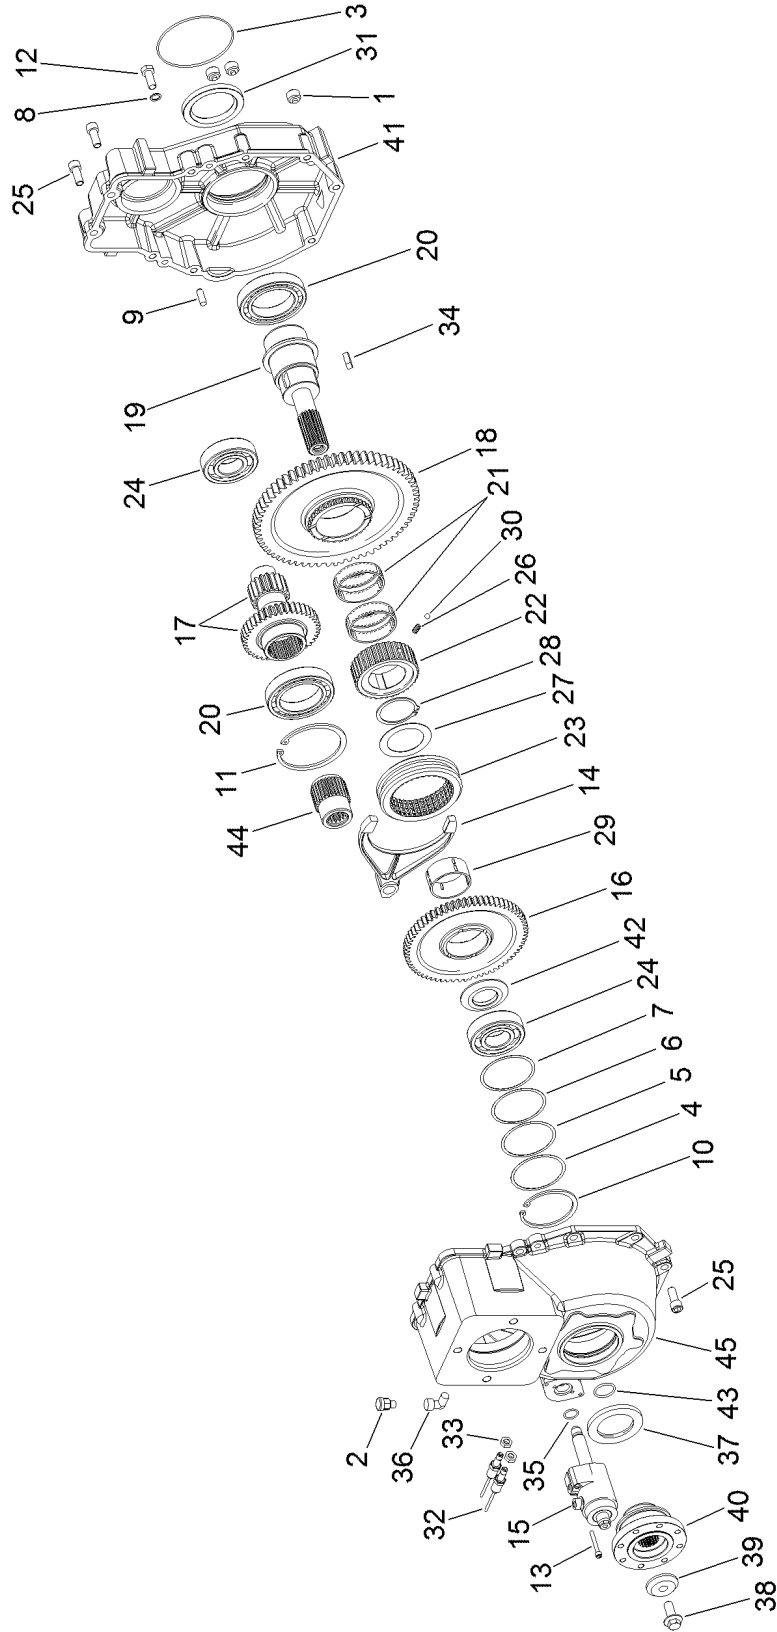

Gearbox Group Assembly No. 131-7039 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-6914	3	Plug-Magnetic	24	131-6985	2	Bearing
2	131-6920	1	Plug-Breather	25	131-6986	10	Screw-HSH
3	131-6969	1	O-Ring	26	131-6987	3	Spring-Selector
4	131-7013	1	Shim (0.35)	27	131-6988	1	Shim
5	131-7011	1	Shim (0.5)	28	131-6989	1	Ring-Snap
6	131-7015	1	Shim (0.4)	29	131-6990	1	Bearing-Needle
7	131-7014	1	Shim (0.3)	30	131-6991	3	Sphere
8	131-6915	4	Washer-Schnorr	31	131-6992	1	Seal-Oil
9	131-6970	2	Pin-Parallel	32	131-6993	2	Sensor-Selector, Gear
10	131-6971	1	Ring-Retaining	33	131-6994	2	Nut
11	131-6972	1	Ring-Snap	34	131-6995	3	Key
12	131-6973	4	Screw	35	131-6996	1	O-Ring
13	131-6974	2	Screw-HSH	36	131-6997	1	Elbow-90 DEG
14	131-6975	1	Fork-Gearbox	37	131-6998	1	Seal-Oil
15	131-6976	1	Cylinder-Gearbox	38	131-6999	1	Screw-Flanged
16	131-6977	1	Gear-Driven	39	131-7000	1	Washer-Pinion
17	131-6978	1	Gear-Drive	40	131-7001	1	Flange-PTO
18	131-6979	1	Gear-Driven	41	131-7002	1	Housing-Gear
19	131-6980	1	Shaft-Driven	42	131-7003	1	Shim-Gear
20	131-6981	2	Bearing-Ball	43	131-7004	1	O-Ring
21	131-6982	2	Cage-Bearing, Needle	44	131-7005	1	Sleeve-Motor
22	131-6983	1	Hub-Selector	45	131-7006	1	Cover-Gear
23	131-6984	1	Collar-Shift				

Drive Shaft Assembly No. AU126653

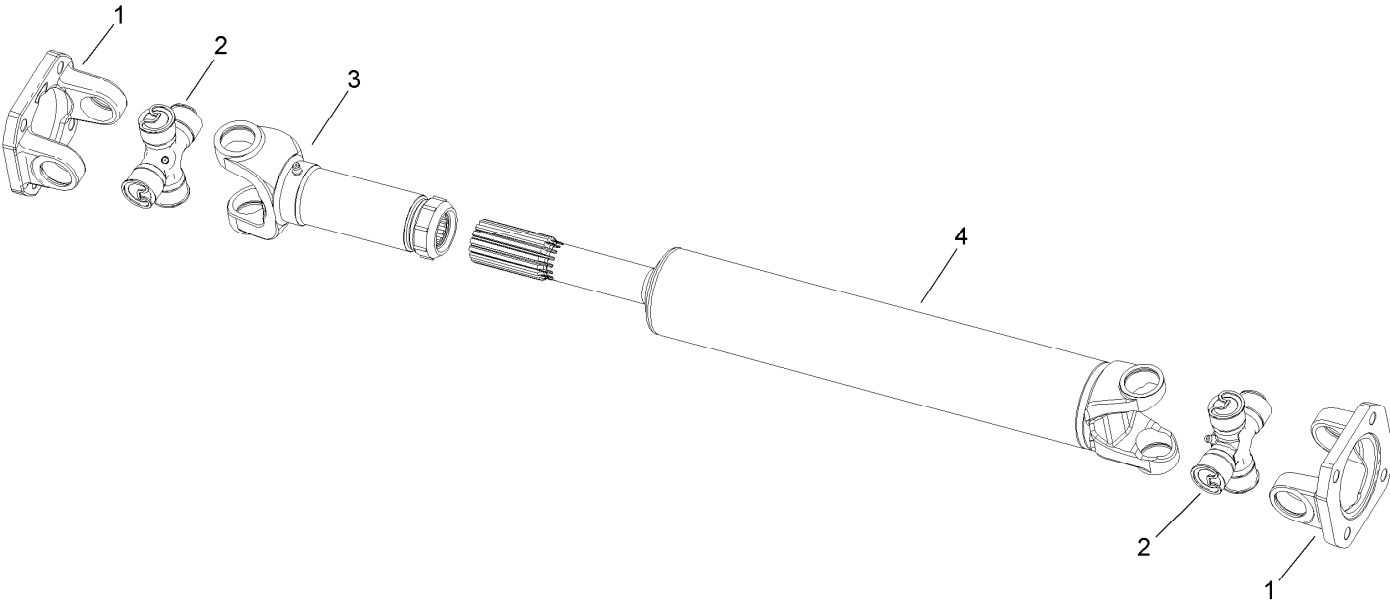


Drive Shaft Assembly No. AU126653 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-6233	2	Flange-Yoke
2	127-6234	2	Joint-Universal

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	127-6235	1	Slip-Yoke
4	127-6236	1	Yoke, Tube And Stub ASM

Engine Assembly







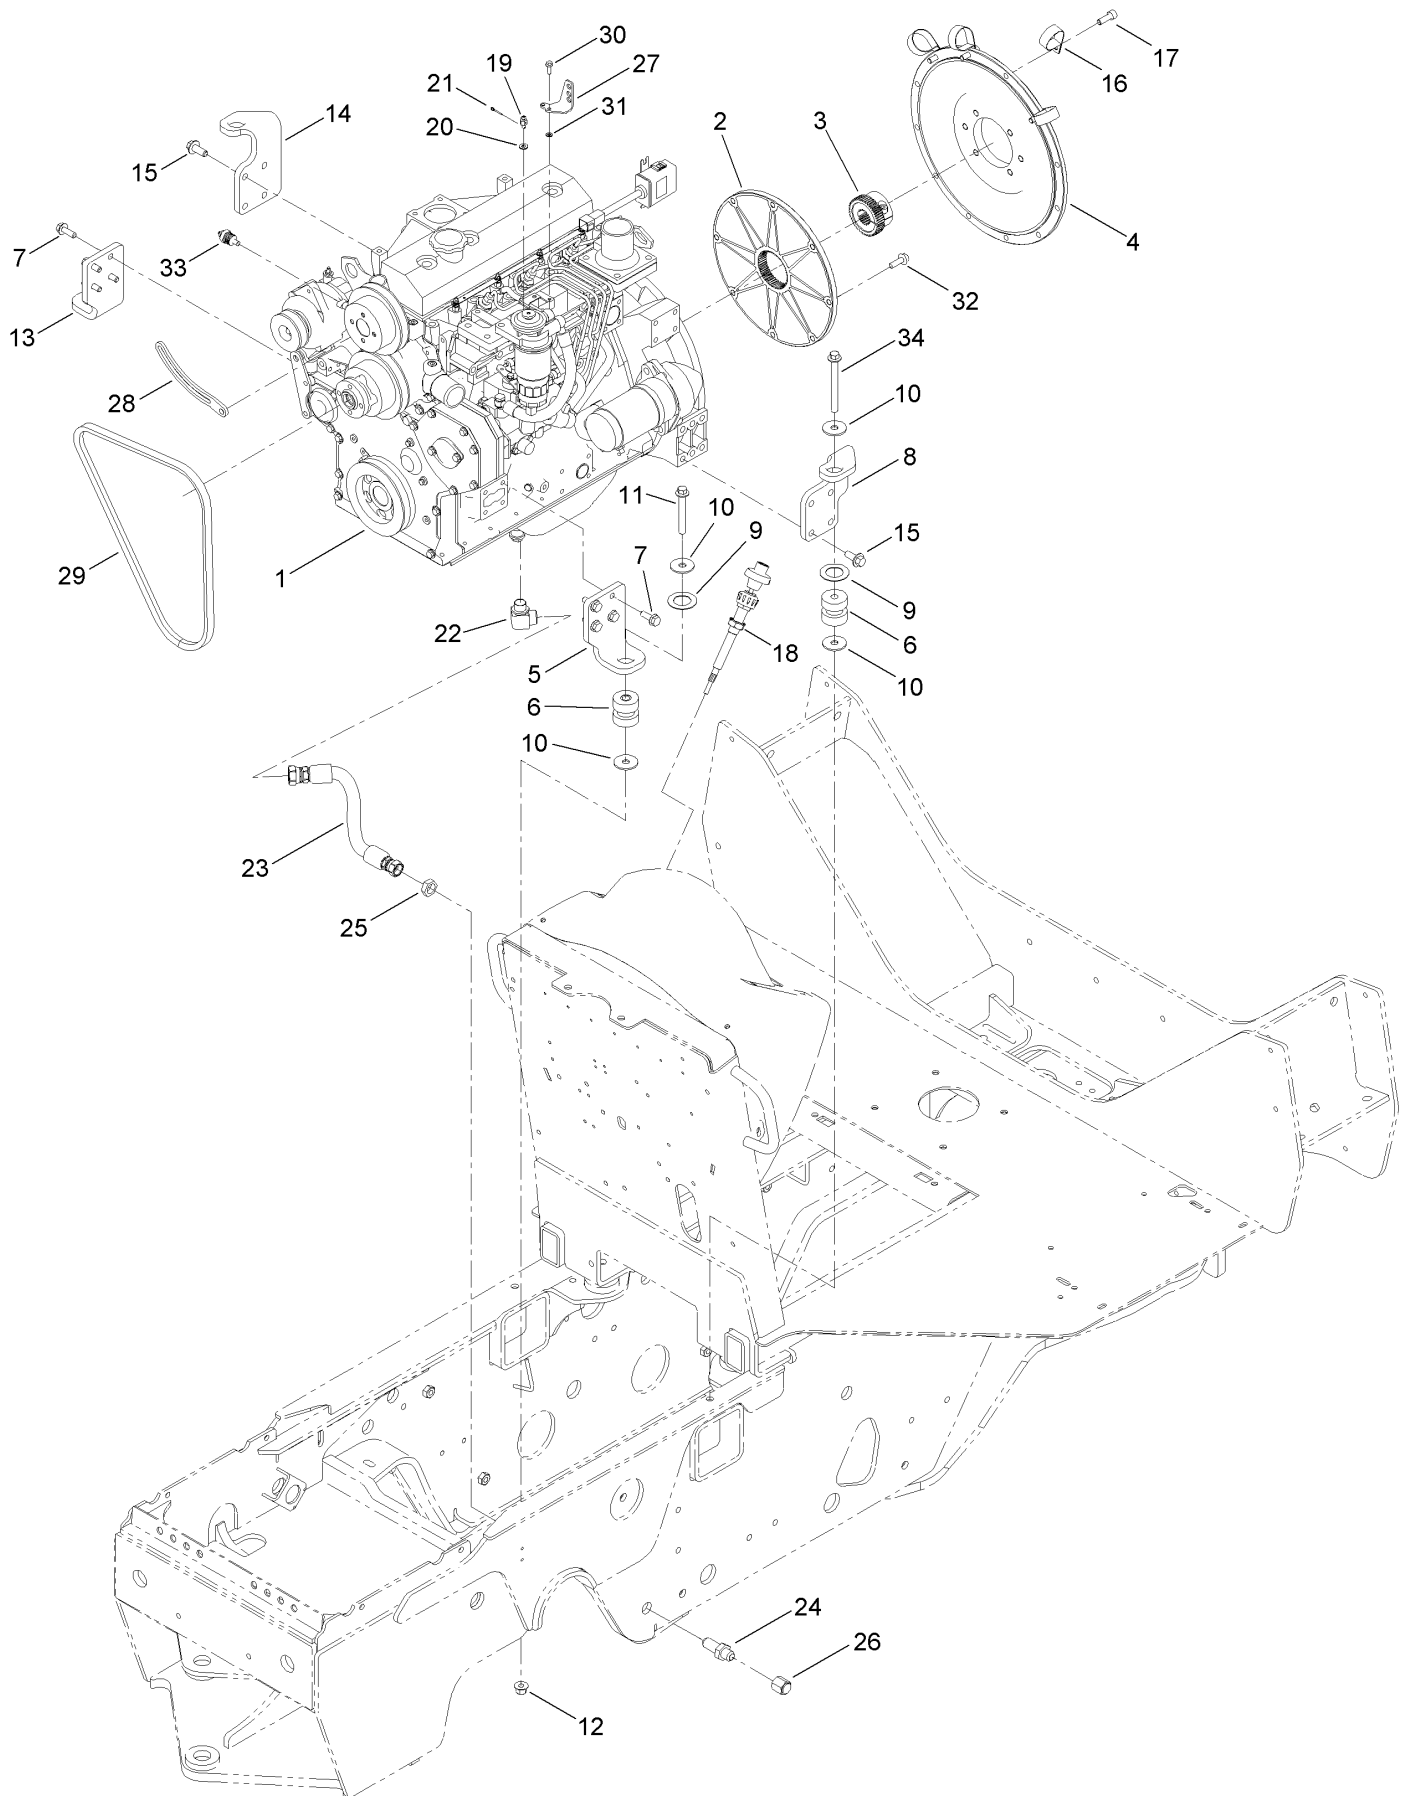


Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Cummins ●	17	AU862-10030	12	Screw-HSH
2	AU125037	1	Flange-Pump	18	AU112937A1	1	Cable-Throttle
3	AU125036	1	Hub-Pump	19	AUH327494	1	Swivel
4	AU125035-03	1	Plate-Mounting, Pump	20	AU495-11028	1	Washer-Flat
5	AU125213-03	1	Plate-Front Engine Mount, LH	21	3272-2	1	Pin-Cotter
6	AU8NG28121	4	Isolator-Mounting, Universal	22	AU91-GG308-NP12-	1	Adapter
7	33105-030	8	Screw-HHF	23	125-6797	1	Hose ASM
8	130-8837-03	1	Mount-Engine Rear, LH	24	AU218-675	1	Union-Bulkhead
9	AU113262	4	Spacer-Isolator	25	AU218-1251	1	Nut-Lock, Bulkhead
10	86-1990	8	Washer-Thrust	26	AU218-756	1	Fitting-Cap
11	33106-090	2	Screw-HHF	27	AU116960-03	1	Bracket-Throttle
12	115-1115	2	Nut-Lock, HHF	28	AU8NG10019-51-03	1	Bracket-Alternator
13	AU125224-03	1	Plate-Front Engine Mount, RH	29	AU126606	1	Belt-Fan
14	130-8838-03	1	Mount-Engine Rear, RH	30	AU100869	1	Screw-HHF
15	33106-030	8	Screw-HHF	31	33093-00	1	Washer-Flat
16	2412-147	4	Clamp-R	32	AU100877	8	Screw-HH
				33	122-0218	1	Sender-Temperature
				34	AU100357	2	Screw-HHF

● Not serviced separately


Engine Service Parts

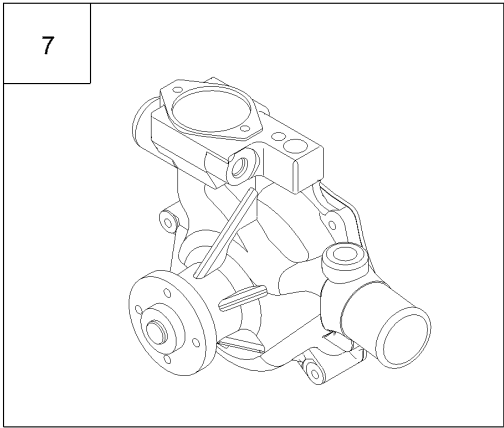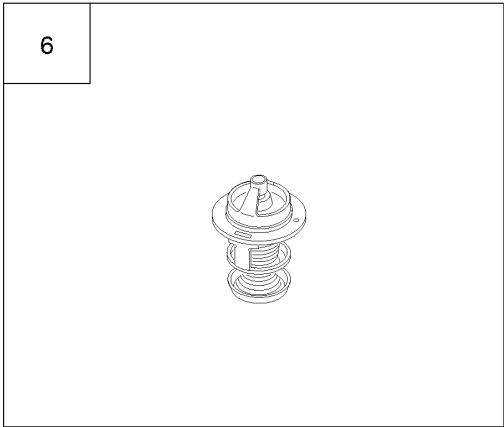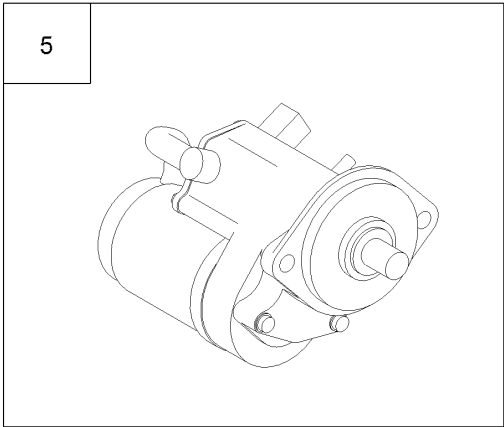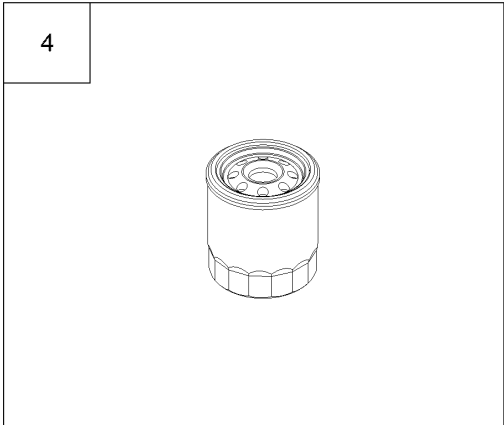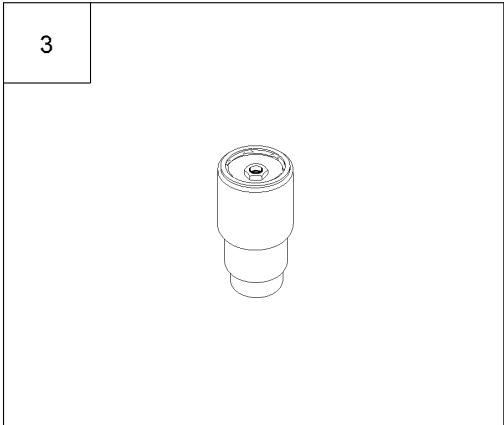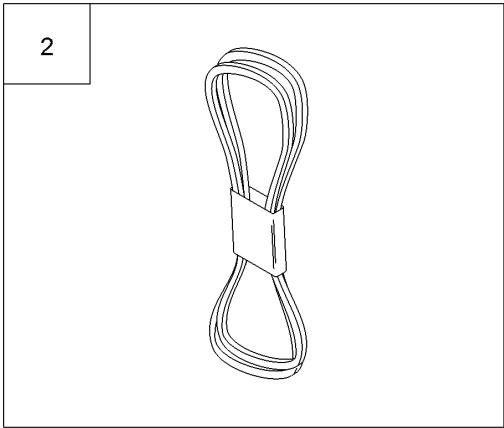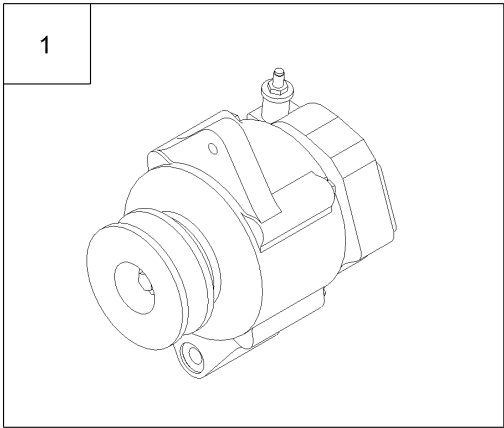

Engine Service Parts (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-7059	1	Alternator	5	131-7061	1	Starter
2	131-7060	1	Belt	6	131-7062	1	Thermostat
3	AU8NG10019-23	1	Filter-Fuel	7	131-7063	1	Water Pump
4	130-8860	1	Filter-Oil, Engine				

Radiator and Fan Assembly

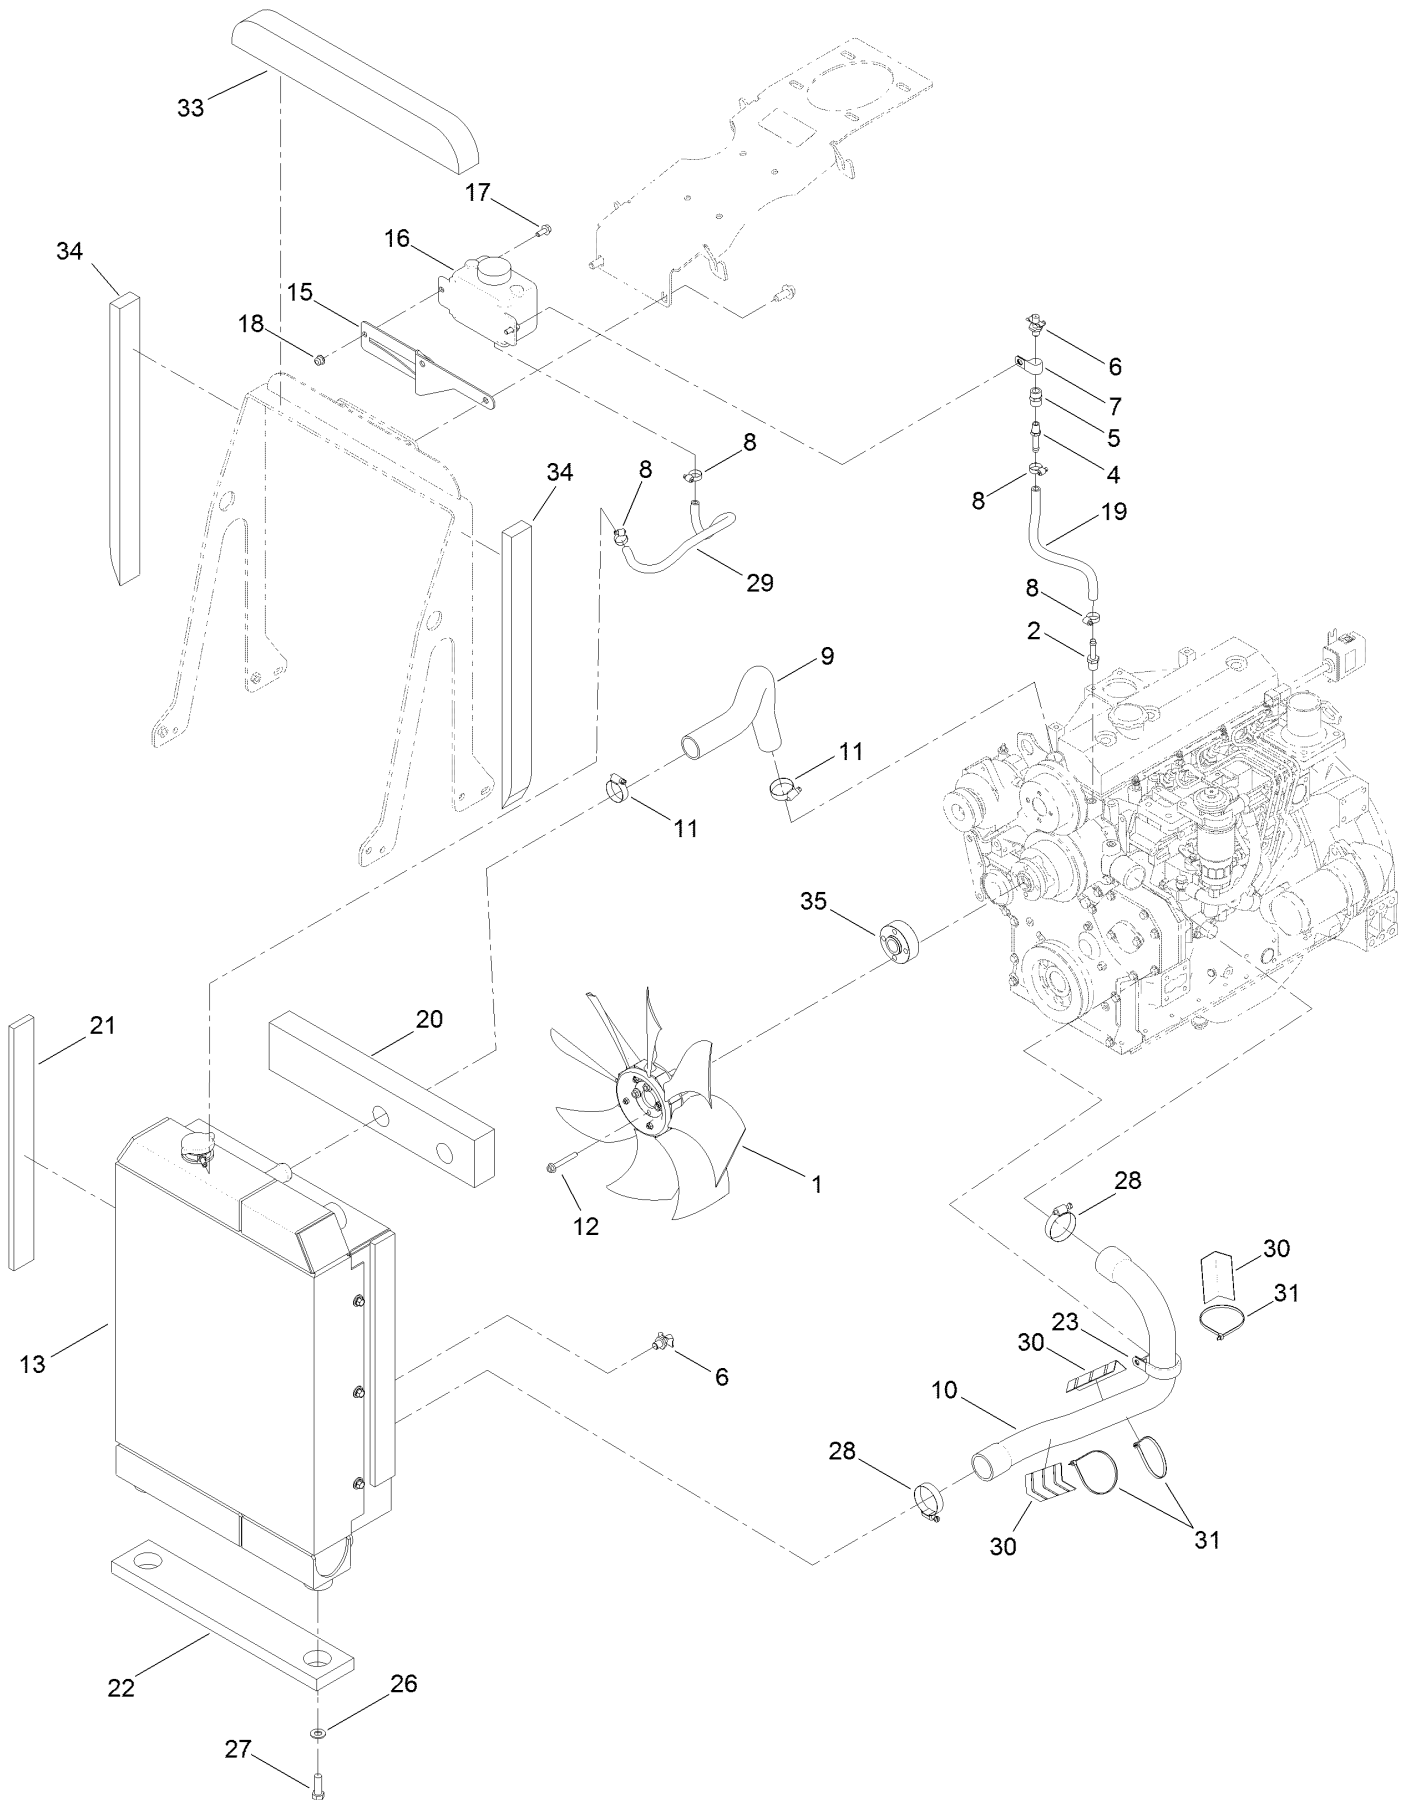

Radiator and Fan Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-2651	1	Fan	18	AU100526	2	Nut-Torque, Prevailing
2	AU217-380	1	Stem-Straight, Bead	19	130-8821	1	Hose-Coolant
4	AU217-151	1	Stem-Straight, Bead	20	127-1287	1	Seal-Foam
5	AU217-1101	1	Coupling-Pipe (NPTF)	21	127-1288	2	Seal-Foam
6	AUH434809	2	Valve-Shutoff	22	127-1289	1	Seal-Foam
7	2412-4	1	Clamp-R	23	115-9469	1	Clamp-R
8	2412-36	4	Clamp-Hose	26	3256-26	2	Washer-Flat
9	AU126607	1	Hose-Radiator, Upper	27	325-6	2	Screw-HH
10	125-6747	1	Hose-Radiator, Lower (Molded)	28	2412-92	2	Clamp-Hose
11	2412-3	2	Clamp-Hose	29	108-3284	1	Hose-Fuel
12	AU100325	4	Screw-Flange	30	AU112950	3	Protector-Hose
13	AU125209	1	Cooling ASM	31	3290-379	6	Tie-Cable
15	AU125515-03	1	Mount-Tank, Overflow	33	131-2676	1	Foam-Hood, Top
16	AU109352	1	Tank-Overflow	34	131-2677	2	Foam-Hood, Side
17	33104-020	2	Screw-HHF	35	131-2687	1	Spacer-Fan

This exploded view diagram illustrates the assembly of a vehicle engine and its associated exhaust and emission control components. The components are numbered as follows:


- Engine:** The base component at the bottom left, showing various ports and mounting points.
- Exhaust Manifold (27):** Connects to the engine block.
- Downpipe (5):** The main vertical exhaust pipe.
- Flange (28):** Connects the downpipe to the muffler.
- Muffler (7):** The main noise-reducing component.
- Flange (6):** Connects the muffler to the tailpipe.
- Tailpipe (8):** The final exhaust pipe exiting the vehicle.
- Mounting Brackets (3, 20):** Used to secure the exhaust system to the vehicle frame.
- Fasteners (12, 13, 19, 24, 25):** Bolts and nuts used for assembly.
- Accessories:**
 - 21:** A rectangular component, possibly a catalytic converter or particulate filter, mounted on the downpipe.
 - 22:** A small sensor or plug located near the muffler.
 - 9, 10, 11, 17, 18, 23:** Various gaskets, seals, and small components for the joints.
 - 20:2:** A small rectangular plate or sensor mounted near the tailpipe exit.

Dashed lines indicate the assembly path and alignment of the components.

Air Cleaner and Exhaust Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	108-1531	2	Screw-HHF	17	AU125250	1	Connector-Intake, Air
3	112-7340	2	Band-Mounting, Air Cleaner	18	AU125248	1	Tube-Intake, Air
4	112-7329	1	Air Cleaner ASM	19	3273-41	3	Screw-HSH
5	AU125242	1	Tube-Exhaust	20	127-1239	1	Muffler Support Mount ASM
6	AUH434145	1	Clamp-Muffler	20:2	125-8470	1	Decal-Disconnect, Battery
7	AU129272A1	1	Muffler-Vertical, Oval	21	125-6741-03	1	Shield-Exhaust
8	AU115334	1	Exhaust-Stack	22	33105-030	4	Screw-HHF
9	AU125249	1	Connector-Air Intake	23	103-9511	4	Nut-Lock, NI
10	AU102427	1	Clamp-Torque, Constant	24	AU119330	1	Screw-HSH
11	AU102431	2	Clamp-Torque, Constant	25	114-0031	1	Clamp, T-Bolt
12	33104-030	4	Screw-HHF	26	131-2683	1	Wrap-Thermal, Intake
13	104-3082	4	Nut-Lock, HHF	27	131-2684	1	Wrap-Thermal, Exhaust
14	AU106185	1	Clamp-Muffler	28	2412-128	4	Clamp-Hose
15	AU125498	1	Intake-Air				
16	AU214-3180	1	Clamp-Hose, Worm Gear (Heavy Duty)				

Air Cleaner Assembly No. 112-7329

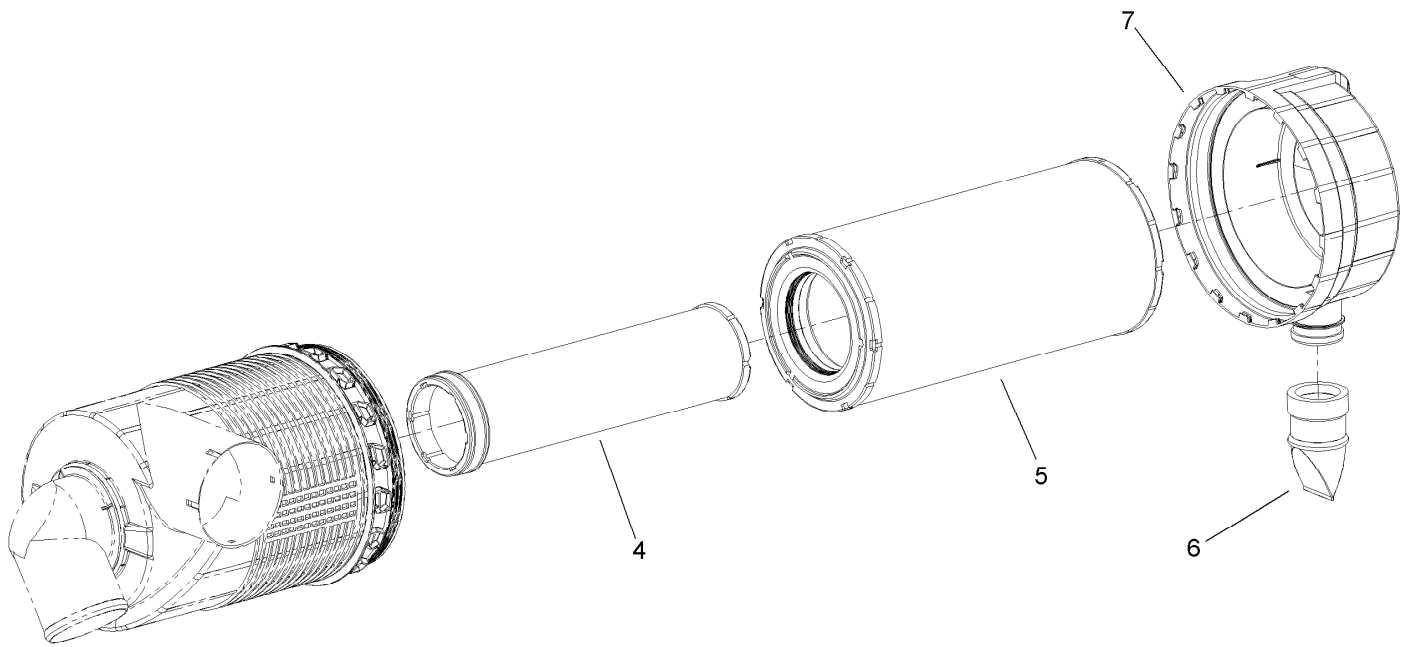


Air Cleaner Assembly No. 112-7329 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	115-8877	1	Filter-Air, Engine (Safety)
5	115-8887	1	Filter-Air, Engine (Primary)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	114-5624	1	Valve-Vacuator
7	114-5625	1	Cover ASM


Steering Assembly

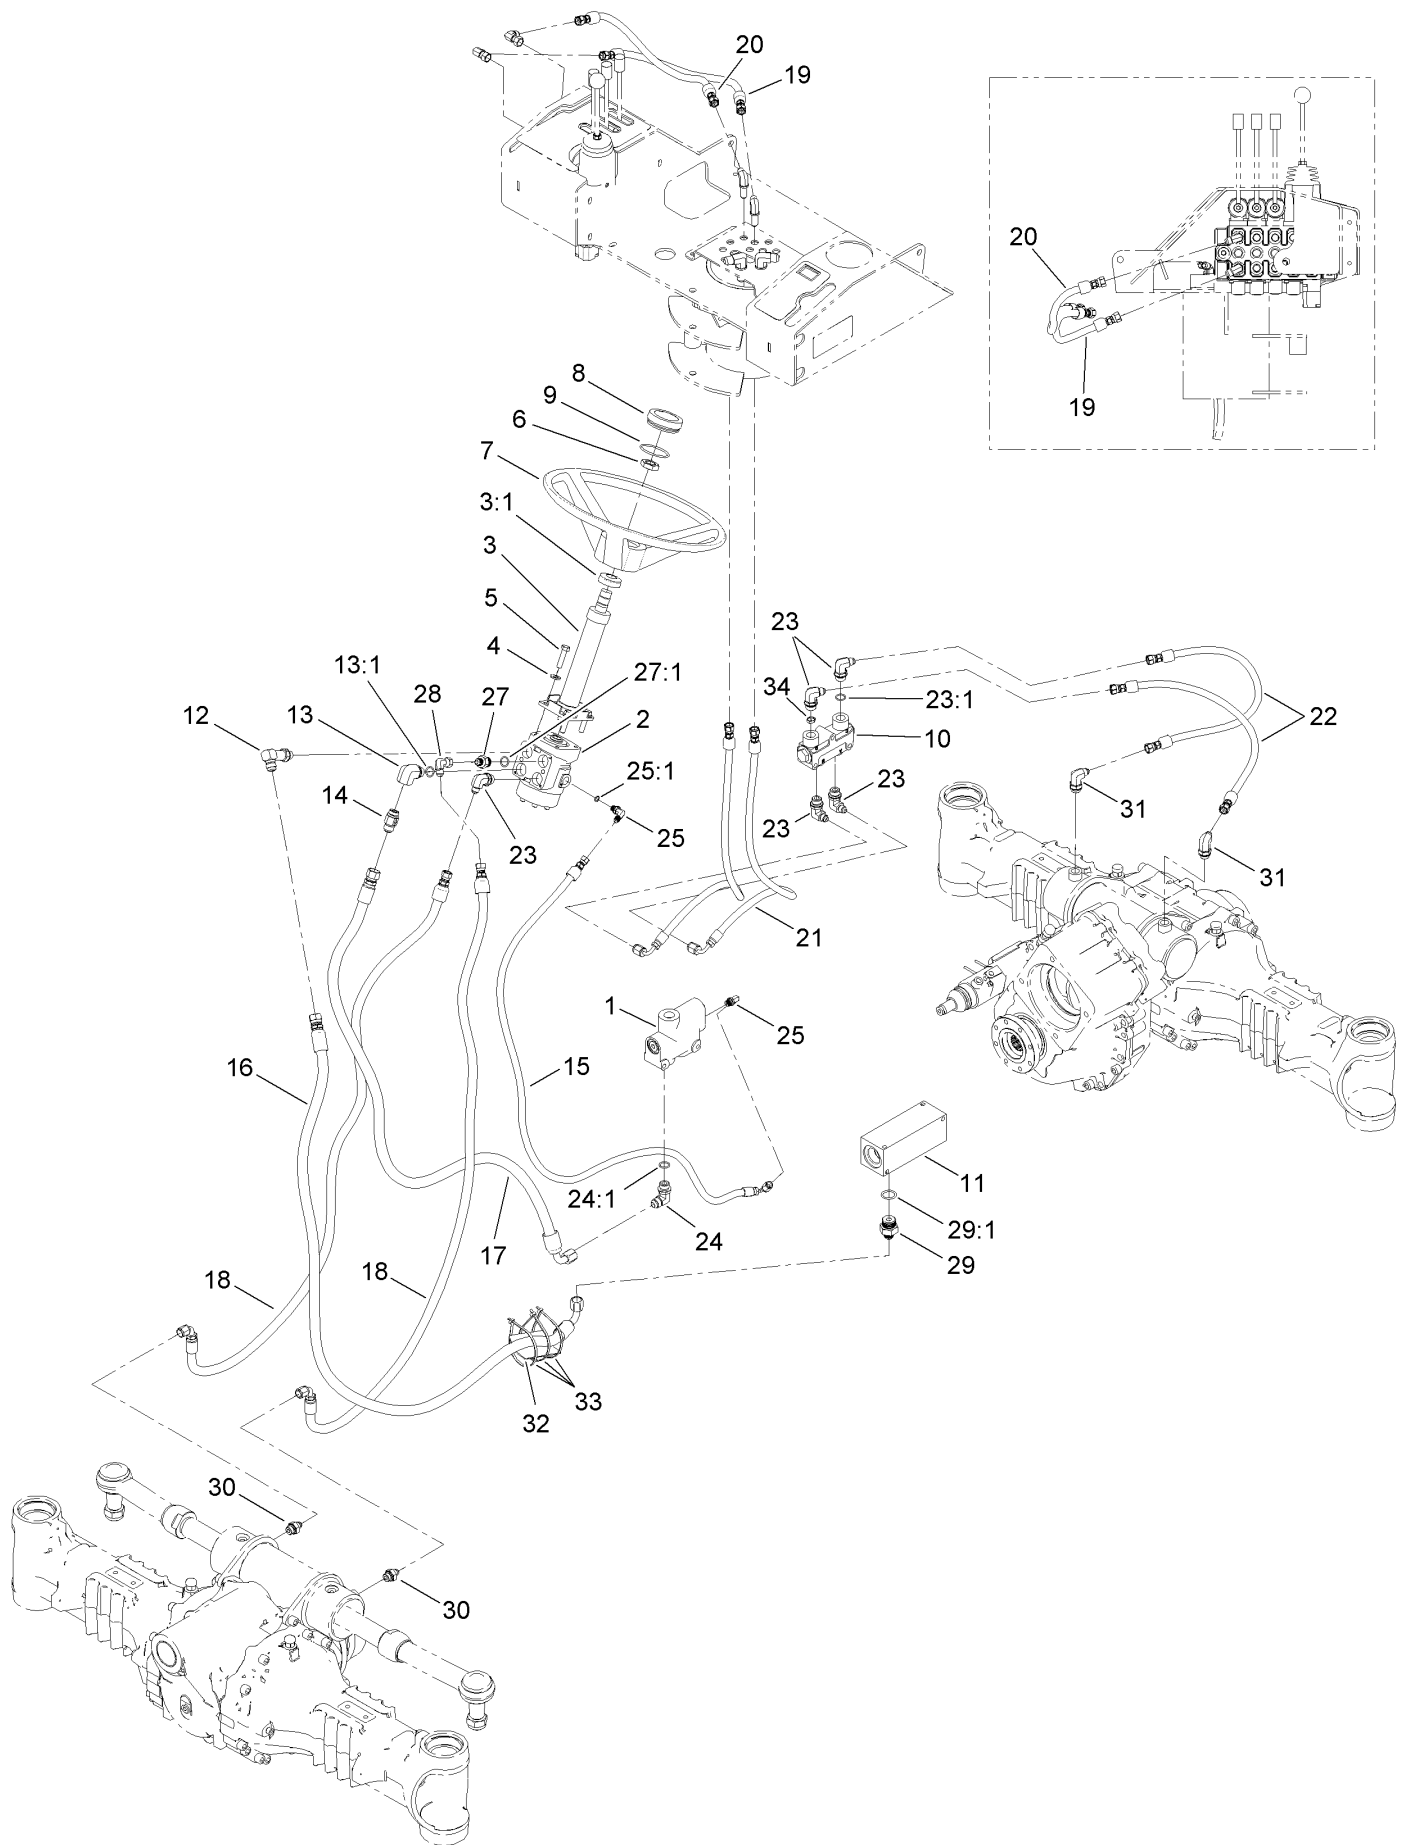

Steering Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUH672904	1	HYD Priority Flow Divider ASM	18	125-6715	2	Hose ASM
2	AU141535A1	1	HYD Steering Control Valve ASM	19	125-6777	1	Hose ASM
3	AUH672220	1	Steering Column ASM	20	125-6778	1	Hose ASM
3:1	120-2593	1	Boot-Rubber, Bearing	21	125-6789	2	HYD Hose ASM
4	AU496-21041	4	Washer-Flat	22	125-6782	2	Hose ASM
5	323-43	4	Screw-HH	23	353-537	5	Fitting-Elbow, 90 DEG
6	AUF19646	1	Nut	23:1	237-79	1	O-Ring
7	AUA65544	1	Wheel-Steering	24	AU218-5106	1	Fitting-Elb 90
8	AU114882A2	1	Cap-Steering Wheel	24:1	237-79	1	O-Ring
9	AU238-5227	1	O-Ring	25	353-375	2	Fitting-Elbow, 90
10	AUH672547	1	HYD Lockout Valve ASM	25:1	237-78	1	O-Ring
11	AU106457	1	Manifold-Return, Hydraulic	27	AU218-5058	1	Connector
12	AU700701358	1	Elbow	27:1	237-79	1	O-Ring
13	AU111865A1	1	Elbow	28	AU218-980	1	Fitting-Swivel, 90 DEG
13:1	237-79	1	O-Ring	29	353-620	1	Fitting-Straight
14	AUL104449	1	Valve-Check	29:1	237-81	1	O-Ring
15	125-6712	1	Hose ASM	30	AU127172	2	Fitting-Straight
16	125-6713	1	Hose ASM	31	AU127173	2	Fitting-Elbow, 90
17	125-6714	1	Hose ASM	32	AU112950	1	Protector-Hose
				33	3290-379	3	Tie-Cable
				34	AUH270603	1	Plate-Orifice

Priority Flow Divider Valve Assembly No. AUH672904

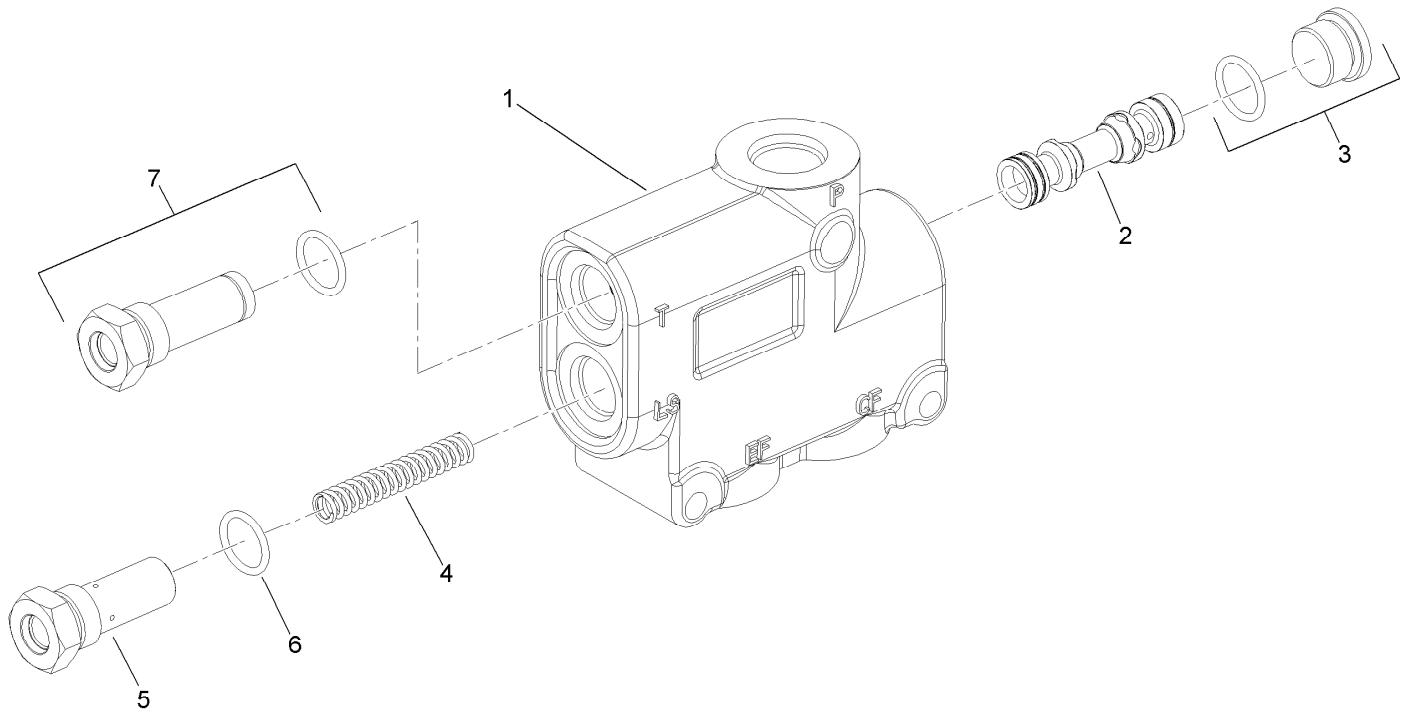


Priority Flow Divider Valve Assembly

No. AUH672904 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUH436407	1	Body-Valve
2	AUH436366	1	Spool-Valve
3	AUH436367	1	Plug ASM
4	AUH436365	1	Spring-Spool

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	AUH436408	1	Plug-Retaining, Spool Spring
6	AU237-6008	1	O-Ring
7	AUN7163	1	Cartridge-Valve, Relief

Hydraulic Steering Valve Assembly No. AU141535A1

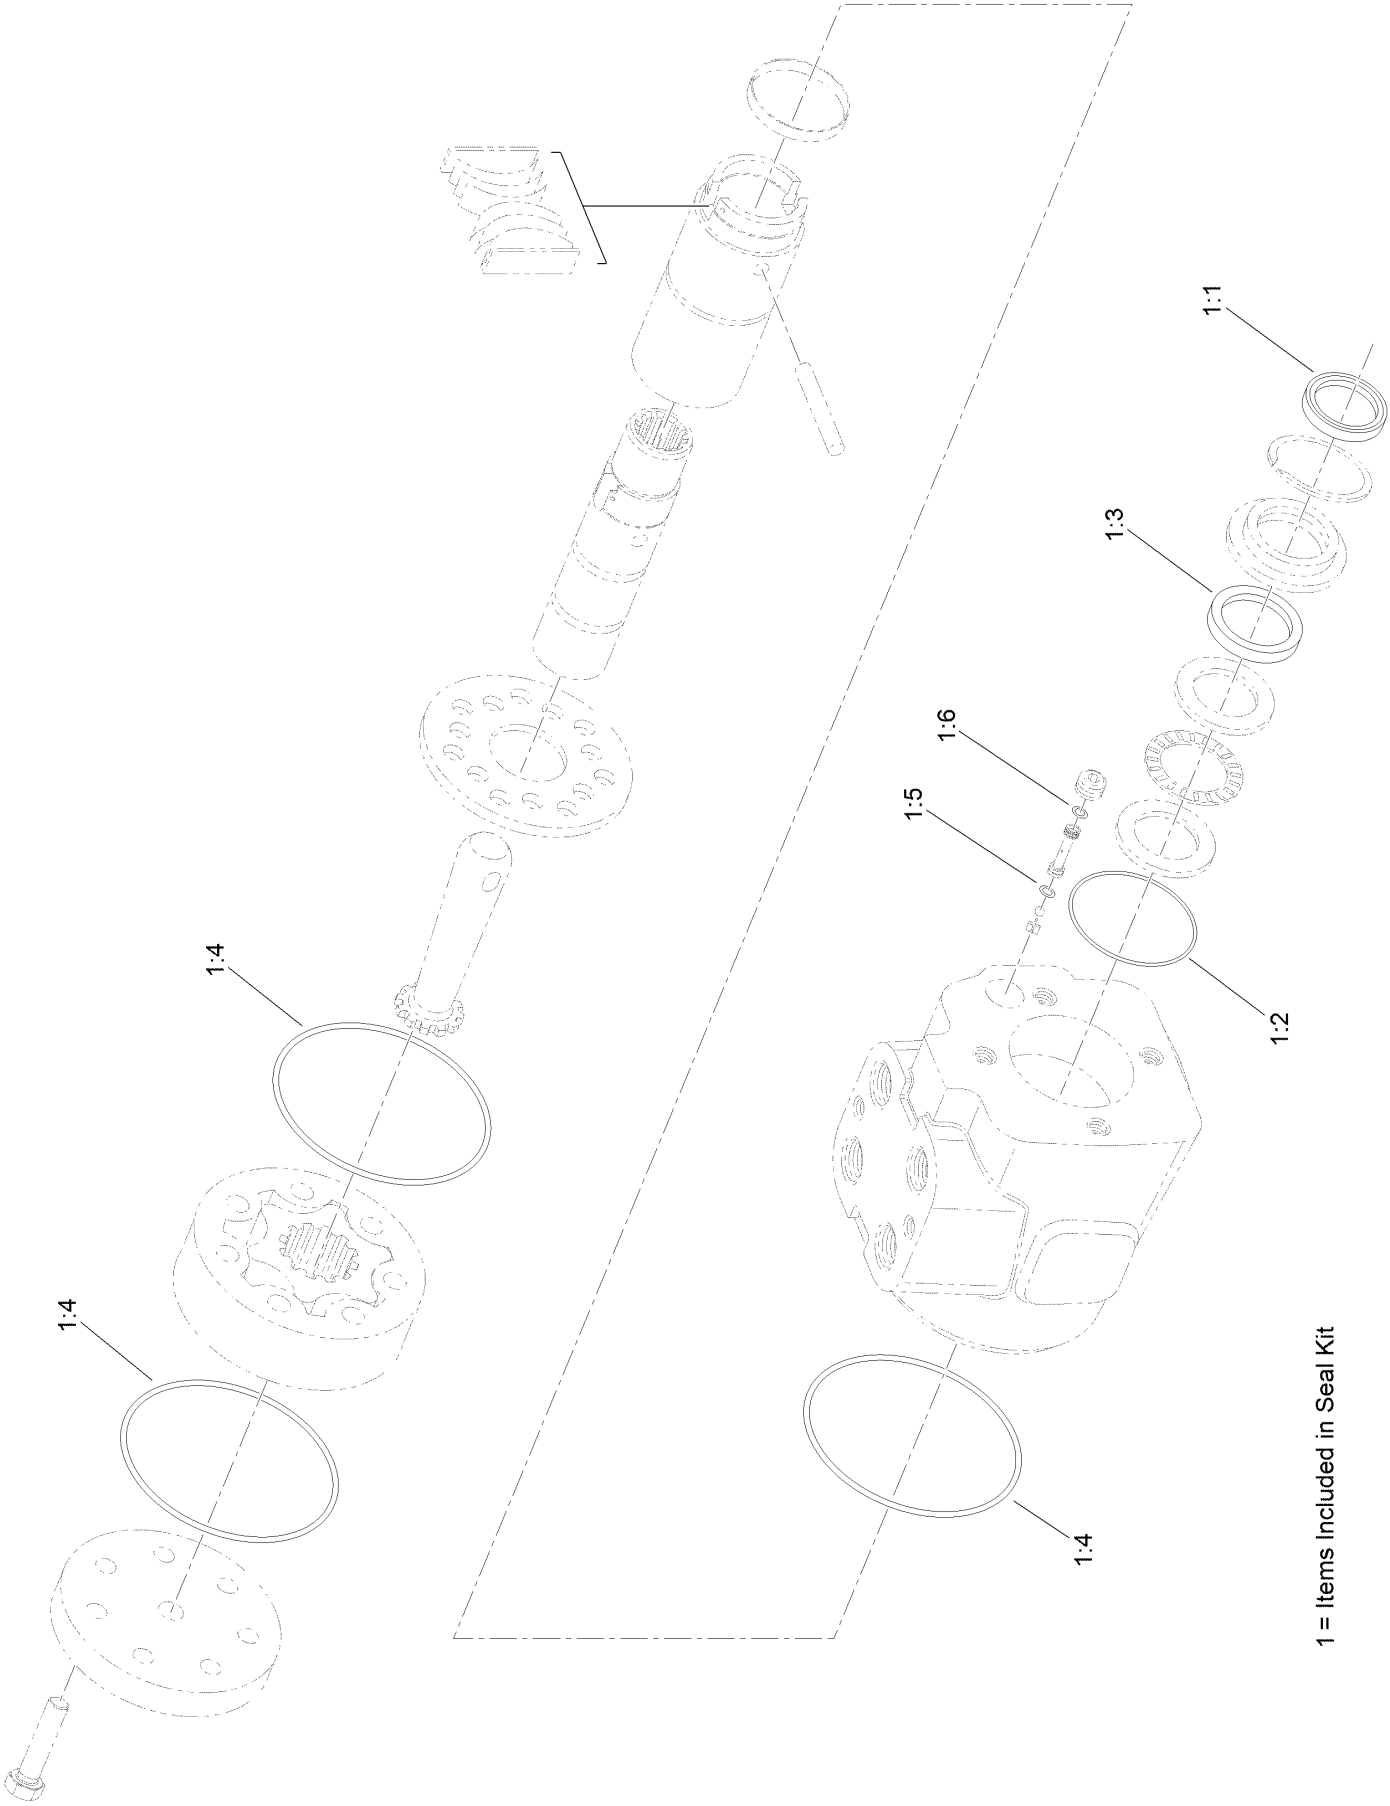


1 = Items Included in Seal Kit

Hydraulic Steering Valve Assembly No. AU141535A1 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-9749	1	Seal Kit	1:4		3	O-Ring ●
1:1		1	Seal-Dust ●	1:5		1	O-Ring ●
1:2		1	O-Ring ●	1:6		1	O-Ring ●
1:3		1	Ring-Quad ●				

● Not serviced separately

Lockout Valve Assembly No. AUH672547

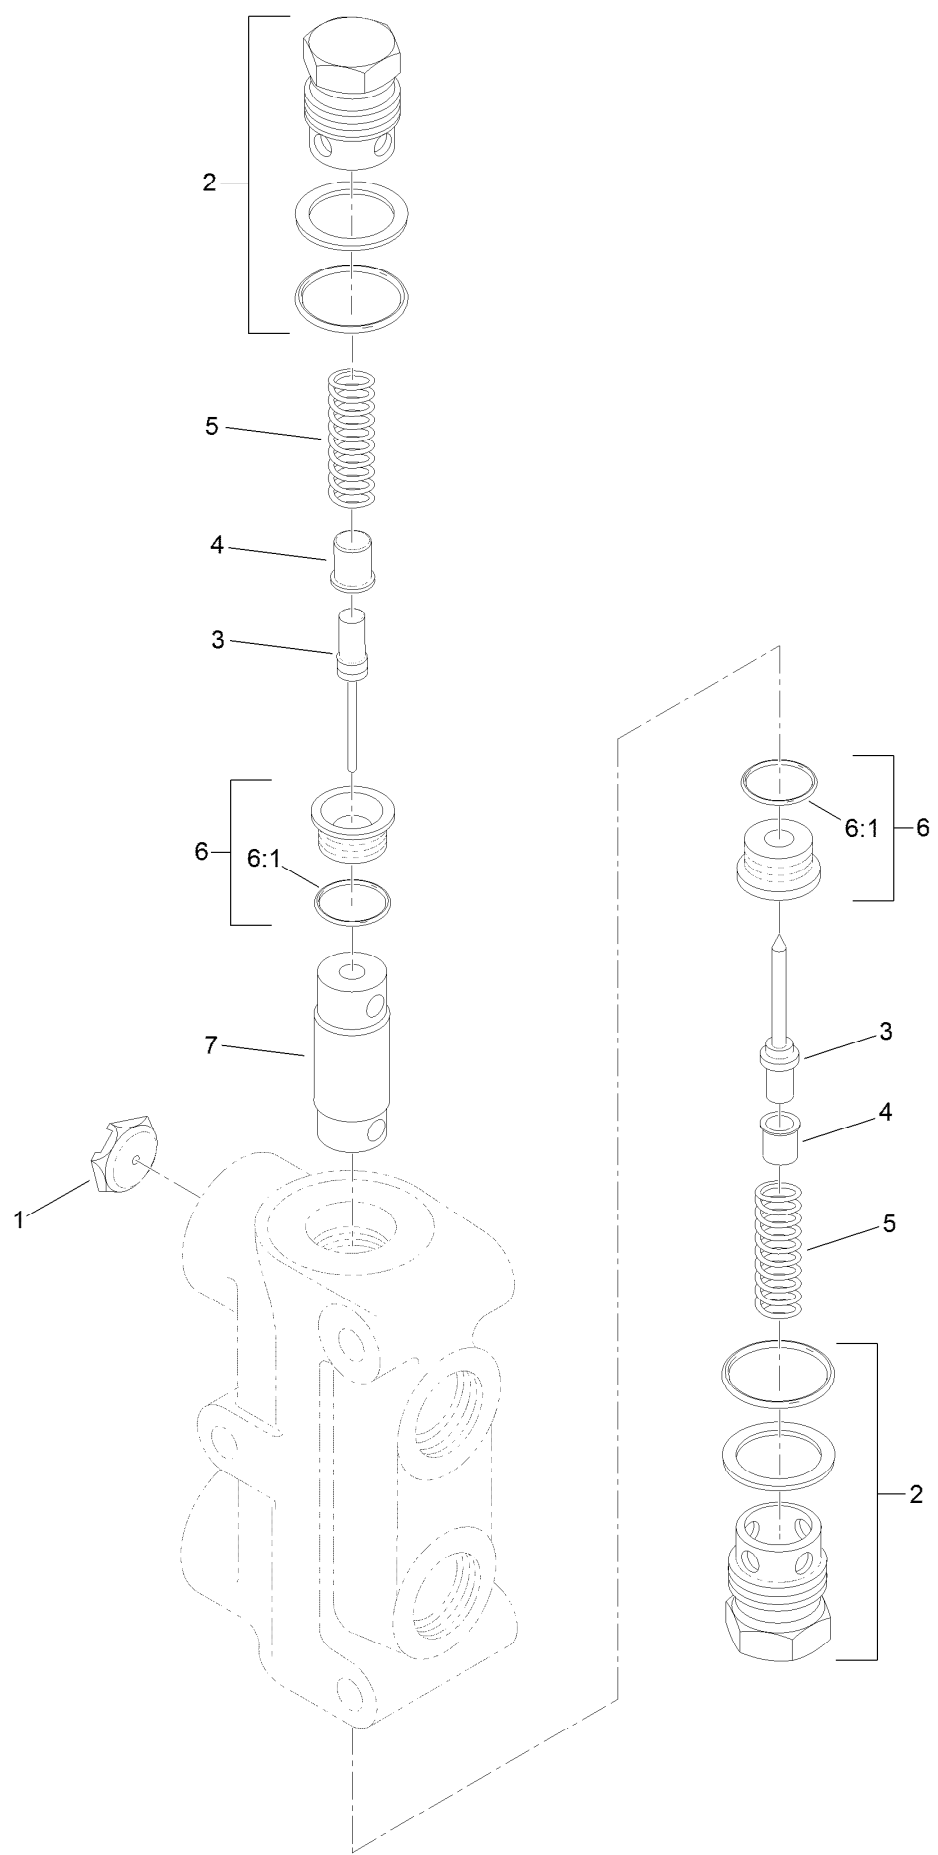


Lockout Valve Assembly No. AUH672547 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUH270603	1	Plate-Orifice
2	AUA43525	2	Plug ASM
3	AUF88777	2	Poppet
4	AUN13488	2	Eyelet-Poppet

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	AU85069C1	2	Spring
6	AUN13369	2	Seat ASM
6:1	AUL33213	1	O-Ring
7	AUN13489	1	Plunger

Hydraulic Tank and Tandem Pump Assembly

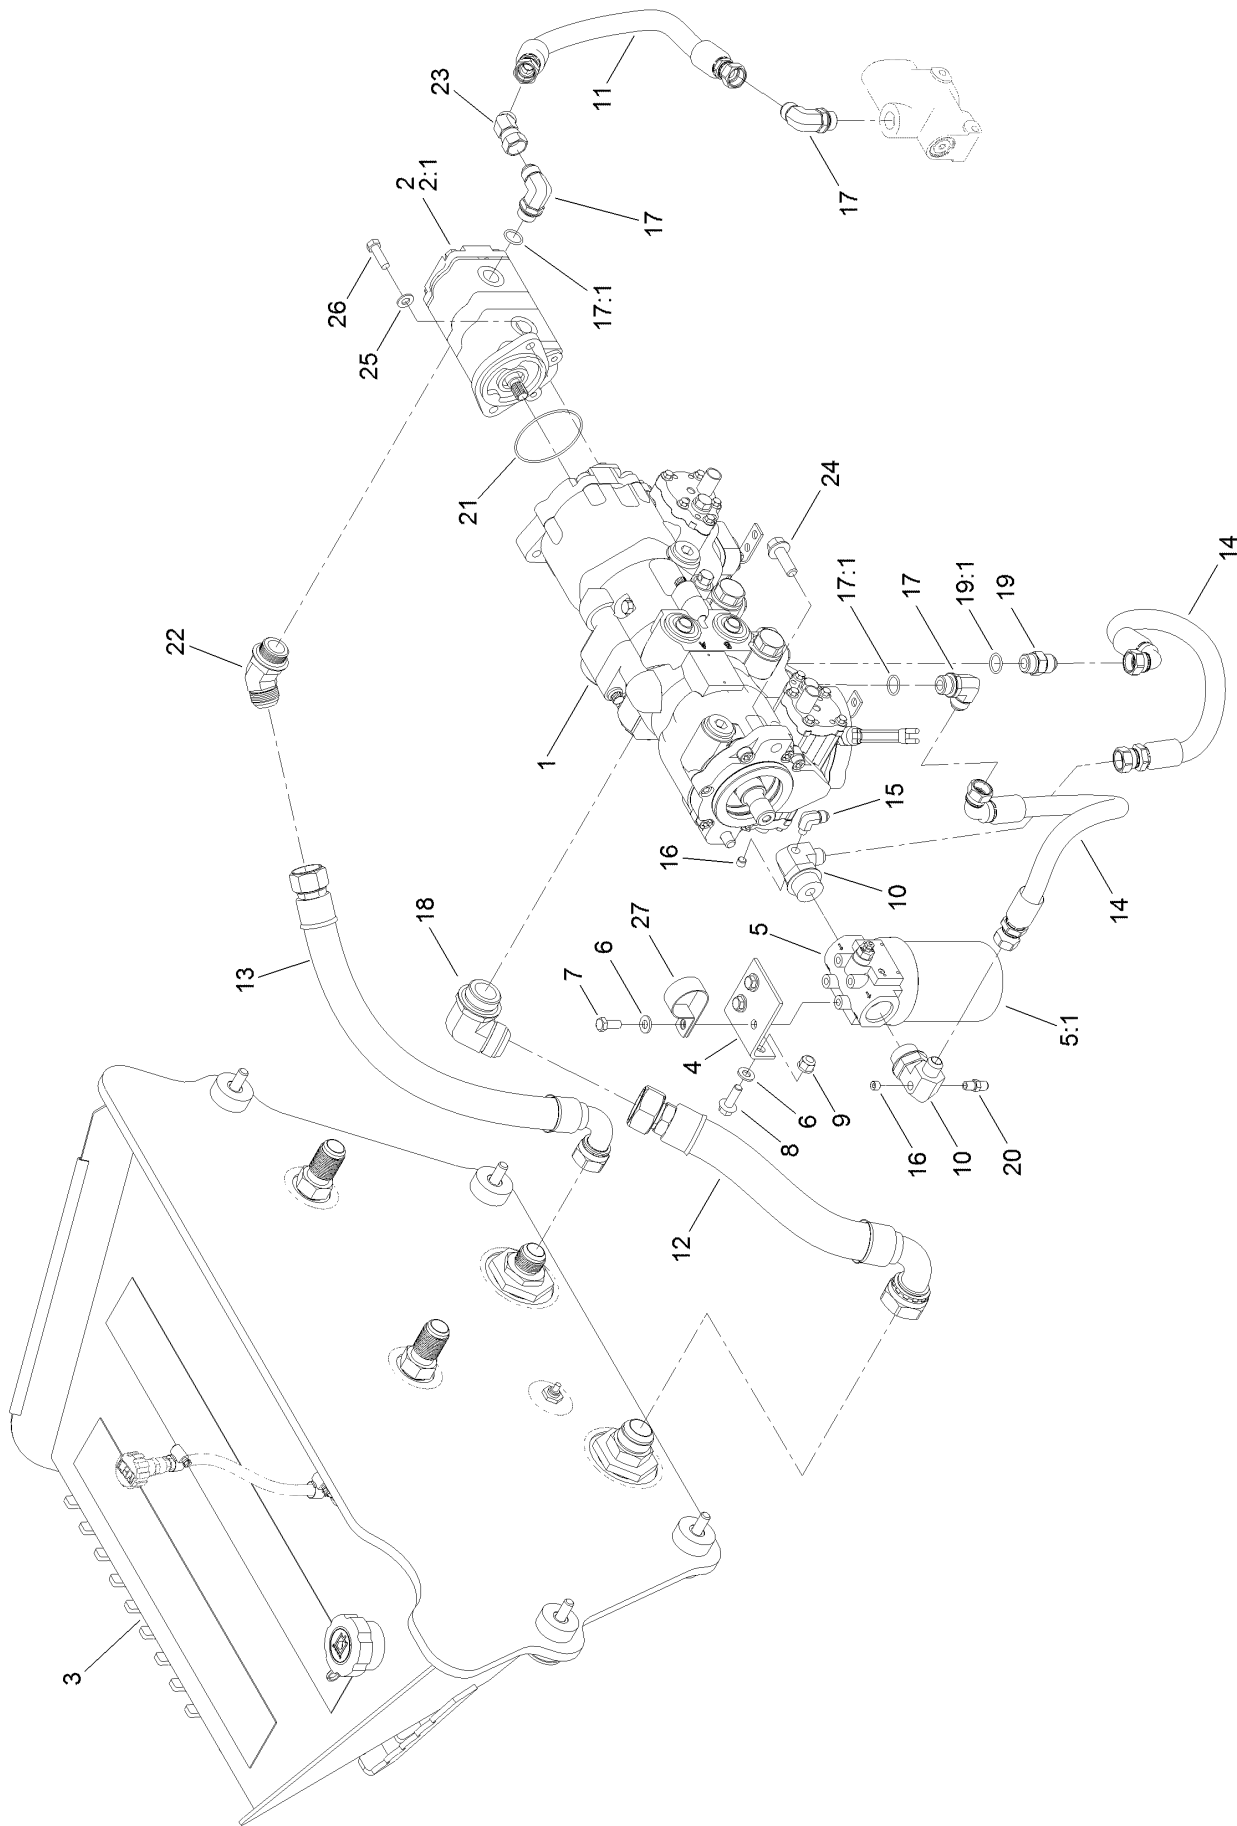


Hydraulic Tank and Tandem Pump Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU125034	1	Tandem Pump ASM
2	AU105969A1	1	HYD Gear Pump ASM
2:1	550LG31619002	1	Overhaul Service Seal Kit - Purchase From Dynamics Limited Dealer ●
3	127-1242	1	HYD Tank ASM
4	AU111774A1	1	Bracket-Mounting, Filter
5	AUD121629	1	Oil Filter ASM
5:1	110-4146	1	Filter-HYD
6	AU496-21041	5	Washer-Flat
7	323-5	3	Screw-HH
8	AU100877	2	Screw-HH
9	103-9511	2	Nut-Lock, NI
10	AUH439363	2	Adapter-Special
11	125-6708	1	Hose ASM
12	125-6719	1	HYD Hose ASM
13	125-6723	1	Hose ASM

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
14	125-6727	2	Hose ASM
15	AU218-492	1	Elbow-90
16	285-17	2	Plug-Pipe
17	353-370	3	Fitting-Elbow, 90 DEG
17:1	237-80	1	O-Ring
18	AU218-5112	1	Elbow-90
19	353-385	1	Fitting-Straight
19:1	237-80	1	O-Ring
20	112-3282	1	Fitting-Straight
21	AU238-5152	1	O-Ring
22	AU218-5140	1	Fitting-Elbow, 45
23	127-0519	1	Fitting-Elbow, 45 DEG
24	100-6116	2	Screw-HHF
25	3256-24	2	Washer-Flat
26	323-44	2	Screw-HH
27	127-0518	1	Clamp-R

● Obtain locally.

Front Pump Assembly Tandem Pump No. AU125034

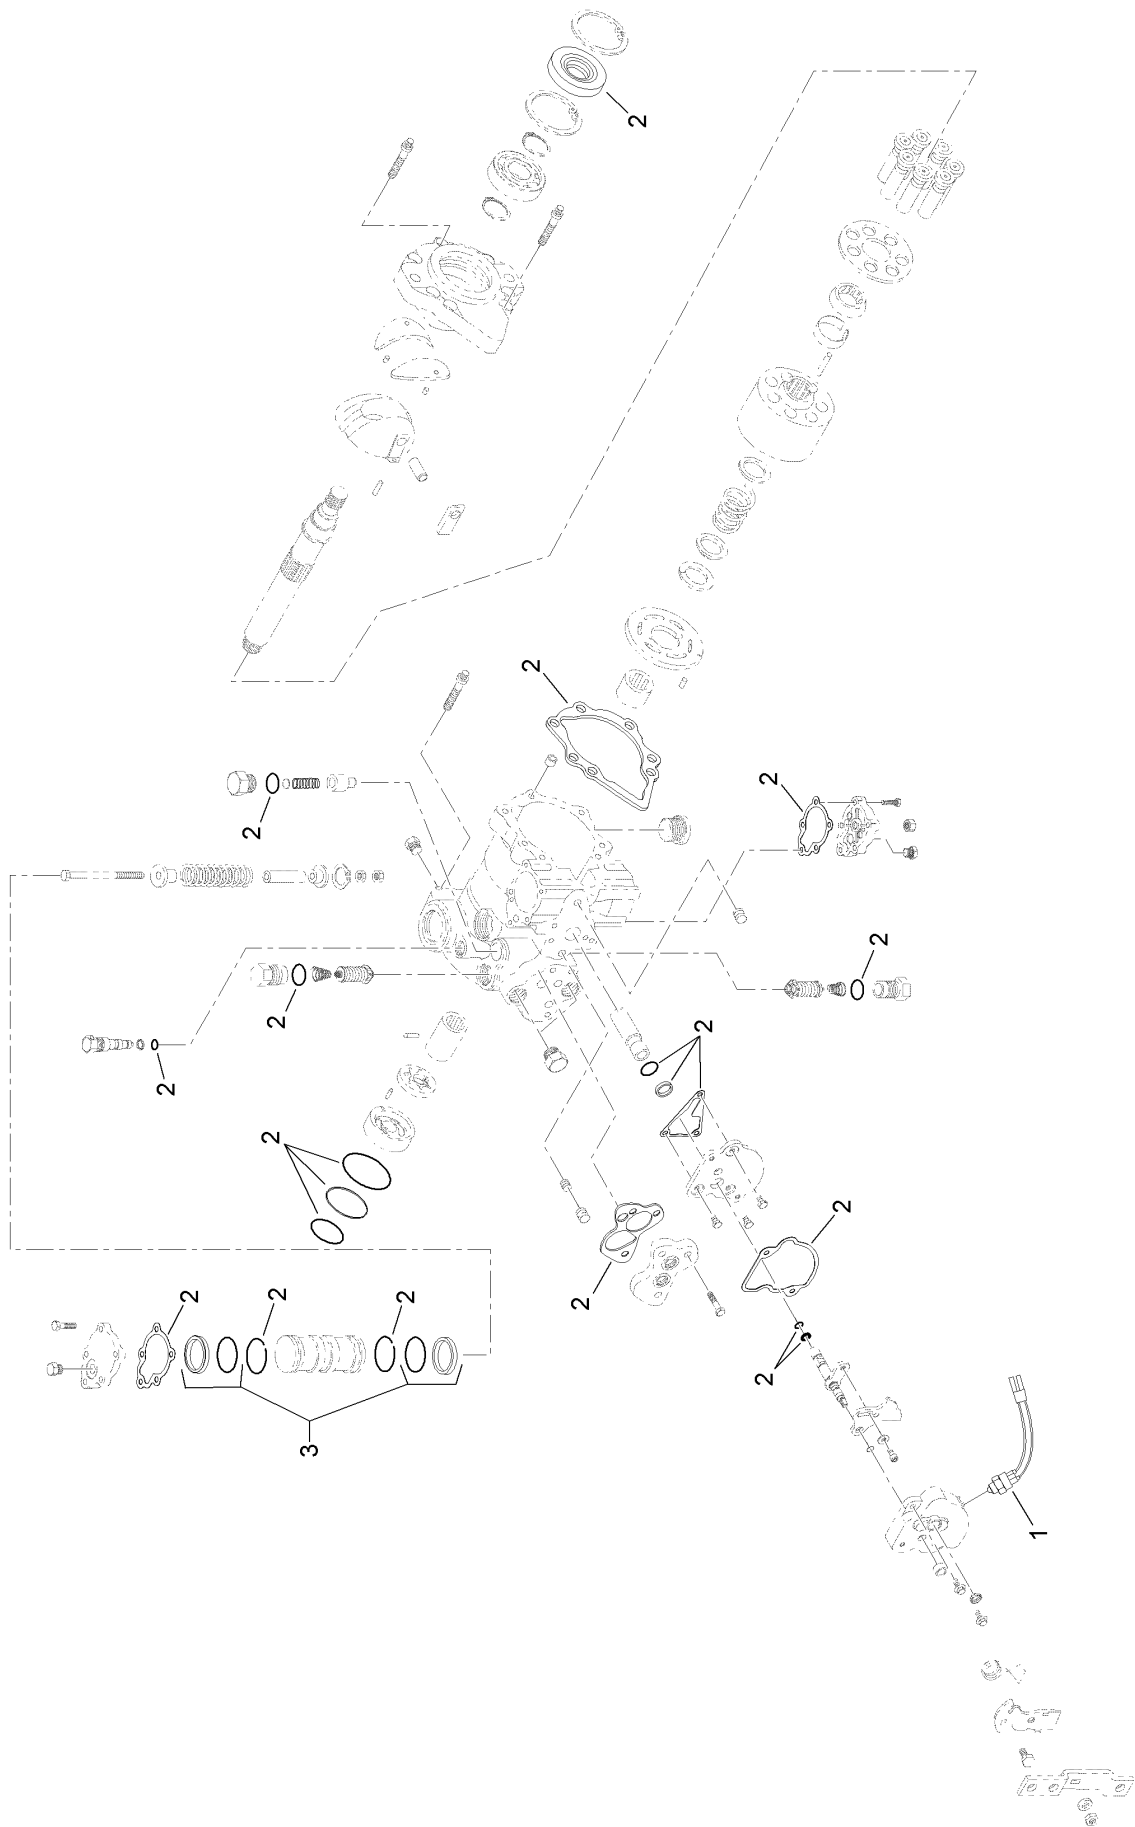


Front Pump Assembly Tandem Pump No. AU125034 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-8806	1	Switch-Neutral
2	4510018	1	Overhaul Service Seal Kit - Purchase From Sauer-Danfoss Dealer ●
3	69-3920	1	Piston Ring And O-Ring Kit

● Obtain locally.

Rear Pump Assembly Tandem Pump No. AU125034

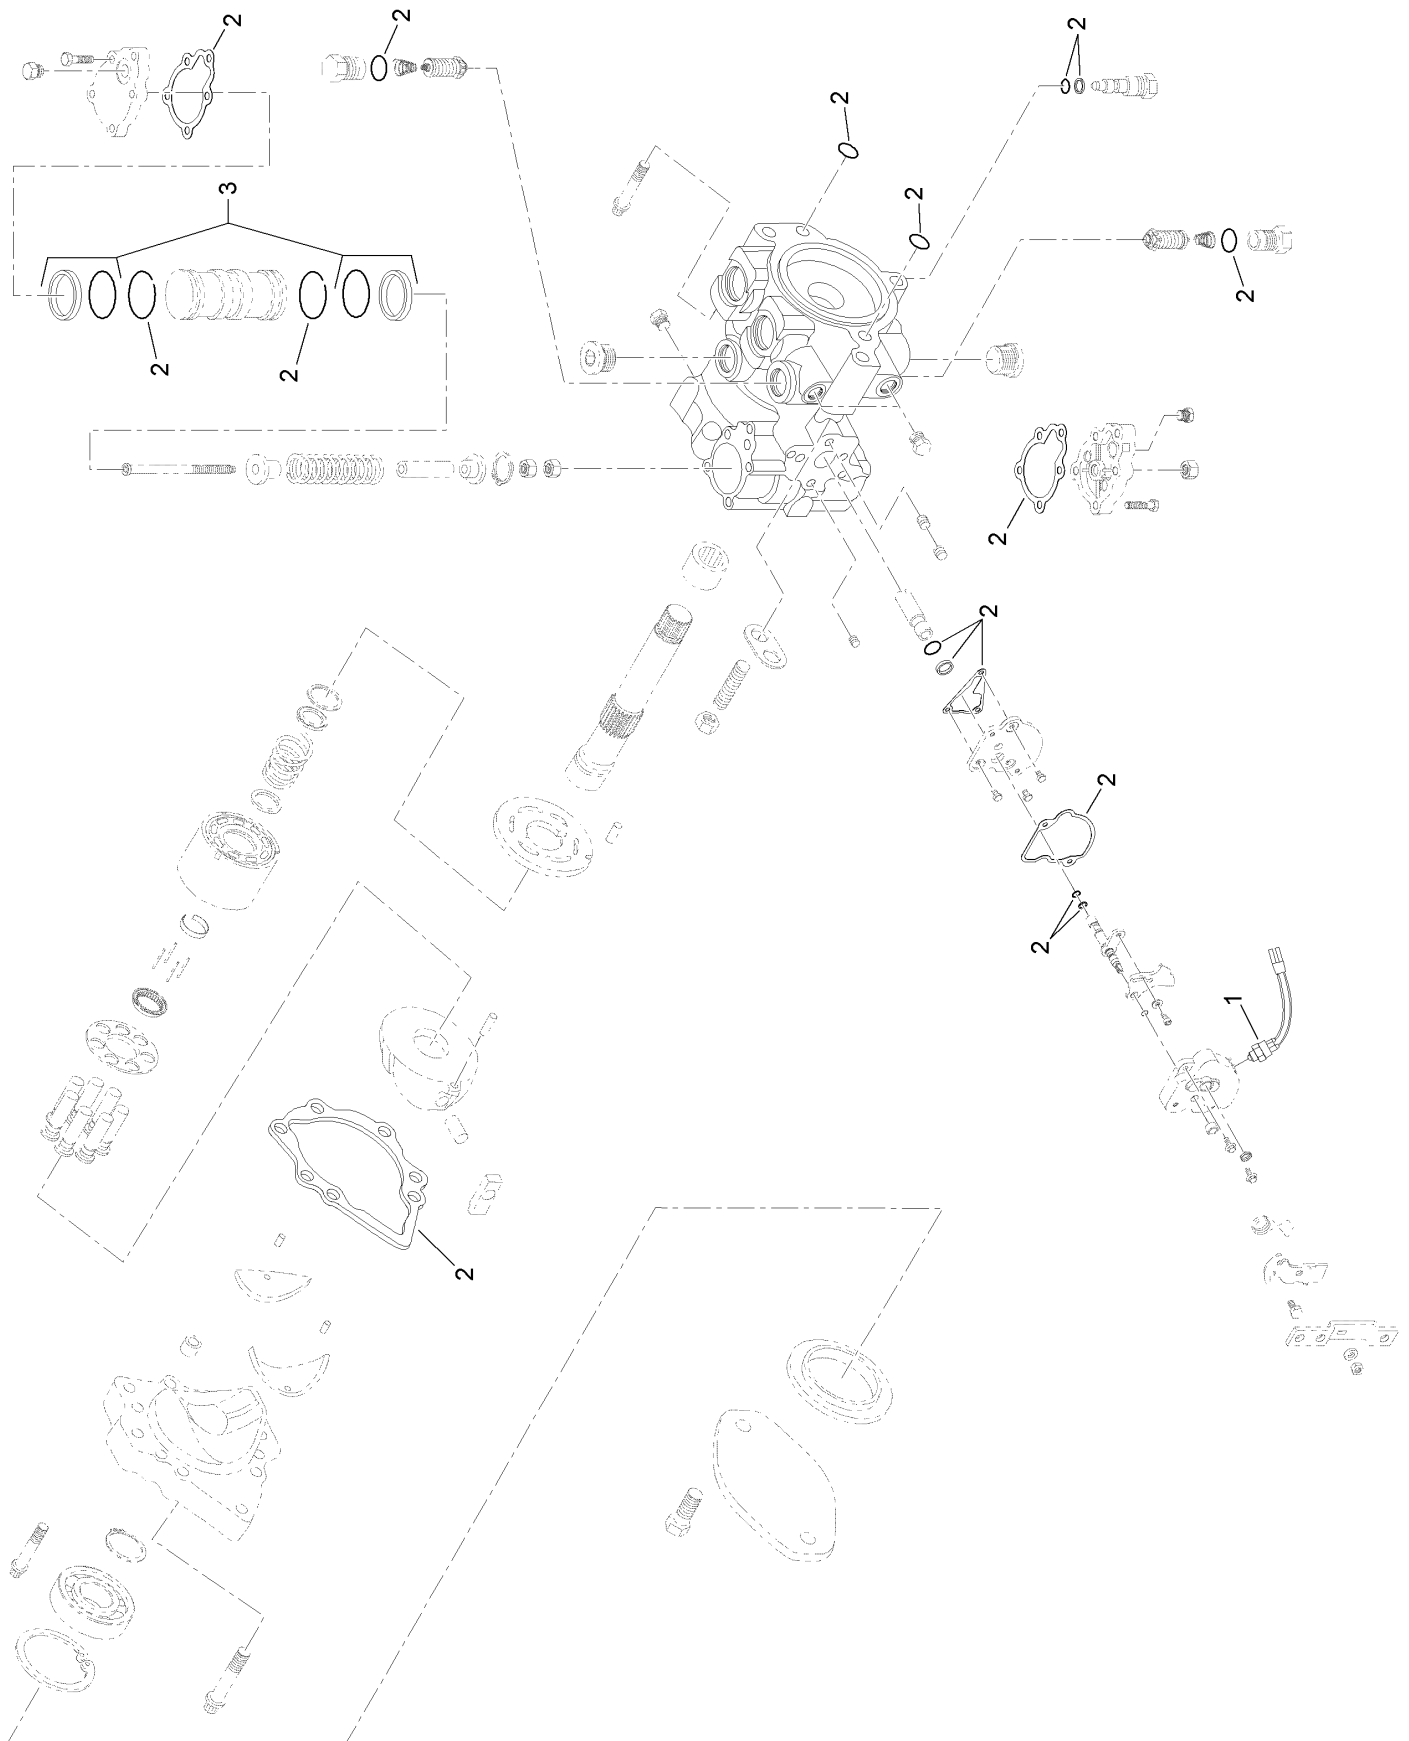


Rear Pump Assembly Tandem Pump No. AU125034 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-8806	1	Switch-Neutral
2	4510018	1	Overhaul Service Seal Kit - Purchase From Sauer-Danfoss Dealer ●
3	69-3920	1	Piston Ring And O-Ring Kit

● Obtain locally.


Hydraulic Tank Assembly No. 127-1242

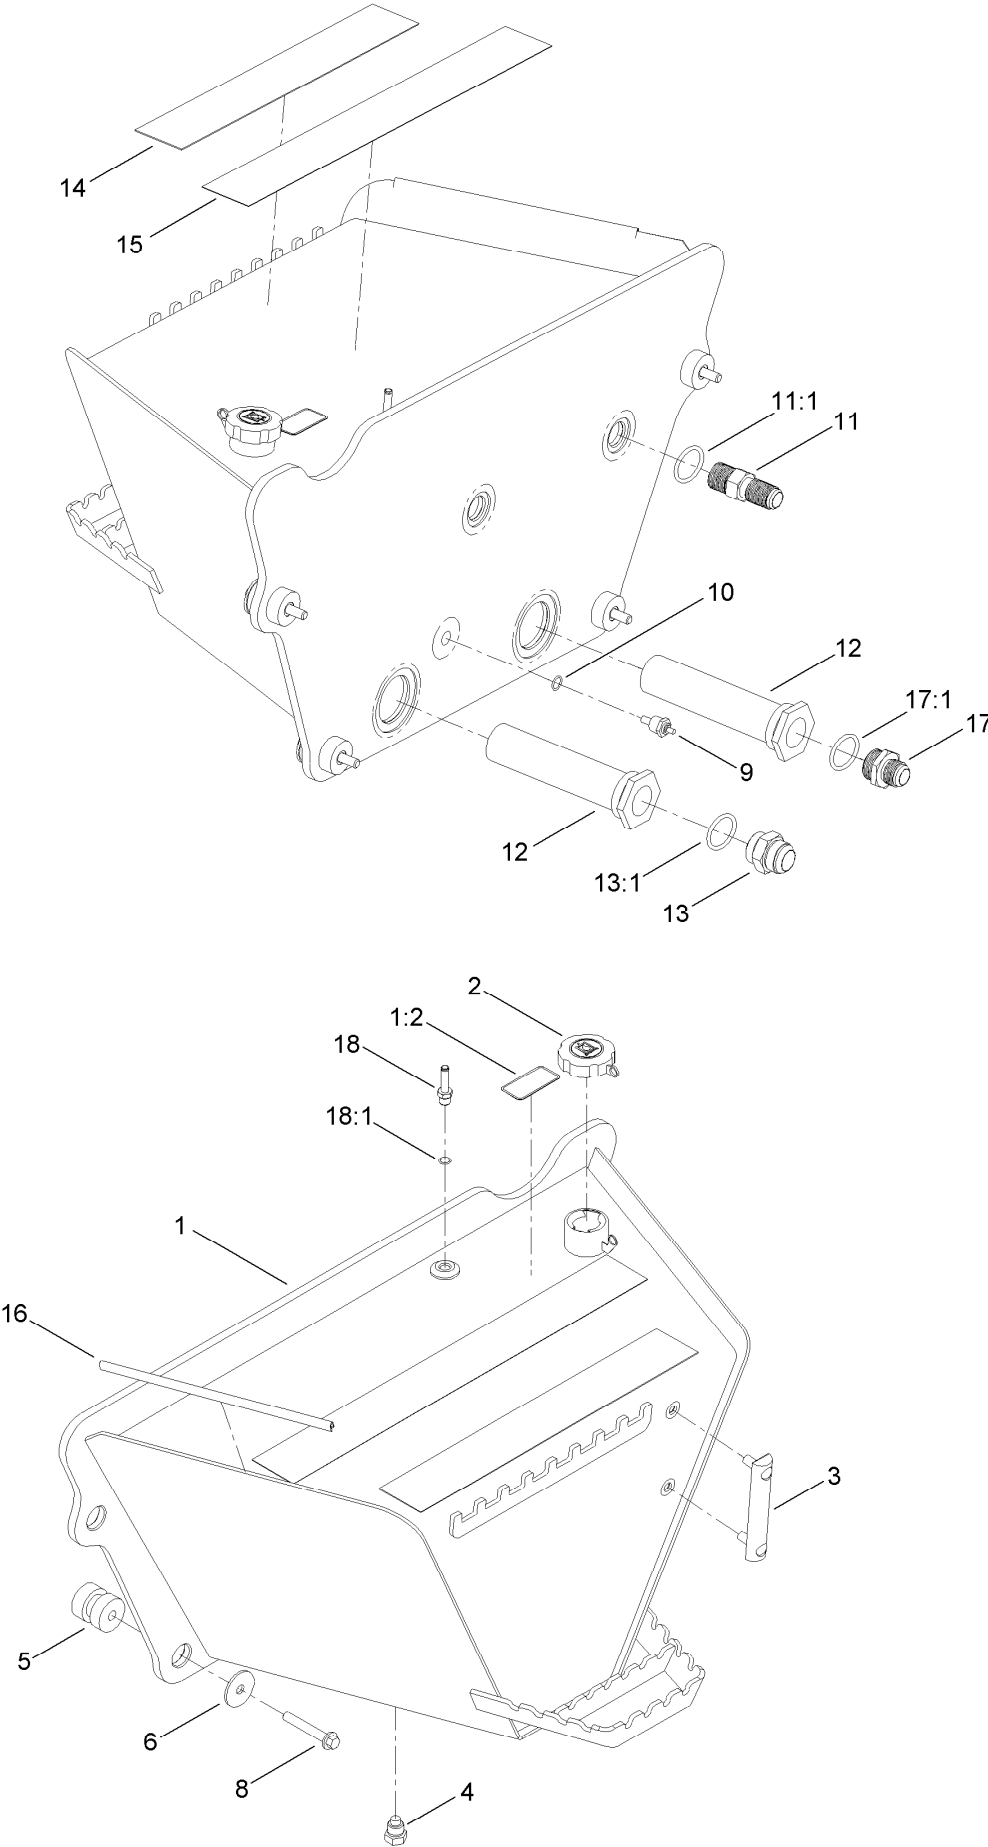

Hydraulic Tank Assembly No. 127-1242 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1231	1	HYD Tank And Decal ASM	11	AU91-202713-16-1	2	Adapter
1:2	125-8483	1	Decal-HYD Fluid	11:1	237-146	1	O-Ring
2	AU105820	1	Cap-HYD Fluid (W/ Lock)	12	AU118209	2	Strainer-Mounted, Tank
3	AU8PG00005	1	Gauge-Level, Fluid (W/Thermometer)	13	AU218-5072	1	Fitting-Straight
4	AU119908	1	Plug-Hex, Magnetic	13:1	237-101	1	O-Ring
5	AU8NG28121	4	Isolator-Mounting, Universal	14	AU105912	1	Tape-Anti Skid, Lower Step
6	AU496-81018	4	Washer-Flat	15	AUH433994	1	Strip-Anti Skid
8	33106-080	4	Screw-HHF	16	127-1273	1	Strip-Seal
9	AU119493	1	Sensor-Sender, Oil/Water Temp	17	AU218-5086	1	Adapter-Straight
10	AU637-63153	1	O-Ring	17:1	237-101	1	O-Ring
				18	353-979	1	Fitting-STR
				18:1	237-42	1	O-Ring

Bulkhead and Hose Mounting Assembly

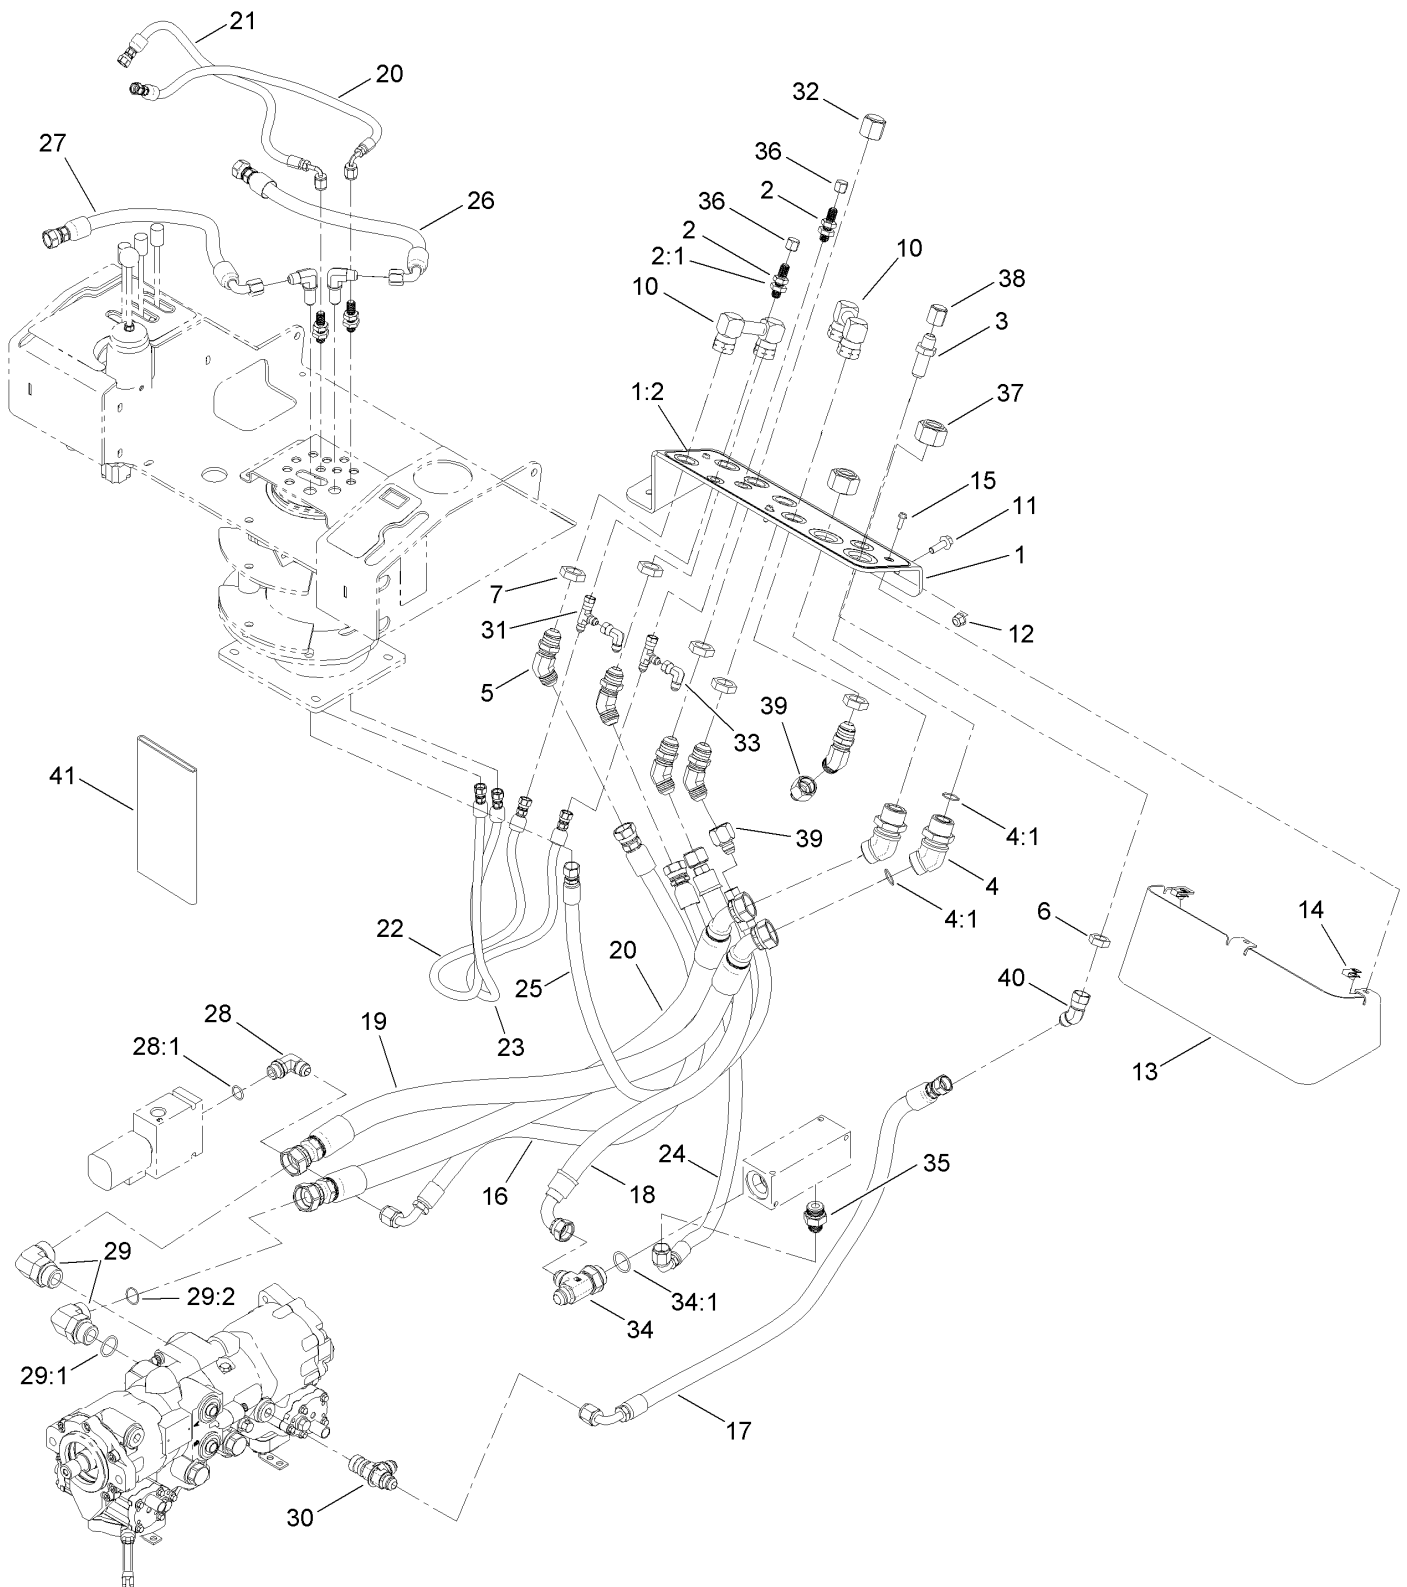


Bulkhead and Hose Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1241	1	Bulkhead Mount Plate ASM
1:2	130-8815	1	Decal-Rear Hydraulic Ports
2	AU218-673	2	Union-Bulkhead
2:1	AU218-1254	1	Nut-Lock, Bulkhead
3	AU218-675	1	Union-Bulkhead
4	AU201-366	2	Elbow-Bulkhead, 45
4:1	340-65	2	O-Ring
5	AU218-717	5	Elbow-Bulkhead, 45
6	AU218-1251	1	Nut-Lock, Bulkhead
7	AU218-1256	5	Nut-Lock, Bulkhead
10	AUH673212	2	Fitting-Special
11	AU100877	3	Screw-HH
12	103-9511	3	Nut-Lock, NI
13	AU126562-03	1	Plate-Cover
14	AU100861	3	Nut-U
15	AU100869	3	Screw-HHF
16	125-6717	1	Hose ASM
17	125-6768	1	Hose ASM
18	125-6720	1	Hose ASM
19	125-6721	2	Hose ASM
20	125-6771	1	Hose ASM
21	125-6774	1	Hose ASM
22	125-6783	1	Hose ASM
23	125-6784	1	Hose ASM

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
24	125-6722	1	Hose ASM
25	125-6728	1	Hose ASM
26	125-6769	1	Hose ASM
27	125-6775	1	Hose ASM
28	353-370	1	Fitting-Elbow, 90 DEG
28:1	237-80	1	O-Ring
29	340-129	2	Fitting-Elbow, 90 DEG
29:1	237-146	1	O-Ring
29:2	340-65	1	O-Ring
30	AU218-5294	1	Fitting-Tee
31	353-877	2	Fitting-HYD, Tee
32	AU218-335	1	Cap
33	AU218-980	2	Fitting-Swivel, 90 DEG
34	AU218-5585	1	Fitting-Tee
34:1	237-146	1	O-Ring
35	AU218-5063	1	Fitting-Straight
36	01-201-4520	2	Cap
37	AU201-901	2	Fitting-Cap
38	AU218-756	1	Fitting-Cap
39	AU218-767	2	Fitting-Straight
40	127-0519	1	Fitting-Elbow, 45 DEG
41	127-1063	1	Sleeve-Protective


Directional Valve and Hydraulic Hose Assembly

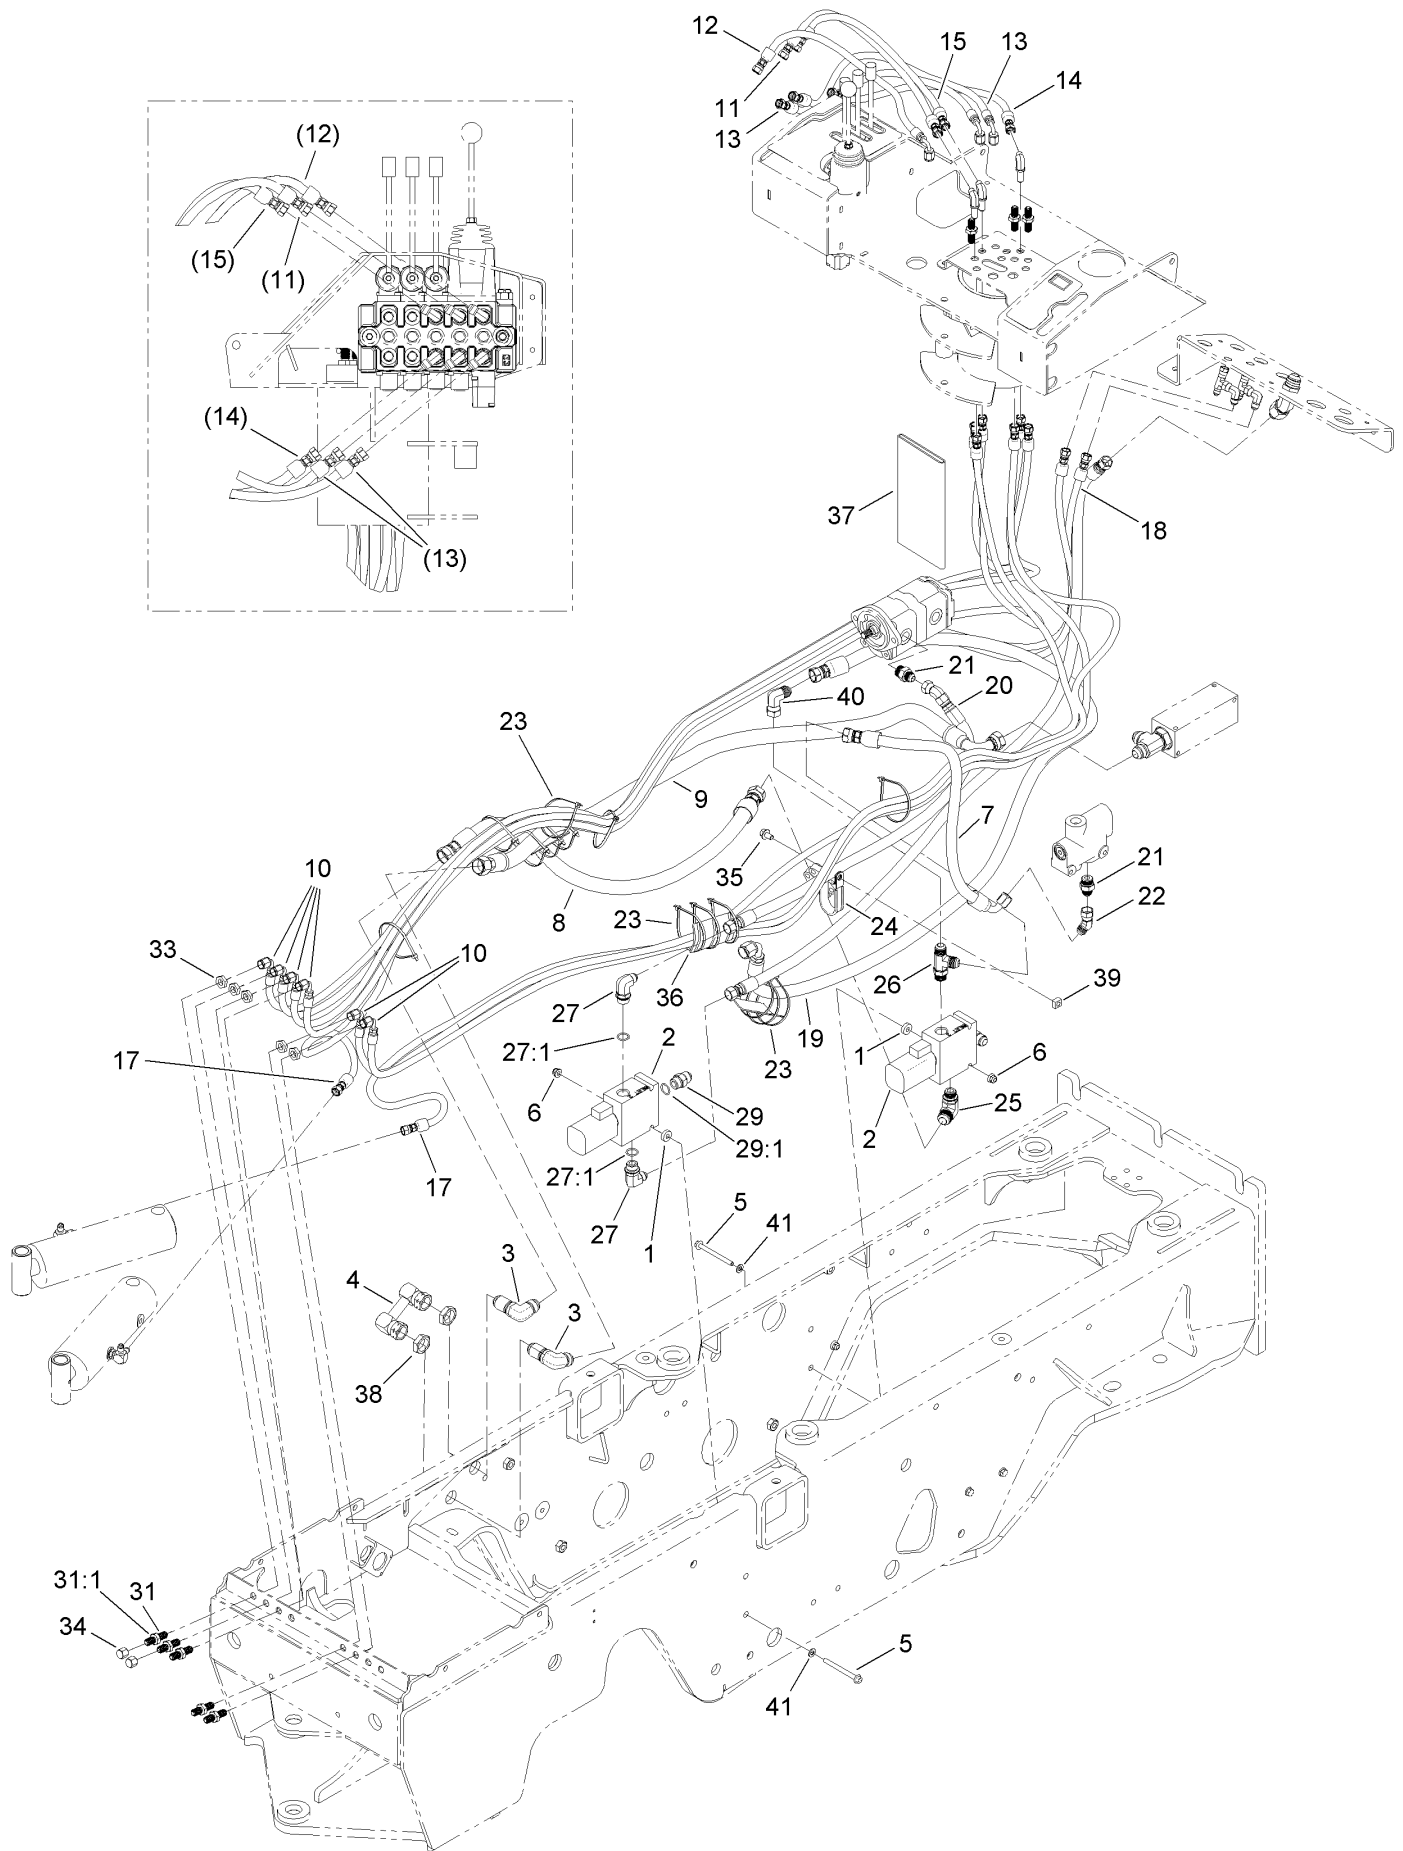

Directional Valve and Hydraulic Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	26-4840	4	Spacer-Pin, Mounting	22	T0000-5536	2	Fitting-Swivel, 45
2	AU8HV80164	2	Directional Valve ASM	23	3290-379	17	Tie-Cable
3	AU218-696	2	Fitting-Elbow, 90	24	127-0516	1	Clamp-R, Double
4	AUH673212	1	Fitting-Special	25	95-0581	1	Fitting-Elbow, 90 DEG
5	AU100327	4	Screw-Flange	26	AU218-5241	1	Fitting-Tee
6	104-3082	4	Nut-Lock, HHF	27	353-426	2	Fitting-90 DEG
7	125-6705	1	Hose ASM	27:1	237-80	1	O-Ring
8	125-6706	1	Hose ASM	29	353-385	1	Fitting-Straight
9	125-6707	1	Hose ASM	29:1	237-80	1	O-Ring
10	125-6785	6	Hose ASM	31	AU218-673	6	Union-Bulkhead
11	125-6772	1	Hose ASM	31:1	AU218-1254	1	Nut-Lock, Bulkhead
12	125-6773	1	HYD Hose ASM	33	AU218-1254	6	Nut-Lock, Bulkhead
13	125-6774	2	Hose ASM	34	01-201-4520	2	Cap
14	125-6776	1	Hose ASM	35	3234-9	1	Screw-HHF
15	125-6779	1	HYD Hose ASM	36	AU112950	4	Protector-Hose
17	125-6781	2	Hose ASM	37	127-1063	1	Sleeve-Protective
18	125-6766	1	Hose ASM	38	AU218-1256	2	Nut-Lock, Bulkhead
19	125-6786	1	Hose ASM	39	AU224-2206	1	Nut-Square
20	125-6787	1	Hose ASM	40	94-7023	1	Adaptor
21	353-433	2	Fitting-Straight	41	3256-23	4	Washer-Plain


Oil Filter and 60 CC Hi Motor Assembly

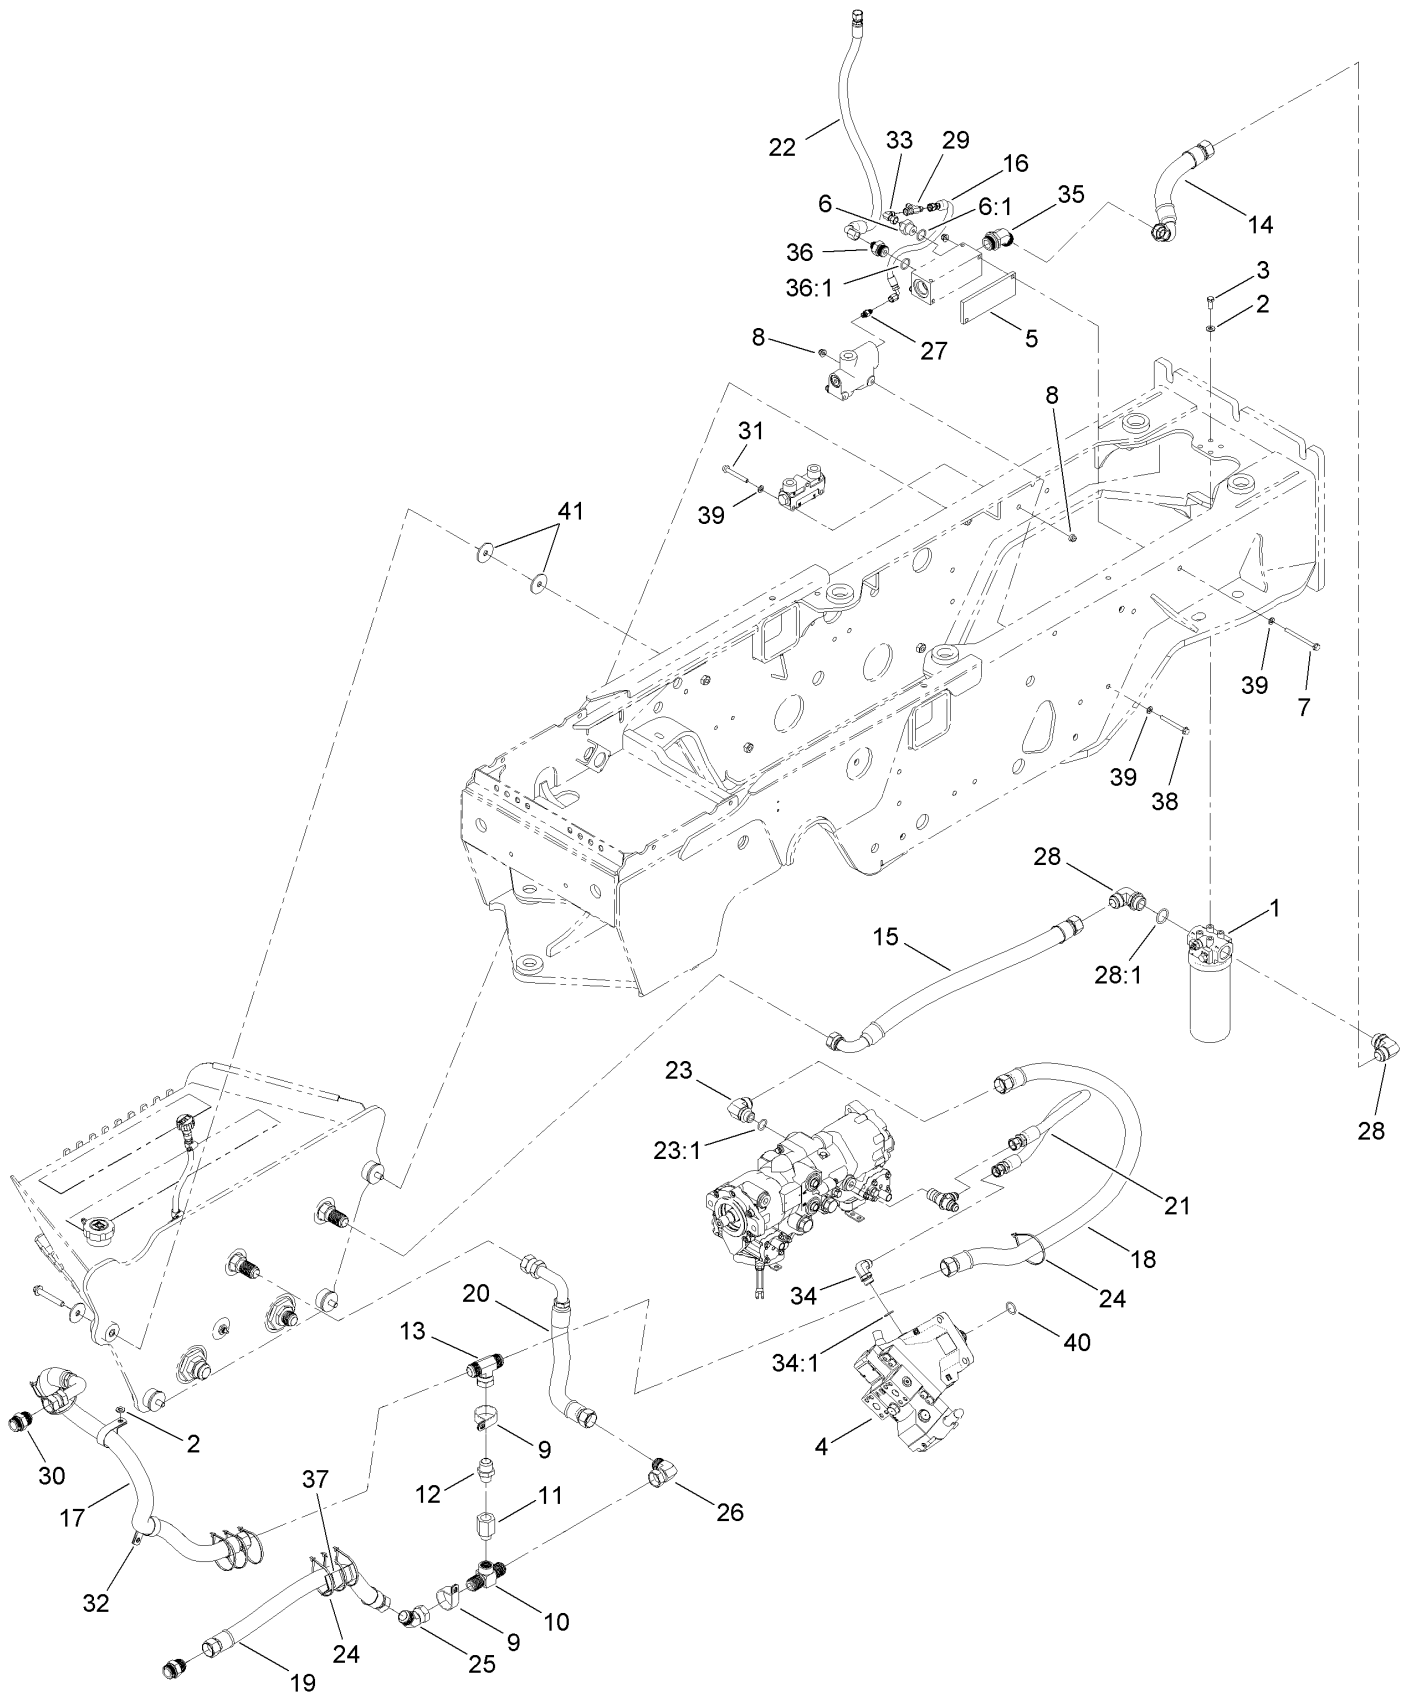

Oil Filter and 60 CC Hi Motor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUD125507	1	Oil Filter ASM	23:1	237-81	1	O-Ring
2	AU496-21041	5	Washer-Flat	24	3290-379	16	Tie-Cable
3	323-5	4	Screw-HH	25	AU218-5176	1	Fitting-Elbow, 45
4	AU125010	1	HYD Motor ASM	26	AU218-5234	1	Fitting-Elbow, 90
5	AU120043	1	Spacer	27	353-545	1	Fitting-Straight
6	AU218-5044	1	Adapter-Straight	28	AU218-5110	2	Elbow-90 DEG
6:1	237-81	1	O-Ring	28:1	237-146	1	O-Ring
7	AU100328	2	Screw-HHF	29	353-877	1	Fitting-HYD, Tee
8	104-3082	7	Nut-Lock, HHF	30	AU218-5069	2	Fitting-Straight
9	114-9566	2	Clamp-R	31	AU100325	3	Screw-Flange
10	AU218-582	1	Fitting-Tee	32	127-0518	2	Clamp-R
11	AUH627513	1	Valve-Check	33	AU218-980	1	Fitting-Swivel, 90 DEG
12	AU218-459	1	Adapter	34	353-370	1	Fitting-Elbow, 90 DEG
13	AU91-203101-16-1	1	Fitting-Tee	34:1	237-80	1	O-Ring
14	125-6701	1	Hose ASM	35	AU218-5140	1	Fitting-Elbow, 45
15	125-6702	1	Hose ASM	36	353-620	1	Fitting-Straight
16	125-6703	1	Hose ASM	36:1	237-81	1	O-Ring
17	125-6709	1	Hose ASM	37	AU112950	3	Protector-Hose
18	125-6710	1	Hose ASM	38	33104-080	2	Screw-HHF
19	125-6711	1	Hose ASM	39	3256-23	7	Washer-Plain
20	125-6724	1	Hose ASM	40	115-5419	1	O-Ring
21	125-6770	1	Hose ASM	41	AU496-81018	8	Washer-Flat
22	125-6791	1	Hose ASM				
23	127-9663	1	Fitting-Elbow, 90				

Hydraulic Motor Assembly No. AU125010

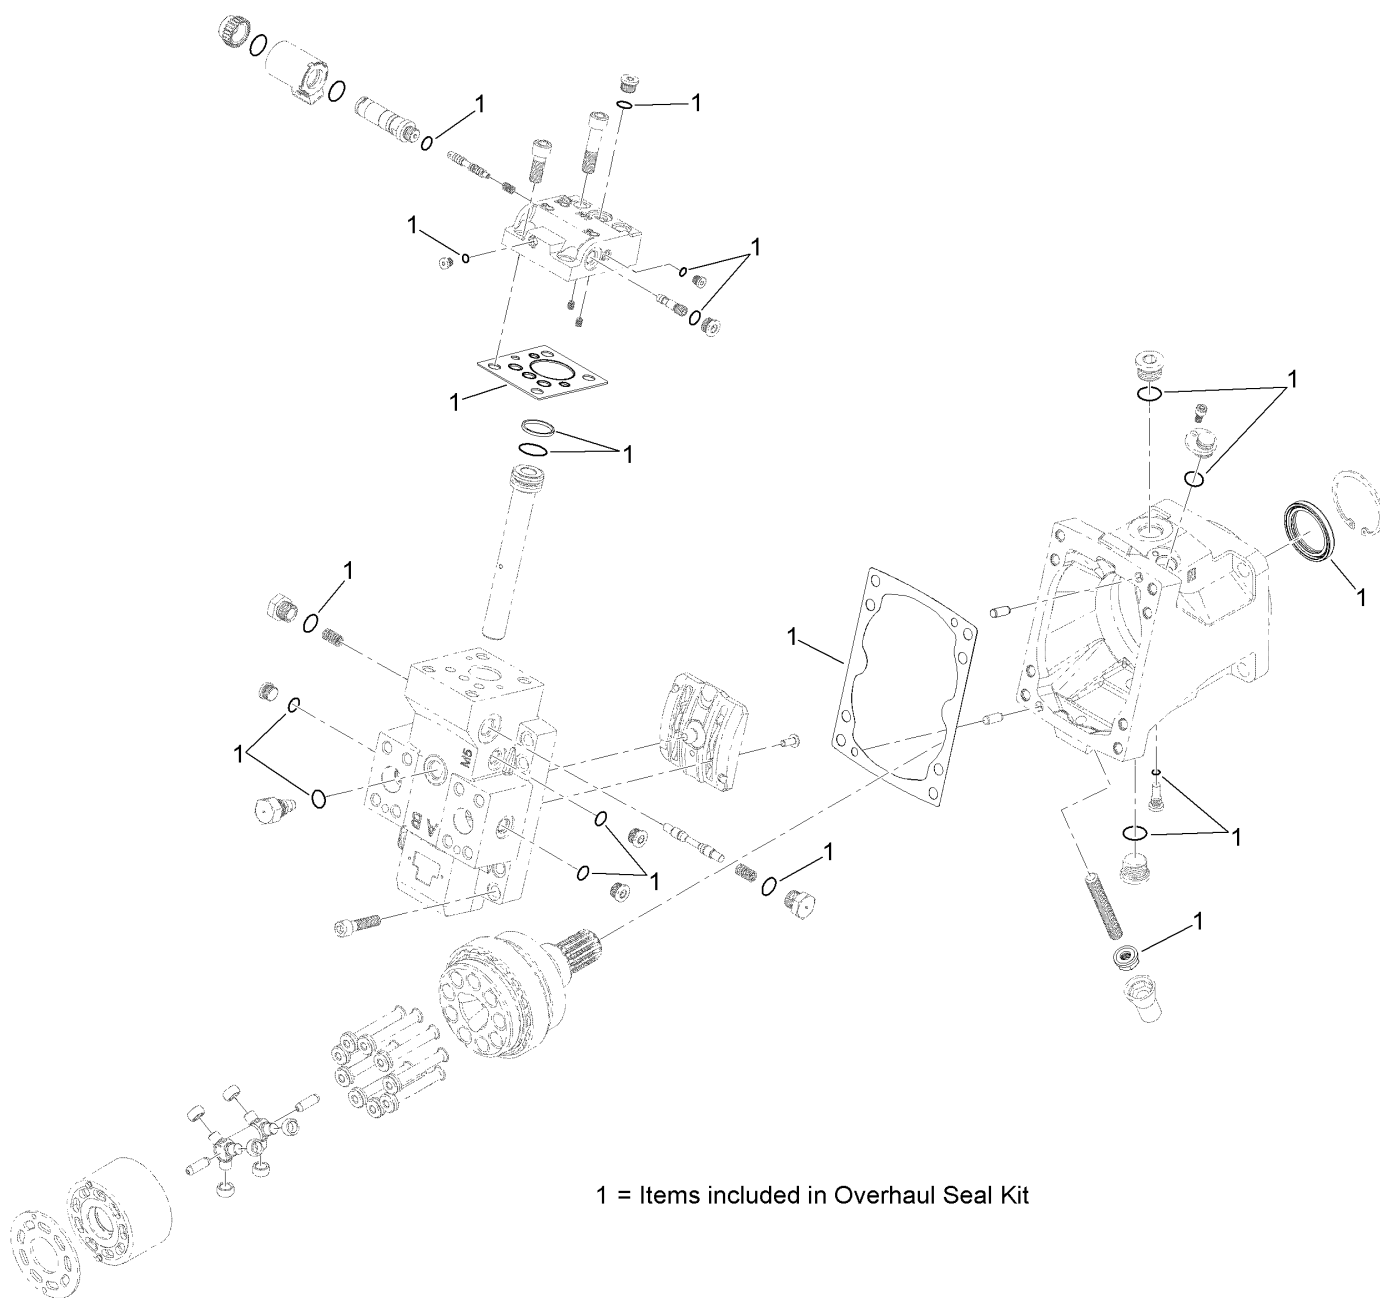


1 = Items included in Overhaul Seal Kit

Hydraulic Motor Assembly No. AU125010 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	11044525	1	Overhaul Service Seal Kit - Purchase From Sauer-Danfoss Dealer ●

● Obtain locally.


Solenoid Valve and Hose Assembly

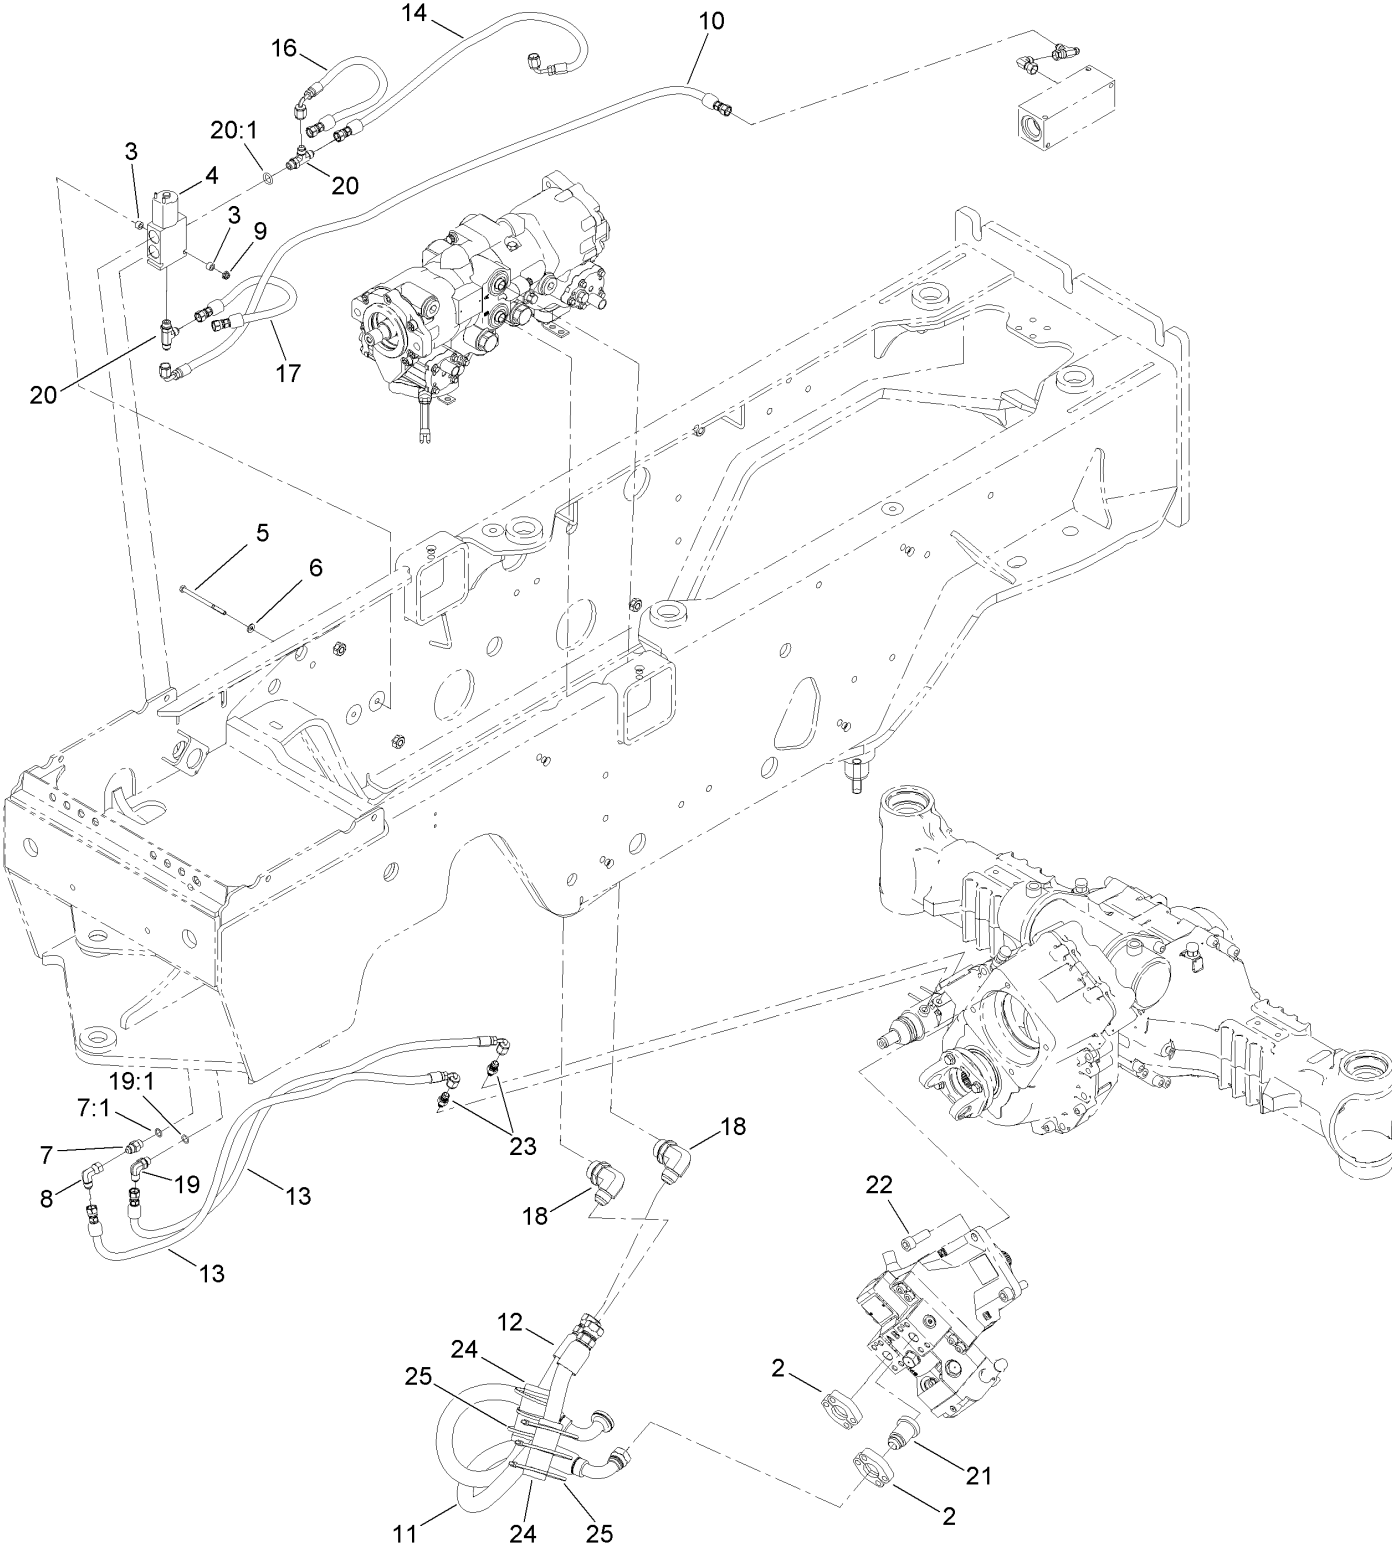

Solenoid Valve and Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	AU8TS06212	2	3/4 Inch Split Flange Kit	14	125-6767	1	Hose ASM
3	98-4799	4	Spacer	16	125-6790	1	Hose ASM
4	AU187505C91	1	Solenoid Valve ASM	17	125-6718	1	Hose ASM
5	321-24	2	Screw-HH	18	AU218-5118	2	Elbow
6	AUH426767	2	Washer-Flat	19	103-1802	1	Fitting-Elbow, 90 DEG
7	353-384	1	Fitting-Straight	19:1	237-42	1	O-Ring
7:1	237-42	1	O-Ring	20	AU218-5243	2	Fitting-Tee
8	AU218-980	1	Fitting-Swivel, 90 DEG	20:1	237-42	1	O-Ring
9	104-7201	2	Nut-HF	21	127-1618	1	Fitting-Straight
10	125-6704	1	Hose ASM	22	AU864-14040	4	Screw-HSH
11	125-6725	1	Hose ASM	23	AU127171	2	Adapter
12	125-6726	1	Hose ASM	24	AU112950	2	Protector-Hose
13	125-6729	2	Hose ASM	25	3290-379	6	Tie-Cable


Fuel Tank Assembly

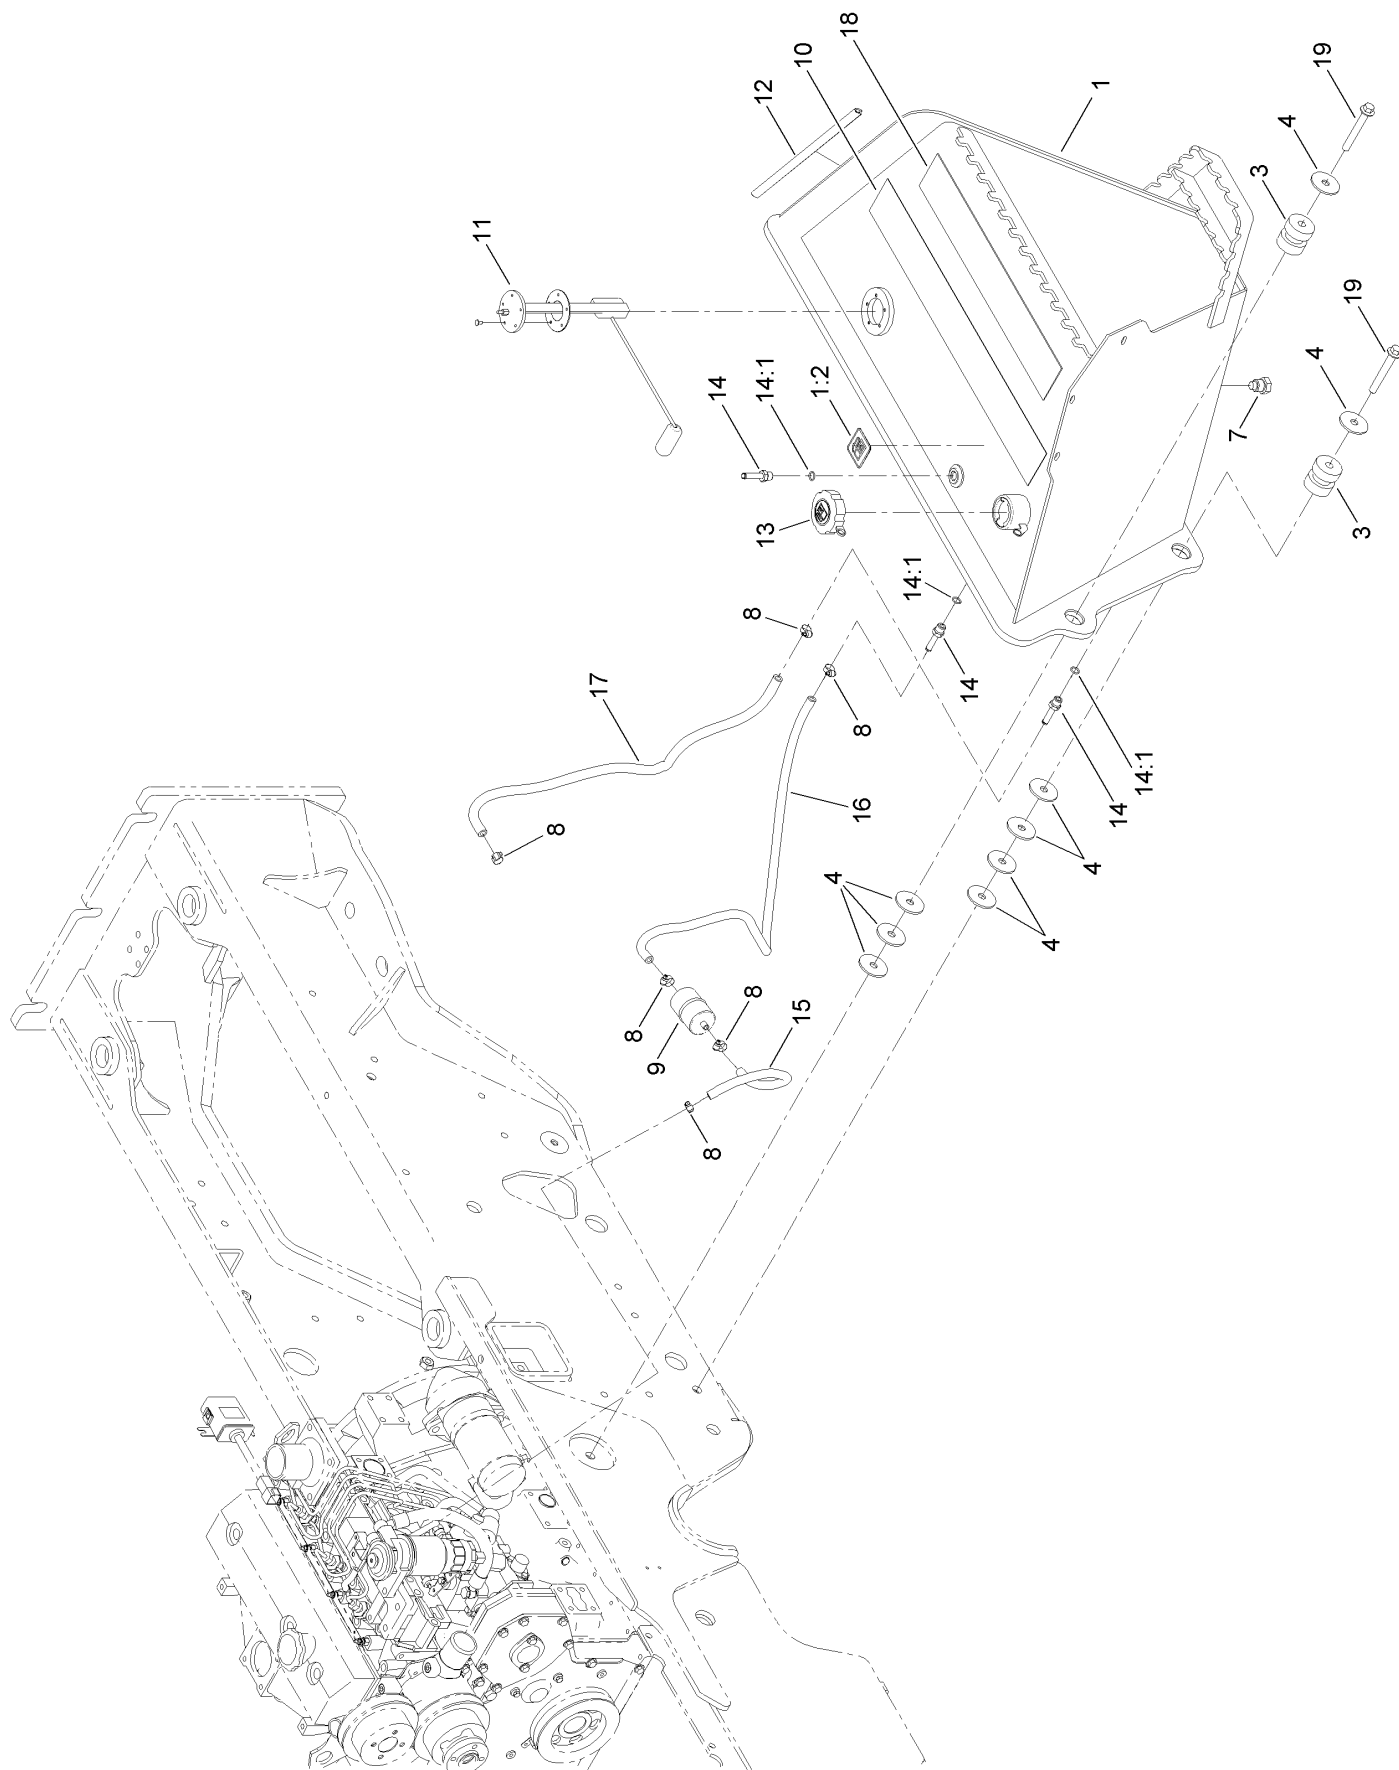

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1232	1	Fuel Tank ASM	13	127-1292	1	Cap-Diesel Fuel, Non-Vented
1:2	125-8478	1	Decal-Diesel	14	353-979	3	Fitting-STR
3	AU8NG28121	4	Isolator-Mounting, Universal	14:1	237-42	1	O-Ring
4	AU496-81018	18	Washer-Flat	15	125-4529	1	Hose-Fuel
7	AU119908	1	Plug-Hex, Magnetic	16	127-0946	1	Hose-Fuel
8	2412-108	6	Clamp-Worm	17	127-1245	1	Hose-Fuel
9	AU8NG10019-24	1	Filter-Inline Fuel	18	AU105912	1	Tape-Anti Skid, Lower Step
10	AUH433994	1	Strip-Anti Skid	19	33106-090	4	Screw-HHF
11	AU125245	1	Sender-Fuel Level				
12	127-1273	1	Strip-Seal				


Ground Drive Control Assembly

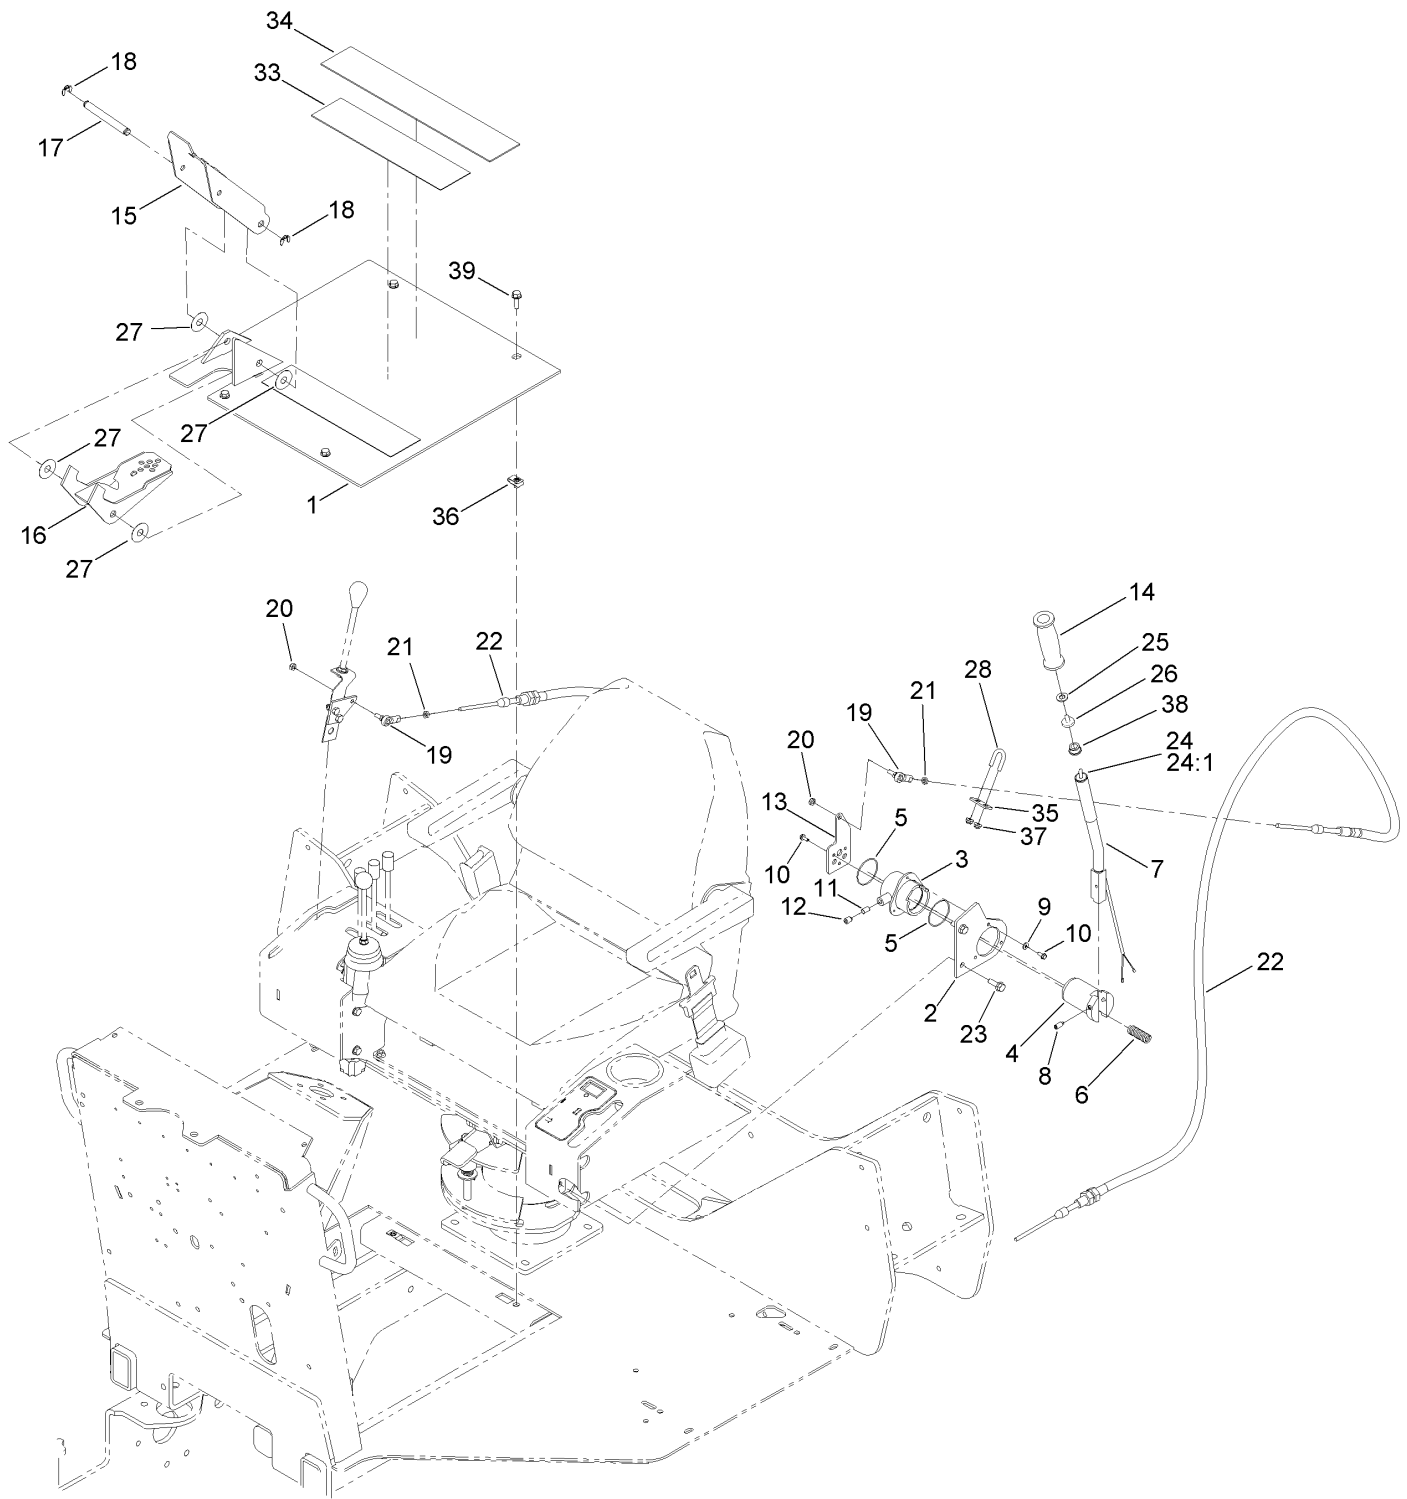

Ground Drive Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU125532-03	1	Plate-Floor	20	3296-13	2	Nut-Lock, NI
2	AU125349-03	1	Plate-Gusset	21	3220-1	2	Nut-Jam
3	AUH674569	1	Mount	22	AU102691A1	2	Ground Drive Control Cable ASM
4	AU136779A1	1	Shaft	23	33104-025	2	Screw-HHF
5	AUS5625	2	O-Ring	24	AUH675066	1	On/Off Toggle Switch ASM
6	AUH438122	1	Spring-Locking	24:1	AUH438667	1	Switch-Toggle
7	AU125311	1	Handle	25	3256-24	1	Washer-Flat
8	AUH438152	2	Screw-Set	26	AU116400A1	1	Boot-Switch, Toggle
9	3256-14	3	Washer-Flat	27	AU126572	4	Washer
10	3290-321	6	Screw-HWH	28	AUH166421	1	Bolt-U
11	AUH438119	1	Plug-Friction	33	127-1297	2	Strip-Anti Skid
12	AUH438151	1	Screw-HSH	34	127-1298	1	Strip-Anti Skid
13	AU125310-03	1	Plate-Control	35	AUH373779	1	Spacer
14	AUD128268	1	Grip-Handle	36	115-7721	4	Nut-Clip, U
15	AU107152A1-03	1	Pedal-Toe	37	104-7201	2	Nut-HF
16	AU107153A1-03	1	Pedal-Heel	38	AUH439229	1	Bushing
17	AU107156A1	1	Pin-Pedal	39	3234-17	4	Screw-HHF
18	65-2720	2	Ring-Retaining, Clip				
19	AUH358374	2	Rod End-Female				


Ground Drive Linkage Assembly

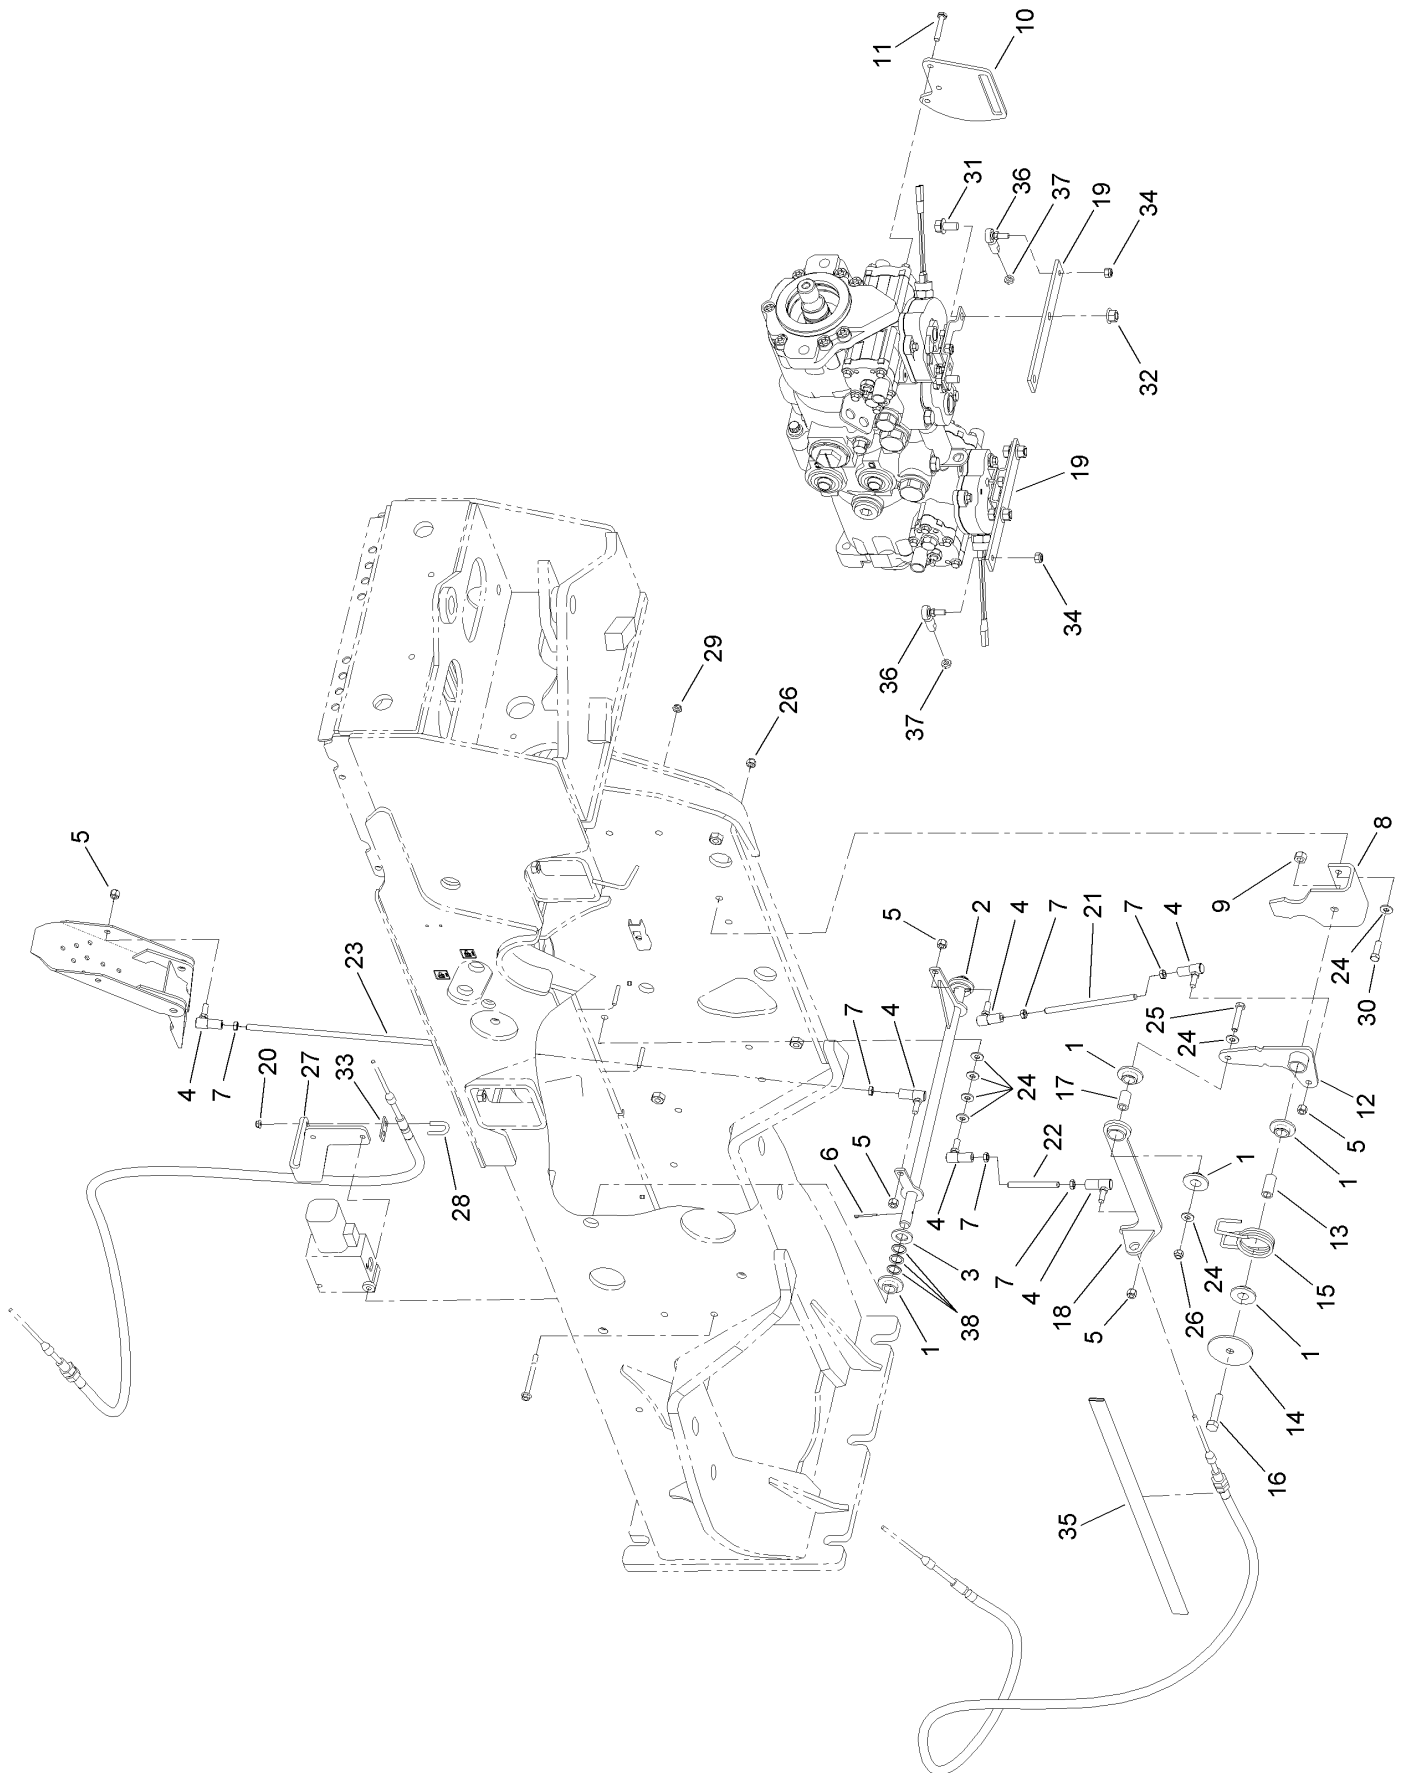

Ground Drive Linkage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUD128616	6	Bushing-Insert, Plastic	20	104-7201	2	Nut-HF
2	AU125307-03	1	Shaft-Control	21	AU125576	1	Rod-Linkage
3	AU495-11081	2	Washer-Flat	22	AUH436588	1	Rod-Linkage
4	AUD38296	6	Joint-Ball	23	AU125321	1	Rod-Control
5	AU232-4616	5	Nut-Hex	24	3256-3	8	Washer-Flat
6	3272-12	2	Pin-Cotter	25	323-32	1	Screw-HH
7	3220-3	6	Nut-HJ	26	97-1204	3	Nut-Hex
8	AU106411A1-03	1	Channel-Mounting, Bellcrank	27	AU125908-03	1	Plate-Mount
9	97-1206	1	Locknut	28	AUH166421	1	Bolt-U
10	AU126576-03	1	Stop-Lever, Pump	29	3296-5	1	Nut-Hex
11	AU326-424	3	Screw-HH	30	323-7	2	Screw-HH
12	AU125320	1	Pivot-Bellcrank	31	3234-1	4	Screw-HHF
13	AUH435694	1	Spacer	32	32128-36	4	Nut-HF
14	AUH436215	1	Washer-Special	33	AUH373779	1	Spacer
15	AUH436303	1	Spring	34	3296-3	2	Nut-Lock
16	325-10	1	Screw-HH	35	127-1226	1	Sleeve-Protective
17	AUH439075	1	Spacer-Pivot, Bellcrank	36	AUH358374	2	Rod End-Female
18	AU125318	1	Link-Mounting, Cable	37	3220-1	2	Nut-Jam
19	AUH437601-03	2	Lever-Control, Pump	38	115-7210	6	Washer-Thrust


Roll-Over Protection System and Platform Assembly

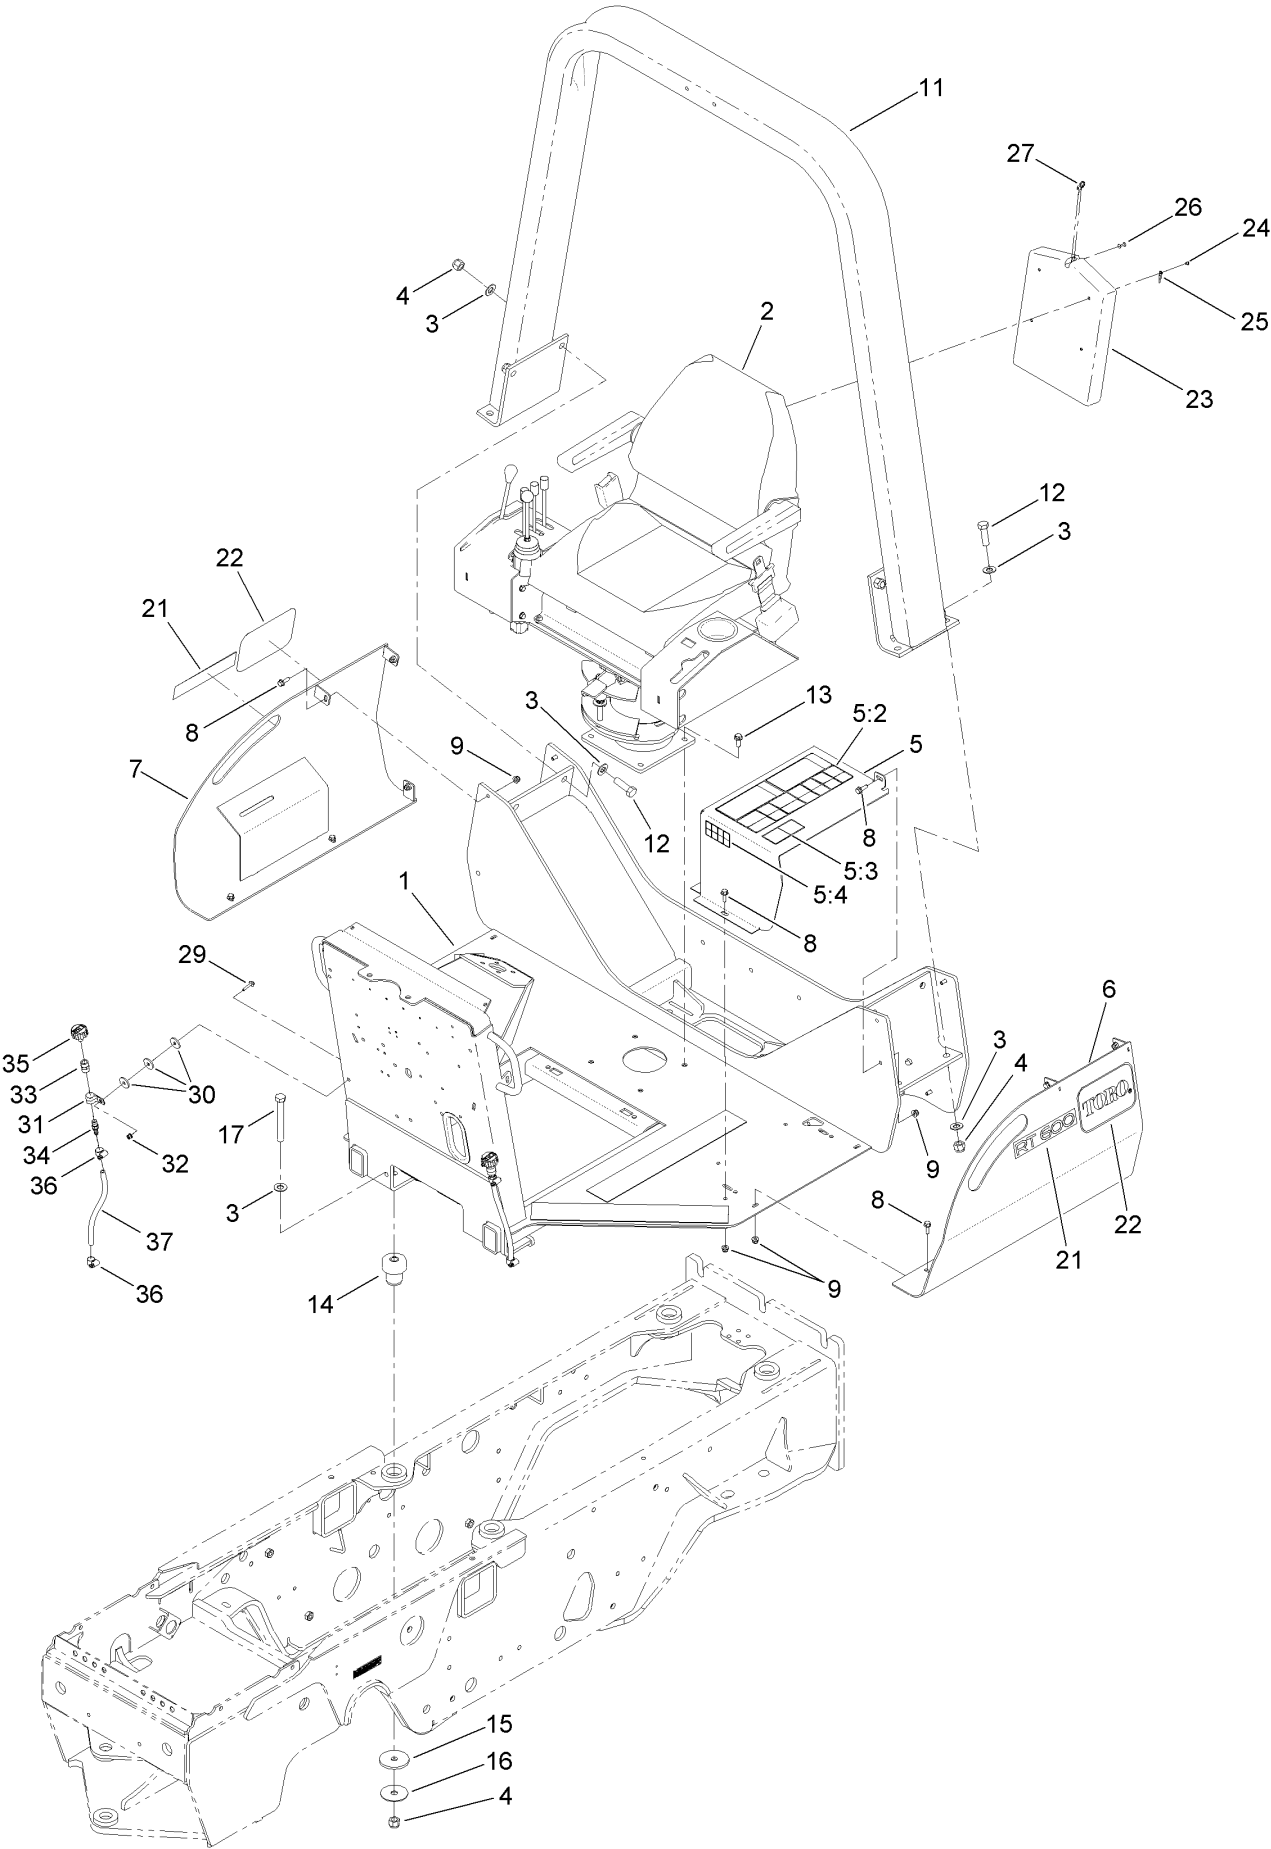

Roll-Over Protection System and Platform Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-6730-03	1	Platform-Operator	17	AU113-2649	4	Screw-HH
2	125-6737	1	Seat ASM	21	125-6692	2	Decal
3	3256-27	20	Washer-Flat	22	62-7400	2	Decal
4	120-0924	12	Nut-Hex	23	AU103216	1	Holder-Manual, Operator
5	127-1235	1	Battery Cover ASM	24	1-803035	4	Rivet-Pop
5:2	125-6699	1	Decal-Safety	25	AUR46465	1	Lanyard
5:3	125-6691	1	Decal-Safety	26	AUR46463	1	Post-Manual
5:4	125-8473	1	Decal-Warning, Battery	27	AUR40745	1	Strap-Tie, Nylon
6	AU125419-01	1	Fender-LH	29	33103-030	2	Screw-HHF
7	AU125424-01	1	Fender-RH	30	105-3048	6	Washer-Flat
8	33104-025	14	Screw-HHF	31	2412-4	2	Clamp-R
9	104-3082	14	Nut-Lock, HHF	32	81-0130	2	Nut-Flange, NI
11	127-1884	1	ROPS ASM	33	AU217-1101	2	Coupling-Pipe (NPTF)
12	327-26	8	Screw-HH	34	108-0342	2	Fitting-Straight
13	108-1531	4	Screw-HHF	35	68-6150	2	Breather
14	AUA141451	4	Mount-Rear	36	2412-119	4	Clamp-Hose, Worm Drive
15	AUA141470	4	Washer-Snubbing	37	130-8819	2	Hose-Breather
16	AUD89007	4	Washer				


Seat and Mounting Assembly

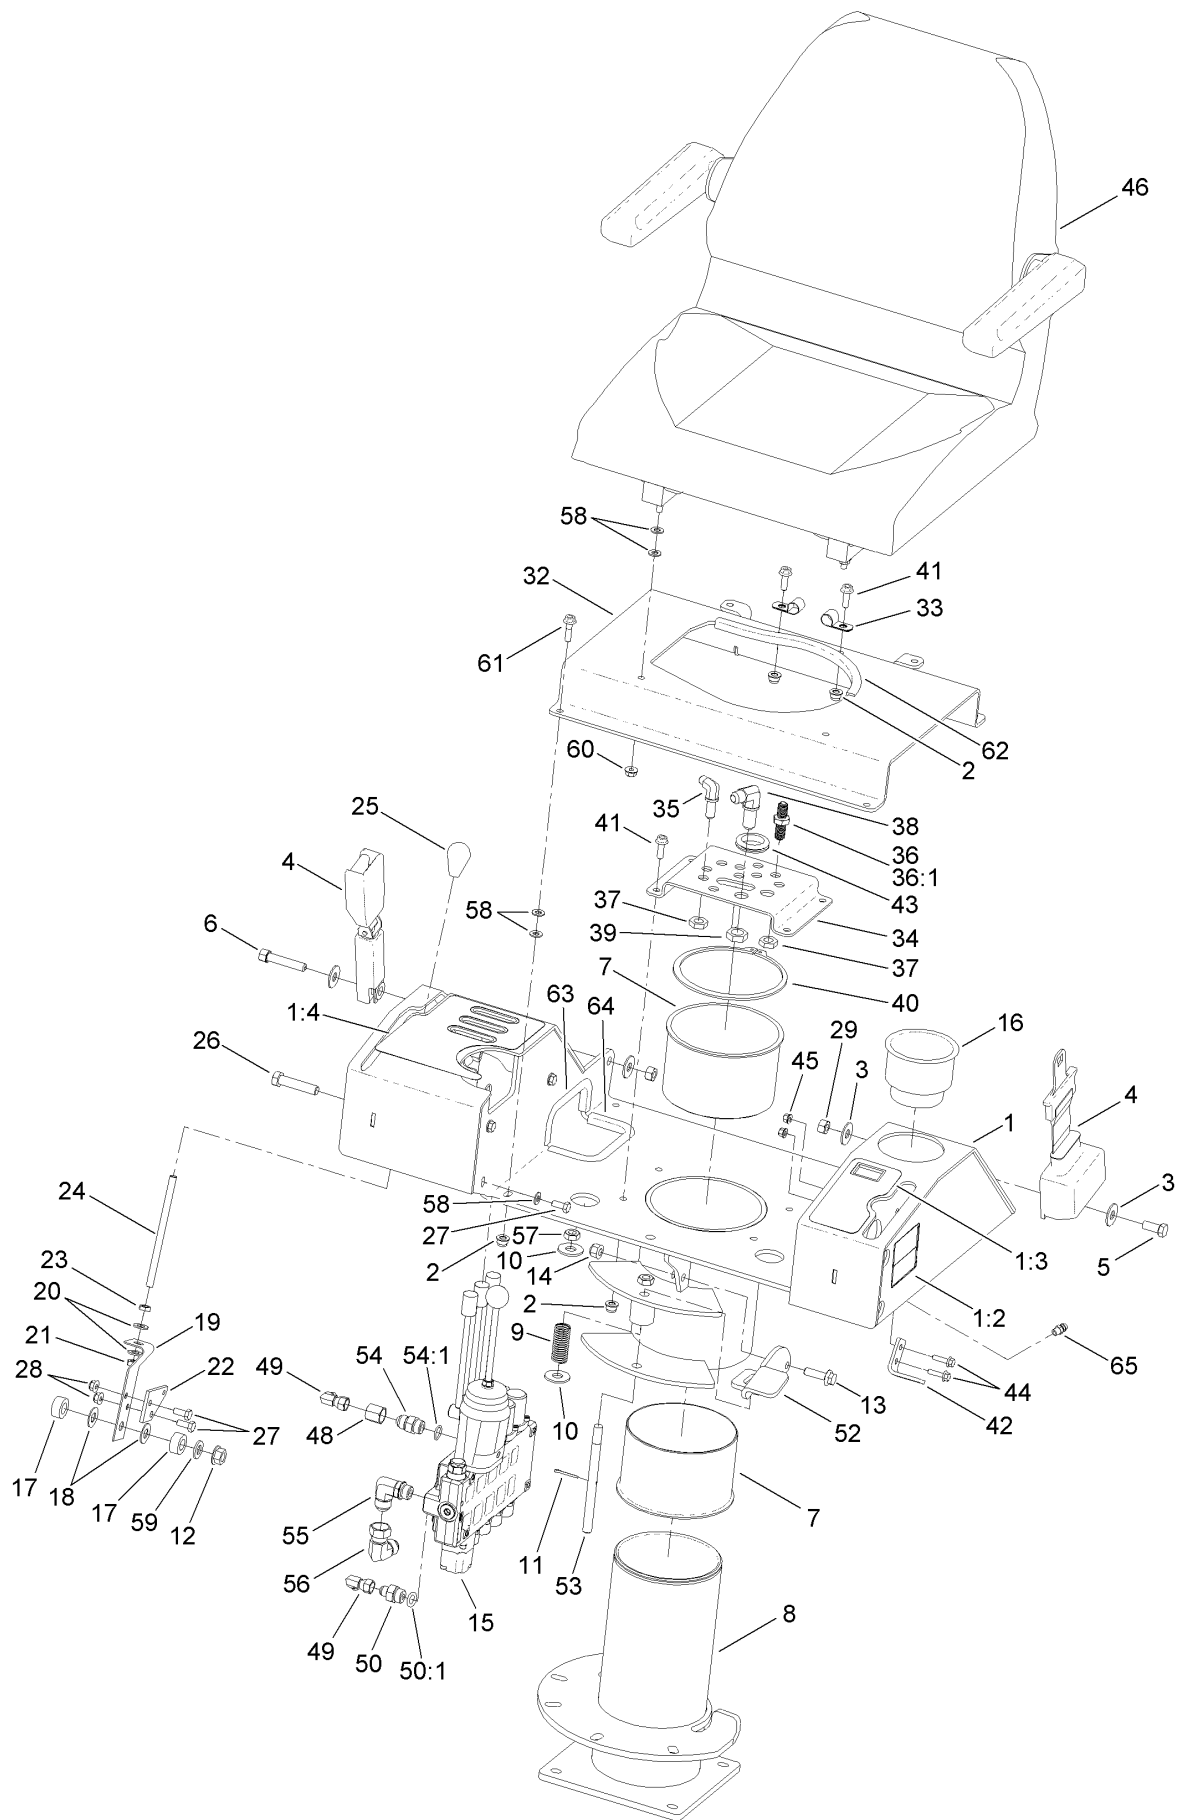

Seat and Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1233	1	Seat Plate ASM	34	AU126022-03	1	Plate-Bulkhead, Seat
1:2	125-8480	1	Decal-Warning, No Riders	35	AU218-693	5	Elbow
1:3	125-6698	1	Decal-Control, LH	36	AU218-673	5	Union-Bulkhead
1:4	125-6695	1	Decal-Control, RH	36:1	AU218-1254	1	Nut-Lock, Bulkhead
2	AU100526	10	Nut-Torque, Prevailing	37	AU218-1254	10	Nut-Lock, Bulkhead
3	AU495-21050	4	Washer-Flat	38	AU218-694	2	Elbow
4	AU249116A1	1	Seat Belt ASM	39	AU218-1255	2	Nut-Lock
5	AU428-716	1	Screw-HH	40	AU126291	1	Ring-Retaining
6	100-4368	1	Bolt-Blade	41	AU100873	6	Screw-HH
7	130-8820	2	Pivot-Bearing Seat	42	AU126427-03	1	Plate-Mount
8	AU125352	1	Mount-Seat	43	240-3	1	Grommet-Rubber
9	AU109011	1	Spring-Pivot Lock, Seat	44	33103-025	2	Screw-HHF
10	AU495-81163	2	Washer-Flat	45	81-0130	2	Nut-Flange, NI
11	AU432-816	1	Pin-Cotter	46	AU126597	1	Seat ASM
12	32128-23	1	Nut-HF	48	AU218-786	5	Reducer-Tube
13	AU100878	1	Screw-HHF	49	AU218-980	10	Fitting-Swivel, 90 DEG
14	103-9511	1	Nut-Lock, NI	50	AU218-5058	5	Connector
15	AU125537	1	HYD Control Valve ASM	50:1	237-79	1	O-Ring
16	AU8EO24121	1	Cup-Holder	52	AU124119-03	1	Bracket-Seat
17	AUH428284	2	Spacer-Gearbox	53	AU108909	1	Rod-Swing, Seat
18	AUH256305	2	Washer-Friction	54	353-388	5	Fitting-Straight
19	127-1285	1	Lever-Control, Speed	54:1	237-79	1	O-Ring
20	3256-24	2	Washer-Flat	55	94-7146	2	Adapter
21	3217-7	1	Nut-Hex	56	94-7023	2	Adaptor
22	AU125544-03	1	Plate-Mounting, Cable	57	3218-5	2	Nut-Jam
23	3218-3	1	Nut-Jam	58	3256-23	19	Washer-Plain
24	AU114524A1	1	Rod-Linkage	59	106-9888	1	Washer-Flat
25	AUA14051	1	Knob-Control	60	117-1350	4	Nut-HF, Lock
26	60-9870	1	Screw-HH	61	AU100874	4	Screw-HHF
27	322-3	5	Screw-HH	62	127-1293	1	Trim-Battery
28	104-8300	2	Nut-HF, NI	63	127-1295	1	Trim-Base, Control
29	106-0327	2	Nut-Hex	64	127-1296	1	Trim-Base, Control
32	AU126446-03	1	Mount-Seat	65	302-5	1	Fitting-Grease
33	AU515-23159	2	Clamp-R				


Hydraulic Control Valve Assembly No. AU125537

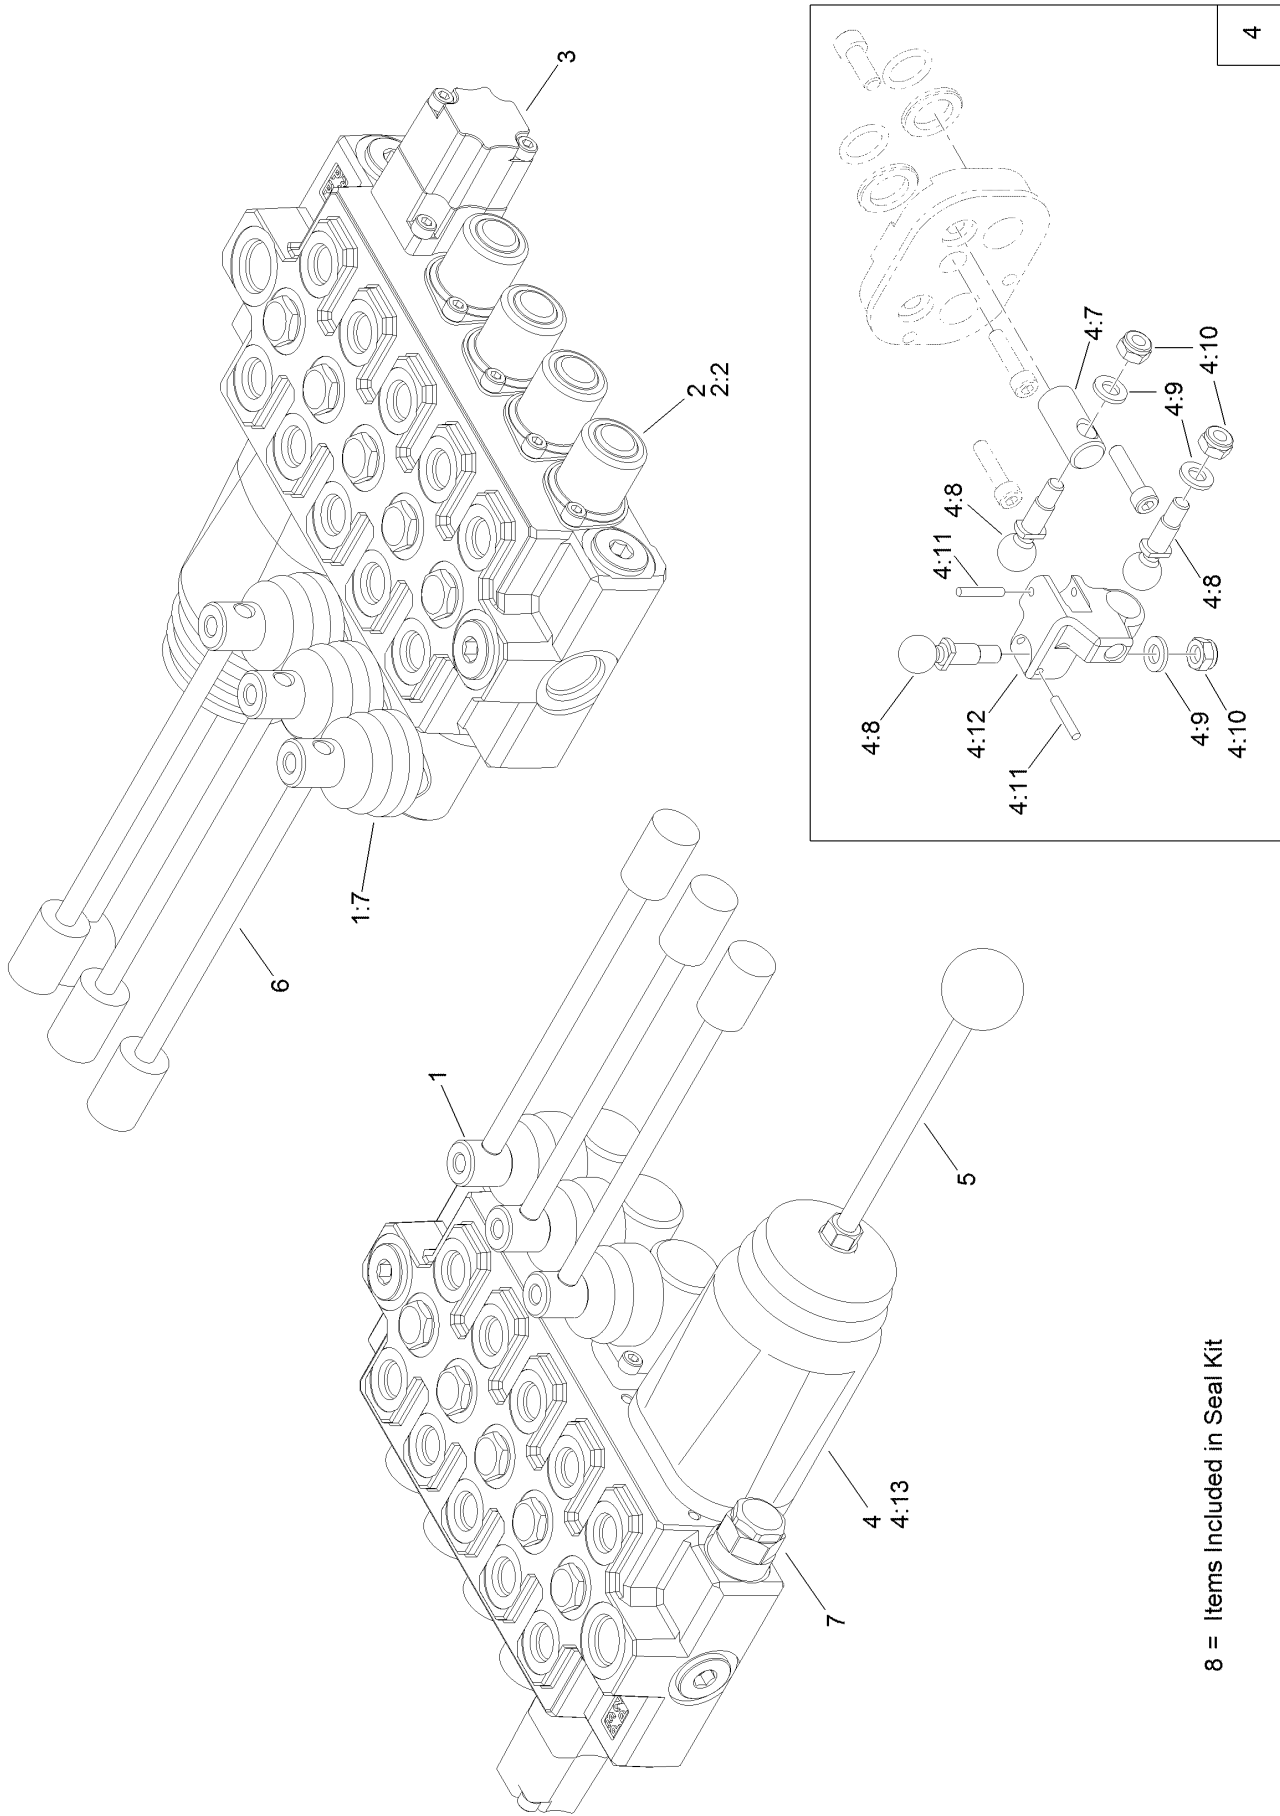

Hydraulic Control Valve Assembly No. AU125537 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-8866	3	Spool-Control	4:10	33023-00	3	Nut-Lock
1:7	130-8867	1	Boot-Rubber	4:11	110-7192	2	Pin-Roll
2	130-8868	1	Spool-Control	4:12	130-8876	1	Joint-Joystick, RH
2:2	130-8869	1	Cap-Spool, Control	4:13	131-2640	1	Boot-Joystick
3	130-8871	1	Spool-Control	5	136-7652	1	Lever-Long
4	130-8872	1	Joystick-Mechanism, RH	6	136-7653	3	Lever-Short
4:7	130-8873	1	Pin-Foundation, Joint	7	137-4409	1	Valve-Relief
4:8	130-8874	3	Ball-Joystick	8	139-8878	1	Seal Kit
4:9	09472	3	Washer-Plain				


Dash and Trim Assembly

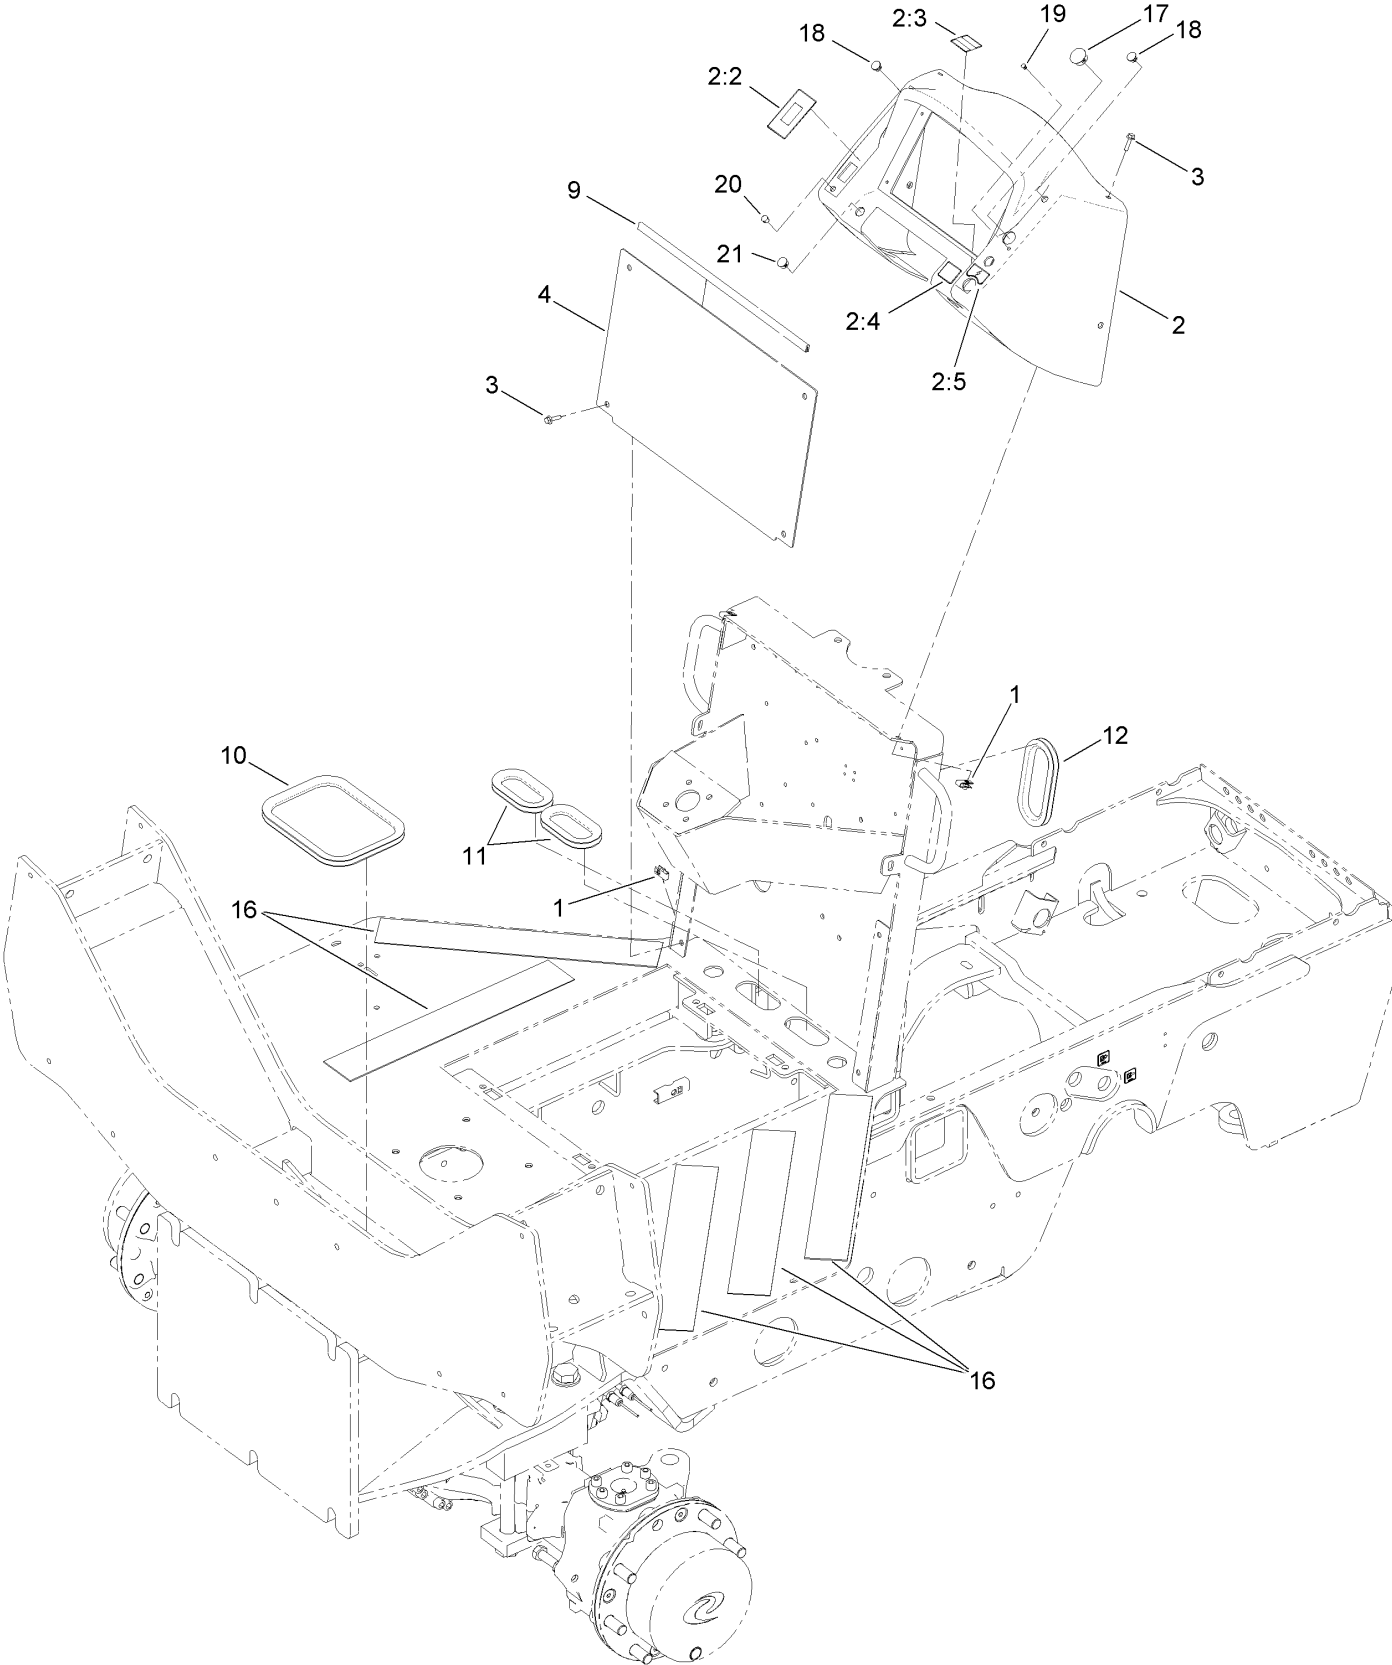

Dash and Trim Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU100861	8	Nut-U	10	127-1222	2	Trim-Edge
2	127-1234	1	Dash Panel ASM	11	127-1223	2	Trim-Edge
2:2	125-8475	1	Decal-Brake, Parking	12	127-1224	1	Trim-Edge
2:3	125-6683	1	Decal-Throttle	16	AU105912	5	Tape-Anti Skid, Lower Step
2:4	125-8472	1	Decal-Ignition	17	127-1842	1	Plug-Dome
2:5	125-8484	1	Decal-Aux Power	18	119-5329	2	Plug-Hole
3	33103-025	8	Screw-HHF	19	567001	2	Plug-Hole
4	125-6765-03	1	Plate-Kick	20	104-9368	1	Plug-Dome
9	127-1221	1	Trim-Edge	21	127-1843	1	Plug-Dome


Main Electrical Assembly

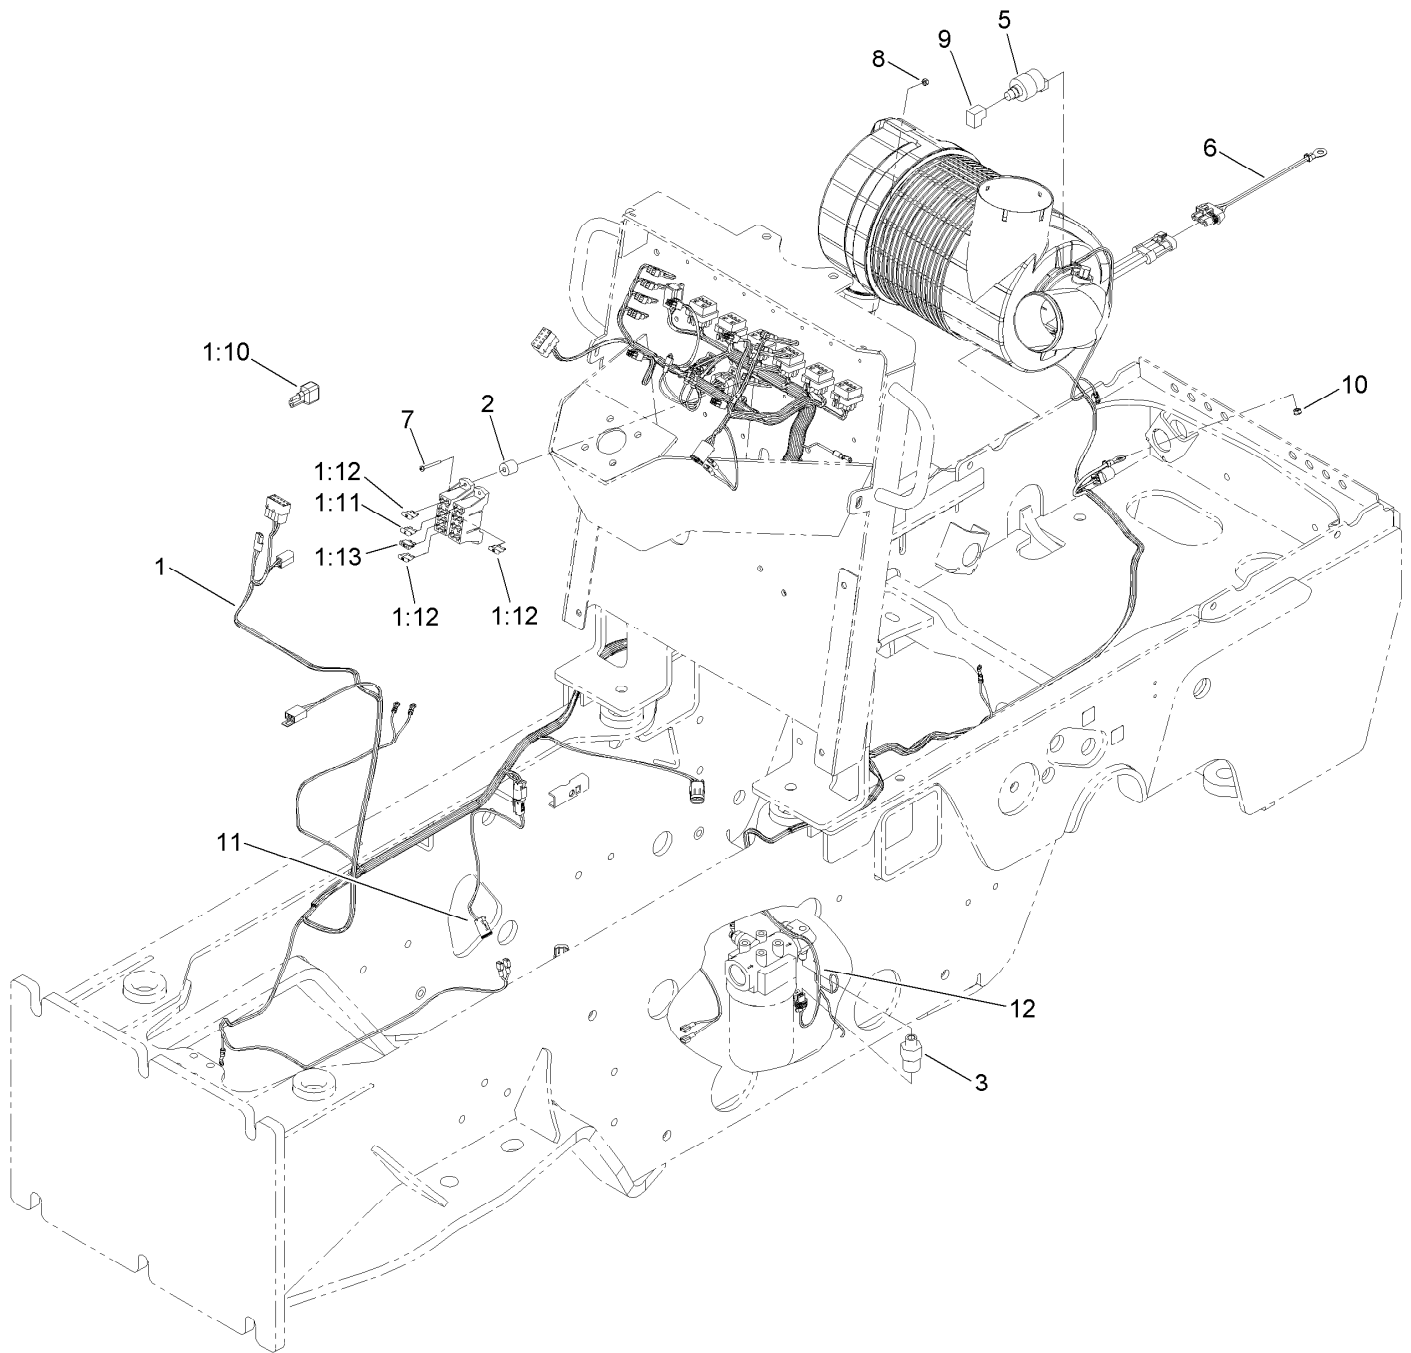

Main Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-0151	1	Wire Harness ASM	7	363-3205	4	Screw-PPH
1:10	100-4918	1	Diode	8	3296-1	4	Nut-Lock
1:11	94-6710	1	Fuse-2 Amp	9	AU217-1050	1	Fitting-Elbow, 90
1:12	218-578	3	Fuse-Blade, 10 Amp	10	98-5845	1	Nut-Hex
1:13	109355	1	Fuse-Blade, 15 Amp	11	122-0124	1	Harness-Wire (HYD Drive Extension)
2	108-0344	4	Spacer	12	122-0123	1	Harness-Wire (HYD Temp Extension)
3	AU443897A1	1	Switch-Pressure				
5	AU293797A1	1	Switch ASM				
6	99-3441	1	Harness-Wire, Fusible Link				


Instrument Panel Electrical Assembly

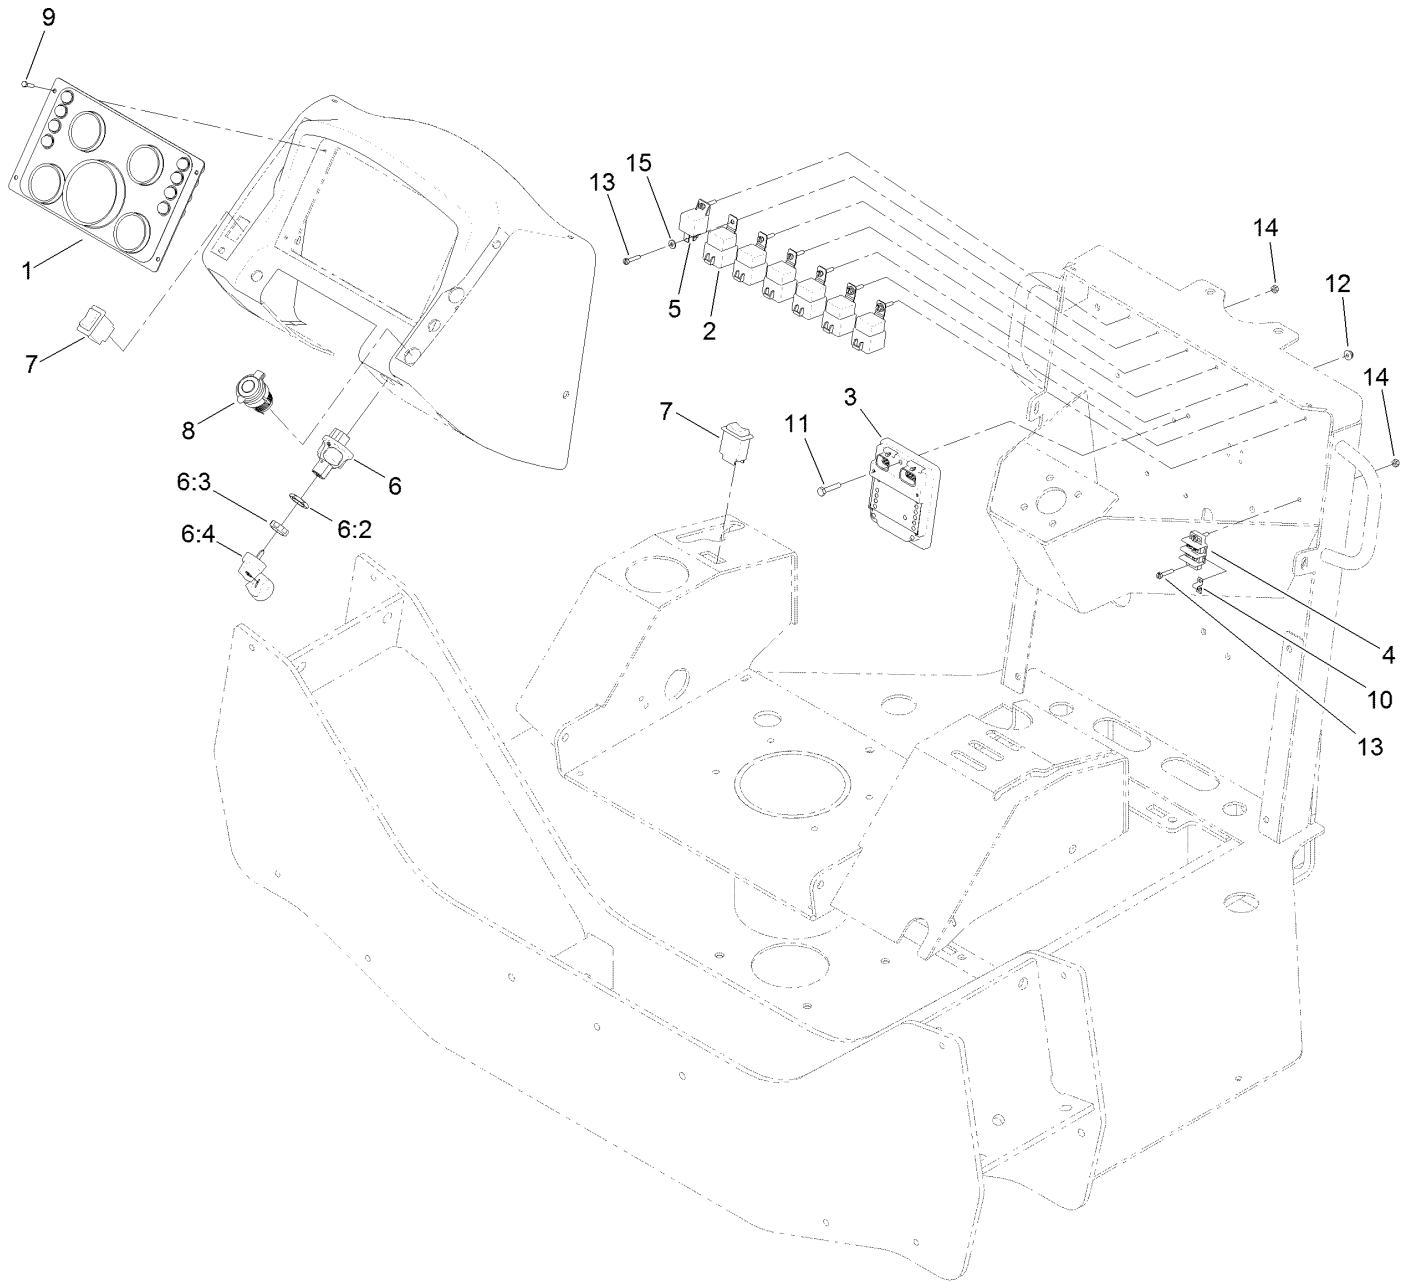

Instrument Panel Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU125255	1	Instrument Panel ASM	8	109-9376	1	Receptacle-12V
2	99-7430	6	Relay-Mini	9	AU463-11012	4	Screw-HH
3	106-9277	1	Module-Control, Standard	10	42863	1	Strip-Jumper
4	42862	1	Block-Terminal, Ground	11	321-13	3	Screw-HH
5	99-7435	1	Relay	12	104-7201	3	Nut-HF
6	121-5159	1	Ignition Switch ASM	13	32105-12	9	Screw
6:2	121-5160	1	Nut-Hex	14	3296-2	9	Nut-Lock, NI
6:3	121-5161	1	Nut-Face	15	3256-14	7	Washer-Flat
6:4	121-5162	1	Set-Key, Ignition				
7	AU113662	2	Switch-Rocker, 2 Pole (On/Off)				

Instrument Panel Assembly No. AU125255

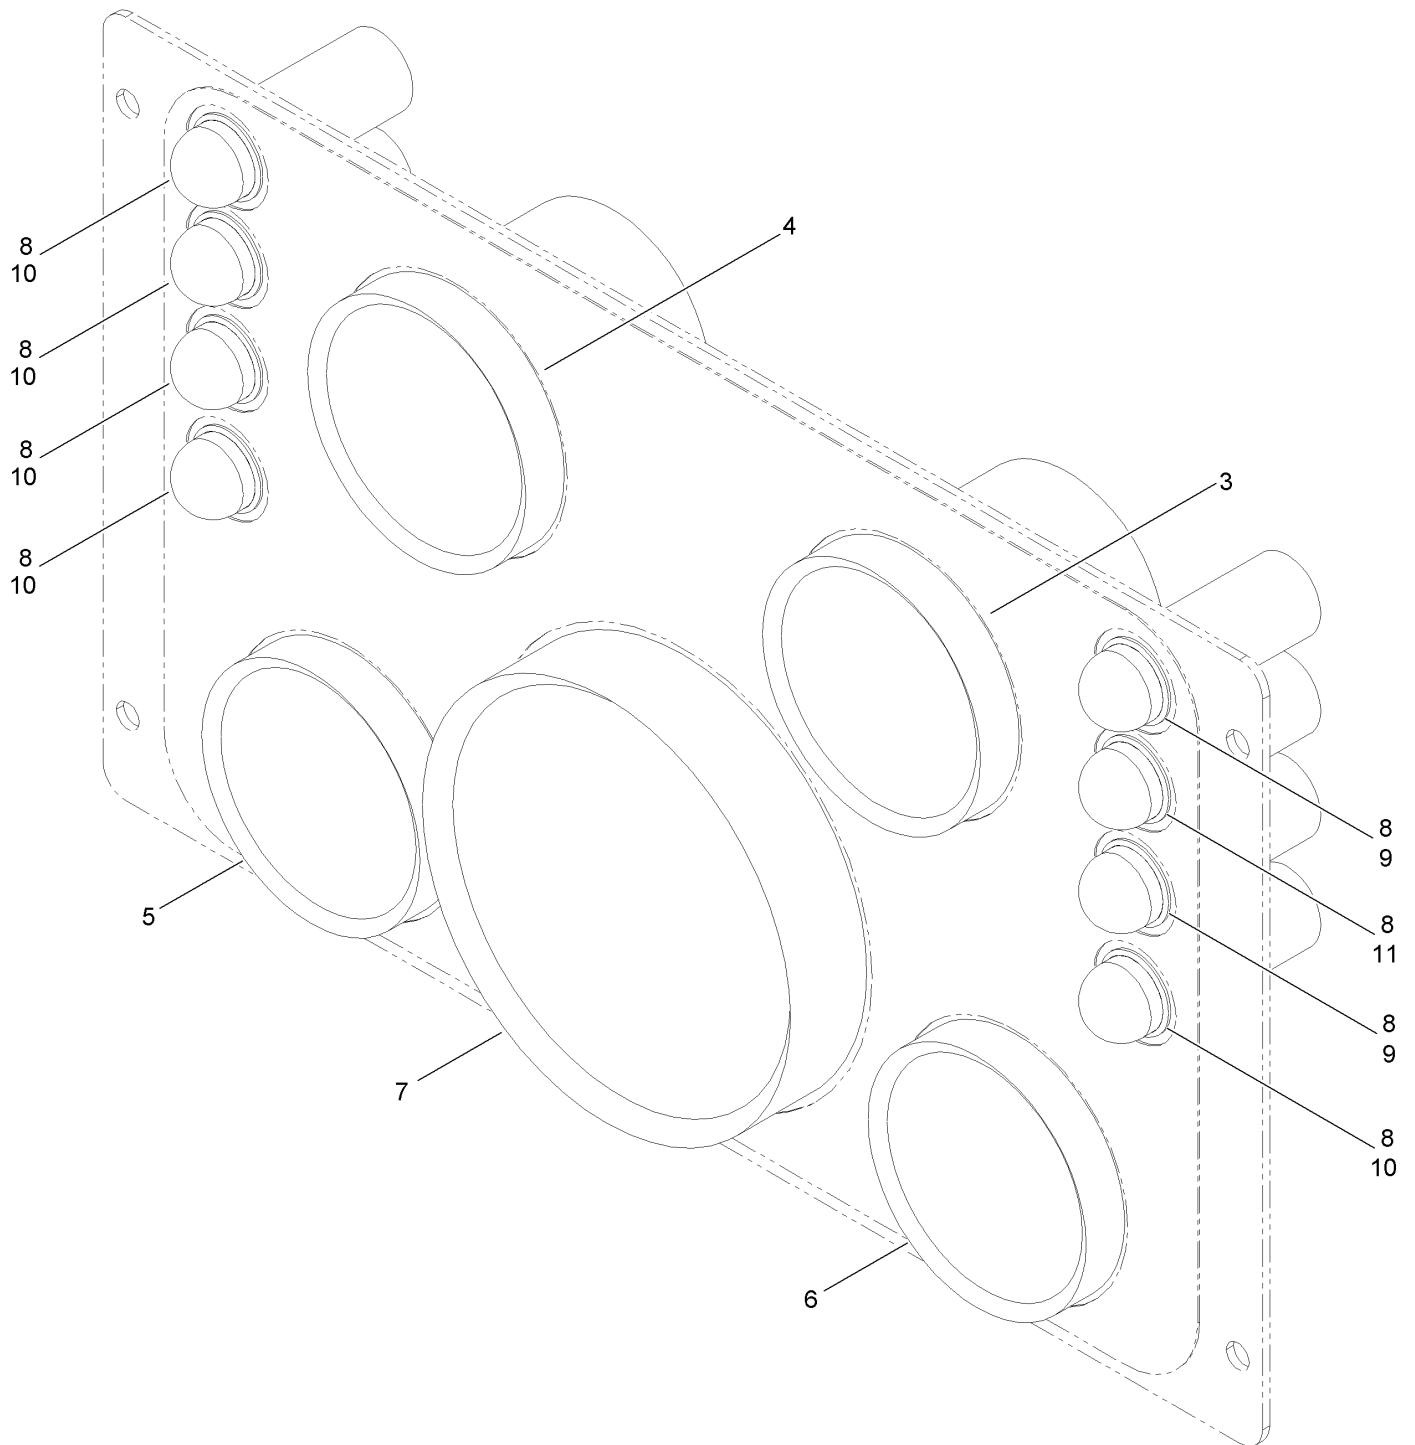


Instrument Panel Assembly No. AU125255 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	AU126881	1	Gauge-Fuel
4	AU126878	1	Gauge-Volt
5	AU126879	1	Gauge-Temp
6	AU127902	1	Gauge-HYD Oil Temp
7	AU126983	1	Gauge-Tachometer
8	AU126984	8	Bulb-12 Volt

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9	AU8EO21402	2	Lens-Dome, Fluted Red (Type T-2)
10	AU8EO21406	5	Lens-Dome, Fluted Amber (Type T2)
11	AU8EO21403	1	Lens-Dome, Fluted Green (Type T2)

Battery and Cable Assembly

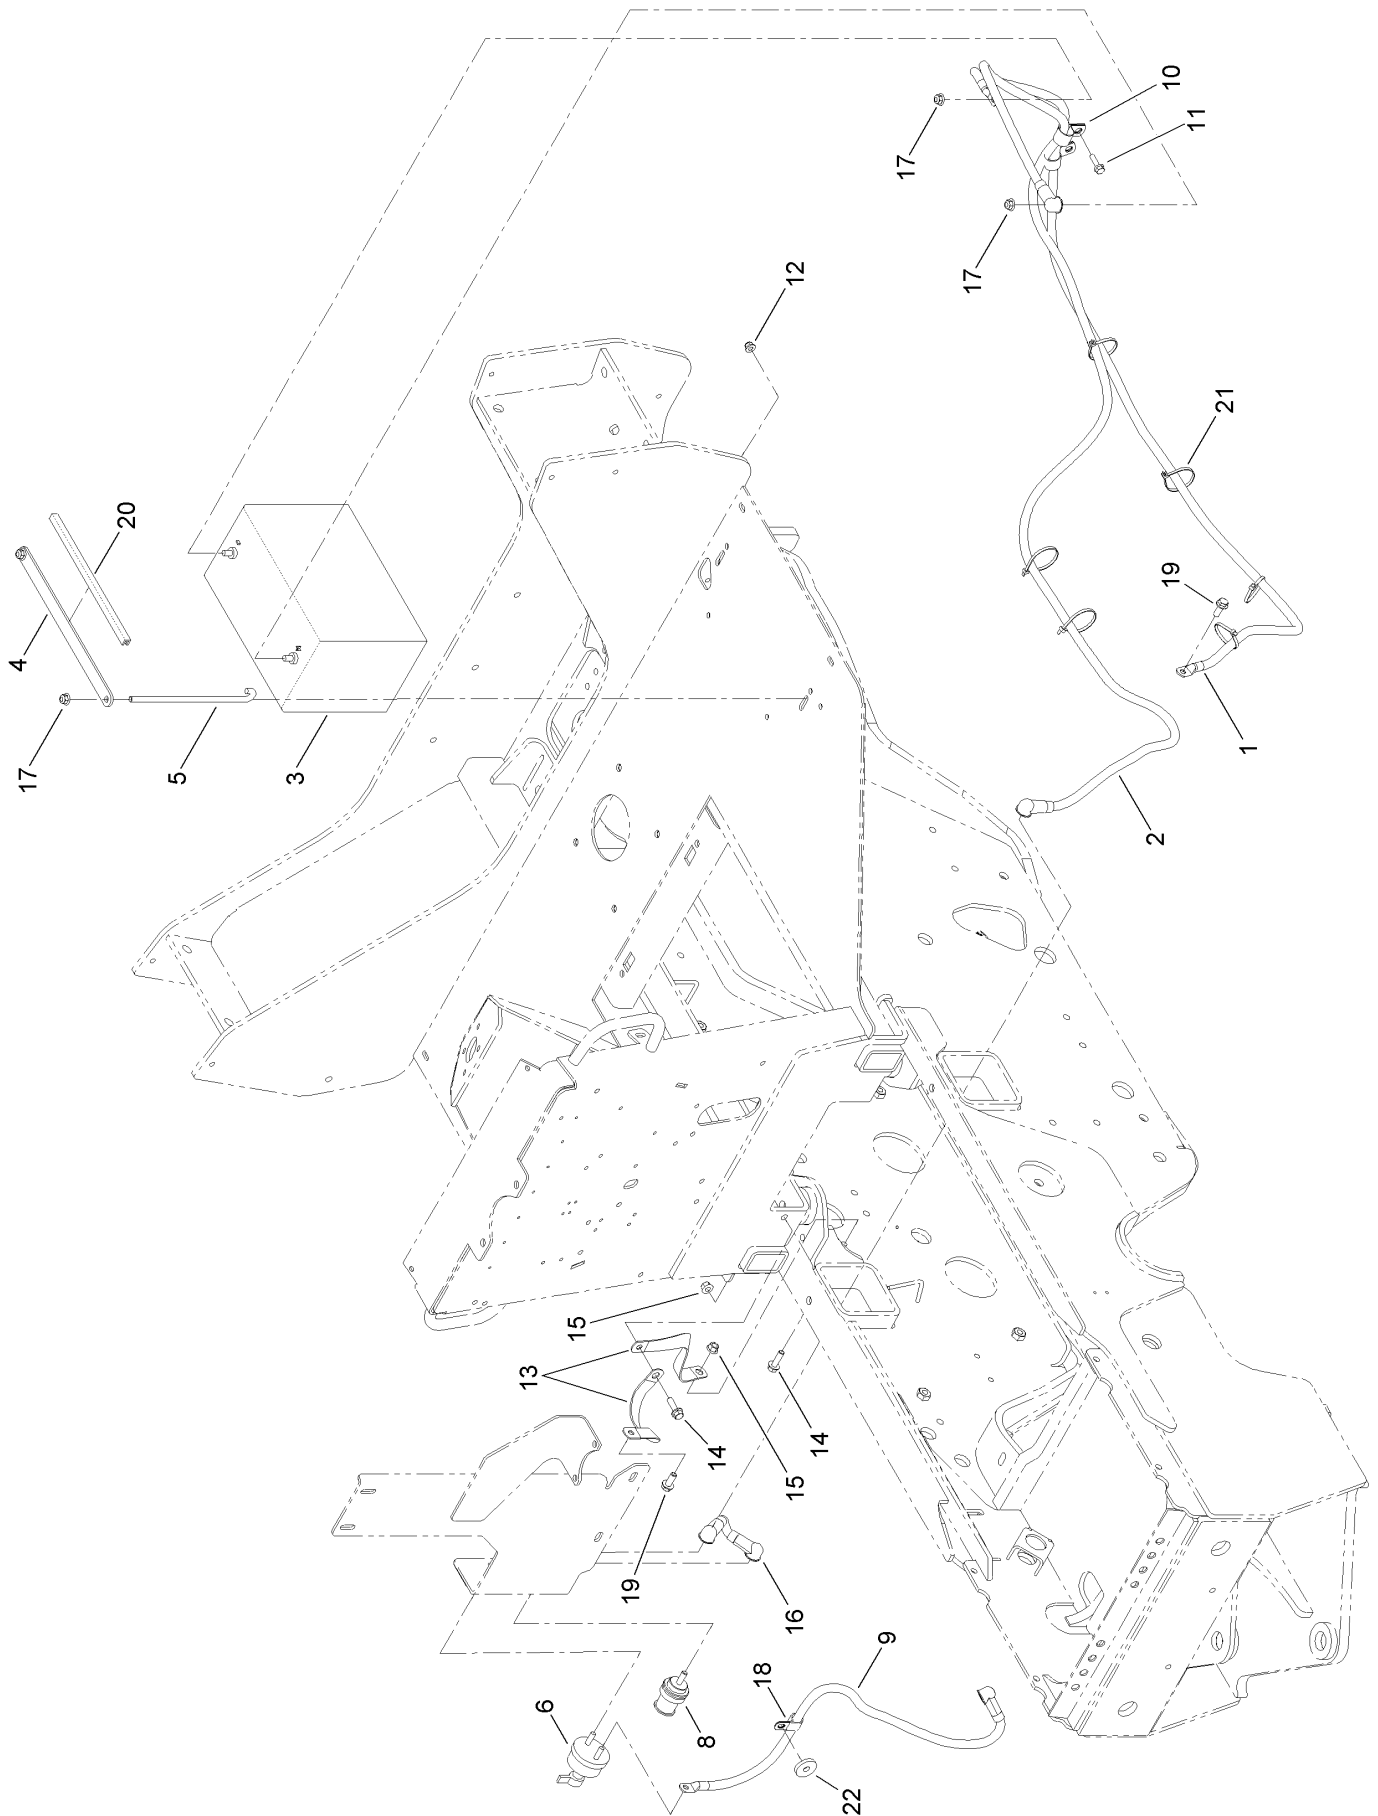


Battery and Cable Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-0154	1	Cable-Negative	13	AUD127018	2	Strap-Grounding
2	122-0157	1	Cable-Battery, Positive	14	119-4061	2	Screw-HHF
3		1	Battery (1000CCA, Wet) ●■	15	32128-36	2	Nut-HF
4	AU117616-03	1	Plate-Hold Down, Battery	16	AU108132	1	Cable-Positive
5	AUH436311	2	Bolt-Holddown, Battery	17	104-8301	4	Nut-HF, NI
6	AUR52278	1	Switch-Disconnect, Master	18	2412-4	1	Clamp-R
8	AU105186	1	Post-Battery, Remote	19	108-1531	2	Screw-HHF
9	AU114443	1	Cable-Battery, Positive	20	127-1293	1	Trim-Battery
10	2412-71	2	Clamp-R	21	3290-379	7	Tie-Cable
11	33104-030	2	Screw-HHF	22	1-543610	1	Washer-Clutch
12	104-3082	2	Nut-Lock, HHF				

● Obtain locally.

■ Not serviced separately


Parking Brake Assembly

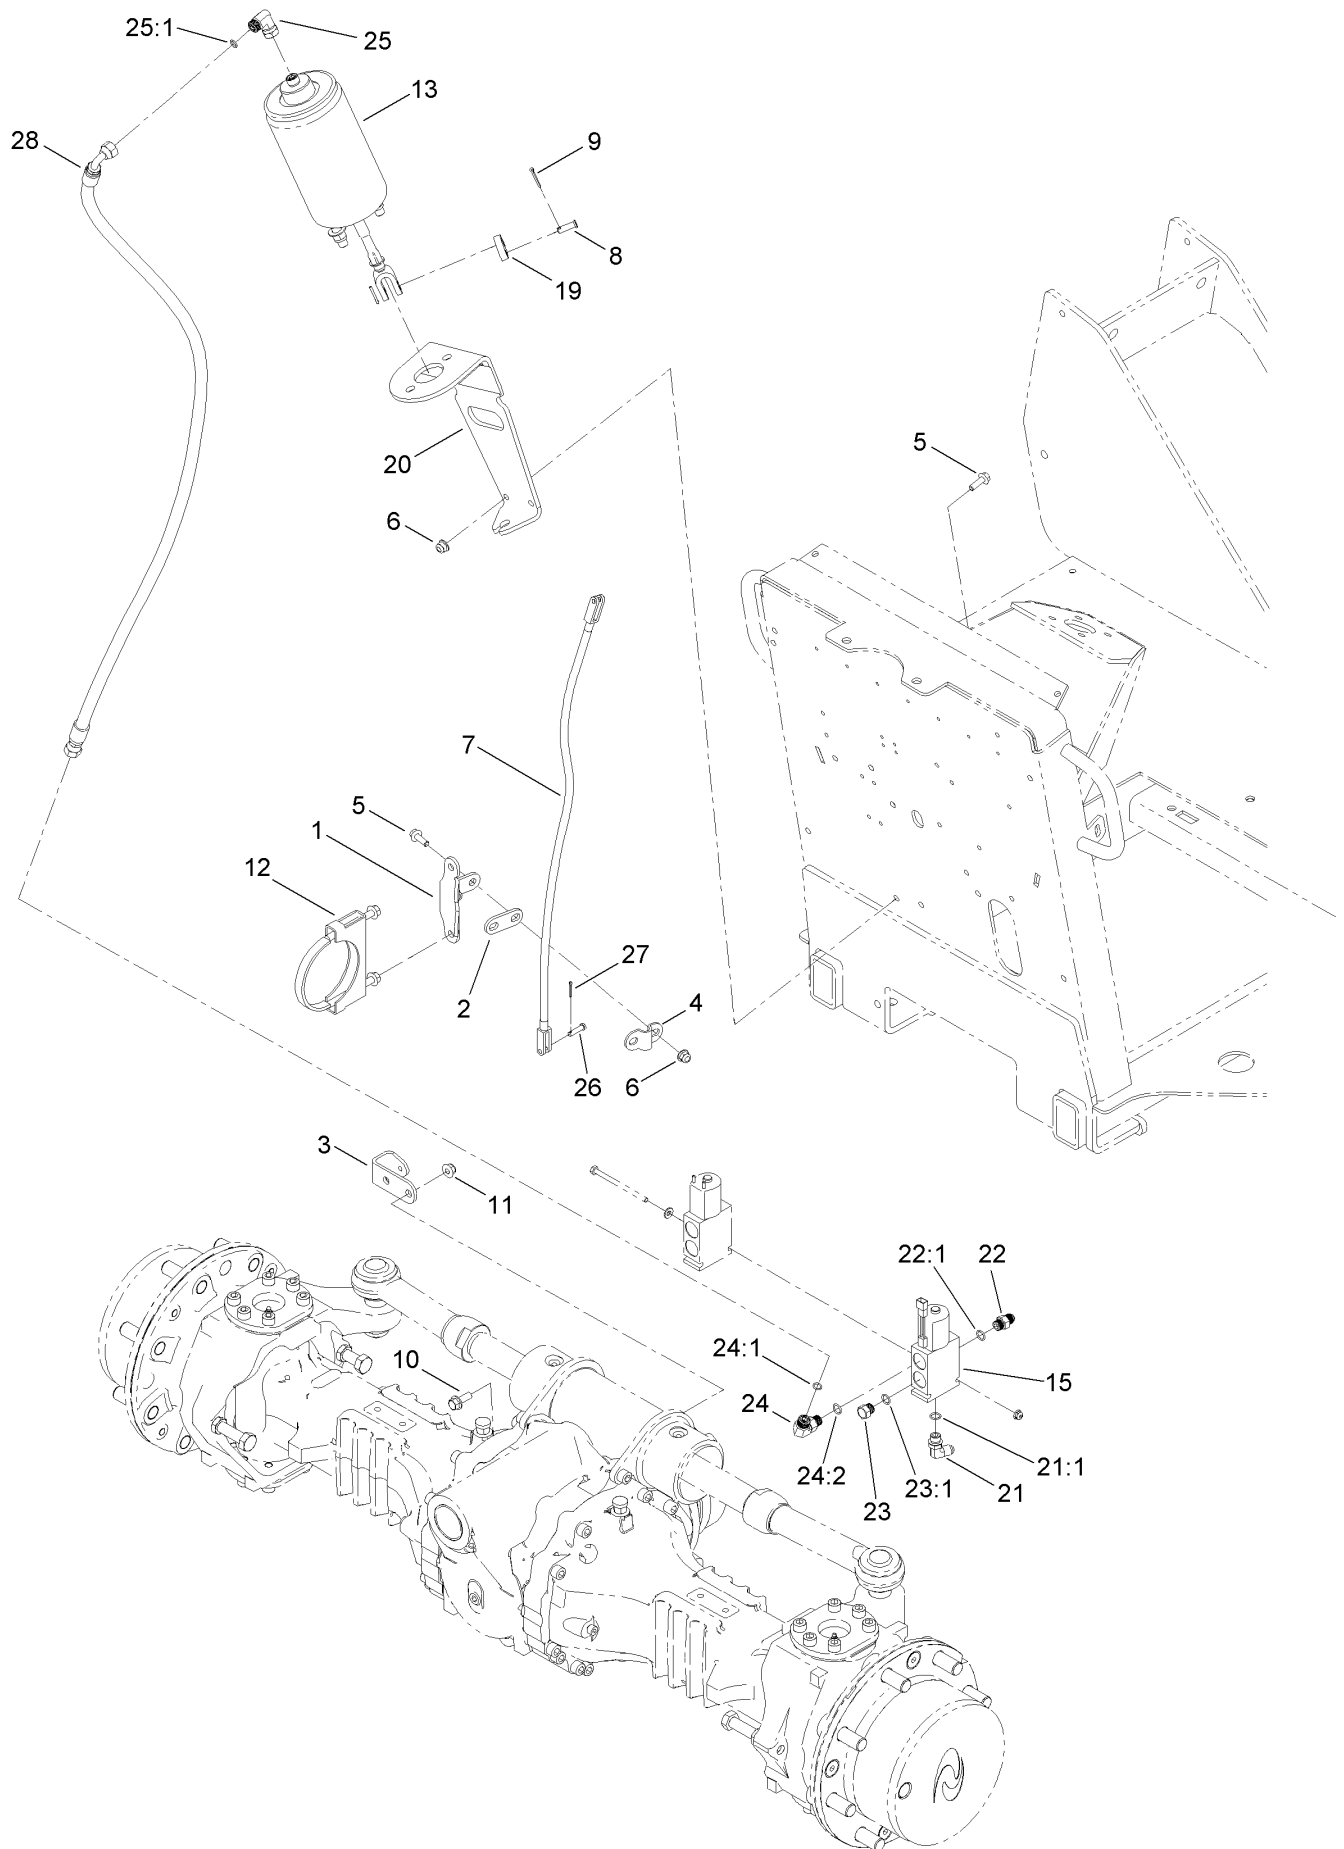

Parking Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU126600-03	1	Bracket-Cable, Parking Brake	20	AU127784-03	1	Mount-Brake, Parking
2	AUD129747	1	Spacer	21	103-1802	1	Fitting-Elbow, 90 DEG
3	AU126601-03	1	Plate-Mount, Parking Brake	21:1	237-42	1	O-Ring
4	AUD121608	1	Clamp-Cable	22	353-384	1	Fitting-Straight
5	AU100873	6	Screw-HH	22:1	237-42	1	O-Ring
6	AU100526	6	Nut-Torque, Prevailing	23	353-508	1	Plug-HH
7	AU87405607	1	Brake Cable ASM	23:1	237-42	1	O-Ring
8	AUH44206	1	Pin-Clevis	24	340-77	1	Fitting-Elbow, 90 DEG
9	AU432-816	1	Pin-Cotter	24:1	237-22	1	O-Ring
10	3234-42	2	Screw-HHF	24:2	237-42	1	O-Ring
11	104-8301	2	Nut-HF, NI	25	340-159	1	Elbow-90
12	AU100772-03	1	Clamp-Muffler	25:1	237-22	2	O-Ring
13	AU126603	1	HYD Release Cylinder ASM	26	99-7149	1	Pin-Clevis
15	127-1227	1	Solenoid Valve ASM	27	3272-6	1	Pin-Cotter
19	AU126904	1	Link-Cable, Parking Brake	28	125-6788	1	Hose ASM

Hydraulic Release Cylinder Assembly No. AU126603

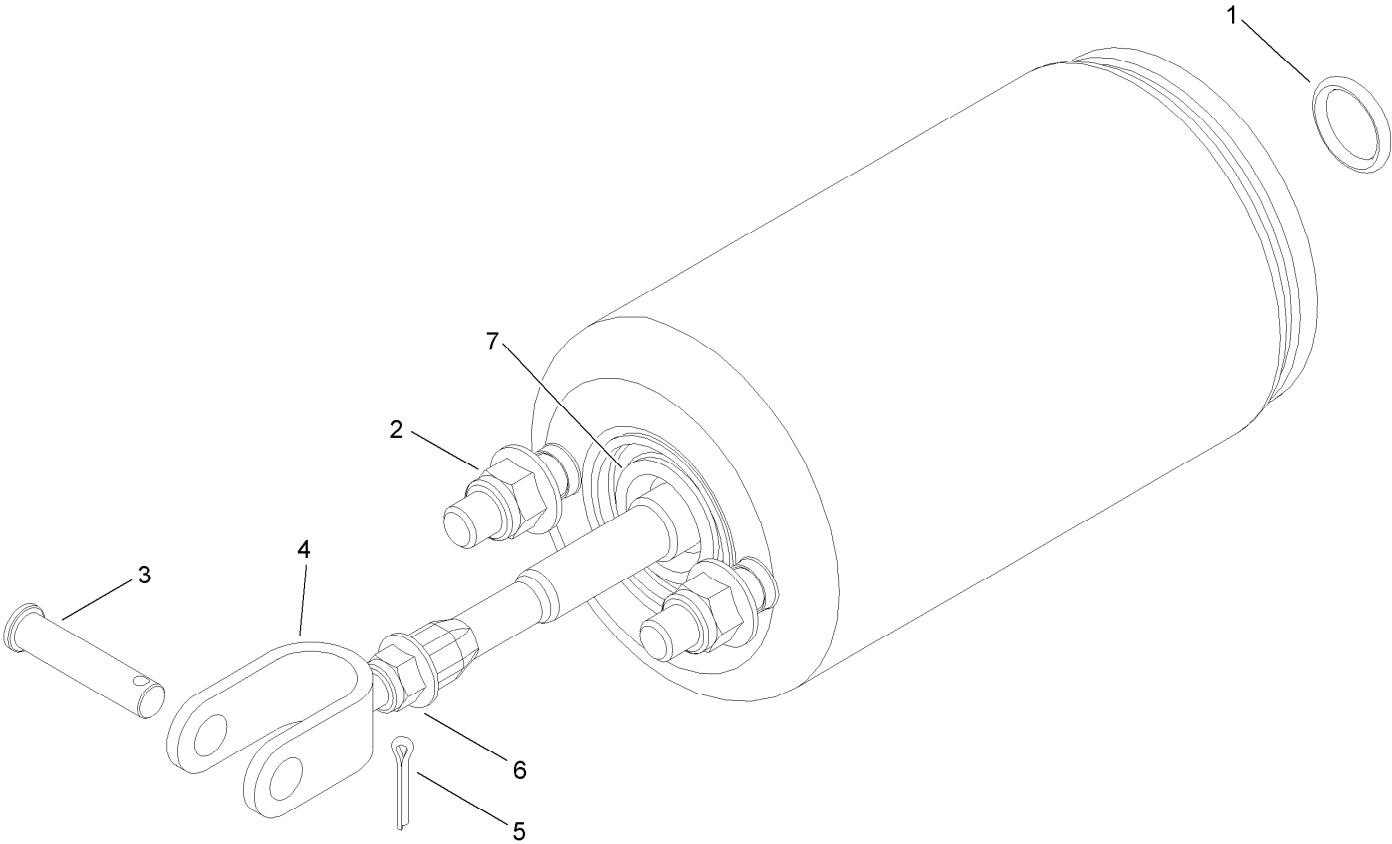


Hydraulic Release Cylinder Assembly No. AU126603 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	237-22	1	O-Ring
2	33016-00	2	Nut-Hex
3	127-6218	1	Pin-Clevis
4	127-6219	1	Clevis

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	3272-10	1	Pin-Cotter
6	33035-00	1	Nut-Hex
7	127-6217	1	Boot-Dust


Backfill Blade Assembly

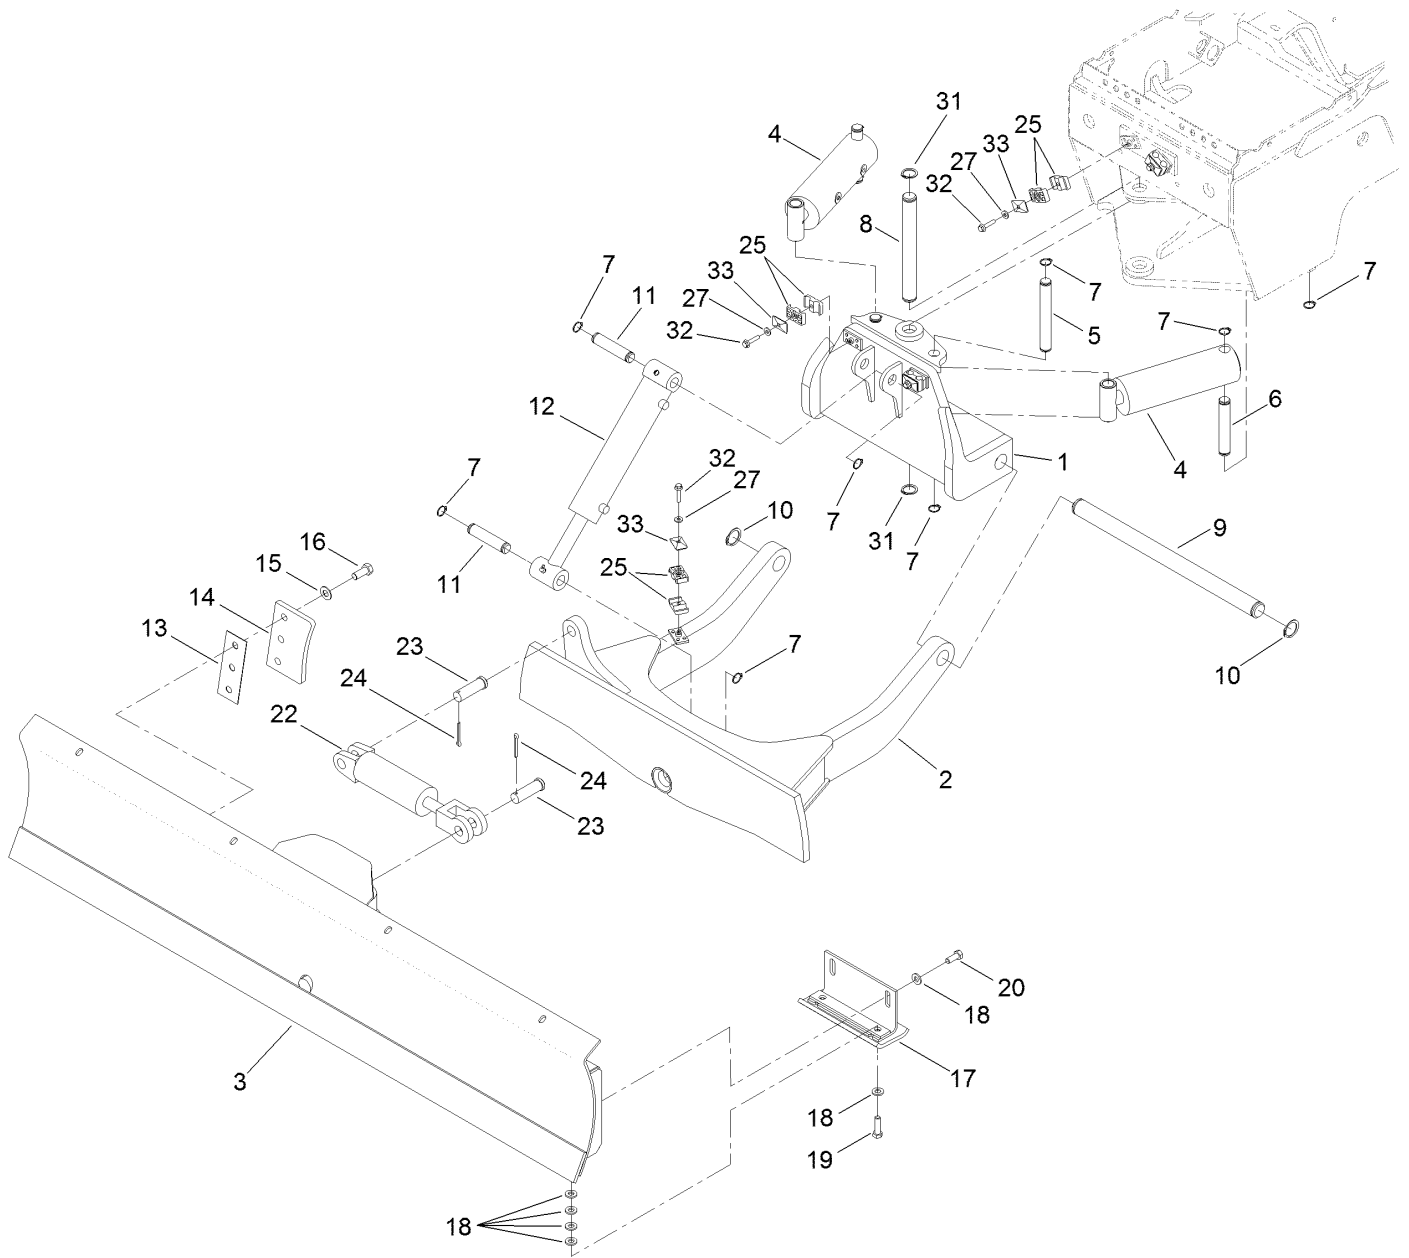

Backfill Blade Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU125298-03	1	Pivot-Backfill	15	3256-27	6	Washer-Flat
2	AU103984A1-03	1	Frame	16	327-4	6	Screw-HH
3	AUH673758-03	1	Blade	17	AUH674649-03	2	Shoe-Skid
4	AU103989A1	2	HYD Cylinder ASM	18	AU496-21053	24	Washer-Flat
5	AU125503	2	Pin-Link	19	325-7	4	Screw-HH
6	AU125502	2	Pin-Link	20	325-5	4	Screw-HH
7	32151-36	12	Ring-Retaining	22	AU125681	1	HYD Cylinder ASM
8	AU125547	1	Pin-Pivot	23	AU439-11648	2	Pin-Headed
9	AU103993A1	1	Pin-Frame	24	3272-33	2	Pin-Cotter
10	AUD25279	2	Ring	25	56-7971	10	Clamp-Tube
11	AUH437684	2	Pin-Cylinder	27	105-5769	5	Washer
12	AUH674312	1	HYD Cylinder ASM	31	AU103-16125	2	Ring-Retaining
13	AUH438278-03	8	Shim-Retainer	32	115-1794	5	Screw-HHF
14	AUH438273-03	2	Retainer-Blade	33	69-9760	5	Plate-Cover

Hydraulic Cylinder Assembly No. AU103989A1

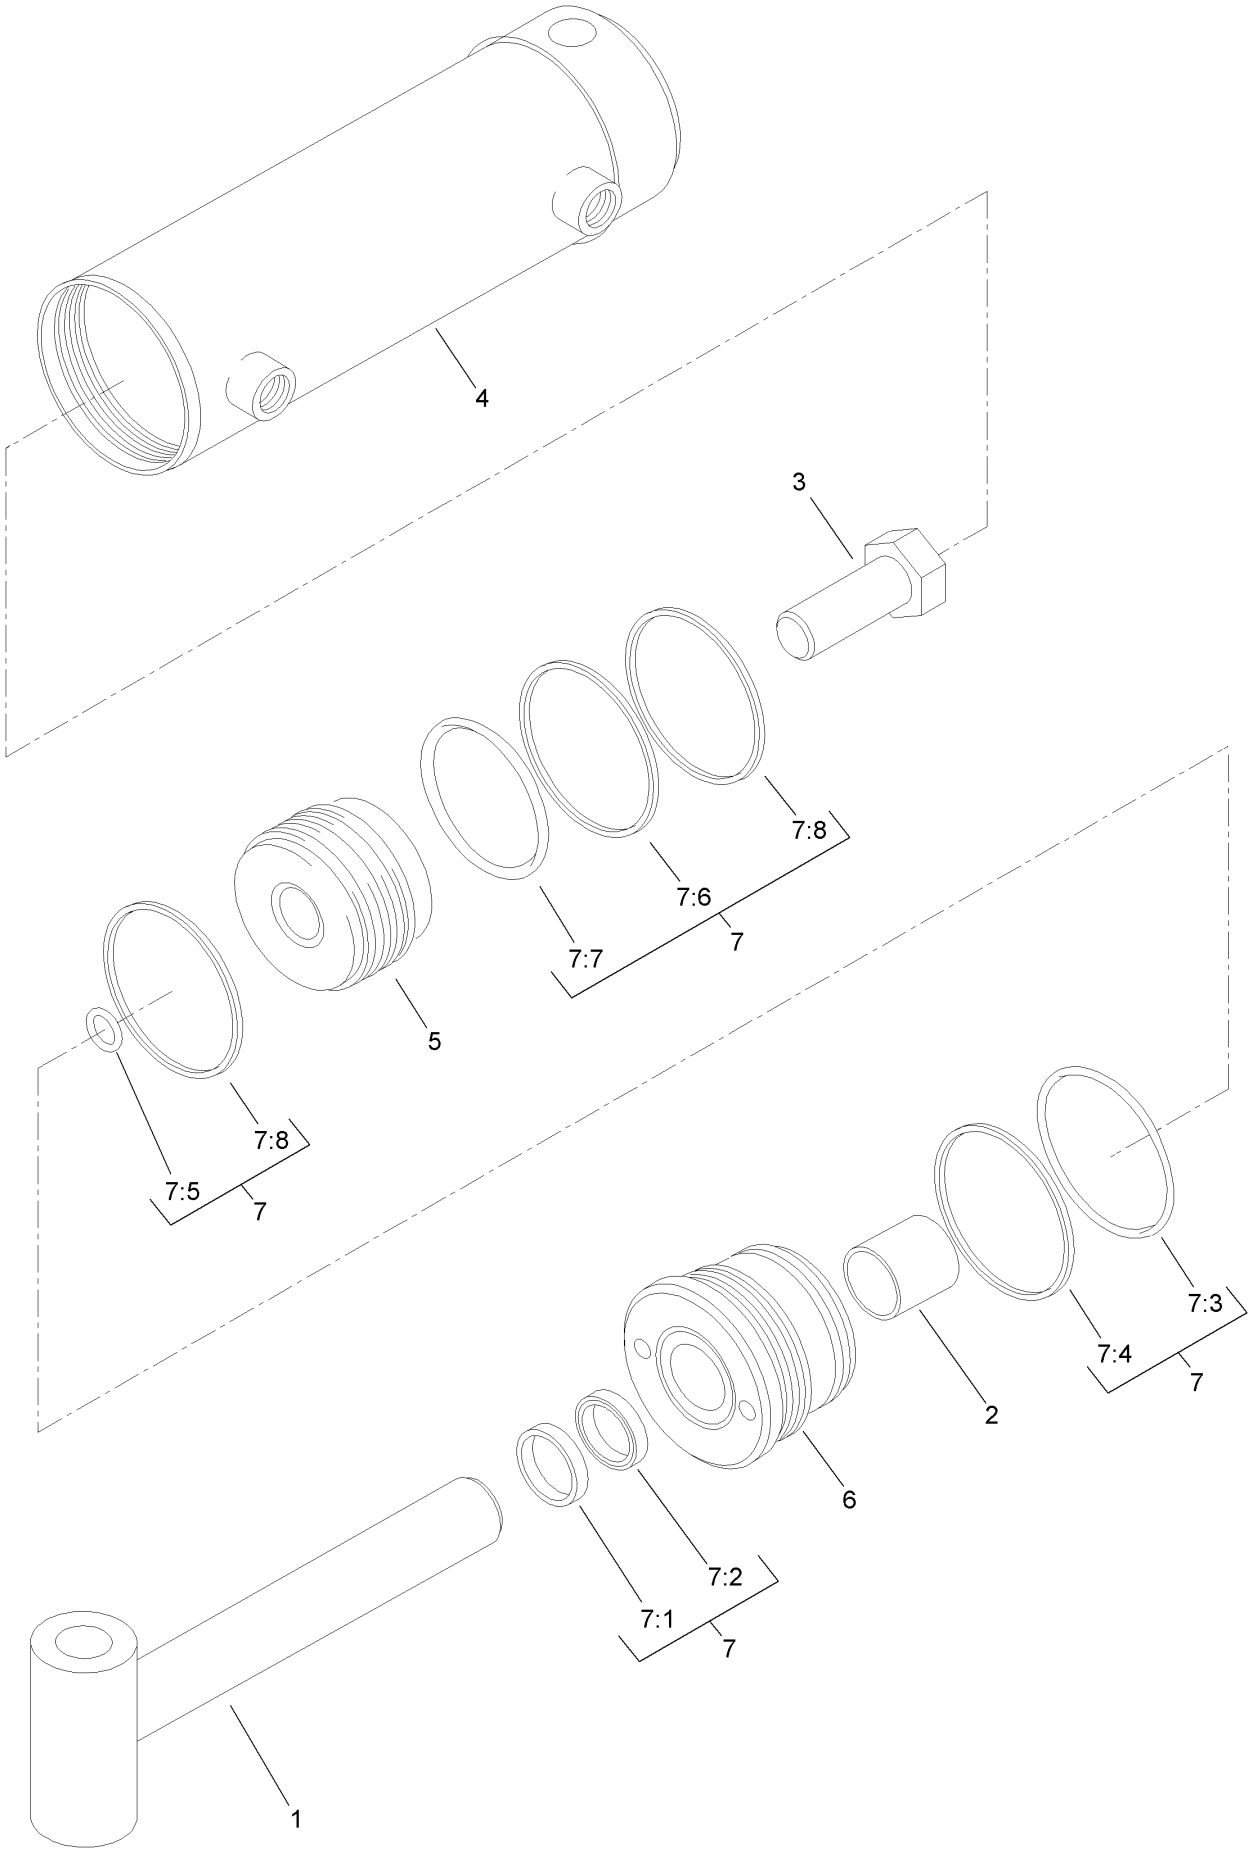


Hydraulic Cylinder Assembly No. AU103989A1 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU117269A1	1	Rod
2	AU117271A1	1	Bushing
3	3211-42	1	Screw-HH
4	AU117268A1	1	Case-A
5	AU117267A1	1	Piston
6	AU117270A1	1	Head
7	AU117272A1	1	Seal Kit
7:1		1	Wiper-Piston Rod ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7:2		1	Seal-U Cup ●
7:3		1	O-Ring, Gland ●
7:4		1	Ring-Back Up ●
7:5		1	O-Ring, Piston Rod ●
7:6		1	Seal-Piston ●
7:7		1	O-Ring, Piston ●
7:8		2	Ring-Wear ●

● Not serviced separately

Hydraulic Cylinder Assembly No. AUH674312

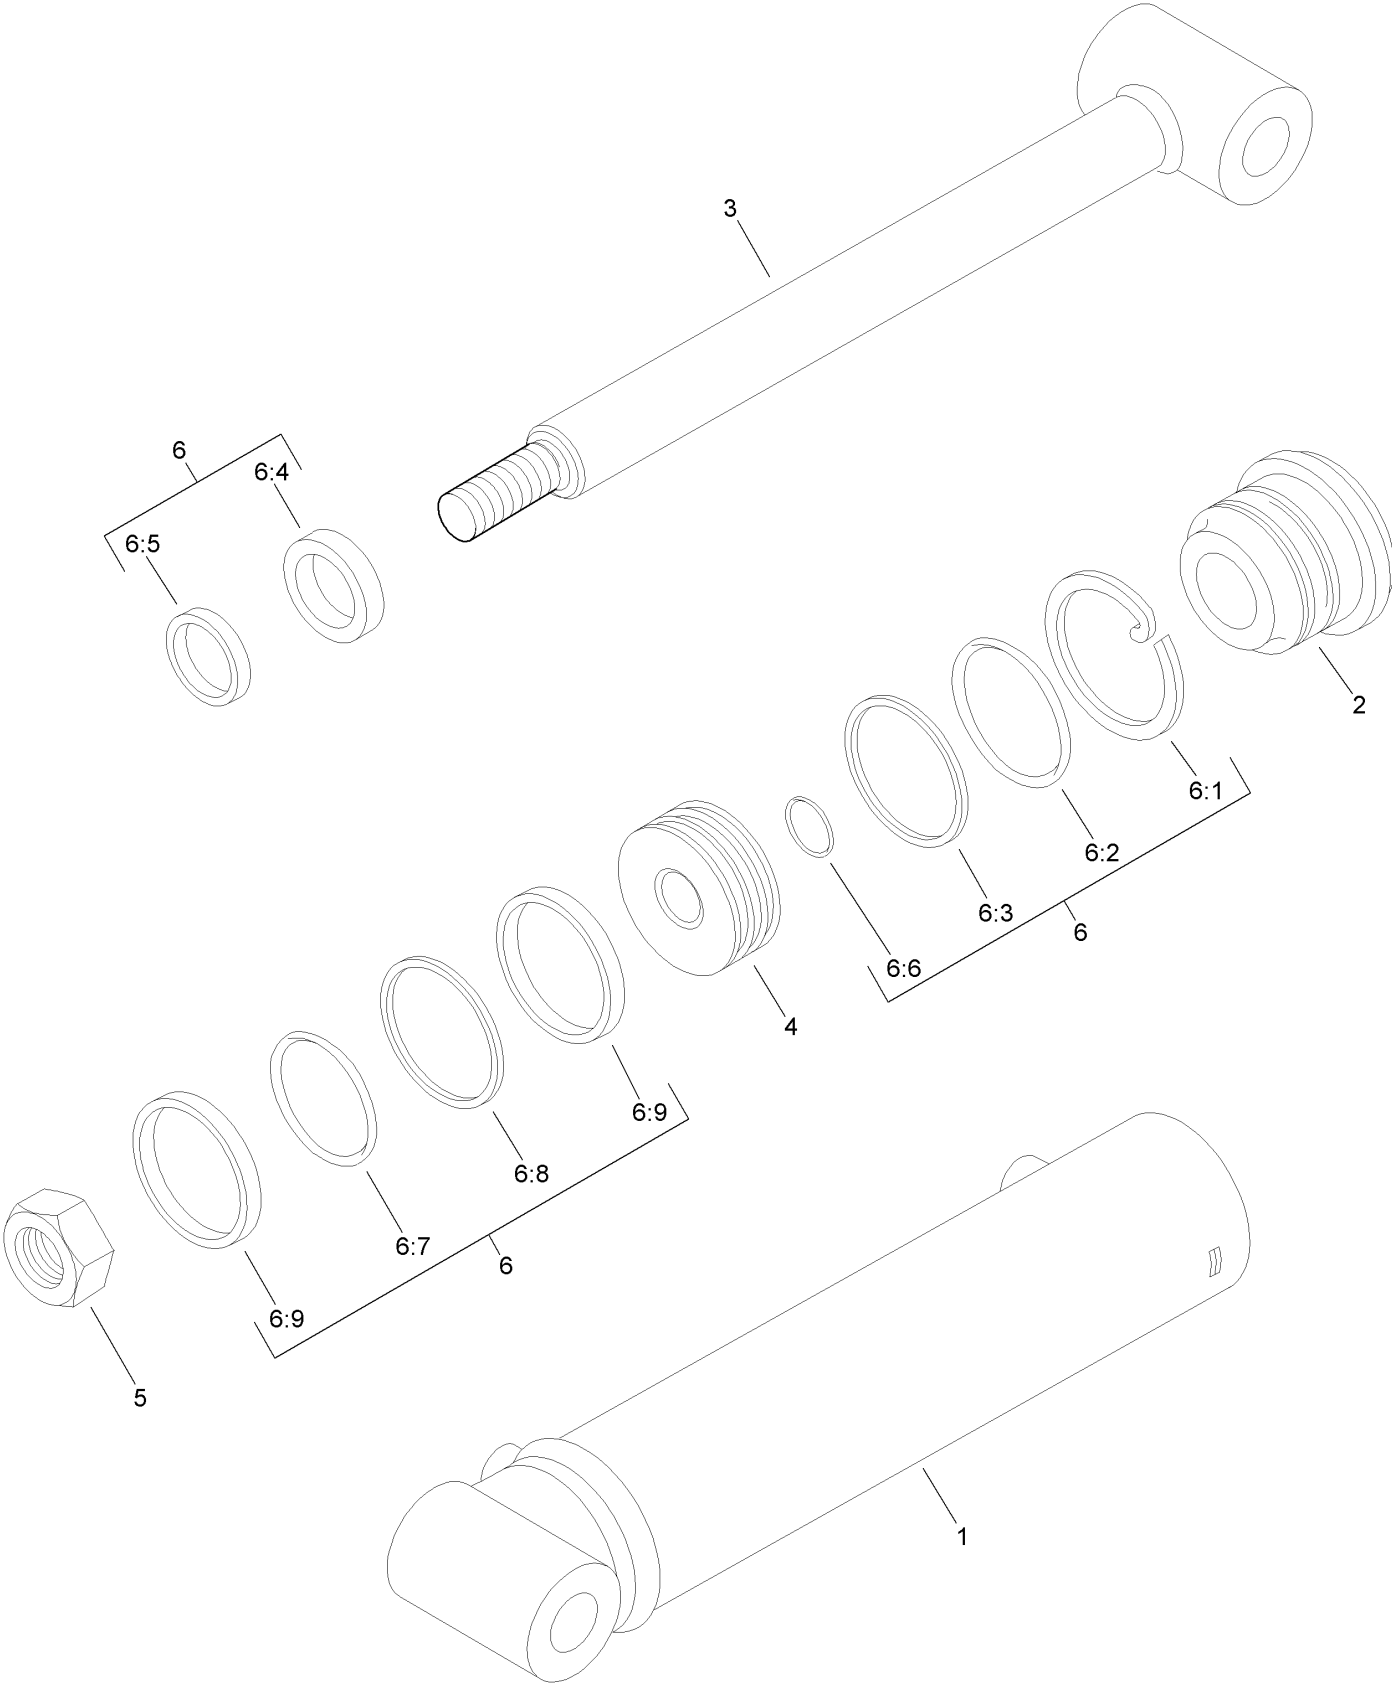


Hydraulic Cylinder Assembly No. AUH674312 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUH674937	1	Case ASM
2	AU85260C1	1	Head
3	AUH674938	1	Rod-Piston
4	AUH439025	1	Piston
5	AU232-46314	1	Nut-Lock
6	127-6196	1	Seal Kit
6:1		1	Wire-Locking, Gland ●
6:2		1	O-Ring, Gland ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6:3		1	Ring-Back Up ●
6:4		1	Wiper-Piston Rod ●
6:5		1	Seal-U Cup ●
6:6		1	O-Ring, Piston Rod ●
6:7		1	O-Ring, Piston ●
6:8		1	Ring-Back Up ●
6:9		2	Ring-Wear, Piston ●

● Not serviced separately


Hydraulic Cylinder Assembly No. AU125681

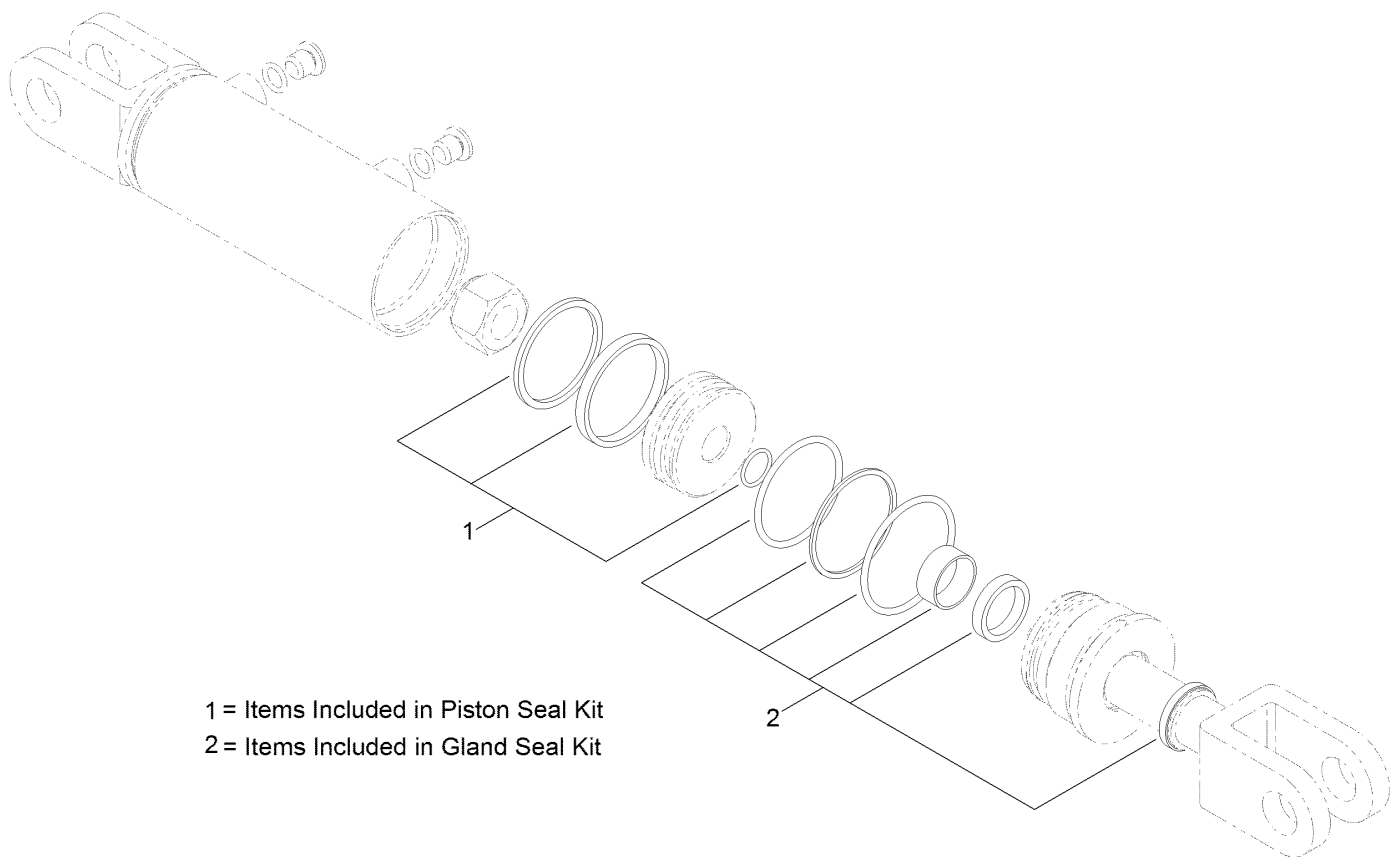

Hydraulic Cylinder Assembly No. AU125681 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-0167	1	Piston Seal Kit
2	131-0168	1	Gland Seal Kit

Backfill Blade Hose Assembly

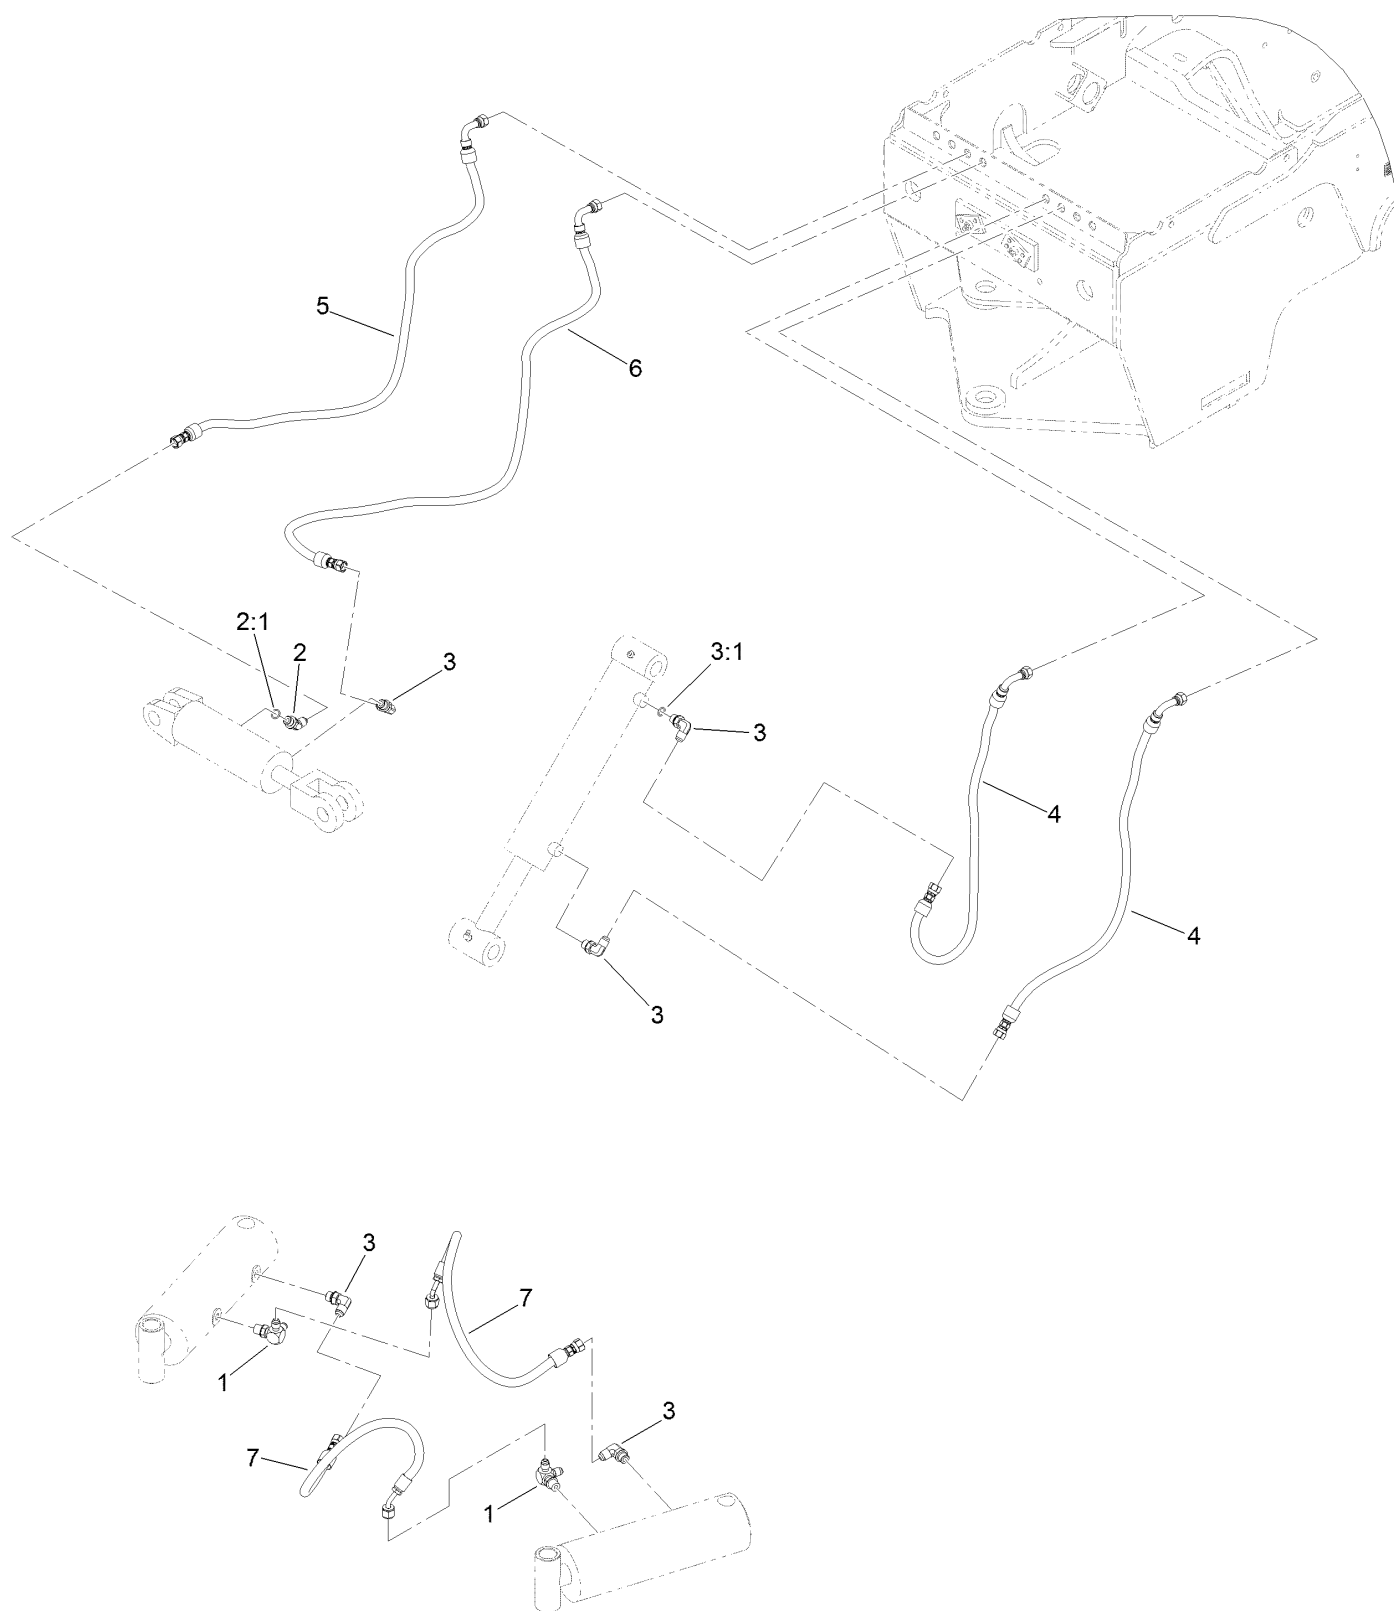

Backfill Blade Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUL104616	2	Fitting	4	130-8863	2	Hose ASM-HYD HP
2	353-212	1	Fitting-Elbow, 45 DEG	5	130-8862	1	Hose ASM-HYD HP
2:1	237-42	1	O-Ring	6	130-8861	1	Hose ASM-HYD HP
3	353-374	5	Fitting-Elbow, 90 DEG	7	125-6793	2	Hose ASM
3:1	237-79	1	O-Ring				

Attachments and Accessories

For 25430A RT600 Traction Unit

Product Name	Model/Part
Standard Pulling Blade, VST-24E 18/24 Plow Depth	131-6284
Standard Pulling Blade, VST-24F 18/24 Plow Depth.....	131-6285
Standard Pulling Blade, 24/30 Plow Depth	131-6286
Standard Pulling Blade, 30/36 Plow Depth	131-6287
Standard Pulling Blade, 36/42 Plow Depth	131-6288
Standard Pulling Blade, 42/48 Plow Depth	131-6289
Plow Blade, 18/24 Plow Depth.....	132-4950
Plow Blade, .75 W, 18/24 G-C, 10.0 R	132-4951
Plow Blade, .75 W, 24/30 G-C, 8.0 R	132-4952
Plow Blade, .75 W, 24/30 G-C, 10.0 R	132-4953
Plow Blade, .75 W, 30/36 G-C, 8.0 R	132-4954
Plow Blade, .75 W, 30/36 G-C, 10.0 R	132-4955
Plow Blade, 1.00 W, 18/24 G-C, 8.0 R	132-4956
Plow Blade, 1.00 W, 24/30 G-C, 8.0 R	132-4957
Plow Blade, 1.00 W, 24/30 G-C, 8.0 R	132-4958
Plow Blade, 1.00 W, 24/30 G-C, 10.0 R	132-4959
Plow Blade, 1.00 W, 30/36 G-C, 8.0 R	132-4960
Plow Blade, 1.00 W, 30/36 G-C, 10.0 R	132-4961
Plow Blade, 1.50 W, 18/24 G-C, 8.0 R	132-4962
Plow Blade, 1.50 W, 18/24 G-C, 8.0 R	132-4963
Plow Blade, 1.50 W, 18/24 G-C, 10.0 R	132-4964
Plow Blade, 1.50 W, 18/24 G-C, 13.0 R	132-4965
Plow Blade, 1.50 W, 18/24 G-C, 13.0 R	132-4966
Plow Blade, 1.50 W, 24/30 G-C, 10.0 R	132-4967
Plow Blade, 1.50 W, 24/30 G-C, 13.0 R	132-4968
Plow Blade, 1.50 W, 30/36 G-C, 8.0 R	132-4969
Plow Blade, 1.50 W, 30/36 G-C, 10.0 R	132-4970
Plow Blade, 1.50 W, 30/36 G-C, 13.0 R	132-4971
Plow Blade, 1.50 W, 36/42 G-C, 8.0 R	132-4972
Plow Blade, 1.50 W, 36/42 G-C, 10.0 R	132-4973
Plow Blade, 1.50 W, 36/42 G-C, 13.0 R	132-4974
Plow Blade, 2.00 W, 18/24 G-C, 10.0 R	132-4975
Plow Blade, 2.00 W, 18/24 G-C, 13.0 R	132-4976
Plow Blade, 2.00 W, 24/30 G-C, 10.0 R	132-4977
Plow Blade, 2.00 W, 24/30 G-C, 13.0 R	132-4978
Plow Blade, 2.00 W, 30/36 G-C, 10.0 R	132-4979
Plow Blade, 2.00 W, 30/36 G-C, 13.0 R	132-4980
Plow Blade, 2.00 W, 36/42 G-C, 10.0 R	132-4981
Plow Blade, 2.00 W, 36/42 G-C, 13.0 R	132-4982
Plow Blade, 2.50 W, 24/30 G-C, 13.0 R	132-4983
Plow Blade, 2.50 W, 24/30 G-C, 20.0 R	132-4984
Plow Blade, 2.50 W, 30/36 G-C, 13.0 R	132-4985
Plow Blade, 2.50 W, 30/36 G-C, 20.0 R	132-4986
Plow Blade, 2.50 W, 36/42 G-C, 13.0 R	132-4987
Plow Blade, 2.50 W, 36/42 G-C, 20.0 R	132-4988
Plow Blade, 3.00 W, 30/36 G-C, 13.0 R	132-4989

Attachments and Accessories (continued)

Plow Blade, 3.00 W, 30/36 G-C, 20.0 R	132-4990
Plow Blade, 3.00 W, 36/42 G-C, 13.0 R	132-4991
Plow Blade, 3.00 W, 36/42 G-C, 20.0 R	132-4992
Additional Depth Setting	132-4993
Tape Tube	132-4994
Blade, MAXI-TRAC 18/24 Depth, E	132-4995
Blade, MAXI-TRAC 18/24 Depth, F	132-4996
Blade, MAXI-TRAC 24/30 Depth, F	132-4997
Blade, MAXI-TRAC 30/36 Depth, F	132-4998
Blade, MAXI-TRAC 36/42 Depth, F	132-4999
Blade, MAXI-TRAC 42/48 Depth, H	132-5000
Bullet, 2.00	132-5001
Bullet, 3.00	132-5002
Bullet, 4.00	132-5003
Bullet, 5.00	132-5004
Bullet, 6.00	132-5005
Plow Blade, .75 CW, 18/24 GC, 8 RAD	132-5006
Plow Blade, .75 CW, 18/24 GC, 10 RAD	132-5007
Plow Blade, .75 CW, 24/30 GC, 8 RAD	132-5008
Plow Blade, .75 CW, 24/30 GC, 10 RAD	132-5009
Plow Blade, 1.00 CW, 18/24 GC, 8 RAD	132-5010
Plow Blade, 1.00 CW, 18/24 GC, 10 RAD	132-5011
Plow Blade, 1.00 CW, 24/30 GC, 8 RAD	132-5012
Plow Blade, 1.00 CW, 24/30 GC, 10 RAD	132-5013
Plow Blade, 1.00 CW, 30/36 GC, 8 RAD	132-5014
Plow Blade, 1.00 CW, 30/36 GC, 10 RAD	132-5015
Plow Blade, 1.00 CW, 30/36 GC, 13 RAD	132-5016
Plow Blade, 1.50 CW, 18/24 GC, 8 RAD	132-5017
Plow Blade, 1.50 CW, 18/24 GC, 10 RAD	132-5018
Plow Blade, 1.50 CW, 18/24 GC, 13 RAD	132-5019
Plow Blade, 1.50 CW, 24/30 GC, 8 RAD	132-5020
Plow Blade, 1.50 CW, 24/30 GC, 10 RAD	132-5021
Plow Blade, 1.50 CW, 24/30 GC, 13 RAD	132-5022
Plow Blade, 1.50 CW, 30/36 GC, 8 RAD	132-5023
Plow Blade, 1.50 CW, 30/36 GC, 10 RAD	132-5024
Plow Blade, 1.50 CW, 30/36 GC, 13 RAD	132-5025
Plow Blade, 1.50 CW, 36/42 GC, 8 RAD	132-5026
Plow Blade, 1.50 CW, 36/42 GC, 10 RAD	132-5027
Plow Blade, 1.50 CW, 36/42 GC, 13 RAD	132-5028
Plow Blade, 2.00 CW, 18/24 GC, 10 RAD	132-5029
Plow Blade, 2.00 CW, 18/24 GC, 13 RAD	132-5030
Plow Blade, 2.00 CW, 24/30 GC, 10 RAD	132-5031
Plow Blade, 2.00 CW, 24/30 GC, 13 RAD	132-5032
Plow Blade, 2.00 CW, 30/36 GC, 10 RAD	132-5033
Plow Blade, 2.00 CW, 30/36 GC, 13 RAD	132-5034
Plow Blade, 2.00 CW, 36/42 GC, 10 RAD	132-5035
Plow Blade, 2.00 CW, 36/42 GC, 13 RAD	132-5036
Plow Blade, 2.50 CW, 24/30 GC, 13 RAD	132-5037
Plow Blade, 2.50 CW, 24/30 GC, 20 RAD	132-5038

Attachments and Accessories (continued)

Plow Blade, 2.50 CW, 30/36 GC, 13 RAD	132-5039
Plow Blade, 2.50 CW, 30/36 GC, 20 RAD	132-5040
Plow Blade, 2.50 CW, 36/42 GC, 13 RAD	132-5041
Plow Blade, 2.50 CW, 36/42 GC, 20 RAD	132-5042
Plow Blade, 3.00 CW, 30/36 GC, 13 RAD	132-5043
Plow Blade, 3.00 CW, 30/36 GC, 20 RAD	132-5044
Plow Blade, 3.00 CW, 36/42 GC, 13 RAD	132-5045
Plow Blade, 3.00 CW, 36/42 GC, 20 RAD	132-5046
Direct Drive Trencher.....	25200
Direct Drive Trencher.....	25200E
Combo for Direct Drive Trencher and P85 Plow	25201
Combo for Direct Drive Trencher and P85 Plow	25201E
48in Direct Drive Boom.....	25202
48in Direct Drive Boom.....	25202E
60in Direct Drive Boom.....	25203
60in Direct Drive Boom.....	25203E
Sliding Offset Kit, Centerline Trencher.....	25204
Sliding Offset Kit, Centerline Trencher.....	25204E
P85 Vibratory Plow	25401
P85 Vibratory Plow	25401E
Horn Kit, RT600 or RT1200 Trencher	25409
Horn Kit, RT600 or RT1200 Trencher	25409E
Beacon Kit, RT600 or RT1200 Trencher	25415
Beacon Kit, RT600 or RT1200 Trencher	25415E
Back-Up Alarm Kit	25428
Back-Up Alarm Kit	25428E
Heavy Duty Center Line Trencher.....	25431
Heavy-Duty Centerline Trencher	25431E
Heavy Duty Backhoe 125	25432
Heavy Duty Backhoe 125	25432E
Backhoe Drive Release Kit (Tow Valve Kit)	25433
Backhoe Drive Release Kit (Tow Valve Kit)	25433E
48in Heavy Duty Crumber.....	25435
48in Heavy Duty Crumber.....	25435E
60in Heavy Duty Crumber.....	25436
60in Heavy Duty Crumber.....	25436E
48in Heavy Duty Rock Boom	25437
48in Heavy Duty Rock Boom with Restraint Bar	25437E
60in Heavy Duty Rock Boom With Rest Bar.....	25438
60in Heavy Duty Rock Boom with Restraint Bar	25438E
Counterweight Kit	25439
Counterweight Kit	25439E
Auxiliary Valve Kit	25445
Auxiliary Valve Kit	25445E
Rear Steering Indicator Kit.....	25520
Rear Steering Indicator Kit.....	25520E
6in x 48in 2 Pitch Cup Chain, Utility Trencher	TR26506235
6in x 60in 2 Pitch Cup Chain, Utility Trencher.....	TR26506240
6in x 48in Terminator and Cup Combo Chain, Utility Trencher.....	TR26506C35

Attachments and Accessories (continued)

6in x 60in Terminator and Cup Combo Chain, Utility Trencher.....	TR26506C40
6in x 48in H-Plate, Rock and Frost Chain, Utility Trencher	TR26506H35
6in x 60in H-Plate, Rock and Frost Chain, Utility Trencher	TR26506H40
6in x 48in Mixed Rock and Frost Chain, Utility Trencher.....	TR26506M35
6in x 60in Mixed Rock and Frost Chain, Utility Trencher.....	TR26506M40
6in x 48in Rock and Frost Chain, Utility Trencher	TR26506R35
6in x 60in Rock and Frost Chain, Utility Trencher	TR26506R40
6in x 48in Solid Weld Terminator Chain, Utility Trencher	TR26506S35
6in x 60in Solid Weld Terminator Chain, Utility Trencher	TR26506S40
6in x 48in Bolt-On Terminator Chain, Utility Trencher	TR26506T35
6in x 60in Bolt-On Terminator Chain, Utility Trencher	TR26506T40
8in x 48in 2 Pitch Cup Chain, Utility Trencher.....	TR26508235
8in x 60in 2 Pitch Cup Chain, Utility Trencher.....	TR26508240
8in x 48in Terminator and Cup Combo Chain, Utility Trencher.....	TR26508C35
8in x 60in Terminator and Cup Combo Chain, Utility Trencher.....	TR26508C40
8in x 48in H-Plate, Rock and Frost Chain, Utility Trencher	TR26508H35
8in x 60in H-Plate, Rock and Frost Chain, Utility Trencher	TR26508H40
8in x 48in Mixed Rock and Frost Chain, Utility Trencher.....	TR26508M35
8in x 60in Mixed Rock and Frost Chain, Utility Trencher.....	TR26508M40
8in x 48in Rock and Frost Chain, Utility Trencher	TR26508R35
8in x 60in Rock and Frost Chain, Utility Trencher	TR26508R40
8in x 48in Solid Weld Terminator Chain, Utility Trencher	TR26508S35
8in x 60in Solid Weld Terminator Chain, Utility Trencher	TR26508S40
8in x 48in Bolt-On Terminator Chain, Utility Trencher	TR26508T35
8in x 60in Bolt-On Terminator Chain, Utility Trencher	TR26508T40

For 25430C RT600 Traction Unit

Product Name	Model/Part
Standard Pulling Blade, VST-24E 18/24 Plow Depth	131-6284
Standard Pulling Blade, VST-24F 18/24 Plow Depth.....	131-6285
Standard Pulling Blade, 24/30 Plow Depth	131-6286
Standard Pulling Blade, 30/36 Plow Depth	131-6287
Standard Pulling Blade, 36/42 Plow Depth	131-6288
Standard Pulling Blade, 42/48 Plow Depth	131-6289
Plow Blade, 18/24 Plow Depth.....	132-4950
Plow Blade, .75 W, 18/24 G-C, 10.0 R	132-4951
Plow Blade, .75 W, 24/30 G-C, 8.0 R	132-4952
Plow Blade, .75 W, 24/30 G-C, 10.0 R	132-4953
Plow Blade, .75 W, 30/36 G-C, 8.0 R	132-4954
Plow Blade, .75 W, 30/36 G-C, 10.0 R	132-4955
Plow Blade, 1.00 W, 18/24 G-C, 8.0 R	132-4956
Plow Blade, 1.00 W, 24/30 G-C, 8.0 R	132-4957
Plow Blade, 1.00 W, 24/30 G-C, 8.0 R	132-4958
Plow Blade, 1.00 W, 24/30 G-C, 10.0 R	132-4959
Plow Blade, 1.00 W, 30/36 G-C, 8.0 R	132-4960
Plow Blade, 1.00 W, 30/36 G-C, 10.0 R	132-4961
Plow Blade, 1.50 W, 18/24 G-C, 8.0 R	132-4962
Plow Blade, 1.50 W, 18/24 G-C, 8.0 R	132-4963

Attachments and Accessories (continued)

Plow Blade, 1.50 W, 18/24 G-C, 10.0 R	132-4964
Plow Blade, 1.50 W, 18/24 G-C, 13.0 R	132-4965
Plow Blade, 1.50 W, 18/24 G-C, 13.0 R	132-4966
Plow Blade, 1.50 W, 24/30 G-C, 10.0 R	132-4967
Plow Blade, 1.50 W, 24/30 G-C, 13.0 R	132-4968
Plow Blade, 1.50 W, 30/36 G-C, 8.0 R	132-4969
Plow Blade, 1.50 W, 30/36 G-C, 10.0 R	132-4970
Plow Blade, 1.50 W, 30/36 G-C, 13.0 R	132-4971
Plow Blade, 1.50 W, 36/42 G-C, 8.0 R	132-4972
Plow Blade, 1.50 W, 36/42 G-C, 10.0 R	132-4973
Plow Blade, 1.50 W, 36/42 G-C, 13.0 R	132-4974
Plow Blade, 2.00 W, 18/24 G-C, 10.0 R	132-4975
Plow Blade, 2.00 W, 18/24 G-C, 13.0 R	132-4976
Plow Blade, 2.00 W, 24/30 G-C, 10.0 R	132-4977
Plow Blade, 2.00 W, 24/30 G-C, 13.0 R	132-4978
Plow Blade, 2.00 W, 30/36 G-C, 10.0 R	132-4979
Plow Blade, 2.00 W, 30/36 G-C, 13.0 R	132-4980
Plow Blade, 2.00 W, 36/42 G-C, 10.0 R	132-4981
Plow Blade, 2.00 W, 36/42 G-C, 13.0 R	132-4982
Plow Blade, 2.50 W, 24/30 G-C, 13.0 R	132-4983
Plow Blade, 2.50 W, 24/30 G-C, 20.0 R	132-4984
Plow Blade, 2.50 W, 30/36 G-C, 13.0 R	132-4985
Plow Blade, 2.50 W, 30/36 G-C, 20.0 R	132-4986
Plow Blade, 2.50 W, 36/42 G-C, 13.0 R	132-4987
Plow Blade, 2.50 W, 36/42 G-C, 20.0 R	132-4988
Plow Blade, 3.00 W, 30/36 G-C, 13.0 R	132-4989
Plow Blade, 3.00 W, 30/36 G-C, 20.0 R	132-4990
Plow Blade, 3.00 W, 36/42 G-C, 13.0 R	132-4991
Plow Blade, 3.00 W, 36/42 G-C, 20.0 R	132-4992
Additional Depth Setting	132-4993
Tape Tube	132-4994
Blade, MAXI-TRAC 18/24 Depth, E	132-4995
Blade, MAXI-TRAC 18/24 Depth, F	132-4996
Blade, MAXI-TRAC 24/30 Depth, F	132-4997
Blade, MAXI-TRAC 30/36 Depth, F	132-4998
Blade, MAXI-TRAC 36/42 Depth, F	132-4999
Blade, MAXI-TRAC 42/48 Depth, H	132-5000
Bullet, 2.00	132-5001
Bullet, 3.00	132-5002
Bullet, 4.00	132-5003
Bullet, 5.00	132-5004
Bullet, 6.00	132-5005
Plow Blade, .75 CW, 18/24 GC, 8 RAD	132-5006
Plow Blade, .75 CW, 18/24 GC, 10 RAD	132-5007
Plow Blade, .75 CW, 24/30 GC, 8 RAD	132-5008
Plow Blade, .75 CW, 24/30 GC, 10 RAD	132-5009
Plow Blade, 1.00 CW, 18/24 GC, 8 RAD	132-5010
Plow Blade, 1.00 CW, 18/24 GC, 10 RAD	132-5011
Plow Blade, 1.00 CW, 24/30 GC, 8 RAD	132-5012

Attachments and Accessories (continued)

Plow Blade, 1.00 CW, 24/30 GC, 10 RAD	132-5013
Plow Blade, 1.00 CW, 30/36 GC, 8 RAD	132-5014
Plow Blade, 1.00 CW, 30/36 GC, 10 RAD	132-5015
Plow Blade, 1.00 CW, 30/36 GC, 13 RAD	132-5016
Plow Blade, 1.50 CW, 18/24 GC, 8 RAD	132-5017
Plow Blade, 1.50 CW, 18/24 GC, 10 RAD	132-5018
Plow Blade, 1.50 CW, 18/24 GC, 13 RAD	132-5019
Plow Blade, 1.50 CW, 24/30 GC, 8 RAD	132-5020
Plow Blade, 1.50 CW, 24/30 GC, 10 RAD	132-5021
Plow Blade, 1.50 CW, 24/30 GC, 13 RAD	132-5022
Plow Blade, 1.50 CW, 30/36 GC, 8 RAD	132-5023
Plow Blade, 1.50 CW, 30/36 GC, 10 RAD	132-5024
Plow Blade, 1.50 CW, 30/36 GC, 13 RAD	132-5025
Plow Blade, 1.50 CW, 36/42 GC, 8 RAD	132-5026
Plow Blade, 1.50 CW, 36/42 GC, 10 RAD	132-5027
Plow Blade, 1.50 CW, 36/42 GC, 13 RAD	132-5028
Plow Blade, 2.00 CW, 18/24 GC, 10 RAD	132-5029
Plow Blade, 2.00 CW, 18/24 GC, 13 RAD	132-5030
Plow Blade, 2.00 CW, 24/30 GC, 10 RAD	132-5031
Plow Blade, 2.00 CW, 24/30 GC, 13 RAD	132-5032
Plow Blade, 2.00 CW, 30/36 GC, 10 RAD	132-5033
Plow Blade, 2.00 CW, 30/36 GC, 13 RAD	132-5034
Plow Blade, 2.00 CW, 36/42 GC, 10 RAD	132-5035
Plow Blade, 2.00 CW, 36/42 GC, 13 RAD	132-5036
Plow Blade, 2.50 CW, 24/30 GC, 13 RAD	132-5037
Plow Blade, 2.50 CW, 24/30 GC, 20 RAD	132-5038
Plow Blade, 2.50 CW, 30/36 GC, 13 RAD	132-5039
Plow Blade, 2.50 CW, 30/36 GC, 20 RAD	132-5040
Plow Blade, 2.50 CW, 36/42 GC, 13 RAD	132-5041
Plow Blade, 2.50 CW, 36/42 GC, 20 RAD	132-5042
Plow Blade, 3.00 CW, 30/36 GC, 13 RAD	132-5043
Plow Blade, 3.00 CW, 30/36 GC, 20 RAD	132-5044
Plow Blade, 3.00 CW, 36/42 GC, 13 RAD	132-5045
Plow Blade, 3.00 CW, 36/42 GC, 20 RAD	132-5046
Direct Drive Trencher.....	25200
Direct Drive Trencher.....	25200E
Combo for Direct Drive Trencher and P85 Plow	25201
Combo for Direct Drive Trencher and P85 Plow	25201E
48in Direct Drive Boom	25202
48in Direct Drive Boom	25202E
60in Direct Drive Boom	25203
60in Direct Drive Boom	25203E
Sliding Offset Kit, Centerline Trencher	25204
Sliding Offset Kit, Centerline Trencher	25204E
P85 Vibratory Plow	25401
P85 Vibratory Plow	25401E
Horn Kit, RT600 or RT1200 Trencher	25409
Horn Kit, RT600 or RT1200 Trencher	25409E
Beacon Kit, RT600 or RT1200 Trencher	25415

Attachments and Accessories (continued)

Beacon Kit, RT600 or RT1200 Trencher	25415E
Back-Up Alarm Kit	25428
Back-Up Alarm Kit	25428E
Heavy Duty Center Line Trencher.....	25431
Heavy-Duty Centerline Trencher	25431E
Heavy Duty Backhoe 125	25432
Heavy Duty Backhoe 125	25432E
Backhoe Drive Release Kit (Tow Valve Kit)	25433
Backhoe Drive Release Kit (Tow Valve Kit)	25433E
48in Heavy Duty Crumber.....	25435
48in Heavy Duty Crumber.....	25435E
60in Heavy Duty Crumber.....	25436
60in Heavy Duty Crumber.....	25436E
48in Heavy Duty Rock Boom	25437
48in Heavy Duty Rock Boom with Restraint Bar	25437E
60in Heavy Duty Rock Boom With Rest Bar.....	25438
60in Heavy Duty Rock Boom with Restraint Bar	25438E
Counterweight Kit	25439
Counterweight Kit	25439E
Auxiliary Valve Kit	25445
Auxiliary Valve Kit	25445E
Rear Steering Indicator Kit.....	25520
Rear Steering Indicator Kit.....	25520E
6in x 48in 2 Pitch Cup Chain, Utility Trencher	TR26506235
6in x 60in 2 Pitch Cup Chain, Utility Trencher.....	TR26506240
6in x 48in Terminator and Cup Combo Chain, Utility Trencher.....	TR26506C35
6in x 60in Terminator and Cup Combo Chain, Utility Trencher.....	TR26506C40
6in x 48in H-Plate, Rock and Frost Chain, Utility Trencher	TR26506H35
6in x 60in H-Plate, Rock and Frost Chain, Utility Trencher	TR26506H40
6in x 48in Mixed Rock and Frost Chain, Utility Trencher.....	TR26506M35
6in x 60in Mixed Rock and Frost Chain, Utility Trencher.....	TR26506M40
6in x 48in Rock and Frost Chain, Utility Trencher	TR26506R35
6in x 60in Rock and Frost Chain, Utility Trencher	TR26506R40
6in x 48in Solid Weld Terminator Chain, Utility Trencher	TR26506S35
6in x 60in Solid Weld Terminator Chain, Utility Trencher	TR26506S40
6in x 48in Bolt-On Terminator Chain, Utility Trencher	TR26506T35
6in x 60in Bolt-On Terminator Chain, Utility Trencher	TR26506T40
8in x 48in 2 Pitch Cup Chain, Utility Trencher.....	TR26508235
8in x 60in 2 Pitch Cup Chain, Utility Trencher.....	TR26508240
8in x 48in Terminator and Cup Combo Chain, Utility Trencher.....	TR26508C35
8in x 60in Terminator and Cup Combo Chain, Utility Trencher.....	TR26508C40
8in x 48in H-Plate, Rock and Frost Chain, Utility Trencher	TR26508H35
8in x 60in H-Plate, Rock and Frost Chain, Utility Trencher	TR26508H40
8in x 48in Mixed Rock and Frost Chain, Utility Trencher.....	TR26508M35
8in x 60in Mixed Rock and Frost Chain, Utility Trencher.....	TR26508M40
8in x 48in Rock and Frost Chain, Utility Trencher	TR26508R35
8in x 60in Rock and Frost Chain, Utility Trencher	TR26508R40
8in x 48in Solid Weld Terminator Chain, Utility Trencher	TR26508S35
8in x 60in Solid Weld Terminator Chain, Utility Trencher	TR26508S40

Attachments and Accessories (continued)

8in x 48in Bolt-On Terminator Chain, Utility Trencher	TR26508T35
8in x 60in Bolt-On Terminator Chain, Utility Trencher	TR26508T40

For 25430W RT600 Traction Unit

Product Name	Model/Part
Standard Pulling Blade, VST-24E 18/24 Plow Depth	131-6284
Standard Pulling Blade, VST-24F 18/24 Plow Depth.....	131-6285
Standard Pulling Blade, 24/30 Plow Depth	131-6286
Standard Pulling Blade, 30/36 Plow Depth	131-6287
Standard Pulling Blade, 36/42 Plow Depth	131-6288
Standard Pulling Blade, 42/48 Plow Depth	131-6289
Plow Blade, 18/24 Plow Depth.....	132-4950
Plow Blade, .75 W, 18/24 G-C, 10.0 R	132-4951
Plow Blade, .75 W, 24/30 G-C, 8.0 R	132-4952
Plow Blade, .75 W, 24/30 G-C, 10.0 R	132-4953
Plow Blade, .75 W, 30/36 G-C, 8.0 R	132-4954
Plow Blade, .75 W, 30/36 G-C, 10.0 R	132-4955
Plow Blade, 1.00 W, 18/24 G-C, 8.0 R	132-4956
Plow Blade, 1.00 W, 24/30 G-C, 8.0 R	132-4957
Plow Blade, 1.00 W, 24/30 G-C, 8.0 R	132-4958
Plow Blade, 1.00 W, 24/30 G-C, 10.0 R	132-4959
Plow Blade, 1.00 W, 30/36 G-C, 8.0 R	132-4960
Plow Blade, 1.00 W, 30/36 G-C, 10.0 R	132-4961
Plow Blade, 1.50 W, 18/24 G-C, 8.0 R	132-4962
Plow Blade, 1.50 W, 18/24 G-C, 8.0 R	132-4963
Plow Blade, 1.50 W, 18/24 G-C, 10.0 R	132-4964
Plow Blade, 1.50 W, 18/24 G-C, 13.0 R	132-4965
Plow Blade, 1.50 W, 18/24 G-C, 13.0 R	132-4966
Plow Blade, 1.50 W, 24/30 G-C, 10.0 R	132-4967
Plow Blade, 1.50 W, 24/30 G-C, 13.0 R	132-4968
Plow Blade, 1.50 W, 30/36 G-C, 8.0 R	132-4969
Plow Blade, 1.50 W, 30/36 G-C, 10.0 R	132-4970
Plow Blade, 1.50 W, 30/36 G-C, 13.0 R	132-4971
Plow Blade, 1.50 W, 36/42 G-C, 8.0 R	132-4972
Plow Blade, 1.50 W, 36/42 G-C, 10.0 R	132-4973
Plow Blade, 1.50 W, 36/42 G-C, 13.0 R	132-4974
Plow Blade, 2.00 W, 18/24 G-C, 10.0 R	132-4975
Plow Blade, 2.00 W, 18/24 G-C, 13.0 R	132-4976
Plow Blade, 2.00 W, 24/30 G-C, 10.0 R	132-4977
Plow Blade, 2.00 W, 24/30 G-C, 13.0 R	132-4978
Plow Blade, 2.00 W, 30/36 G-C, 10.0 R	132-4979
Plow Blade, 2.00 W, 30/36 G-C, 13.0 R	132-4980
Plow Blade, 2.00 W, 36/42 G-C, 10.0 R	132-4981
Plow Blade, 2.00 W, 36/42 G-C, 13.0 R	132-4982
Plow Blade, 2.50 W, 24/30 G-C, 13.0 R	132-4983
Plow Blade, 2.50 W, 24/30 G-C, 20.0 R	132-4984
Plow Blade, 2.50 W, 30/36 G-C, 13.0 R	132-4985
Plow Blade, 2.50 W, 30/36 G-C, 20.0 R	132-4986

Attachments and Accessories (continued)

Plow Blade, 2.50 W, 36/42 G-C, 13.0 R	132-4987
Plow Blade, 2.50 W, 36/42 G-C, 20.0 R	132-4988
Plow Blade, 3.00 W, 30/36 G-C, 13.0 R	132-4989
Plow Blade, 3.00 W, 30/36 G-C, 20.0 R	132-4990
Plow Blade, 3.00 W, 36/42 G-C, 13.0 R	132-4991
Plow Blade, 3.00 W, 36/42 G-C, 20.0 R	132-4992
Additional Depth Setting	132-4993
Tape Tube	132-4994
Blade, MAXI-TRAC 18/24 Depth, E	132-4995
Blade, MAXI-TRAC 18/24 Depth, F	132-4996
Blade, MAXI-TRAC 24/30 Depth, F	132-4997
Blade, MAXI-TRAC 30/36 Depth, F	132-4998
Blade, MAXI-TRAC 36/42 Depth, F	132-4999
Blade, MAXI-TRAC 42/48 Depth, H	132-5000
Bullet, 2.00	132-5001
Bullet, 3.00	132-5002
Bullet, 4.00	132-5003
Bullet, 5.00	132-5004
Bullet, 6.00	132-5005
Plow Blade, .75 CW, 18/24 GC, 8 RAD	132-5006
Plow Blade, .75 CW, 18/24 GC, 10 RAD	132-5007
Plow Blade, .75 CW, 24/30 GC, 8 RAD	132-5008
Plow Blade, .75 CW, 24/30 GC, 10 RAD	132-5009
Plow Blade, 1.00 CW, 18/24 GC, 8 RAD	132-5010
Plow Blade, 1.00 CW, 18/24 GC, 10 RAD	132-5011
Plow Blade, 1.00 CW, 24/30 GC, 8 RAD	132-5012
Plow Blade, 1.00 CW, 24/30 GC, 10 RAD	132-5013
Plow Blade, 1.00 CW, 30/36 GC, 8 RAD	132-5014
Plow Blade, 1.00 CW, 30/36 GC, 10 RAD	132-5015
Plow Blade, 1.00 CW, 30/36 GC, 13 RAD	132-5016
Plow Blade, 1.50 CW, 18/24 GC, 8 RAD	132-5017
Plow Blade, 1.50 CW, 18/24 GC, 10 RAD	132-5018
Plow Blade, 1.50 CW, 18/24 GC, 13 RAD	132-5019
Plow Blade, 1.50 CW, 24/30 GC, 8 RAD	132-5020
Plow Blade, 1.50 CW, 24/30 GC, 10 RAD	132-5021
Plow Blade, 1.50 CW, 24/30 GC, 13 RAD	132-5022
Plow Blade, 1.50 CW, 30/36 GC, 8 RAD	132-5023
Plow Blade, 1.50 CW, 30/36 GC, 10 RAD	132-5024
Plow Blade, 1.50 CW, 30/36 GC, 13 RAD	132-5025
Plow Blade, 1.50 CW, 36/42 GC, 8 RAD	132-5026
Plow Blade, 1.50 CW, 36/42 GC, 10 RAD	132-5027
Plow Blade, 1.50 CW, 36/42 GC, 13 RAD	132-5028
Plow Blade, 2.00 CW, 18/24 GC, 10 RAD	132-5029
Plow Blade, 2.00 CW, 18/24 GC, 13 RAD	132-5030
Plow Blade, 2.00 CW, 24/30 GC, 10 RAD	132-5031
Plow Blade, 2.00 CW, 24/30 GC, 13 RAD	132-5032
Plow Blade, 2.00 CW, 30/36 GC, 10 RAD	132-5033
Plow Blade, 2.00 CW, 30/36 GC, 13 RAD	132-5034
Plow Blade, 2.00 CW, 36/42 GC, 10 RAD	132-5035

Attachments and Accessories (continued)

Plow Blade, 2.00 CW, 36/42 GC, 13 RAD	132-5036
Plow Blade, 2.50 CW, 24/30 GC, 13 RAD	132-5037
Plow Blade, 2.50 CW, 24/30 GC, 20 RAD	132-5038
Plow Blade, 2.50 CW, 30/36 GC, 13 RAD	132-5039
Plow Blade, 2.50 CW, 30/36 GC, 20 RAD	132-5040
Plow Blade, 2.50 CW, 36/42 GC, 13 RAD	132-5041
Plow Blade, 2.50 CW, 36/42 GC, 20 RAD	132-5042
Plow Blade, 3.00 CW, 30/36 GC, 13 RAD	132-5043
Plow Blade, 3.00 CW, 30/36 GC, 20 RAD	132-5044
Plow Blade, 3.00 CW, 36/42 GC, 13 RAD	132-5045
Plow Blade, 3.00 CW, 36/42 GC, 20 RAD	132-5046
Direct Drive Trencher	25200
Direct Drive Trencher	25200E
Combo for Direct Drive Trencher and P85 Plow	25201
Combo for Direct Drive Trencher and P85 Plow	25201E
48in Direct Drive Boom	25202
48in Direct Drive Boom	25202E
60in Direct Drive Boom	25203
60in Direct Drive Boom	25203E
Sliding Offset Kit, Centerline Trencher	25204
Sliding Offset Kit, Centerline Trencher	25204E
P85 Vibratory Plow	25401
P85 Vibratory Plow	25401E
Horn Kit, RT600 or RT1200 Trencher	25409
Horn Kit, RT600 or RT1200 Trencher	25409E
Beacon Kit, RT600 or RT1200 Trencher	25415
Beacon Kit, RT600 or RT1200 Trencher	25415E
Back-Up Alarm Kit	25428
Back-Up Alarm Kit	25428E
Heavy Duty Center Line Trencher	25431
Heavy-Duty Centerline Trencher	25431E
Heavy Duty Backhoe 125	25432
Heavy Duty Backhoe 125	25432E
Backhoe Drive Release Kit (Tow Valve Kit)	25433
Backhoe Drive Release Kit (Tow Valve Kit)	25433E
48in Heavy Duty Crumber	25435
48in Heavy Duty Crumber	25435E
60in Heavy Duty Crumber	25436
60in Heavy Duty Crumber	25436E
48in Heavy Duty Rock Boom	25437
48in Heavy Duty Rock Boom with Restraint Bar	25437E
60in Heavy Duty Rock Boom With Rest Bar	25438
60in Heavy Duty Rock Boom with Restraint Bar	25438E
Counterweight Kit	25439
Counterweight Kit	25439E
Auxiliary Valve Kit	25445
Auxiliary Valve Kit	25445E
Rear Steering Indicator Kit	25520
Rear Steering Indicator Kit	25520E

Attachments and Accessories (continued)

6in x 48in 2 Pitch Cup Chain, Utility Trencher	TR26506235
6in x 60in 2 Pitch Cup Chain, Utility Trencher.....	TR26506240
6in x 48in Terminator and Cup Combo Chain, Utility Trencher.....	TR26506C35
6in x 60in Terminator and Cup Combo Chain, Utility Trencher.....	TR26506C40
6in x 48in H-Plate, Rock and Frost Chain, Utility Trencher	TR26506H35
6in x 60in H-Plate, Rock and Frost Chain, Utility Trencher	TR26506H40
6in x 48in Mixed Rock and Frost Chain, Utility Trencher.....	TR26506M35
6in x 60in Mixed Rock and Frost Chain, Utility Trencher.....	TR26506M40
6in x 48in Rock and Frost Chain, Utility Trencher	TR26506R35
6in x 60in Rock and Frost Chain, Utility Trencher	TR26506R40
6in x 48in Solid Weld Terminator Chain, Utility Trencher	TR26506S35
6in x 60in Solid Weld Terminator Chain, Utility Trencher	TR26506S40
6in x 48in Bolt-On Terminator Chain, Utility Trencher	TR26506T35
6in x 60in Bolt-On Terminator Chain, Utility Trencher	TR26506T40
8in x 48in 2 Pitch Cup Chain, Utility Trencher.....	TR26508235
8in x 60in 2 Pitch Cup Chain, Utility Trencher.....	TR26508240
8in x 48in Terminator and Cup Combo Chain, Utility Trencher.....	TR26508C35
8in x 60in Terminator and Cup Combo Chain, Utility Trencher.....	TR26508C40
8in x 48in H-Plate, Rock and Frost Chain, Utility Trencher	TR26508H35
8in x 60in H-Plate, Rock and Frost Chain, Utility Trencher	TR26508H40
8in x 48in Mixed Rock and Frost Chain, Utility Trencher.....	TR26508M35
8in x 60in Mixed Rock and Frost Chain, Utility Trencher.....	TR26508M40
8in x 48in Rock and Frost Chain, Utility Trencher	TR26508R35
8in x 60in Rock and Frost Chain, Utility Trencher	TR26508R40
8in x 48in Solid Weld Terminator Chain, Utility Trencher	TR26508S35
8in x 60in Solid Weld Terminator Chain, Utility Trencher	TR26508S40
8in x 48in Bolt-On Terminator Chain, Utility Trencher	TR26508T35
8in x 60in Bolt-On Terminator Chain, Utility Trencher	TR26508T40

Notes:



Count on it.