




Z-SPRAY®

Model No. ZS5260XL—Serial No. 406866189 and Up

Picture below may not reflect actual product.

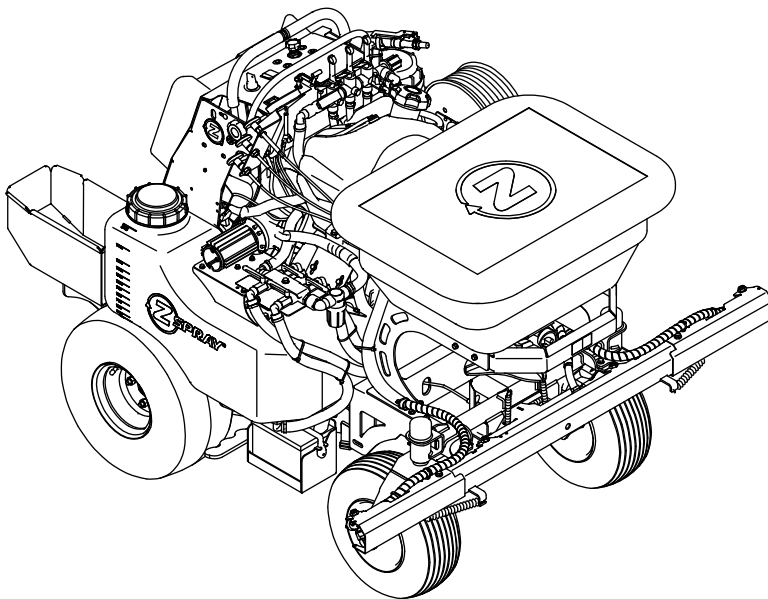

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Touch Up Paint


Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

Contents

Main Frame Assembly	4
Motion Control Assembly	6
Park Brake Assembly	8
Tire and Wheel Assembly	10
Hopper Assembly	12
Spray System Assembly	14
Left Tank Assembly	16
Manifold Assembly	18
Spray Boom Assembly	20
Reel Hose Assembly	22
Liquid Valve Assembly	24
Fuel Assembly	26
Fuel Tank Assembly No. 140-4343	28
Engine Assembly	30
Hydraulic Assembly	32
Electrical Assembly	34


Main Frame Assembly

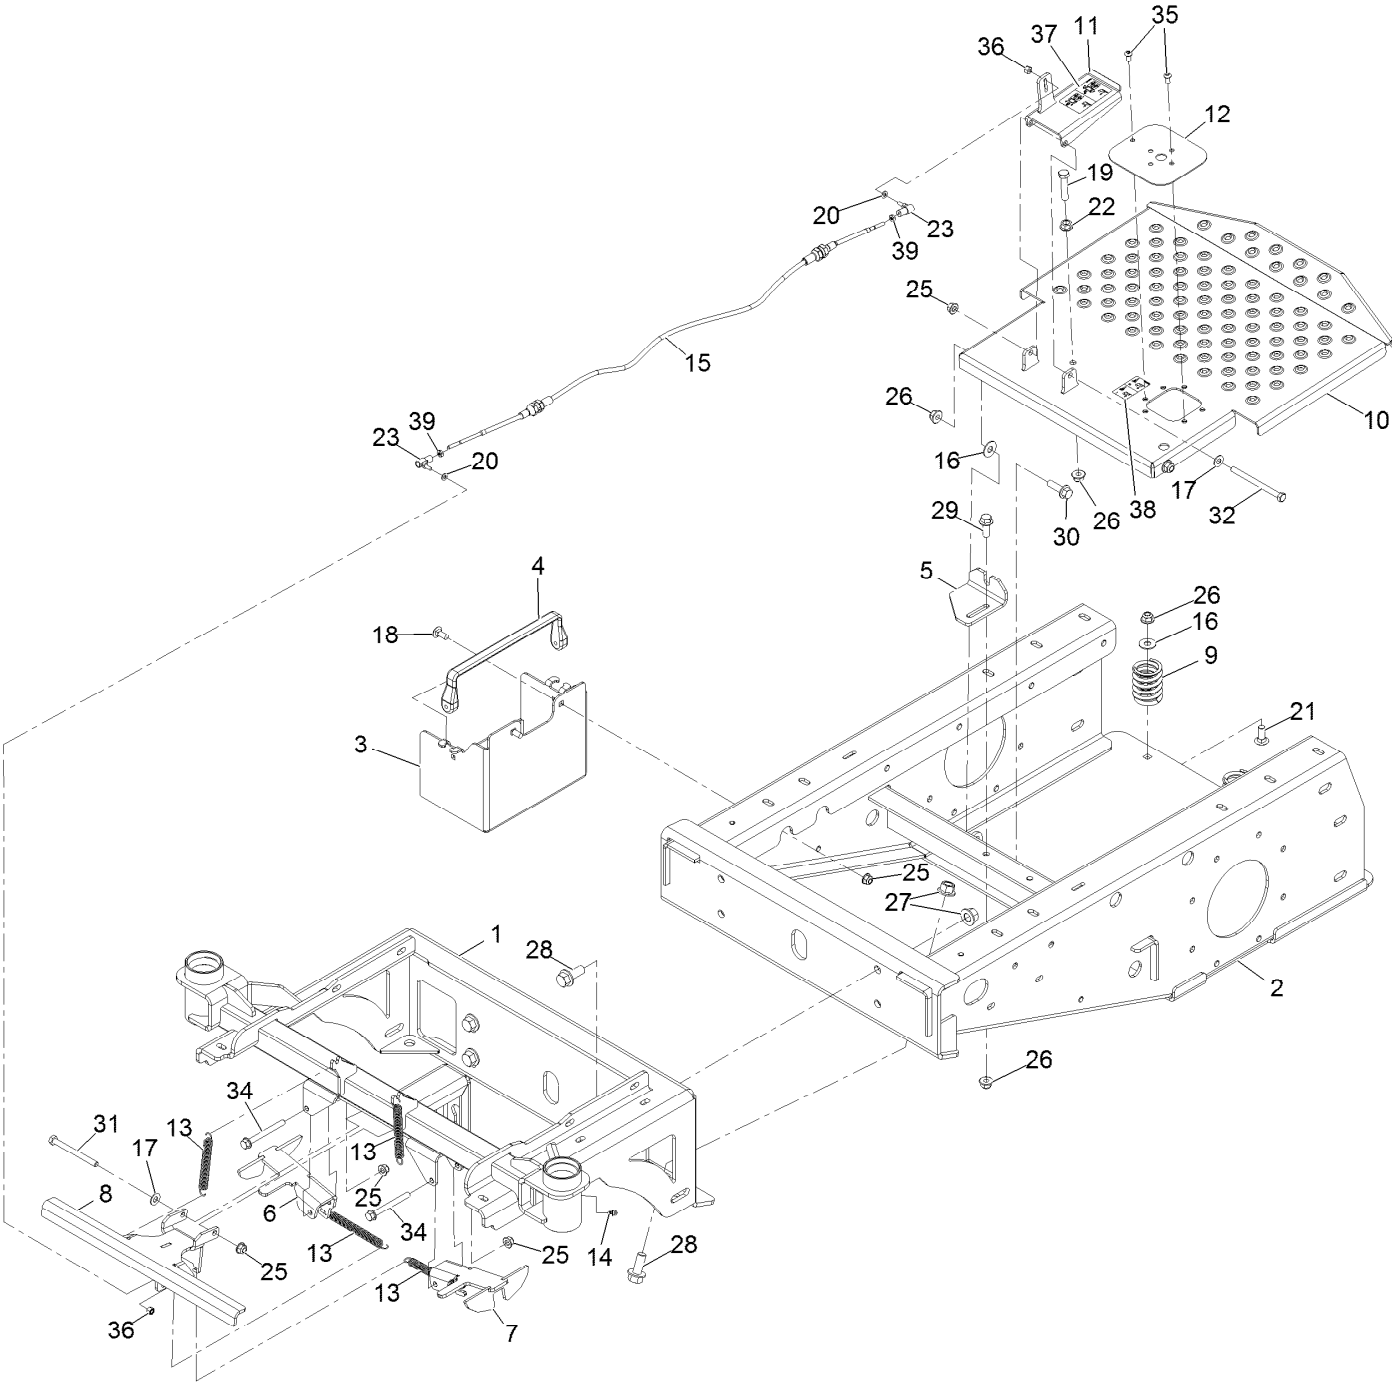

Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5179	1	Frame-Front	23	135-5682	2	Ball Joint-SS
2	135-5171	1	Frame-Rear	25	135-6109	6	Nut-Hex Flg 5/16-18 Nyloc SS
3	142-3038	1	Box-Battery	26	135-6110	7	Nut-Hex Flg 3/8-16 SS W/Patch SS
4	142-1748	1	Strap, Tarp	27	135-6111	6	Nut-Hex Flg 3/8-16 SS W/Patch SS
5	135-5494	1	Bracket-Cable, Lower	28	135-6207	6	Screw-HHF 5/16-18 X 1 1/4 SS
6	135-5195	1	Wing-Capture, Rt	29	135-6208	1	Screw-HHF 3/8-16 X 1 Serrated SS
7	135-5194	1	Wing-Capture, Lt	30	135-6211	2	Screw-HHF 3/8-16 X 1 1/4 Serrated SS
8	135-5369	1	Capture-Lcs	31	135-6217	1	Screw-HH 5/16-18 X 3 1/2 SS
9	135-5654	3	Spring-Compression	32	135-6218	1	Screw-HH 5/16-18 X 4 SS
10	135-7502	1	Plate-Foot	34	135-6222	2	Screw-HHF 5/16-18 X 3 Serrated SS
11	135-5191	1	Pedal-Foot	35	135-6367	2	Screw-Button Head 1/4-20 X 1/2 SS
12	135-5561	1	Panel-Switch, Foot	36	HDW05856	2	Nut-Hex Nyl Ins #10-32 Unf
13	135-5652	4	Spring-Extension	37	135-6430	1	Decal-Lock, Caster
14	302-63	2	Zerk	38	135-6728	1	Decal-Button, Foot (Spray)
15	135-5644	1	Cable-Caster, Locking	39	520-0019	2	Nut-Hex Jam #10-32 Unf
16	1126	5	Washer-Flat				
17	107-0279	2	Washer				
18	126-0695	2	Screw-Carriage 5/16-18 X 3/4 SS				
19	126-0710	1	Screw-HHF 3/8-16 X 1.75 SS				
20	126-0759	2	Washer-Flat				
21	126-0980	3	Bolt-Carriage 3/8-16 X 1 SS				
22	135-6806	1	Nut-Hex Flange 3/8-16 Serrated SS				


Motion Control Assembly

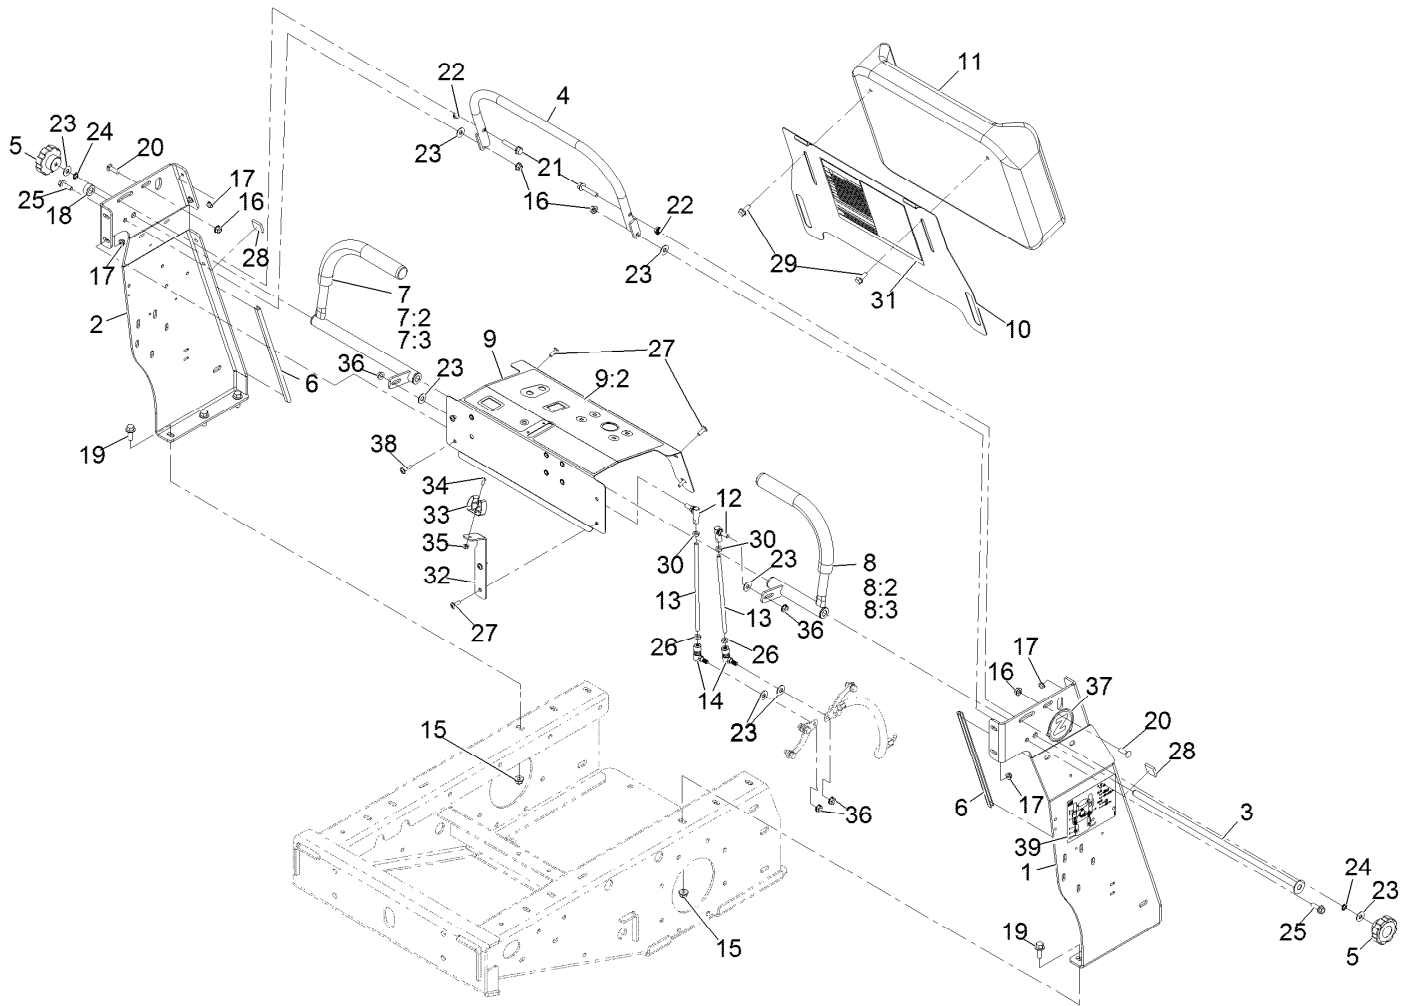

Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5423-05	1	Upright-Tower, Lt [blk-Txt]	21	135-5779	2	Screw-HHF 5/16-18 X 1 3/4
2	135-5425-05	1	Upright-Tower, Rt [blk-Txt]				Serrated SS
3	135-5430	1	Rod-Pivot, Joy Stick	22	118-1722	2	Nut-Hex Flange 5/16-18
4	135-5427-05	1	Bar-Speed [blk-Txt]				Serrated SS
5	135-5689	2	Knob-Fluted	23	HDW14535	8	Washer-Flat 5/16 SS
6	135-5336	2	Strip-Trim, 12.0 Inch	24	135-6286	2	Washer-Lock
7	135-5738	1	Stick-Joy, Rt	25	135-6272	2	Screw-HHF 5/16-18 X 1
7:2	1-633257	1	Grip-Control, Motion				Serrated SS
7:3	135-5694	2	Bushing-Flange	26	107-0282	2	Nut-Hex 5/16-24 Jam SS
8	135-5739	1	Stick-Joy, Lt	27	135-7080	6	Screw-Button Head Flange
8:2	1-633257	1	Grip-Control, Motion				1/4-20 X 3/4 SS
8:3	135-5694	2	Bushing-Flange	28	93-9155	2	Velcro
9	142-3142	1	ASM-Panel, Control	29	126-2712	2	Screw-HHF 5/16-18 X 3/4
9:2	142-4183	1	Decal-Control Panel				Serrated SS
10	135-5498-05	1	Plate-Pad, Knee	30	135-6512	2	Nut-Hex 5/16-24 Jam SS LH
11	142-3165	1	Pad-Knee, Z-Logo	31	142-4373	1	Decal-Spray Chart
12	135-5257	2	Balljoint-SS	32	135-5506-05	1	Mount-Gun
13	135-5681	2	Rod-Control, Motion	33	135-5661	1	Holder-Tool, Clip
14	135-5718	2	Ball Joint-Quick Disconnect,	34	135-6374	1	Screw-Button Head #10-24
			SS				X 1/2 SS
15	135-6110	6	Nut-Hex Flg 3/8-16 SS	35	135-6342	1	Nut-Hex Flg #10-24 Nyloc
			W/Patch SS				SS
16	135-6109	4	Nut-Hex Flg 5/16-18 Nyloc	36	107-0380	4	Nut-Hex Flg 5/16-24 Unf
			SS				W/Patch
17	135-6108	8	Nut-Hex Flg 1/4-20 Nyloc	37	142-3051	2	Decal-Z-Logo
			SS	38	135-7081	2	Screw-Button Head Flange
18	135-6192	1	Collar				1/4-20 X 1 SS
19	135-6208	6	Screw-HHF 3/8-16 X 1	39	142-3911	1	Decal-Service Aid
			Serrated SS				
20	HDW17294	2	Bolt-Carriage 5/16-18 X 1				
			SS				


Park Brake Assembly

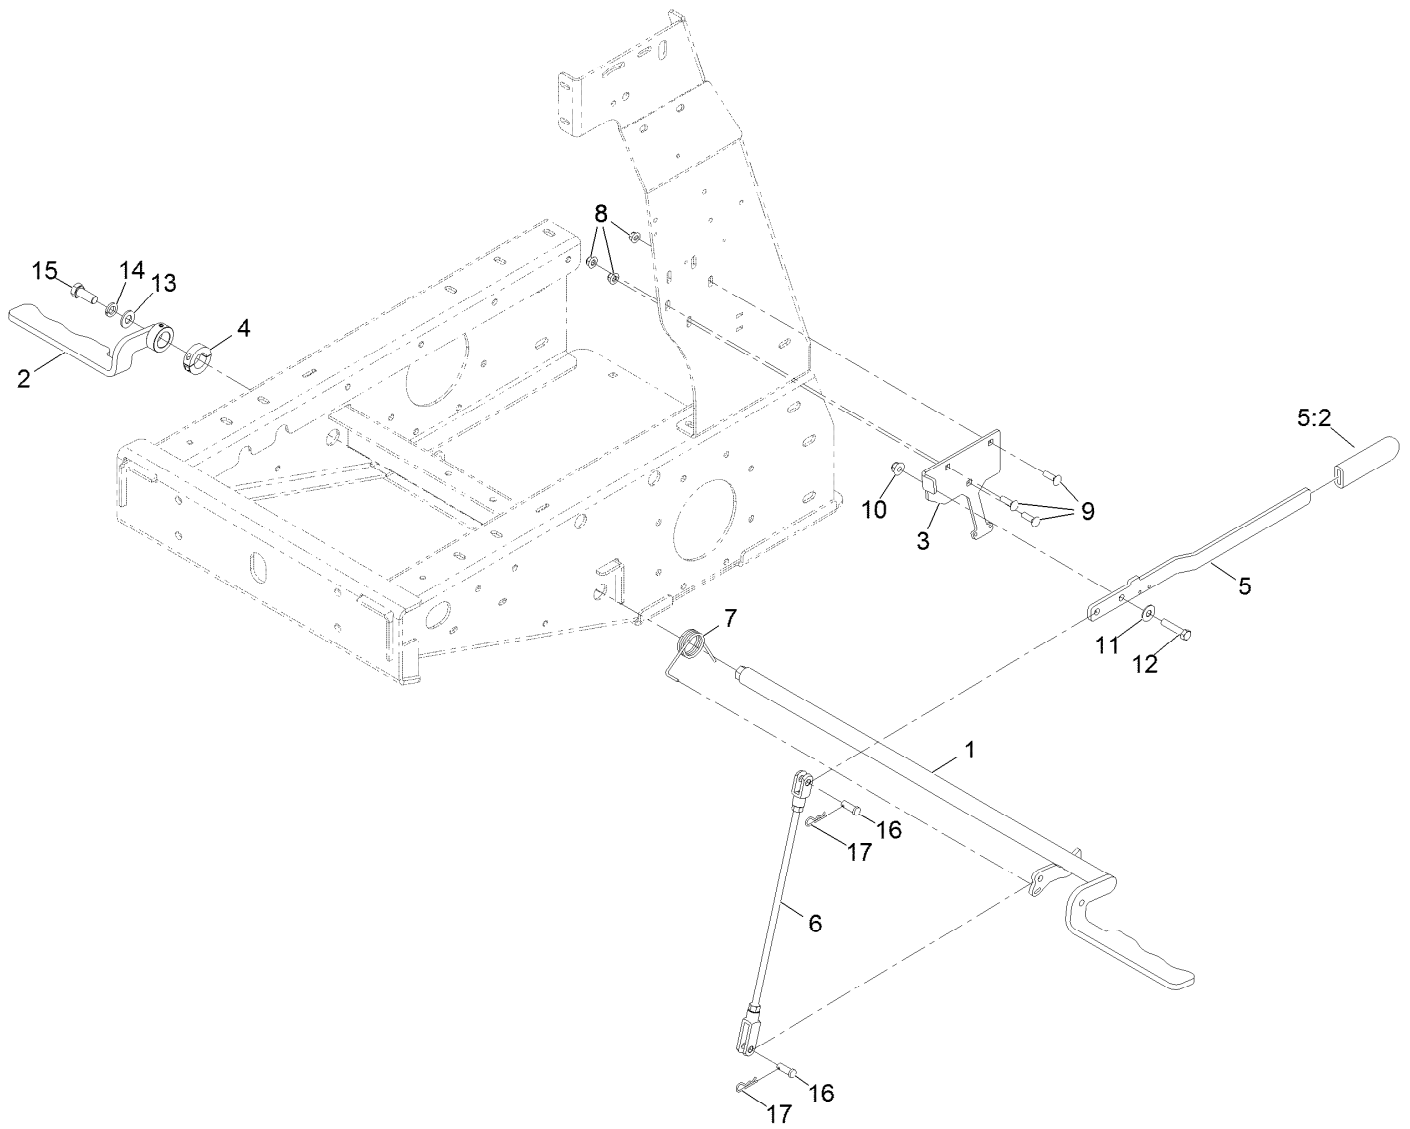

Park Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5380-03	1	Arm-Brake, Lt	10	104-8301	1	Nut-HF, NI
2	135-5376-03	1	Arm-Brake, Rt	11	1126	1	Washer-Flat
3	135-5432	1	Bracket-Handle, Brake	12	323-52	1	Screw-HH
4	116-7271	1	Collar-Locking	13	3256-26	1	Washer-Flat
5	135-6059	1	Brake Handle ASM	14	3253-7	1	Washer-Lock
5:2	1-633268	1	Grip-Lever	15	106-0378	1	Screw
6	135-6066	1	Brake Rod ASM	16	1-808284	2	Pin-Clevis
7	135-6106	1	Spring-Torsion	17	135-6284	2	Pin-Hair
8	135-6109	3	Nut-Hex Flange				
9	HDW17294	3	Bolt,Carriage,5/16-18X1,ST/ST 18-8				


Tire and Wheel Assembly

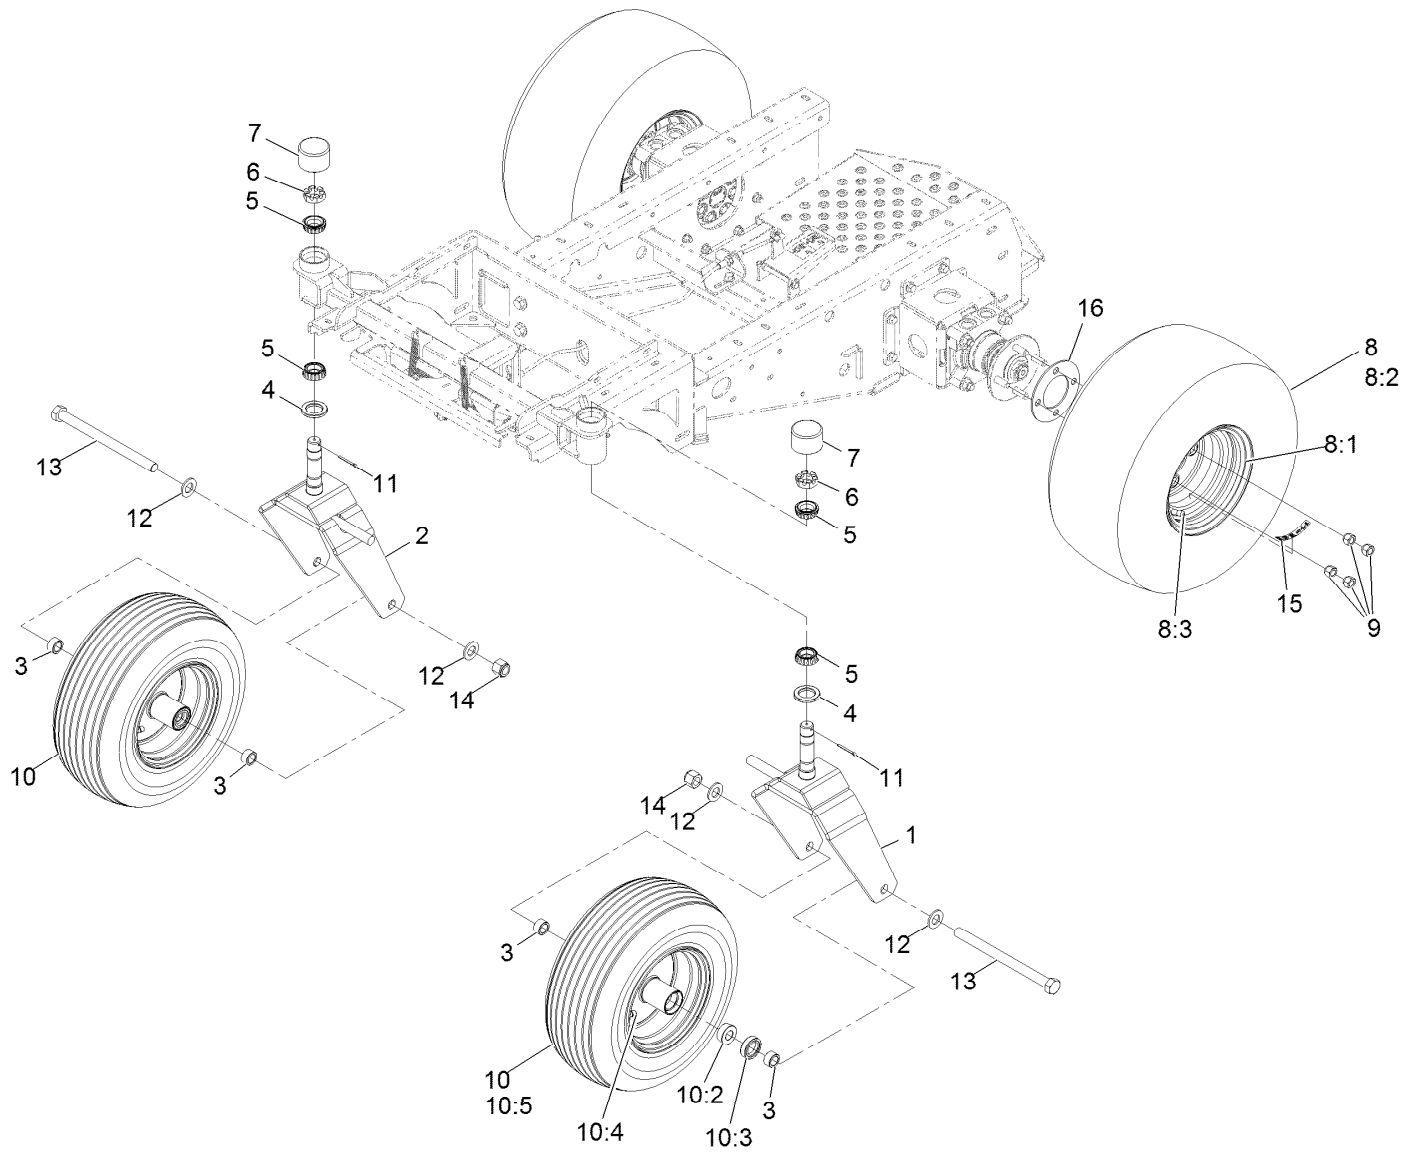

Tire and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5441-01	1	Caster-Lt [red]	10:2	1-633585	2	Bearing-Cone Tapered Roller
2	135-5446-01	1	Caster-Rt [red]	10:3	103-0063	2	Seal-Double Lip
3	135-5683	4	Spacer-Axle	10:4	5108	1	Valve
4	1-543511	2	Seal-Grease	10:5	135-5976	1	Tire-Rib
5	254-92	4	Cone-Bearing, Outer	11	135-6292	2	Pin-Cotter
6	1-809082	2	Nut-Slotted 1-14 Unf	12	3256-28	4	Washer-3/4 SAE
7	135-5756	2	Cap-Dust, Rubber	13	135-6300	2	Screw-HH 3/4-10 X 10
8	135-5968	2	Wheel And Tire ASM	14	3296-51	2	Nut-Nyloc 3/4-10
8:1	135-5969	1	Rim-8 X 7, Black	15	126-2055	2	Decal-Torque, Wheel Hub Lug
8:2	120-6466	1	Tire	16	116-5362	2	Spacer-Wheel
8:3	232-27	1	Stem-Valve				
9	242-50	8	Nut-Lug 1/2-20				
10	135-5974	2	Wheel And Tire ASM				

Hopper Assembly

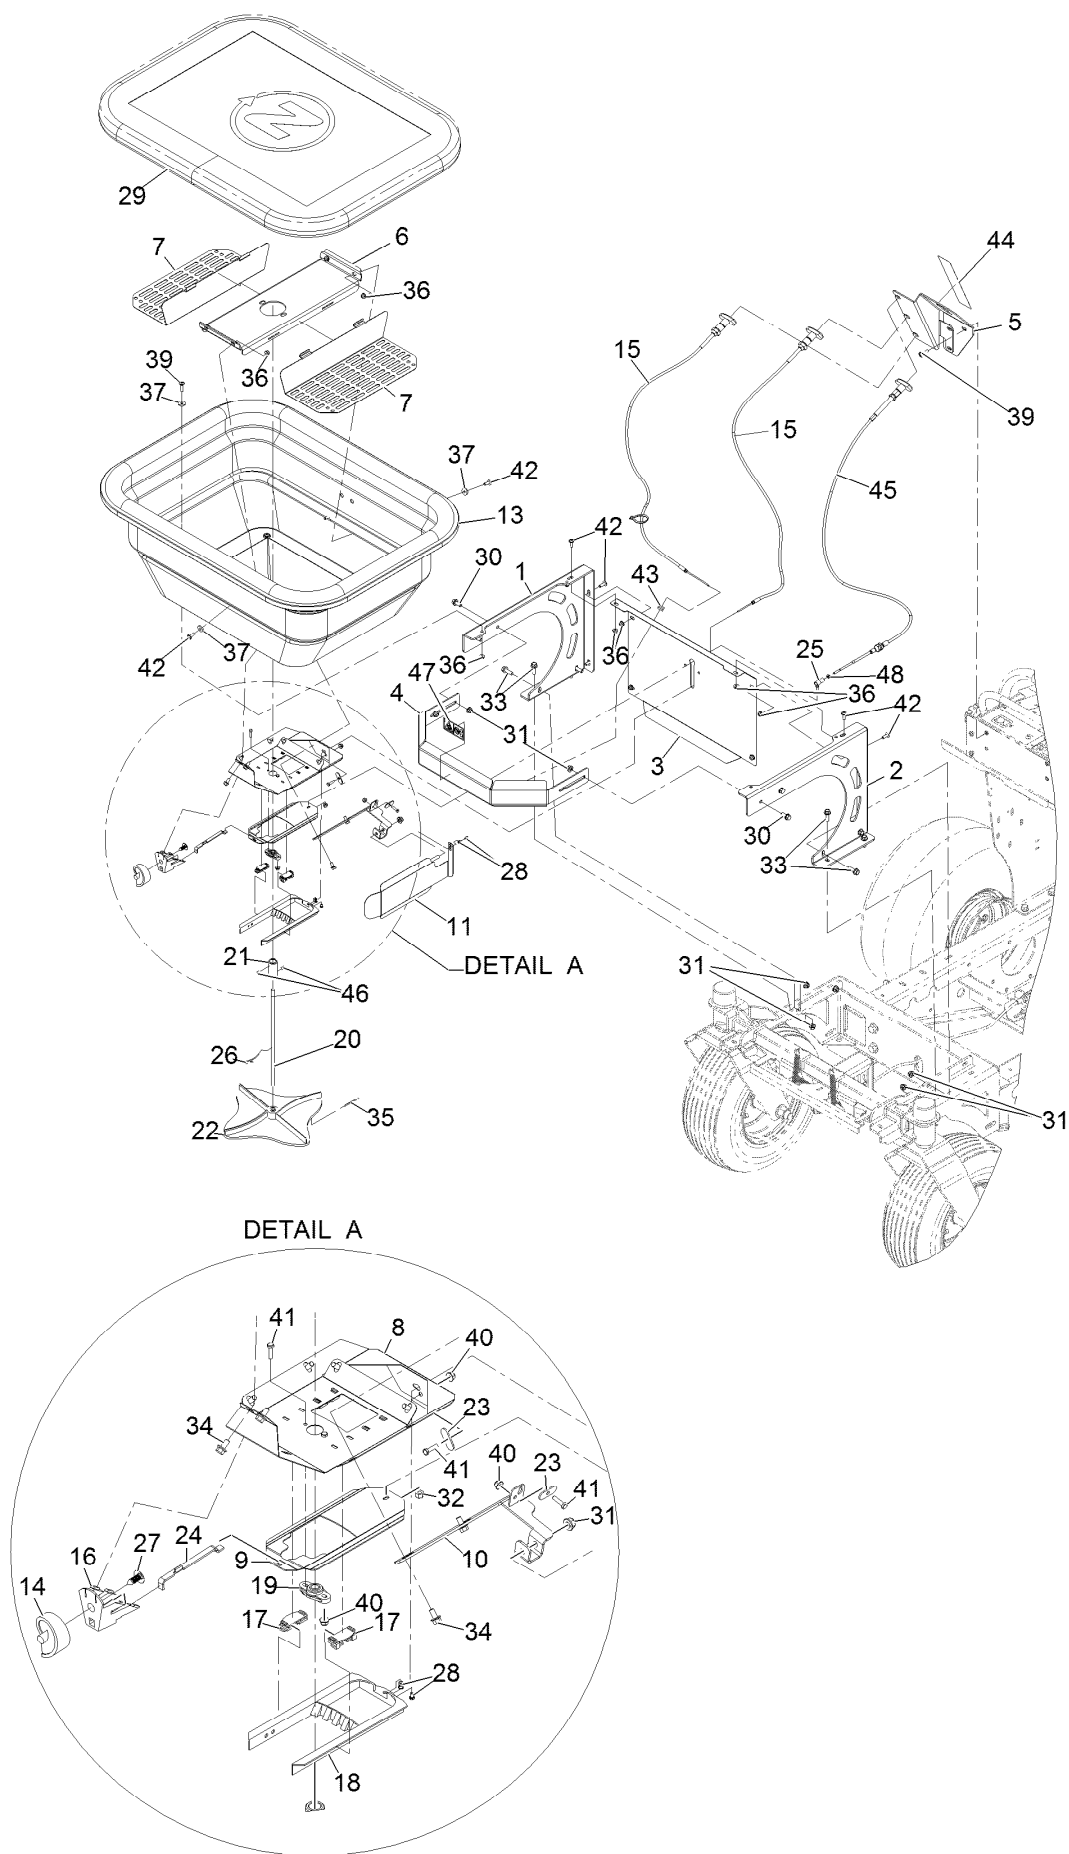


Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5391	1	Side-Hopper, Rt	30	126-2712	4	Screw-HHF 5/16-18 X 3/4 Serrated SS
2	135-5393	1	Side-Hopper, Lt	31	135-6109	13	Nut-Hex Flg 5/16-18 Nyloc SS
3	135-5571	1	Backshield-Hopper	32	HDW05856	1	Nut-Hex Nyl Ins #10-32 Unf
4	135-5567	1	Bumper-Front, Hopper	33	135-6272	8	Screw-HHF 5/16-18 X 1 Serrated SS
5	142-3283-05	1	Mount-Speedometer	34	135-6280	8	Screw-HHF 1/4-20 X 1/2 Serrated SS
6	135-5542	1	Pan-Hopper, 220	35	135-6340	1	Pin-Cotter
7	135-5544	2	Screen-Hopper, 220	36	135-6108	14	Nut-Hex Flg 1/4-20 Nyloc SS
8	135-5572	1	Plate-Base, Hopper	37	135-6341	8	Washer
9	135-5573	1	Slide-Door, Hopper	39	135-7081	5	Screw-Button Head Flange 1/4-20 X 1 SS
10	135-5388	1	Mount-Deflector, Side	40	135-6342	4	Nut-Hex Flg #10-24 Nyloc SS
11	135-5589	1	Deflector-Side, Spreader	41	135-6356	4	Screw-HH #10-24 X 3/4 SS
13	135-5985	1	Hopper-220Lb	42	135-7080	10	Screw-Button Head Flange 1/4-20 X 3/4 SS
14	126-0988	1	Dial	43	135-5988	1	Grommet-Rubber
15	135-5931	2	Cable-Push/Pull	44	142-4365	1	Decal-Hopper Control
16	126-0985	1	Mount-Dial	45	135-5935	1	Cable-Push/Pull
17	126-0990	4	Guide-Rate, Gate	46	3241-7	2	Screw-SQH 1/4-20 X 1/2
18	126-0991	1	Diffuser	47	135-6725	1	Decal-Dismemberment Hazard
19	135-5943	1	Bearing-Flange	48	520-0019	1	Nut-Hex Jam #10-32 Unf
20	135-5936	1	Shaft-Hopper, 220	50	3290-378	1	Tie-Cable ●
21	135-5937	1	Coupler-SS				
22	135-5954	1	Spinner-Spreader				
23	135-5569	2	Retainer, Cable				
24	135-5965	1	Linkage-Gate, Rate				
25	135-5682	1	Ball Joint-SS				
26	135-5957	1	Wire-Agitator				
27	126-0986	1	Clip				
28	135-5961	2	Retainer-Cable, Wire				
29	142-3082	1	Cover-Hopper, Large				

● Not illustrated

Spray System Assembly

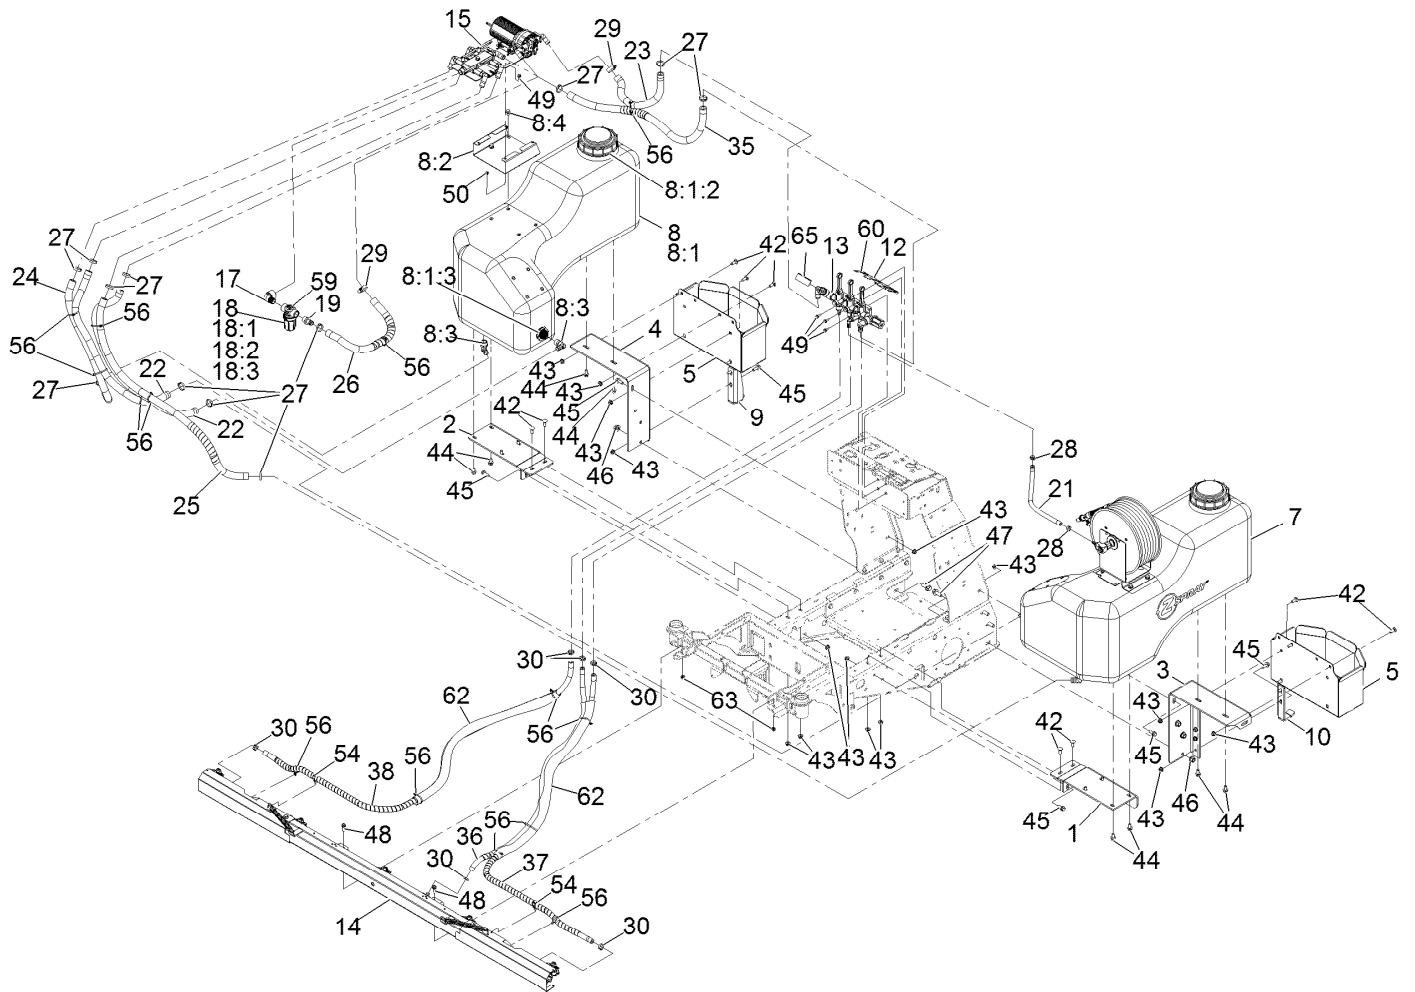


Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5495	1	Mount-Tank, LH	28	135-5757	2	Clamp-Oetiker, 167
2	135-5496	1	Mount-Tank, RH	29	2412-129	2	Clamp-Hose
3	135-5395	1	Mount-Box, Lt	30	135-5692	6	Clamp-Oetiker, 167
4	135-5397	1	Mount-Box, Rt	35	135-6480	1	Hose-Spray, Wrapped
5	142-2436	2	Box-Fert, Max	36	135-5294	1	Hose-Spray, Wrapped
7		1	ASM-Tank, Hose Reel ■	37	135-5295	1	Hose-Spray, Wrapped
8		1	ASM-Tank, Rt ■	38	135-5296	1	Hose-Spray, Wrapped
8:1	142-3057	1	ASM-Tank, Rt	42	126-0980	12	Bolt-Carriage 3/8-16 X 1 SS
8:1:2	135-5916	1	Cap-Tank, Spray	43	135-6110	22	Nut-Hex Flg 3/8-16 SS W/Patch SS
8:1:3	126-4393	2	Fitting-Bulkhead	44	135-6274	12	Screw-HHF 3/8-16 X 3/4 SS
8:2	135-5546	1	Mount-Platform, Liquid Valve	45	135-6208	10	Screw-HHF 3/8-16 X 1 Serrated SS
8:3	135-5772	2	Fitting-Elbow, 90	46	135-6111	6	Nut-Hex Flg 3/8-16 SS W/Patch SS
8:4	135-7096	4	Screw-HHF 3/8-16 X 1/2 SS	47	135-6207	6	Screw-HHF 5/16-18 X 1 1/4 SS
9	135-5408	1	Bracket-Tip, Anti (Rt)	48	135-6272	2	Screw-HHF 5/16-18 X 1 Serrated SS
10	135-5406	1	Bracket-Tip, Anti (Lt)	49	135-6221	7	Screw-HHF 1/4-20 X 3/4 Serrated SS
12	135-5570-05	1	Bracket-Manifold	50	135-6108	4	Nut-Hex Flg 1/4-20 Nyloc SS
13		1	ASM-Manifold ■	54	32180-030	2	Clip-Tie
14		1	ASM-Boom, Spray ■	56	3290-378	14	Tie-Cable
15		1	ASM, Liquid Valve ■	59	135-6424	1	Decal-Cap, Strainer
17	132-7706	1	Elbow-90 DEG	60	142-4366	1	Decal-Valve, Boom
18	135-5765	1	Strainer-Inline	62	135-6484	2	Guard-Mesh
18:1	126-7195	1	Bowl-Strainer	63	135-6109	2	Nut-Hex Flg 5/16-18 Nyloc SS
18:2	126-2272	1	Gasket-Head, Line Strainer	65	135-5740	1	Gauge
18:3	135-5766	1	Screen-Strainer, 50 Mesh	99	3290-379	3	Tie-Cable ●
19	41257	1	Hosebarb				
21	135-5321	1	Hose-Spray				
22	135-6163	2	Hose-Spray				
23	135-5324	1	Hose-Spray				
24	135-5326	1	Hose-Spray				
25	135-5327	1	Hose-Spray, Wrapped				
26	135-5325	1	Hose-Spray, Wrapped				
27	135-5890	12	Clamp-Oetiker, 167				

● Not illustrated

■ Not serviced separately


Left Tank Assembly

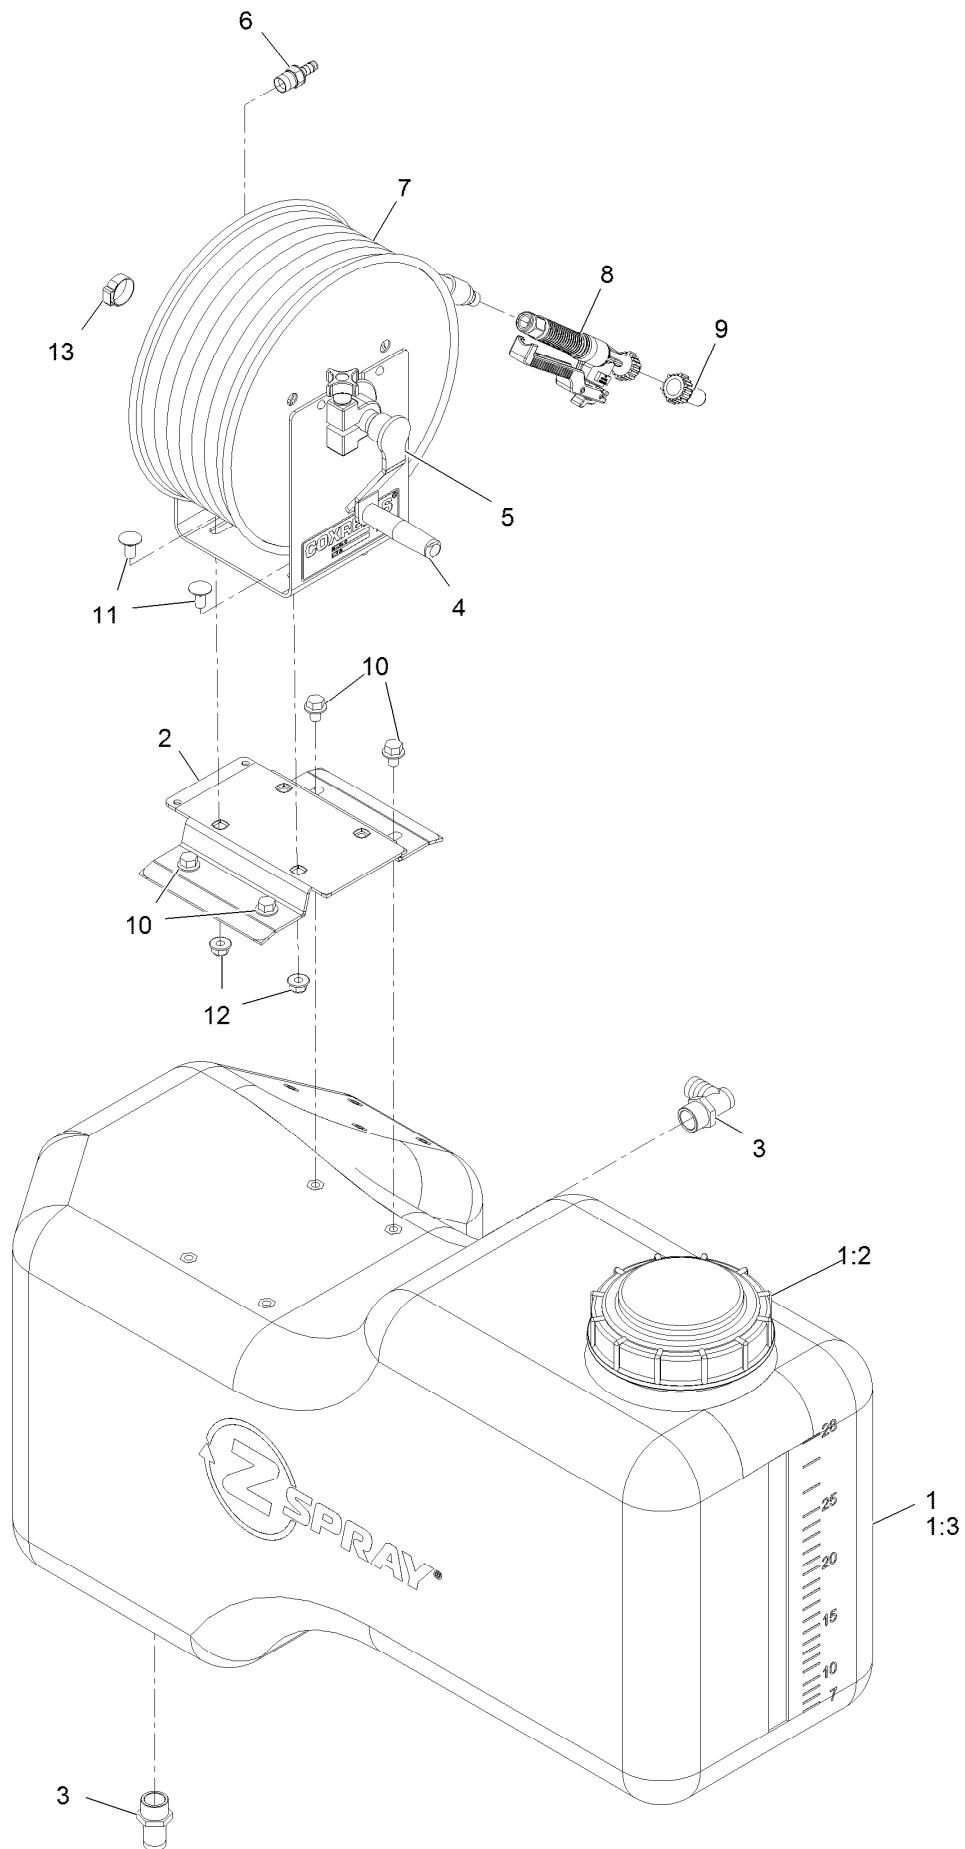

Left Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-3059	1	ASM-Tank, Lt	8	135-5773	1	Gun-Spray, Spot
1:2	135-5916	1	Cap-Tank, Spray	9	135-5778	1	Tip-Spray, #12 Spot
1:3	126-4393	2	Fitting-Bulkhead	10	135-7096	4	Screw-HHF 3/8-16 X 1/2 SS
2	135-5497	1	Mount-Reel, Hose	11	135-6271	4	Bolt-Carriage 3/8-16 X 3/4 SS
3	135-5772	2	Fitting-Elbow, 90	12	135-6110	4	Nut-Hex Flg 3/8-16 SS W/Patch SS
4	135-5787	1	Reel-Hose	13	135-5757	1	Clamp-Oetiker, 167
5	135-6011	1	Crank-Reel				
6	1-513200	2	Fitting,Male				
7	135-5794	1	Hose-Spray, 75'				


Manifold Assembly

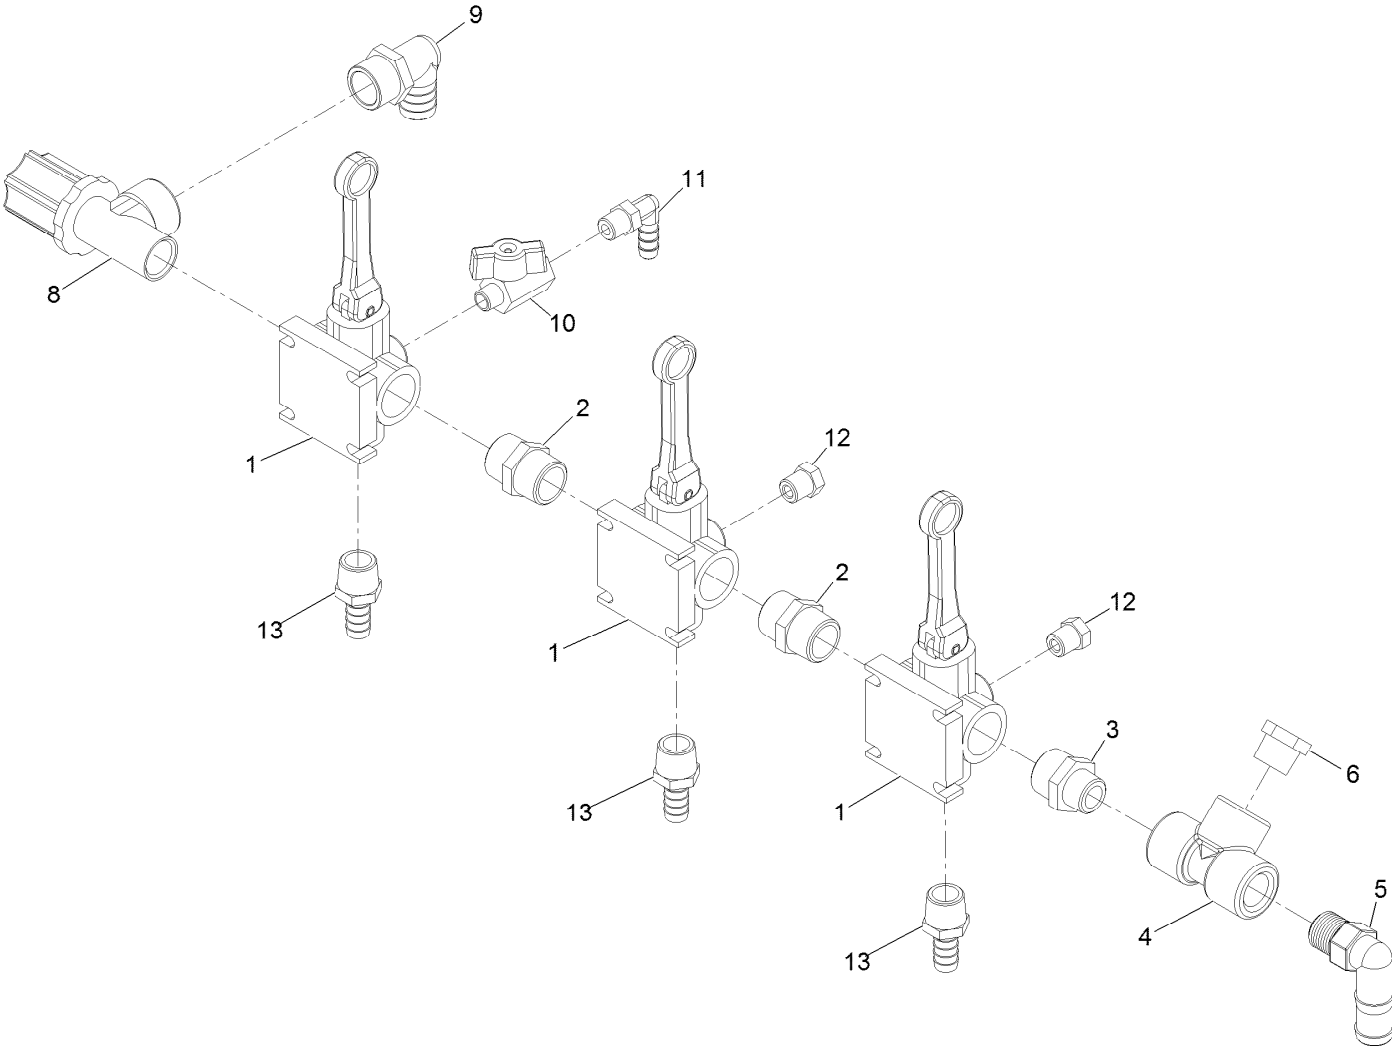

Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5721	3	Valve-Directo	8	135-5736	1	Valve-Throttle
2	135-5741	2	Fitting-Nipple	9	135-5772	1	Fitting-Elbow, 90
3	135-5742	1	Fitting-Nipple	10	135-5737	1	Valve-Chrome, 1/4
4	94-7100	1	Tee	11	135-5745	1	Fitting-Elbow, 90
5	92-8557	1	Elbow-90	12	135-5735	2	Plug-Valve
6	135-5743	1	Fitting-Reducer	13	120-8671	3	Fitting-Hosebarb


Spray Boom Assembly

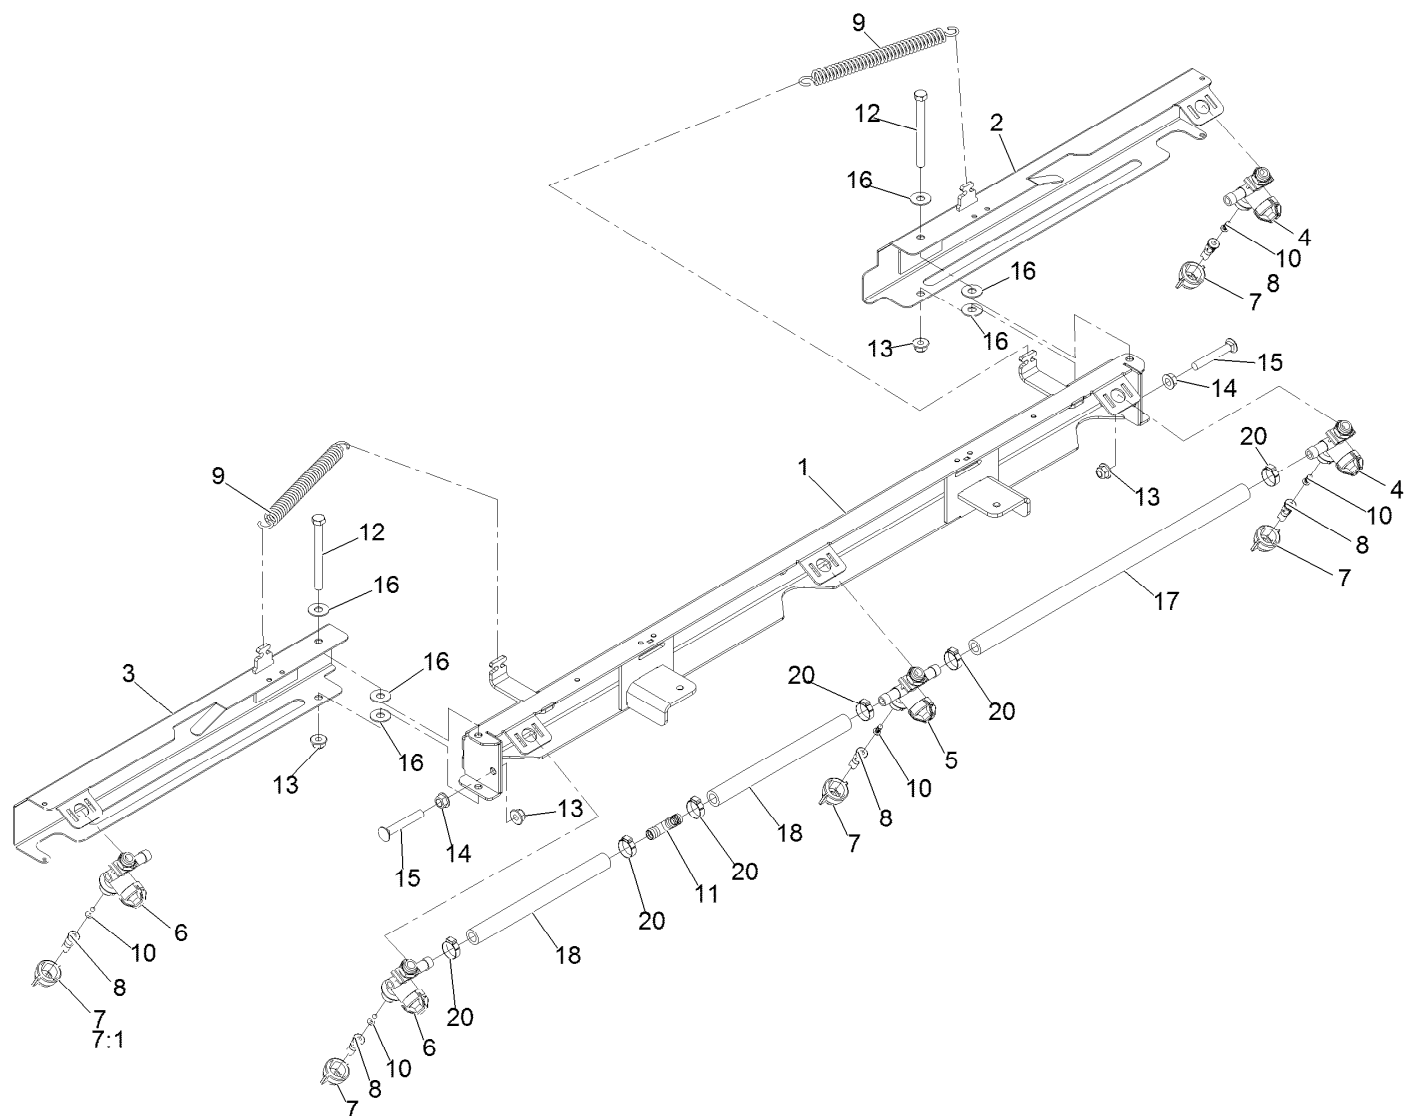

Spray Boom Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5409	1	Boom-Center	11	138-2751	1	Fitting-Tee, Barb
2	135-5415	1	Boom-Wing, Rt	12	135-6310	2	Screw-HH
3	135-5419	1	Boom-Wing, Lt	13	135-6110	4	Nut-Hex Flange
4	135-5790	2	Body-Nozzle, Right	14	135-6806	2	Nut-Hex Flange
5	135-5789	1	Body-Nozzle, Center	15	126-0702	2	Screw-CARR
6	135-5788	2	Body-Nozzle, Left	16	1126	6	Washer-Flat
7	135-5781	5	Cap-Nozzle	17	135-7106	1	Hose-Spray
7:1	40998	1	Seat-Gasket	18	135-7105	2	Hose-Spray
8	142-3308	5	Tip-Spray, 025	20	135-5692	6	Clamp-Oetiker, 167
9	135-5780	2	Spring-Extension				
10	126-3943	5	Strainer-Nozzle, 50M 5PSI Check				


Reel Hose Assembly

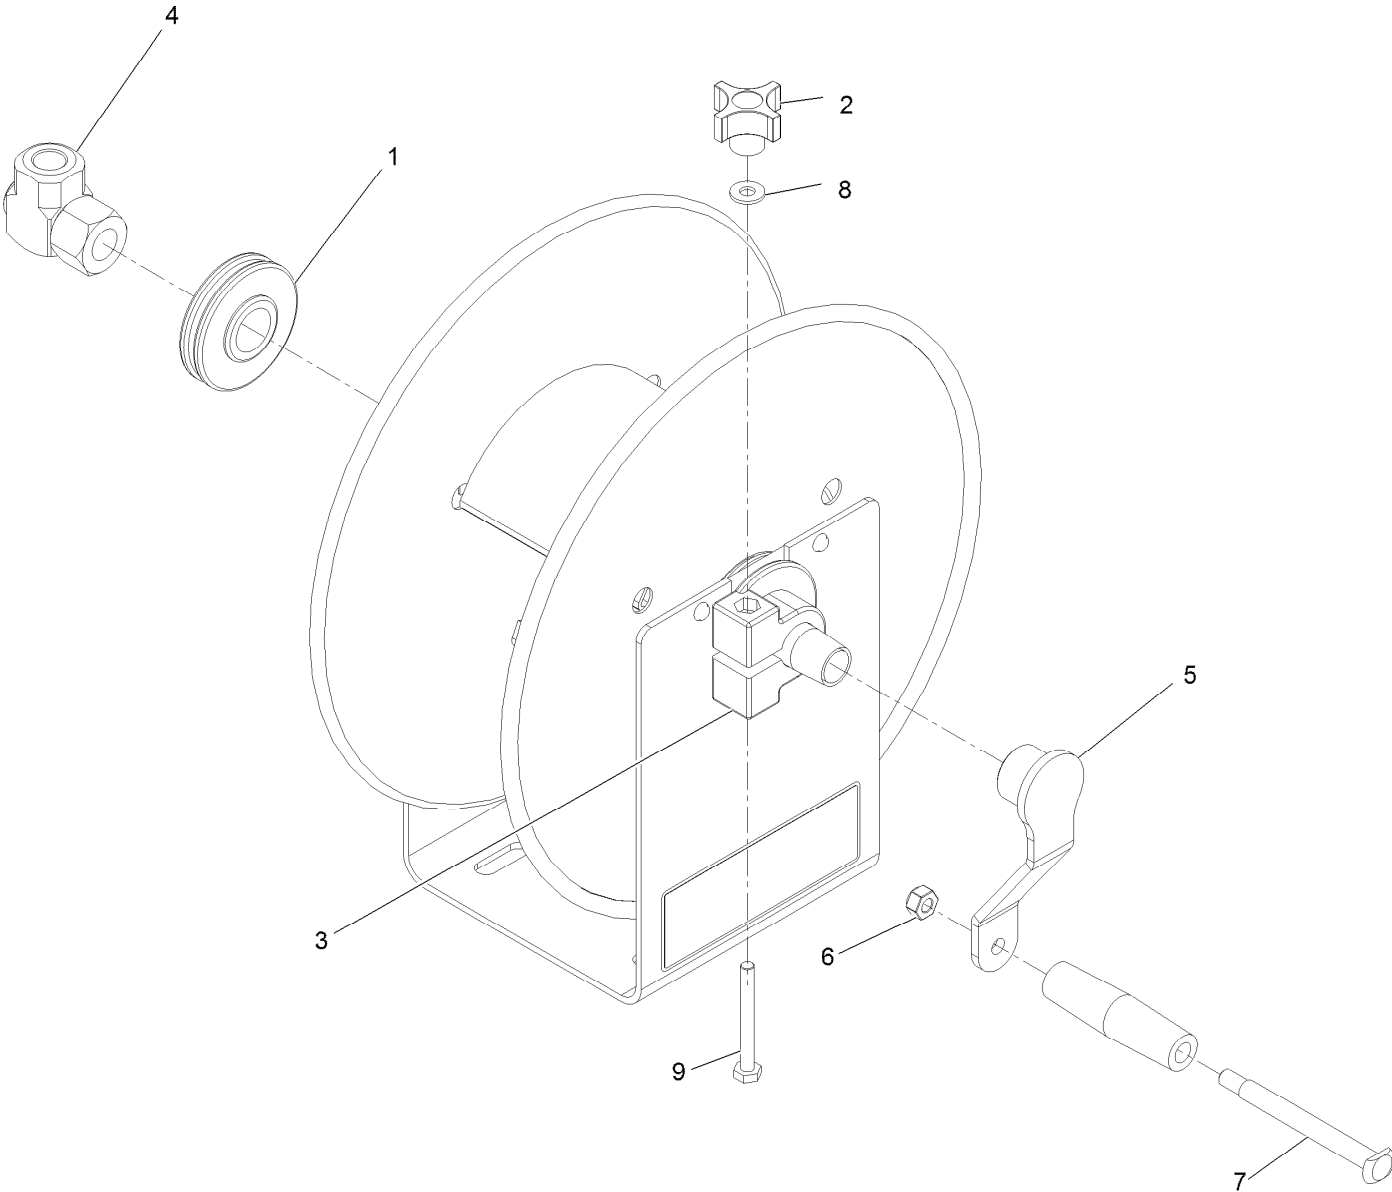

Reel Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-8439	1	Plastic Bearing	6	119-4038	1	Nut-Hex Nyloc 5/16-18
2	135-8437	1	Hose Reel Brake Knob	7	135-8436	1	Bolt, Hose Reel Handle
3	135-8438	1	Brake/Bearing 6329-1-1	8	120-9679	1	Washer-Flat
4	135-8421	1	Swivel 3/8" Npt	9	321-18	1	Screw-HH 1/4-20 X 2 1/4
5	135-6011	1	Crank-Reel				


Liquid Valve Assembly

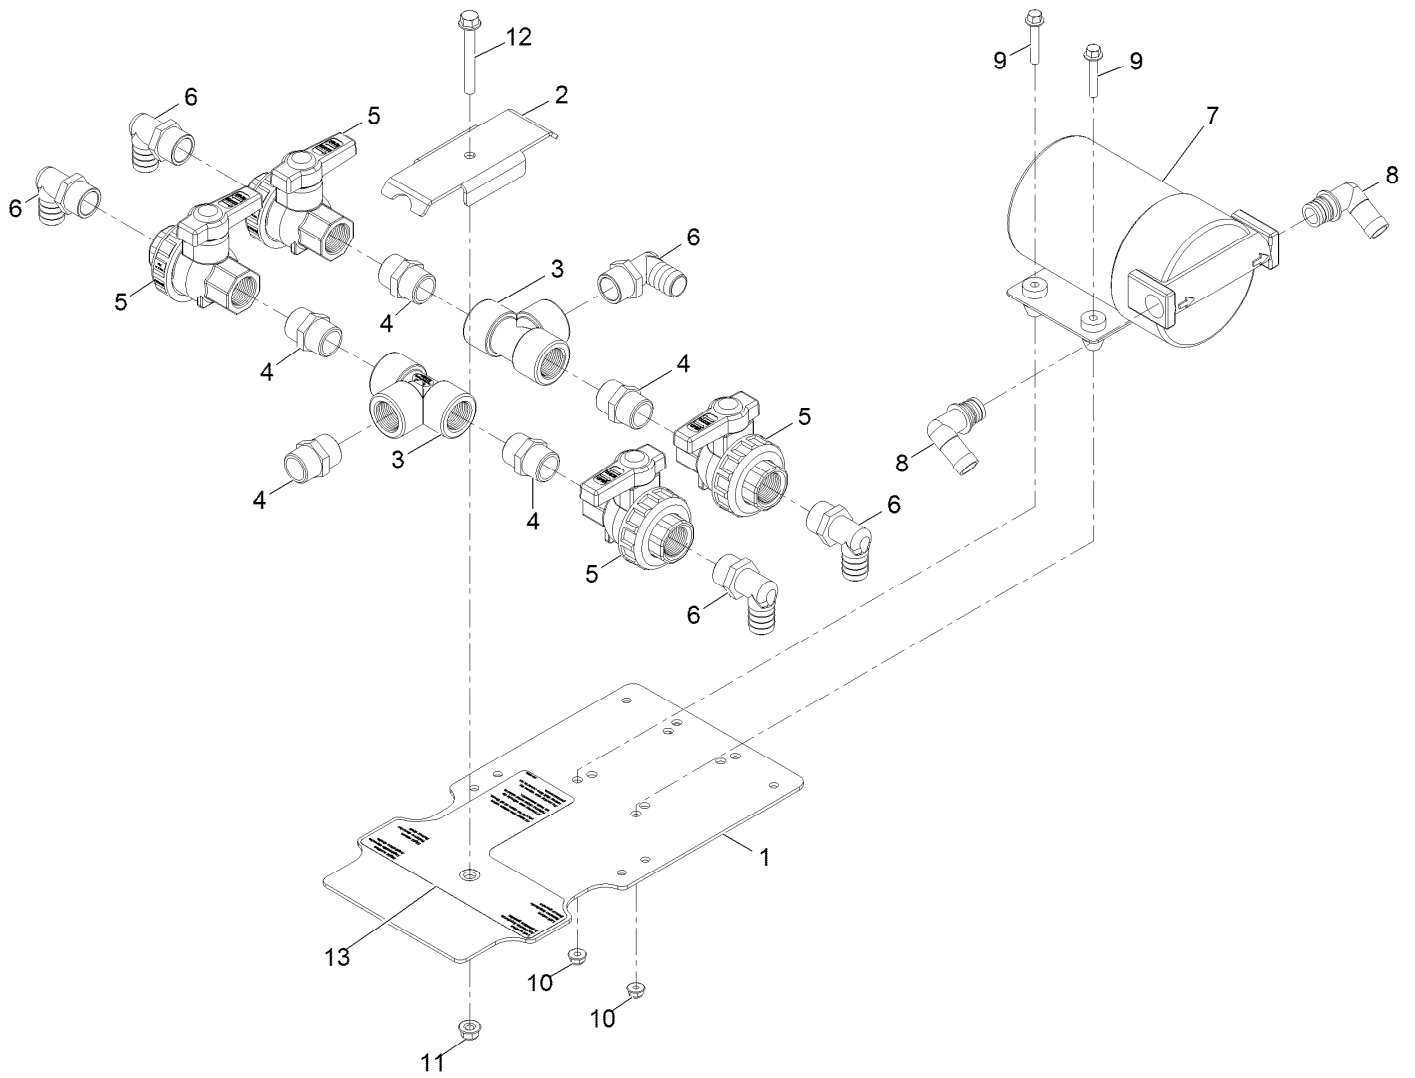

Liquid Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5491	1	Mount-Plate, Liquid Valve	9	135-6320	4	Screw-HHF 1/4-20 X 1 1/2
2	135-5504	1	Plate-Clamp, Liquid Valve				Serrated SS
			Fittings	10	135-6108	4	Nut-Hex Flg 1/4-20 Nyloc
3	135-6004	2	Fitting-Tee				SS
4	135-5741	5	Fitting-Nipple	11	135-6109	1	Nut-Hex Flg 5/16-18 Nyloc
5	135-6002	4	Valve-Union, 3/4				SS
6	135-5772	5	Fitting-Elbow, 90	12	135-6323	1	Screw-HHF 5/16-18 X 2 1/2
7	135-8324	1	7.0 Remco Pump				Serrated SS
8	135-6003	2	Fitting-Elbow, 3/4Qd X	13	135-6420	1	Decal-Valve, Tank
			3/4Barb				


Fuel Assembly

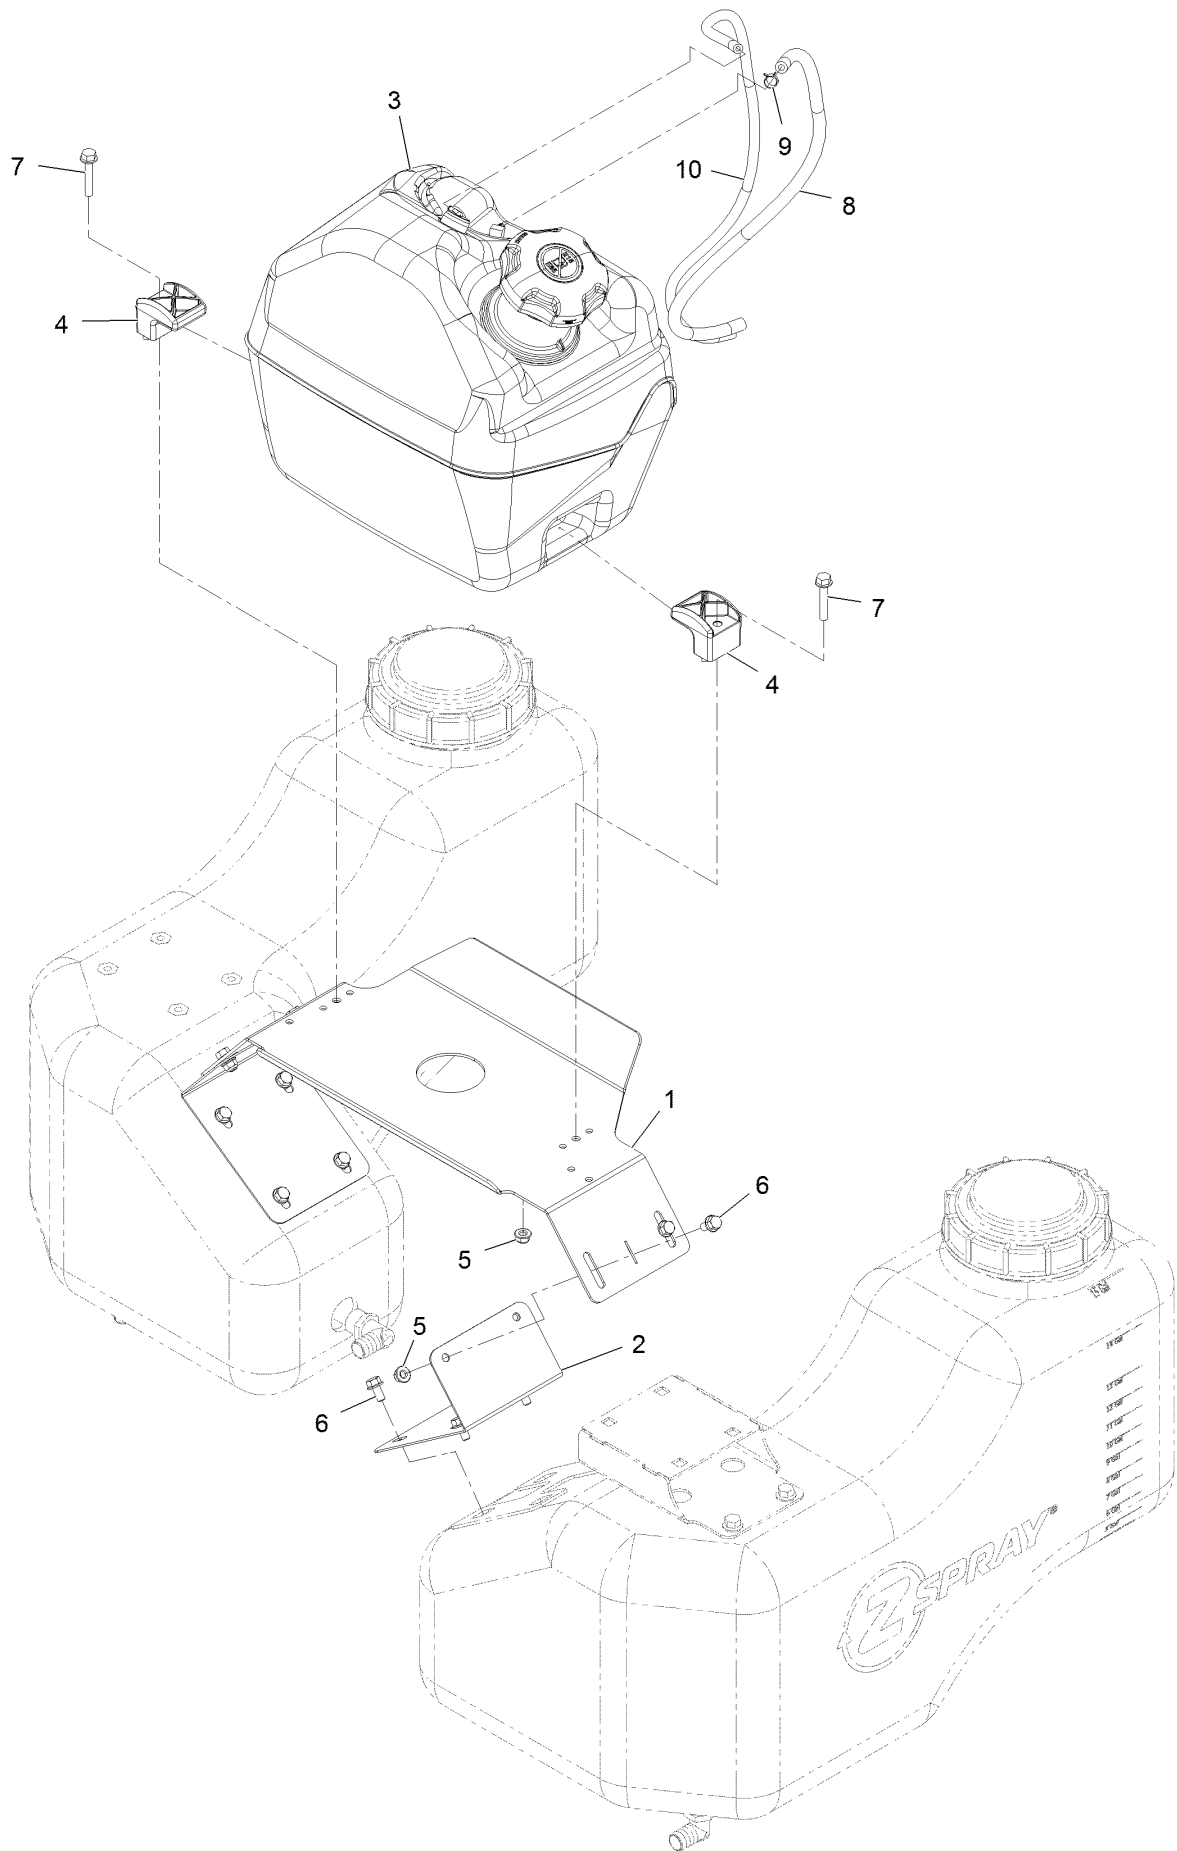

Fuel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2975	1	Support-Fuel Tank	7	135-5779	2	Screw-HHF 5/16-18 X 1 3/4
2	135-5555	2	Bracket-Support, Gas Tank				Serrated SS
3	140-4343	1	Fuel Tank ASM, 5 Gal	8	109-1395	1	Hose-Fuel Line 27"
4	107-4543	2	Clamp	9	2412-98	1	Clamp-Hose
5	135-6109	6	Nut-Hex Flg 5/16-18 Nyloc SS	10	117-9569	1	Hose-Fuel
6	135-7086	12	Screw-HHF 5/16-18 X 5/8 Serrated SS				


Fuel Tank Assembly No. 140-4343

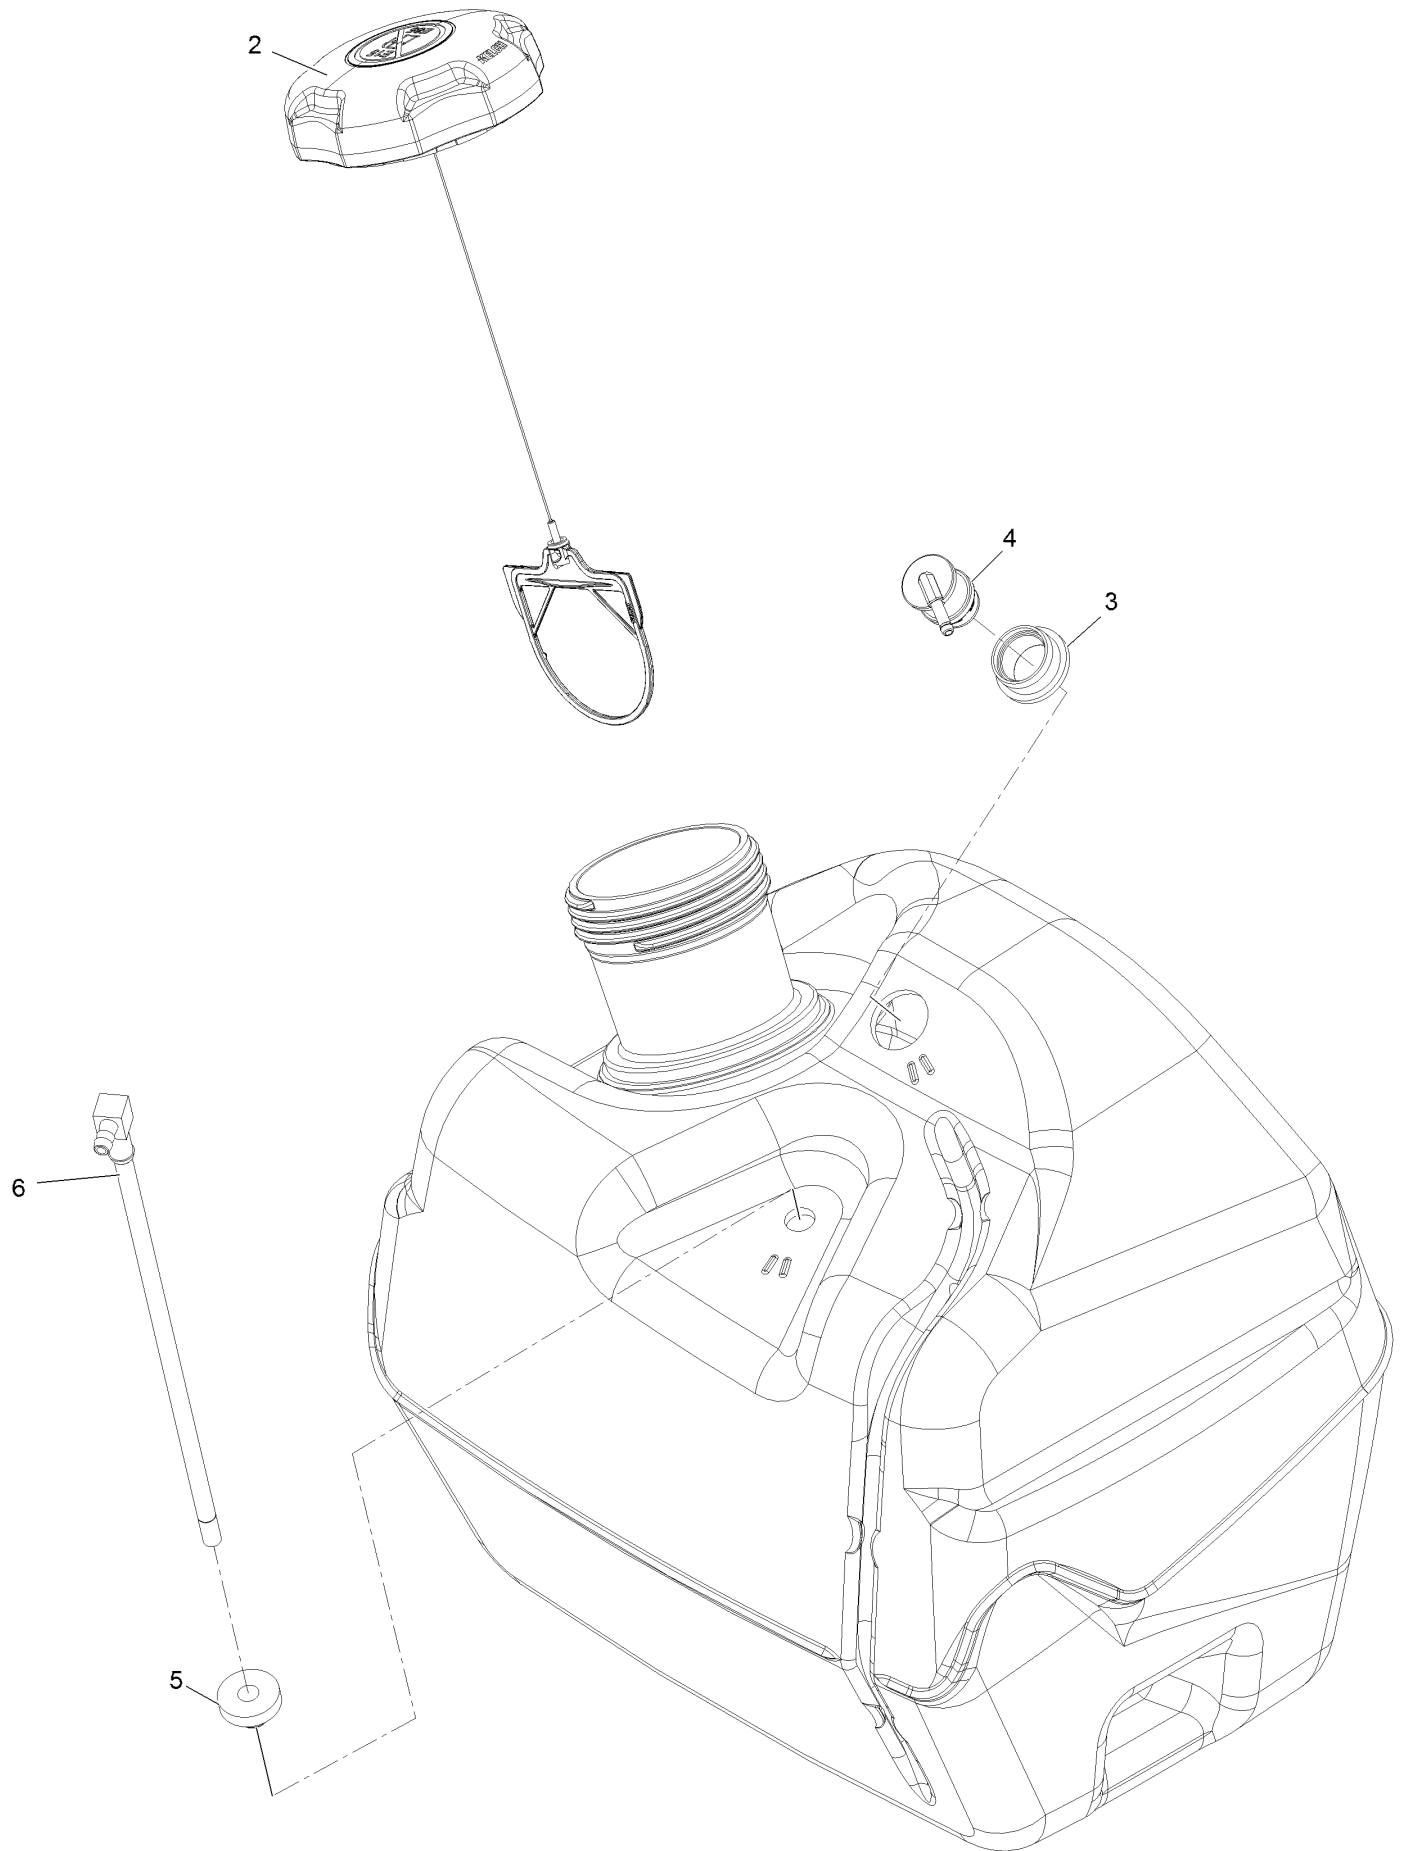

Fuel Tank Assembly No. 140-4343 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	137-4119	1	Cap-Fuel, Ratcheting	5	46-6560	1	Bushing
3	114-0284	1	Grommet	6	109-9364	1	Fitting-Fuel (W/Line And
4	119-3547	1	Valve-Vent, Fuel				Screen)


Engine Assembly

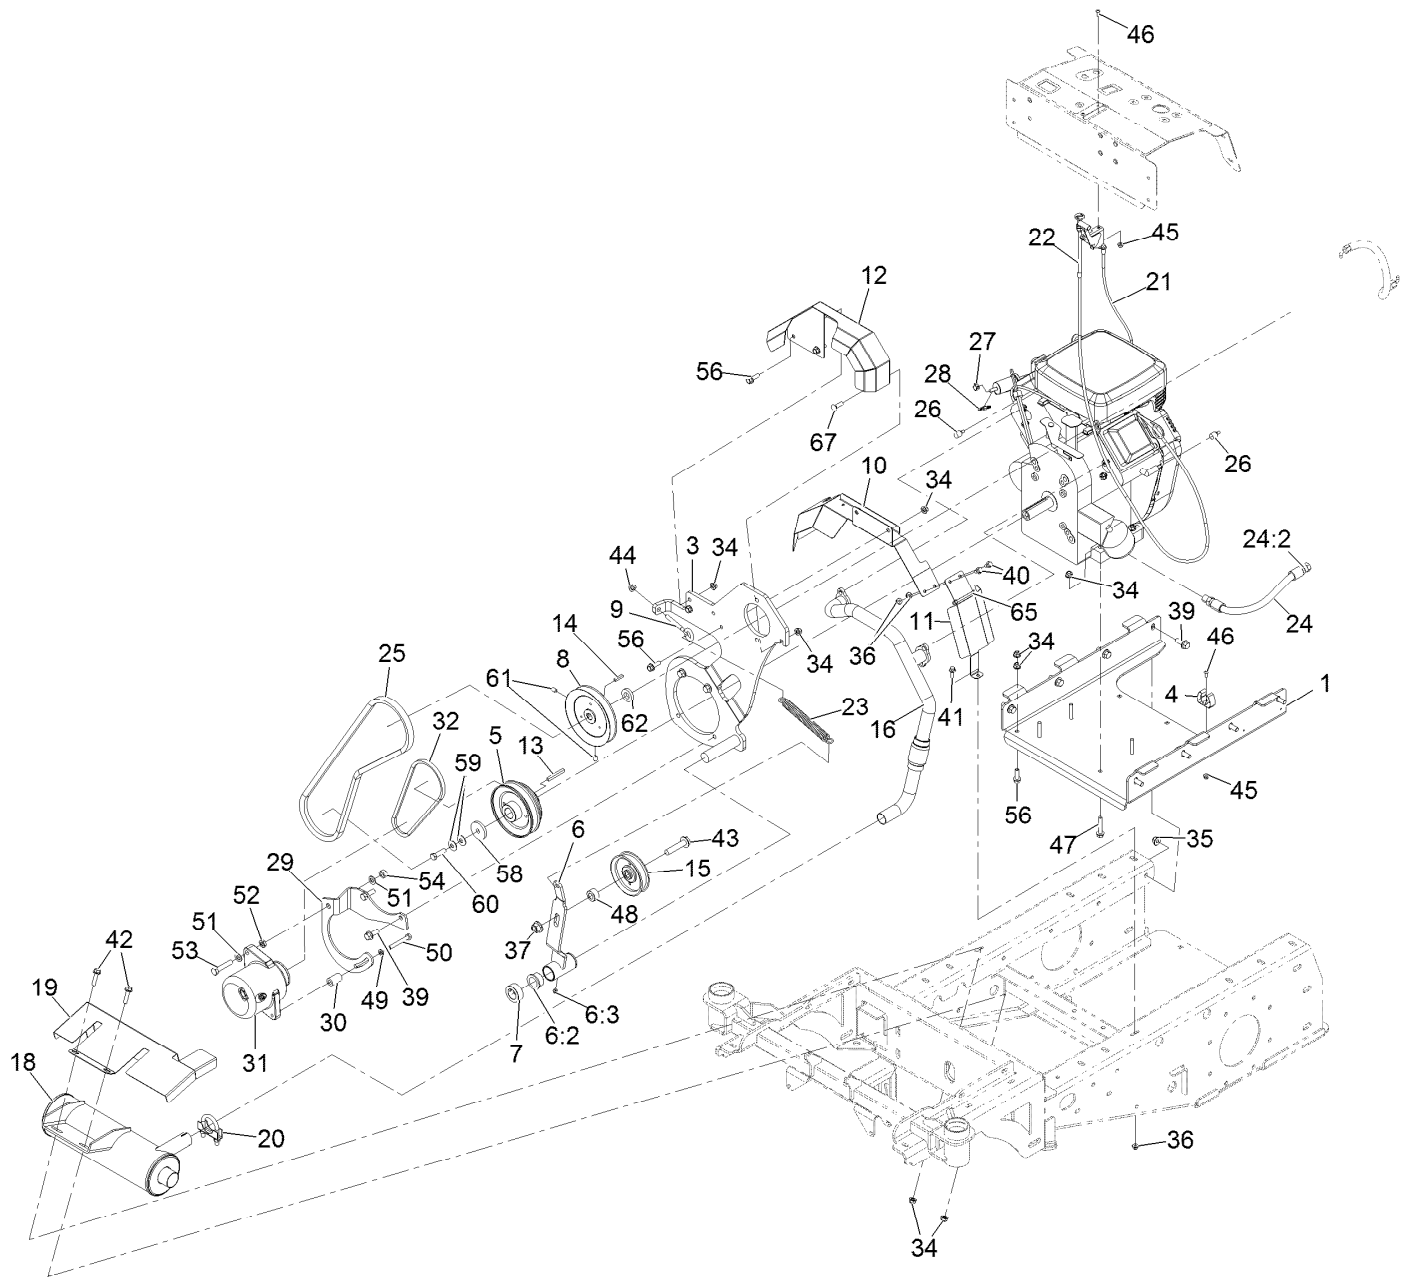

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5492	1	Tray-Engine	36	135-6108	3	Nut-Hex Flg 1/4-20 Nyloc SS
3	135-5453-03	1	Bracket-Engine, Pump	37	99-5107	1	Nut-Lock 1/2-13
4	135-5661	1	Holder-Tool, Clip	39	135-6208	12	Screw-HHF 3/8-16 X 1 Serrated SS
5	135-6394	1	Pulley-Double	40	135-6280	2	Screw-HHF 1/4-20 X 1/2 Serrated SS
6	135-5669	1	Tension Arm ASM	41	135-6221	1	Screw-HHF 1/4-20 X 3/4 Serrated SS
6:2	256-132	2	Bushing-Flange	42	135-6261	2	Screw-HHF 5/16-18 X 1 1/4 Serrated SS
6:3	302-63	1	Zerk	43	3234-46	1	Screw-HHF 1/2-13 X 2 1/4
7	135-5382	1	Collar	44	104-8300	1	Nut-Nyloc 5/16-18 Flg
8	135-5663	1	Pulley-Drive, Pump	45	135-6342	3	Nut-Hex Flg #10-24 Nyloc SS
9	135-5667	1	Bolt-Eye	46	135-6374	3	Screw-Button Head #10-24 X 1/2 SS
10	135-5565	1	Guard-Muffler, Lower	47	135-5779	4	Screw-HHF 5/16-18 X 1 3/4 Serrated SS
11	135-5566	1	Guard-Muffler, Lower	48	116-2959	1	Spacer
12	142-3320	1	Guard-Pulley	49	3253-4	1	Washer-Lock 5/16
13	103-4177	1	Key	50	120-9642	1	Screw-HH
14	1-807272	1	Key-5Mm X 5Mm X 25Mm	51	33095-00	2	Washer-Flat
15	135-5662	1	Pulley-Idler, Flat	52	110-9346	1	Nut-Jam M10 Thin
16	135-7089	1	Manifold-Exhaust	53	33115-050	1	Screw-HH M10-1.5 X 50Mm
18	135-7090	1	Muffler	54	33025-00	1	Nut-Lock, NI
19	135-5568	1	Shield-Heat, Muffler	56	135-6272	5	Screw-HHF 5/16-18 X 1 Serrated SS
20	2112-11	1	Clamp-Muffler	58	110-9981	1	Washer-Plain
21	135-5260	1	Cable-Throttle	59	3290-340	2	Washer-Belleville
22	135-5707	1	Cable-Choke	60	3211-5	1	Screw-HH 3/8-24 X 1 1/4
23	135-5780	1	Spring-Extension	61	3246-17	2	Screw-Set 5/16-24 X 1/2
24	135-5365	1	Oil Drain Hose ASM (W/Plug)	62	1-323539	1	Spacer-Blade Drive
24:2	AU218-774	1	Plug	65	3290-378	1	Tie-Cable
25	135-5664	1	Belt-V	67	HDW17294	1	Bolt-Carriage 5/16-18 X 1 SS
26	135-5677	2	Tube-Shrink, Heat				
27	2412-98	1	Clamp-Hose				
28	120-1996	1	Fitting-STR				
29	135-5929	1	Bracket-Alternator				
30	135-5930	1	Tube-Support, Alternator				
31	135-6057	1	Alternator				
32	135-6613	1	Belt-V, 3L240				
34	135-6109	13	Nut-Hex Flg 5/16-18 Nyloc SS				
35	135-6110	8	Nut-Hex Flg 3/8-16 SS W/Patch SS				

Hydraulic Assembly

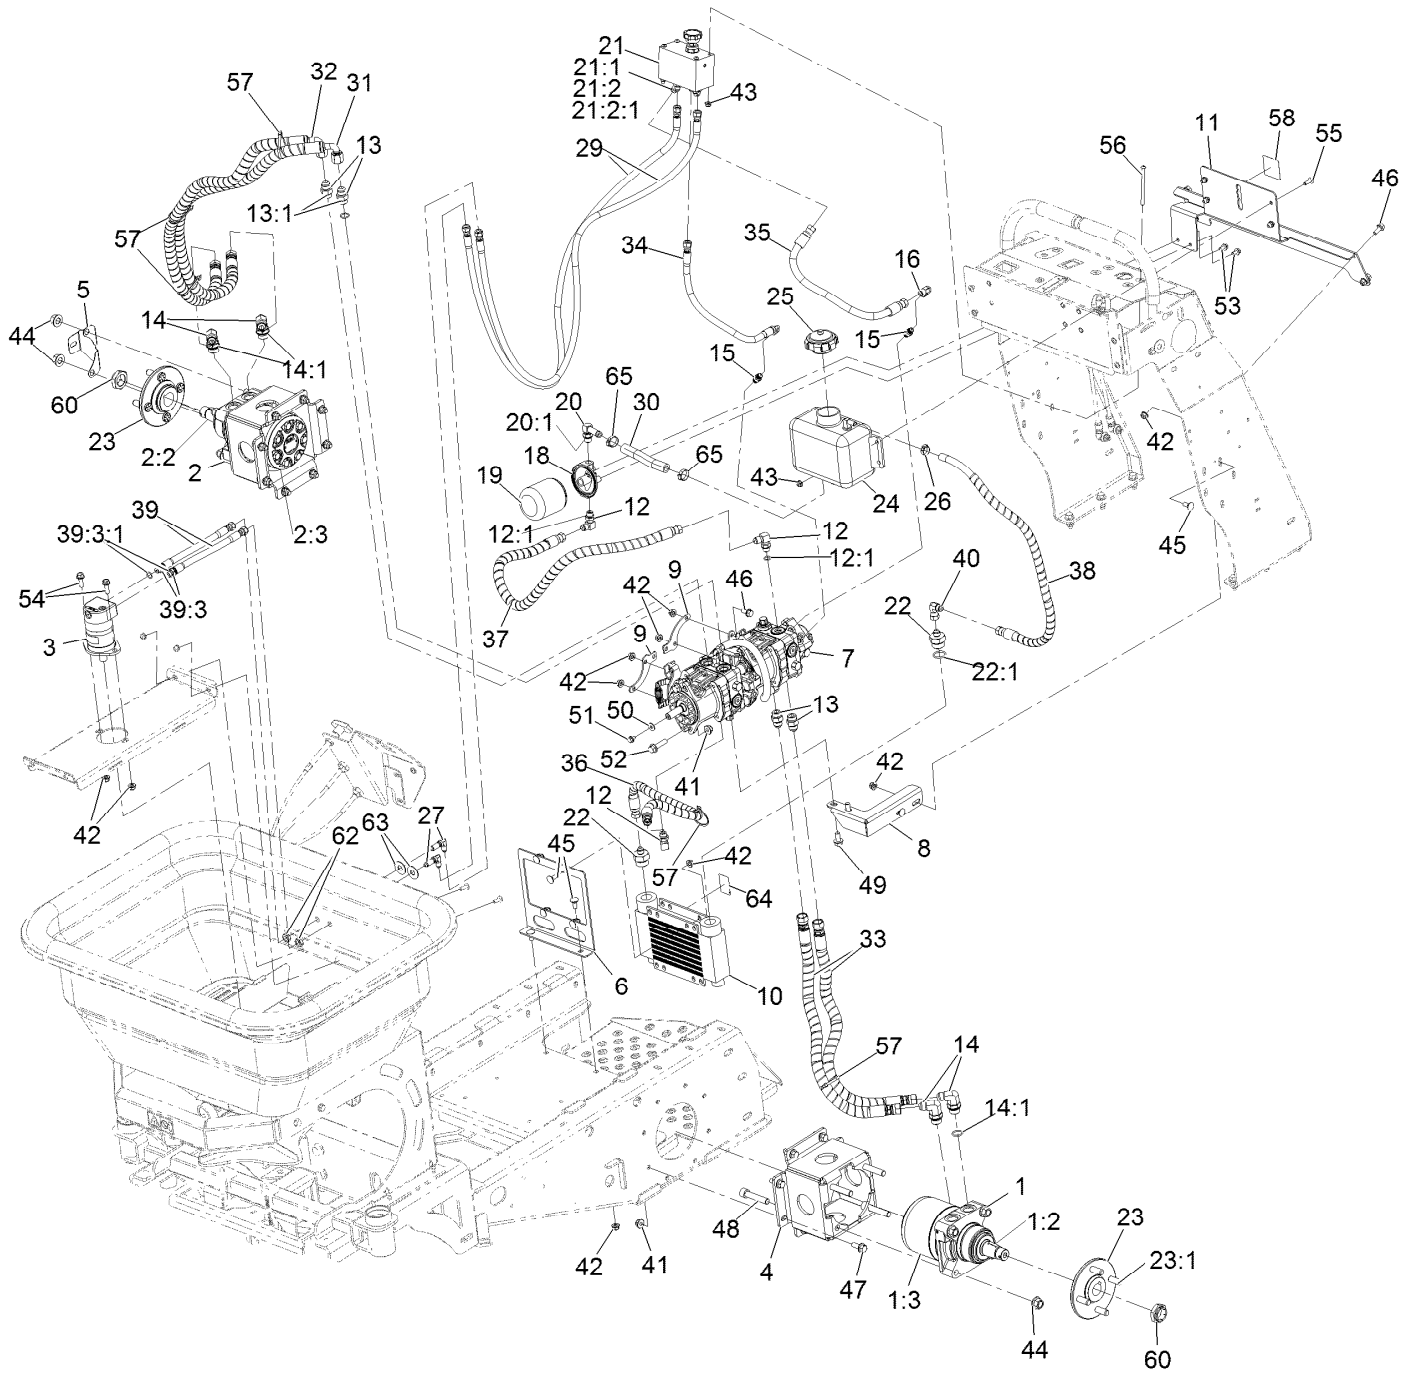


Hydraulic Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5230	1	Motor-Wheel, LH	32	142-3116	1	Hose ASM-HYD HP
1:2	3257-42	1	Key-Woodruff 5/16 X 1	33	142-3114	2	Hose ASM-HYD HP
1:3	103-6994	1	Seal Kit	34	142-3113	1	Hose ASM-HYD HP
2	135-5231	1	Motor-Wheel, RH	35	135-5361	1	Hose ASM, HYD LP
2:2	3257-42	1	Key-Woodruff 5/16 X 1	36	135-5384	1	Hose ASM, HYD LP
2:3	103-6994	1	Seal Kit	37	135-5385	1	Hose ASM, HYD LP
3	135-5243	1	Motor-Hydraulic, Spreader	38	135-5456	1	Hose ASM, HYD LP
4	135-5448-03	2	Mount-Motor, Wheel [black]	39	142-3112	2	Hose ASM-HYD HP
5	135-5574	1	Bracket-Hopper, Speedometer Sensor	39:3		1	Fitting-Straight, Rigid ●
6	135-6483	1	Mount-Cooler	39:3:1	237-42	1	O-Ring
7	135-5665	1	Pump-Tandem	40	AU218-980	1	Fitting-Swivel, 90 DEG
8	135-5551	1	Bracket-Support, Hydro Pump	41	135-6110	18	Nut-Hex Flg 3/8-16 SS W/Patch SS
9	135-5558	2	Extension-Pump, Hydro	42	135-6109	18	Nut-Hex Flg 5/16-18 Nyloc SS
10	135-5679	1	Cooler-Oil	43	135-6108	8	Nut-Hex Flg 1/4-20 Nyloc SS
11	135-5550	1	Mount-Tank And Filter, Hydraulic	44	99-5107	8	Nut-Lock 1/2-13
12	103-1802	3	Fitting-Elbow, 90 DEG	45	126-0695	8	Screw-Carriage 5/16-18 X 3/4 SS
12:1	237-42	1	O-Ring	46	126-2712	8	Screw-HHF 5/16-18 X 3/4 Serrated SS
13	353-388	4	Fitting-Straight	47	135-6208	16	Screw-HHF 3/8-16 X 1 Serrated SS
13:1	237-79	1	O-Ring	48	3274-71	8	Screw-HSH 1/2-13 X 2 1/2
14	353-426	4	Fitting-90 DEG	49	135-6274	2	Screw-HHF 3/8-16 X 3/4 SS
14:1	237-80	1	O-Ring	50	135-6273	1	Washer
15	353-545	2	Fitting-Straight	51	81-1280	1	Screw-HHF M6-1 X 10Mm
16	135-5680	1	Fitting-Swivel, 90 DEG	52	135-6278	2	Screw-HHF 3/8-16 X 1 1/2 Serrated SS
18	104-7836	1	Filter-Head	53	135-6280	2	Screw-HHF 1/4-20 X 1/2 Serrated SS
19	109-4180	1	Element, Oil Filter	54	135-6272	2	Screw-HHF 5/16-18 X 1 Serrated SS
20	109-6449	1	Fitting-Elbow, 90	55	135-7080	4	Screw-Button Head Flange 1/4-20 X 3/4 SS
20:1	237-42	1	O-Ring	56	135-6385	4	Screw-Button Head 1/4-20 X 3 1/2 SS
21	142-4324	1	Manifold-Flow Control, Hopper	57	3290-378	6	Tie-Cable
21:1	01-201-0780	3	HYD Fitting 6400-4-6	58	135-6398	1	Decal-Oil
21:2	353-212	1	Fitting-Elbow, 45 DEG	60	116-1399	2	Locknut
21:2:1	237-42	1	O-Ring	62	3220-4	2	Nut-Jam
22	AU218-5044	2	Adapter-Straight	63	135-5586	2	Washer
22:1	237-81	1	O-Ring	64	106-5517	1	Decal-Warning
23	135-7525	2	Hub-Wheel	65	135-5692	2	Clamp-Oetiker, 167
23:1	135-7526	4	Stud-1/2-20 X 1.55				
24	135-5712	1	Tank-Hydraulic, Plastic				
25	135-5713	1	Cap-Vented				
26	135-5757	1	Clamp-Oetiker, 167				
27	135-5796	2	Fitting-Elbow, 90				
29	142-3111	2	Hose ASM, HYD HP				
30	109-5577	1	Hose-Hydraulic				
31	142-3115	1	Hose ASM-HYD HP				

● Not serviced separately

Electrical Assembly

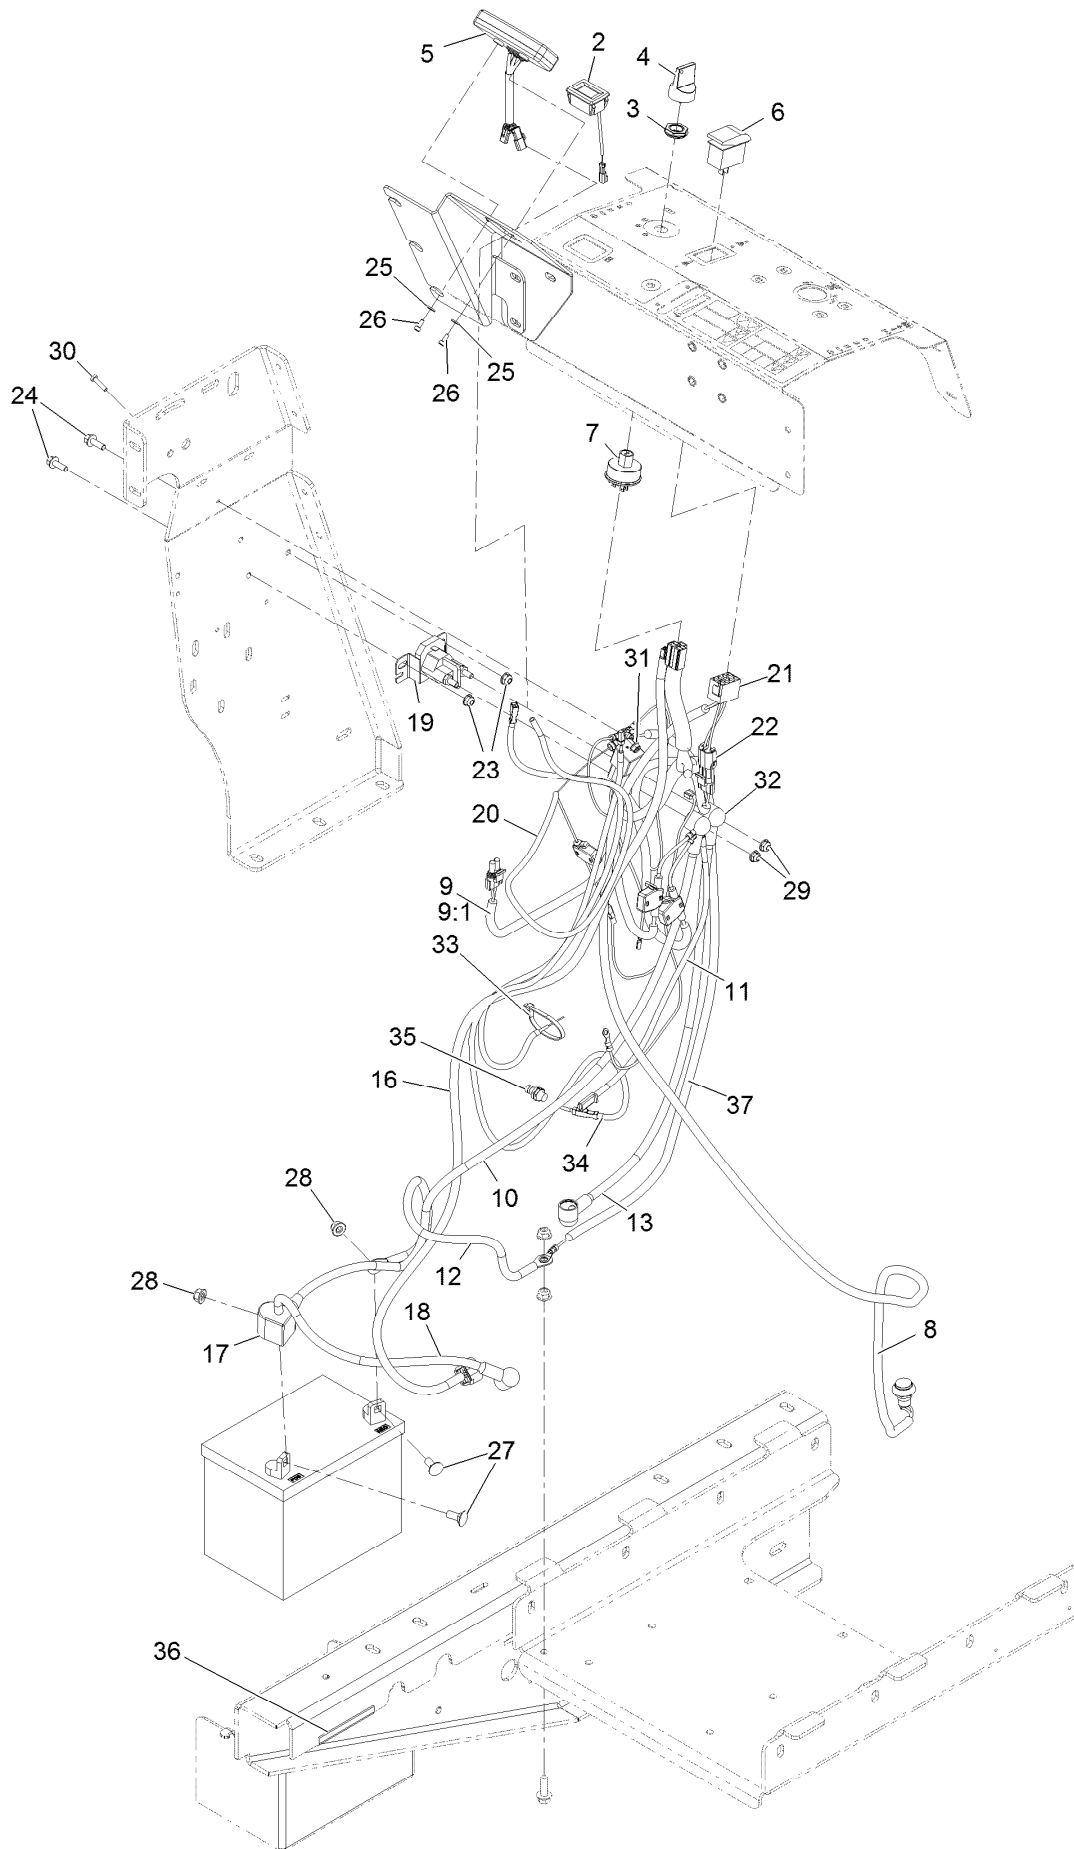

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	135-5259	1	Meter-Tach/Hour	24	135-6221	2	Screw-HHF 1/4-20 X 3/4
3	135-5715	1	Nut-Switch, Key				Serrated SS
4	1-603511	1	Key-Ignition	25	126-0759	2	Washer-Flat
4	135-5708	1	Key-Umbrella	26	135-6357	2	Screw-HSH M4-0.7 X 10Mm
5	135-8900	1	Striker-Head Only	27	126-0695	2	Screw-Carriage 5/16-18 X
6	100-8469	1	Switch-Rocker				3/4 SS
7	135-6052	1	Switch-Ignition	28	135-6109	2	Nut-Hex Flg 5/16-18 Nyloc
8	135-6054	1	Switch-Push Button				SS
9	135-6113	1	Harness-Main	29	104-7201	2	Nut-Nyloc 1/4-20 Flg
9:1	135-6270	1	Relay-Mini ISO Pwr, 5M	30	135-6356	1	Screw-HH #10-24 X 3/4 SS
10	135-6114	1	Cable-Positive	31	135-6342	1	Nut-Hex Flg #10-24 Nyloc
11	135-6115	1	Wire-Solenoid				SS
12	135-6116	1	Cable-Ground	32	1-543393	4	Insulator-Solenoid
13	135-6117	1	Cable-Positive	33	3290-378	11	Tie-Cable
16	135-6120	1	Harness, Alternator	34	135-8898	1	Cable-Sensor, Trail Tech
17	135-2304	1	Insulator-Battery	35	135-8903	1	Magnet-Speedometer
18	135-6119	1	Cable-Positive	36	135-7557	1	Strip-Trim, 3.5"
19	135-6189	1	Solenoid-Starter	37	135-3998	1	Harness-Wire, Jumper
20	135-6443	1	Harness-Striker	99	135-7317	1	Manual-User, Striker ●
21	32160-008	1	Connector-Carling, 8F	99	135-7318	1	Card-Striker, Quick Start ●
22	32160-072	1	Connector-Wp,2M				
23	135-6108	2	Nut-Hex Flg 1/4-20 Nyloc				
			SS				

● Not illustrated



Z Turf Equipment is part of the Exmark® family of products.
©2020 Exmark Mfg. Co., Inc. All Rights Reserved. Printed in the USA.
415 Industrial Row • Beatrice, NE 68310 • (402) 223-6375 • Fax (402) 223-5489

www.zturfequipment.com

