
RADIUS® E-SERIES

Model No. RAE720CKC48300—Serial No. 408644346 and Up

Picture below may not reflect actual product.

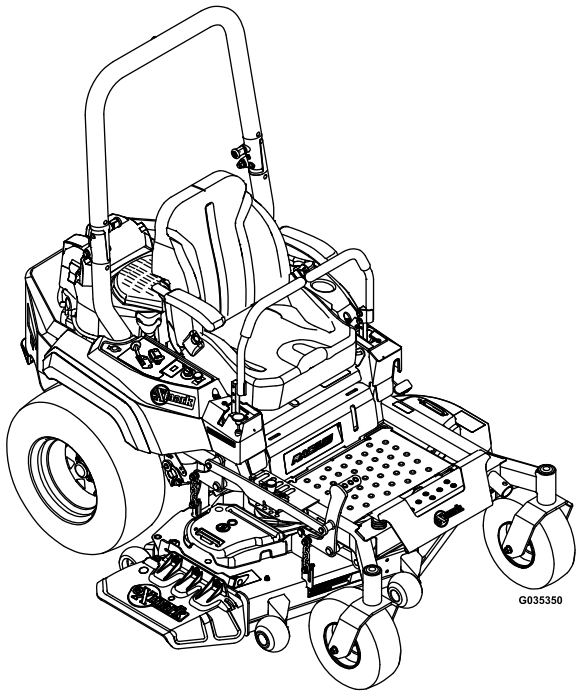

Parts Manual

Part No. 4505-152 Rev. A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

© 2020—Exmark Mfg. Co., Inc.
415 Industrial Row
Beatrice, NE 68310

Contact us at www.Exmark.com.
Printed in the USA.
All Rights Reserved




If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Complete Deck Assembly 4
Deck Assembly 6
Deck W/Decals Assembly 8
Idler Arm Assembly No. 126-0976 10
Main Frame Assembly 12
Roll-Over Protection System Assembly 14
Caster Tire Assembly 16
Caster Wheel Assembly 18
Deck Lift Assembly 20
Deck Strut Assembly 22
Controls Assembly 24
Motion Control Assembly 26
LH and RH Motion Control Assembly 28
Seat Assembly 30
Seat Assembly (cont) 32
Fuel Tank and Vent Hose System Assembly 34
Fuel Tank Assembly (cont.) 36
Engine Assembly 38
Rear Wheel Assembly 40
Transaxle Assembly 42
LH Transaxle Assembly 44
Right Transaxle Assembly 46
Electrical Assembly 48
Harness Assembly No. 126-5803 50


Complete Deck Assembly

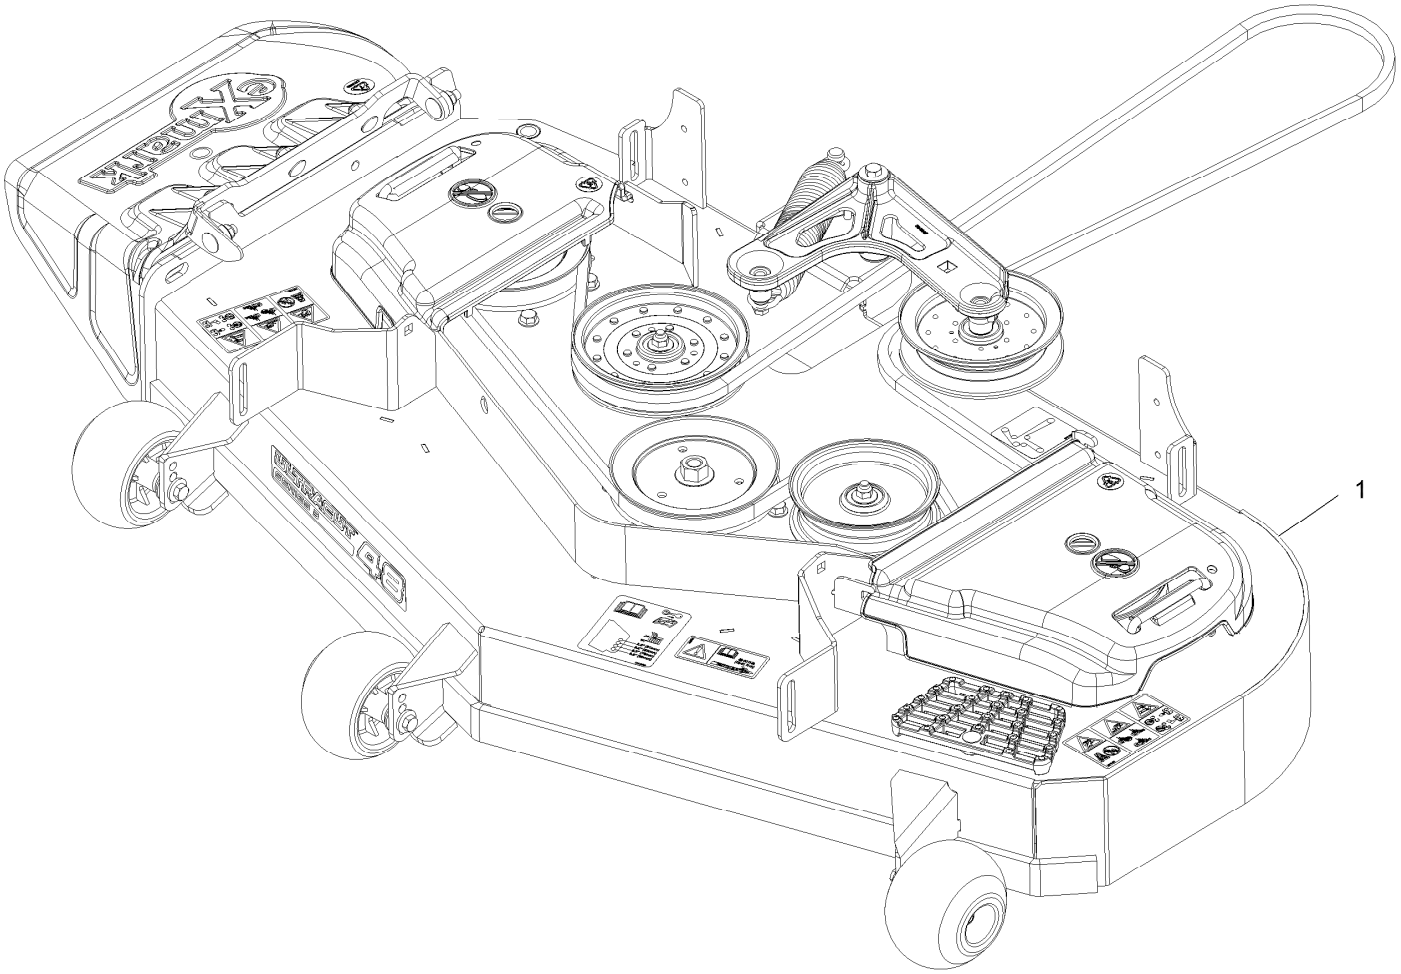

Complete Deck Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	126-8036	1	ASM-Deck Complete 483

Deck Assembly

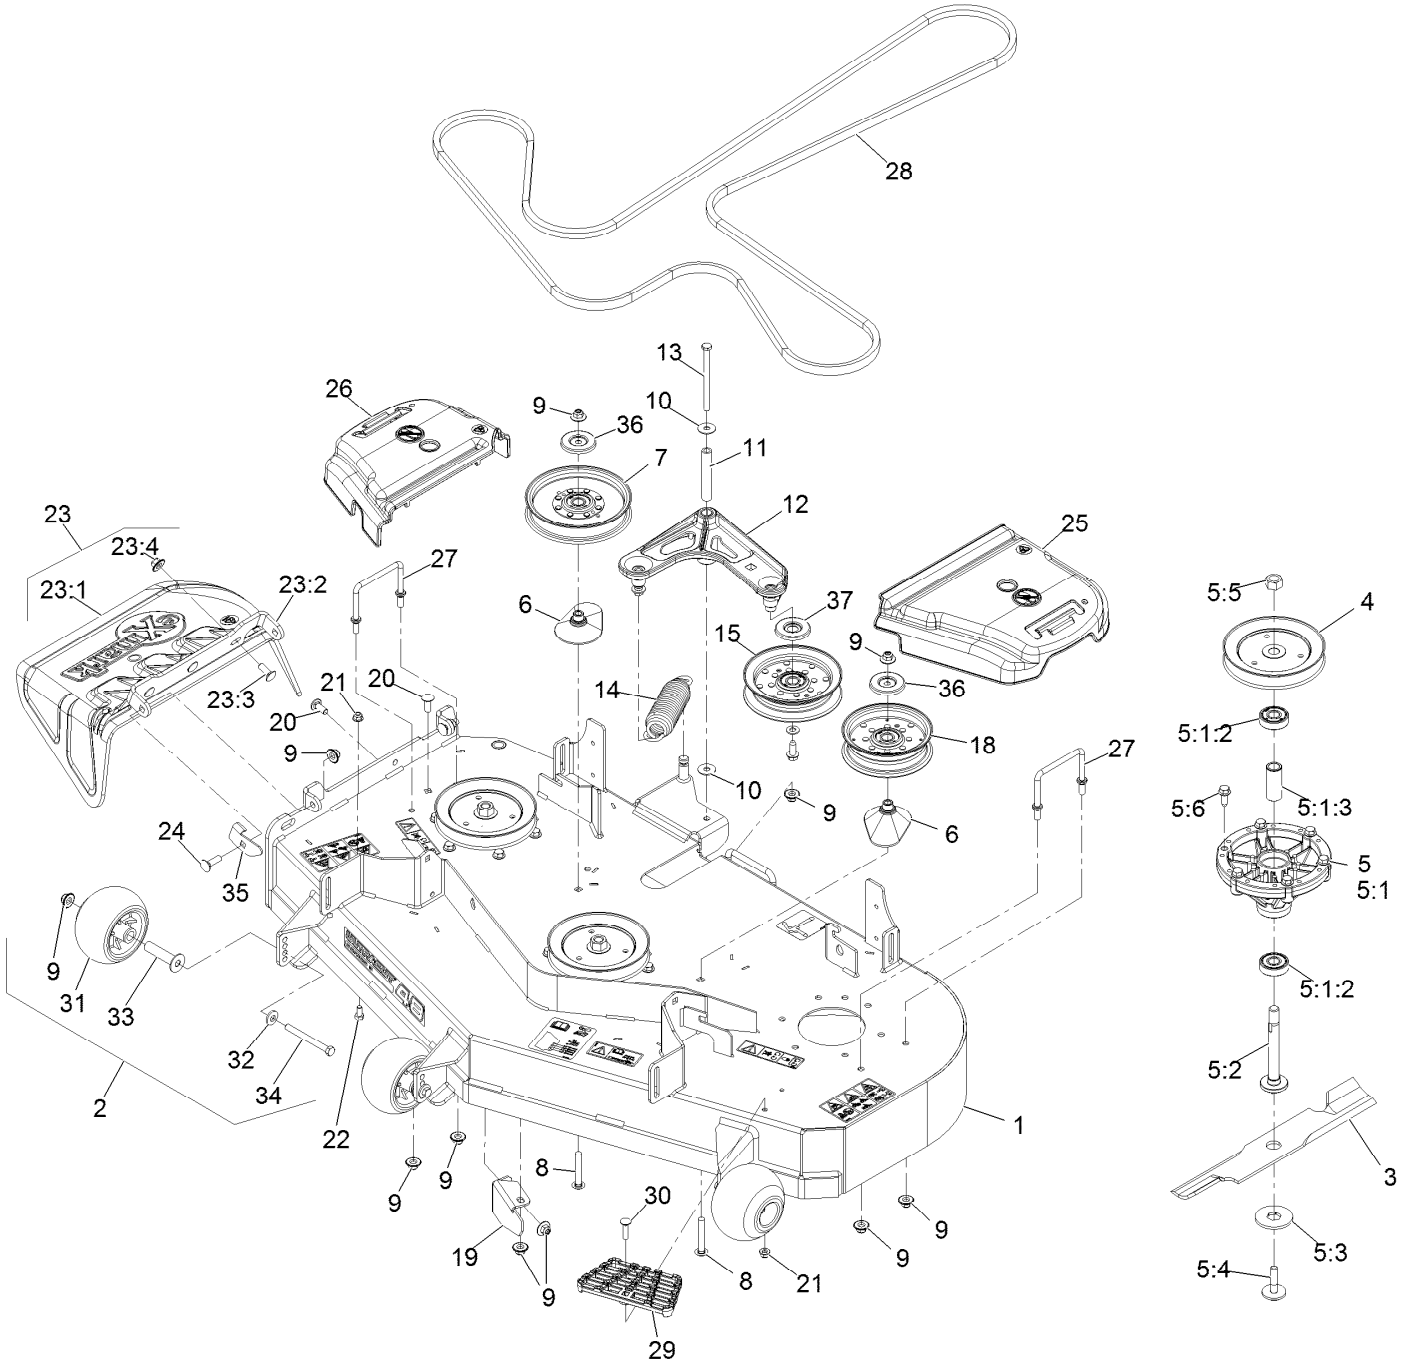

Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3575	1	ASM-Deck W/Decals 483
2	116-9981	3	Kit, Anti-Scalp Roller
3	103-6391	3	Blade, Mulching ◆
3	103-6386	3	Blade, Low Lift ●
3	103-6381	3	Blade, Solid ●
3	103-6401	3	Blade-Notched
3	116-5177	3	Blade-Extreme 2, 16.25" ●
4	116-5043	3	Sheave,Blade Drive 5.90
5	126-4630	3	ASM, Cutter Housing Complete
5:1	126-4627	1	ASM-Cutter Housing
5:1:2	116-4004	2	Bearing
5:1:3	116-4876	1	Spacer-Bearing
5:2	109-7431	1	Spindle-Hex Pilot ❑
5:3	126-4530	1	Washer-Hex Blade Drive
5:4	116-0005	1	Bolt-Blade, Sem ■ ❍
5:5	3219-6	1	Nut-Hex 5/8-18 ▲
5:6	126-1696	6	Screw-Forming, Thread
6	109-2872	2	Spacer-Pulley
7	126-9189	1	Idler-Pulley, Flat 6.00X1.00
8	3231-44	2	Bolt-Carriage 3/8-16 X 2 1/2
9	109-6658	14	Nut-Nyloc 3/8-16 Flg
10	52-2860	2	Washer
11	116-5111	1	Bushing
12	126-0976	1	Idler Arm ASM
13	323-38	1	Screw-HH 3/8-16 X 4 3/4
14	116-6317	1	Spring-Extension
15	126-9196	1	Idler-Pulley, Flat
18	126-9197	1	Idler-Pulley, Flat 5.00X1.31
19	116-0680-01	1	Baffle,Discharge 483
20	3231-22	2	Bolt-Carriage 3/8-16 X 1
21	104-8300	2	Nut-Nyloc 5/16-18 Flg
22	322-2	1	Screw-HH 5/16-18 X 5/8
23	109-7188	1	ASM,Discharge Chute
23:1	109-2738	1	Chute, Discharge
23:2	109-8675-01	1	Bracket,Discharge Chute
23:3	3231-22	3	Bolt-Carriage 3/8-16 X 1
23:4	109-6658	3	Nut-Nyloc 3/8-16 Flg
24	3231-25	2	Bolt-Carriage 3/8-16 X 1 1/4
25	109-6936	1	Cover-Belt, LH
26	109-6935	1	Cover-Belt, RH
27	109-6982	2	Wireform-Cover
28	126-6626	1	Belt-V
29	126-4781-03	1	Step-Deck
30	3230-3	1	Bolt-Carriage 5/16-18 X 1 1/4
31	103-8415	3	Roller-Anti-Scalp
32	98-5975	3	Washer-Spring Disc 3/8
33	116-8131	3	Axle, Roller
34	116-9362	3	Screw-HH 3/8-16 X 3 3/4 GR 8
35	135-0064	1	Stop-Discharge Chute
36	126-8043	2	Shield-Dust
37	126-9195	1	Shield-Guard, Dust

● Optional Equipment

■ Torque to 50-60 ft-lb


▲ Torque to 75-85 ft-lb

◆ Requires installation of mulch kit for proper mulching. See your Exmark dealer for details.

❑ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize) to spindle shaft

❍ Apply lubricant to threads as needed to prevent seizing. Copper based anti-seize preferable. Grease is an acceptable substitute.


Deck W/Decals Assembly

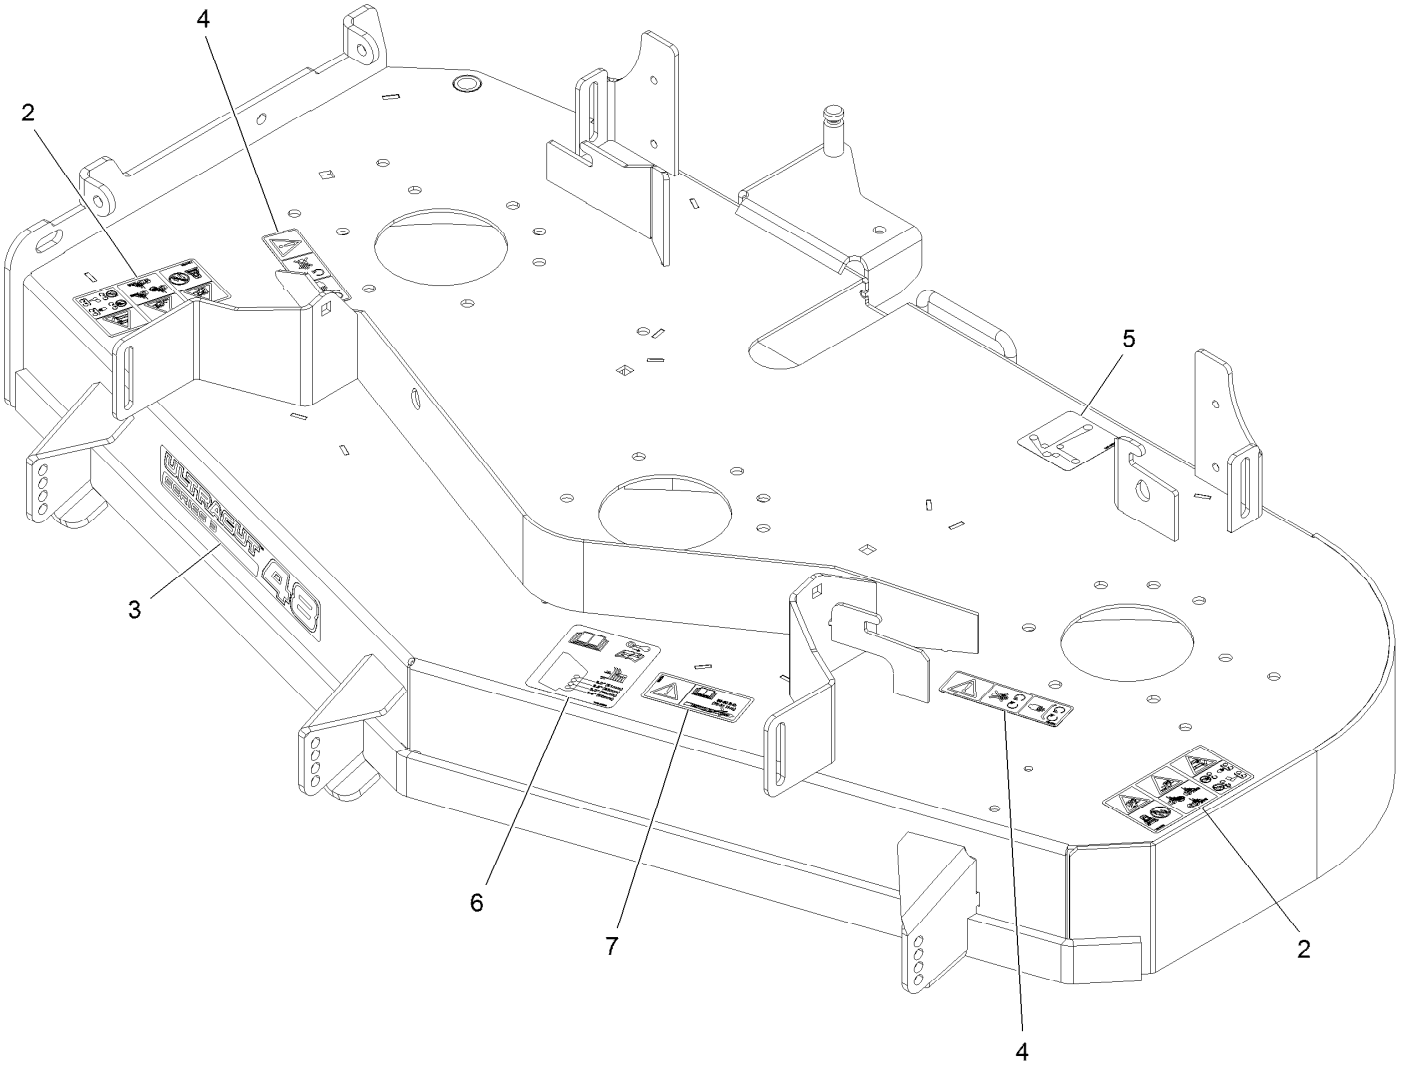

Deck W/Decals Assembly (continued)

Ref.	Part Number	Qty.	Description
2	126-6464	2	Decal-Danger Thrown Objects
3	126-6746	1	Decal-Ultracut 48 Series 3
4	112-9028	2	Decal-Cover, Missing
5	109-6035	1	Decal-Routing, Belt
6	109-6036	1	Decal-Roller, Anti-Scalp
7	116-8283	1	Decal-Torque, Bolt


Idler Arm Assembly No. 126-0976

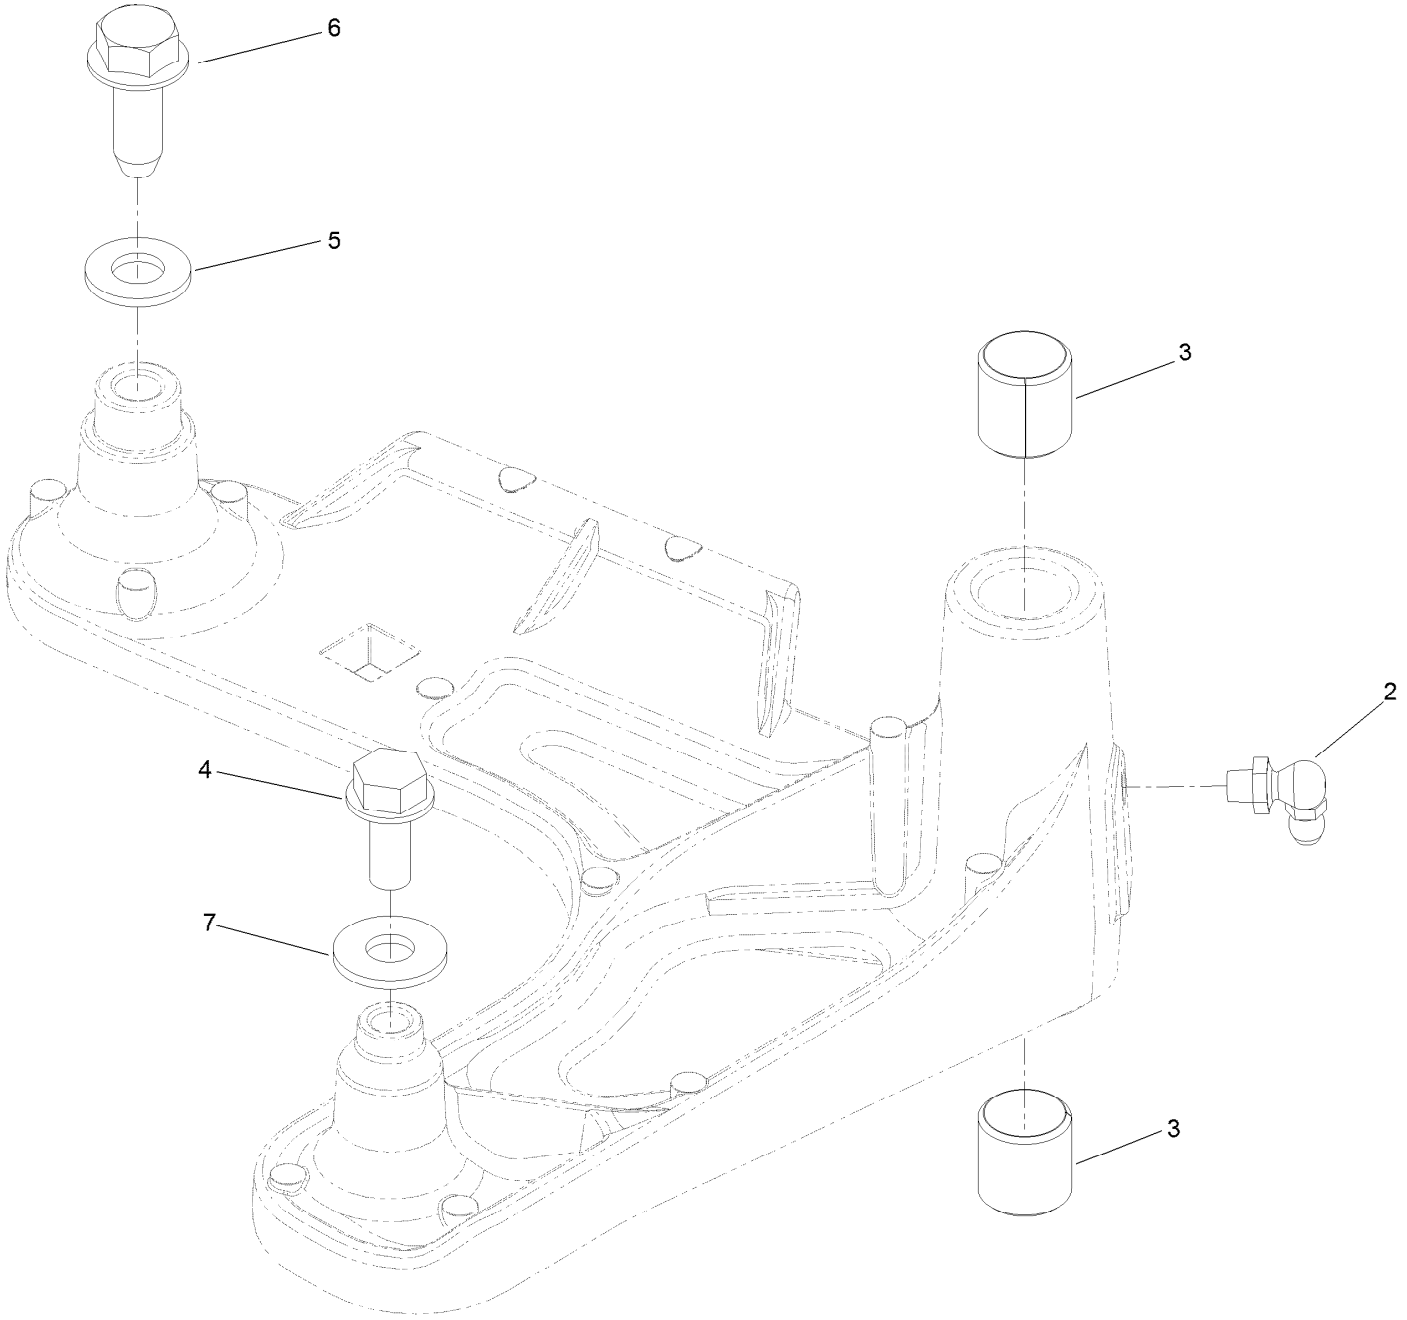

Idler Arm Assembly No. 126-0976 (continued)

Ref.	Part Number	Qty.	Description
2	302-40	1	Fitting-Grease, 90 DEG
3	1-513034	2	Sleeve-Bearing
4	32144-11	1	Screw-HWH
5	3256-24	1	Washer-Flat
6	126-1696	1	Screw-Forming, Thread
7	3256-3	1	Washer-Flat


Main Frame Assembly

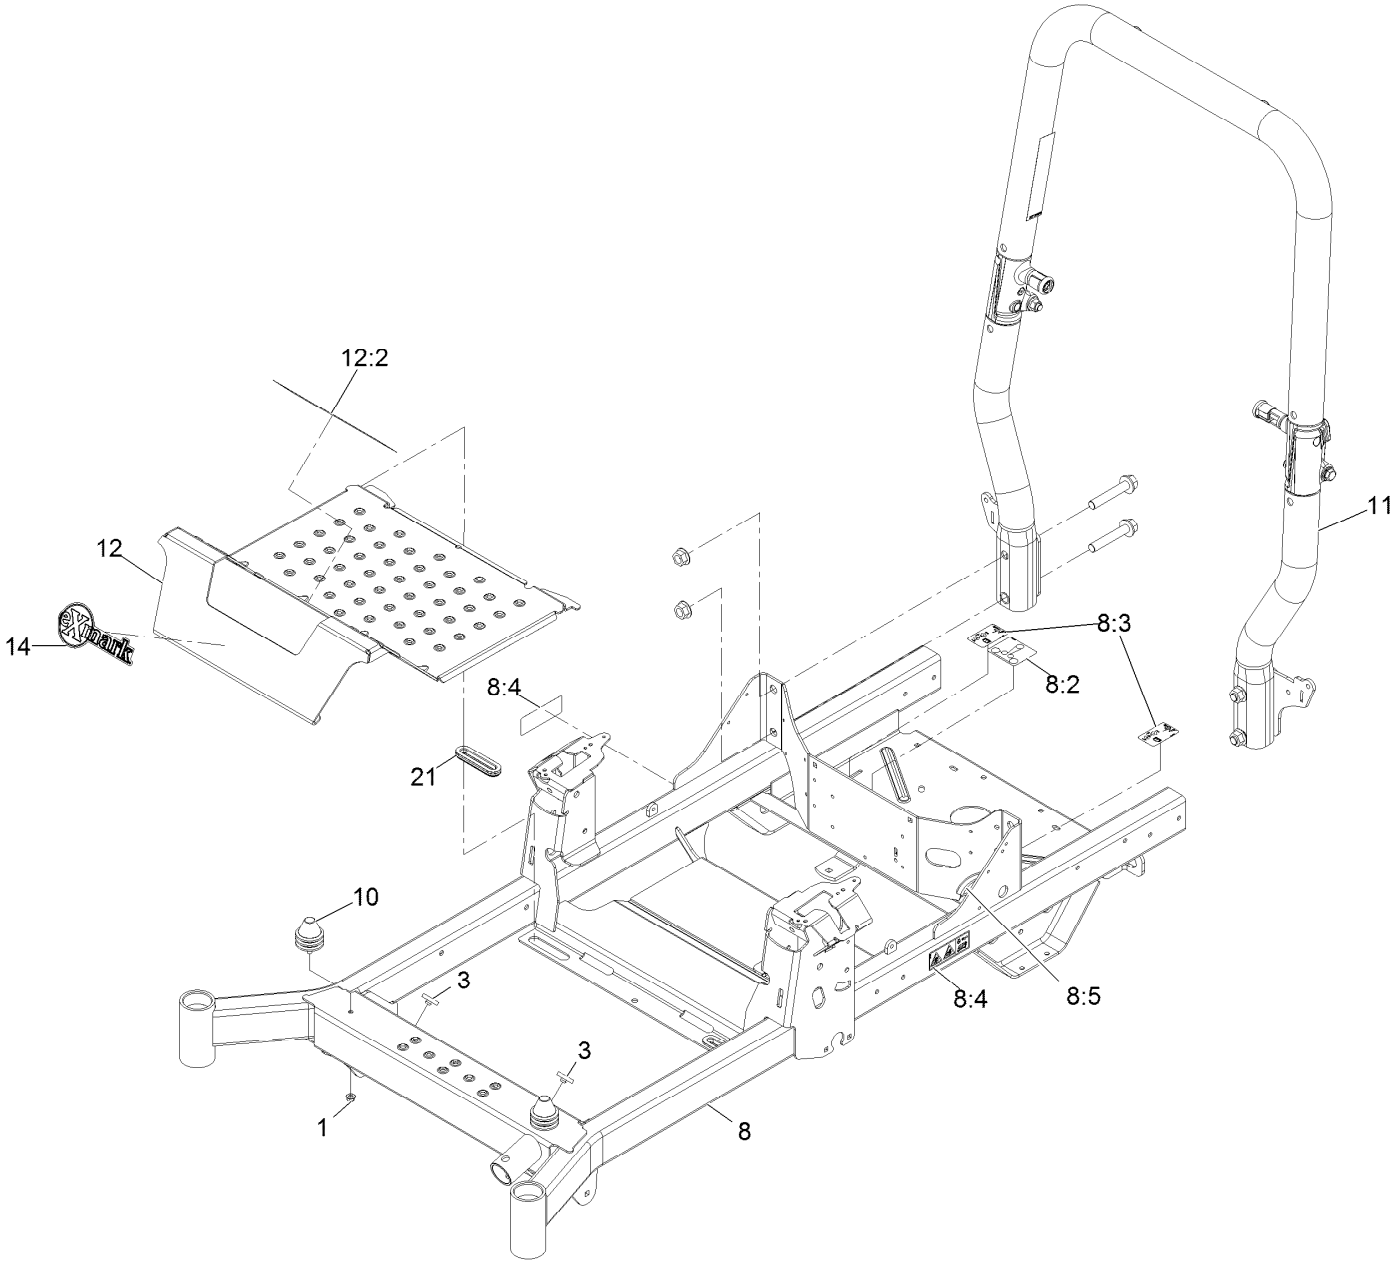

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8300	2	Nut-Nyloc 5/16-18 Flg
3	109-9233	2	Bumper-Push-In, Rubber
8	126-4699	1	Frame ASM
8:2	109-6014	1	Decal-Routing, Belt
8:3	116-8588	2	Decal-Release, Drive
8:4	126-4363	2	Decal-Warning
8:5	127-6618	1	Strip-Seal
10	126-5491	2	Isolator
11	126-9525	1	ASM-ROPS Tapered
12	126-5872	1	Pan-Floor
12:2	126-8383	1	Decal-Danger
14	126-8819	1	Decal-Exmark Logo
21	126-7065	2	Grommet-Rubber


Roll-Over Protection System Assembly

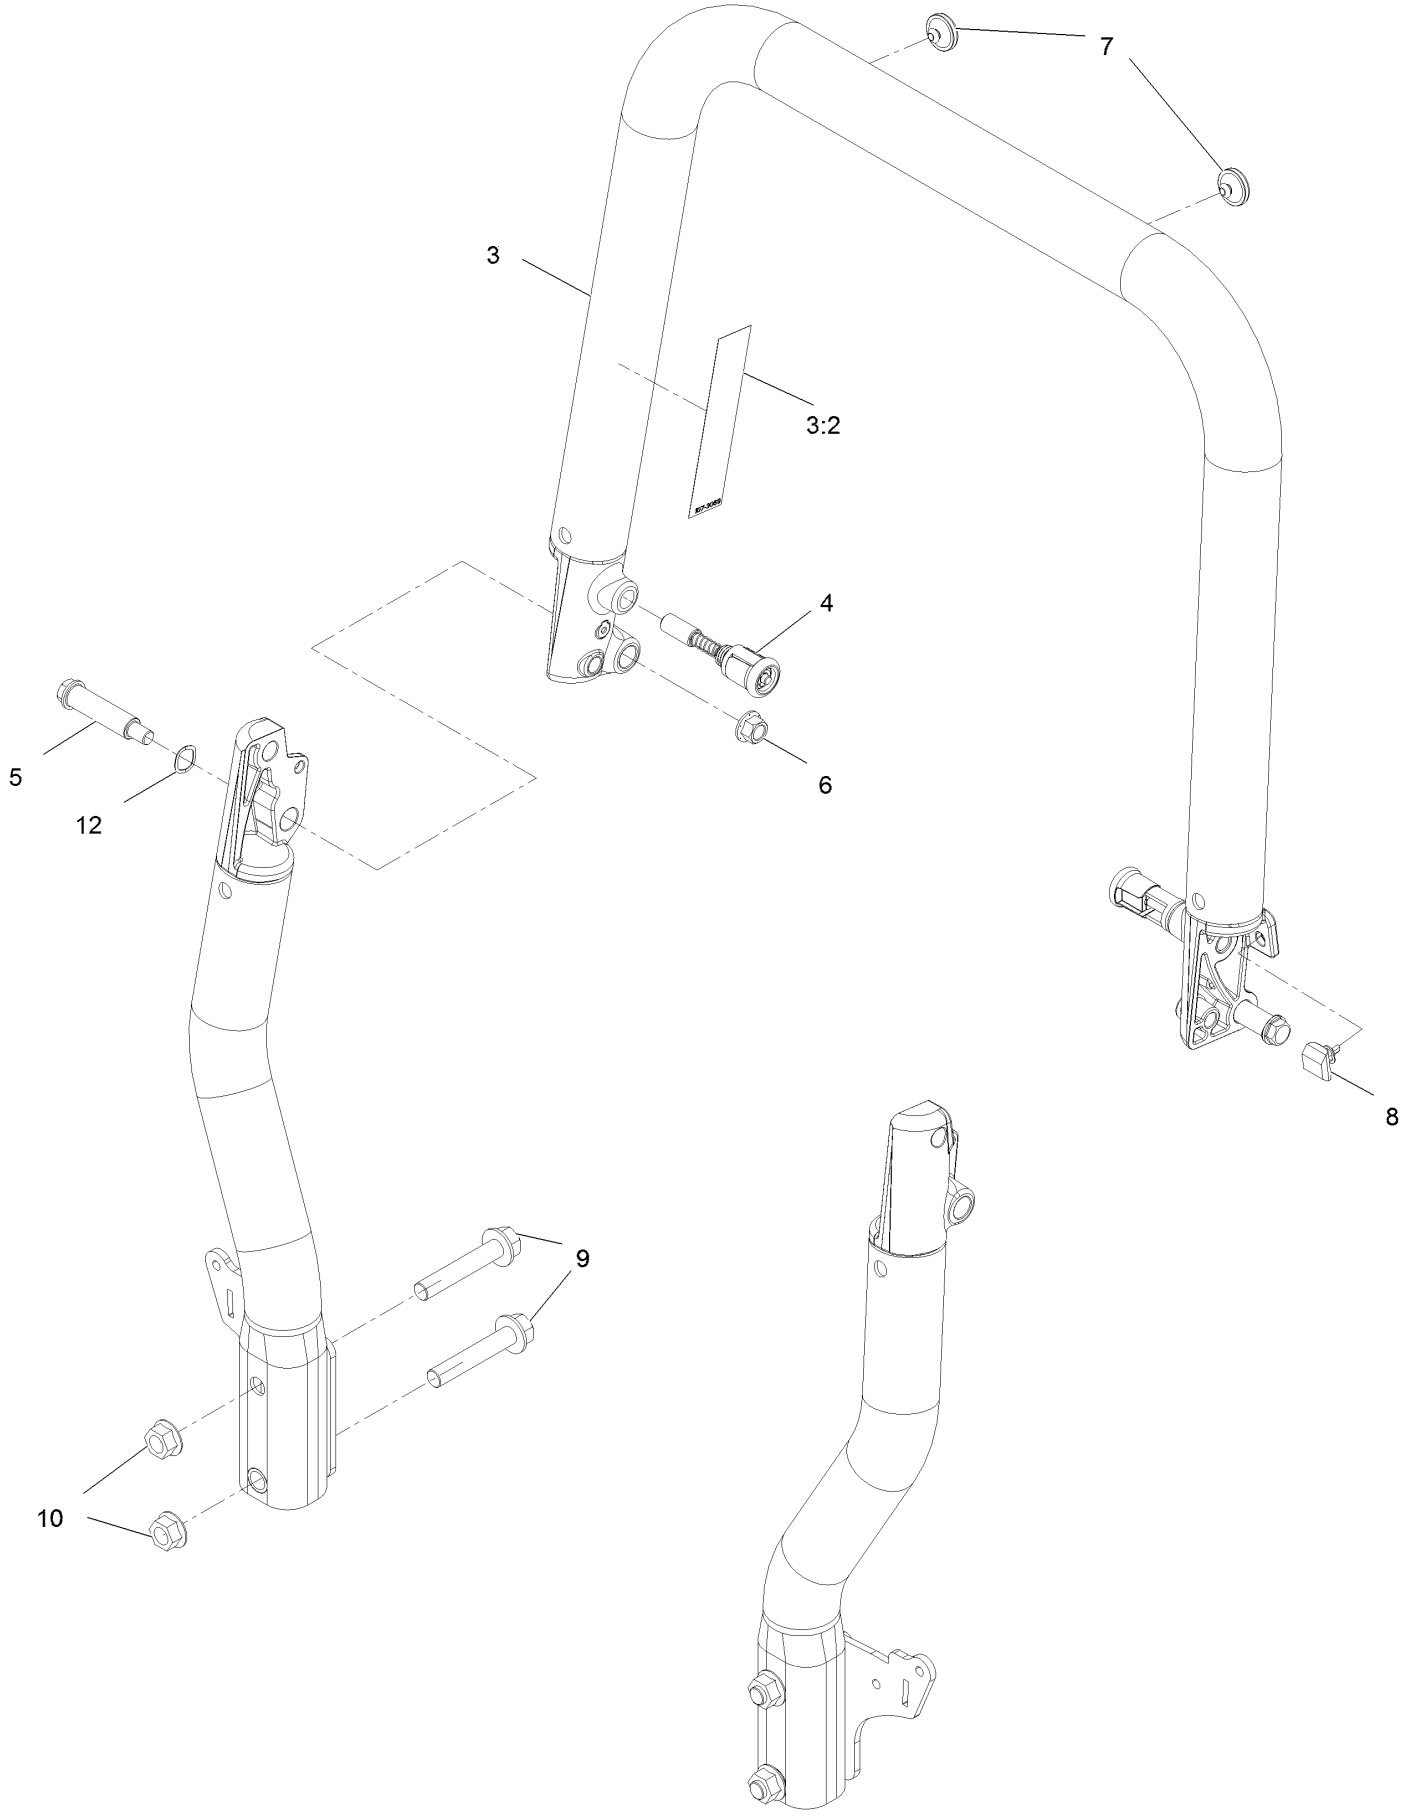

Roll-Over Protection System Assembly (continued)

Ref.	Part Number	Qty.	Description
3	126-7838	1	Top Tube ASM
3:2	107-3069	1	Decal-Warning
4	116-0104	2	Pin-Spring
5	126-9209	2	Bolt-Shoulder
6	99-5107	2	Nut-Lock
7	135-0504	2	Bumper-ROPS
8	126-9966	2	Bumper-ROPS
9	126-9488	4	Screw-HHF
10	32128-50	4	Nut-Flange
12	119-4164	2	Washer-Wave

Caster Tire Assembly

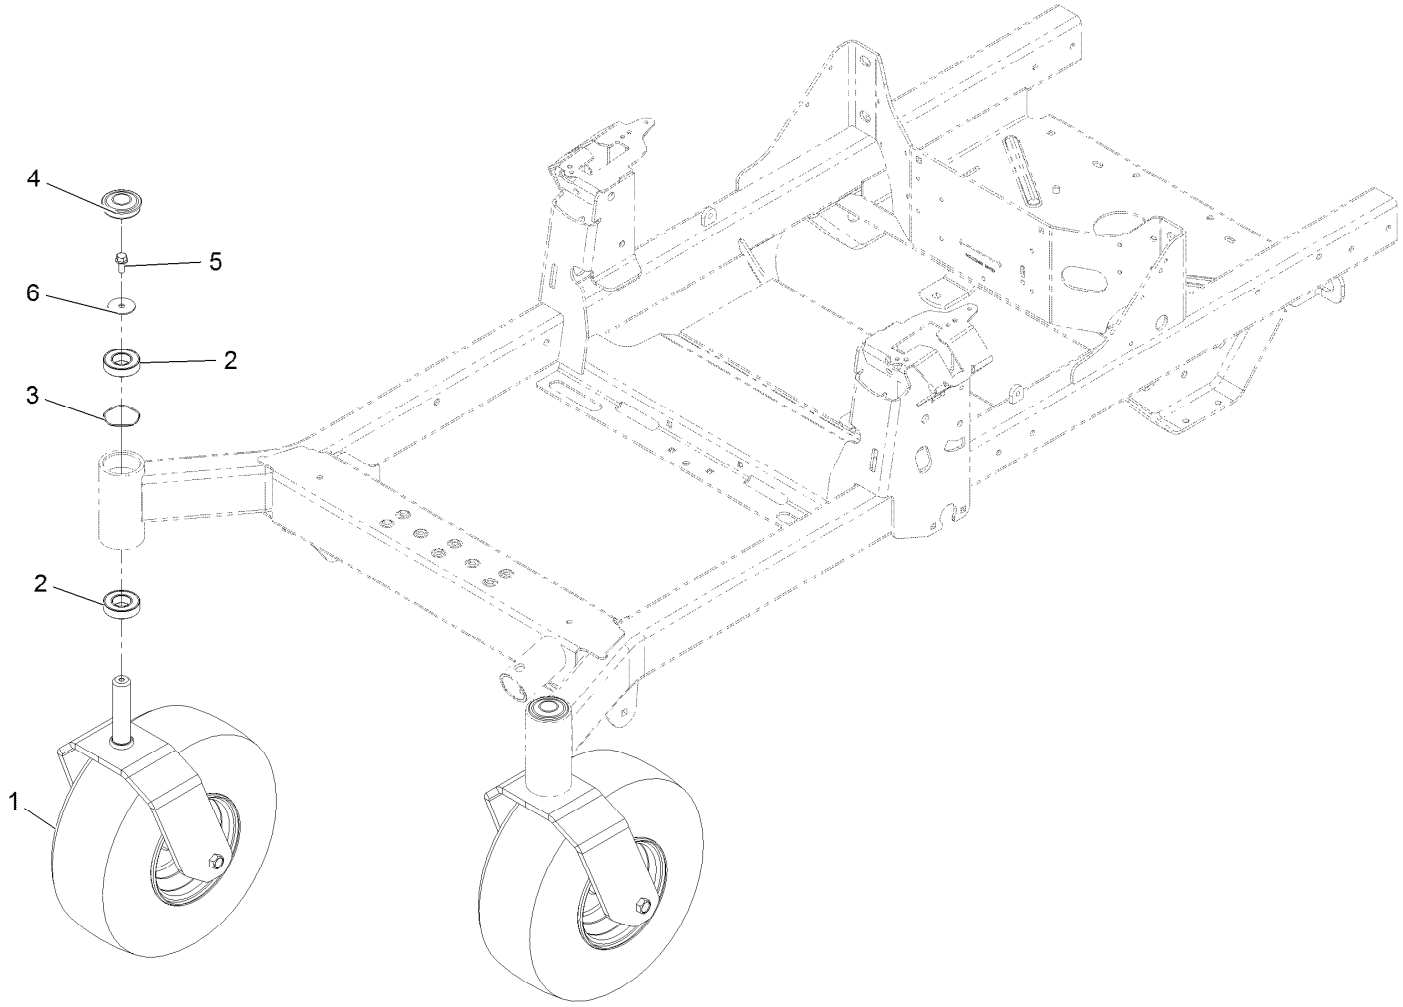


Caster Tire Assembly (continued)

Ref.	Part Number	Qty.	Description
1		2	ASM-Front Caster W/Fork ●
2	109-3678	4	Bearing-Ball
3	126-5897	2	Spring
4	116-4348	2	Cap-Grease
5	3234-5	2	Screw-HHF
6	3256-68	2	Washer-Flat

● Not serviced separately


Caster Wheel Assembly

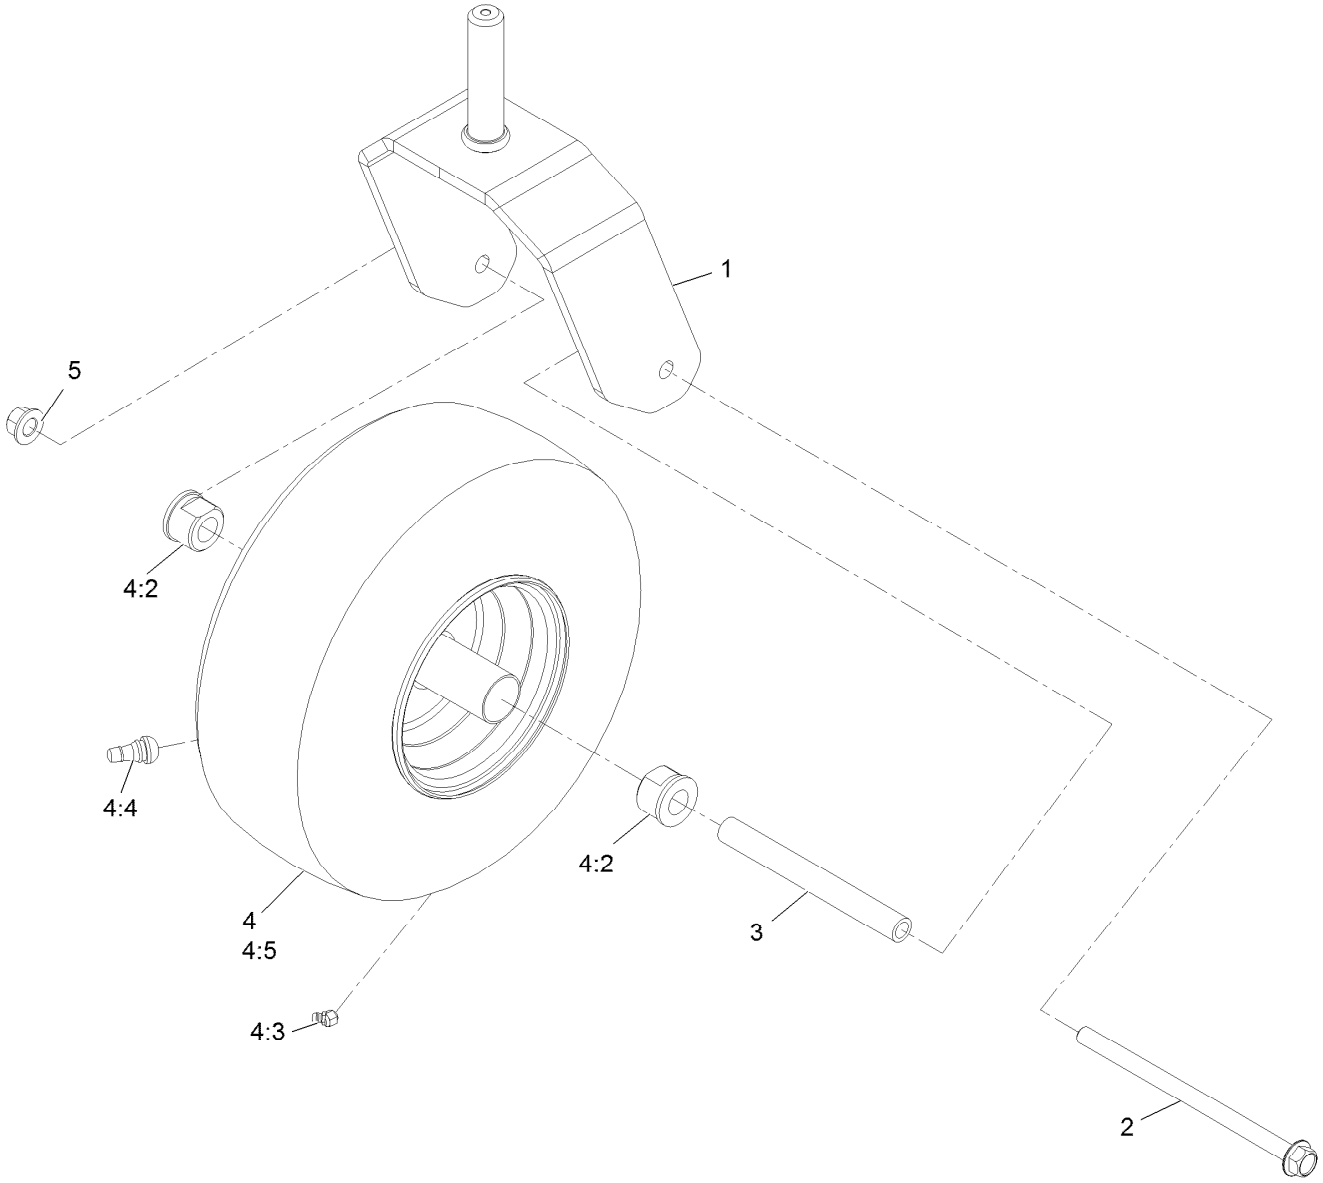

Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4312-01	1	Fork-Caster
2	126-5389	1	Screw-HHF
3	127-0068	1	Spanner-Wheel, Caster
4	126-4860	1	ASM, Tire & Wheel
4:2	114-1640	2	Bushing-Flange
4:3	302-5	1	Zerk 1/4-28 Str Thrd Forming
4:4	5108	1	Valve
4:5	126-5959	1	Tire
5	99-5107	1	Nut-Lock 1/2-13


Deck Lift Assembly

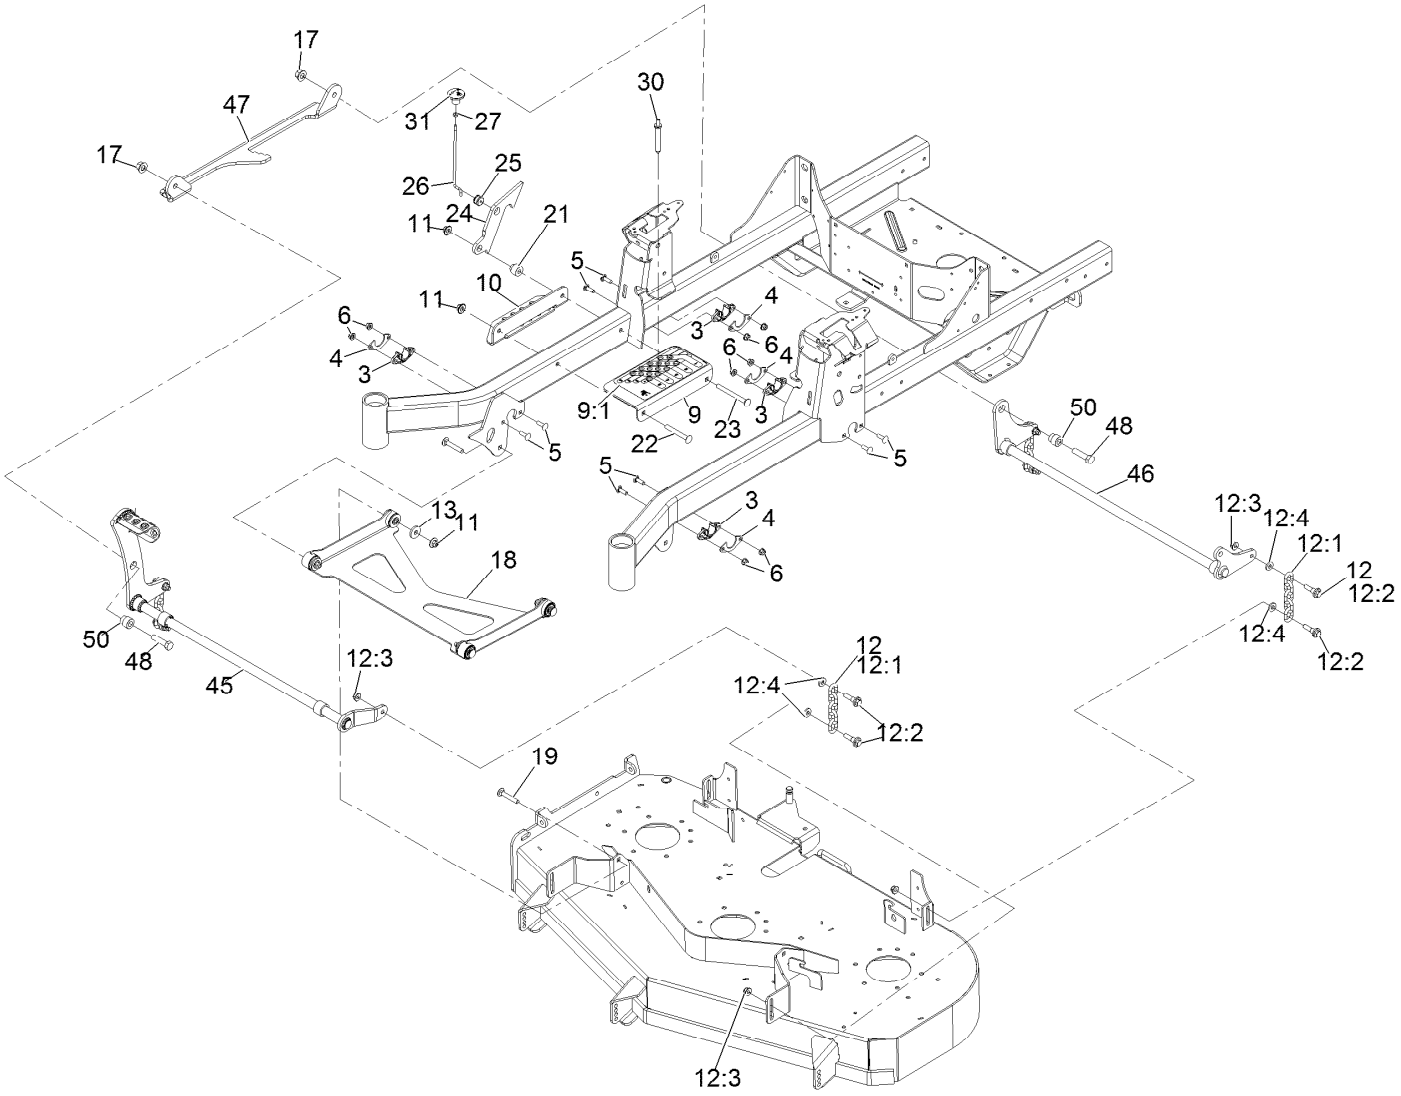

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
3	115-5065	4	Bushing-Flange
4	116-2887	4	Gusset-Lift, Deck
5	3230-22	8	Bolt-Carriage 5/16-18 X 1 Sp
6	104-8300	8	Nut-Nyloc 5/16-18 Flg
9	126-4535	1	Bracket ASM
9:1	126-4784	1	Decal-HOC
10	126-4640-03	1	Angle-HOC, Lower
11	109-6658	4	Nut-Nyloc 3/8-16 Flg
12	126-8877	4	Deck Chain ASM
12:1	1-633447	1	Chain-Lift, Deck
12:2	130-0742	2	Bolt-Shoulder
12:3	104-8301	2	Nut-Nyloc 3/8-16 Flg
12:4	43-0940	2	Spacer
13	1-373034	2	Washer
17	99-5107	2	Nut-Lock 1/2-13
18	126-8365	1	Deck Strut ASM
19	3231-7	2	Bolt-Carriage 3/8-16 X 2 1/4
21	126-5221	1	Spacer-Stepped
22	3231-42	1	Bolt-Carriage 3/8-16 X 3
23	135-0313	1	Screw-CARR
24	126-5222	1	Plate-Lock, Transport
25	126-5593	1	Grommet
26	126-5223	1	Rod-Lock, Transport
27	3218-1	1	Nut-Jam 1/4-20
30	126-5401	1	Pin-HOC
31	126-7019	1	Knob
45	135-5083-03	1	Shaft-Decklift Front
46	135-5081-03	1	Shaft-Decklift Rear
47	135-5079-03	1	Link-Decklift
48	325-8	2	Screw-HH 1/2-13 X 1 1/4
50	135-5617	2	Spacer-Stepped


Deck Strut Assembly

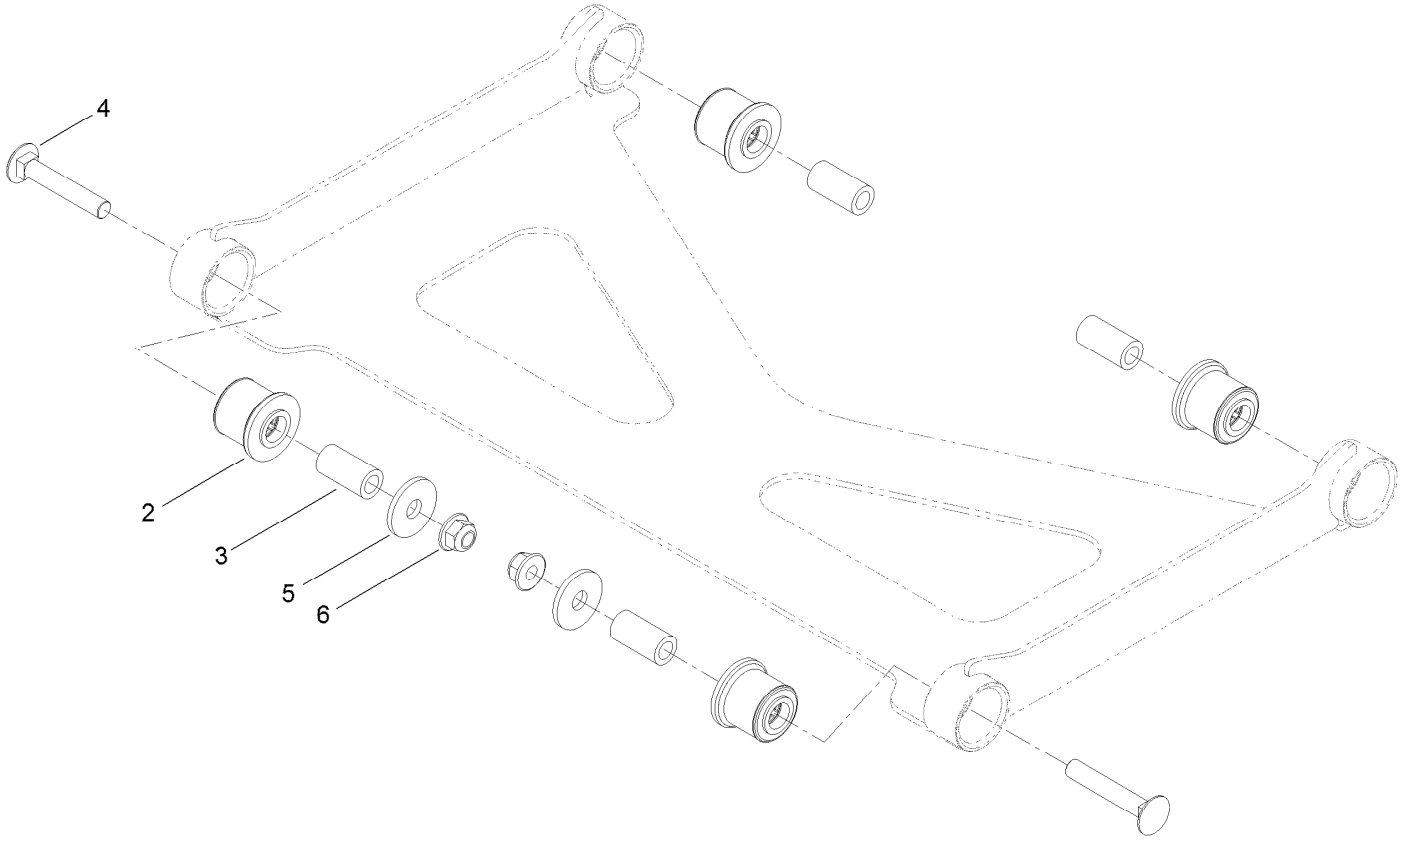

Deck Strut Assembly (continued)

Ref.	Part Number	Qty.	Description
2	126-8360	4	Bushing-Rubber, Suspension
3	108-6544	4	Spacer
4	3231-7	2	Screw-CARR
5	2844	2	Washer
6	104-8301	2	Nut-HF, NI


Controls Assembly

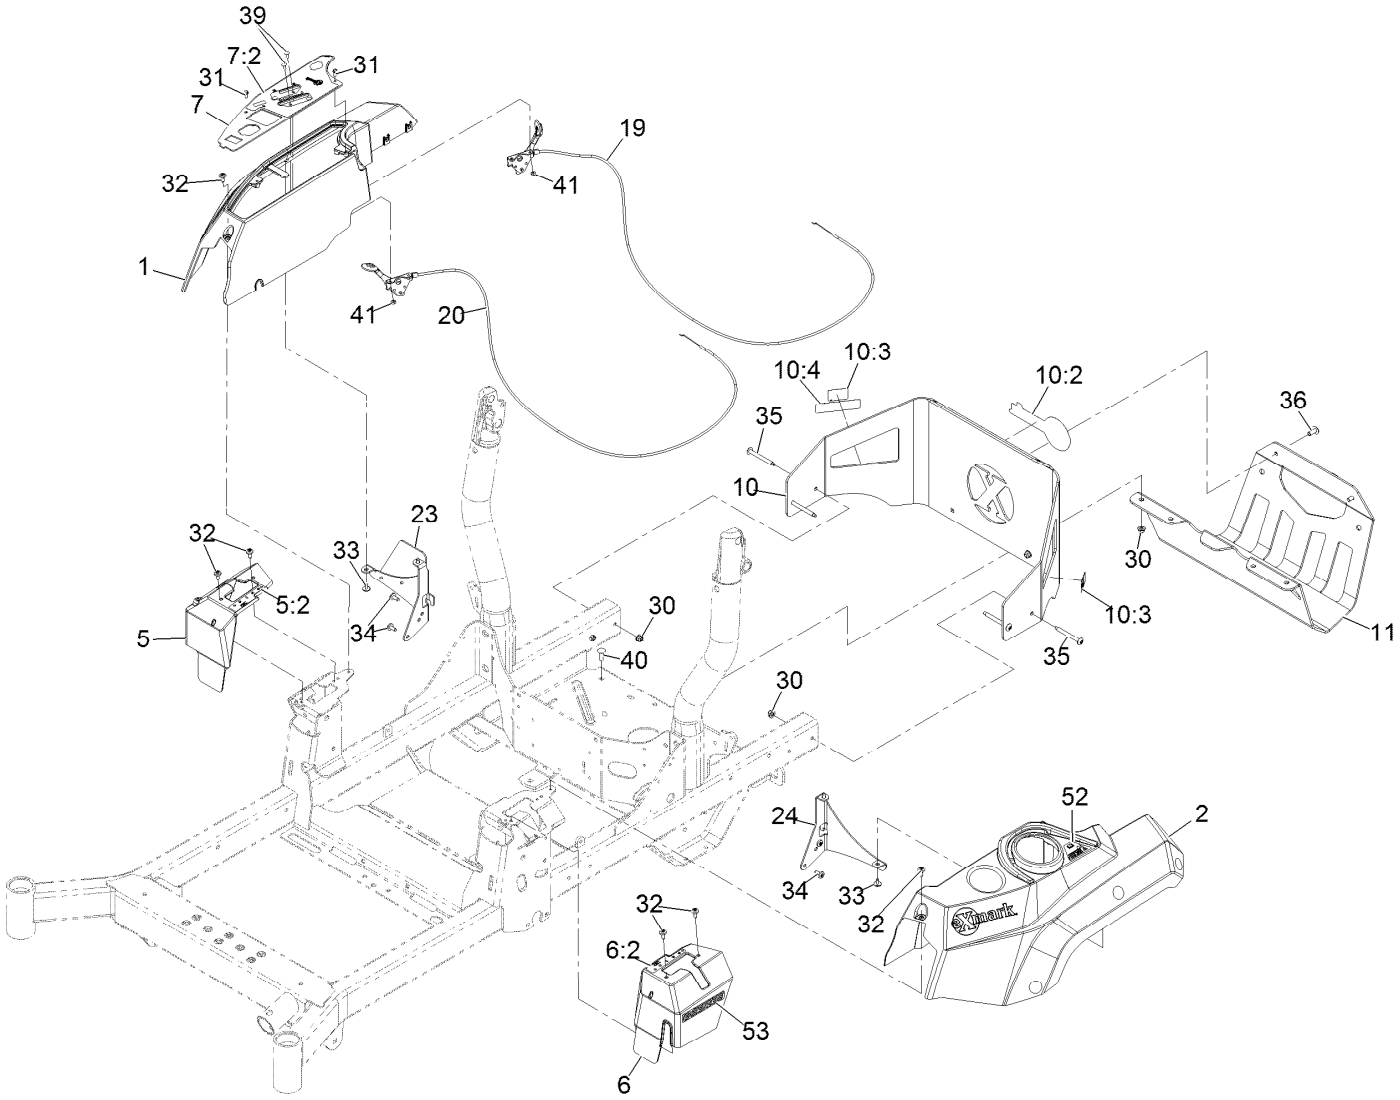

Controls Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-6025	1	Console, RH
2	126-6026	1	Console, LH
5	126-7371	1	Cover-Control, Motion (RH)
5:2	126-6183	1	Decal-Control, Motion (RH)
6	126-7372	1	Cover-Control, Motion (LH)
6:2	126-6194	1	Decal-Control, Motion (LH)
7	135-7846	1	ASM-Control Panel W/Exmark Decal
7:2	135-7816	1	Decal-Control Panel
10	126-7802	1	Rear Guard ASM
10:2	126-6877	1	Decal, Exmark Logo
10:3	106-5517	2	Decal-Warning
10:4	133-8062	1	Decal-Arrestor, Spark
11	135-5084-03	1	Guard-Muffler [black]
19	126-6943	1	Cable-Control, Choke
20	126-6942	1	Cable-Control, Throttle
23	126-9945	1	Support-Console, RH
24	126-5532-03	1	Bracket-Console, LH
30	104-8300	8	Nut-Nyloc 5/16-18 Flg
31	117-5036	2	Screw-HWH #10-14 X 1/2
32	120-7950	6	Screw-1/4-20 X 1/2 Tf Torx Plus
33	126-5544	4	Screw-HWH #10-14 X 1/2 Torx
34	126-6266	4	Screw-1/4-20 X .65 Torx Plus
35	126-6267	4	Screw-Truss HD 5/16-18 X 2 3/4 Torx Plus
36	126-6268	2	Screw-Truss HD 5/16-18 X 3/4 Torx Plus
39	1-807513	4	Bolt-Carriage #10-24 X 1/2
40	3230-22	2	Bolt-Carriage 5/16-18 X 1 Sp
41	3296-2	4	Nut-Nyloc #10-24
52	126-9939	1	Decal-Fill, Fuel
53	126-9295	2	Decal-E-Series

Motion Control Assembly

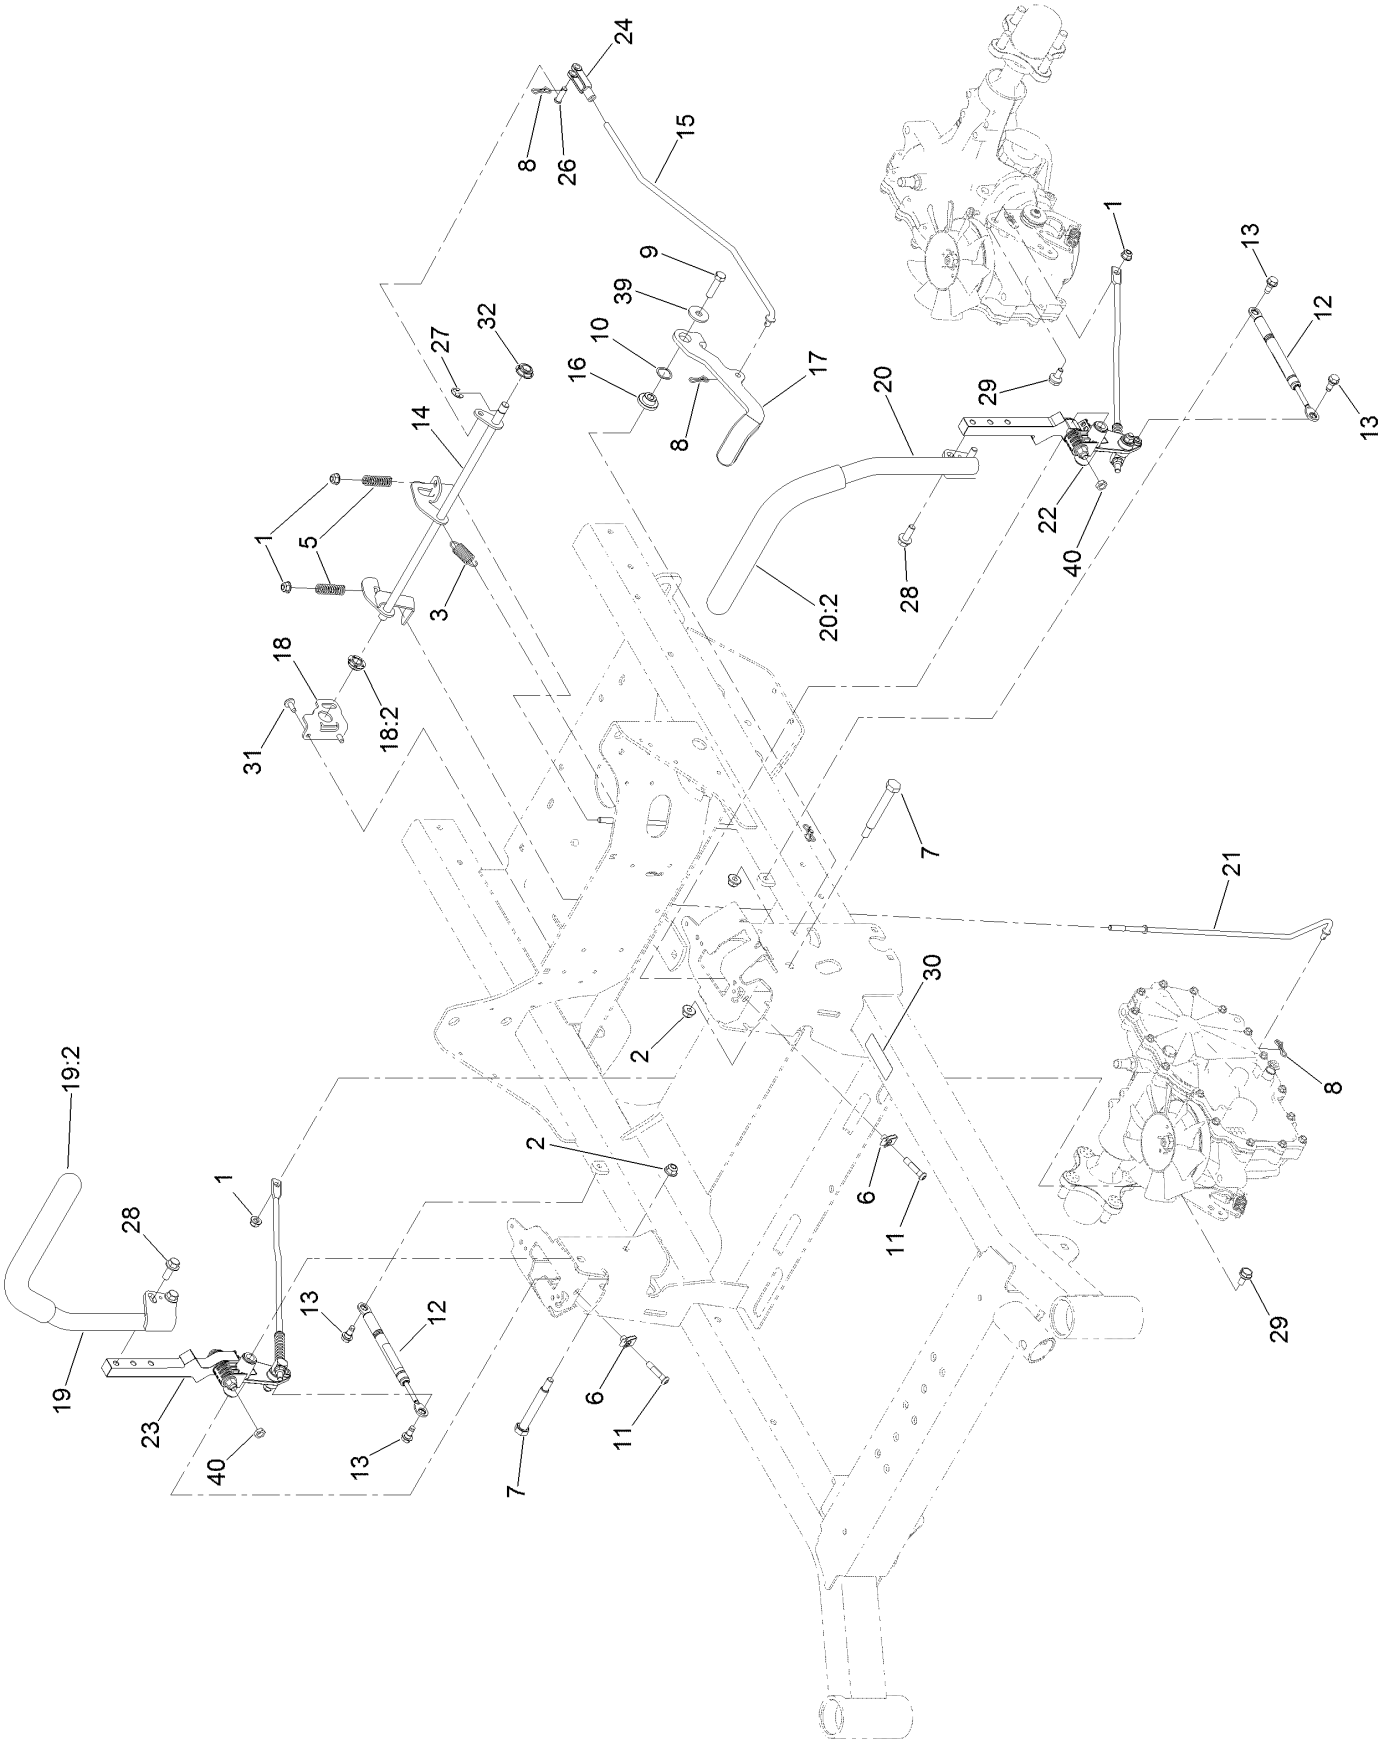


Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8300	4	Nut-HF, NI
2	104-8301	3	Nut-HF, NI
3	107-1045	1	Spring-Extension
5	109-7694	2	Spring-Compression
6	112-3306	2	Nut
7	115-5099	2	Bolt-Pivot
8	119-1415	4	Pin-Cotter, Locking
9	323-8	1	Screw-HH
10	119-4164	1	Washer-Wave
11	126-4299	2	Screw-HSBH
12	126-4322	2	Damper
13	126-4424	4	Screw-Shoulder
14	126-5813	1	Shaft-Brake
15	126-5819	1	Linkage-Brake, Upper
16	126-5989	1	Pivot-Flange
17	126-9490	1	Lever-Brake (With Grip)
18	126-6456	1	Bracket-Brake
18:2	126-5820	1	Bearing-Spherical
19	126-9191	1	RH Control Handle ASM
19:2	126-7359	1	Grip
20	126-9192	1	LH Control Handle ASM
20:2	126-7359	1	Grip
21	126-7217	2	Linkage-Brake, Lower
22		1	LH Motion Control ASM ●
23		1	RH Motion Control ASM ●
24	1-303105	1	Yoke-Adjustable
26	1-808280	1	Pin-Clevis
27	32120-47	1	Ring-Retaining, External
28	3234-42	4	Screw-HHF
29	37-8771	2	Bolt-Shoulder, HF
30	115-9625	1	Decal-Brake, Parking
31	126-6266	2	Screw-Tph
32	126-5820	1	Bearing-Spherical
39	2844	1	Washer
40	3218-3	2	Nut-Jam

● Not serviced separately


LH and RH Motion Control Assembly

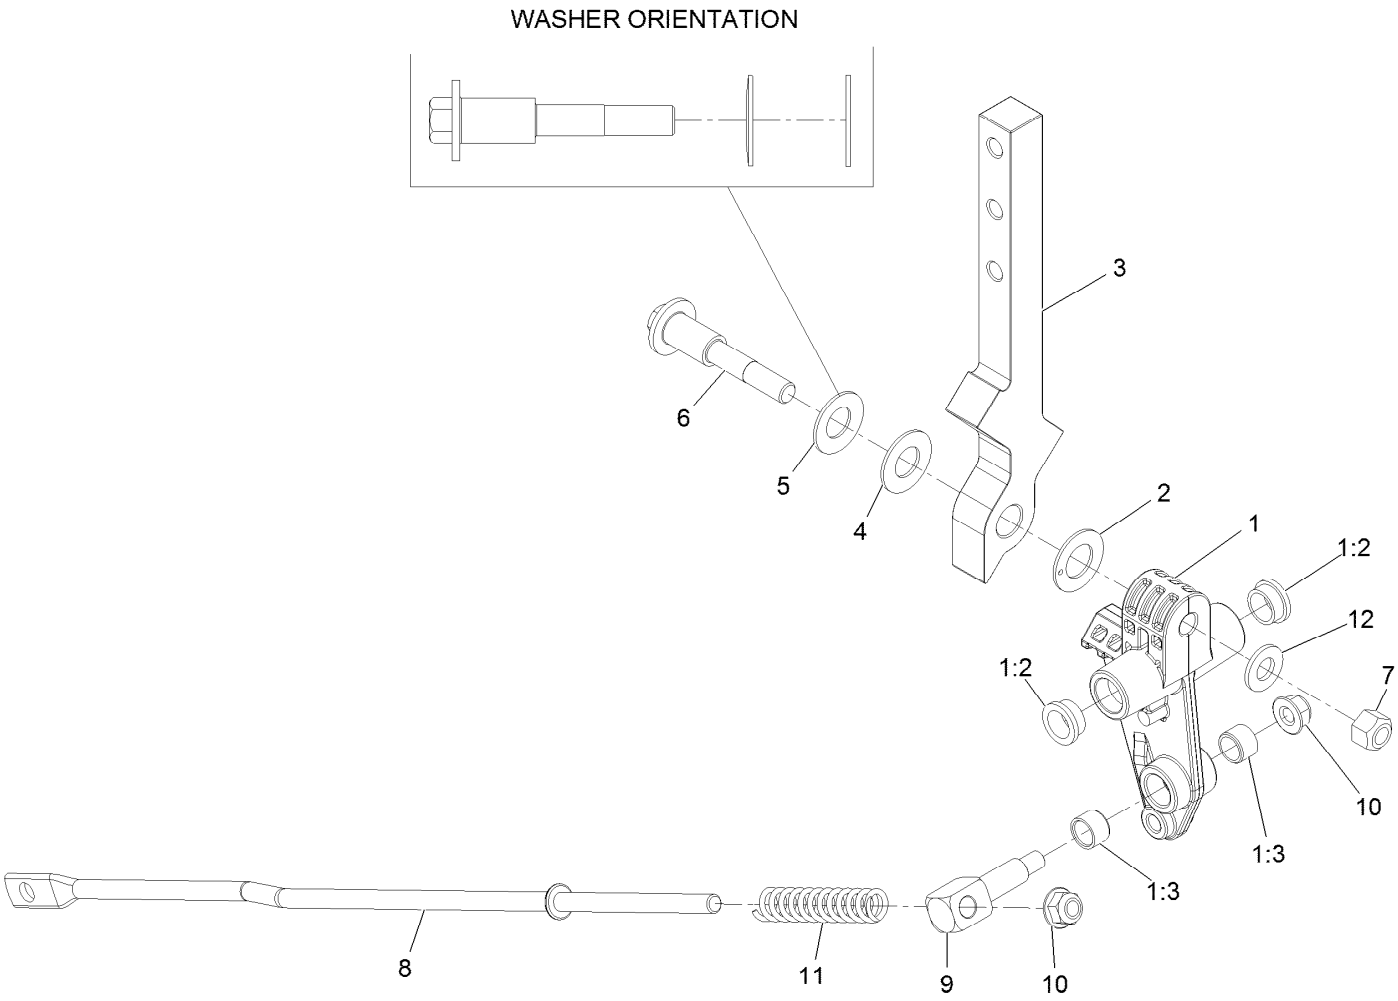

LH and RH Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3773	1	Control Arm ASM
1:2	126-8909	2	Bushing
1:3	1-413152	2	Bushing-Sleeve
2	126-7296	1	Washer-Friction
3	126-8182	1	Arm-Control
4	117-1240	1	Washer
5	119-8925	1	Washer-Belleville
6	117-1198	1	Bolt-Pivot
7	32152-2	1	Nut-Hex 3/8-16 Lock
8	126-5435	1	Link-Control
9	126-5434	1	Swivel
10	104-8300	2	Nut-Nyloc 5/16-18 Flg
11	126-8195	1	Spring-Return, Neutral
12	3256-24	1	Washer-3/8 SAE


Seat Assembly

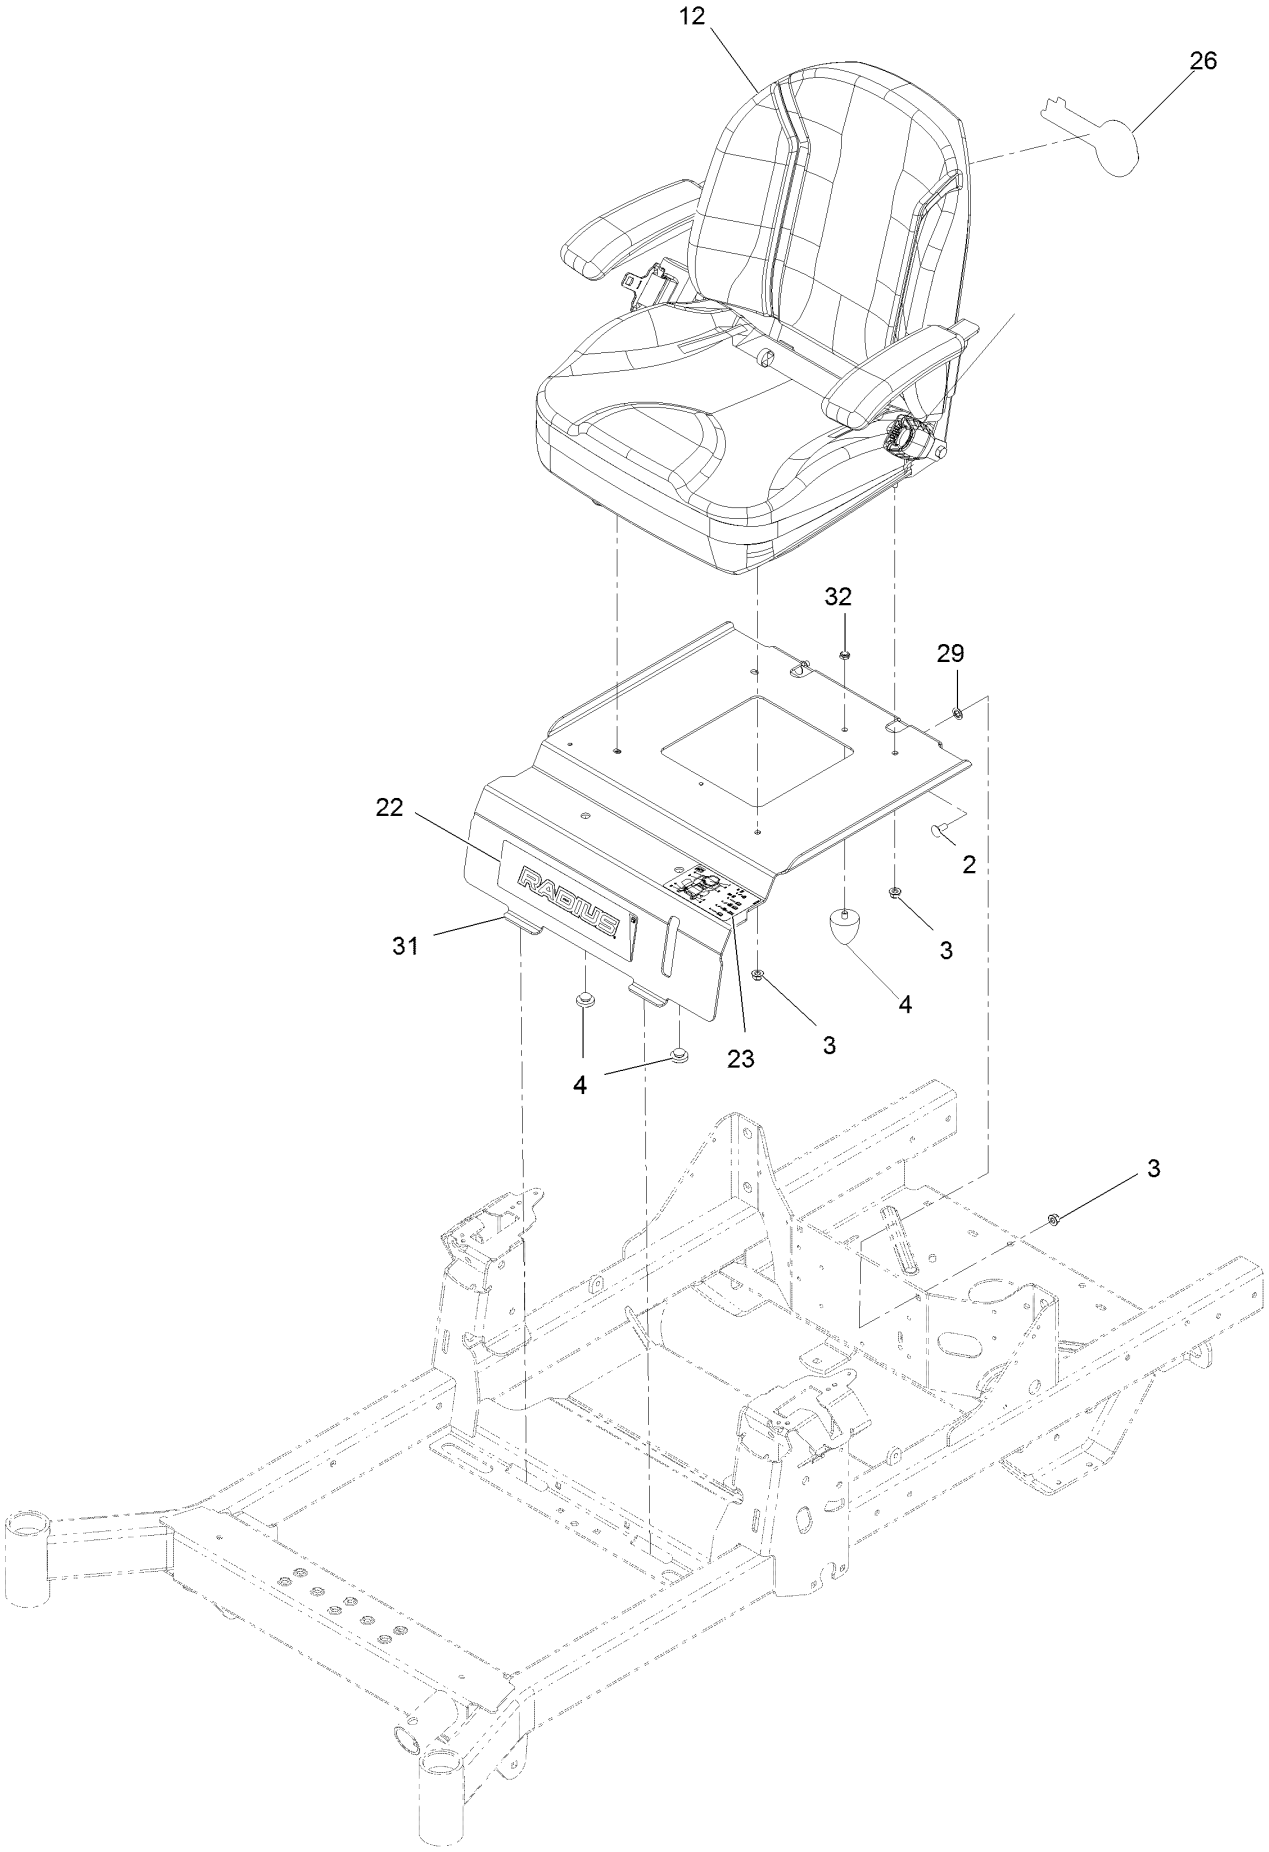

Seat Assembly (continued)

Ref.	Part Number	Qty.	Description
2	3230-22	2	Bolt-Carriage 5/16-18 X 1 Sp
3	104-8300	6	Nut-Nyloc 5/16-18 Flg
4	135-0505	2	Bumper-Seat
4	135-7047	1	Bumper-Rubber
12	126-8290	1	ASM-Seat Exmark
22	126-9082	1	Decal-Radius Logo
23	126-8151	1	Decal-Aid, Service
26	126-6877	1	Decal, Exmark Logo
29	135-7125	2	Washer-Retaining
31	135-6017-03	1	Plate-Fixed Seat [black]
32	3296-47	1	Nut-Nyloc 5/16-18 Thin


Seat Assembly (cont)

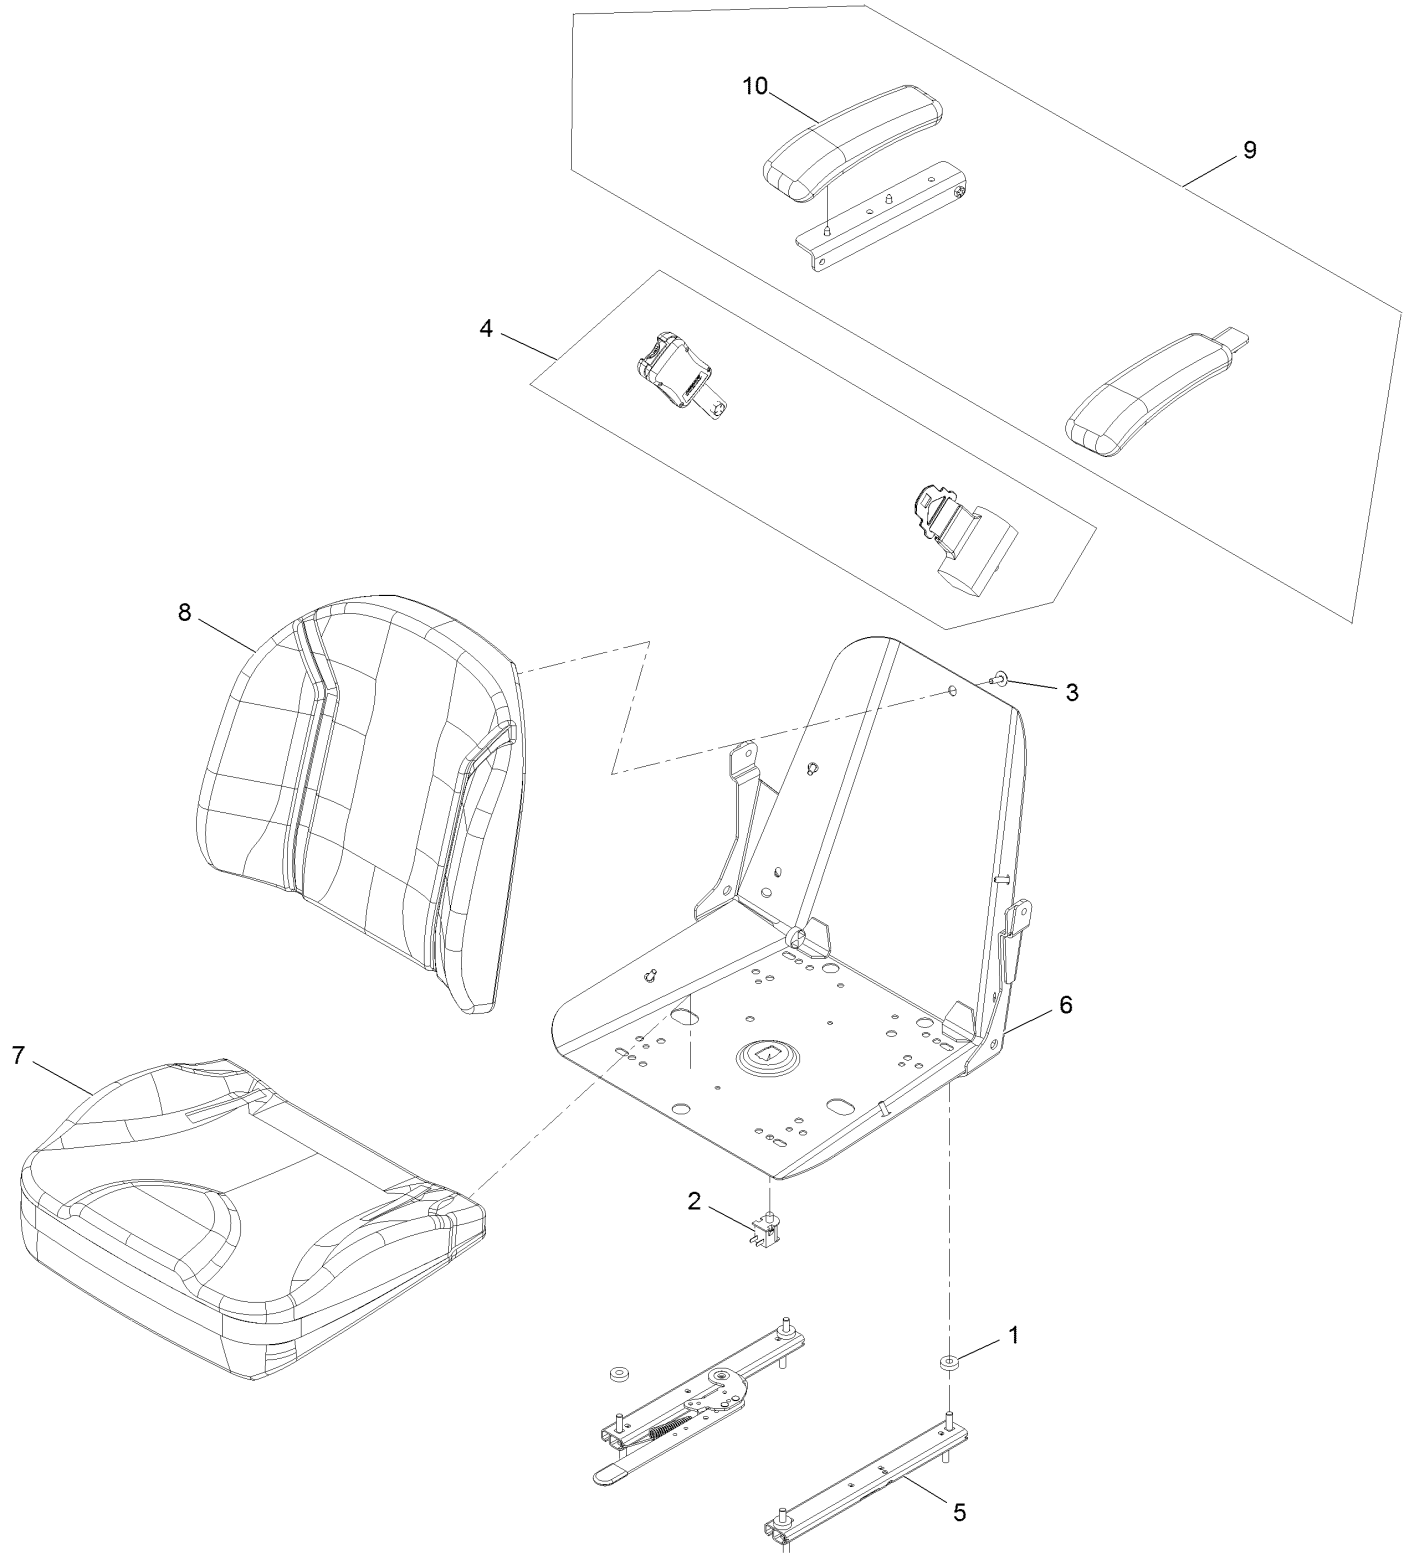

Seat Assembly (cont) (continued)

Ref.	Part Number	Qty.	Description
1	26-4840	4	Spacer-Pin, Mounting
2	82-2190	1	Switch
3	103-8383	5	Screw-HWH 1/4-20 X 3/4 Taptite
4	126-7355	1	Kit-Seat Belt
5	126-4499	1	ASM-Seat Track Svc
6	126-5664	1	Frame-Seat Svc
7	126-5900	1	Cover-Seat Bottom Svc
8	131-4150	1	Cushion-Seat, Back
9	131-4155	1	Armrest Kit
10	110-4163	1	Cushion-Rest, Arm


Fuel Tank and Vent Hose System Assembly

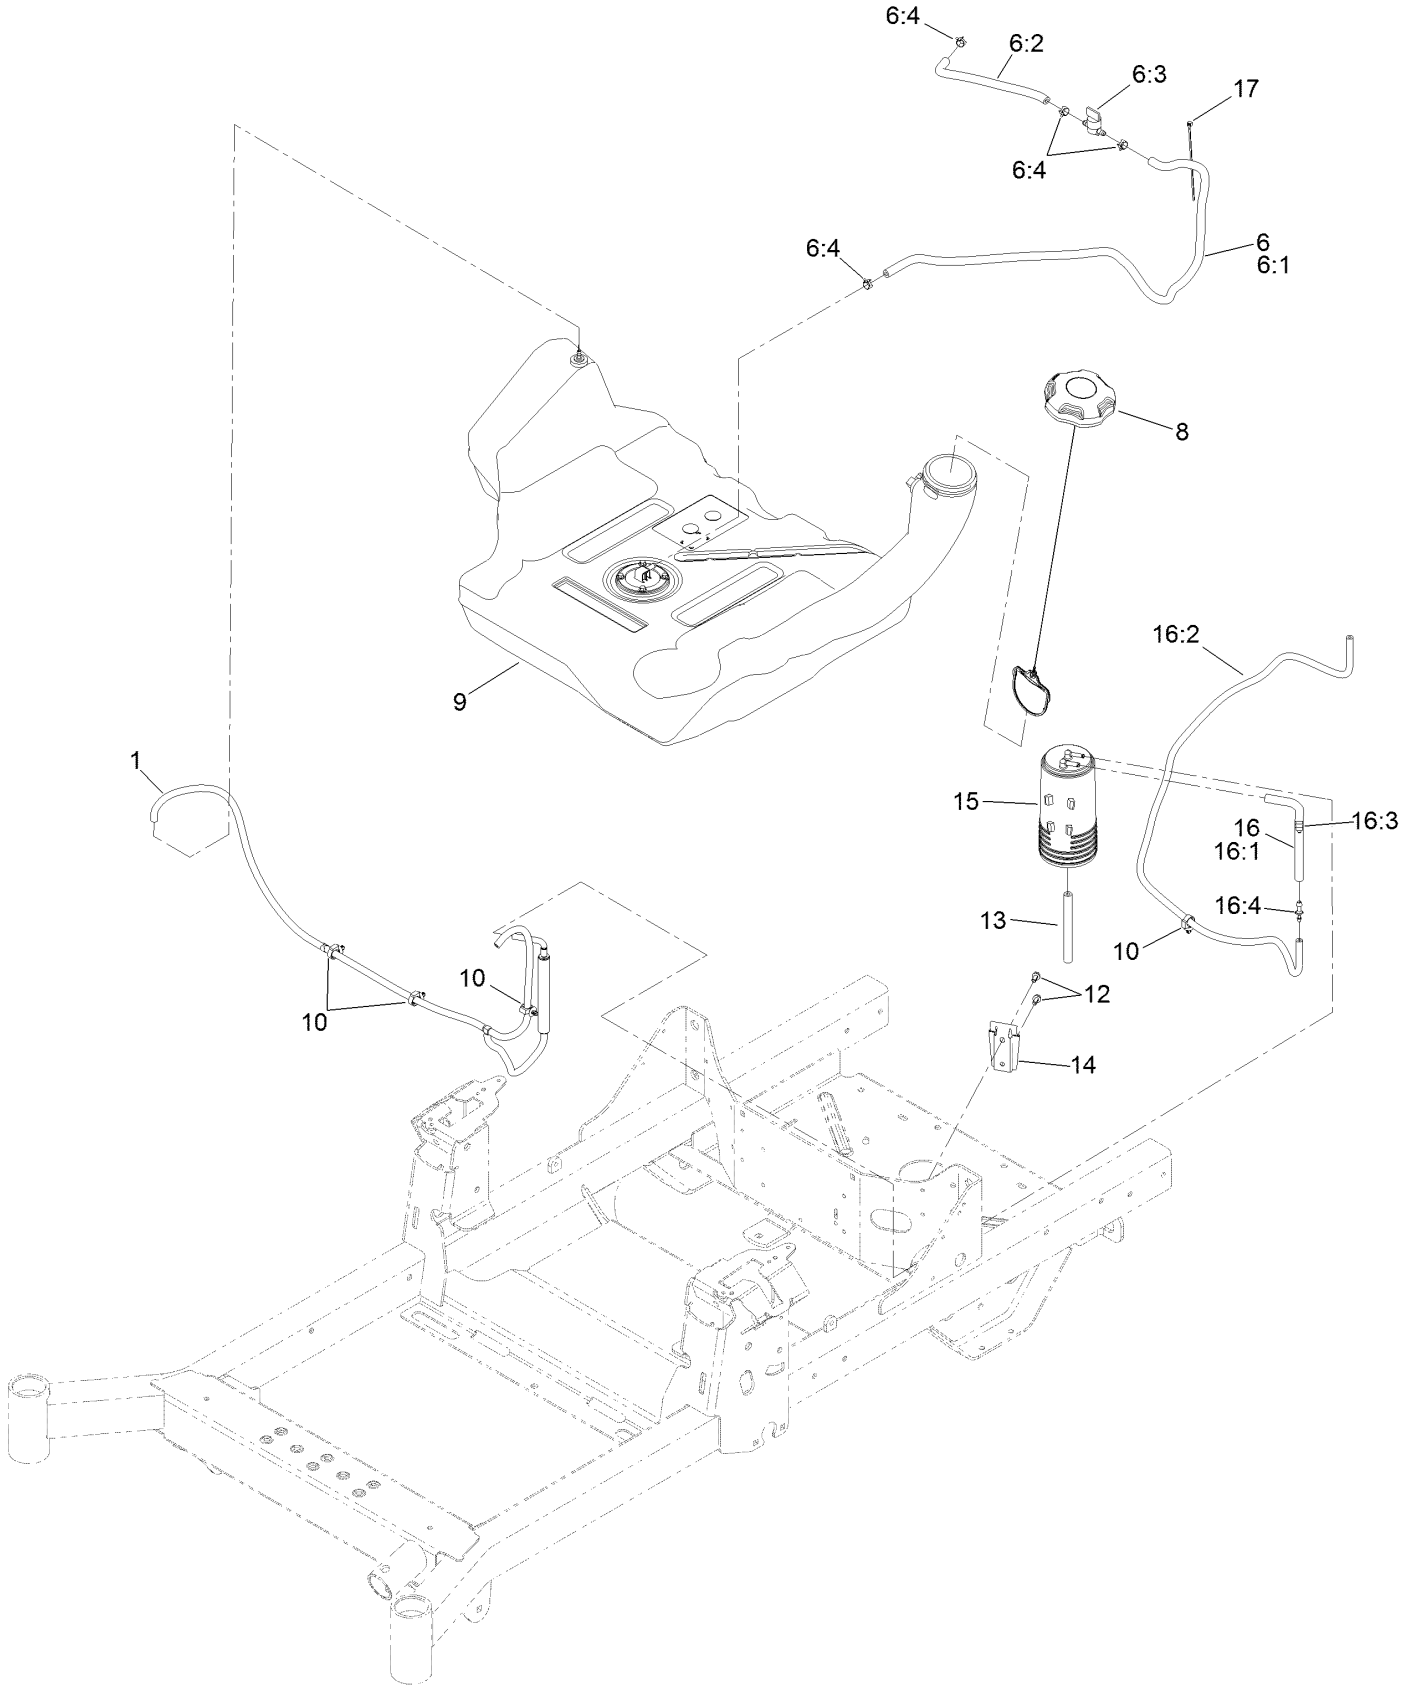

Fuel Tank and Vent Hose System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-8734	1	Vent Hose ASM
6	126-8739	1	Fuel Hose ASM
6:1	110-5702	1	Hose-Fuel
6:2	109-0282	1	Hose-Fuel
6:3	1-603770	1	Valve-Fuel
6:4	2412-98	4	Clamp-Hose
8	135-4801	1	Cap-Fuel, Ratcheting
9	126-4724	1	Tank-Fuel
10	126-5523	4	Clip
12	93-6083	2	Screw-HWH
13	109-0678	1	Hose-Fuel
14	114-0292	1	Bracket-Canister, Carbon
15	117-1221	1	Canister-Carbon, 800Cc
16	126-8892	1	Vent Hose ASM
16:1	110-1876	1	Hose-Fuel
16:2	108-9698	1	Hose-Fuel
16:3	120-2038	1	Cartridge-Valve, Check
16:4	106-8150	1	Fitting-Straight
17	1-303287	1	Tie-Cable


Fuel Tank Assembly (cont.)

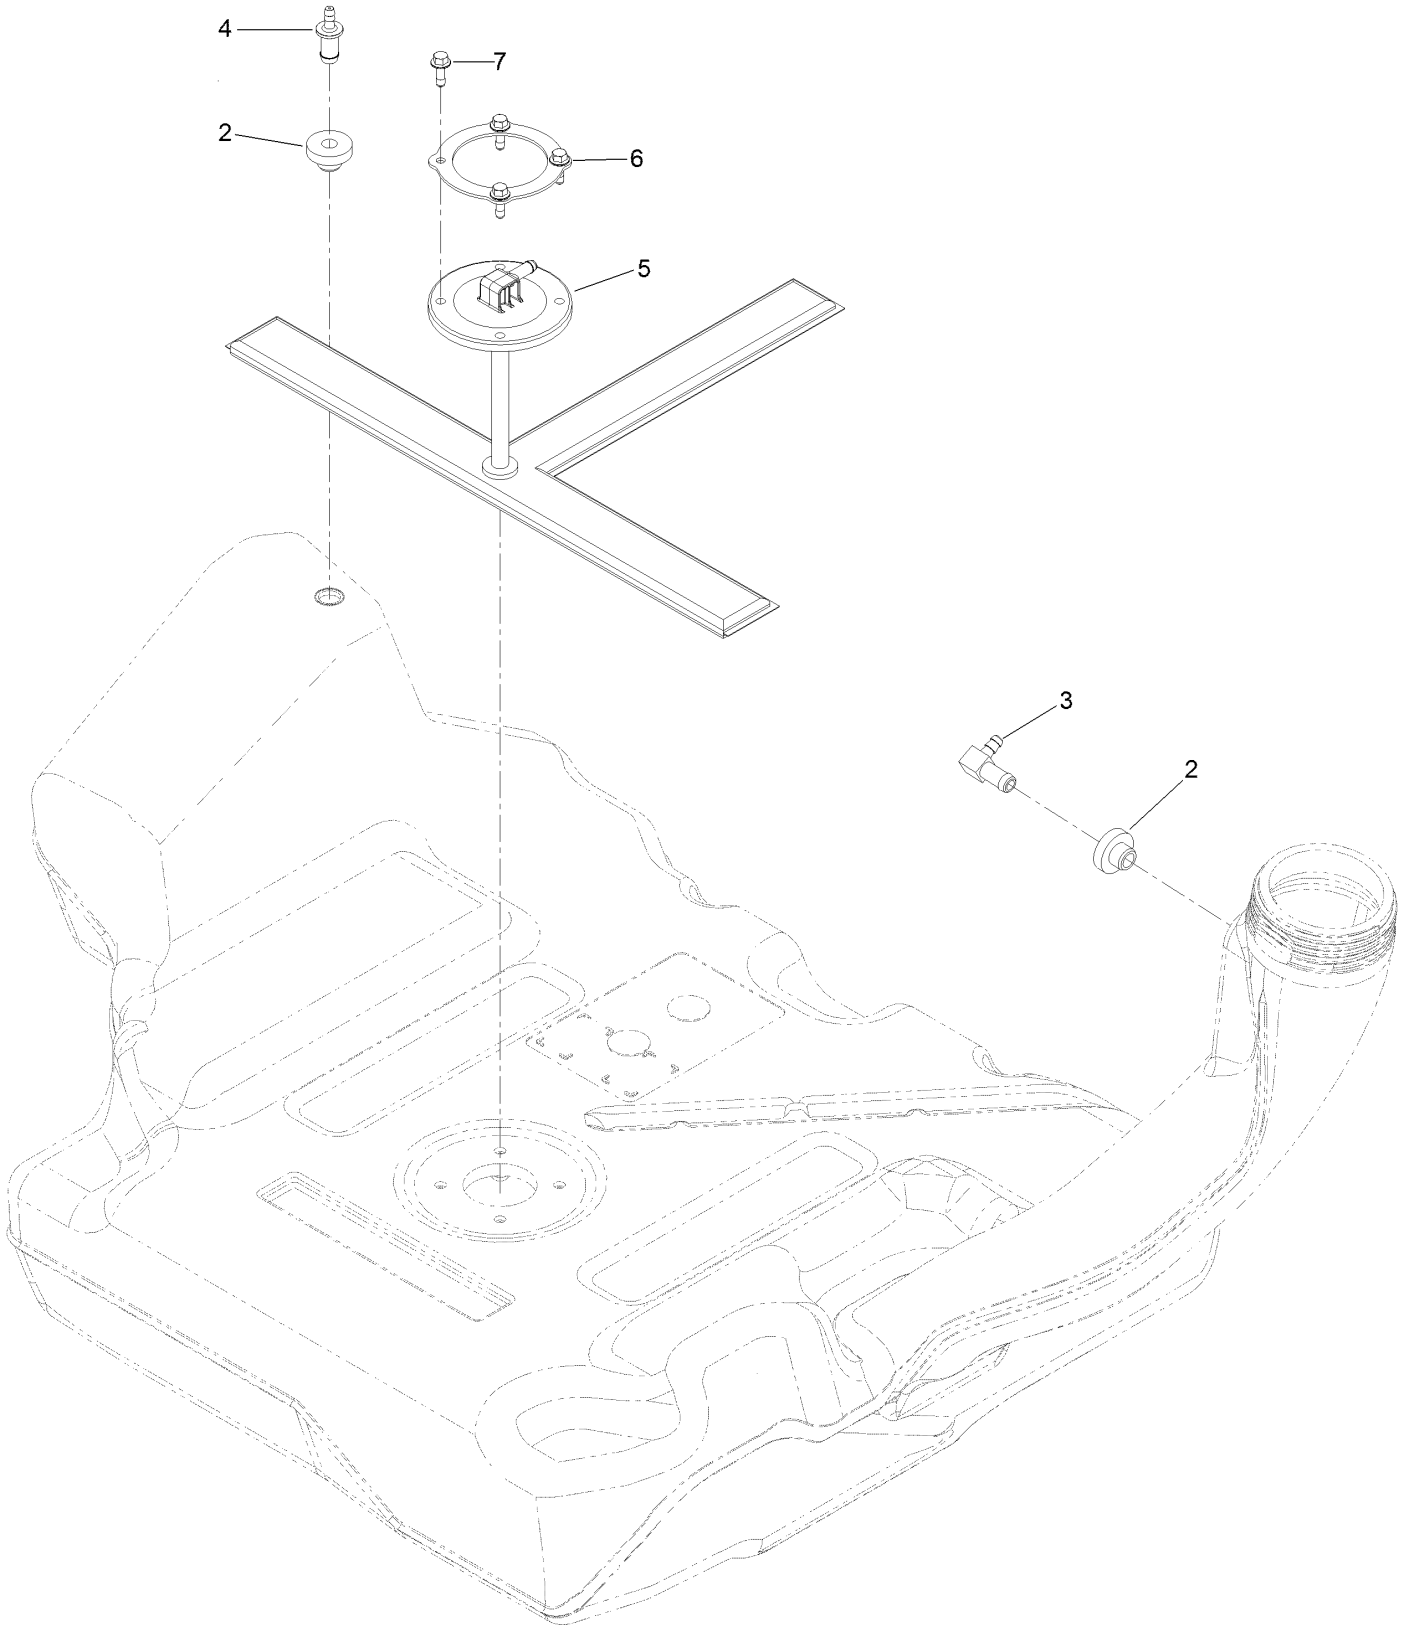

Fuel Tank Assembly (cont.) (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	2	Bushing
3	126-9057	1	Fitting-90 DEG
4	116-4630	1	Fitting-Orifice, Straight
5	126-5528	1	Pickup-Fuel
6	126-5527	1	Ring-Retainer
7	126-5525	4	Bolt

Engine Assembly

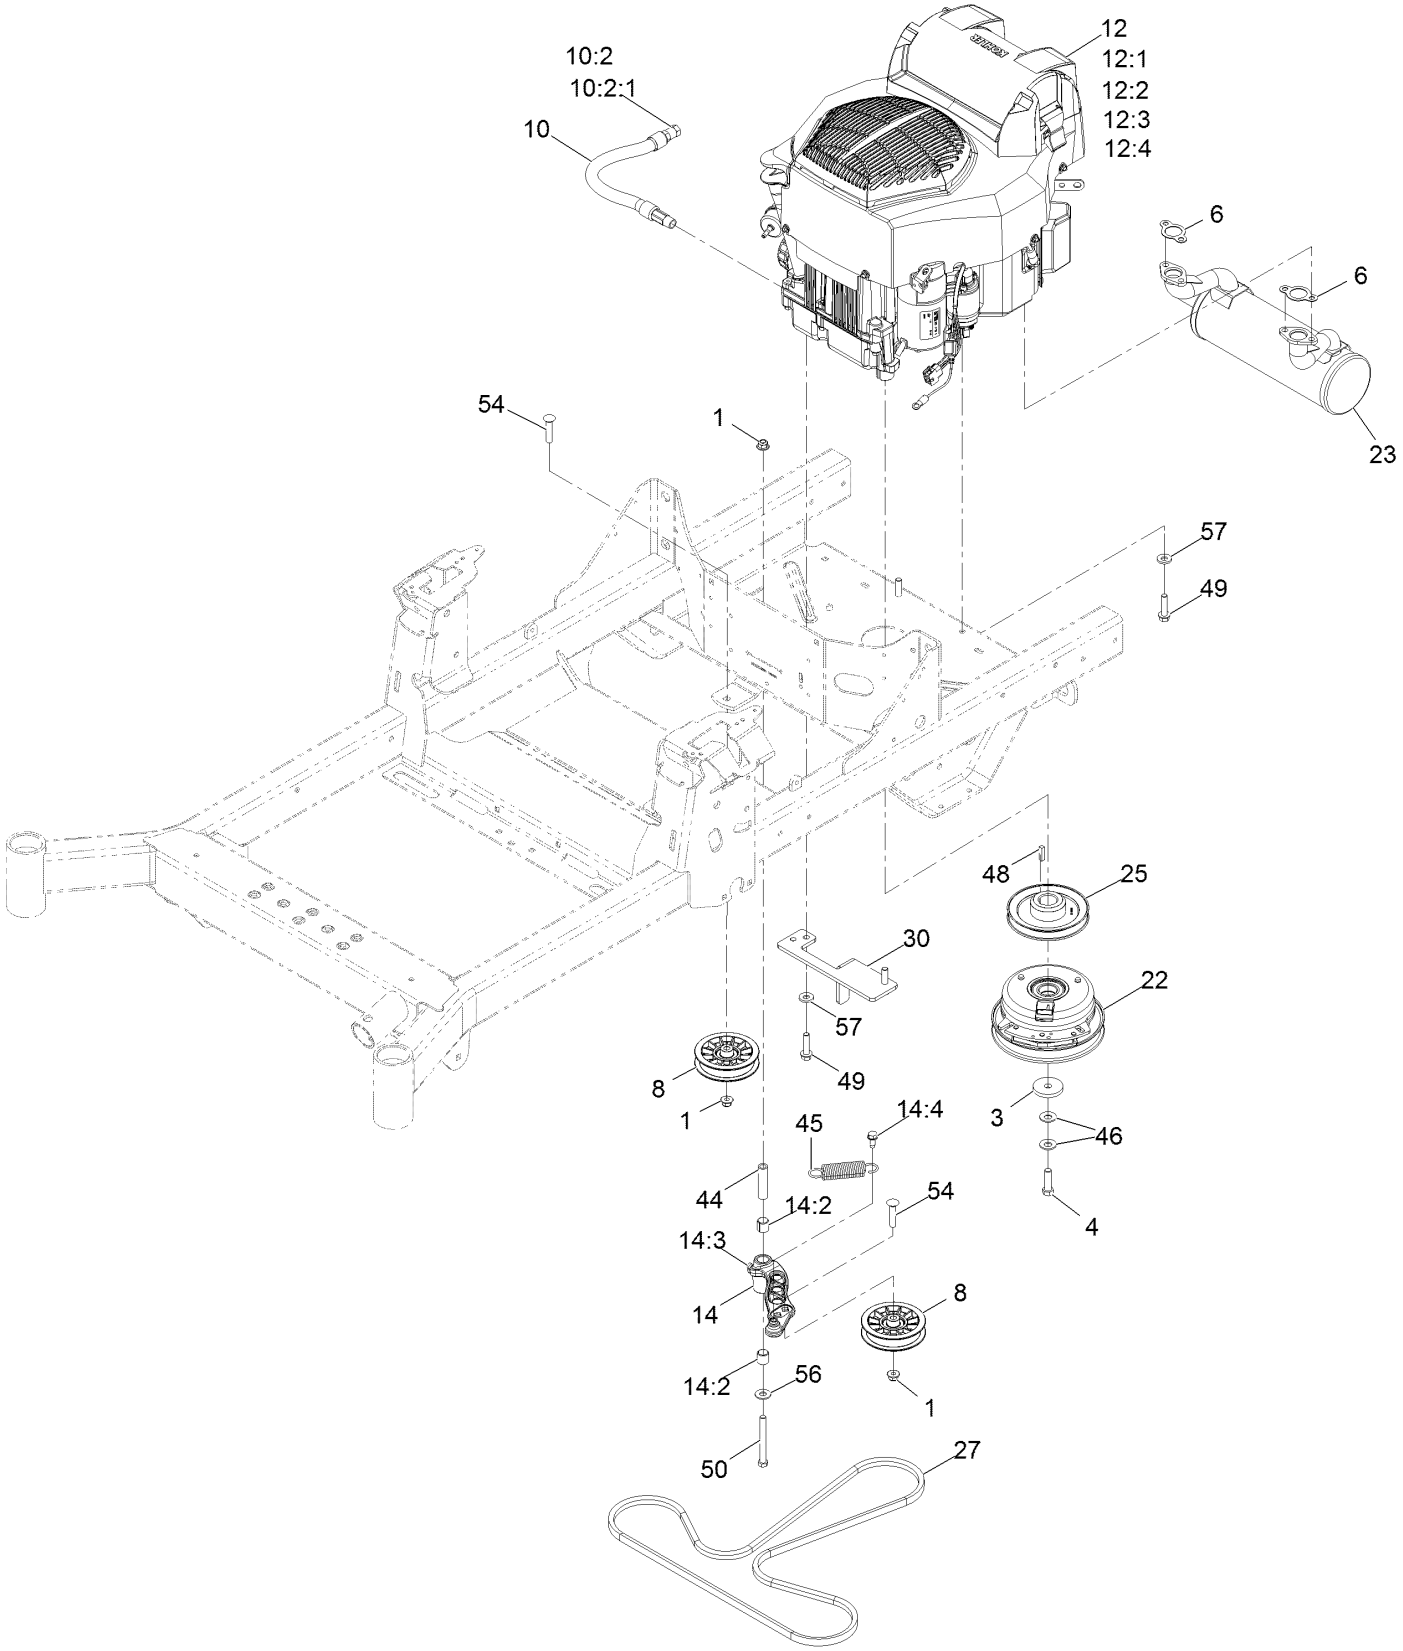


Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8301	3	Nut-Nyloc 3/8-16 Flg
3	109-6919	1	Washer-Clutch
4	109-9761	1	Screw-HH 7/16-20 X 1 1/2 W/Loctite ❑
6	1-653291	2	Gasket-Exhaust
8	116-2456	2	Pulley-Flat Idler
10	116-5108	1	Oil Drain Hose ASM ■
10:2	353-508	1	Plug-W/O-Ring ●
10:2:1	237-42	1	O-Ring
12		1	Engine-Kohler, Zt720-3025 ▲
12:1		1	Kohler 16 083 01-S Engine Air Filter ▲◆
12:2		1	Kohler 25 050 44-S Engine Oil Filter ▲◆
12:3		1	Kohler 24 050 13-S Fuel Filter ▲◆
12:4		1	Kohler 25 083 04-S Safety Filter ▲◆
14	126-0973	1	Idler Arm ASM
14:2	1-513034	2	Sleeve-Bearing
14:3	302-40	1	Zerk-90° 1/4-28
14:4	32144-11	1	Screw-HWH 5/16-18 X 3/4 Tf
22	126-4324	1	Clutch
23	126-4359	1	Muffler-Kohler Aes
25	126-5358	1	Sheave (W/Hub)
27	126-5993	1	Belt-V
30	126-6687-03	1	Anchor-Clutch
44	1-603384	1	Bushing-Pivot, Idler
45	1-603402	1	Spring-Extension
46	1-603610	2	Washer-Spring Disc 7/16
48	1-807259	1	Key-Machine 1/4 X 1/4 X 1
49	32144-102	4	Screw-HWH 3/8-16 X 1 1/2 Taptite
50	323-15	1	Screw-HH 3/8-16 X 3 1/2
54	3231-29	2	Bolt-Carriage 3/8-16 X 1 3/4
56	3256-4	1	Washer-3/8 Std
57	98-5975	4	Washer-Spring Disc 3/8

● Torque to 24-26 ft-lb
▲ Not serviced separately
❑ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.
■ Torque to 17-23 ft-lb
◆ Obtain parts from www.kohlerplus.com


Rear Wheel Assembly

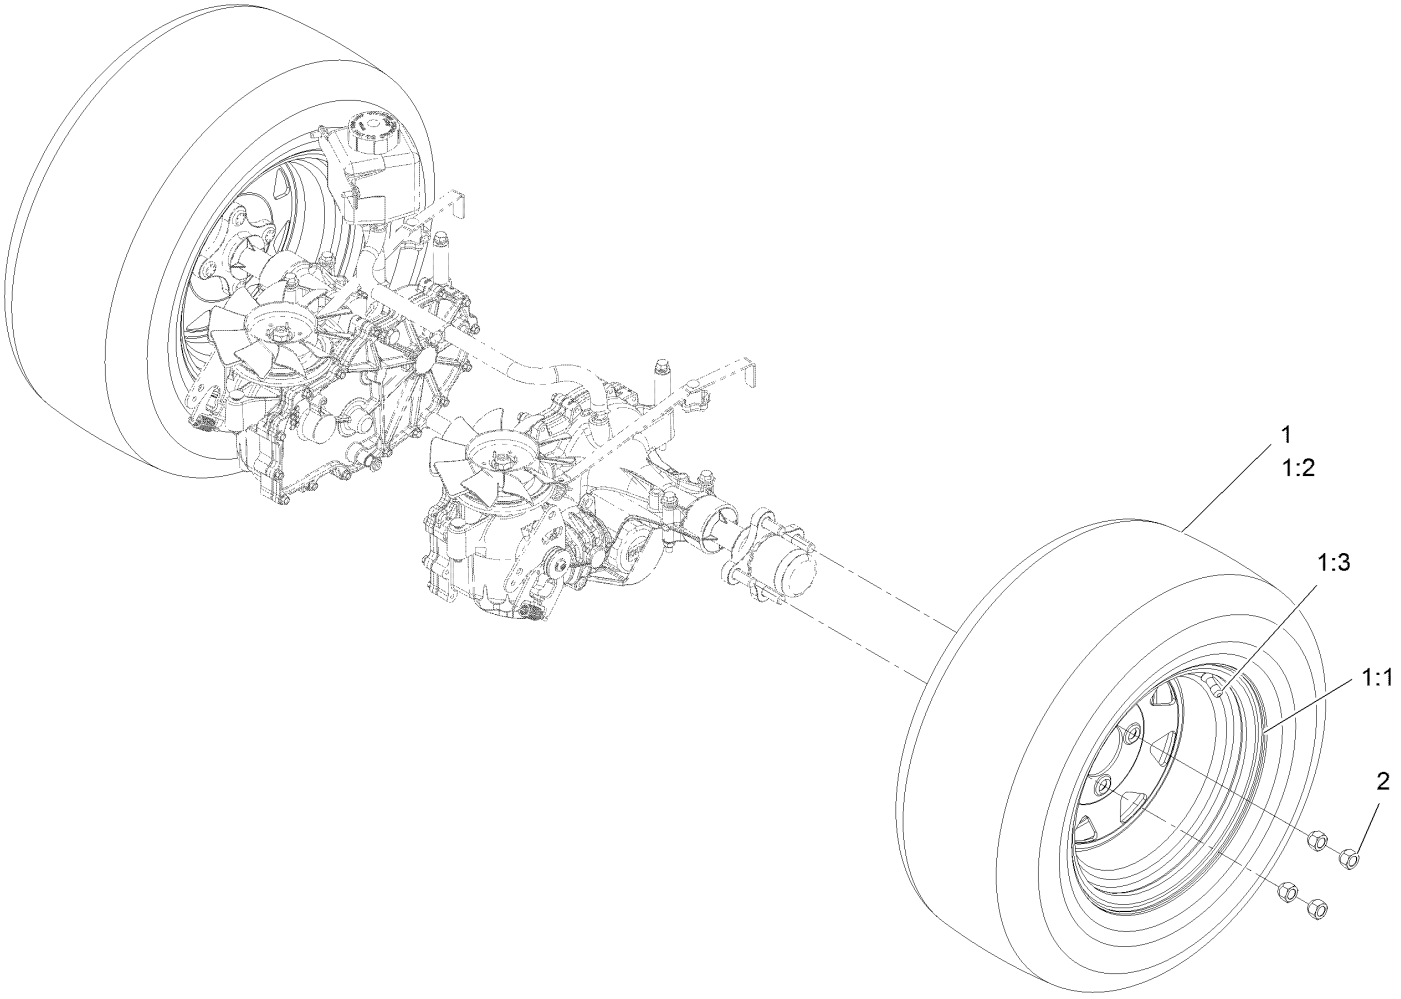

Rear Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3278	2	Wheel And Tire ASM
1:1	126-9073	1	Wheel
1:2	120-3271	1	Tire
1:3	232-27	1	Stem-Valve
2	242-50	8	Nut-Lug 1/2-20

Transaxle Assembly

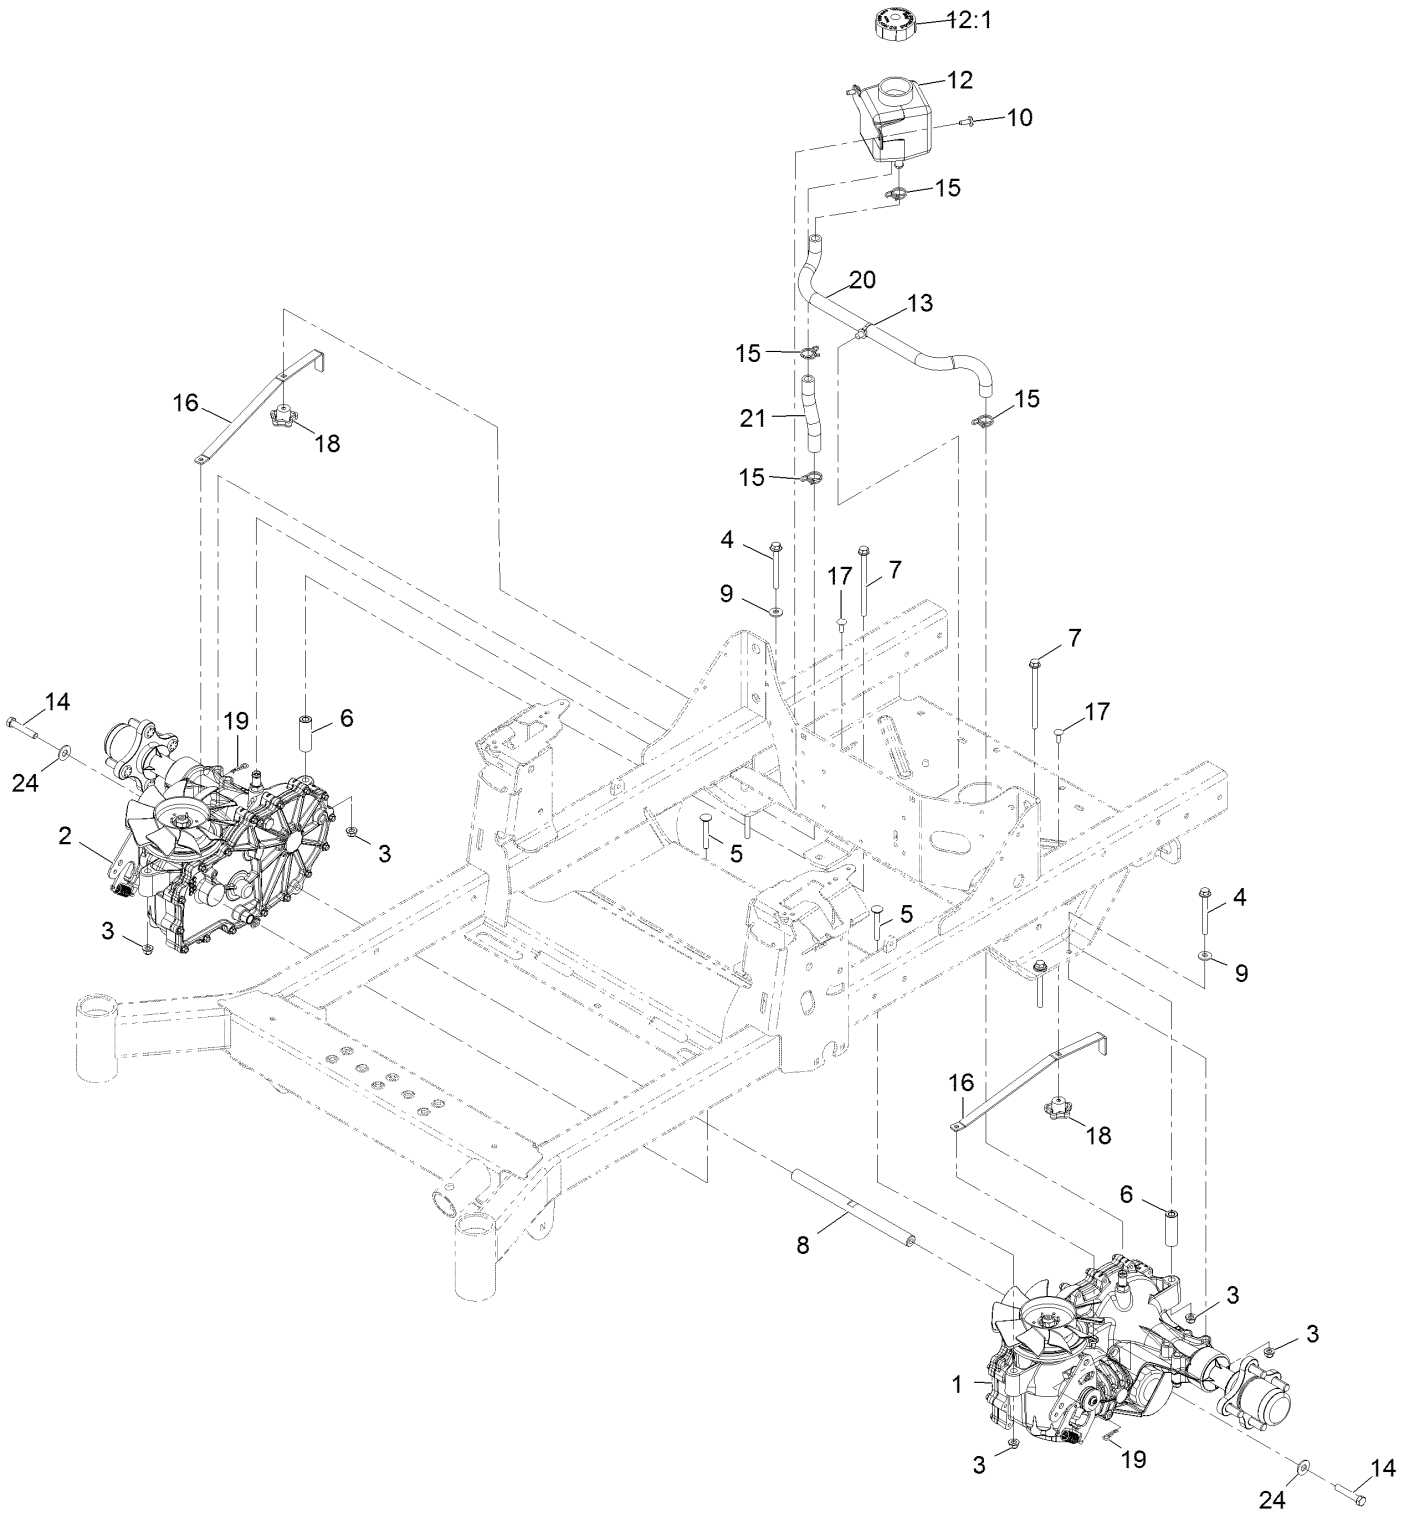


Transaxle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4882	1	LH Transaxle ASM
2	126-4883	1	RH Transaxle ASM
3	104-8300	8	Nut-Nyloc 5/16-18 Flg
4	126-4687	4	Screw-HHF
5	3230-7	2	Bolt-Carriage 5/16-18 X 2 1/4
6	116-5809	2	Spacer-Hydro
7	126-5896	2	Screw HHF
8	116-6833	1	Shaft-Spacer
9	1-303334	4	Washer-Spring Disc 5/16
10	126-6266	2	Screw-1/4-20 X .65 Torx Plus
12	109-2250	1	Tank-HYD
12:1	109-3320	1	Cap-Reservoir, HYD
13	32180-118	1	Clip-Tie
14	94-7972	2	Screw-HH W/Loctite ●
15	126-0327	4	Clamp-Hose
16	109-5395	2	Arm-Bypass, Hydro
17	3229-1	2	Bolt-Carriage 1/4-20 X 3/4
18	108-6402	2	Knob-Handle
19	1-806003	2	Hairpin-Cotter
20	126-5668	1	Hose-Hydraulic
21	126-5669	1	Hose-Hydraulic
24	3256-4	2	Washer-3/8 Std

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

LH Transaxle Assembly

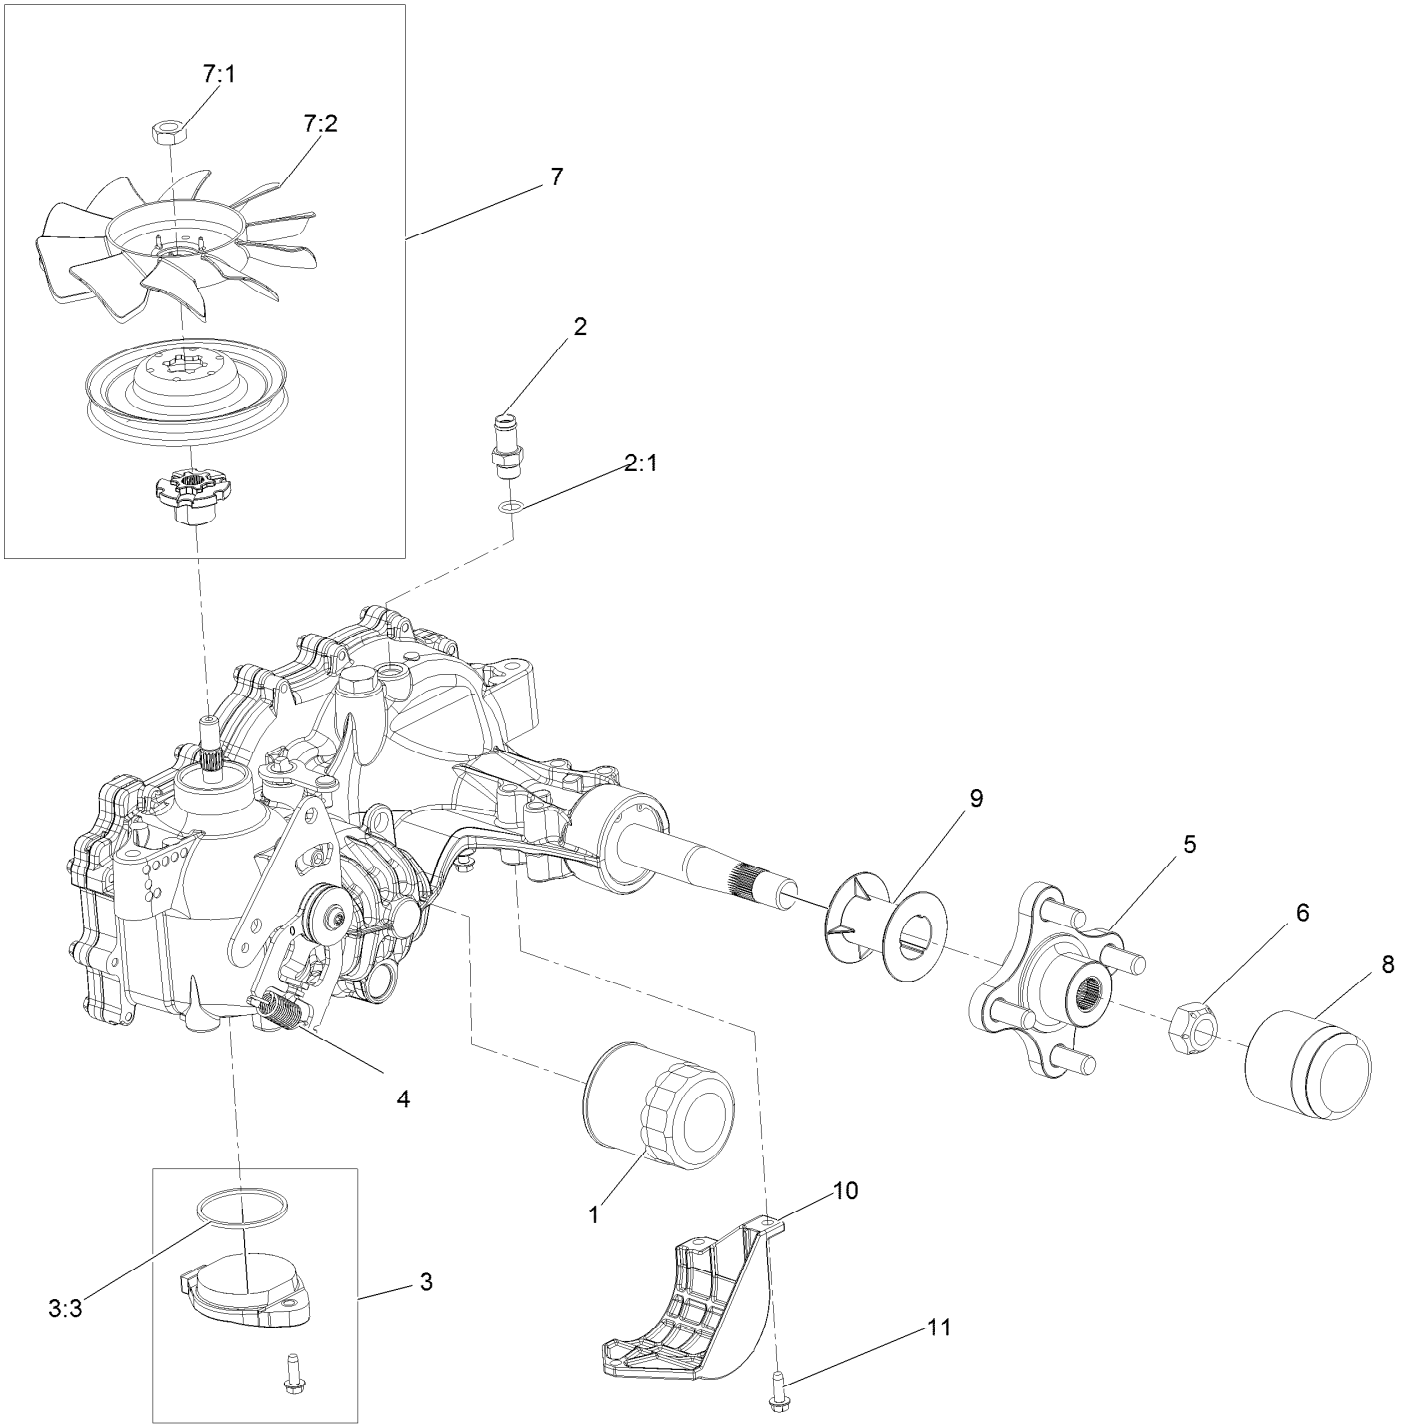


LH Transaxle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Filter-Hydraulic
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	114-8465	1	Charge Kit
3:3	109-3540	1	O-Ring-Charge Seal Cover
4	109-5592	1	Spring
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	135-7347	1	Fan And Pulley Kit
7:1	116-9714	1	Nut-HJ
7:2	126-0226	1	Fan
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7979	1	Guard-Filter, LH
11	104-2120	3	Screw
99	135-3604	1	Brake Shaft Seal Kit
99	109-3537	1	Seal Kit ●

● Not illustrated

Right Transaxle Assembly

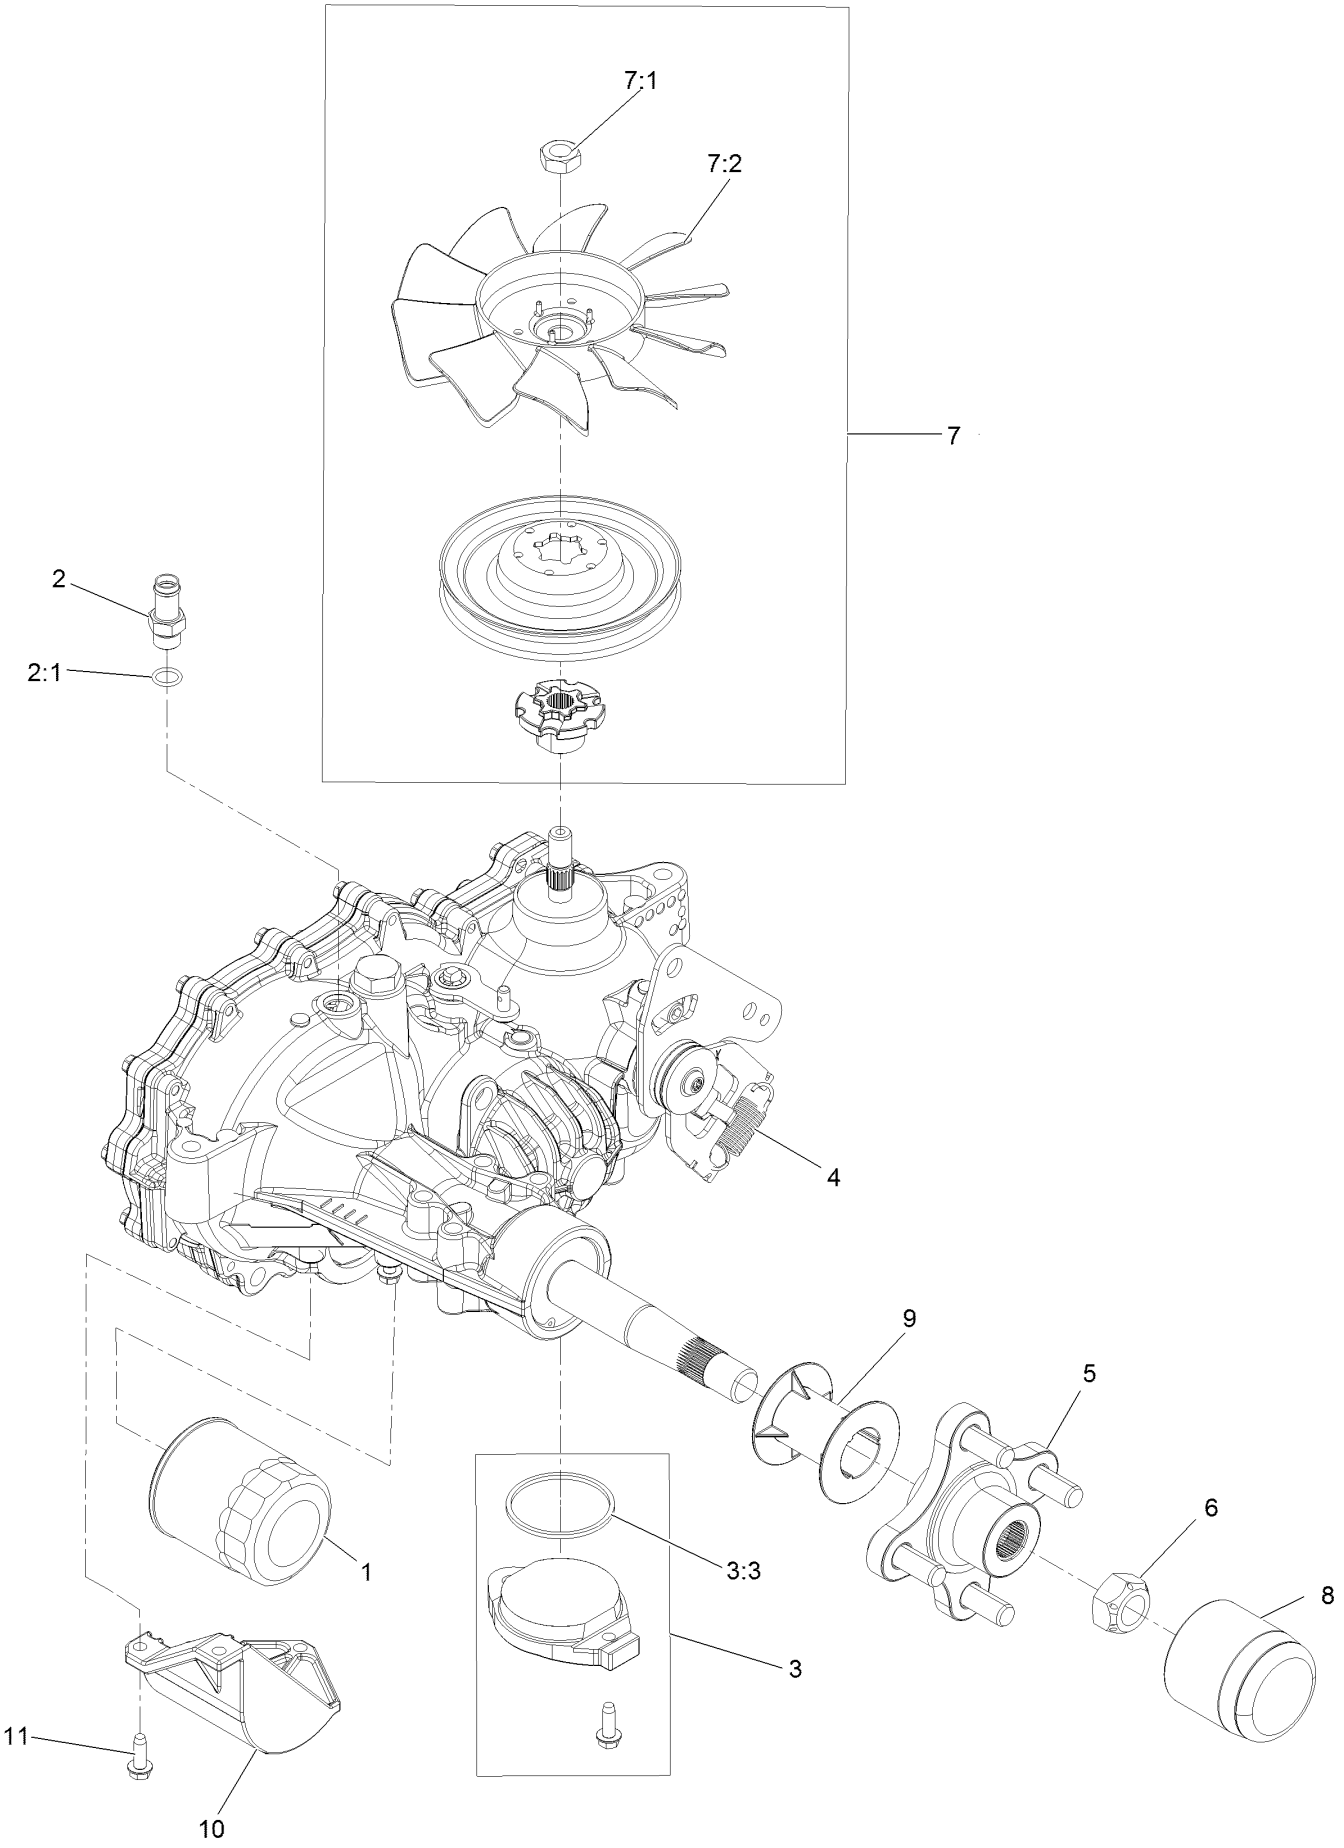


Right Transaxle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Filter-Hydraulic
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	114-8465	1	Charge Kit
3:3	109-3540	1	O-Ring-Charge Seal Cover
4	109-5592	1	Spring
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	135-7347	1	Fan And Pulley Kit
7:1	116-9714	1	Nut-HJ
7:2	126-0226	1	Fan
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7981	1	Guard-Filter, RH
11	104-2120	3	Screw
99	135-3604	1	Brake Shaft Seal Kit ●
99	109-3537	1	Seal Kit ●

● Not illustrated

Electrical Assembly

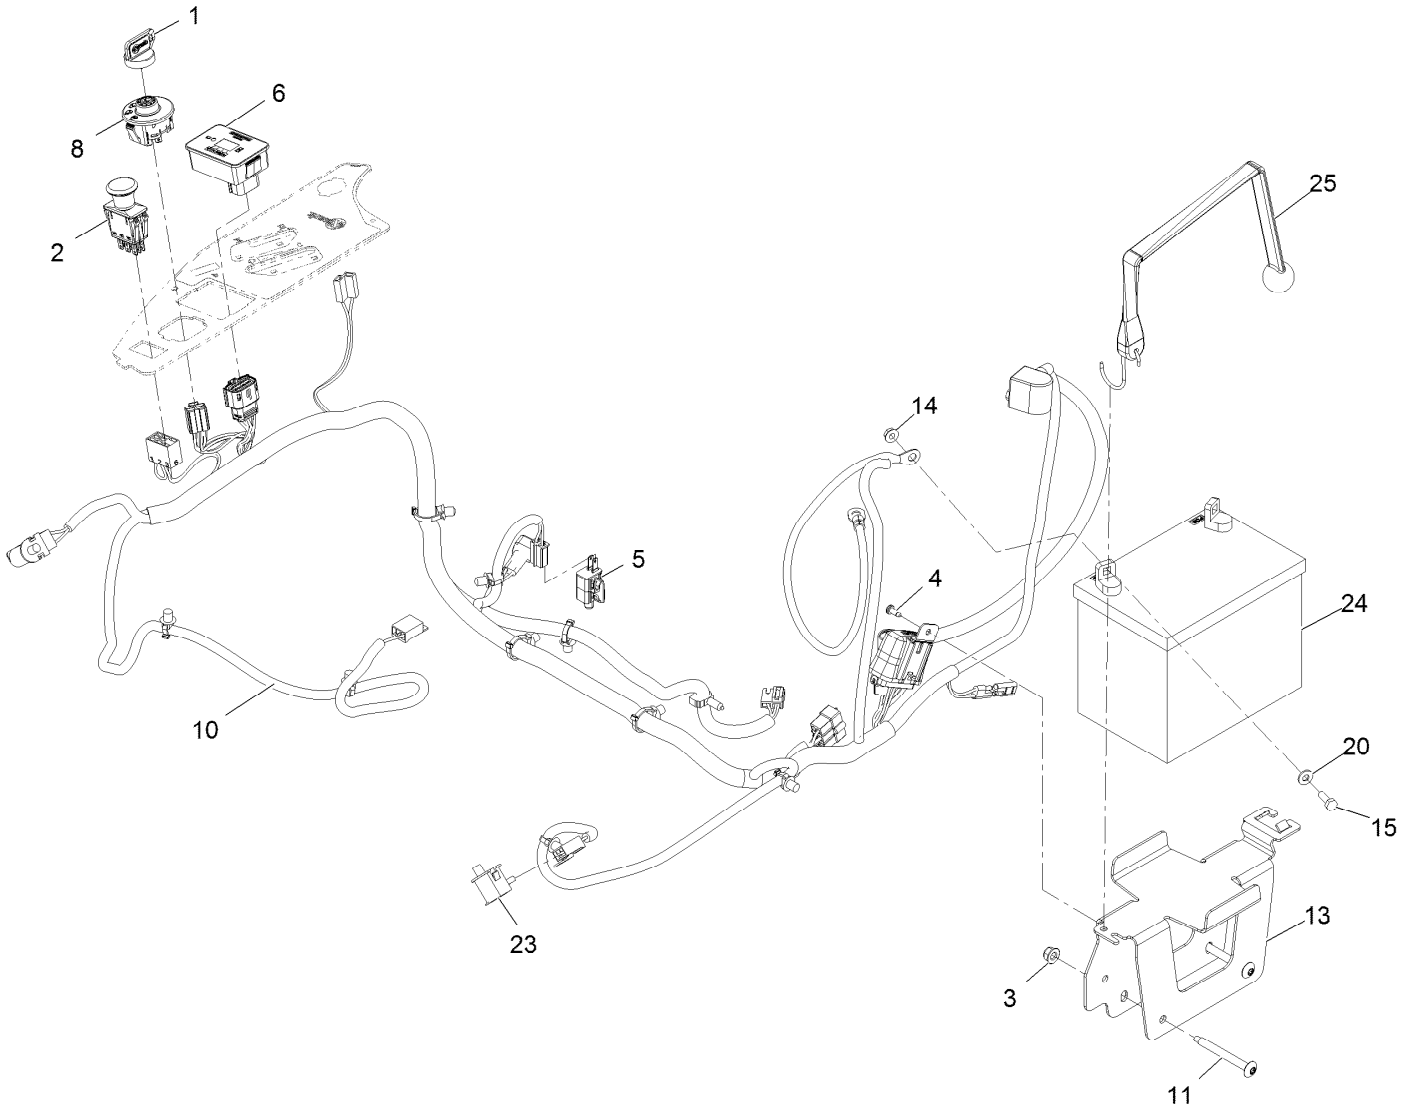


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-603511	1	Key-Ignition
1	103-2106	1	Key-Exmark Logo
2	103-5221	1	Switch-PTO
3	104-8300	2	Nut-Nyloc 5/16-18 Flg
4	105-6849	1	Screw-Tph #10-24 X 1/2 Tf
5	110-6765	1	Switch
6	116-5609	1	Module ASM
8	137-4100	1	Switch-Ignition
10	126-5803	1	Harness-Wire ▲
11	126-6267	2	Screw-Truss HD 5/16-18 X 2 3/4 Torx Plus
13	126-6725-03	1	Tray-Battery
14	32128-33	2	Nut-Whizlock 1/4-20
15	321-4	2	Screw-HH 1/4-20 X 3/4
20	3256-22	2	Washer-1/4 SAE
23	82-2190	2	Switch
24		1	Battery ●■
25	126-7627	1	Strap-Bungee

● Obtain locally. ■ Not serviced separately

▲ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Harness Assembly No. 126-5803

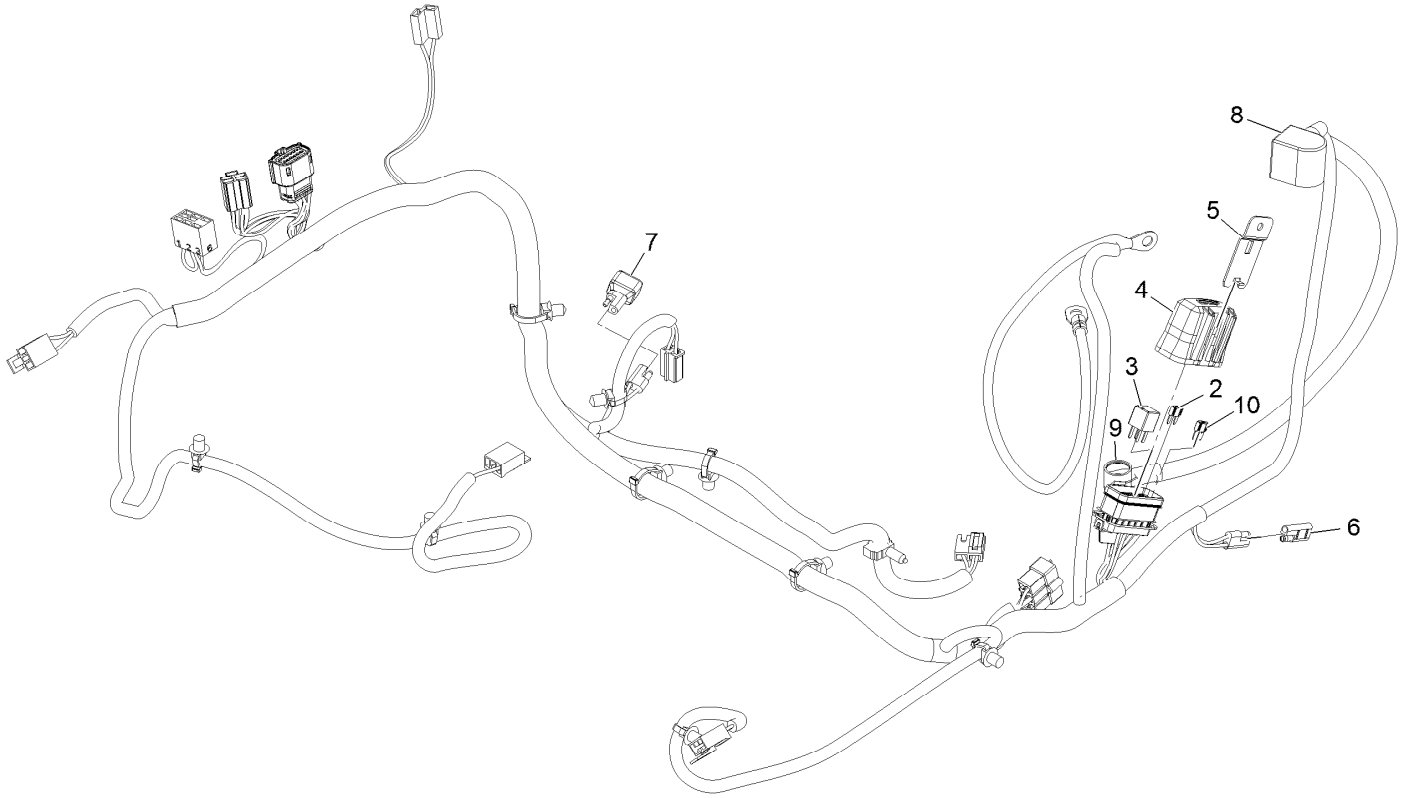

Harness Assembly No. 126-5803 (continued)

Ref.	Part Number	Qty.	Description
2	121-8868	1	Fuse-Mini Blade, 20 Amp
3	126-3991	1	Relay-Micro
4	32180-176	1	Cover-Block, Fuse
5	32180-177	1	Clip-Mounting
6	116-0053	1	Cap-Plug
7	103-3895	1	Diode
8	126-8876	1	Insulator-Battery
9	1-543393	1	Insulator-Solenoid
10	121-8867	1	Fuse-Mini Blade, 15 Amp

Notes:

Notes:

Notes:

MAXIMIZE THE PERFORMANCE OF YOUR EXMARK MACHINE.



EXMARK® PREMIUM ENGINE OIL

Exmark now offers a family of engine oil viscosities to perform well in any environment. Each viscosity has the same synthetic formulation to give you what you need in punishing conditions. We designed each grade to the highest quality, making it ideal even for diesel applications. Coupled with Exmark Premium Fuel Treatment, we have the performance products to make your machine hum.

EXMARK PREMIUM ENGINE OIL SAE 30/10W-30

- Meets zero shear requirements of a straight grade SAE 30 as well as the cold temp properties of a 10W-30.
- Most versatile oil in the industry.
- Superior corrosion protection over conventional oil - even in corrosive, humid environments.

EXMARK PREMIUM ENGINE OIL SAE 10W-50

- Full synthetic formulation gives you peak performance. Don't settle for less.
- Wide span multi-grade combines easy starting in cold weather with maximum protection in high temperature operation.
- Reduce friction & wear over standard mineral formulations.

EXMARK PREMIUM ENGINE OIL UTV FORMULATION

- 4-cycle high-temp formulation.
- Heavier viscosity, full synthetic, perfect for your UTV.

EXMARK PREMIUM ENGINE OIL SAE 20W-50

- Perfect for your big block engine, or any application in severe service.
- Same full synthetic formulation as all other Exmark Premium viscosities.
- Also effective for use in severe service small block engines.

EXMARK PREMIUM ENGINE OIL SAE 0W-40

- The perfect choice for when the weather turns cold or unpredictable, and your Exmark UTV has to perform.
- Commercial quality for severe service.
- Advanced additive package helps prevent corrosion from long-term storage.

EXMARK PREMIUM UTV EXTREME CONDITIONS GEAR OIL

- SAE 80W-90, designed to keep your UTV performing at its peak.
- Shear stable, hypoid gear lube.
- Includes a premium additive system to combat wear, oxidation, rust & corrosion.

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
FULL SUSPENSION SEAT
DECK LIFT ASSIST KIT
HITCH KIT
LIGHT KIT
12V POWER PORT
MICRO-MULCH SYSTEM
OPERATOR CONTROLLED DISCHARGE
SUN SHADE
TRASH CONTAINER
TURF STRIPER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
DUAL-TAIL WHEEL
FLOOR PAN EXTENDER
HITCH KIT
LIGHT KIT
MICRO-MULCH SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)
SNOW BLADE
SNOWBLOWER
SUN SHADE
TRASH CONTAINER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM
WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER
MICRO-MULCH SYSTEM
TURF STRIPER
STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No. Label Here (Included in the Literature Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2020 Exmark Mfg. Co., Inc.
All Rights Reserved

415 Industrial Row
Beatrice, NE 68310
(402) 223-6375
Fax (402) 223-5489

Part No. 4505-152 Rev. A
Printed in the USA.



www.exmark.com