



Count on it.

Parts Catalog

Greensmaster® Flex™ 2120

Traction Unit

Model No. 04044—Serial No. 405500001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Frame and Handle Mount Assembly	4
Grass Basket Assembly	5
Left Side Transmission Assembly	6
Right Side Transmission Assembly	7
Clutch Assembly	8
Clutch Service Assembly No. 137-2425	9
Differential and Traction Drum Assembly	11
Differential Assembly No. 115-6711	12
Drum Drive Assembly	13
Engine Assembly	14
Shift Lever Assembly	15
Handle Assembly	16
Throttle and Console Assembly	17
Crankcase Assembly	18
Crankshaft and Piston Assembly	19
Intake and Exhaust Assembly	20
Air Cleaner Assembly	22
Governor Assembly	23
Recoil and Shroud Assembly	24
Recoil Assembly	25
Fuel Tank Assembly	26
Carburetor Assembly	27
Flywheel and Coil Assembly	28
Gear Reduction Assembly	29
Attachments and Accessories	30

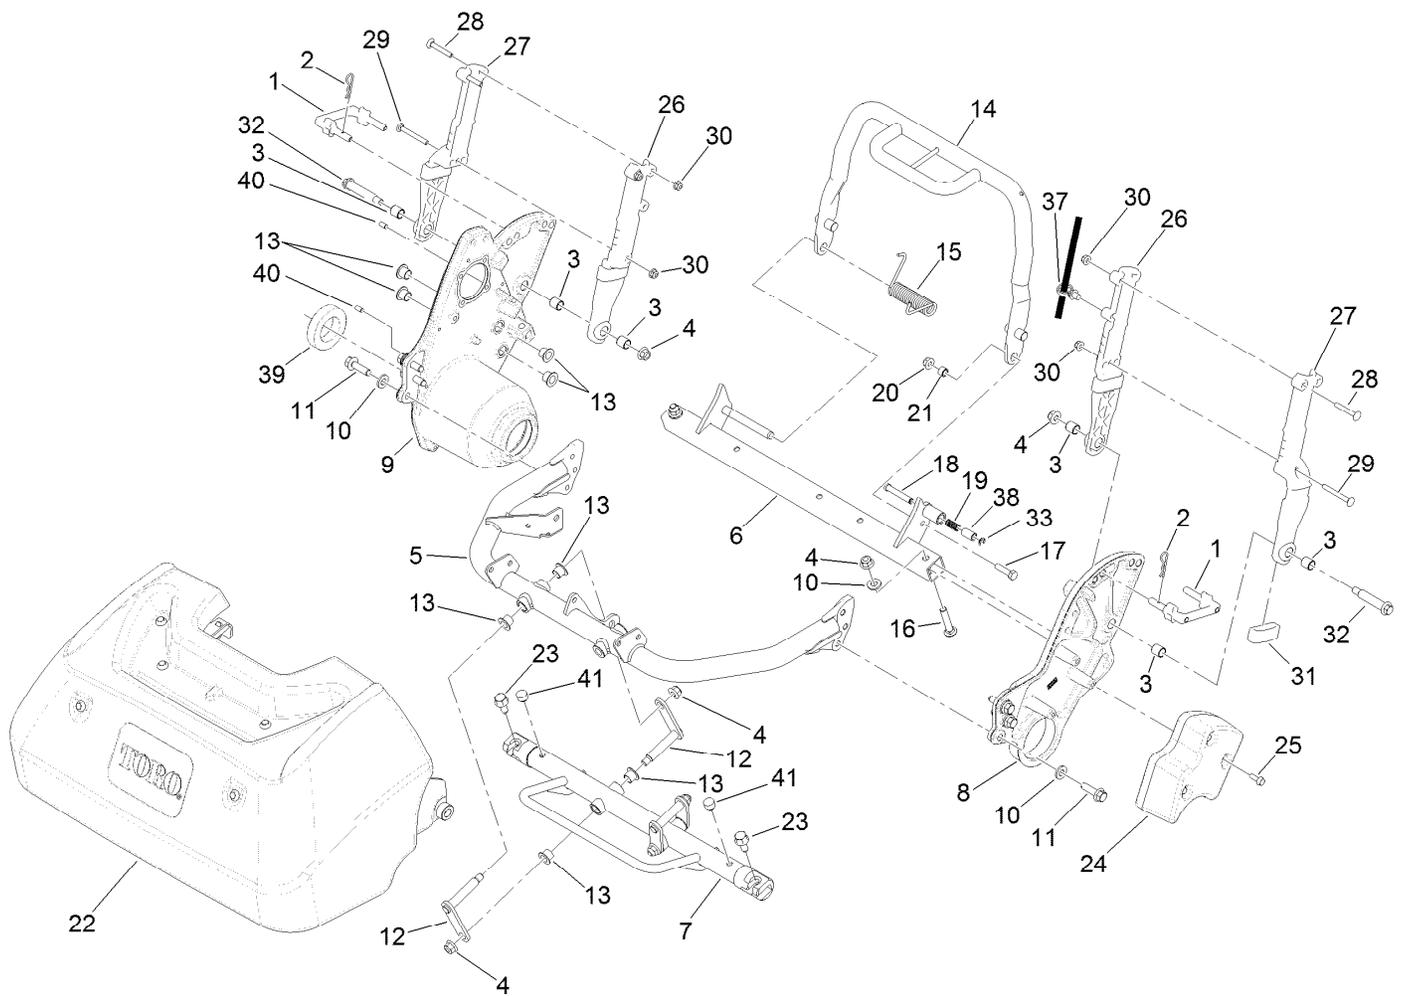

Frame and Handle Mount Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	120-9241	2	Retainer-Handle	20	119-4041	1	Nut-HF
2	120-9717	2	Pin-Hair	21	120-9697	1	Spacer
3	115-7295	6	Bushing-Straight	22		1	Grass Basket ASM ●
4	119-4042	8	Nut-HF, NI	23	131-6211	2	Screw-HH
5	131-6159-01	1	Frame	24	115-7234-03	1	Weight-Counter
6	115-7110-01	1	Frame-Rear	25	131-6150	3	Screw-HWHTF
7	139-5628-01	1	Frame-Roll	26	125-3522	2	Clamp-Handle
8	115-7160	1	Plate-Side, LH	27	125-3524	2	Clamp-Handle, Offset
9	115-7154	1	Housing-Drive, Drum	28	120-9698	4	Bolt-CARR
10	115-7293	8	Washer-Hardened	29	120-9699	2	Screw-CARR
11	115-7024	6	Screw-HHF	30	119-4040	6	Nut-Flange, NI
12	117-1396	4	Link	31	125-3525	4	Bumper-Handle
13	125-5239	12	Bushing-Flange	32	127-1510	2	Screw-Shoulder
14	115-7255-03	1	Kickstand	33	701197	1	E-Ring
15	115-7258	1	Spring-Torsion, RH	37	32180-030	1	Clip-Tie
16	120-9715	2	Screw-CARR	38	120-9740	1	Spacer
17	120-9696	1	Screw-HH	39	115-6860	1	Bearing-Ball, Stainless
18	120-9739	1	Pin-Lock	40	95-0715	2	Pin-Dowel
19	107-8885	1	Spring-Compression	41	107-8042	2	Bumper-Rubber

● Not serviced separately

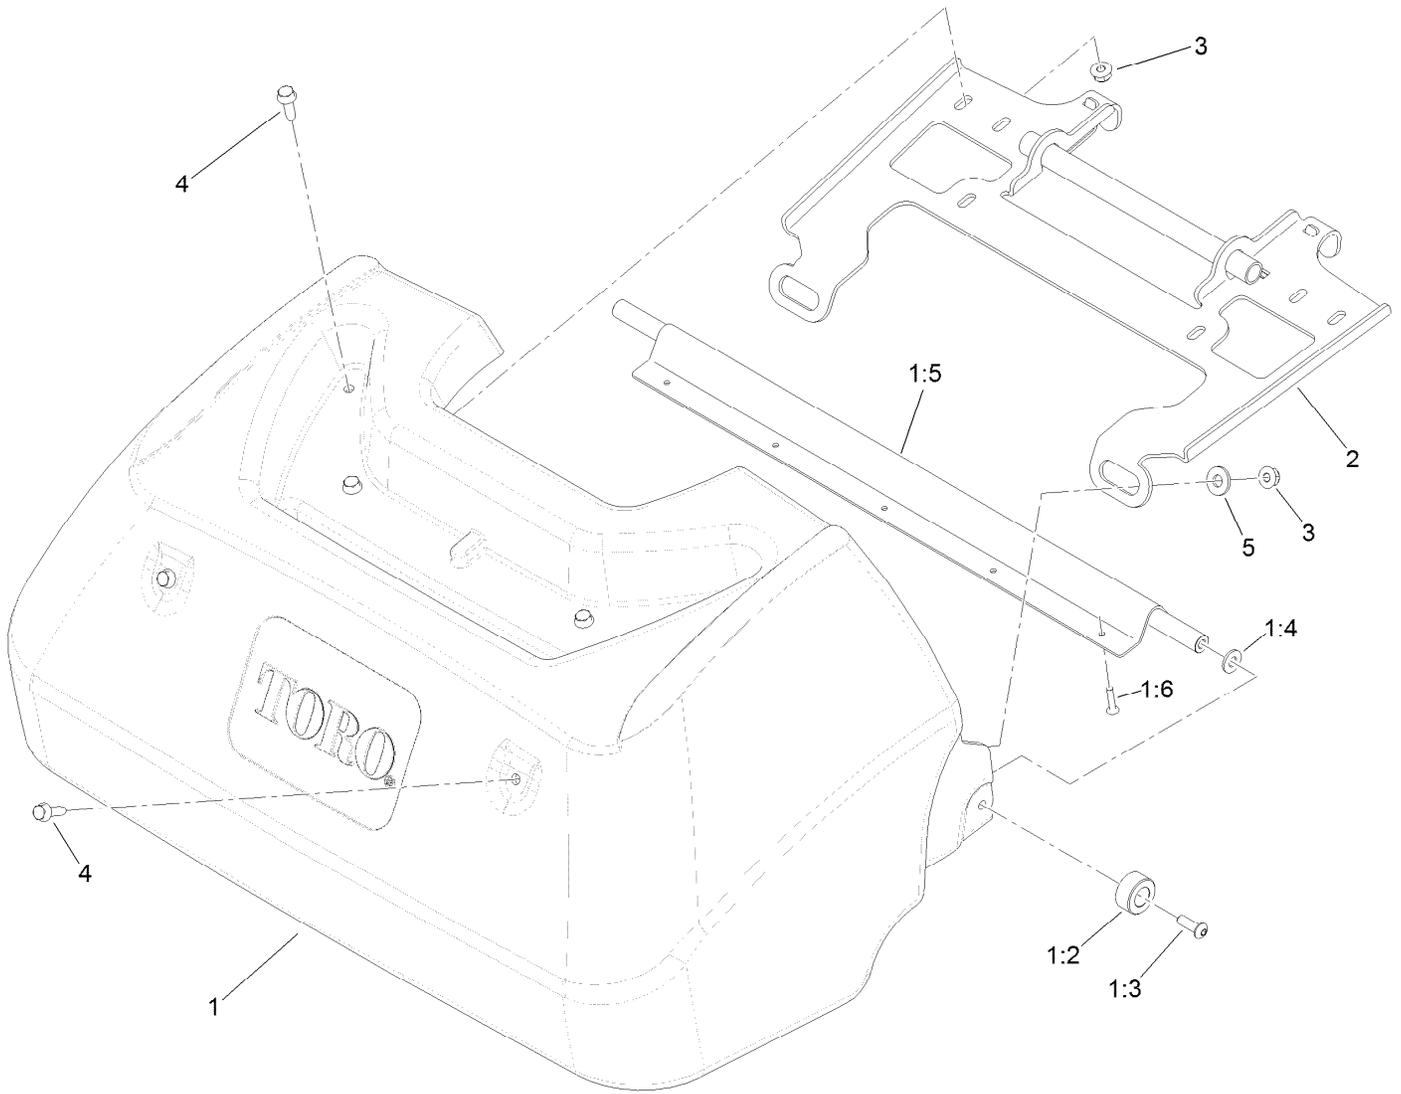


Grass Basket Assembly

Ref.	Part Number	Qty.	Description
1	127-1539	1	Basket ASM
1:2	121-4730	2	Bumper-Basket
1:3	3274-69	2	Screw-HSBH
1:4	120-9679	2	Washer-Flat
1:5	127-1541	1	Channel
1:6	3290-382	5	Rivet-Pop
2	133-8833-03	1	Bracket-Basket
3	119-4040	6	Nut-Flange, NI
4	119-4012	6	Screw-HWHTF
5	1-603716	2	Washer-Friction

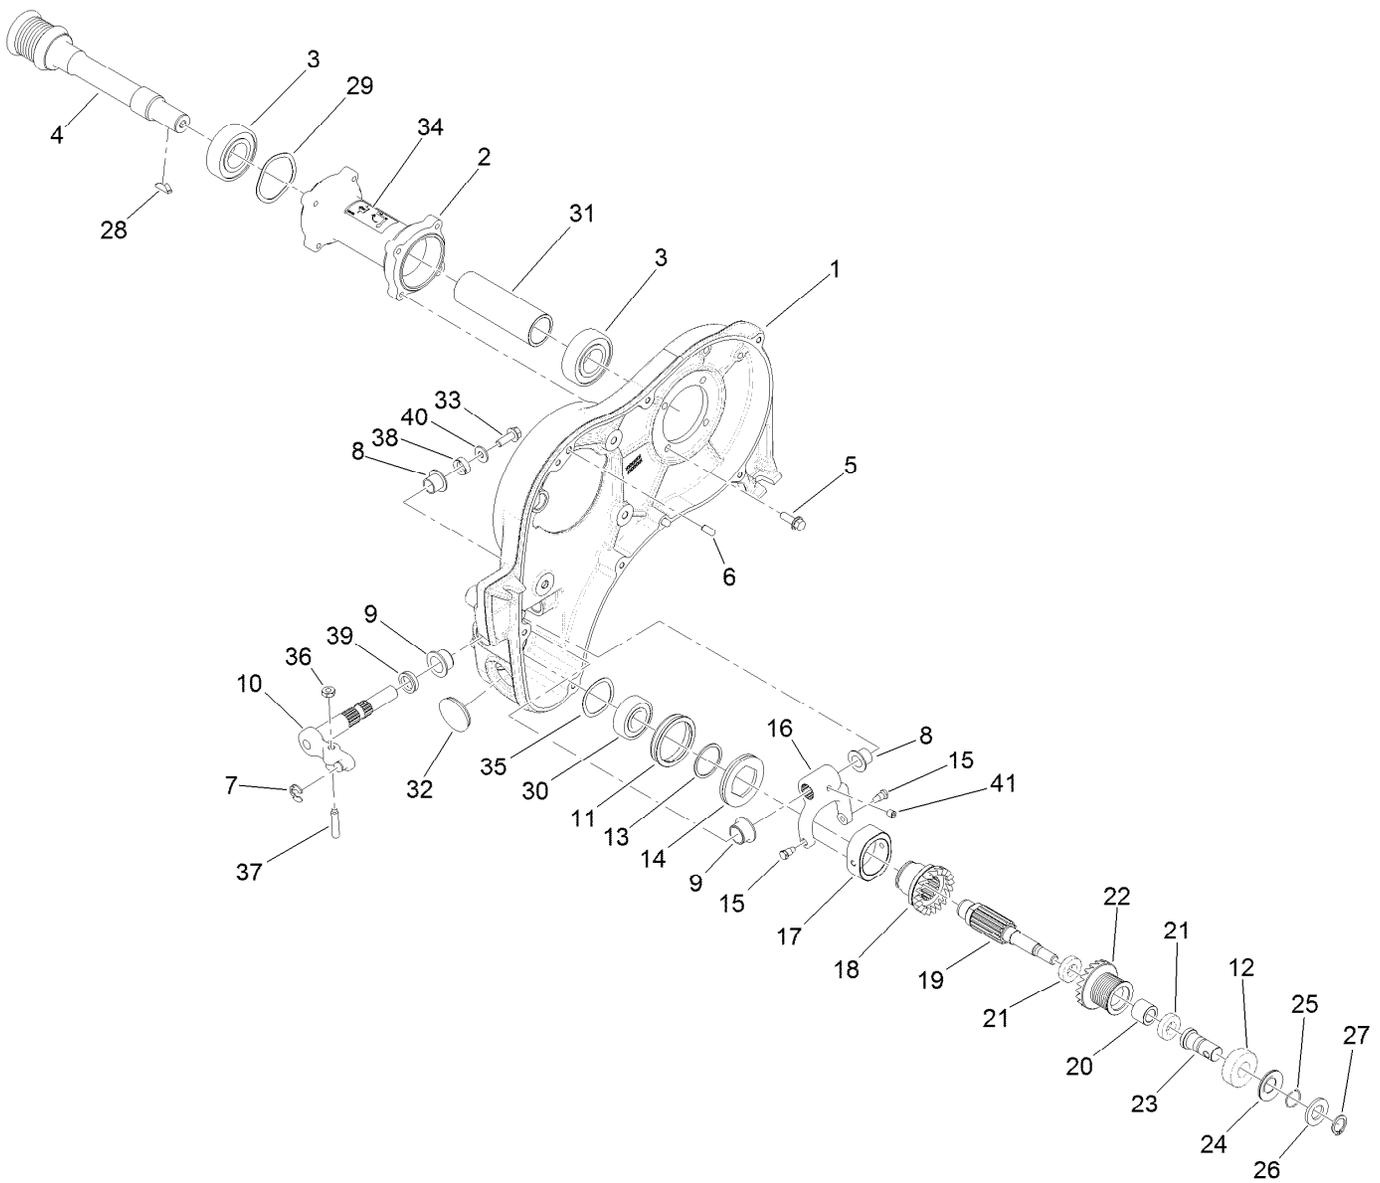

Left Side Transmission Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	131-3079	1	Housing-Transmission	22	131-3157	1	Clutch-Jaw, Driver
2	115-7158	1	Housing-Extension	23	131-3117	1	Collar-Bearing
3	251-82	2	Bearing-Ball	24	115-6923	1	Shield-Bearing, Flocked
4	115-6747	1	Pulley-Driven	25	115-7143	1	Spring-Wave
5	119-1138	4	Screw-HWH	26	115-7144	1	Washer-Flat
6	95-0715	2	Pin-Dowel	27	115-6755	1	Ring-Retaining
7	32151-47	1	Ring-Retaining	28	3257-30	1	Key-Woodruff
8	125-5239	2	Bushing-Flange	29	3290-485	1	Washer-Wave
9	108-2973	2	Bushing-Flange	30	38-7820	1	Bearing-Ball
10	139-5620	1	Lever-Clutch, Reel	31	115-7249	1	Spacer
11	115-7131	1	Ring-Brake, Reel	32	115-7288	1	Plug
12	115-6869	1	Bearing-Ball, Stainless	33	119-1138	1	Screw-HWH
13	115-7243	1	Ring-Retaining, EXT	34	120-9571	1	Decal-Release, Traction
14	115-7130	1	Disc-Brake, Reel	35	131-3170	1	Spring-Wave
15	115-7123	2	Pin-Pivot, Clutch	36	120-9695	1	Nut-Jam
16	139-5623	1	Fork-Clutch, Reel	37	1239	1	Setscrew
17	115-7125	1	Hub-Clutch, Reel	38	139-5621	1	Seal V-Ring
18	131-3158	1	Clutch-Jaw, Slider	39	139-5622	1	Seal V-Ring
19	115-7138	1	Shaft-Clutch	40	119-8952	1	Washer
20	115-7222	1	Spacer	41	3245-32	1	Screw-HSH
21	115-6870	2	Bearing-Ball, Sealed				

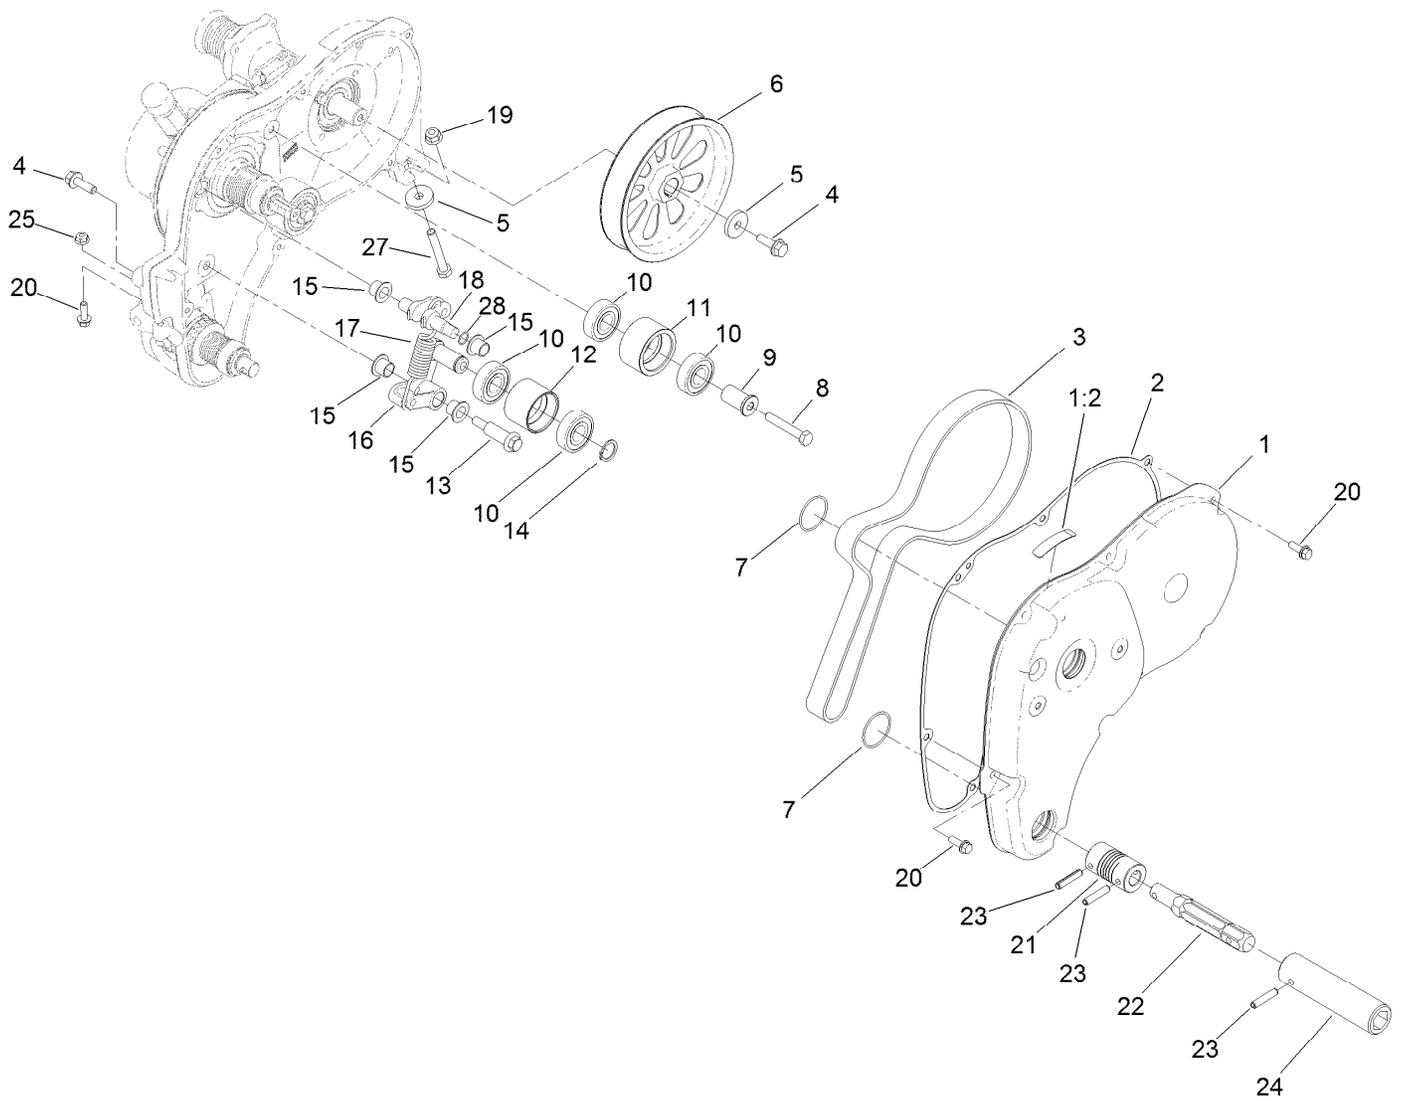

Right Side Transmission Assembly


Ref.	Part Number	Qty.	Description
1	132-9589	1	Transmission Cover ASM
1:2	120-9570	1	Decal-Warning
2	115-7140	1	Gasket-Housing, Main
3	115-6743	1	Belt-Drive, Main
4	115-5142	2	Screw-HHF
5	115-7292	2	Washer-Hardened
6	115-7285	1	Pulley-Driven
7	107-9455	2	O-Ring
8	120-9686	2	Screw-HH
9	115-7129	2	Bushing-Pulley, Idler
10	38-7820	6	Bearing-Ball
11	115-6873	2	Pulley-Idler
12	115-7133	1	Pulley-Idler
13	127-1509	1	Screw-Shoulder

Ref.	Part Number	Qty.	Description
14	32151-12	1	Ring-Retaining
15	125-5239	4	Bushing-Flange
16	115-6847	1	Idler-Drive, Main
17	133-8757	1	Spring-Extension
18	115-7128	1	Lever-Spring
19	119-4041	1	Nut-HF
20	119-1138	8	Screw-HWH
21	133-2341	1	Coupling-Helical
22	131-3167	1	Shaft-Hex
23	125-3542	3	Pin-Spring
24	110-2390	1	Tube-Hex
25	119-4040	1	Nut-Flange, NI
27	120-9738	1	Screw-HH
28	1-603992	1	O-Ring

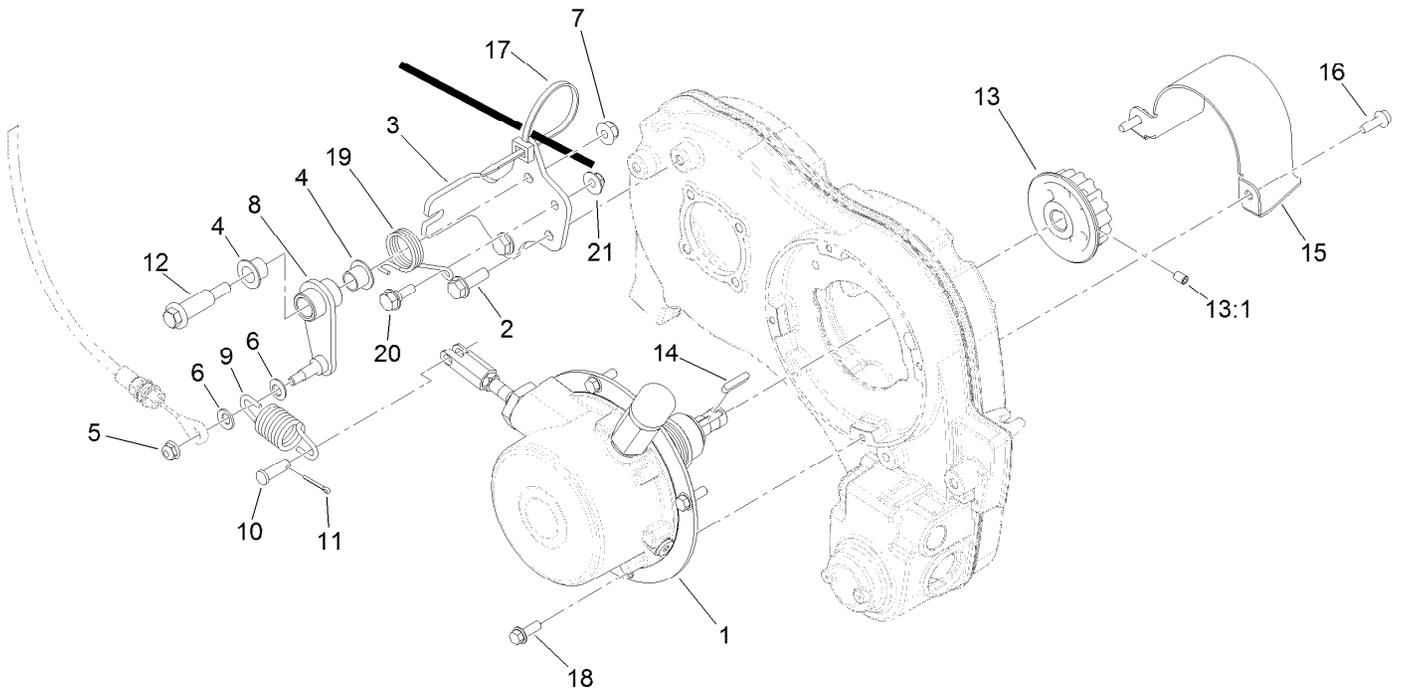

Clutch Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-2425	1	Clutch Service ASM	12	127-1509	1	Screw-Shoulder
2	115-5142	2	Screw-HHF	13	115-7276	1	Endpiece-Coupler, 15Mm
3	133-2326	1	Bracket-Cable, Traction	13:1	3245-41	2	Screw-HSH
4	125-5239	2	Bushing-Flange	14	88-7150	1	Key-Square
5	119-4040	1	Nut-Flange, NI	15	120-9552-03	1	Guard-Coupler
6	3290-475	2	Washer-Belleville	16	131-6150	2	Screw-HWHTF
7	104-8300	1	Nut-HF, NI	17	3290-378	1	Tie-Cable
8	131-3107	1	Lever-Clutch	18	119-1138	4	Screw-HWH
9	131-3113	1	Spring-Extention	19	132-9593	1	Spring-Torsion
10	1-808280	1	Pin-Clevis	20	120-7024	1	Screw-Shoulder, HWH
11	3272-6	1	Pin-Cotter	21	114-3778	1	Nut-HF

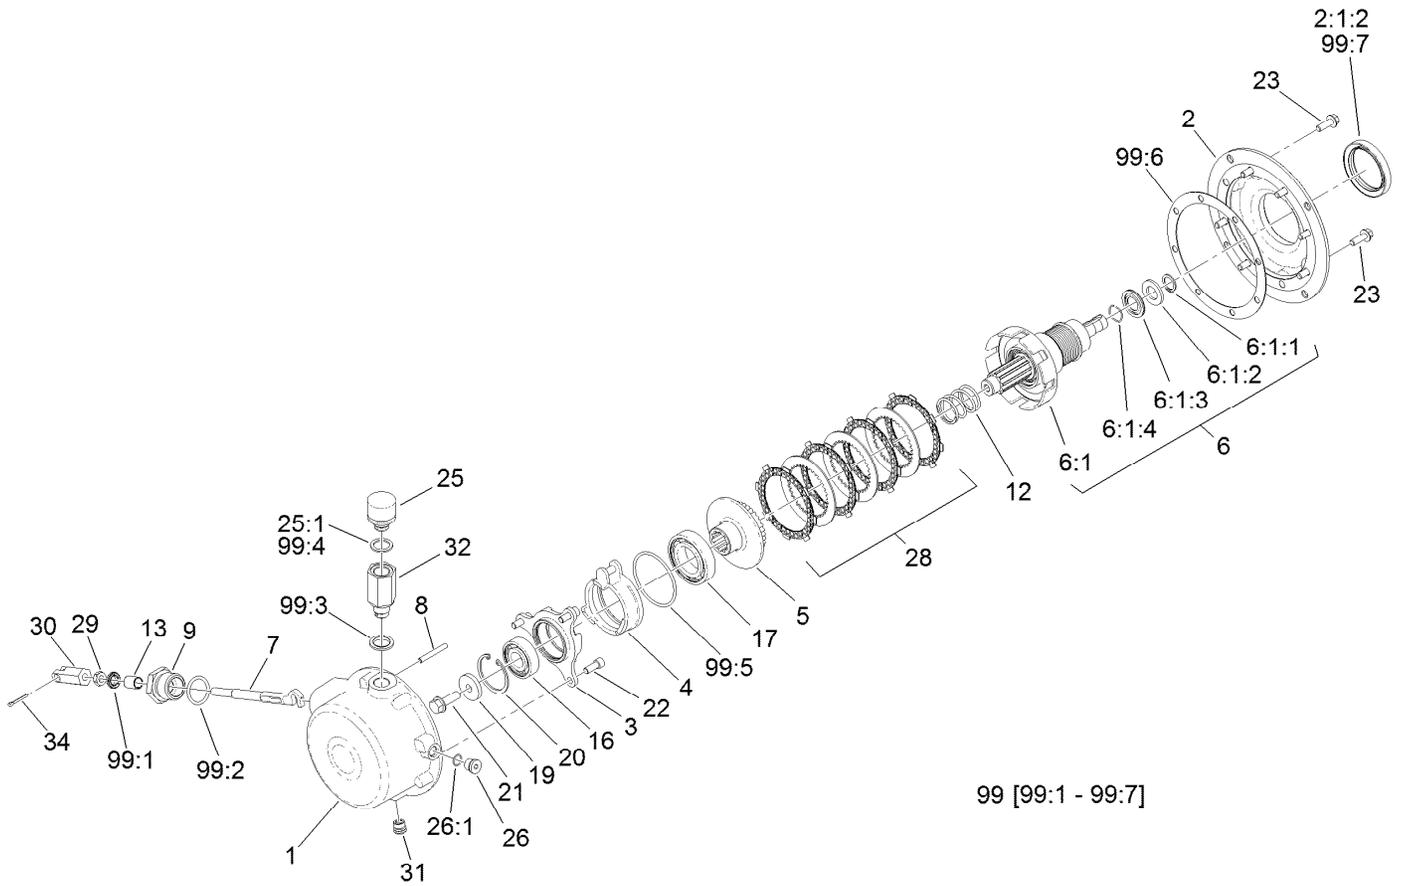

Clutch Service Assembly No. 137-2425

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	136-7292	1	Cover-Clutch	17	130-9464	1	Bearing-Ball
2	133-8781	1	Cover Service ASM	19	115-7292	1	Washer-Hardened
2:1:2	133-8905	1	Seal-Oil	20	107-3530	1	Ring-Retaining
3	131-3040	1	Cam-Clutch	21	115-5142	1	Screw-HHF
4	131-3050	1	Actuator-Clutch	22	3274-15	3	Screw-HSH
5	131-3052	1	Plate-Press	23	115-5103	8	Screw-HHF
6	133-8899	1	Shaft Service ASM	25	133-2359	1	Breather-Vent, Nylon
6:1		1	Shaft ASM ●	25:1	133-5659	1	Washer-Rubber
6:1:1	115-6755	1	Ring-Retaining	26	353-990	1	Plug ASM
6:1:2	115-7144	1	Washer-Flat	26:1	237-78	1	O-Ring
6:1:3	115-6923	1	Shield-Bearing, Flocked	28	132-5484	1	Clutch Pack Kit
6:1:4	115-7143	1	Spring-Wave	29	AU425-155	1	Nut-Jam
7	131-3051	1	Pin-Actuator	30	131-3172	1	Anchor-Adjust, Spring
8	131-3036	1	Pin-Locator	31	132-5431	1	Plug-Zero Leak , W/Magnet
9	136-7290	1	Plug-Actuator	32	133-5658	1	Adapter-Vent
12	131-3148	1	Spring-Compression	34	3272-6	1	Pin-Cotter
13	131-3038	1	Bushing-Sleeve	99	133-8898	1	MVP Kit-Seal, Clutch
16	131-3037	1	Bearing-Ball	99:1	131-3126	1	Seal-Oil


● Not serviced separately

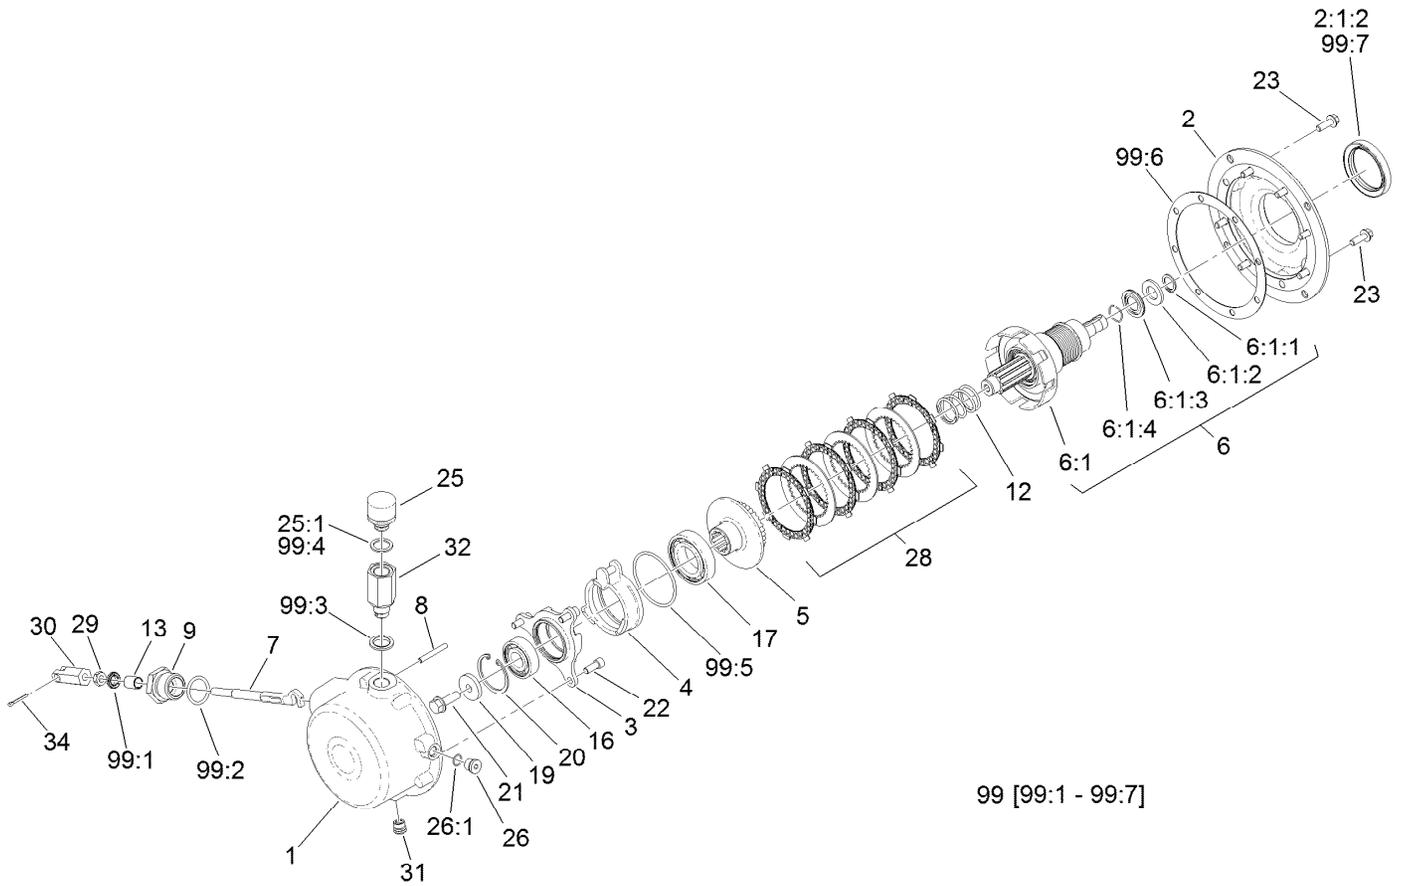

Clutch Service Assembly No. 137-2425 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
99:2	237-81	1	O-Ring	99:5	103-5895	1	O-Ring
99:3	10-06-031	1	Seal-Dowty	99:6	130-9477	1	Gasket
99:4	133-5659	1	Washer-Rubber	99:7	133-8905	1	Seal-Oil

● Not serviced separately

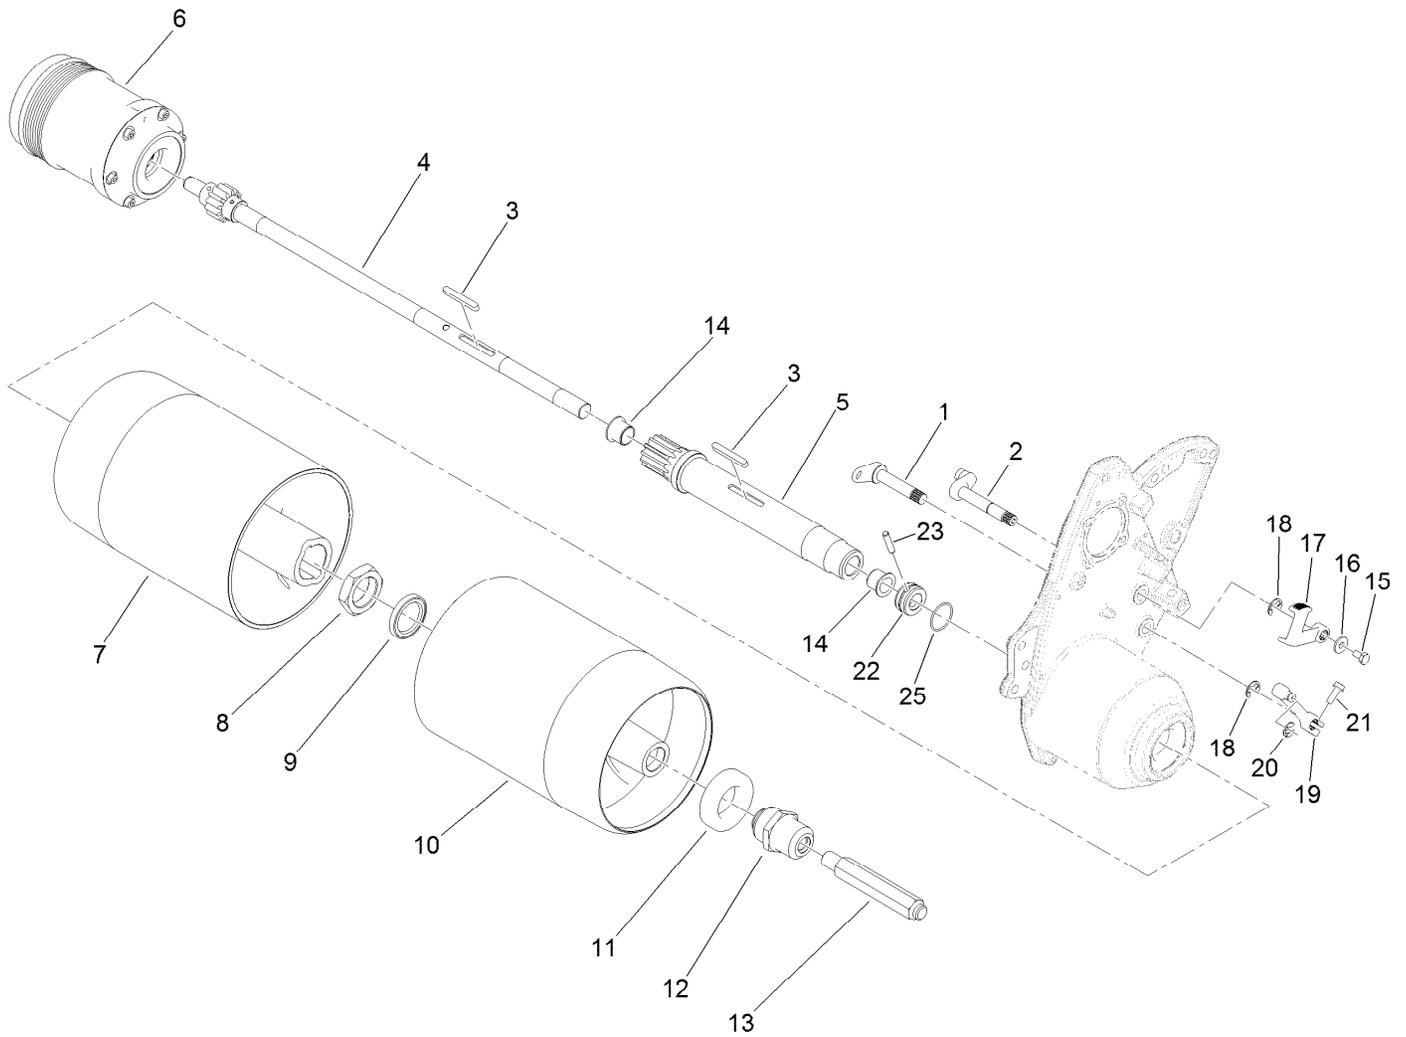


Differential and Traction Drum Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-7119	1	Lever-Brake	13	115-6785	1	Shaft-Hex, LH
2	115-7118	1	Lever-Traction	14	103-4398	2	Bearing-Flange, Iglide
3	115-6769	2	Key-Sq	15	120-9688	1	Screw-HH
4	115-7135	1	Shaft-Drum	16	120-9691	1	Washer-Flat
5	115-6760	1	Gear-Spur, Long	17	115-7121	1	Lever-Traction, Engage
6	115-6711	1	Differential ASM	18	32120-47	2	Ring-Retaining, External
7	133-8795	1	Drum-Traction, RH	19	115-7120	1	Lever-Brake, Cable
8	115-7025	1	Nut-Jam	20	32151-47	1	Ring-Retaining
9	253-134	1	Seal-Grease	21	131-6150	1	Screw-HWHTF
10	133-8797	1	Drum-Traction, LH	22	115-7023	1	Collar-Lock
11	115-6860	1	Bearing-Ball, Stainless	23	125-3529	1	Pin-Shear
12	115-6784	1	Nut-Bearing	25	340-64	1	O-Ring

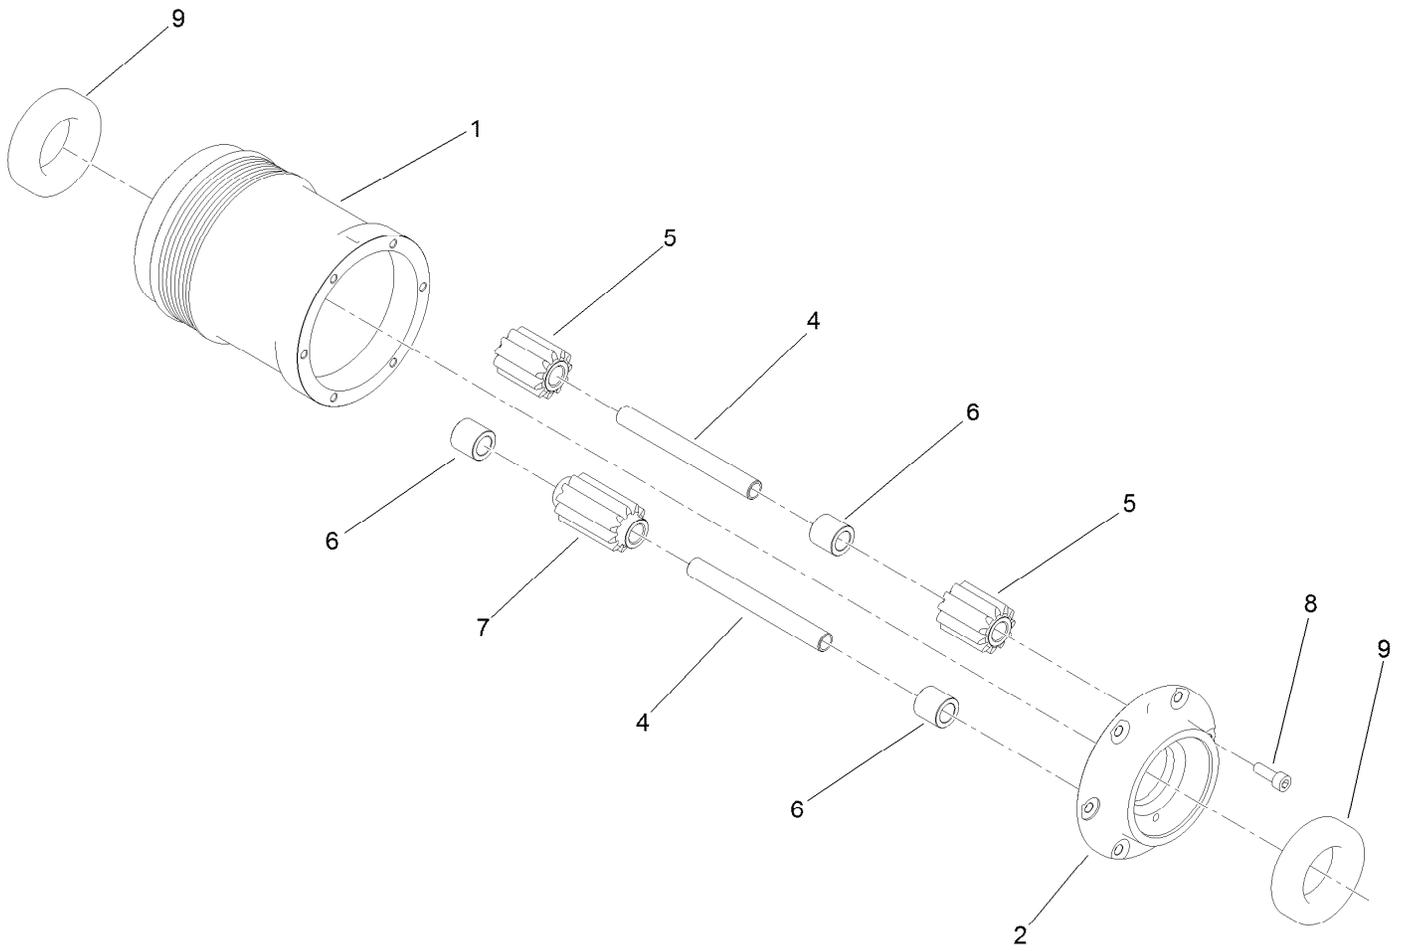


Differential Assembly No. 115-6711

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-7017	1	Housing-Differential
2	115-6865	1	Cover-Differential
4	115-6866	6	Pin-Differential
5	115-6715	6	Gear-Spur, Dual
6	115-6862	9	Spacer-Differential, Natural
7	115-6716	3	Gear-Spur
8	3274-101	6	Screw-HSH
9	251-310	2	Bearing-Ball

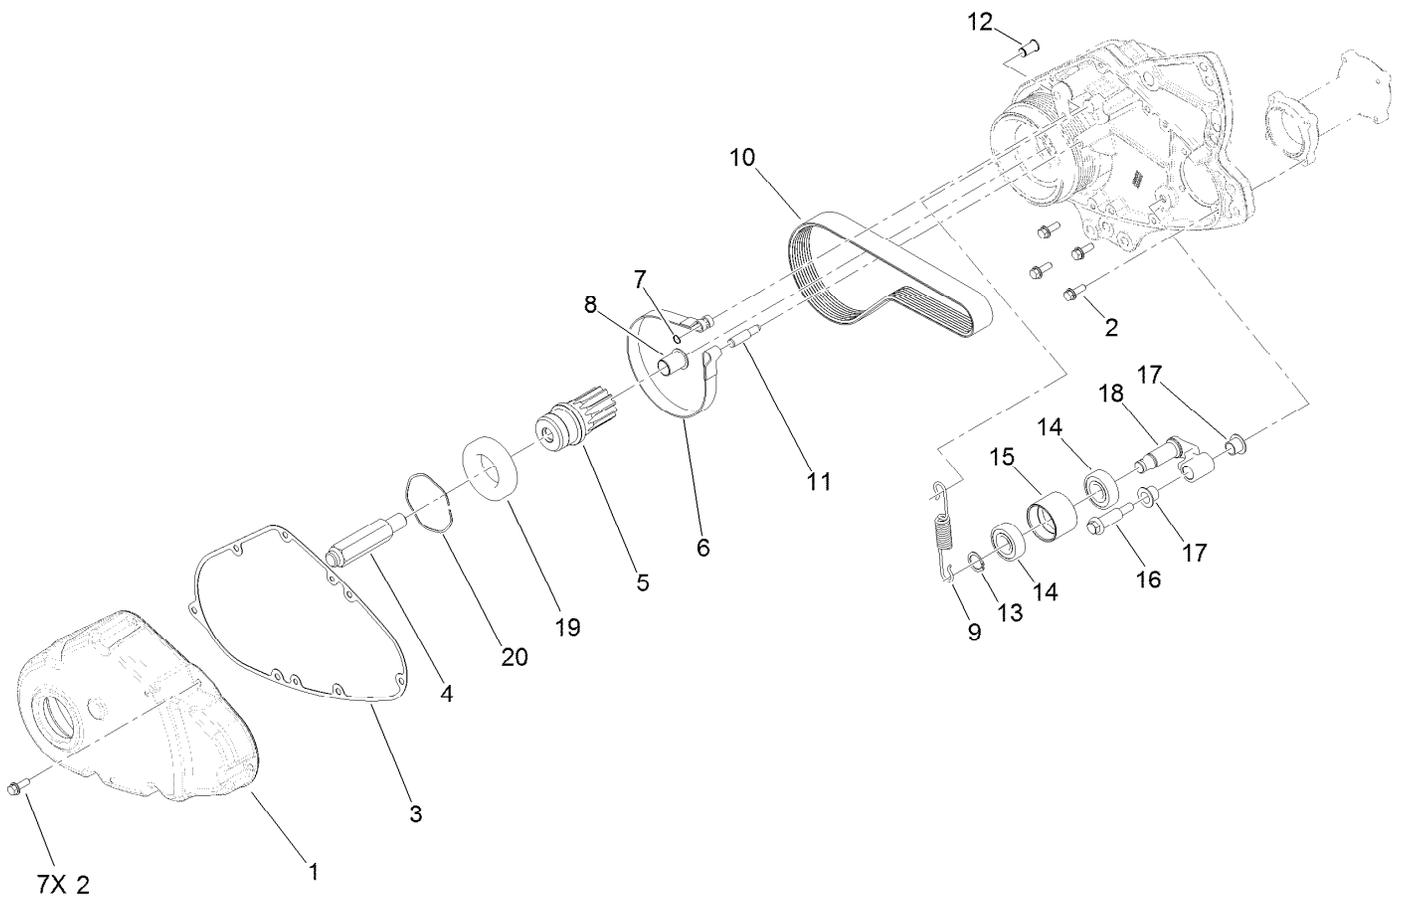


Drum Drive Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-7156	1	Cover-Drive, Drum	11	115-7116	1	Pin-Mount, Brake
2	119-1138	11	Screw-HWH	12	120-9687	1	Pin-Clevis, Brake
3	115-7141	1	Gasket-Housing, Drum	13	32151-12	1	Ring-Retaining
4	115-6786	1	Shaft-Hex, RH	14	38-7820	2	Bearing-Ball
5	115-6717	1	Gear-Spur	15	115-7133	1	Pulley-Idler
6	115-6846	1	Brake-Band	16	127-1509	1	Screw-Shoulder
7	32120-46	1	Ring-Retaining	17	125-5239	2	Bushing-Flange
8	115-7211	1	Bushing-Flanged	18	115-7235	1	Idler-Drum
9	115-6841	1	Spring-Extension	19	115-6860	1	Bearing-Ball, Stainless
10	115-6744	1	Belt-Drive, Drum	20	115-7294	1	Washer-Wave

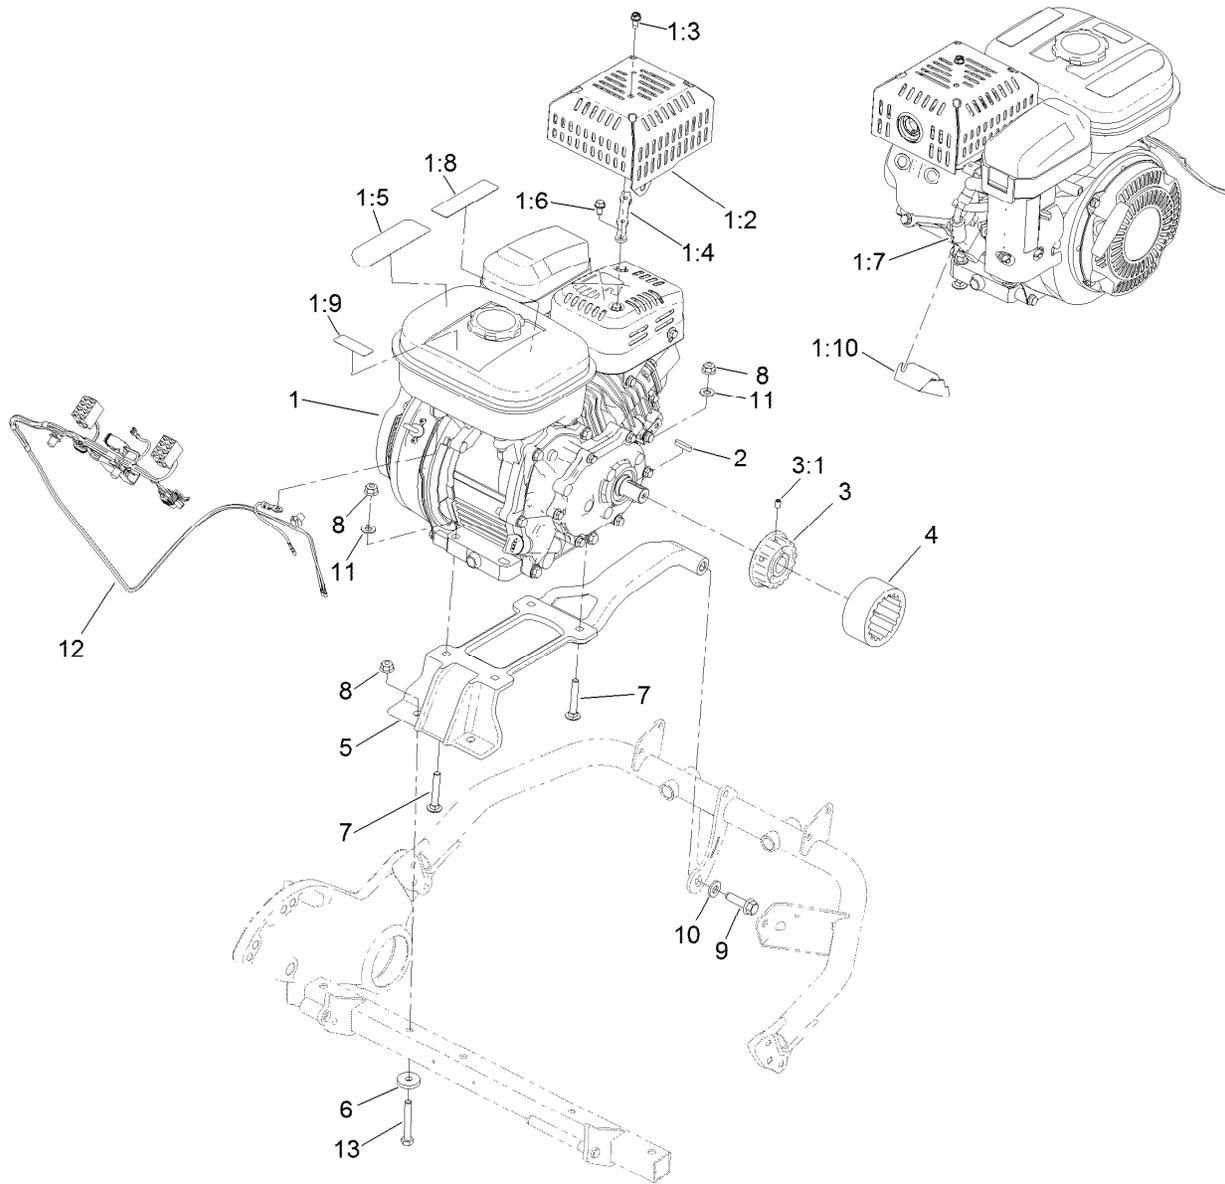


Engine Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-8843	1	Engine ASM	3:1	3245-41	2	Screw-HSH
1:2	120-9240-03	1	Guard-Muffler	4	115-7278	1	Sleeve-Coupler
1:3	120-9551	2	Screw-HWH	5	127-1535	1	Base-Engine
1:4	115-7352	1	Bracket-Guard, Muffler	6	115-7292	2	Washer-Hardened
1:5	120-2769	1	Decal-Warning	7	3230-6	4	Bolt-CARR
1:6	104-2628	2	Screw	8	119-4041	6	Nut-HF
1:7	112-1540	1	Ferrite-Snap On	9	115-7024	1	Screw-HHF
1:8	133-8062	1	Decal-Arrestor, Spark	10	115-7293	1	Washer-Hardened
1:9	130-8322	1	Decal-Warning, Ethanol	11	120-9683	4	Washer-Plain
1:10	137-2434	1	Shield	12	122-0965	1	Harness-Wire
2	88-7150	1	Key-Square	13	120-9738	2	Screw-HH
3	115-7277	1	Endpiece-Coupler				

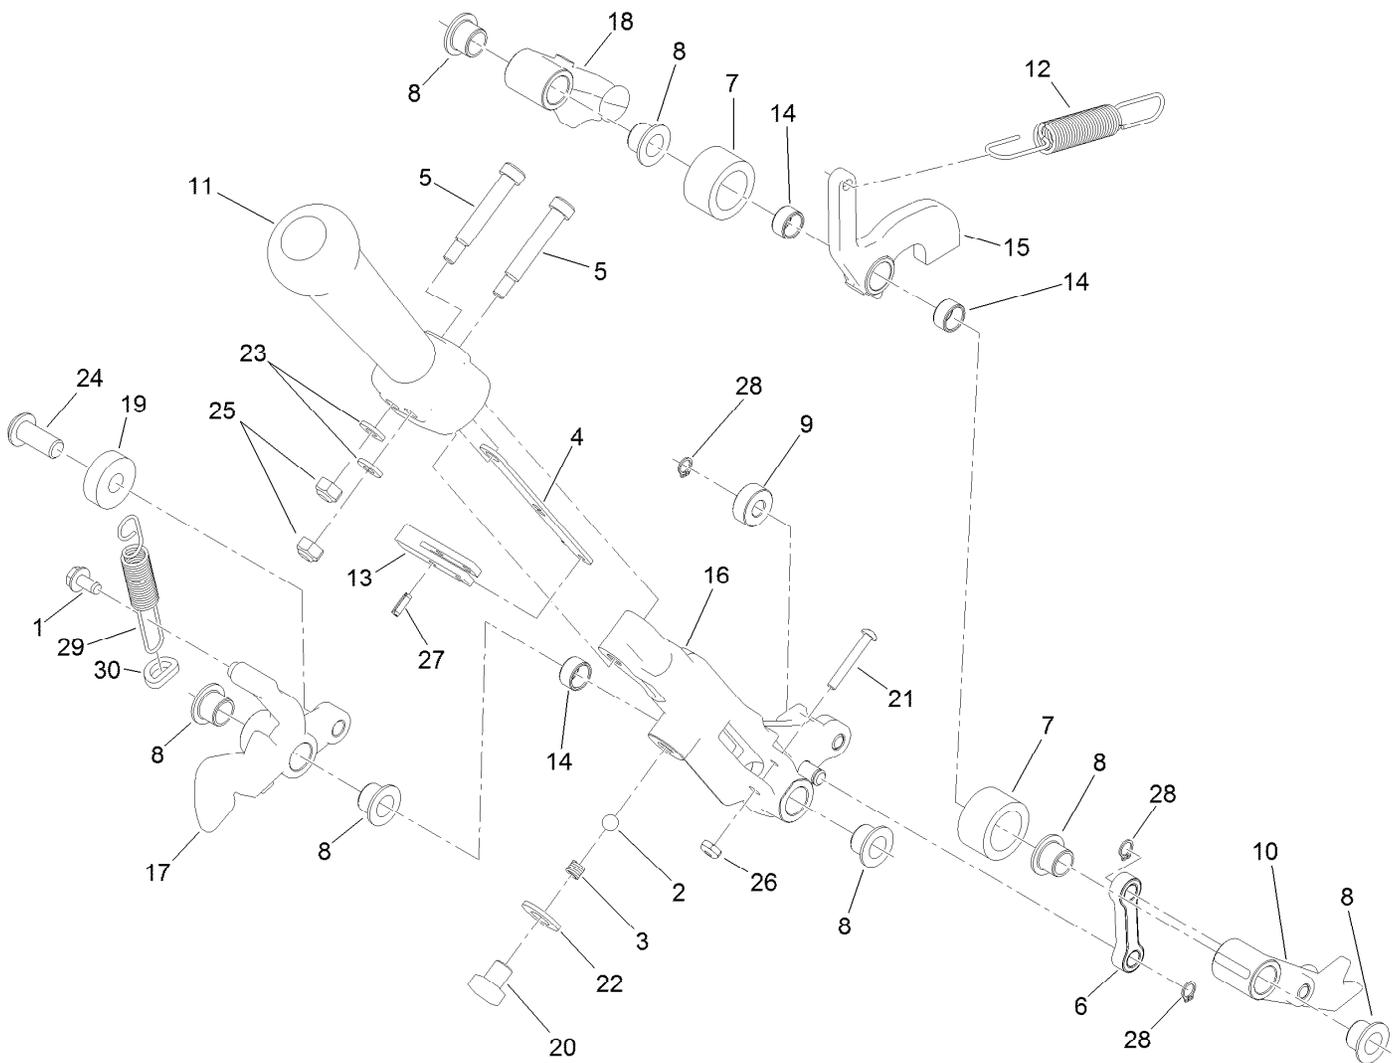


Shift Lever Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-2065	1	Screw-HWH	16	137-2375	1	Lever-Transport
2	105-2442	1	Ball-Detent	17	120-9711	1	Lever-Shift, Reel
3	105-2443	1	Spring-Detent	18	120-9712	1	Lever-Cam, Reel
4	115-6992	1	Link-Arm, Shift	19	251-259	1	Bearing-Ball
5	115-6997	2	Screw-Shoulder	20	119-4067	1	Screw-HH
6	115-7066	1	Link-Shifter	21	120-9693	1	Screw-PPH
7	115-7071	2	Bumper-Sleeve, Rubber	22	120-9683	1	Washer-Plain
8	137-2374	7	Bushing-Flange	23	120-9680	2	Washer-Flat
9	115-7073	1	Spacer	24	133-2381	1	Screw-HSBH
10	133-8791	1	Lever-Spring	25	120-9681	2	Nut-Lock, NI
11	115-7098	1	Handle-Shift	26	120-9684	1	Nut-Lock
12	131-3072	1	Spring-Extention	27	32121-68	1	Pin-Roll
13	120-9703	1	Pin-Latch	28	613328	3	Ring-Retaining
14	120-9708	3	Bushing	29	120-9704	1	Spring-Extension
15	120-9746	1	Latch-Shifter	30	120-9729	1	Collar-Spring

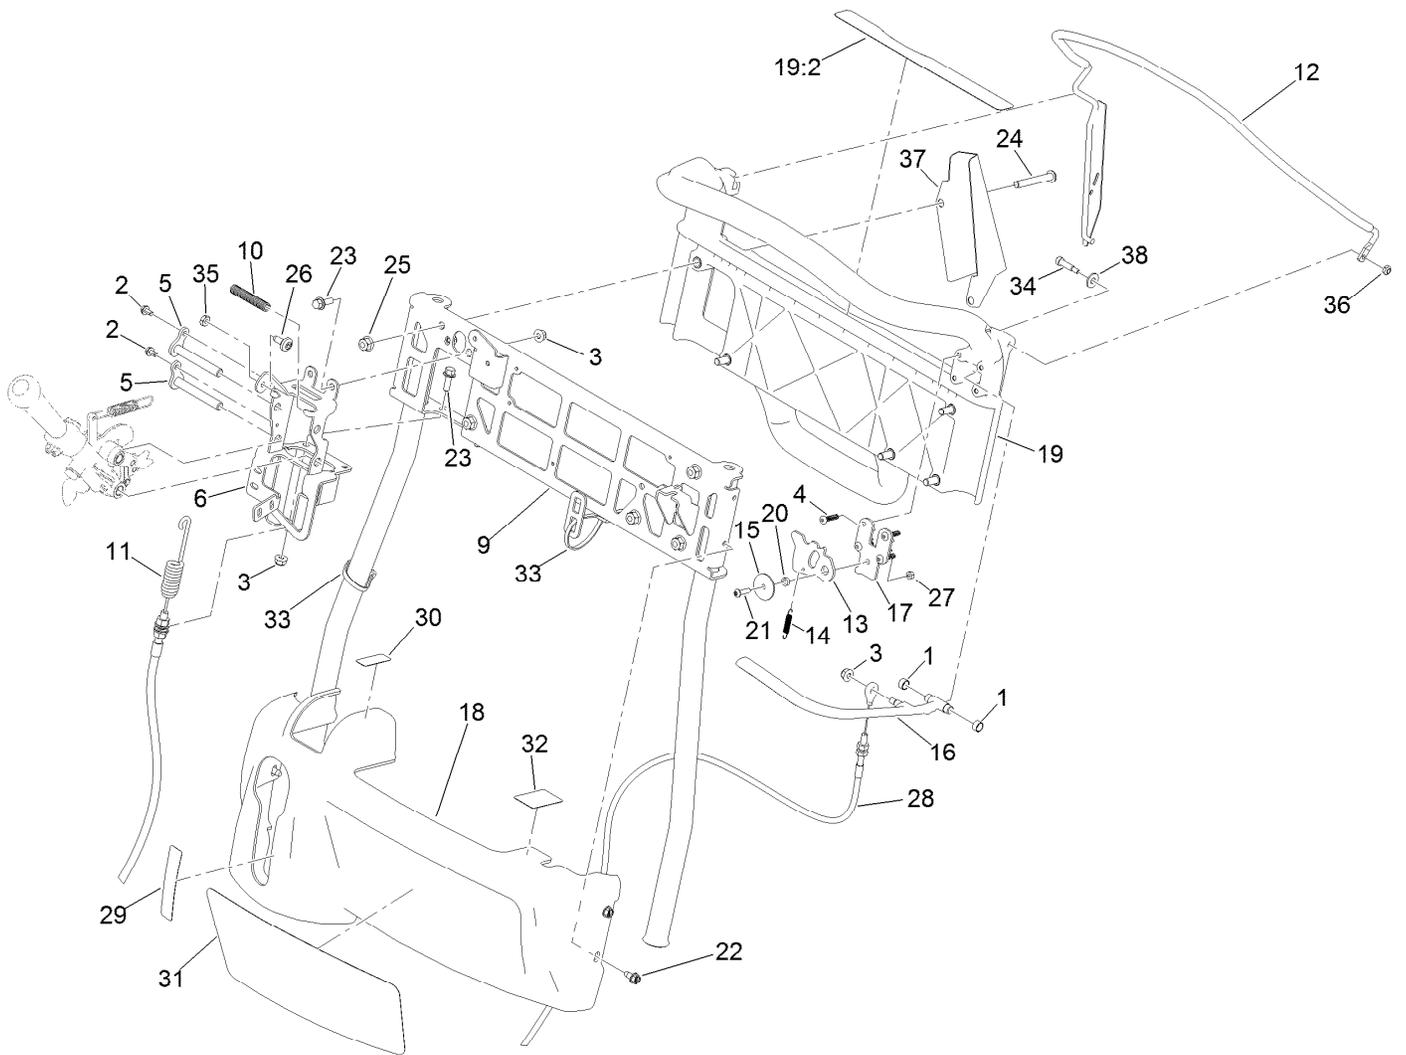


Handle Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	99-6247	2	Bushing-Bronze	21	119-1224	1	Screw-HSBH
2	104-2065	2	Screw-HWH	22	120-9551	4	Screw-HWH
3	119-4040	5	Nut-Flange, NI	23	120-9678	4	Screw-HHF
4	120-9676	4	Screw-Plastite	24	115-7260	5	Screw-HSBH
5	137-2364	2	Pin-Lever	25	119-4041	5	Nut-HF
6	133-8815-03	1	Bracket-Shifter	26	120-7950	1	Screw-Torx
9	132-3792-03	1	Tube-Handle	27	120-9681	1	Nut-Lock, NI
10	115-7299	1	Spring-Extension	28	115-7171	1	Cable-Brake
11	115-7172	1	Cable-Clutch, Reel	29	115-7271	1	Decal-Shift, Gear
12	130-9372-03	1	Bail-Lift	30	131-3111	1	Decal-Throttle
13	115-7229	1	Latch-Brake	31	132-7076	1	Decal
14	115-7230	1	Spring-Extension	32	120-9598	1	Decal-Brake
15	115-7231	1	Washer	33	3290-378	2	Tie-Cable
16	115-7232	1	Lever-Brake	34	130-9374	1	Screw-Shoulder
17	115-7238	1	Keeper-Lever, Brake	35	120-9695	1	Nut-Jam
18	131-3097	1	Cover-Console	36	3296-12	1	Nut-Lock, NI
19	120-9726	1	Upper Handle ASM	37	130-9373-03	1	Cover-Lever, Bail
19:2	133-2335	1	Decal-Warning	38	3256-22	1	Washer-Flat
20	115-7291	1	Spacer-Latch, Brake				

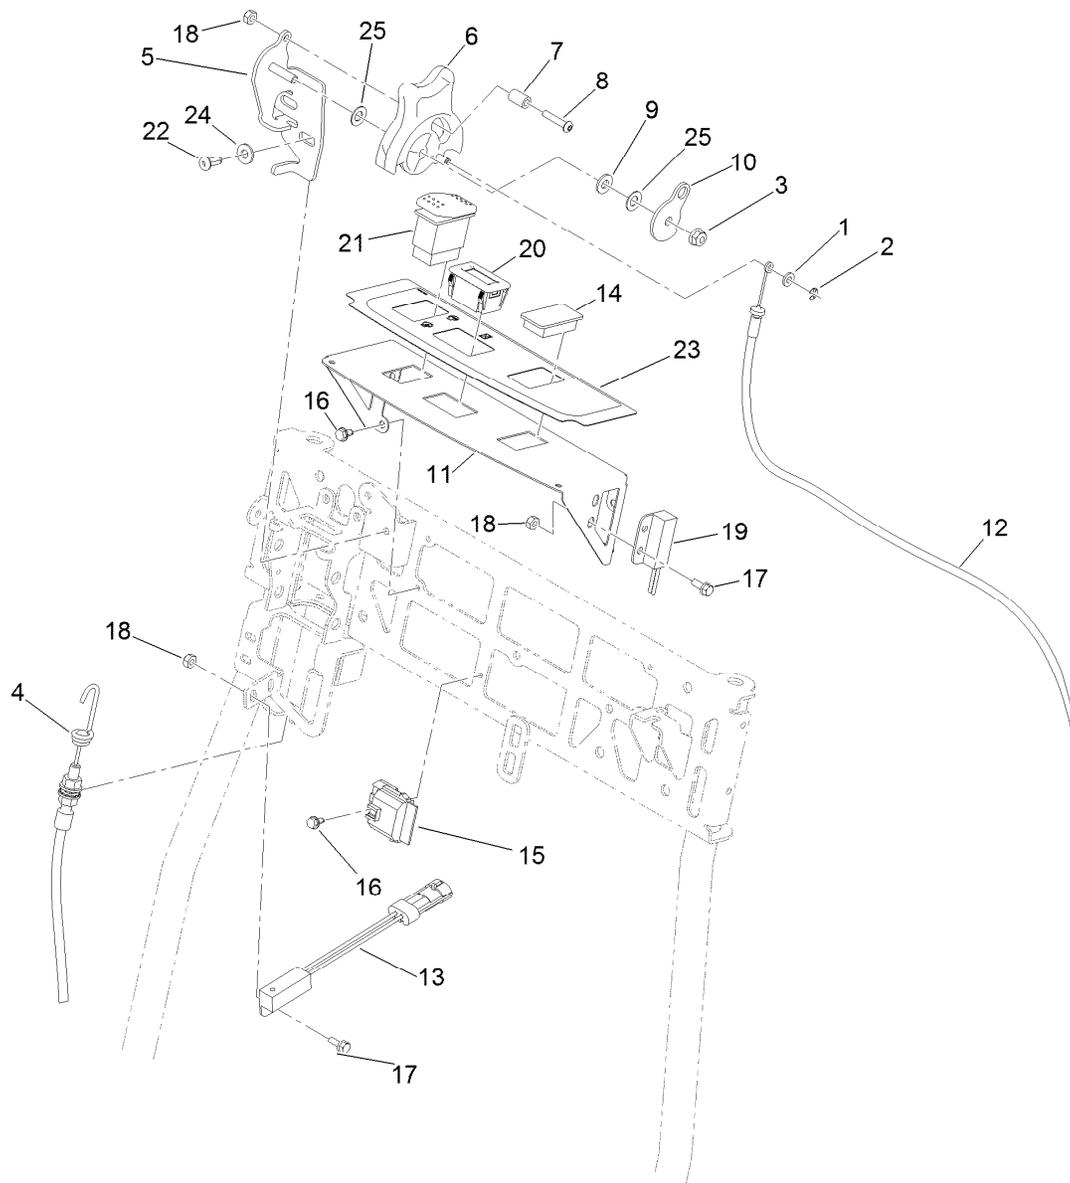

Throttle and Console Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-9680	1	Washer-Flat	14	99-7420	1	Plug-Hole
2	110-1758	1	Ring-Retaining	15	1-323430	1	Module-Interlock
3	119-4040	1	Nut-Flange, NI	16	104-2065	5	Screw-HWH
4	132-3820	1	Cable-Clutch, Traction	17	120-9748	4	Screw-HWH
5	133-8811	1	Bracket-Throttle	18	120-9681	5	Nut-Lock, NI
6	131-3069	1	Throttle Wheel ASM	19	120-6326	1	Sensor-Proximity, Ferrous
7	133-8817	1	Spacer	20	119-1347	1	Meter-Hour
8	108-3153	1	Screw-HSBH	21	95-8999	1	Switch
9	120-9679	1	Washer-Flat	22	63-8590	2	Screw
10	133-8807	1	Plate-Throttle	23	115-7274	1	Decal-Console
11	115-7208-03	1	Panel-Switch	24	3256-22	2	Washer-Flat
12	131-3185	1	Cable-Throttle	25	133-8821	2	Washer-Friction
13	120-6379	1	Sensor-Ferrous Proximity, NC				

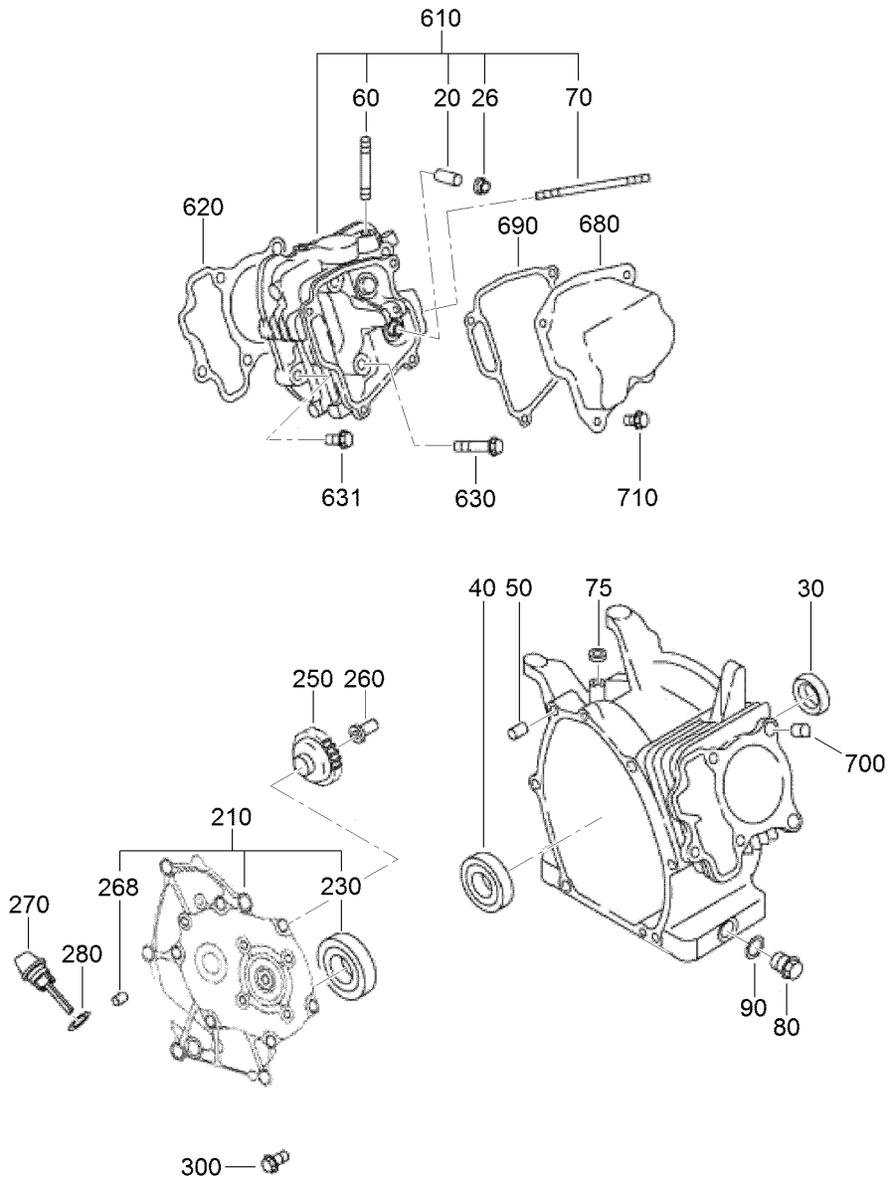


Crankcase Assembly

Ref.	Part Number	Qty.	Description
20	121-0571	2	Guide-Valve
26	121-0611	1	Seal-Stem
30	121-0540	1	Seal-Oil
40	121-0546	1	Bearing-Ball
50	121-0608	2	Pipe-Knock
60	121-0512	2	Stud
70	121-0511	2	Stud
75	121-0539	1	Seal-Oil
80	121-0538	1	Plug
90	121-0532	1	Gasket
210	121-0607	1	Main Bearing Cover ASM
230	121-0544	1	Bearing-Ball
250	121-0652	1	Governor Gear ASM
260	121-0641	1	Sleeve-Governor
268	121-6351	2	Pin-Straight


Ref.	Part Number	Qty.	Description
270	121-0665	1	Gauge-Oil
280	121-6374	1	Gasket
300	121-0502	6	Bolt-Flange
610	121-0672	1	Cylinder Head ASM (Serial No. 1Xxxxxxx)
610	125-9159	1	Cylinder Head ASM (Serial No. 2Xxxxxxx)
620	121-0585	1	Gasket-Head
630	121-0519	4	Bolt-Flange
631	121-0520	1	Bolt-Flange
680	121-0609	1	Rocker Cover ASM
690	121-0610	1	Gasket-Cover, Rocker
700	121-0608	2	Pipe-Knock
710	121-0514	4	Bolt-Flange
960	121-0606	1	Gasket Set ●

● Not illustrated

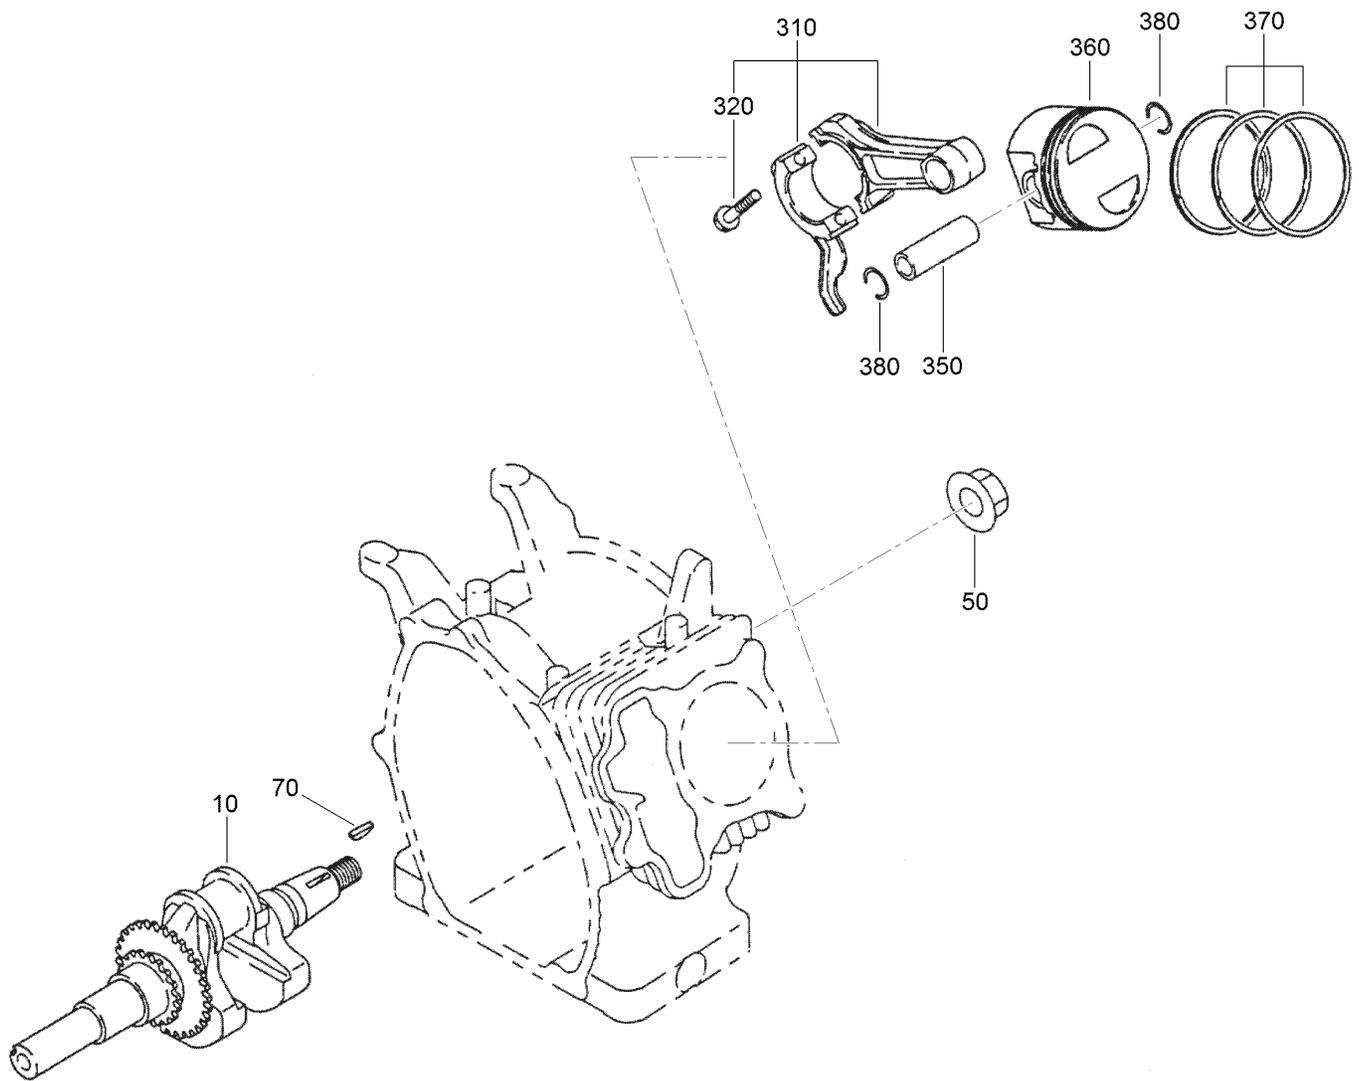


Crankshaft and Piston Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	121-0586	1	Crankshaft ASM
50	121-0529	1	Nut-Flange
70	121-0537	1	Key-Woodruff
310	121-0587	1	Connecting Rod ASM
310	121-0588	1	Connecting Rod ASM (Undersize)
320	121-0612	2	Bolt-Rod, Connecting
350	121-0589	1	Pin-Piston
360	121-6353	1	Piston (Oversize 0.50 Mm)
360	121-0590	1	Piston (STD)
360	121-0591	1	Piston (Oversize 0.250 Mm)
370	121-0592	1	Piston Ring Set (STD)
370	121-0593	1	Piston Ring Set (Oversize 0.250 Mm)
370	121-0594	1	Piston Ring Set (Oversize 0.50 Mm)
380	121-0561	2	Clip

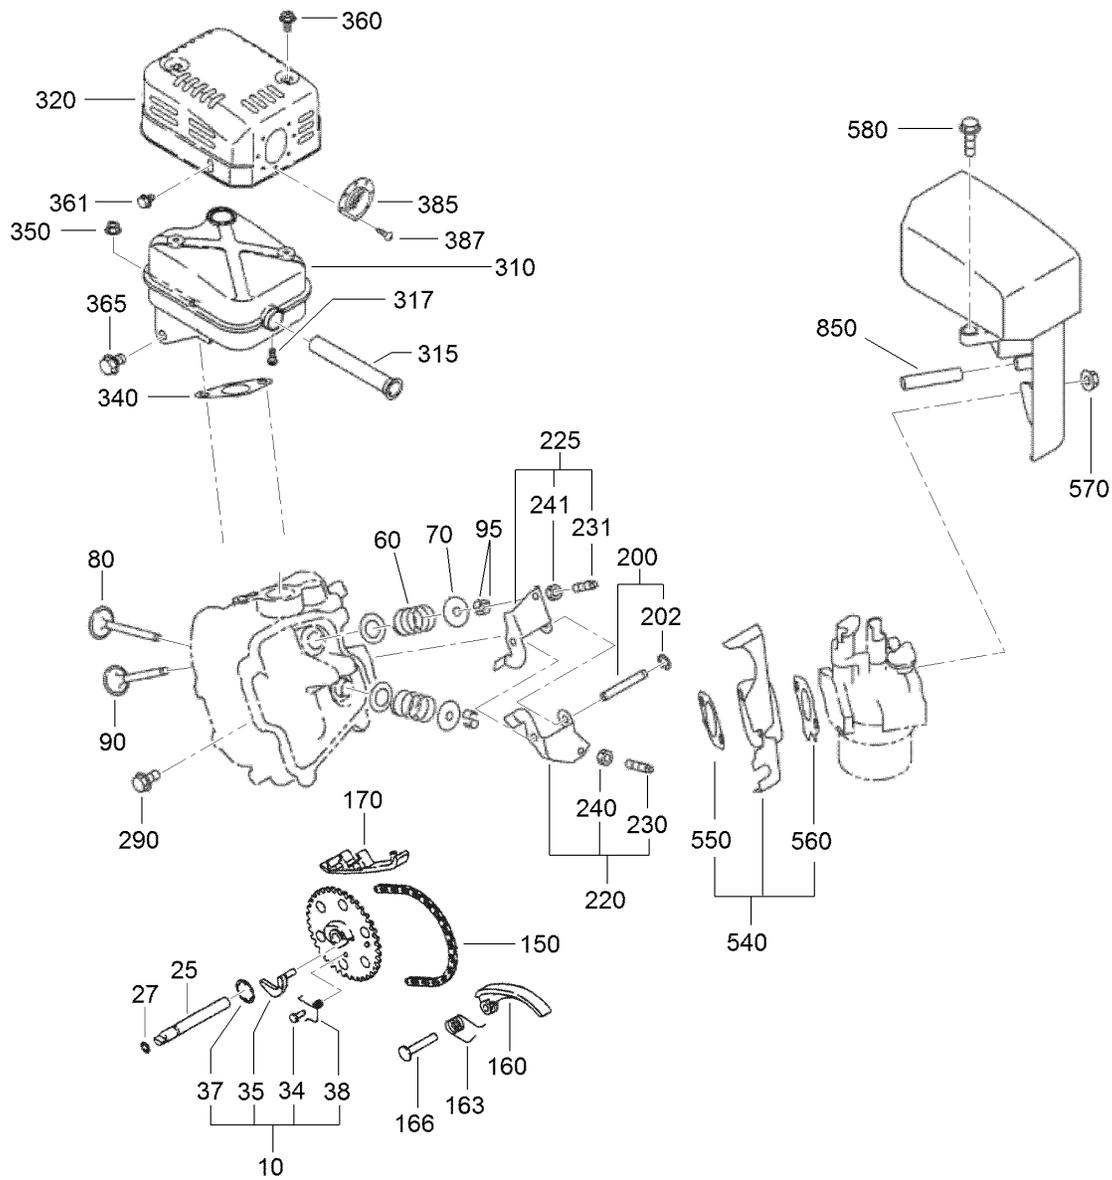


Intake and Exhaust Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
10	121-0613	1	Camshaft ASM	230	121-0524	1	Screw-Adjust
25	121-0625	1	Pin-Camshaft	231	121-0524	1	Screw-Adjust
27	121-0535	1	O-Ring	240	121-0528	1	Nut
34	121-0639	1	Pin-Spring	241	121-0528	1	Nut
35	121-0631	1	Lever-Release	290	121-0514	1	Bolt-Flange
37	121-0632	1	Clip	310	121-0595	1	Muffler ASM
38	121-0640	1	Spring-Return	315	121-0638	1	Arrestor-Spark
60	121-0673	2	Spring-Valve	317	121-0525	1	Screw-Tapping
70	121-0579	2	Retainer-Spring	320	121-0598	1	Muffler Cover ASM
80	121-0596	1	Valve-Intake	340	121-0626	1	Gasket-Muffler
90	121-0597	1	Valve-Exhaust	350	121-6376	2	Nut-Flange
95	121-0555	4	Collet-Valve	360	121-0527	2	Bolt-Flange
150	121-0599	1	Timing Chain ASM	361	121-0513	1	Bolt-Flange
160	121-0634	1	Tensioner	365	121-0521	1	Bolt-Flange
163	121-0637	1	Spring-Tensioner	385	121-6354	1	Screen-Complete
166	121-0633	1	Pin-Tensioner	387	121-0525	2	Screw-Tapping
170	121-0635	1	Guide-Chain	540	121-0623	1	Insulator ASM
200	121-0624	1	Rocker Pin ASM	550	121-0628	1	Gasket-Insulator No.2
202	121-0507	1	Clip	560	121-0627	1	Gasket-Insulator No.1
220	121-0629	1	Intake Rocker Arm ASM	570	121-0506	2	Nut-Flange
225	121-0630	1	Exhaust Rocker Arm ASM				

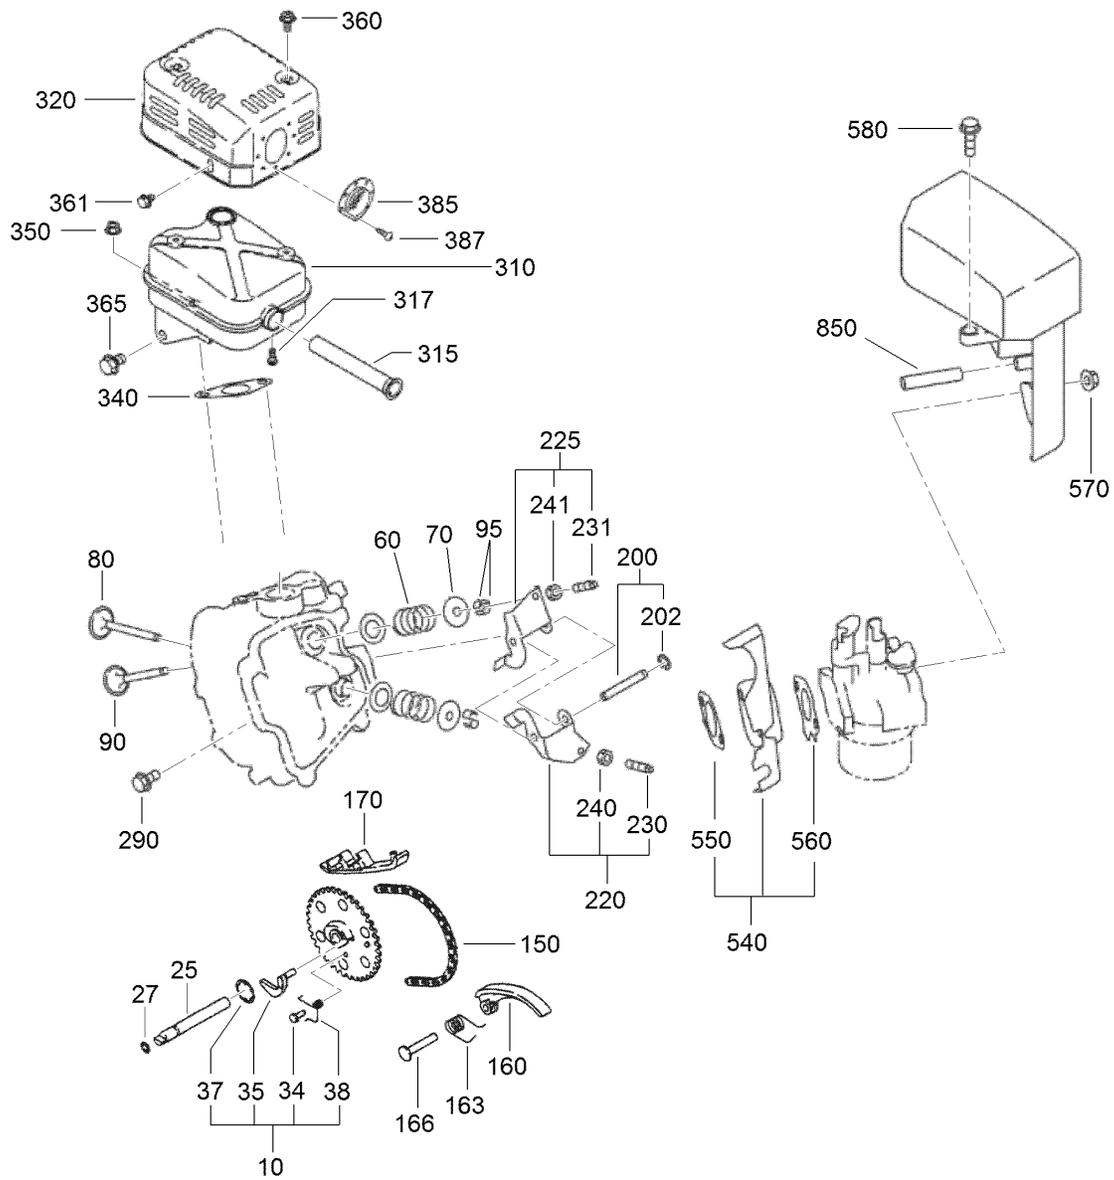


Intake and Exhaust Assembly (continued)

Ref.	Part Number	Qty.	Description
580	121-0516	1	Bolt-Flange
850	121-6375	1	Pipe-Breather

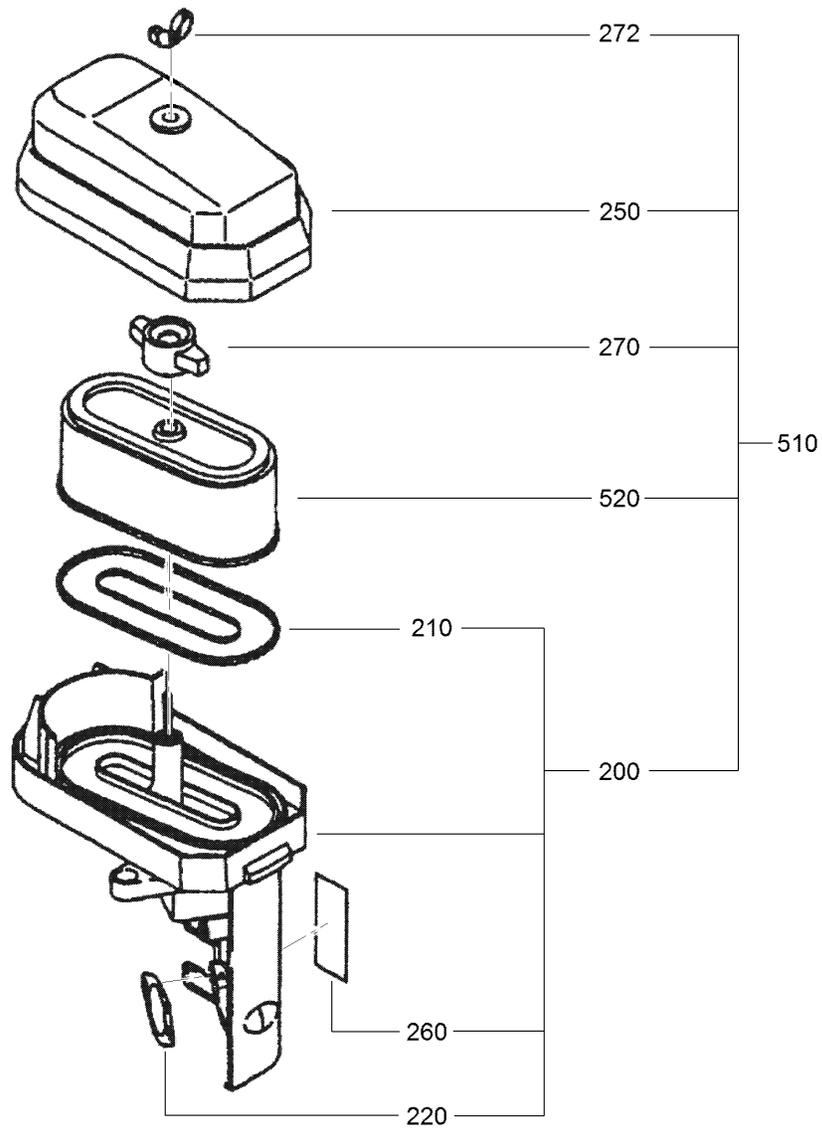


Air Cleaner Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
200	121-0620	1	Base ASM
210	121-0617	1	Packing
220	121-0614	1	Packing
250	121-0621	1	Cover ASM
260	121-0616	1	Label
270	121-0622	1	Nut-Wing
272	121-0615	1	Nut-Wing
510	121-0619	1	Air Cleaner ASM
520	121-0618	1	Set-Element

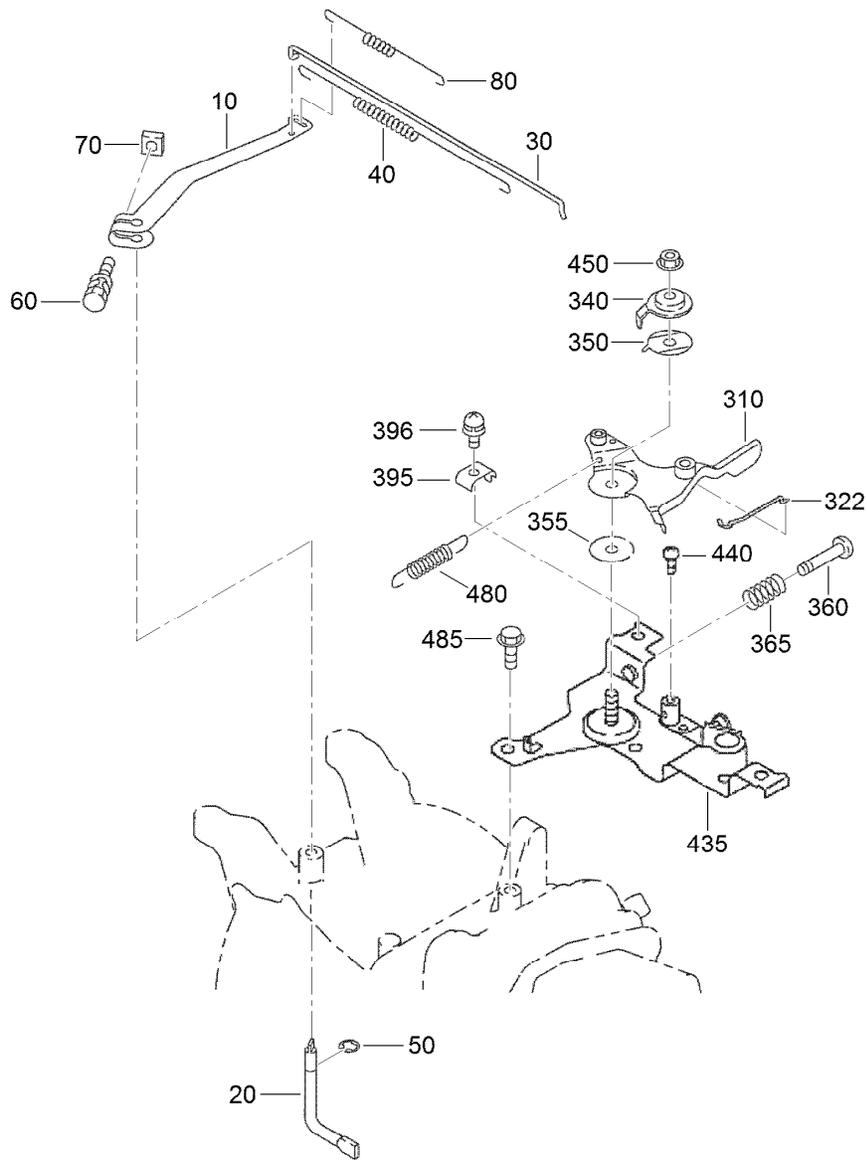


Governor Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	121-0643	1	Lever-Governor	350	121-0651	1	Washer
20	121-0642	1	Shaft-Governor	355	121-0534	1	Washer-Friction
30	121-0674	1	Governor Rod ASM	360	121-0509	1	Screw
40	121-0645	1	Spring-Rod	365	121-0572	1	Spring-Adjust
50	121-0507	1	Clip	395	121-0650	1	Clamp
60	121-0522	1	Bolt And Washer ASM	396	121-0523	1	Screw And Washer ASM
70	121-0530	1	Nut	435	121-0654	1	Speed Control Bracket ASM
80	121-0644	1	Spring-Governor	440	121-0508	1	Screw
310	121-0646	1	Speed Control Lever ASM	450	121-0505	1	Nut-Self Lock
322	121-0648	1	Link Rod ASM	480	121-0653	1	Spring-Return
340	121-0647	1	Plate-Stop	485	121-0514	2	Bolt-Flange

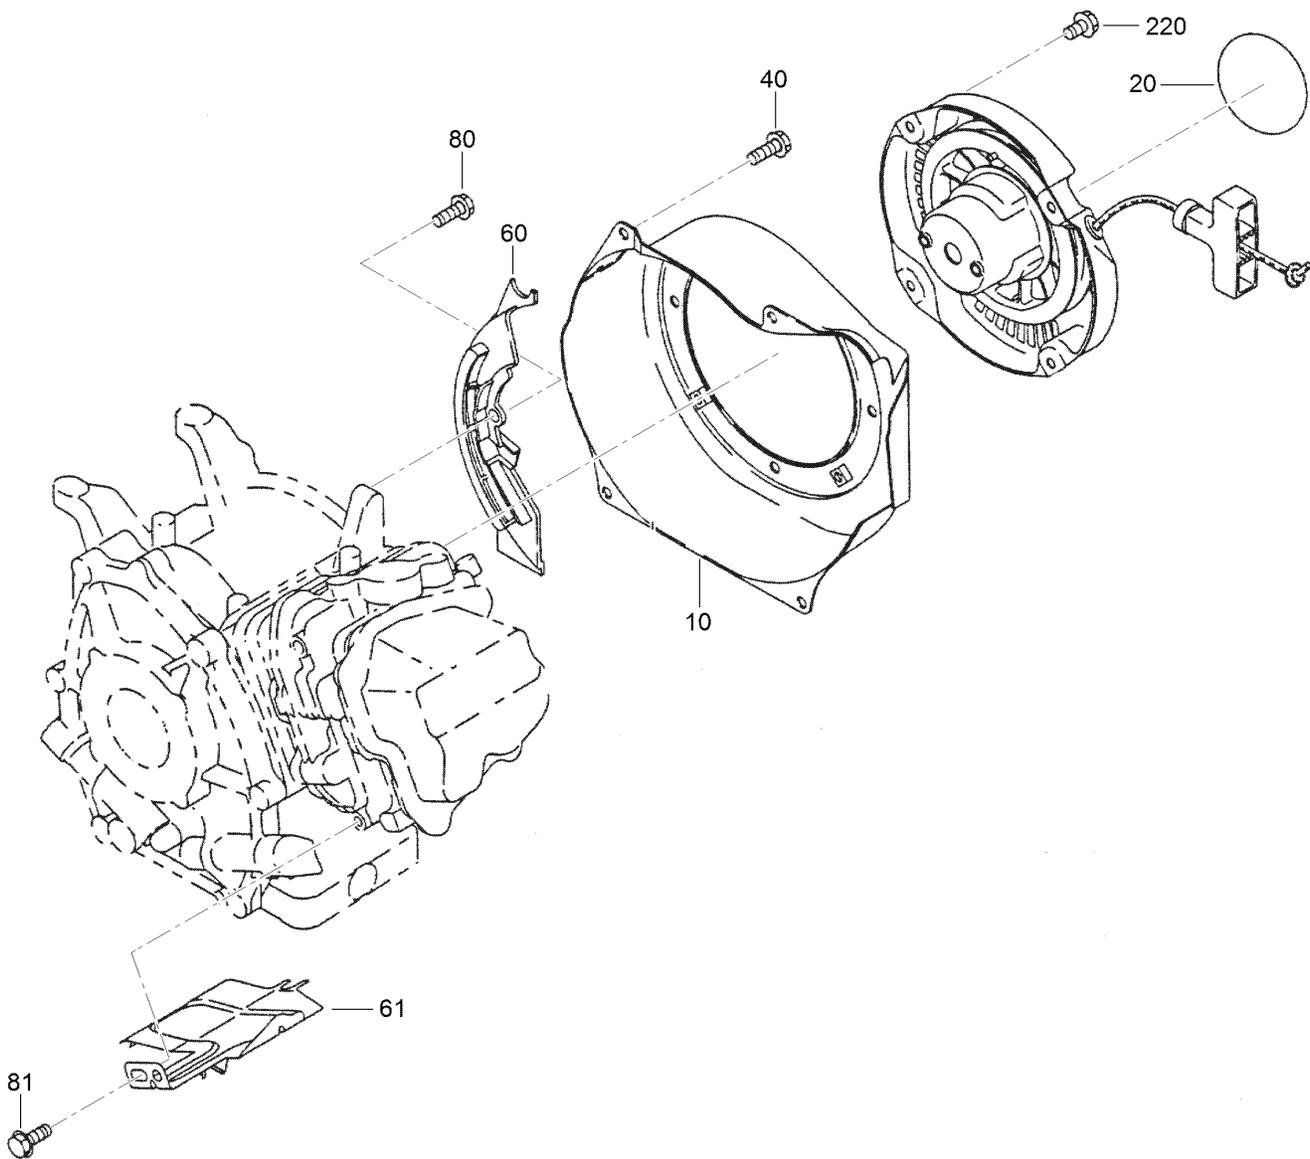


Recoil and Shroud Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	121-0600	1	Blower Housing ASM
20	121-0550	1	Label-Trademark
40	121-0515	4	Bolt-Flange
60	121-0656	1	Case Baffle No.1 ASM
61	121-0655	1	Case Baffle No.2 ASM
80	121-0500	1	Bolt-Flange
81	121-0514	1	Bolt-Flange
220	121-6377	4	Bolt And Washer ASM

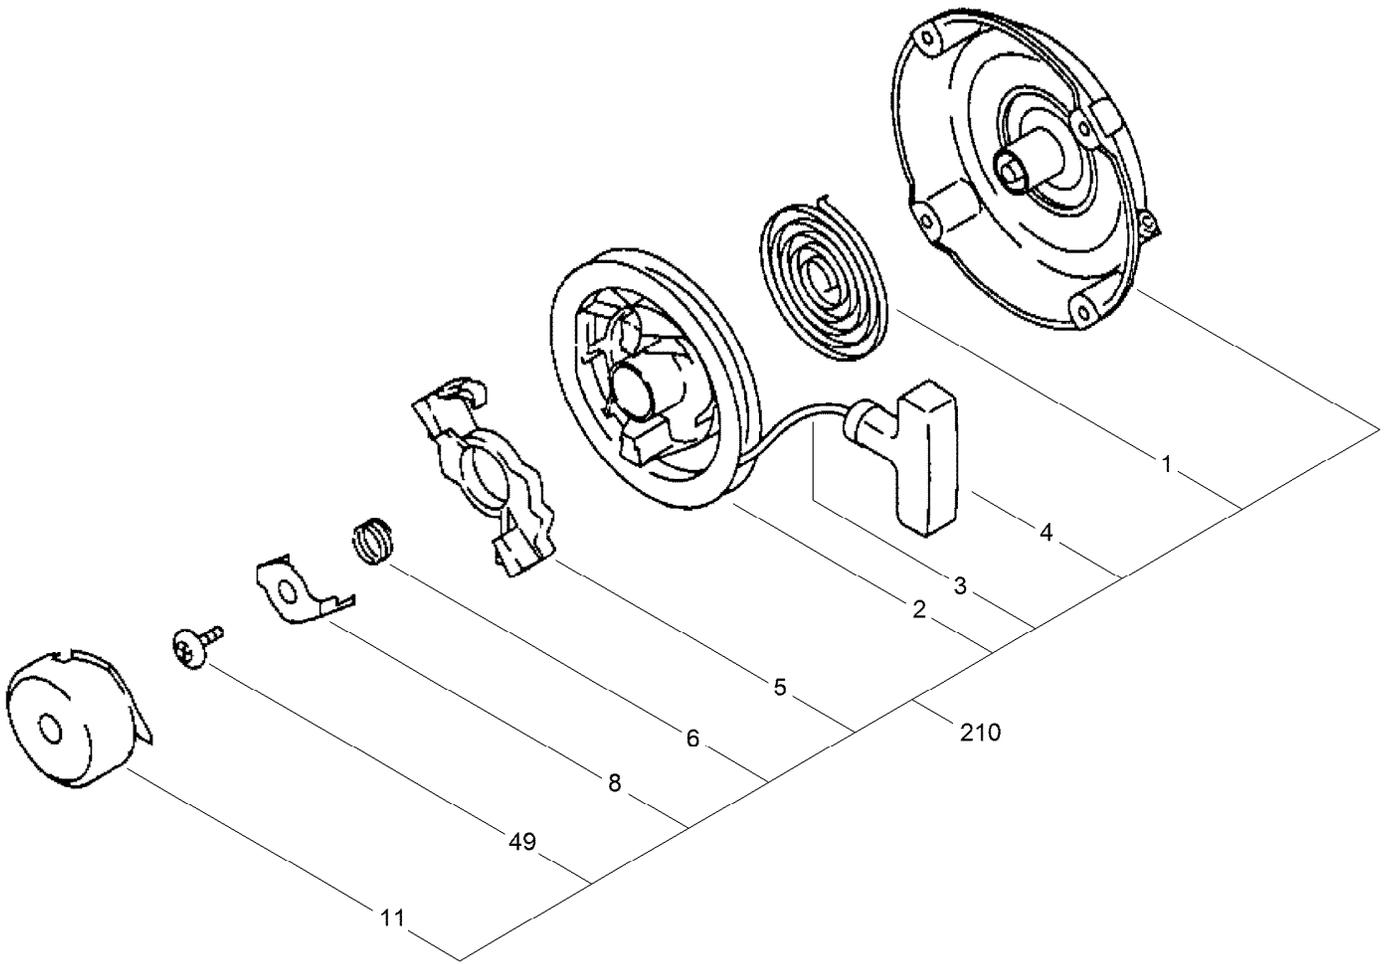


Recoil Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-8872	1	Subaru Recoil Kit
2	121-6357	1	Reel
3	121-0676	1	Starter Rope
4	121-6358	1	Handle-Starter
5	121-6359	1	Ratchet
6	121-6360	1	Spring-Friction
8	121-6361	1	Plate-Friction
11	121-6362	1	Pulley-Starter
49	121-6363	1	Screw-Center
210	133-8897	1	Recoil Starter ASM

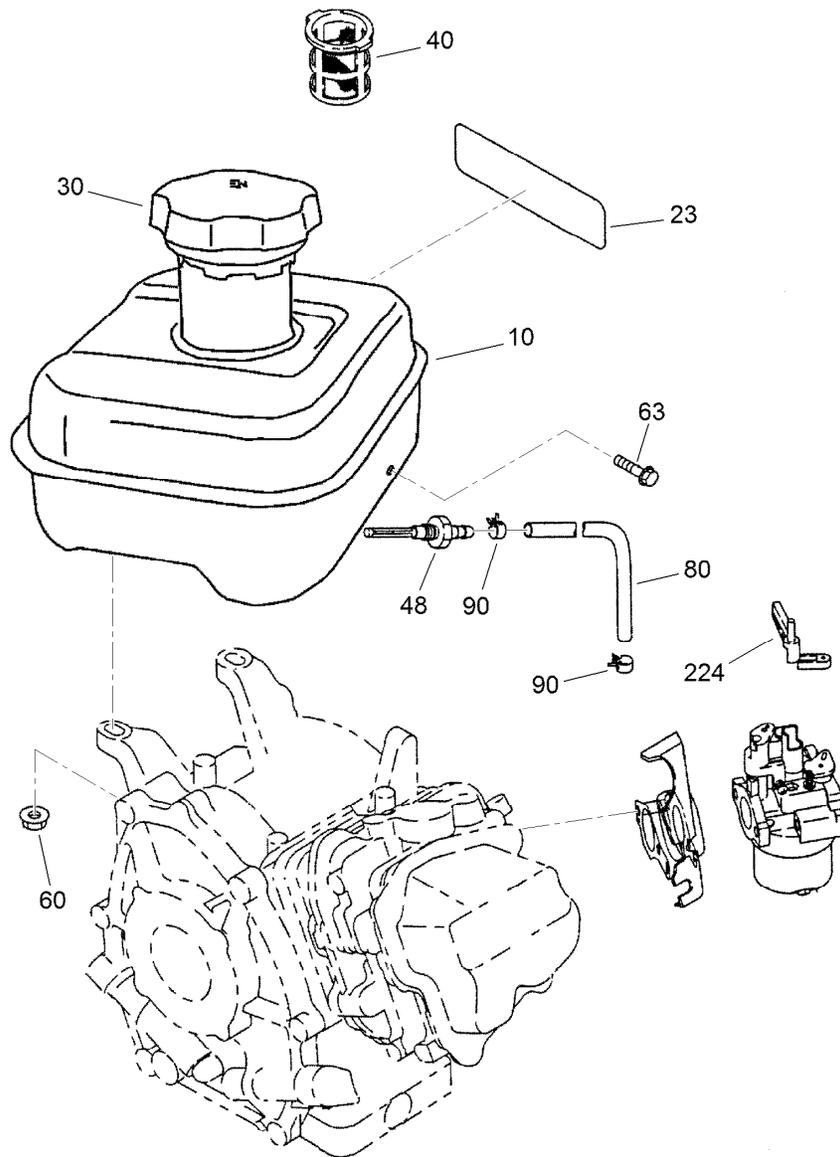


Fuel Tank Assembly

Ref.	Part Number	Qty.	Description
10	125-5241	1	Tank-Fuel
23	121-0605	1	Label-Model
30	121-0684	1	Fuel Tank Cap ASM
40	121-0685	1	Filter-Fuel
48	121-0542	1	Union
60	121-0506	2	Nut-Flange
63	121-0517	1	Bolt-Flange
80	121-6378	1	Pipe-Rubber
90	121-0543	2	Clamp-Hose
224	121-0649	1	Lever-Control, Choke

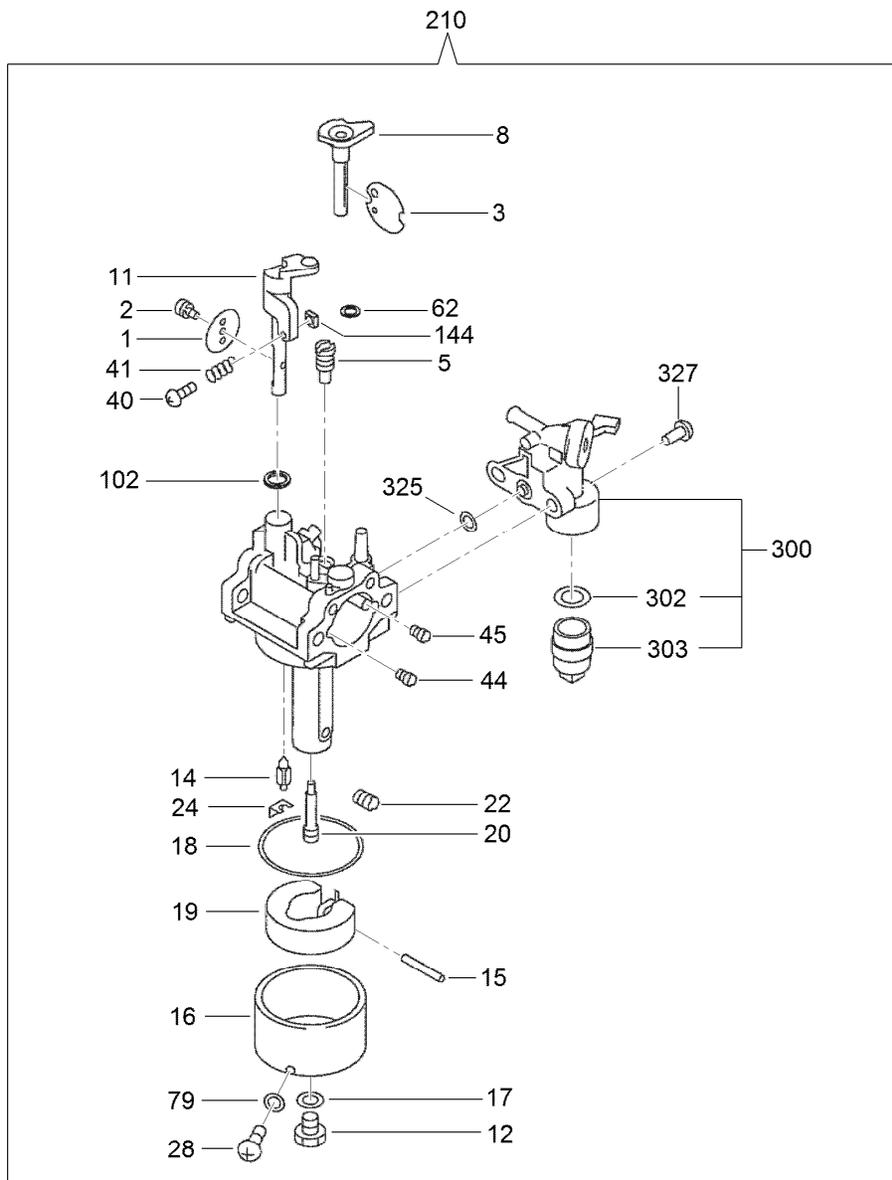


Carburetor Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	121-0553	1	Valve-Throttle	28	121-0567	1	Bolt
2	121-0558	1	Screw	40	121-0554	1	Screw
3	121-0662	1	Valve-Choke	41	121-0677	1	Spring
5	121-0574	1	Jet-Pilot	44	121-0557	1	Jet-Air
8	121-0661	1	Lever-Choke	45	121-0552	1	Jet-Air, Pilot
11	121-0602	1	Throttle Shaft ASM	62	121-0570	1	Seal
12	121-0568	1	Bolt	79	121-0569	1	Packing
14	121-6366	1	Needle	102	121-0573	1	Seal
15	121-0660	1	Pin	144	121-0664	1	Nut
16	121-0659	1	Float Body ASM	210	121-6365	1	Carburetor ASM
17	121-0559	1	Packing	300	121-0675	1	Fuel Strainer ASM
18	121-0560	1	Packing-Chamber	302	121-0658	1	Packing
19	121-0562	1	Float	303	121-0657	1	Cup
20	121-0601	1	Nozzle-Main	325	121-0663	1	O-Ring
22	121-0575	1	Jet-Main	327	121-0556	2	Screw
24	121-0563	1	Clip				

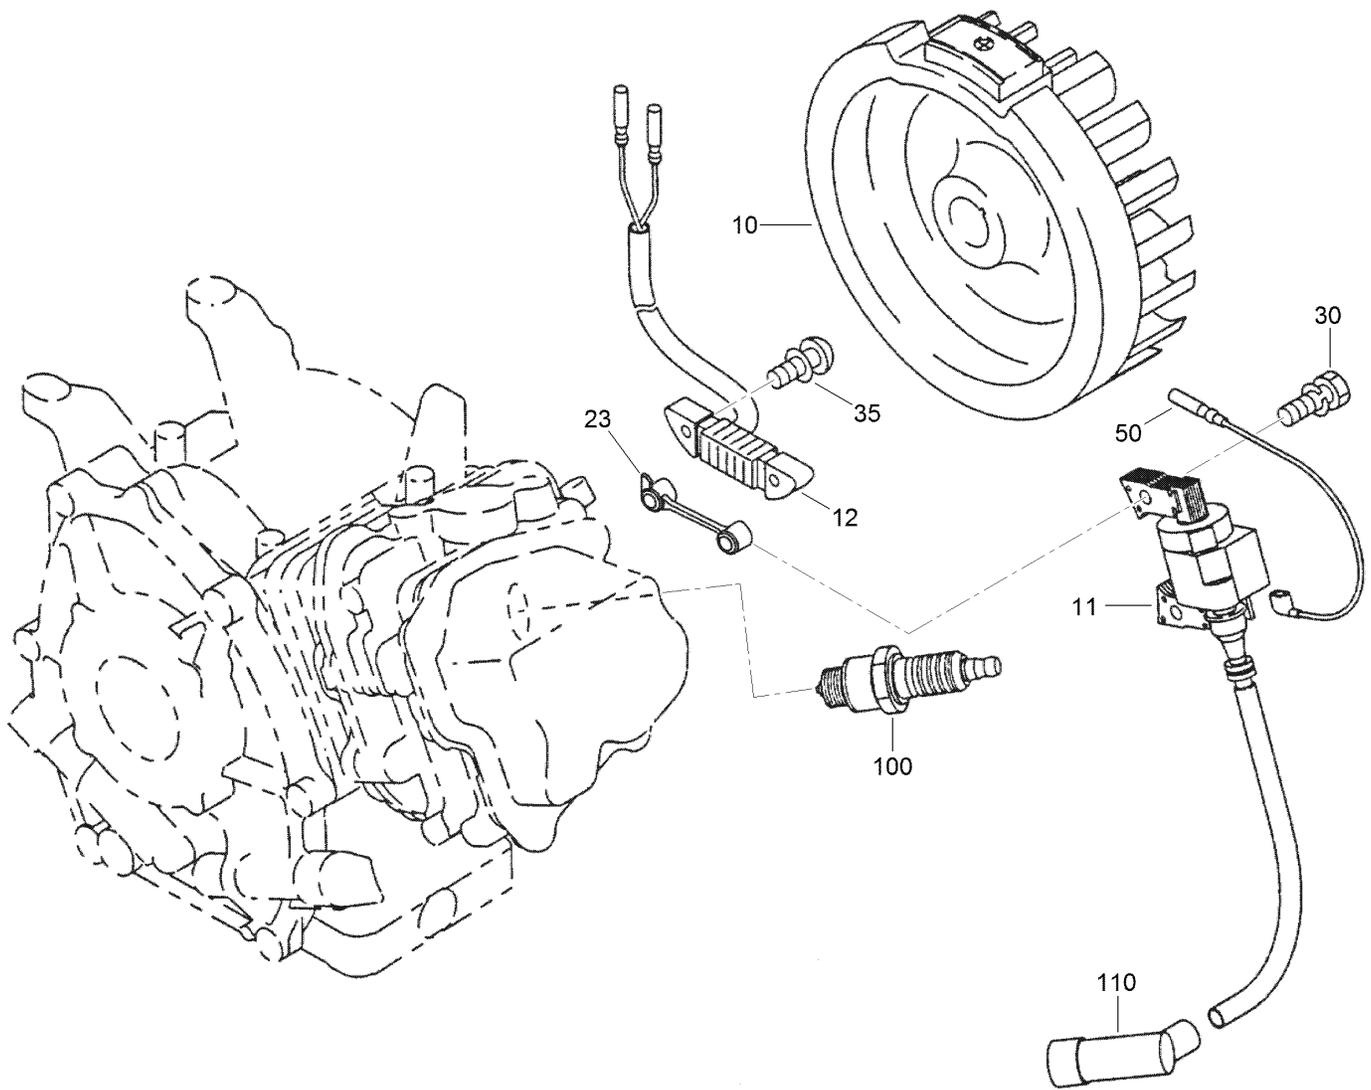

Flywheel and Coil Assembly

Ref.	Part Number	Qty.	Description
10	121-0604	1	Flywheel ASM
11	121-0668	1	Ignition Coil ASM
12	121-6368	1	Lamp Coil ASM
23	121-0669	1	Spacer
30	121-0504	2	Bolt And Washer ASM
35	121-6369	2	Bolt And Washer ASM
50	121-6370	1	Wire-Coil
100	121-0547	1	Plug-Spark
110	133-8849	1	Sparkplug Cap And Boots ASM

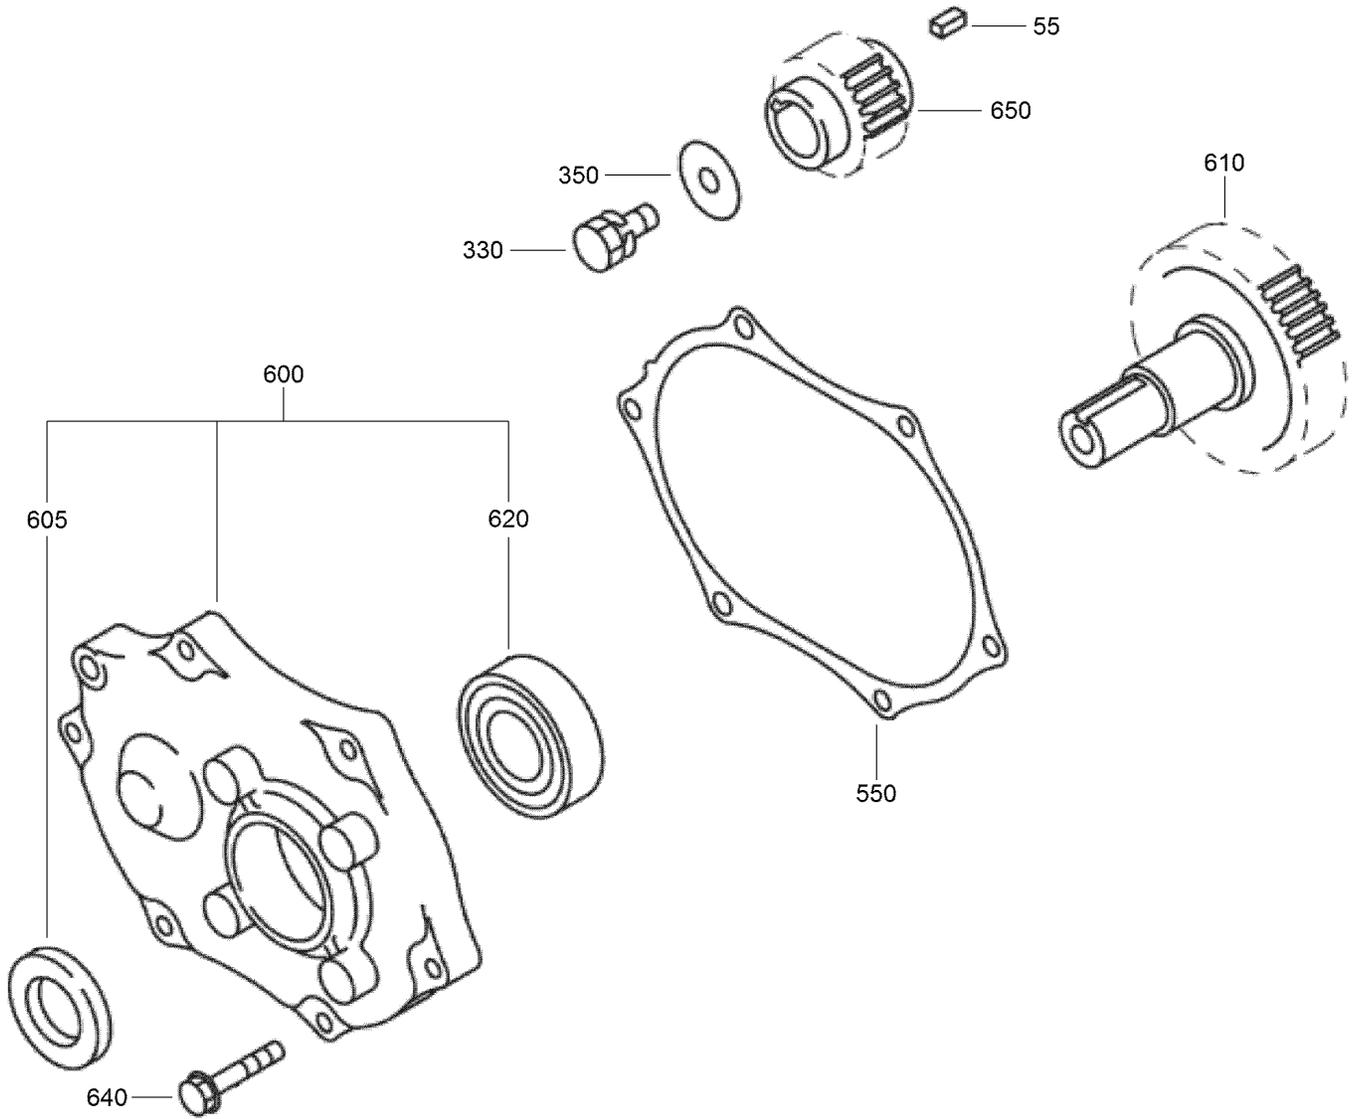

Gear Reduction Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
55	121-0536	1	Key
330	121-0501	1	Bolt-Flange
350	121-0531	1	Washer
550	121-0671	1	Gasket-Cover, Reduction
600	121-0670	1	Reduction Cover ASM
605	121-0541	1	Seal-Oil
610	121-6372	1	Shaft-Driving
620	121-0545	1	Bearing-Ball
640	121-0518	6	Bolt-Flange
650	121-6373	1	Shaft-Driven

Attachments and Accessories

For 04044 Greensmaster Flex 2120 Traction Unit

Product Name	Model/Part
LED Light Kit.....	04064
Wheel Kit	04123
Trans Pro 80 Tow-Behind Trailer.....	04238
Trans Pro 100 Tow-Behind Trailer.....	04240
Flat Ramp	04245
Rail Ramp Kit (Update).....	04247
Narrow Wiehle Roller (Qty 1)	04255
Wide Wiehle Roller (Qty 1)	04256
Front Full Smooth Roller (Qty 1)	04257
Extended Narrow Wiehle Roller (Qty 1)	04258
Out-Front Brush Kit.....	04266
Paspalum Wiehle Roller (Qty 1).....	04267
21in Soft Grooming Brush.....	04270
21in Stiff Grooming Brush.....	04271
21in Spring Steel Groomer Reel	04283
21-Inch 11-Blade Cutting Unit	04290
21-inch 14-Blade Cutting Unit.....	04292
Turf Evaluator	04399
Steel Roller (Qty 1)	04628
Universal Groomer Drive Kit	04648
Bedbar	106-2648-01
Roller Seal Replacement (Qty 1)	107-1594
Steel Roller Asm	107-3509
Wide Wiehle Steel Roller Asm	107-3514
Premium ATF (Drum).....	108-1185
Premium ATF (Pail)	108-1186
Bedknife-Tournament, Extended	108-4302
Bedknife-Microcut, Extended.....	108-4303
Blade-Groomer, Helix	110-2333
Bedknife-EDGEMAX, Microcut.....	115-1880
Bedknife-EDGEMAX, Tournament Cut.....	115-1881
Wireless Hourmeter.....	115-4754
Rear Full Roller Kit (Aluminum).....	115-7356
Narrow Wiehle Roller Kit.....	115-7360
Roller Extension Kit	115-7361
Front Brush for Narrow Wiehle Roller (Qty 1).....	115-7377
Front Brush for Wide Wiehle Roller (Qty 1)	115-7378
Front Brush for Full Roller (Qty 1)	115-7379
Front Comb for Narrow Wiehle Roller (Qty 1).....	115-7380
Front Comb for Wide Wiehle Roller (Qty 1).....	115-7381
Front Comb for Full Roller (Qty 1)	115-7382
Rear Roller Scraper Kit with Roller.....	115-7383
Wide Wiehle Roller Kit	115-7386
Front Full Smooth Roller Kit.....	115-7388
High Altitude Jet-Subaru.....	117-0073
Steel Rear Full Roller (Qty 1).....	120-9595

Attachments and Accessories (continued)

High Height-of-Cut Arms (Qty 1)	120-9600
Rear Roller Adjustment (Qty 1)	120-9602
Wire Harness-Wireless Hour Meter	120-9690
Spark Plug	121-0547
Element Set	121-0618
Filter-Fuel	121-0685
Rear Roller Scraper (Qty 1)	121-2260
MVP Kit-Cutting Unit Re-Build	121-2637
Extended Wiehle Roller Kit	121-4675
Premium Engine Oil 10w30 (55 Gallon Drum)	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
MVP Kit, Forward Rotating Groomer Re-Build	121-9517
Paspalum Wiehle Roller	121-9535
Front Scraper for Narrow Wiehle Roller (Qty 1)	125-3503
Front Scraper for Wide Wiehle Roller (Qty 1)	125-3504
Front Scraper for Full Roller (Qty 1)	125-3505
Toro Reel Paper (10 Pack)	125-5610
Toro Reel Shim (0.002in)	125-5611
21in Soft Grooming Brush Kit	127-1547
21in Stiff Grooming Brush Kit	127-1548
Groomer Quick Up Kit	127-6119
Angle Indicator	131-6828
Angle Indicator Mount	131-6829
MVP Kit, Greensmaster Flex 1820 or 2120 Traction Unit	133-8898
Rail Ramp Kit TP100	138-5011
MVP Filter and Spark Plug Kit, 2012 and After Walk-Behind Greensmaster Mower	30097
Cast Iron Wiehle Roller (Qty 1)	71-1550
Bedknife-Microcut	93-4262
Bedknife-Tournament Cut	93-4263
Bedknife-Low Cut	93-4264
Height-of-Cut Bar	94-9010
Bedbar-Aggressive	99-3794-0P



Count on it.