

LAWN-BOY®

Silver Series® Lawnmower

Model No. 10363—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing, Handle Bracket And Wheel Assembly	3	Engine–OVRM105–21047F	9
Gear Case Assembly No. 104–7671	4	Engine–OVRM105–21047F	10
Rear Axle Assembly	5	Engine–OVRM105–21047F	11
Engine And Blade Assembly	6	Recoil Starter No. 590737	12
Handle And Controls Assembly	7	Recoil Starter No. 590694 (Optional)	13
Carburetor No. 640281	8		


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	89817	Leaf Shredder Kit	89860
Rear Bagging Kit	89906	Leaf Bag Kit with Chute	89811
Leaf Bag	89804		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

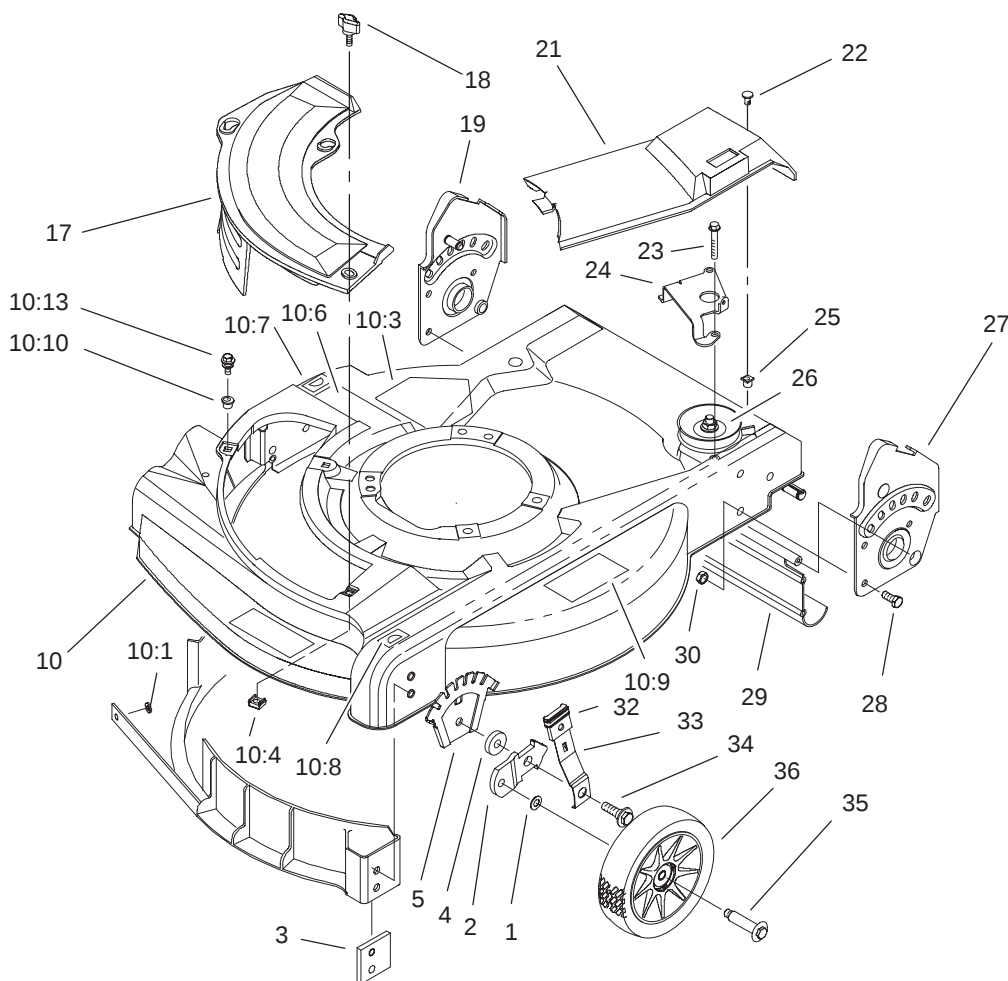


Sheet No.:2

Housing, Handle Bracket And Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	40-1940	2	Washer	26	104-7671	1	Gear Case ASM
2	95-7403-03	2	Bracket-Wheel Height Adjustment	27	92-7724	1	Handle Bracket ASM-LH
3	92-7731	2	Plate - Baffle	28	322-3	6	Screw-HH
4	92-4890	2	Washer - Wheel	29	92-8647	1	Shield - Trailing
5	92-4881-03	2	Plate - Height Adjustment	30	3296-29	6	Nut-Lock
10	98-4477	1	Deck ASM	32	92-1008	2	Knob-Lever, Height Adjustment
10:1	3269-26	1	Washer-Flat	33	614687	2	Arm-Front Spring
10:3	43-8480	1	Decal-Danger	34	614672	2	Bolt-Shoulder
10:4	613765	1	Nut-Cage	35	92-1099	2	Bolt-Shoulder
10:6	99-6018	1	Decal - Warning	36	684776	2	Wheel & Tire ASM
10:7	92-2914	1	Decal - HOC, RH	*	95-7052	1	Plate - Chute Opening
10:8	92-2915	1	Decal - HOC, LH				
10:9	93-7250	1	Decal-Warning				
10:10	94-1610	2	Grommet - Plastic				
10:13	614677	2	Screw- Sems				
17	92-8630	1	Plate-Mulch				
18	98-8332	1	Knob				
19	92-7723	1	Handle Bracket ASM-RH				
21	95-7068	1	Cover - Drive				
22	92-9665	1	Screw				
23	65-5221	2	Screw-HWHTF				
24	92-7728-03	1	Guide - Transmission				
25	605120	1	Grommet				

* Not illustrated

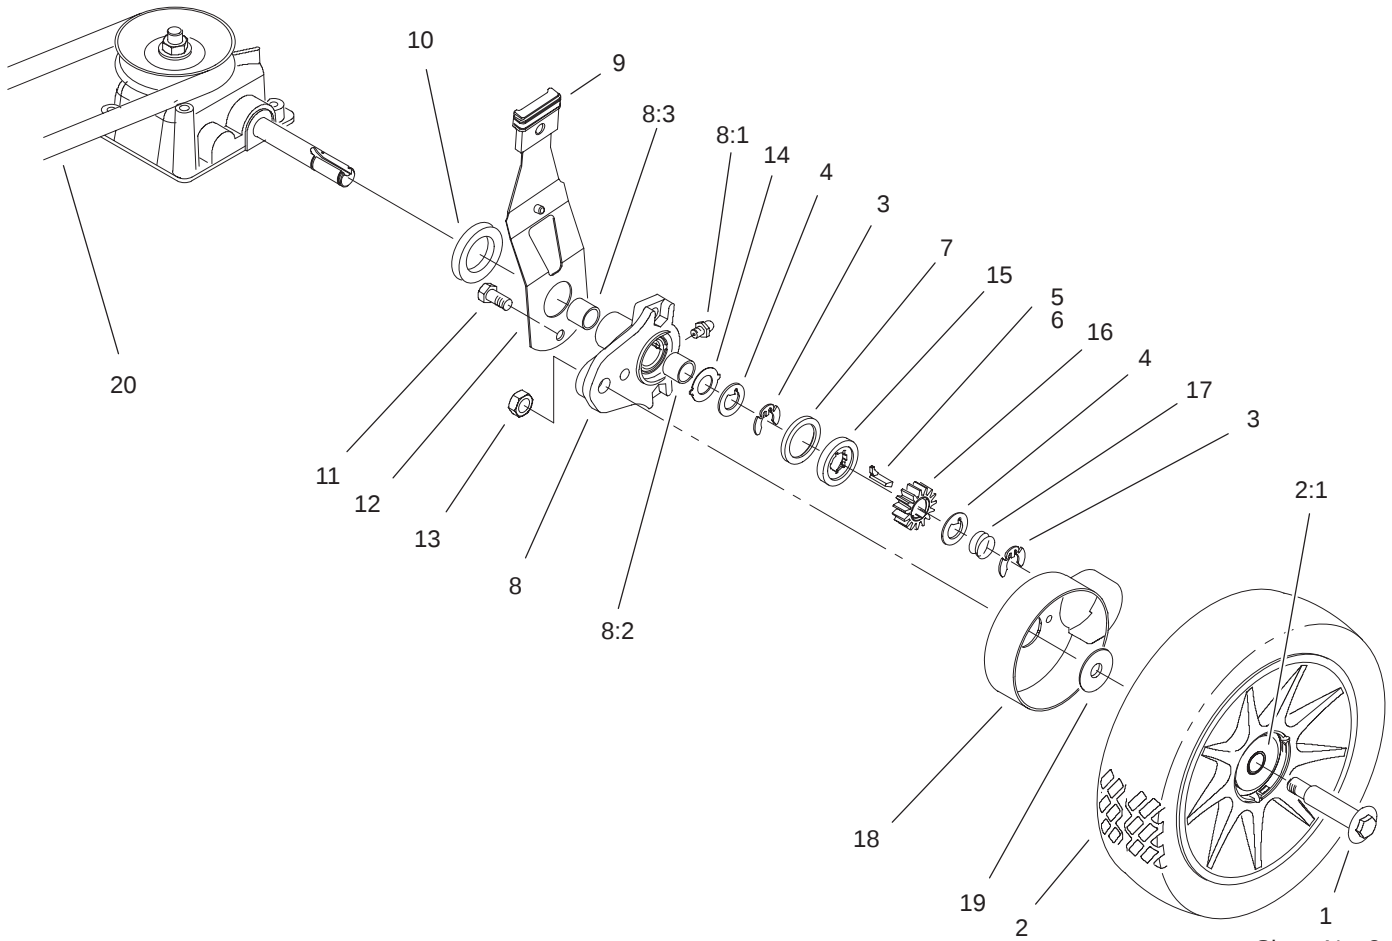


Sheet No.:3

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	Wheel & Tire ASM
2:1	27-6250	2	Bushing
3	65-2720	4	Ring-Klip
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
*6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Arm ASM-Rear Height Adjustment
8:1	302-56	1	Fitting-Zerk
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
9	92-1008	2	Knob-Lever, Height Adjustment
10	614447	2	Spacer-Axle Shaft
11	32144-85	2	Screw-HH
12	92-1004	2	Rear Spring Arm ASM
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel

Ref. No.	Part No.	Qty.	Description
19	614426	2	Washer-Stepped
20	93-7381	1	V-Belt

* Not illustrated

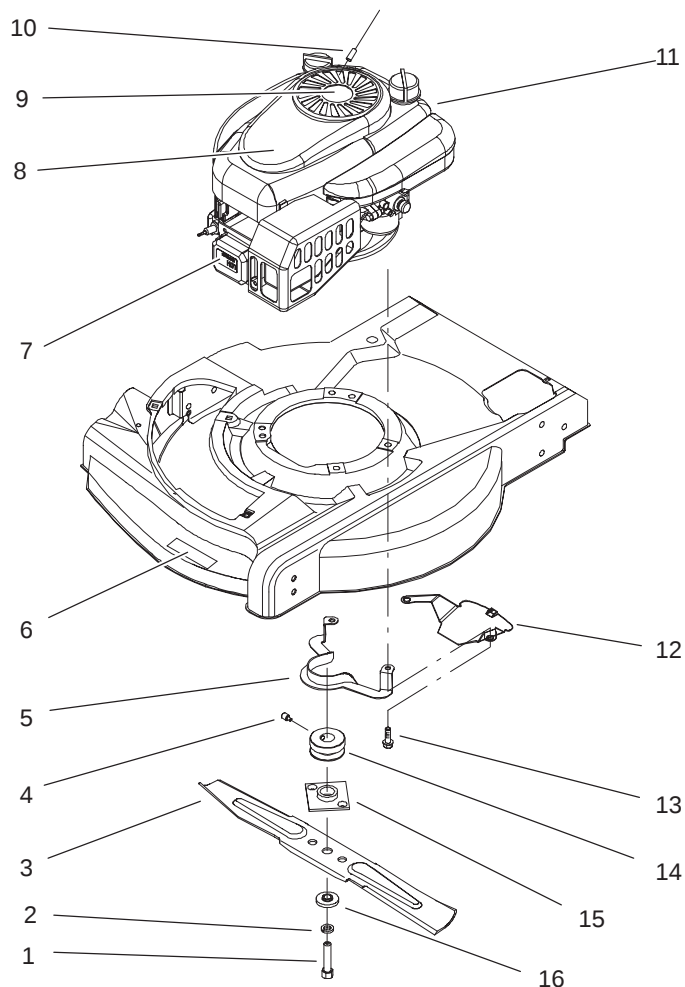


Sheet No.:6

Engine And Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	100-5019	1	Bolt-Blade
2	3253-22	1	Washer-Lock
3	612543-03	1	Blade
4	104-0214	1	Screw-Set, Cone Point
5	92-1024-03	1	Guide-Belt
6	104-7955	1	Decal-Deck
7	65-2690	1	Decal-Surface, Hot
8	98-1593	1	Applique
9	104-7685	1	Decal-Recoil
10	92-1701	1	Stop-Rope
11	100-1033	1	Engine-Centura Ohv,Zs
12	93-4196-03	1	Shield - Grass
13	95-1727	3	Screw-Taptite
14	95-1878	1	Pulley
15	100-2899	1	Plate & Collar ASM
16	92-8626	1	Spacer - Blade


Ref. No.	Part No.	Qty.	Description

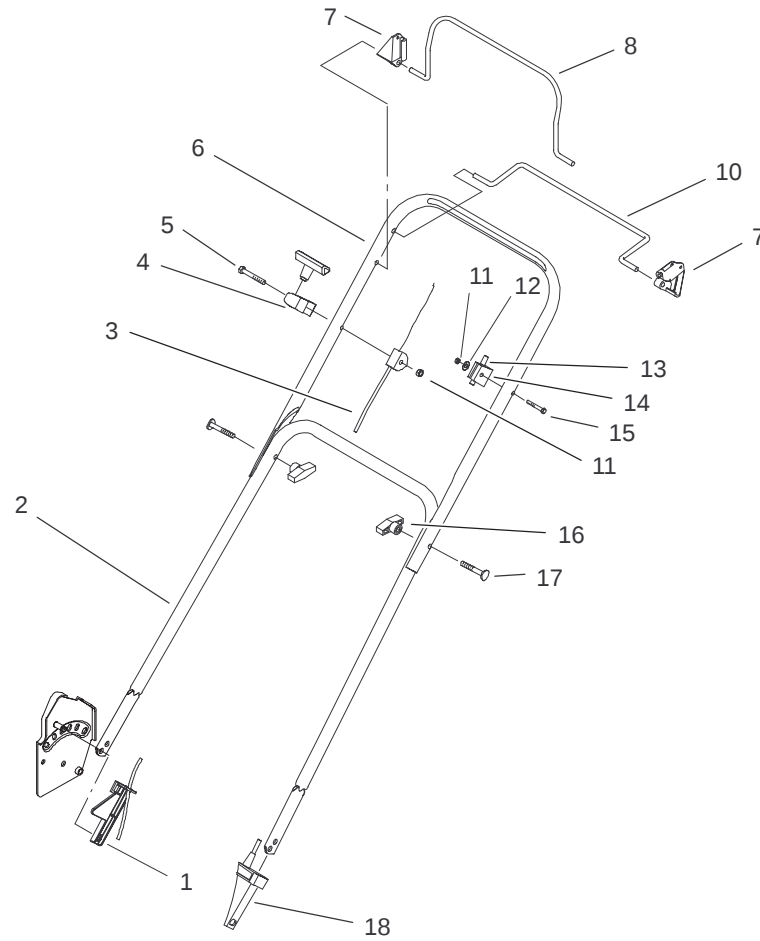

Sheet No.:7

Handle And Controls Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-1013	1	Guard-Cable				
2	614643-05	1	Handle - Lower				
3	100-5989	1	Brake Cable ASM				
4	93-7383	1	Guide-Rope				
5	321-50	1	Screw-HH				
6	100-2888-05	1	Handle-Upper				
7	92-5412	2	Stop-Pivot				
8	93-4184-03	1	Bail - Brake				
10	92-1001-03	1	Bail-Control				
11	3296-73	2	Nut-Lock, NI				
12	3256-1	1	Washer-Flat				
13	100-5982	1	Cable-Ground Speed				
14	92-7729	1	Anchor-Upper, Cable				
15	92-2266	1	Screw-Handle				
16	98-7134	2	Knob-Handle				
17	614697	2	Screw				
18	93-7380	1	Anchor - Cable				

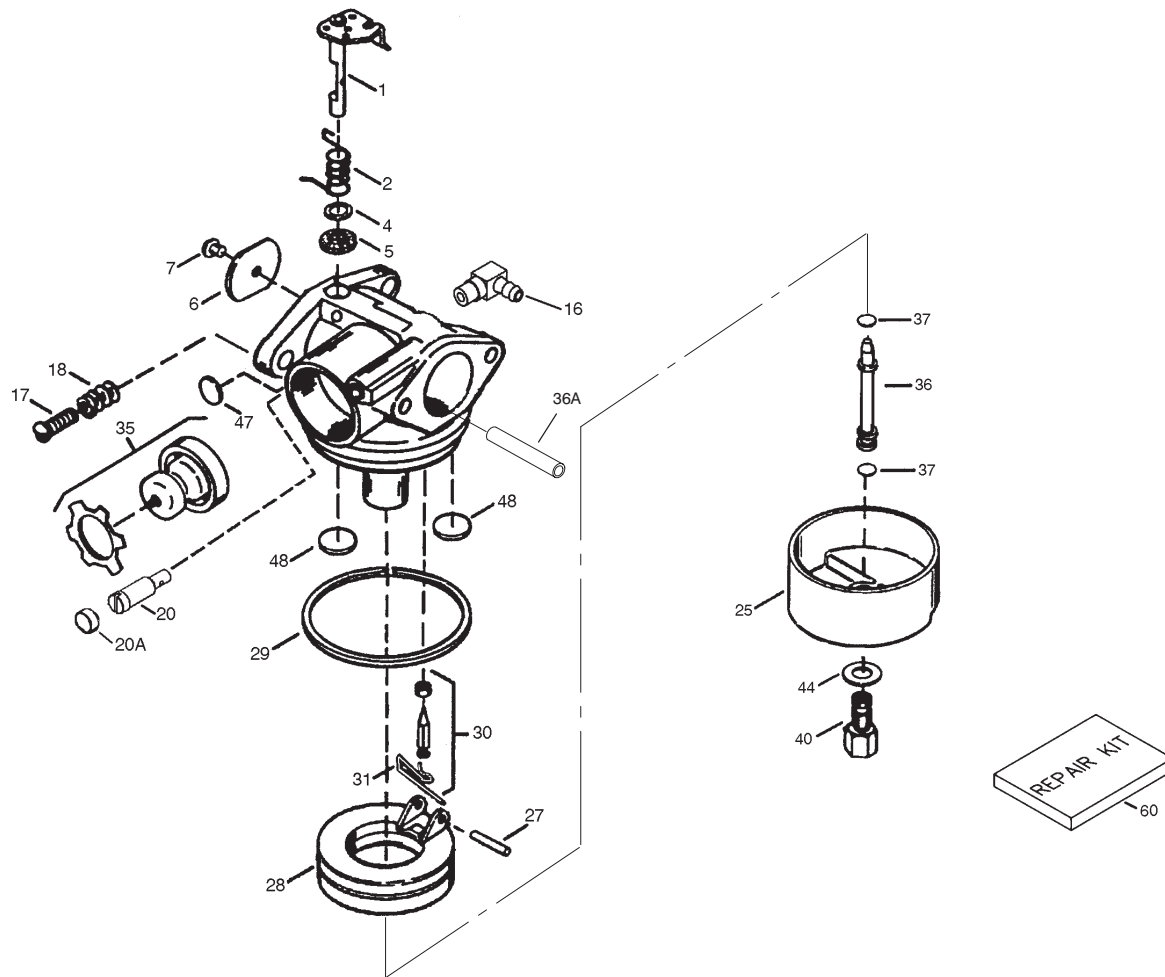

Carburetor No. 640281


Ref. No.	Part No.	Qty.	Description
1	631615	1	Throttle Shaft & Lever Assembly
2	631767	1	Throttle Return Spring
4	631184	1	Dust Seal Washer
5	631183	1	Dust Seal (Throttle)
6	640070	1	Throttle Shutter
7	650506	1	Shutter Screw
16	631807	1	Fuel Fitting
17	651025	1	Throttle Crack Screw/Idle Speed Screw
18	630766	1	Tension Spring
20	640027	1	Idle Restrictor Screw
20A	640200	1	Idle Restrictor Screw Cap
25	631867	1	Float Bowl
27	631024	1	Float Shaft
28	632802	1	Float (Plastic)
29	631028	1	Float Bowl "O" Ring
30	631021	1	Inlet Needle, Seat, & Clip (Incl. 31)
31	631022	1	Spring Clip
35	640259	1	Primer Bulb/Retainer Ring
36	640080	1	Main Nozzle Tube
36A	632766	1	Bowl Vent Tube

Ref. No.	Part No.	Qty.	Description
37	632547	2	Extension O-Ring, Main Nozzle Tube
40	640074	1	High Speed Bowl Nut
44	27110A	1	Bowl Nut Washer
47	630748	1	Welch Plug, Idle Mixture Well
48	631027	1	Welch Plug, Atmospheric Vent
60	632760B	1	Repair Kit
*61	26756	1	Carburetor To Intake Pipe Gasket

Obtain parts from local Tecumseh dealer

* Not Illustrated

Engine-OVRM105-21047F

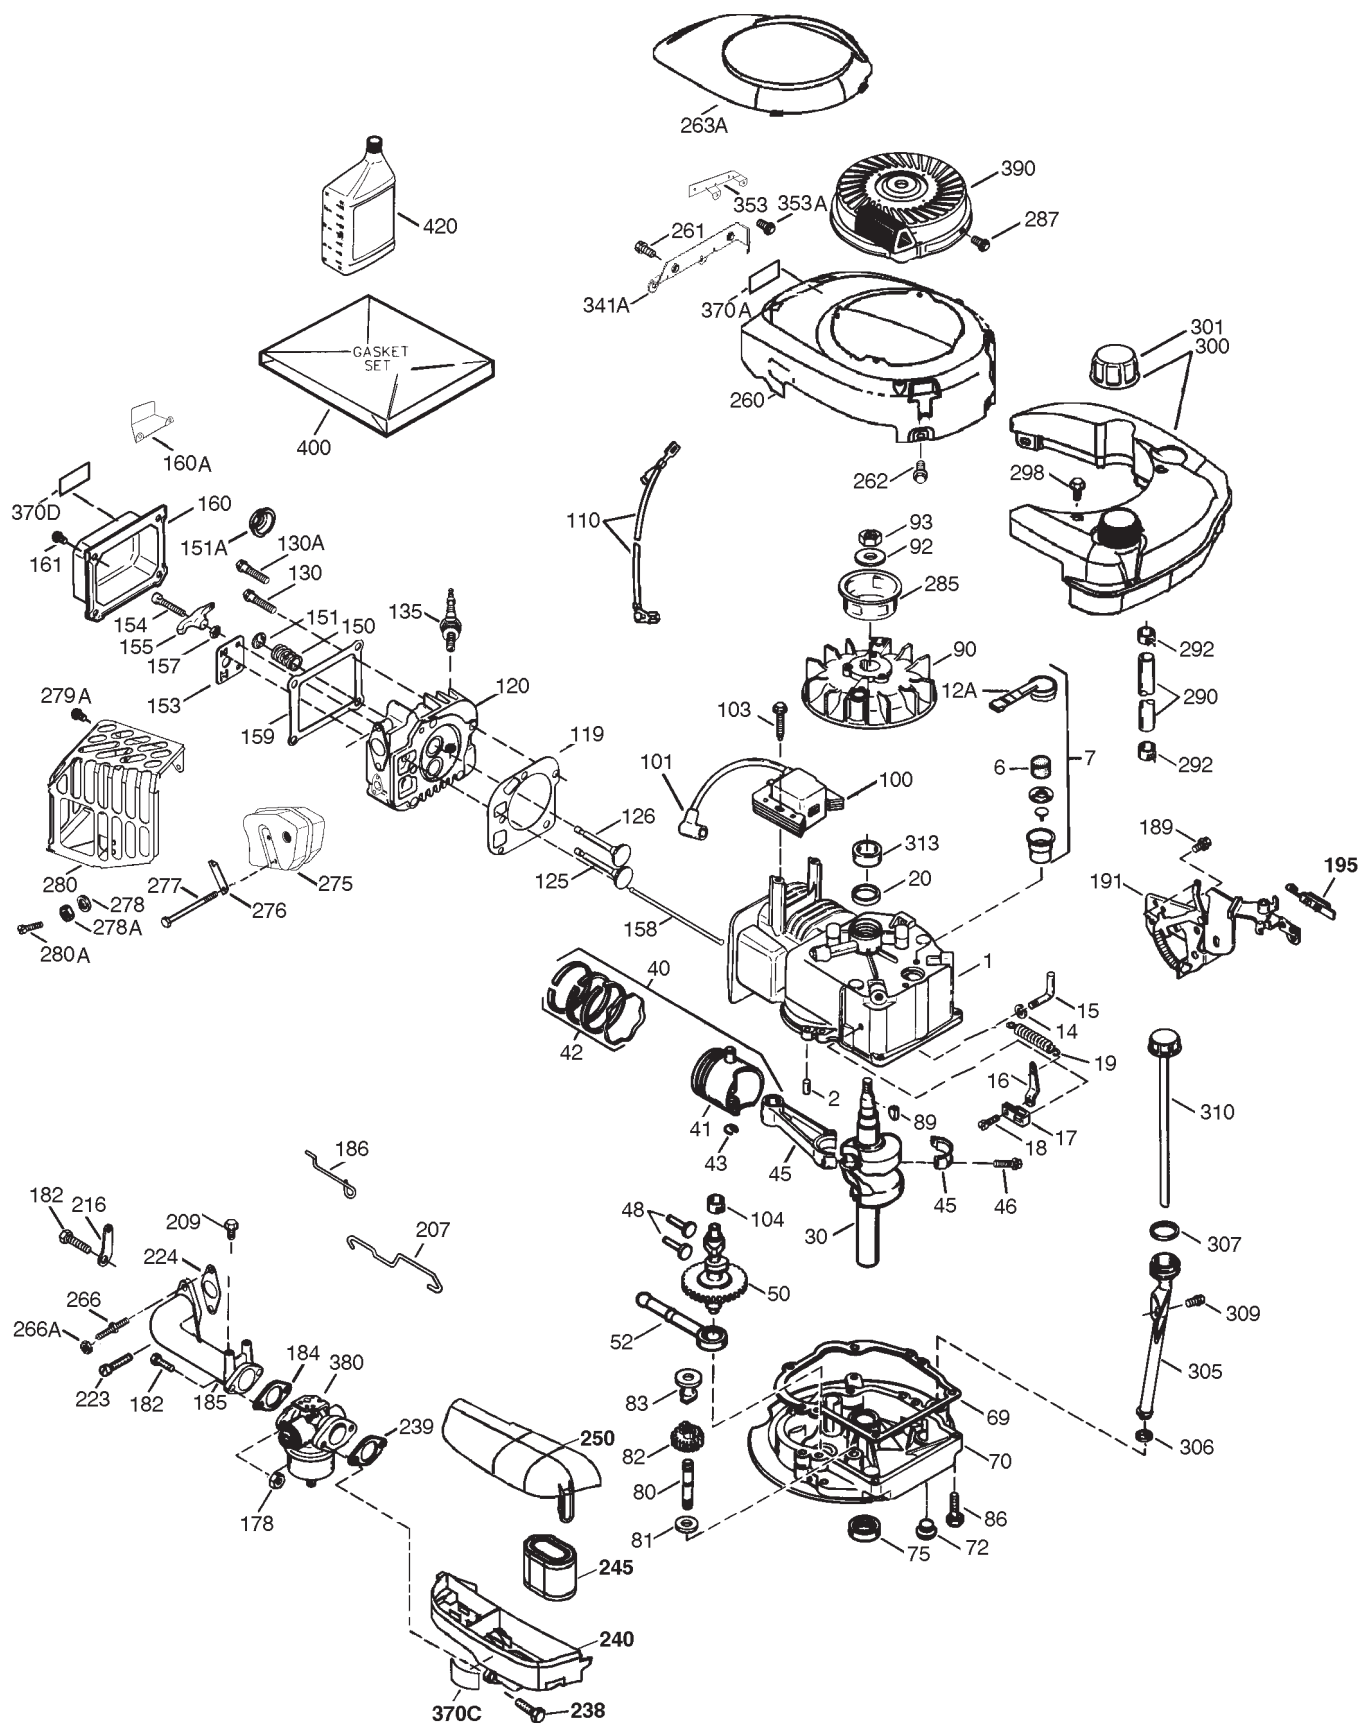

Engine-OVRM105-21047F


Ref. No.	Part No.	Qty.	Description
1	36835B	1	Cylinder (Incl. 2 & 20)
2	26727	2	Dowel Pin
6	33734	1	Breather Element
7	36557	1	Breather Body ASM
			(Incl. 6 & 12A)
12A	36558	1	Breather Cover & Tube
14	28277	1	Washer
15	30589	1	Governor Rod
			(Incl. 14)
16	34839A	1	Governor Lever
17	31335	1	Governor Lever Clamp
18	651018	1	Screw, Torx T-15
19	36281	1	Extension Spring
20	32600	1	Oil Seal
30	37625	1	Crankshaft
40	35544A	1	Piston, Pin & Ring Set
			(Std.)
40	35545A	1	Piston, Pin & Ring Set
			(.010" OS)
40	35546	1	Piston, Pin & Ring Set
			(.020" OS)
41	35541	1	Piston & Pin ASM
			(Std.)
41	35542	1	Piston & Pin ASM
			(.010" OS) (Incl. 43)
41	35543	1	Piston & Pin ASM
			(.020" OS) (Incl. 43)
42	35547A	1	Ring Set (Std.)
42	35548A	1	Ring Set (.010" OS)
42	35549	1	Ring Set (.020" OS)
43	20381	2	Piston Pin Retaining
			Ring
45	32875A	1	Connecting Rod ASM
			(Incl. 46)
46	32610A	2	Connecting Rod Bolt
48	35616	2	Valve Lifter
50	37473	1	Camshaft
			Exhaust(MCR)(Incl.
			Ref #104)
52	29914	1	Oil Pump ASM
69	37609	1	Mounting Flange
			Gasket
70	35717B	1	Mounting Flange
			(Incl. 72 thru 83)
72	36083	1	Oil Drain Plug
75	27897	1	Oil Seal
80	30574A	1	Governor Shaft
81	30590A	1	Washer
82	30591	1	Governor Gear ASM
			(Incl. 81)
83	30588A	1	Governor Spool
86	650488	6	Screw
89	611004	1	Flywheel Key
90	611112	1	Flywheel
92	650815	1	Belleville Washer
93	650816	1	Flywheel Nut
100	34443C	1	Solid State Ignition
101	610118	1	Spark Plug Cover

Ref. No.	Part No.	Qty.	Description
103	651007	2	Screw, Torx T-15
104	37480	1	Cam Bushing
110	37047	1	Ground Wire
119	36738	1	Cylinder Head Gasket
120	37474	1	Cylinder Head
125	36471	1	Exhaust Valve (Std.)
			(Incl. 151)
125	36472	1	Exhaust Valve (1/32
			OS)(Incl. 151)
126	29314C	1	Intake Valve (Std.)
			(Incl. 151)
130	650912	4	Screw
130A	650999	1	Screw
135	34645	1	Resistor Spark Plug
			(RN4C)
150	31672	2	Valve Spring
151	31673	2	Valve Spring Cap
151A	40016A	1	Intake Valve Seal
153	36649	1	Push Rod Guide
154	650913	1	Rocker Arm Stud
155	35624A	1	Rocker Arm
157	650914	1	Lock Nut
158	36629	2	Push Rod
159	35626	1	Rocker Arm Cover
			Gasket
160	35627	1	Rocker Arm Cover
160A	37512	1	Heat Shield
161	30063	4	Screw, Torx T-30
178	29752	2	Nut & Lock Washer
182	6201	2	Screw
184	26756	1	Carburetor To Intake
			Pipe Gasket
185	37531	1	Intake Pipe
			(Incl. 223 & 224)
186	32653	1	Governor Spring
189	650839	2	Screw
191	36559A	1	S.E. Brake Bracket
195	610973	1	Terminal
207	34336	1	Throttle Link
209	30200	2	Screw
216	33086	1	Speed Adjuster Lever
223	651043	1	Screw
224	36581	2	Intake Pipe Gasket
238	650806	2	Screw
239	34338	1	Air Cleaner Gasket
240	36743	1	Air Cleaner Body
245	36745	1	Air Cleaner Filter
250	36744	1	Air Cleaner Cover
260	37513	1	Blower Housing
261	650853	1	Screw, Torx T-30
262	650831	2	Screw
263A	36758	1	Starter Grill
266	651040	1	Screw
266A	650852	1	Lockwasher
275	37275A	1	Muffler(Incl. 276 & 277)
276	36949	1	Locking Plate
277	651039	2	Screw

Obtain parts from local Tecumseh dealer

Ref. No.	Part No.	Qty.	Description

* Not illustrated

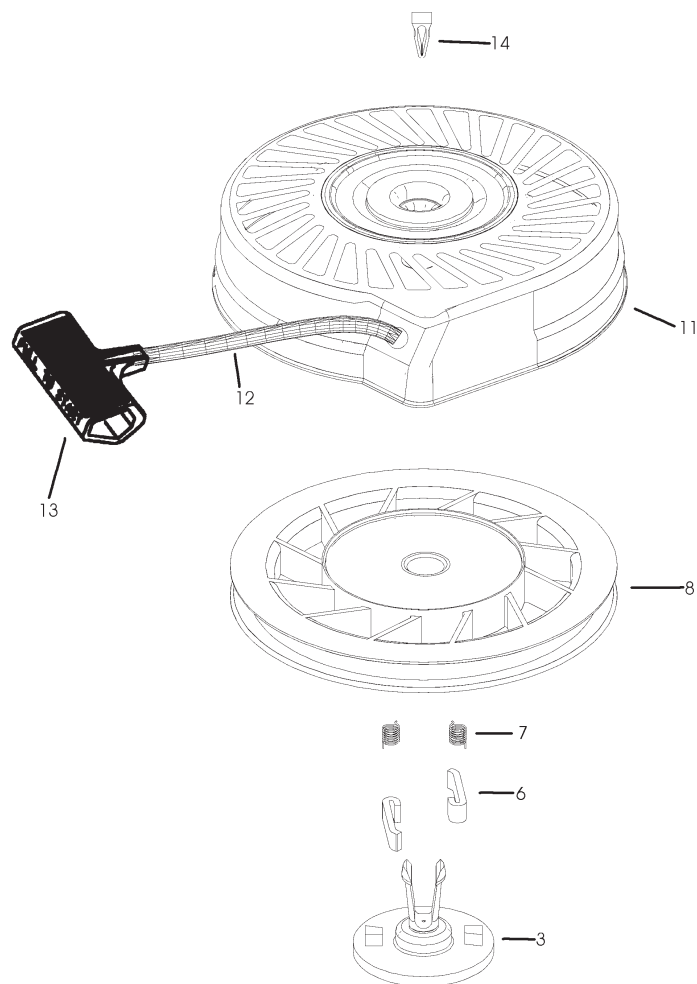


Recoil Starter No. 590737

Ref. No.	Part No.	Qty.	Description
3	590740	1	Retainer
6	590616	2	Starter Dog
7	590617	2	Dog Spring
8	590618A		Pulley & Rewind
		1	Spring ASM
11	590687A		Starter Housing ASM
		1	(40 degree grommet)
12	590535		Starter Rope
		1	(Length 98" x 9/64"
			dia.)
13	590701	1	Starter Handle
14	590760	1	Spring Clip

Ref. No.	Part No.	Qty.	Description

Obtain parts from local Tecumseh dealer

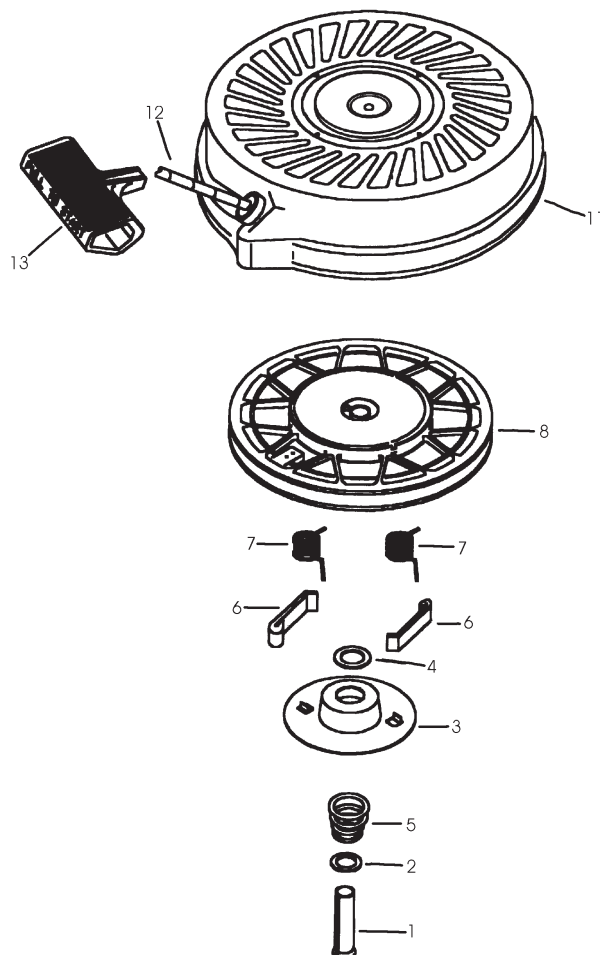

Recoil Starter No. 590694 (Optional)

Ref. No.	Part No.	Qty.	Description
1	590599A	1	Spring Pin (Incl. 4)
2	590600	1	Washer
3	590696	1	Retainer
4	590601	2	Washer
5	590697	1	Brake Spring
6	590698	2	Starter Dog
7	590699	2	Dog Spring
8	590700		Pulley & Rewind Spring
		1	ASM
11	590695		Starter Housing ASM
		1	(40 degree grommet)
12	590535		Starter Rope
		1	(98" X 9/64" dia.)
13	590701	1	Starter Handle

Obtain parts from local Tecumseh dealer

Maintenance Record

[illegible]

Maintenance Record

[illegible]

LAWN-BOY®