



Recycler[®] /Rear Bagging Walk Behind Mower

Model No. 20652-210000435 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing & Bracket Assembly	3	Rear Bag Tunnel Assembly	8
Gear Case Assembly	4	Rear Discharge Plug Assembly	9
Gear Case & Wheel Assembly	5	Rear Grass Bag Assembly	10
Engine Assembly	6	Engine Briggs & Stratton	
Handle Assembly	7	Model 12H802-1776-B1	11-19


Accessories

Description	Model / Part No.	Description	Model / Part No.
Traction Assist Handle Kit	Model No. 59196		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

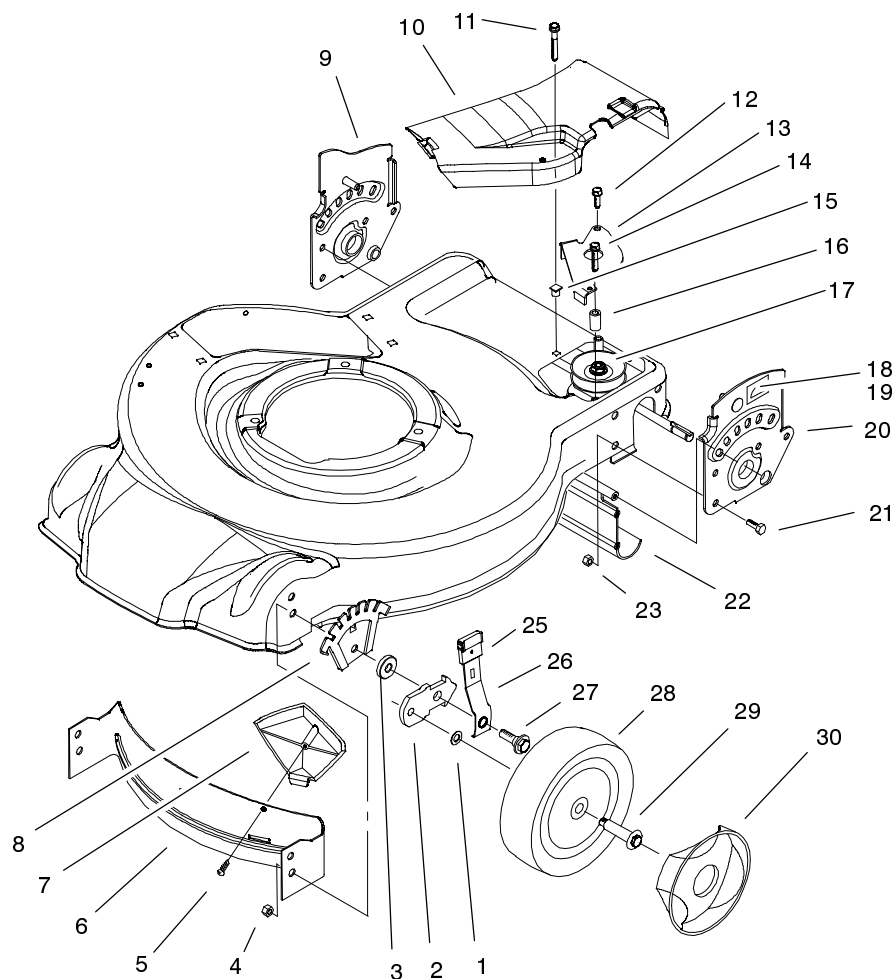

Sheet No.:3

Housing & Bracket Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	40-1940	2	Washer	22	92-8647	1	Shield - Trailing
2	95-7403-03	2	Bracket-Wheel Height Adjustment	23	3296-29	6	Nut-Lock
3	92-4890	2	Washer - Wheel	25	92-1008	2	Knob-Lever, Height Adjustment
4	3296-39	2	Nut-Lock, NI	26	614687	2	Arm-Front Spring
5	93-0231	1	Screw - PPH	27	614650	2	Bolt-Shoulder
6	100-1179-03	1	Baffle-Front	28	99-6470	2	Wheel ASM
7	93-0216	1	Kicker - Front	29	614672	2	Bolt-Shoulder
8	92-4881-03	2	Plate - Height Adjustment	30	95-6543	2	Cover - Wheel
9	99-5234	1	Bracket ASM-Handle, RH				
10	99-1581	1	Cover-Belt				
11	32144-119	1	Screw-Pth				
12	49-2040	1	Screw-Tapping				
13	99-1567-03	1	Bracket-Belt Guide				
14	92-1616	1	Screw-HWHTF				
15	605120	1	Grommet				
16	614673	1	Bushing-Plate, Actuator				
17	104-7677	1	Gear Case ASM				
18	93-6670	1	Decal - HOC				
19	93-6671	1	Decal - HOC				
20	99-5233	1	Bracket ASM-Handle, LH				
21	322-3	6	Screw-HH				

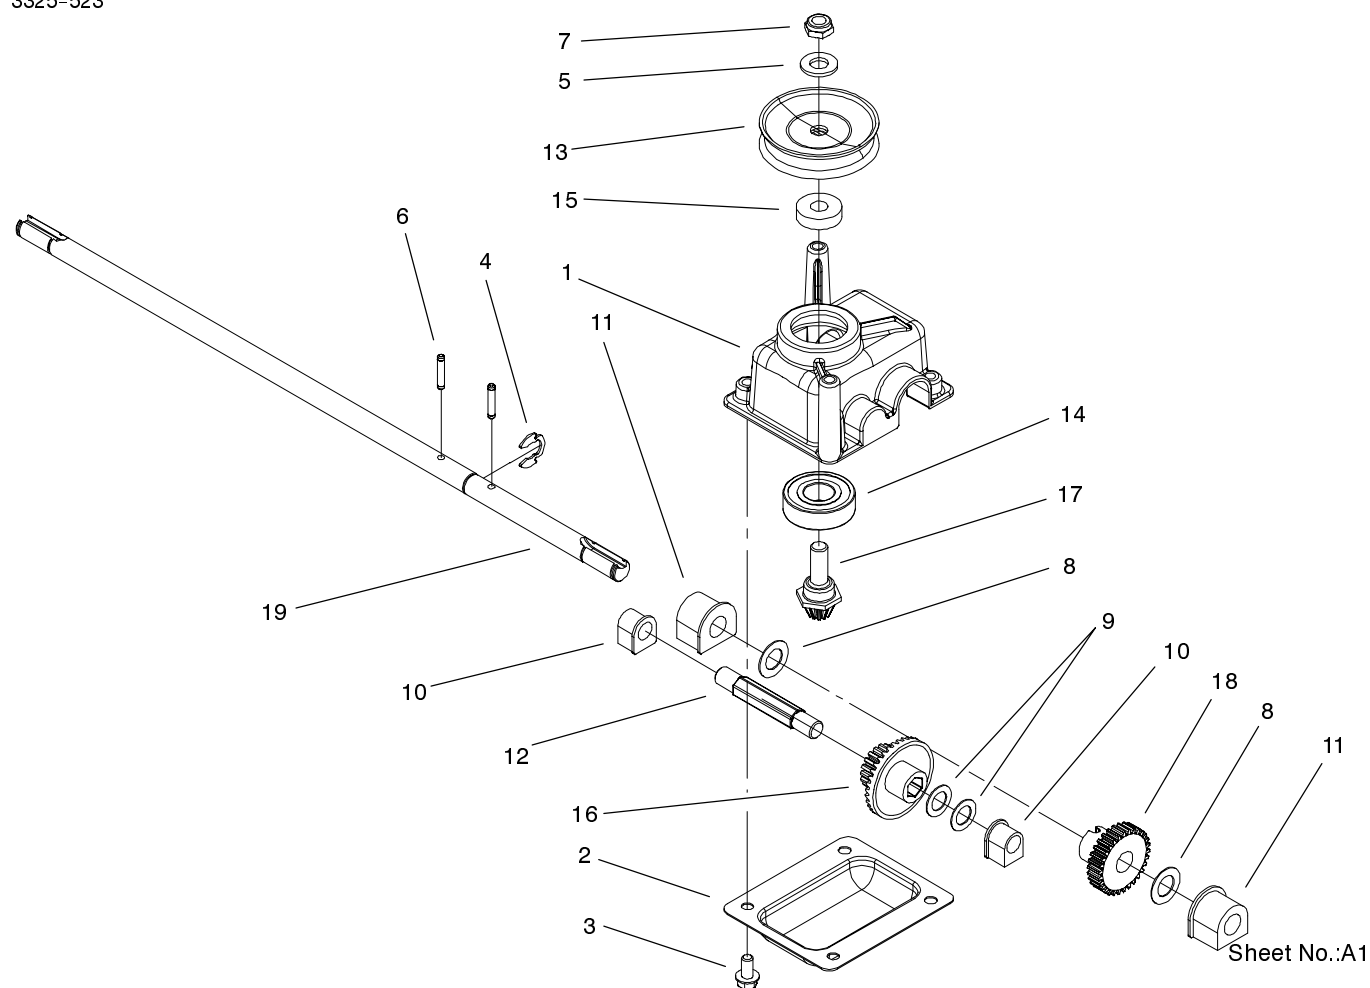

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	104-7619	1	Casting-Gear Case
2	614668-03	1	Cover-Gear Case
3	32144-4	4	Screw-HH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock NI
8	36-4780	2	Washer
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing-Output
12	614696	1	Shaft-Intermediate
13	100-1176	2	Pulley-Half
14	100-1048	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-1005	1	Gear-19t Spur, 37t Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	104-1004	1	Gear-30t
19	104-7670	1	Shaft-Output

Ref. No.	Part No.	Qty.	Description

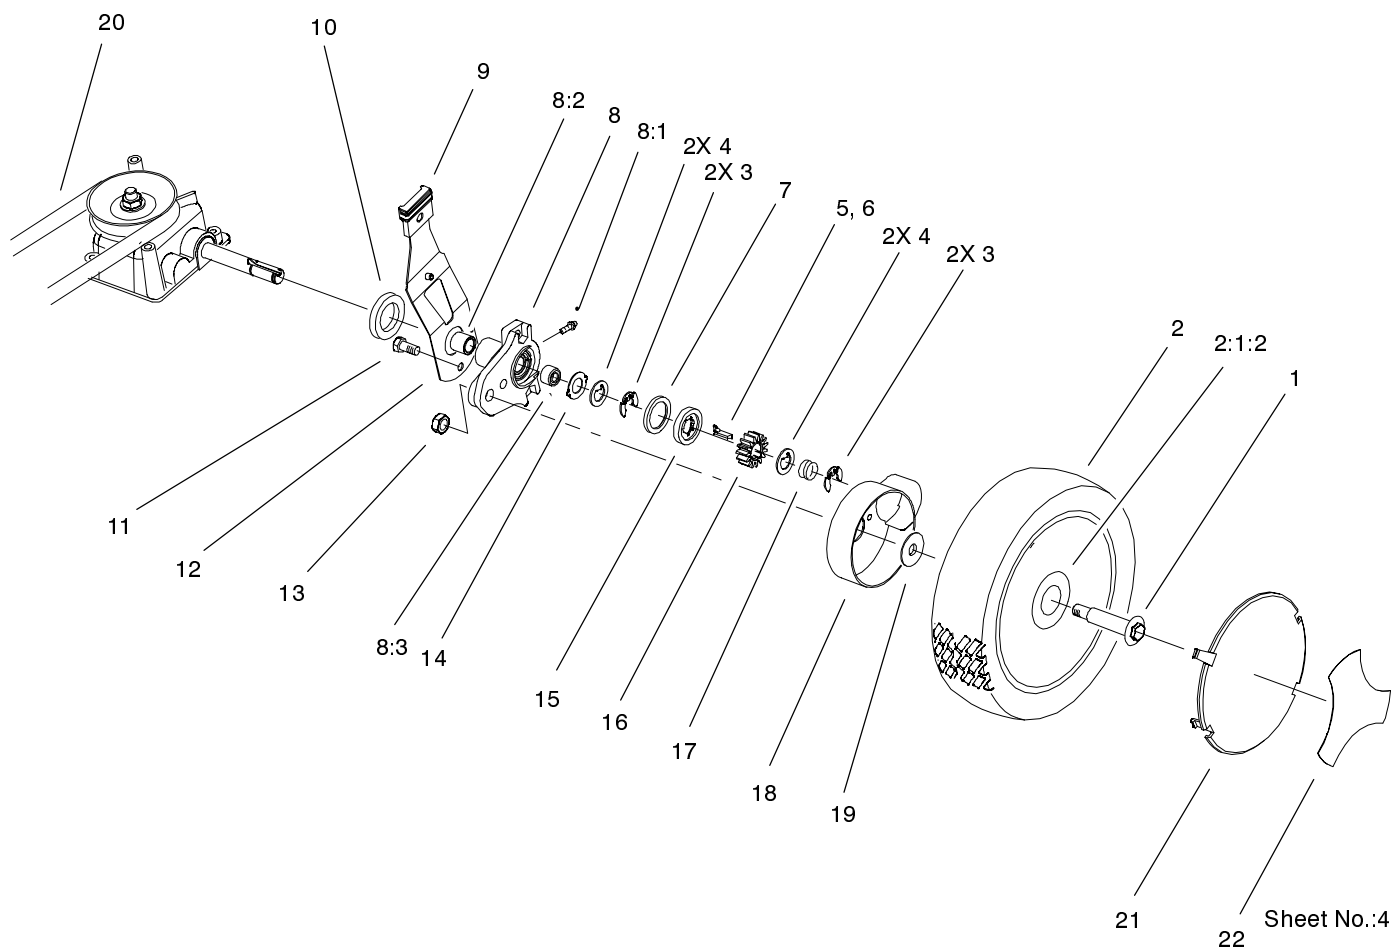


Sheet No.:4

Gear Case & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	99-6471	2	Wheel ASM
2:1:2	27-6250	2	Bushing
3	65-2720	4	Ring-Klip
4	65-4740	4	Washer-Thrust, Keyed
5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	92-7746	2	Arm ASM-Rear Height Adjustment
8:1	302-56	1	Fitting-Zerk
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
9	92-1008	2	Knob-Lever, Height Adjustment
10	614447	2	Spacer-Axle Shaft
11	32144-85	2	Screw-HH
12	92-1004	2	Rear Spring Arm ASM
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel
19	614426	2	Washer-Stepped

Ref. No.	Part No.	Qty.	Description
20	93-0232	1	V-Belt
21	100-4366	1	Cover-Smart Wheel
22	100-1519	1	Label-Wheel, Smart

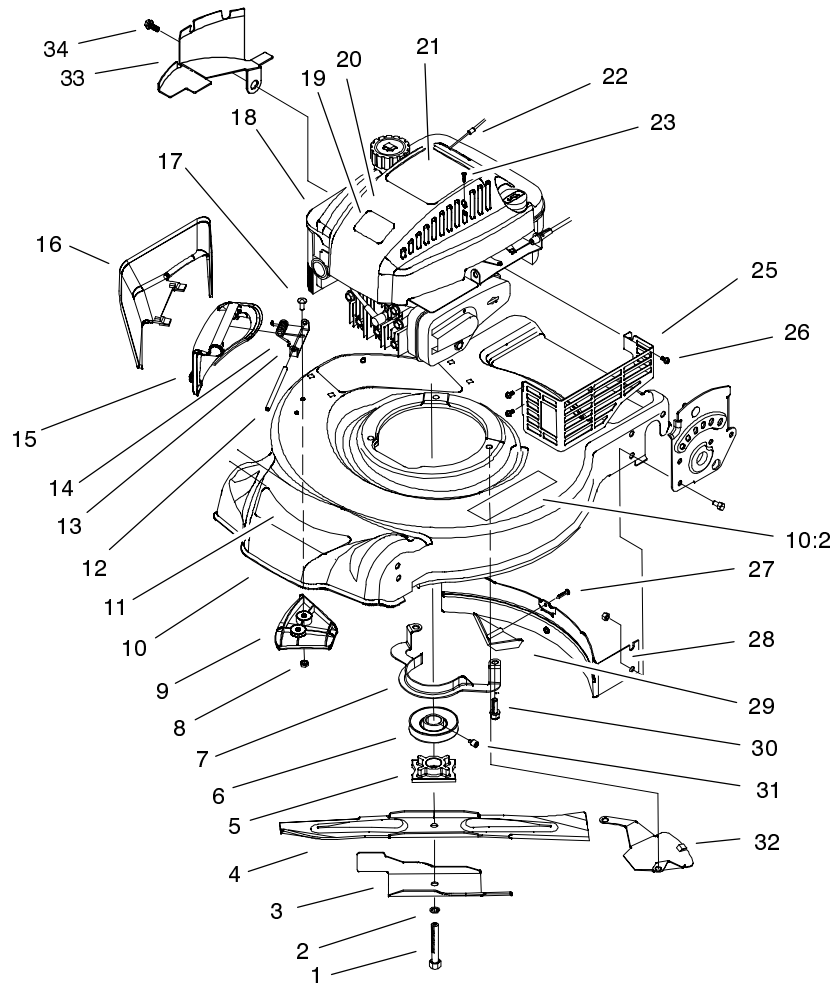


Sheet No.:8

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	26-0671	1	Screw-Blade
2	3253-22	1	Washer-Lock
3	93-0219-03	1	Accelerator
4	93-0241-03	1	Blade - Steel Deck
5	104-7609	1	Retainer-Blade,Ce
6	95-1878	1	Pulley
7	92-1024-03	1	Guide-Belt
8	32128-32	2	Nut-HHF
9	99-6349	1	Baffle
10	104-0228	1	Housing
10:2	93-4105	1	Decal - Danger
11	100-5954	1	Decal-Deck
12	99-5291	1	Rod-Cover
13	99-5292	1	Bracket-Cover
14	99-5293	1	Spring-Torsion
15	99-5294	1	Cover-Side
16	99-5295	1	Chute-Side
17	3229-11	2	Screw-CARR
★18		1	Engine-Quantum 6.0,Zs Briggs & Stratton Model 12h802-1776-B1
19	98-3206	1	Nameplate - Toro
20	93-0243	1	Shroud-Quantum Wedge
21	100-5952	1	Decal-Engine

Ref. No.	Part No.	Qty.	Description
22	2210-316	1	Stop-Rope
23	32144-121	2	Screw-PPH
25	104-7577-03	1	Shield-Muffler
26	32144-1	3	Screw-Taptite
27	93-0231	1	Screw - PPH
28	93-0223-03	1	Baffle - Rear
29	93-0217	1	Kicker - Rear
30	95-1726	3	Screw-Taptite W/Patch
31	104-0214	1	Screw-Set,Cone Point
32	93-4196-03	1	Shield - Grass
33	99-0905	1	Guard-Flywheel
34	32144-4	1	Screw-HH


★ Not serviced

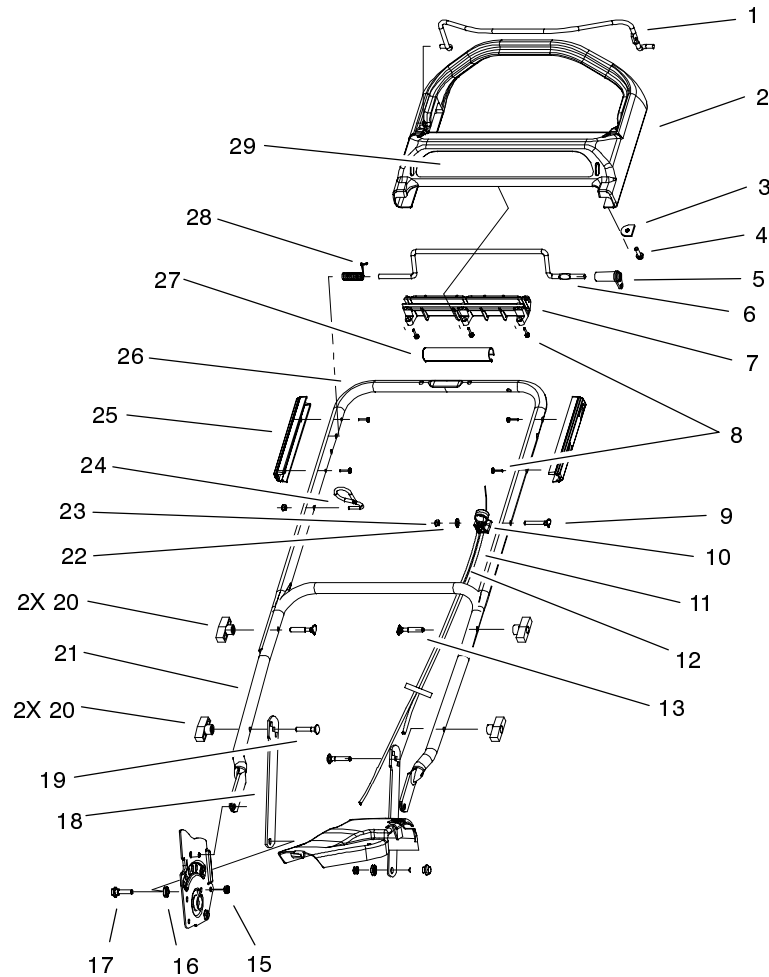

Sheet No.:10

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-1593-03	1	Bail-Brake	27	100-5970	1	Cover-Handle
2	99-1582	1	Handle-Control	28	99-1592	1	Spring-Torsion, RH
3	99-1595	1	Retainer-Cable, Brake	29	100-5950	1	Decal-Automatic
4	46-8091	1	Screw-HWH				
5	99-1589	1	Lever-Traction				
6	99-1588	1	Bar-Control, Traction				
7	99-6008	1	Retainer-Control Rod, Traction				
8	94-4496	10	Screw-PPH				
9	95-4453	1	Screw-Handle				
10	99-5239	1	Anchor-Cable				
11	99-1510	1	Cable-Traction				
12	99-1509	1	Cable-Brake				
13	92-2260	2	Screw-Handle				
15	3296-72	2	Nut-Lock, NI				
16	3-3287	2	Spacer-Latch, Handle				
17	99-5284	2	Bolt-Shoulder				
18	99-5247-03	2	Support-Handle				
19	99-6019	2	Screw-CARR				
20	98-7134	4	Knob-Handle				
21	99-5246-05	1	Handle-Lower				
22	3256-1	1	Washer-Flat				
23	3296-73	2	Nut-Lock, NI				
24	86-9671	1	Guide-Rope				
25	99-1590	2	Guide-Handle, Control				
26	99-1596-05	1	Handle-Upper				

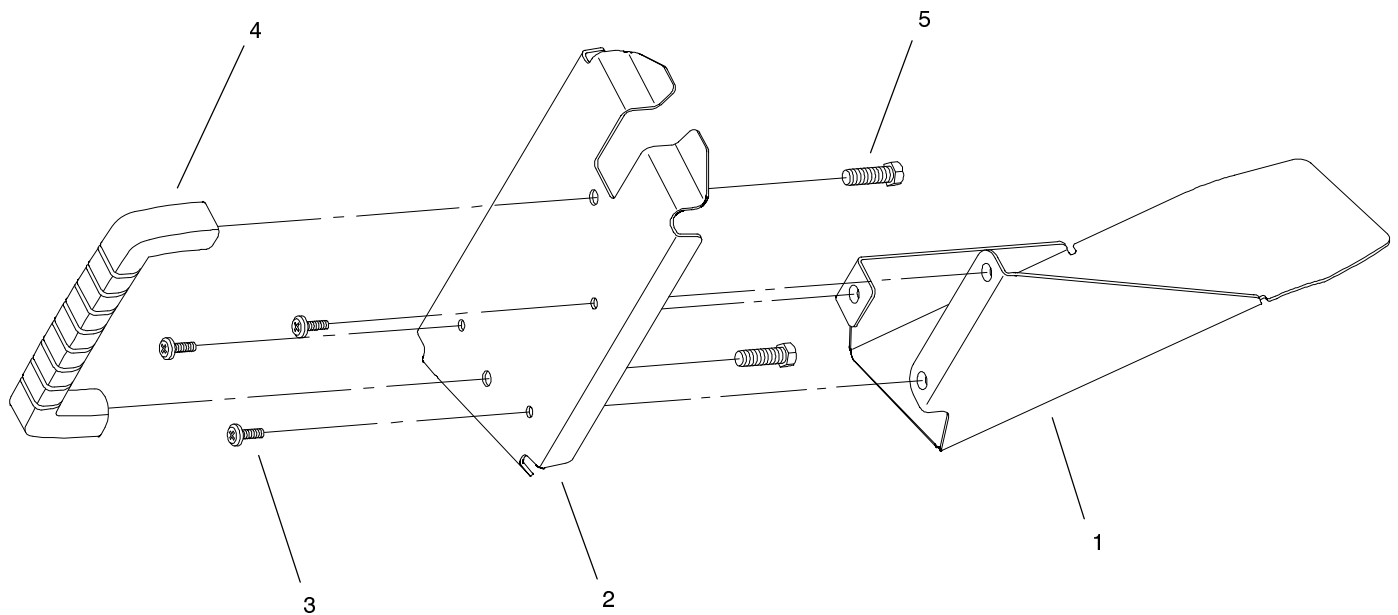


Sheet No.:14

Rear Discharge Plug Assembly

Ref. No.	Part No.	Qty.	Description
1	93-0279-03	1	Shield - Discharge Plug
2	93-0280-03	1	Cover - Discharge Plug
3	32104-122	3	Screw
4	65-5100	1	Handle-Door
5	46-8091	2	Screw-HWH

Ref. No.	Part No.	Qty.	Description

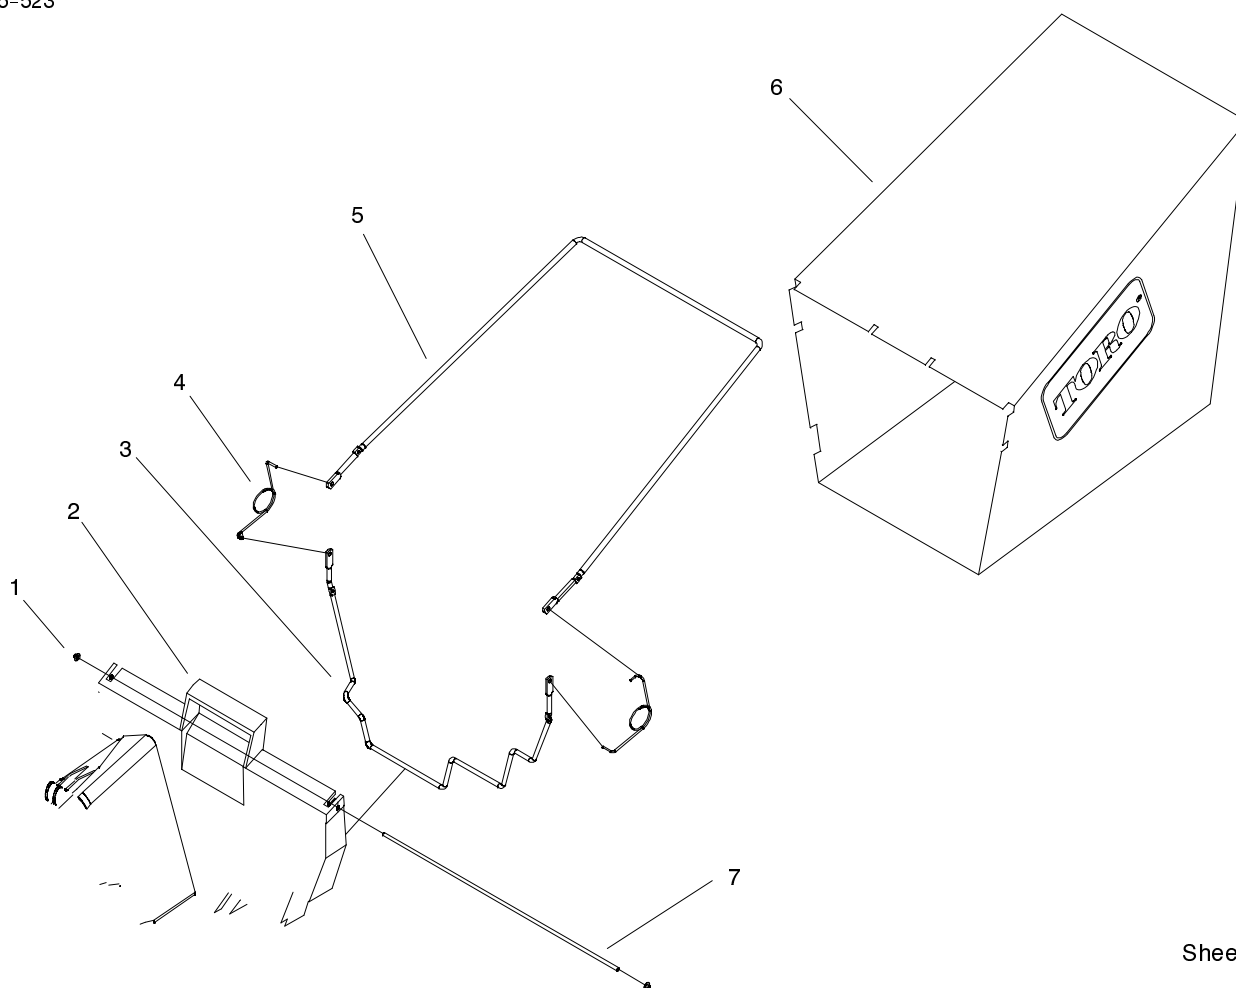


Sheet No.:16

Rear Grass Bag Assembly

Ref. No.	Part No.	Qty.	Description
1	3290-422	2	Nut-Push
2	93-0266	1	Door - Bag
3	93-0282	1	Frame - Lower Bag
4	36-6910	2	Spring
5	93-0281	1	Frame - Upper Bag
6	93-0284	1	Bag - Grass
7	93-0283	1	Hinge - Bag Door

Ref. No.	Part No.	Qty.	Description

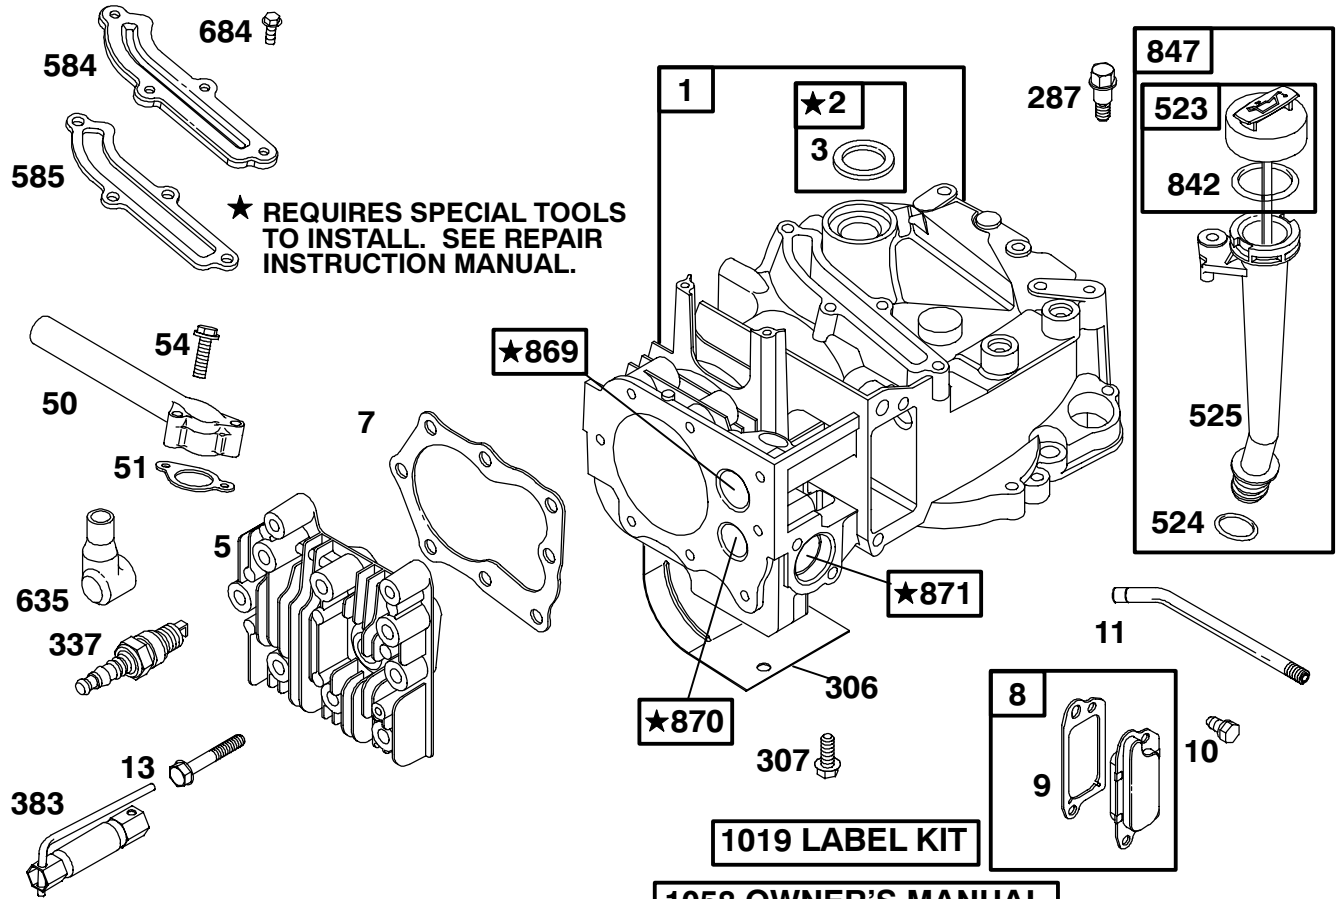

ENGINE BRIGGS & STRATTON MODEL 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
1	493260	1	Cylinder Assembly
2	399269	1	Bearing/Seal Kit (Magneto Side)
★3	299819	1	Oil Seal (Magneto Side)
5	691160	1	Cylinder Head
Δ★7	692249	1	Cylinder Head Gasket
8	695250	1	Breather Assembly
Δ★9	272481	1	Breather Gasket
10	691125	1	Screw (Breather Assembly)
11	691781	1	Breather Tube
13	690912	1	Screw (Cylinder Head)
50	497465	1	Intake Manifold
★51	272199	1	Intake Gasket
54	691650	1	Screw (Intake Manifold)
287	690940	1	Screw (Dipstick Tube)
306	690450	1	Cylinder Shield
307	690345	1	Screw (Cylinder Shield)
337	802592	1	Sparkplug
383	89838	1	Sparkplug Wrench
523	495264	1	Dipstick
★524	692296	1	Dipstick Tube Seal
525	495265	1	Dipstick Tube


Ref. No.	Part No.	Qty.	Description
584	692342	1	Breather Passage Cover
★585	691879	1	Breather Passage Gasket
635	66538	1	Sparkplug Boot
684	690345	1	Screw (Breather Passage Cover)
★842	691031	1	O Ring Seal (Dipstick Tube)
847	692017	1	Dipstick/Tube Assembly
869	691155	1	Valve Seat (Intake)
870	690380	1	Valve Seat (Exhaust)
871	262001	1	Guide Bushing (Exhaust)
	63709	1	Guide Bushing (Intake)
1019	494256	1	Label Kit
1058	274783	1	Owner's Manual

Δ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977

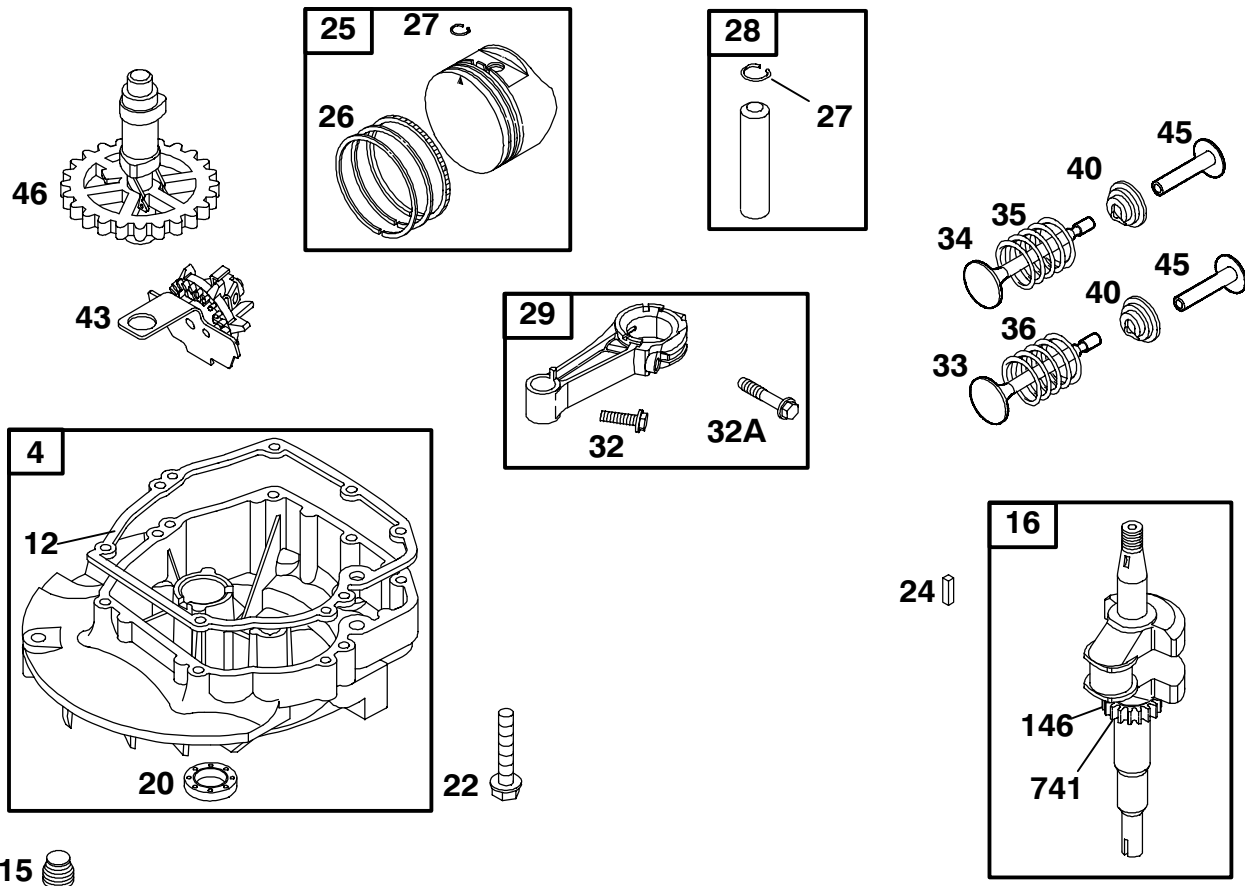

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
4	493279	1	Engine Sump
★12	692232	1	Crankcase Gasket
15	691680	1	Oil Drain Plug
16	696009	1	Crankshaft
★20	399781	1	Oil Seal (PTO Side)
22	691092	1	Screw (Engine Sump)
24	222698	1	Flywheel Key
25	499429	1	Piston Assembly (Standard)
	499430	1	Piston Assembly (.010" Oversize)
	499431	1	Piston Assembly (.020" Oversize)
	499432	1	Piston Assembly (.030" Oversize)
26	499425	1	Ring Set (Standard)
	499426	1	Ring Set (.010" Oversize)
	499427	1	Ring Set (.020" Oversize)
	499428	1	Ring Set (.030" Oversize)
27	691866	1	Piston Pin Lock
28	499423	1	Piston Pin (Standard)
	298908	1	Piston Pin (.005" O.S.)


Ref. No.	Part No.	Qty.	Description
29	499424	1	Connecting Rod (Standard)
32	691664	1	Screw (Connecting Rod)
32A	695759	1	Screw (Connecting Rod)
33	262651	1	Exhaust Valve
34	262652	1	Intake Valve
35	691270	1	Valve Spring (Intake)
36	691270	1	Valve Spring (Exhaust)
40	692194	1	Valve Retainer
43	691997	1	Governor/Oil Slinger
45	690548	1	Valve Keeper
46	691449	1	Camshaft
146	690979	1	Timing Key
741	691830	1	Timing Gear

Δ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.

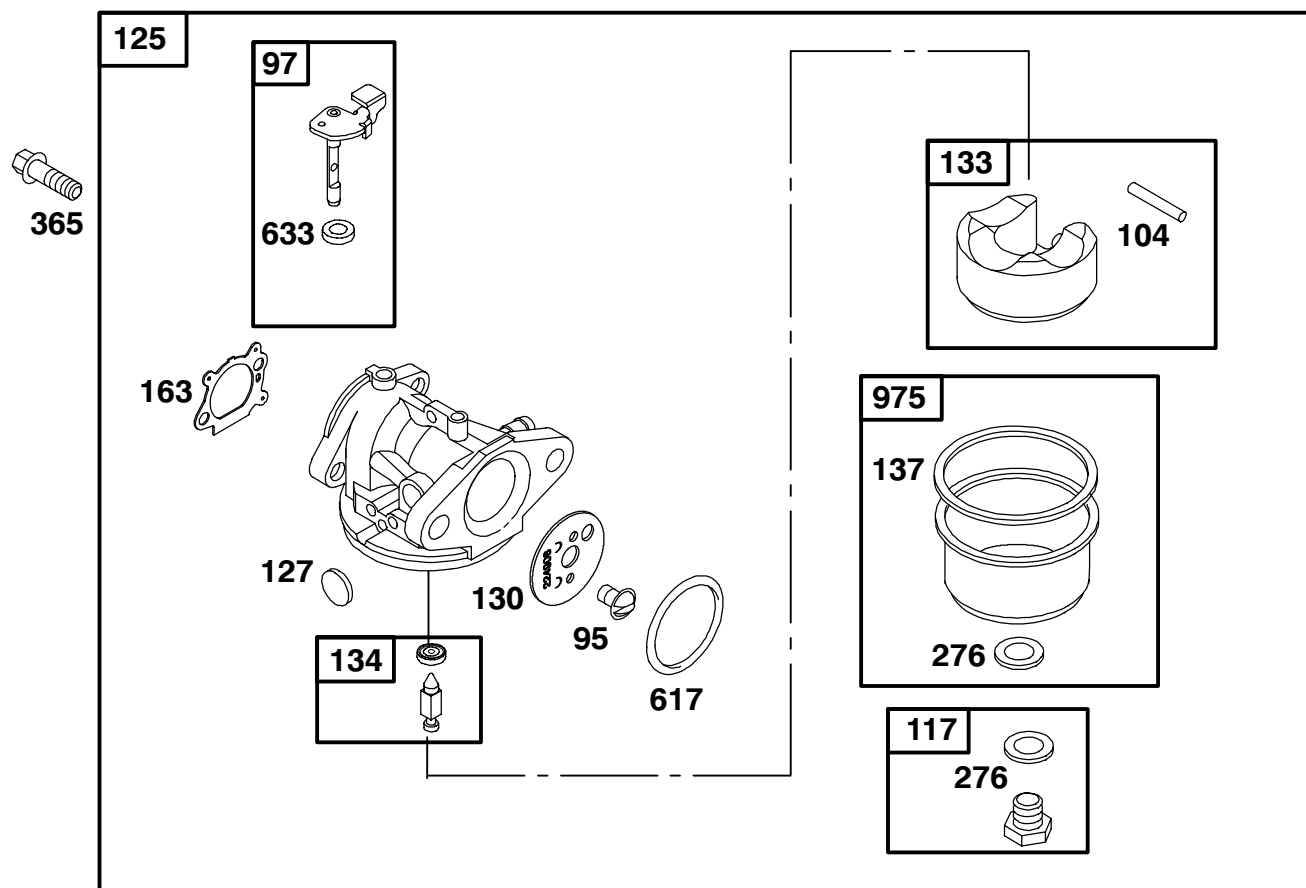

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
95	691636	1	Screw (Throttle Valve)
97	493267	1	Throttle Shaft
●104	691242	1	Float Hinge Pin
117	494870	1	Main Jet (Standard)
	497315	1	Main Jet (High Altitude)
125	498170	1	Carburetor
●127	694468	1	Welch Plug
130	691203	1	Throttle Valve
133	398187	1	Carburetor Float
●134	398188	1	Needle/Seat Kit
●◆137	693981	1	Float Bowl Gasket
★●◆163	272653	1	Air Cleaner Gasket
●276	271716	1	Sealing Washer
365	692524	1	Screw (Carburetor)
●◆617	270344	1	O Ring Seal (Intake Manifold)
●◆633	691321	1	Choke/Throttle Shaft Seal
975	493640	1	Float Bowl


Ref. No.	Part No.	Qty.	Description

Δ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set—Ref. 358.

- Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.

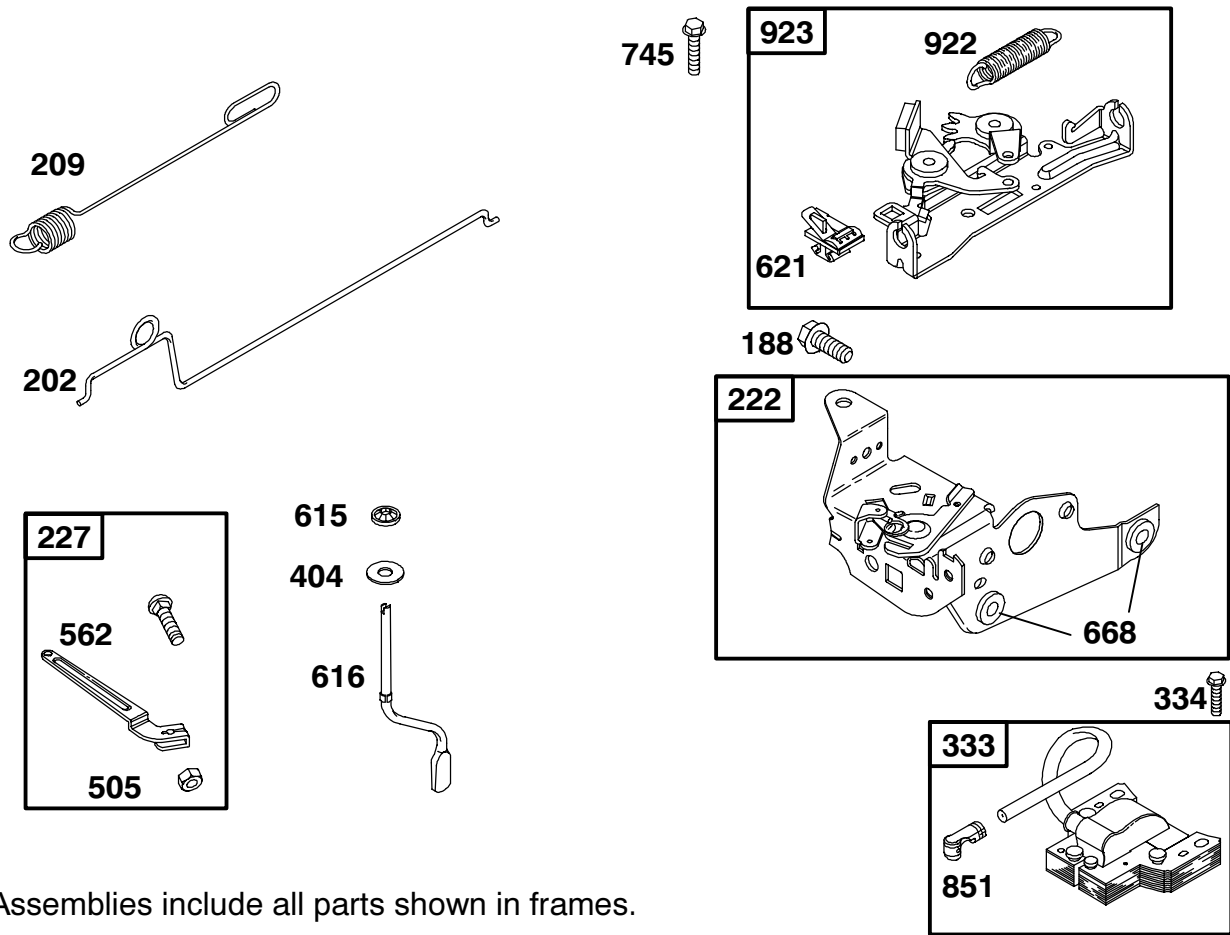

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
188	690877	1	Screw (Control Bracket)
202	691829	1	Mechanical Governor Link
209	691292	1	Governor Spring
222	692467	1	Control Bracket
227	690783	1	Governor Control Lever
333	802574	1	Magneto Armature
334	691061	1	Screw (Magneto Armature)
404	690272	1	Washer (Governor Crank)
505	231082	1	Nut (Governor Control Lever)
562	92613	1	Screw (Governor Control Lever)
615	690340	1	Governor Shaft Retainer
616	691306	1	Governor Crank
621	692310	1	Stop Switch
★668	493823	1	Spacer (Includes 2)
745	691648	1	Screw (Brake)
851	493880	1	Sparkplug Terminal
922	691831	1	Brake Spring



Ref. No.	Part No.	Qty.	Description
923	691994	1	Brake

Δ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.

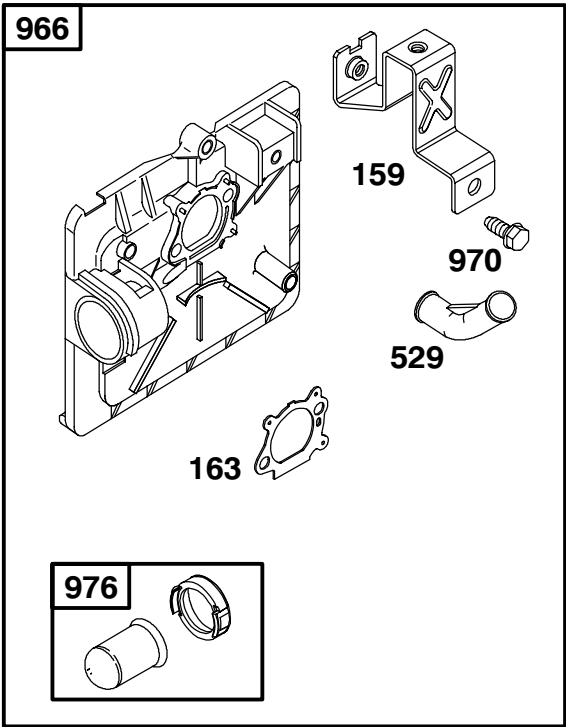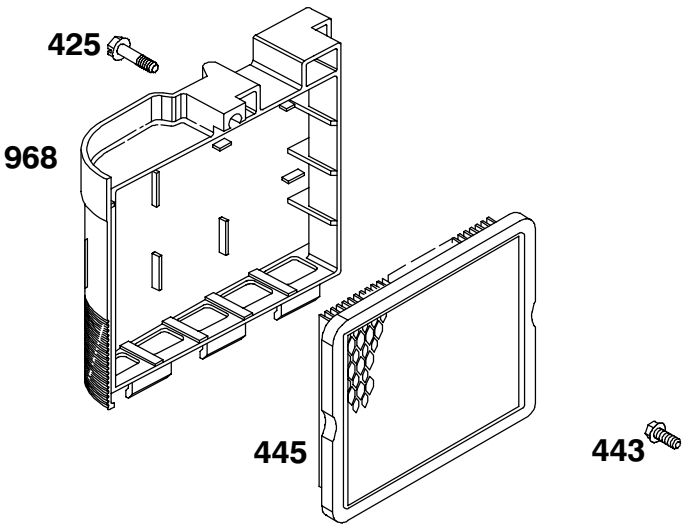

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
159	691753	1	Air Cleaner Primer Bracket
★◆163	272653	1	Air Cleaner Gasket
425	690670	1	Screw (Air Cleaner Cover)
443	692523	1	Screw (Air Cleaner Primer Base)
445	491588	1	Air Cleaner Cartridge Filter
529	691923	1	Grommet
966	496116	1	Air Cleaner Primer Base
968	692298	1	Air Cleaner Cover
970	691669	1	Screw (Air Cleaner Primer Bracket)
976	694395	1	Carburetor Primer

Ref. No.	Part No.	Qty.	Description

Δ Included in Valve Gasket Set-Ref. 1095.
★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.
◆ Included in Carburetor Gasket Set-Ref. 977.

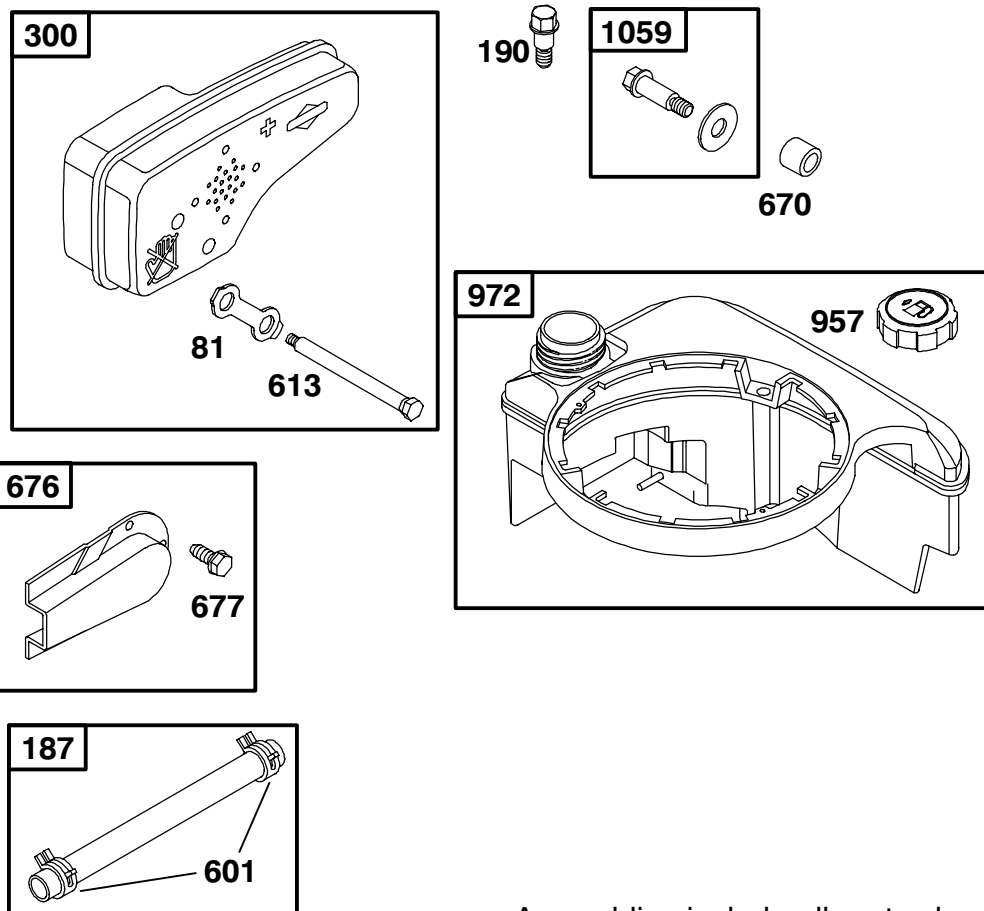

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
81	691740	1	Muffler Screw Lock
187	691050	1	Fuel Line (Cut to Required Length)
190	690940	1	Screw (Fuel Tank)
300	496106	1	Muffler
601	95162	1	Hose Clamp
613	691340	1	Screw (Muffler)
670	692294	1	Fuel Tank Spacer
676	493871	1	Muffler Deflector
677	690661	1	Screw (Muffler Deflector)
957	397974	1	Fuel Tank Cap
972	495224	1	Fuel Tank
1059	692311	1	Screw/Washer Kit


Ref. No.	Part No.	Qty.	Description

Δ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

- Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.

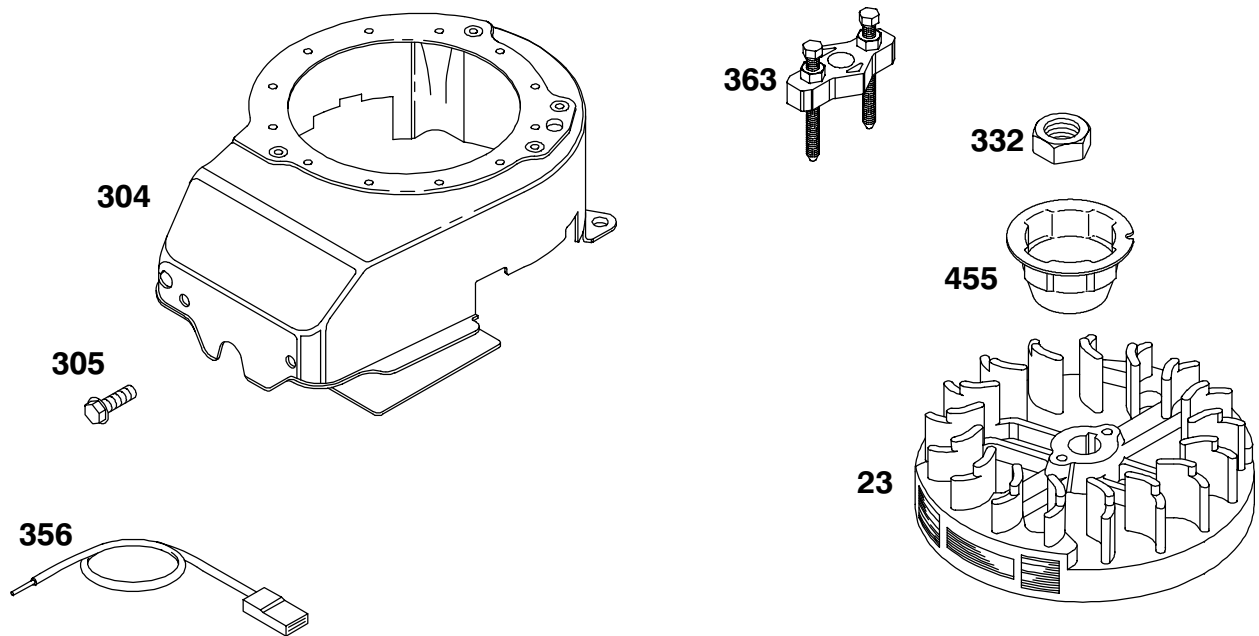

1036 EMISSIONS LABEL

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
23	692315	1	Flywheel
304	493293	1	Blower Housing
305	691108	1	Screw (Blower Housing)
332	690877	1	Nut (Flywheel)
356	692390	1	Stop Wire
363	19069	1	Flywheel Puller
455	691219	1	Flywheel Cup
1036	695111	1	Emissions Label


Ref. No.	Part No.	Qty.	Description

Δ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

- Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.

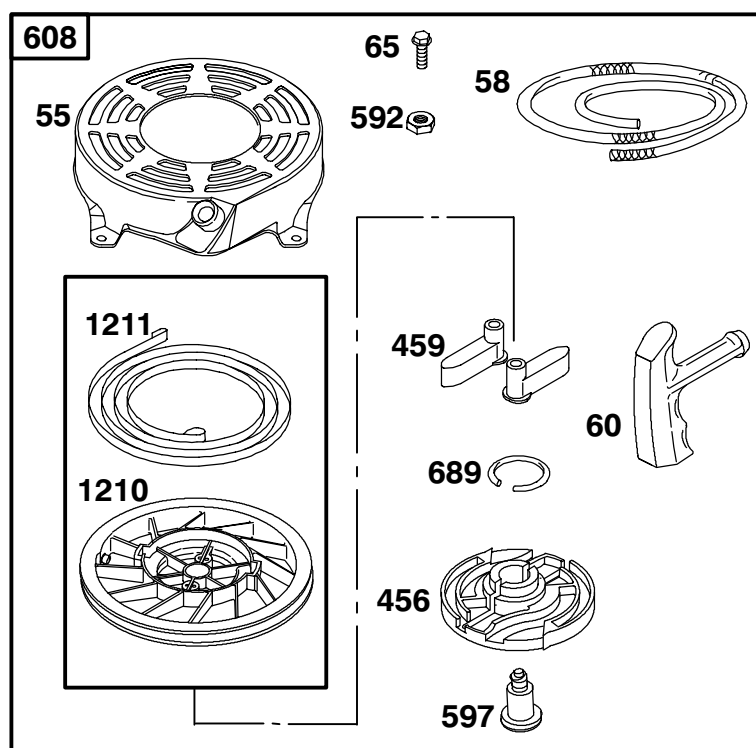

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
55	691421	1	Rewind Starter Housing
58	280399	1	Starter Rope
60	281434	1	Starter Rope Grip
65	690837	1	Screw (Rewind Starter)
456	692299	1	Pawl Friction Plate
459	281505	1	Pawl Ratchet
592	690800	1	Nut (Rewind Starter)
597	691696	1	Screw (Pawl Friction Plate)
608	497680	1	Rewind Starter
689	691855	1	Friction Spring
1210	498144	1	Pulley/Spring Assembly (Pulley)
1211	498144	1	Pulley/Spring Assembly (Spring)





Ref. No.	Part No.	Qty.	Description

Δ Included in Valve Overhaul Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

- Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.

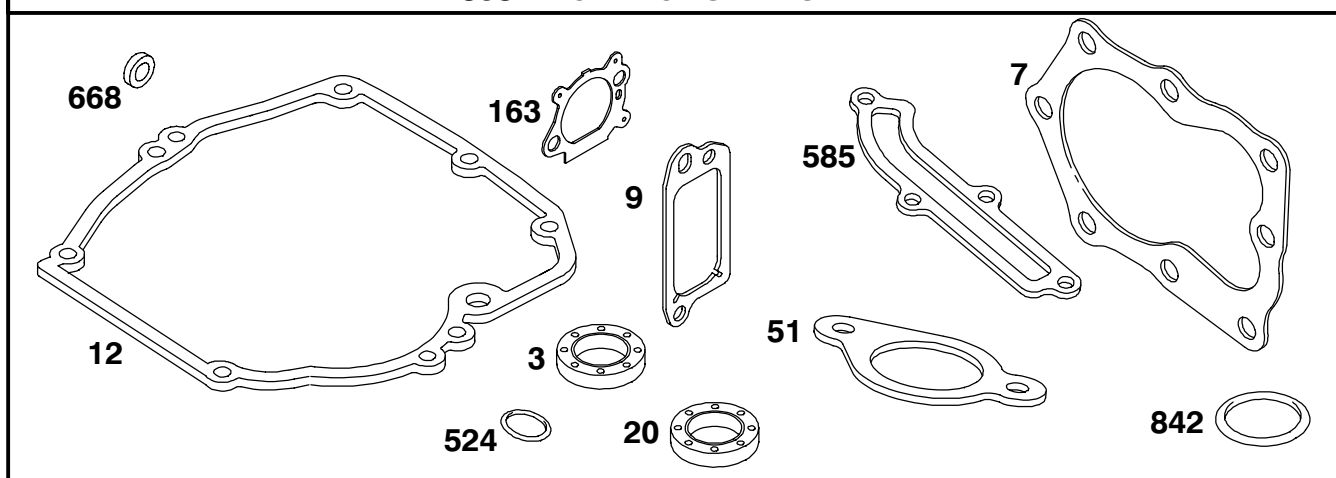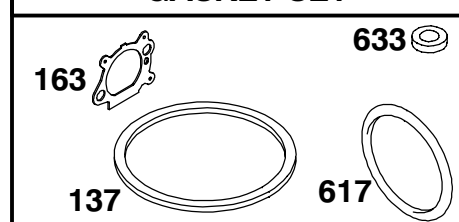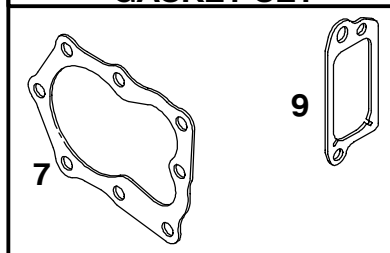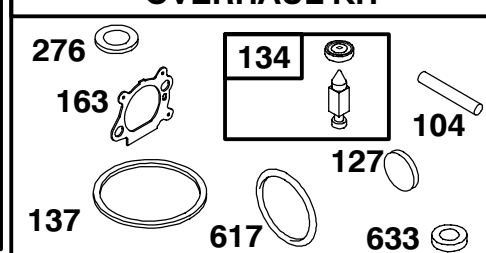358 ENGINE GASKET SET**977 CARBURETOR GASKET SET****1095 VALVE GASKET SET****121 CARBURETOR OVERHAUL KIT**

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
★3	299819	1	Oil Seal (Magnetoside)	★842	691031	1	O Ring Seal (Dipstick Tube)
△★7	692249	1	Cylinder Head Gasket	977	498261	1	Carburetor Gasket Set
△★9	272481	1	Breather Gasket	1095	498528	1	Valve Gasket Set
★12	692232	1	Crankcase Gasket				
★20	399781	1	Oil Seal (PTO Side)				
★51	272199	1	Intake Gasket				
●104	691242	1	Float Hinge Pin				
121	498260	1	Carburetor Overhaul Kit				
●127	694468	1	Welch Plug				
●134	398188	1	Needle/Seat Kit				
●◆137	693981	1	Float Bowl Gasket				
★◆163	272653	1	Air Cleaner Gasket				
●276	271716	1	Sealing Washer				
358	497316	1	Engine Gasket Set				
★524	692296	1	Dipstick Tube Seal				
★585	691879	1	Breather Passage Gasket				
●◆617	270344	1	O Ring Seal (Intake Manifold)				
●◆633	691321	1	Choke Throttle Shaft Seal				
★668	493823	1	Spacer (Includes 2)				

△ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.

