

## **Tool Turn Guide**



TimeMaster® 30in Lawn Mower Model No. 21199HD—400000000 and Up

Supplier Technical Support #: 800-888-9926 (US and Canada)

Supplier Website: www.Toro.com

PURPOSE	Follow the directions below to maintain this tool.
SAFETY	Refer to the product <i>Operator's Manual</i> for complete safety information.

#### **Tool Inspection Process**

Check the operating hours on the hour meter, then perform the necessary maintenance procedures as specified in the following table (for complete procedures, refer to the *Operator's Manual*):


Maintenance Service Interval	Maintenance Procedure		
Before each use or daily	Check the engine-oil level and add oil as needed.		
	Check the blade-brake-clutch operation.		
	Ensure that the engine stops within 3 seconds after releasing the blade-control bar.		
	Clean grass clippings and dirt from under the machine.		
	Check the air filter and clean or replace it, if necessary.		
	Check the cutting blades.		
After the first 5 hours	Change the engine oil.		
Every 50 hours	Clean the air filter; clean it more frequently in dusty operating conditions.		
	Change the engine oil.		
	Service the blade-drive system.		
Every 200 hours	Replace the air filter; replace it more frequently in dusty operation conditions.		
Before storage	Empty the fuel tank before annual storage.		
Yearly	Service the air filter; service it more frequently in dusty operating conditions.		
	Change the engine oil.		
	Replace the blade or have it sharpened (more frequently if the edge dulls quickly).		

Important: Refer to the *Engine Operator's Manual* for additional maintenance procedures.

#### **Preparing for Maintenance**

Shut off the engine and wait for all moving parts to stop. Disconnect the spark-plug wire from the spark plug before performing any maintenance procedure. After performing the maintenance procedure(s), connect the spark-plug wire to the spark plug.

**Important:** Before tipping the machine to change the oil or replace the blade, allow the fuel tank to run dry through normal usage. If you must tip the machine prior to running out of fuel, use a hand fuel pump to remove the fuel. Always tip the machine onto its side, with the dipstick down.

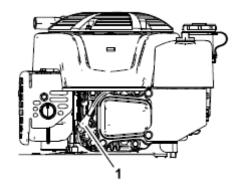

1. Spark-plug wire

#### **Tool Cleaning Process**

Regular cleaning and washing with mild detergent and water will increase the life span of the machine. For best results, clean the machine soon after each use.


- Move the machine to a level surface.
- 2. Shut off the engine and wait for all moving parts to stop before leaving the operating position.
- Lower the machine to its lowest cutting-height setting.
- 4. Attach a hose to the washout fitting, and turn the water on high.

**Note:** Spread petroleum jelly on the washout fitting O-ring to make the coupling slide on easier and protect the O-ring.

- Start the engine, engage the blade-control lever, and let the machine run for 1 to 3 minutes with the blades turning.
- 6. Disengage the blade-control lever, shut off the engine, and wait for all moving parts to stop.
- 7. Shut off the water and remove the coupling from the washout fitting.

**Note:** If the machine is not clean after a single washing, soak it and let it stand for 30 minutes. Then repeat the process.

8. Run the machine again and engage the blades for 1 to 3 minutes to remove the excess water.

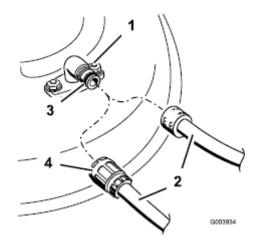

- 1. Washout fitting
- 2. Hose
- 3. O-ring
- 4. Coupling



# Spring Maintenance Guide



Supplier Technical Support #: 800-888-9926 (US and Canada)

Supplier Website: www.Toro.com

TimeMaster® 30in Lawn Mower Model No. 21199HD—400000000 and Up

PURPOSE	Follow the directions below to maintain this tool.
SAFETY  Refer to the product <i>Operator</i>	Refer to the product <i>Operator's Manual</i> for complete safety information.

Perform the necessary maintenance procedures as specified in the following tables (for complete procedures, refer to the Operator's Manual):

### **Tool Inspection Process**

	Recommended Parts		
Action	Part Number	Description	
Clean grass clippings and dirt from under the machine.			
Remove the deck drive covers and clean grass clippings.			
	120-3335	Synchronous belt	
Check the condition of the deck belts and pulley bearing.	120-9470	Traction belt	
	121-5765	V-belt	
Clean the engine by removing dirt and debris from the top and sides			
Check the blade-brake-clutch operation.			
Ensure that the engine stops within 3 seconds after releasing the blade-control bar.			

#### **Recommended Routine Maintenance:**

	Recommended Parts	
Action	Part Number	Description
Change the engine oil.		
Replace the air filter.	Source from Briggs	Air filter
Replace the spark plug.	Source from Briggs	Spark plug
Replace or sharpen the mower blades.	116-6358-03	Mower blades (Quantity 2)