





MODEL NO. 44570 - 20101 & UP

PARTS
CATALOG

COMMERCIAL CHIPPER 1820

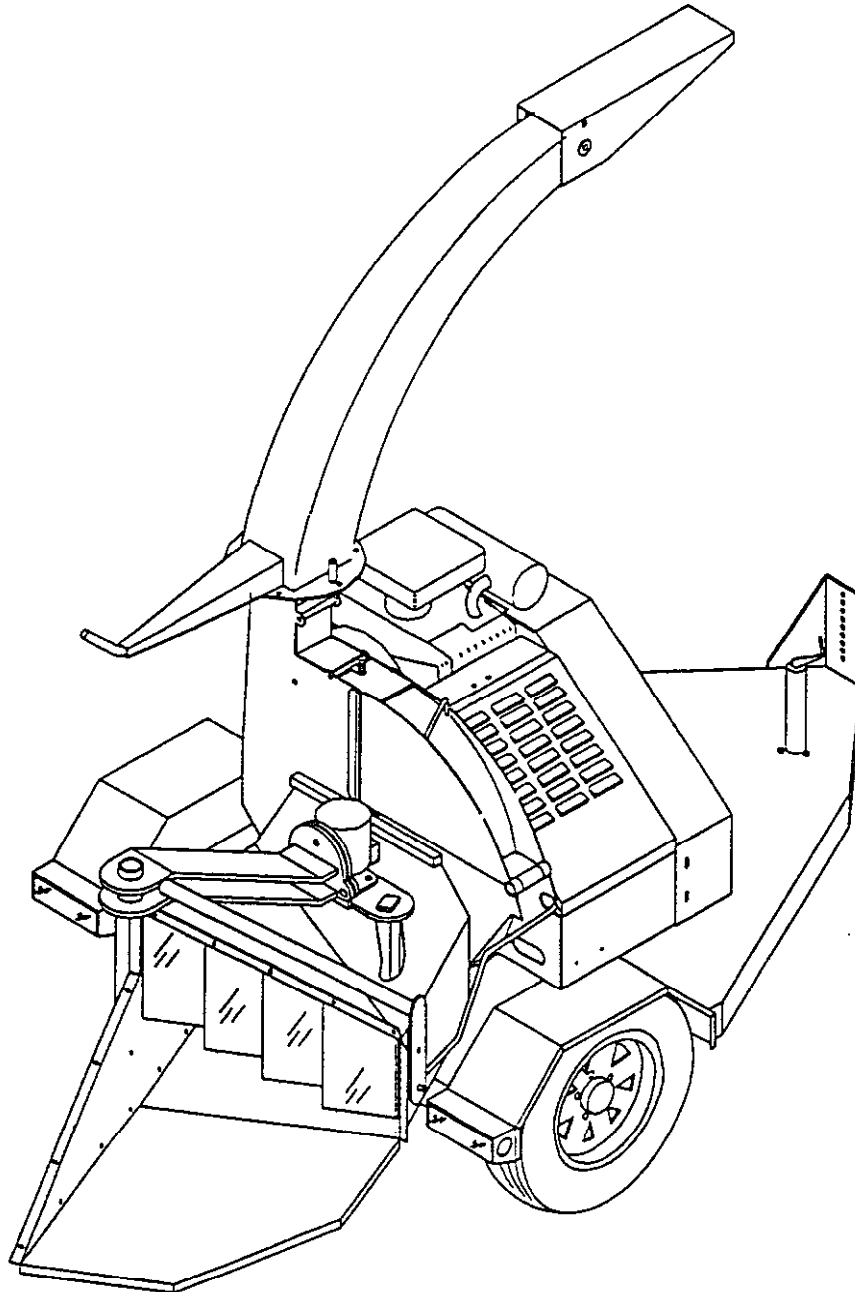

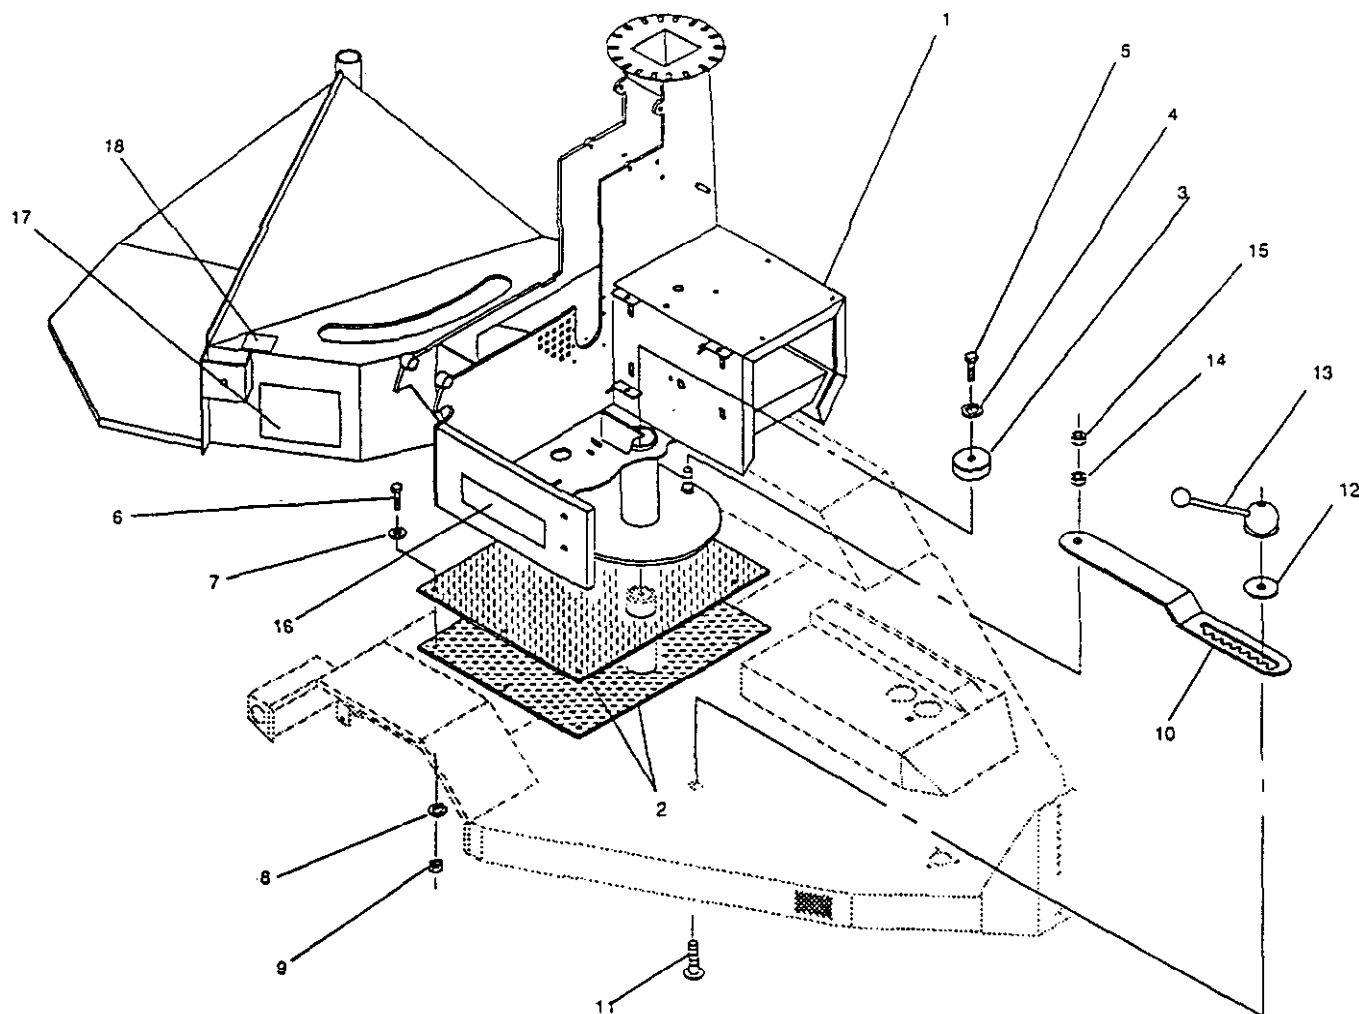


MAIN FRAME MOUNTING

182-017

Ref. No.	Part No.	Description	No. Used
1	18-205-0113	Chipper Main Frame	1
2	18-204-0451	Pivot Base, 1/4" UHMW	2
3	18-205-0171	Pivot End Cap	1
4	01-166-0810	Lock Washer, 1/2"	1
5	01-178-0812	Capscrew - Hex Hd., 1/2" - 13 x 1-1/2"	1
6	01-178-0612	Capscrew - Hex Hd., 3/8" - 16 x 1-1/2"	6
7	01-166-0600	Flat Washer, 3/8"	6
8	01-166-0610	Lock Washer, 3/8"	6
9	01-188-0616	Hex Nut, 3/8" - 16	6

Ref. No.	Part No.	Description	No. Used
10	18-204-0641	Rotate Stop	1
11	01-173-1220	Carriage Bolt, 3/4" - 10 x 2-1/2"	1
12	18-204-2161	Rotate Washer	1
13	01-256-0190	Lever	1
14	01-188-1210	Hex Nut, 3/4" - 10	1
15	01-191-1210	Jam Nut, 3/4" - 10	1
16	01-506-0910	Decal - Chipper 1820	1
17	01-506-0260	Decal - Operating Instr.	1
18	01-506-0320	Decal - Rev/N/Forward	1

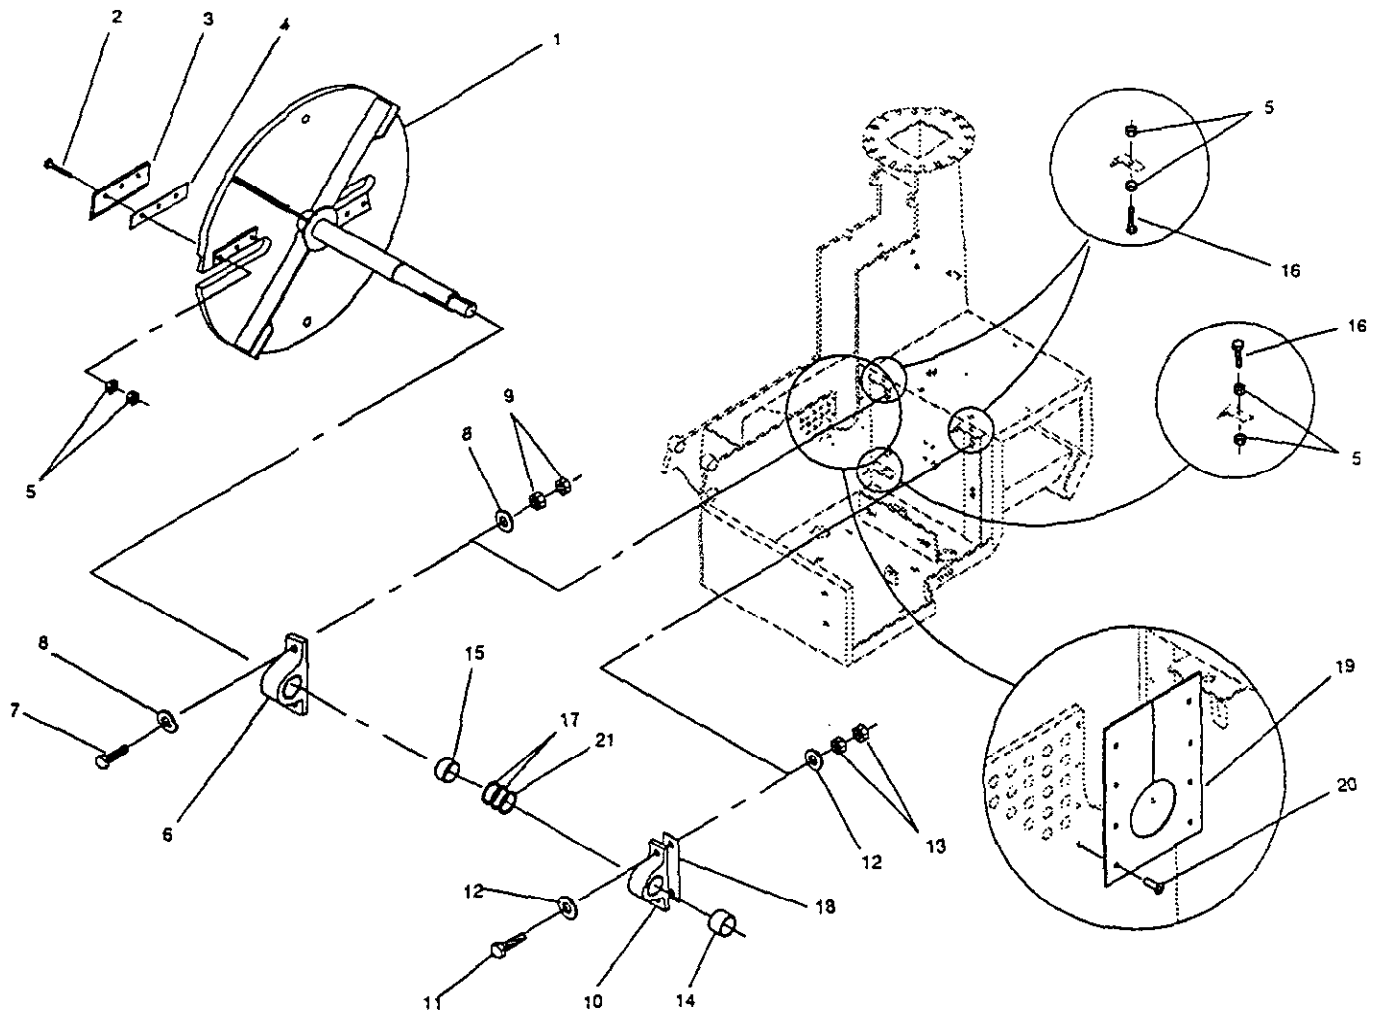


CHIPPER DISC ASSEMBLY

182-008

Ref. No.	Part No.	Description	No. Used
1	18-205-0123	Chipper Disc	1
2	01-158-1150	Capscrew - Flat Hd. Socket, 1/2" - 13 x 2-1/2"	6
3	01-283-0320	Blade	2
4	18-204-3121	Blade Spacer, 10 ga.	2
•	18-204-3131	Blade Spacer, 22 ga. (use only when necessary)	4
5	01-188-0813	Hex Nut, 1/2" - 13	18
6	01-113-0200	Bearing, 2-7/16" P.B.	1
7	01-178-1232	Capscrew - Hex Hd., 3/4" - 10 x 4"	2
8	01-166-1200	Flat Washer, 3/4"	4
9	01-188-1210	Hex Nut, 3/4" - 10	4
10	01-113-0160	Bearing, 2" P.B.	1

Ref. No.	Part No.	Description	No. Used
11	01-178-1024	Capscrew - Hex Hd., 5/8" - 11 x 3"	2
12	01-166-1000	Flat Washer, 5/8"	4
13	01-188-1011	Hex Nut, 5/8" - 11	4
14	18-204-1961	Bearing Spacer (long)	1
15	18-204-1971	Bearing Spacer (short)	1
16	01-178-0816	Capscrew - Hex Hd., 1/2" - 13 x 2"	3
17	01-168-3210	Machinery Bushing, 2" ID x 10 ga.	2(var)
18	18-204-3021	Small Bearing Spacer, 22 ga.	1(var)
19	18-204-1391	Shaft Guard	1
20	01-161-0020	Pop Rivet, 3/16" x 1/2"	8
21	01-168-3214	Machinery Bushing, 2" ID x 14 ga.	1(var)

* Not illustrated

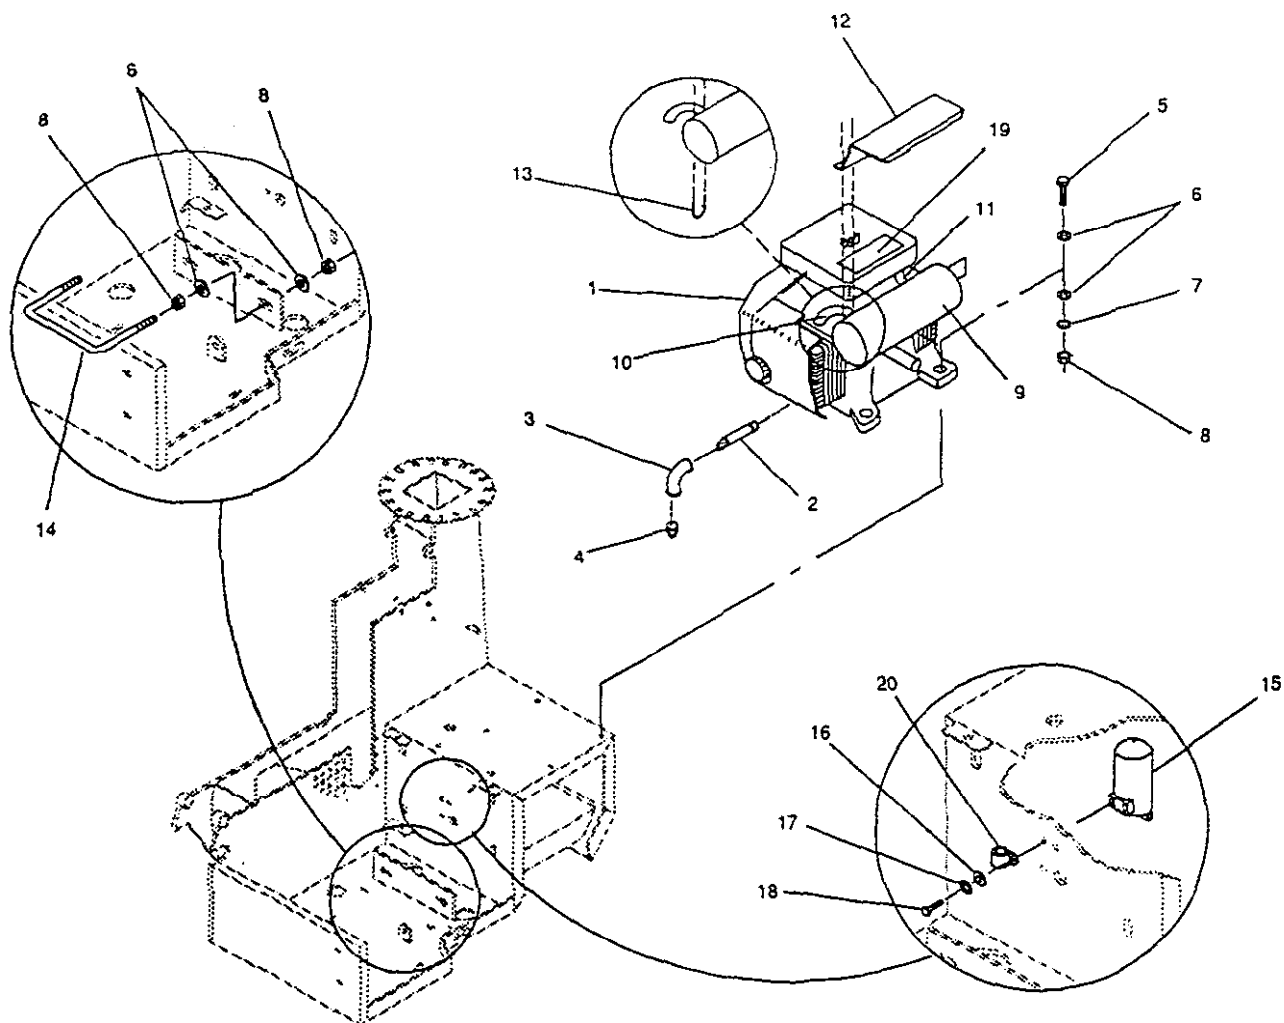


ENGINE MOUNTING

182-009

Ref. No.	Part No.	Description	No. Used
1	01-270-2260	Engine, 24hp Onan Performer	1
*	01-600-0060	Battery Cable, 38"	1
*	01-600-0160	Battery Cable, 13-1/2"	1
2	01-456-0140	Pipe Nipple, 3/8" x 6"	1
3	01-455-0030	Pipe Elbow, 3/8" x 90°	1
4	01-451-0020	Pipe Plug, 3/8"	1
5	01-178-0612	Capscrew - Hex Hd., 3/8" - 16 x 1-1/2"	4
6	01-166-0600	Flat Washer, 3/8"	12
7	01-166-0610	Lock Washer, 3/8"	4
8	01-188-0616	Hex Nut, 3/8" - 16	8
9	01-273-0260	Muffler	1
10	01-273-0270	Muffler Tube-short (left side)	1

Ref. No.	Part No.	Description	No. Used
11	01-273-0280	Muffler Tube-long (right side)	1
*	01-289-0390	Flywheel Cover	1
12	54-004-1401	Muffler Guard	1
13	01-170-0150	Clamp	2
14	48-004-3831	Battery Hold Down	1
15	01-270-2130	Fuel Pump, 12v	1
16	01-166-0400	Flat Washer, 1/4"	2
17	01-166-0410	Lock Washer, 1/4"	2
18	01-178-0406	Capscrew - Hex Hd., 1/4" - 20 x 3/4"	2
19	01-506-0030	Decal - Danger	1
20	01-202-0190	Clamp	1

* Not Illustrated

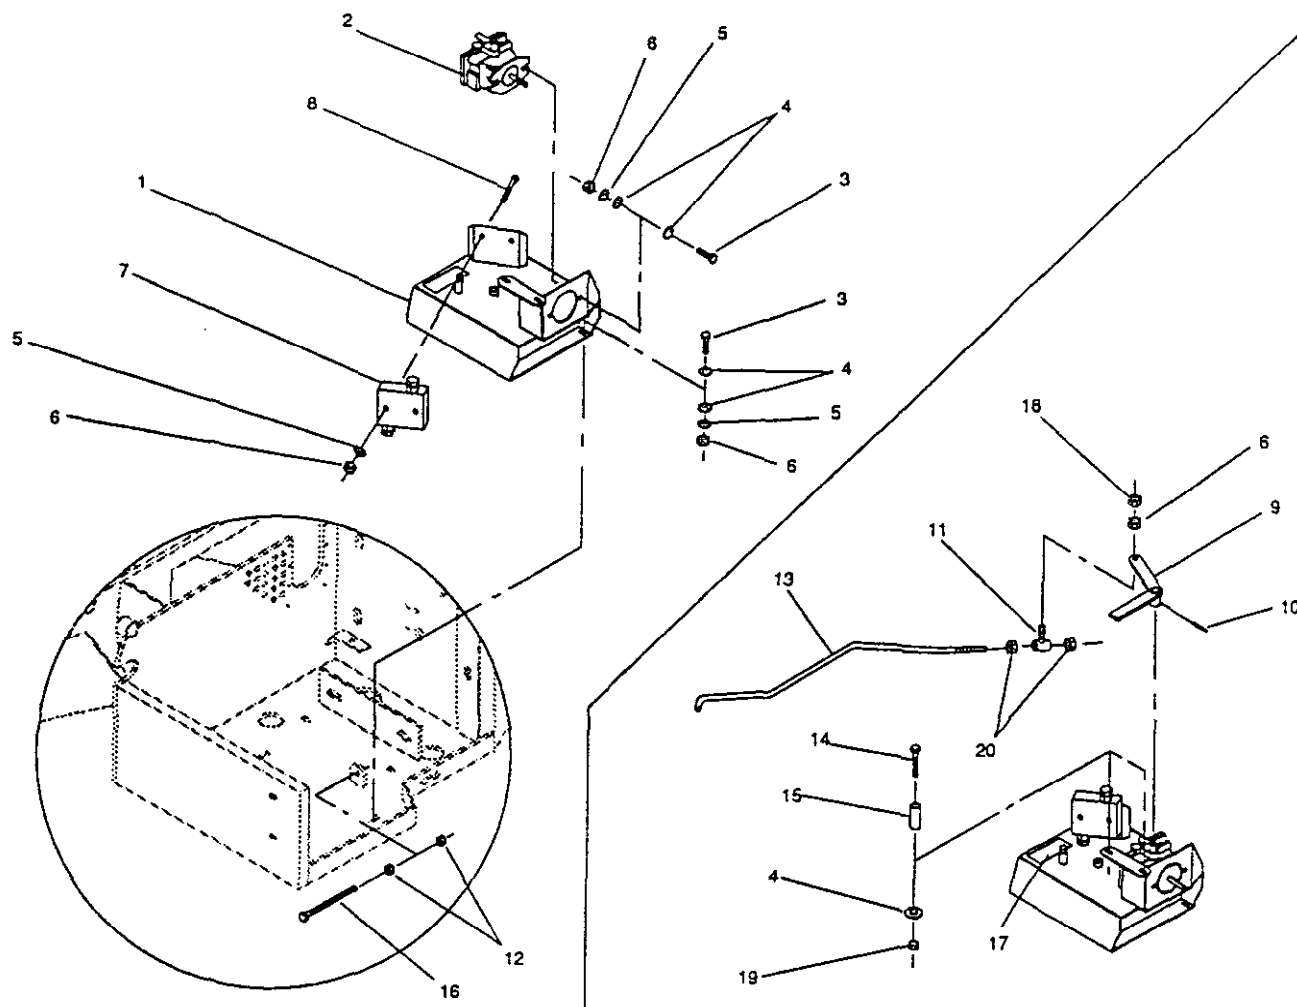


HYDRAULIC OIL TANK ASSEMBLY

182K-007

Ref. No.	Part No.	Description	No. Used
1	18-205-2401	Hydraulic Oil Tank	1
2	01-305-0790	Pump	1
3	01-305-0820	Seal Kit	1
3	01-178-0610	Capscrew - Hex Hd., 3/8" - 16 x 1-1/4"	6
4	01-166-0600	Flat Washer, 3/8"	14
5	01-166-0610	Lock Washer, 3/8"	6
6	01-188-0616	Hex Nut, 3/8" - 16	8
7	01-308-0840	Crossover Valve	1
8	01-178-0616	Capscrew - Hex Hd., 3/8" - 16 x 2"	2
9	18-205-2391	Pump Lever	1
10	01-153-0160	Roll Pin, 3/16" x 1"	1

Ref. No.	Part No.	Description	No. Used
11	18-205-0291	Rod Pivot	1
12	01-188-0813	Hex Nut, 1/2" - 13	2
13	18-204-2331	Valve Rod	1
14	01-178-0614	Capscrew - Hex Hd., 3/8" - 16 x 1-3/4"	2
15	18-204-2121	Spacer, .875" lg.	2
16	01-178-0824	Capscrew - Hex Hd., 1/2" - 13 x 3"	1
17	01-506-0560	Decal - Hydraulic Oil	1
18	01-191-0616	Jam Nut, 3/8" - 16	1
19	01-189-0616	Lock Nut, 3/8" - 16	2
20	01-191-0813	Jam Nut, 1/2" - 13	2

* Not Illustrated

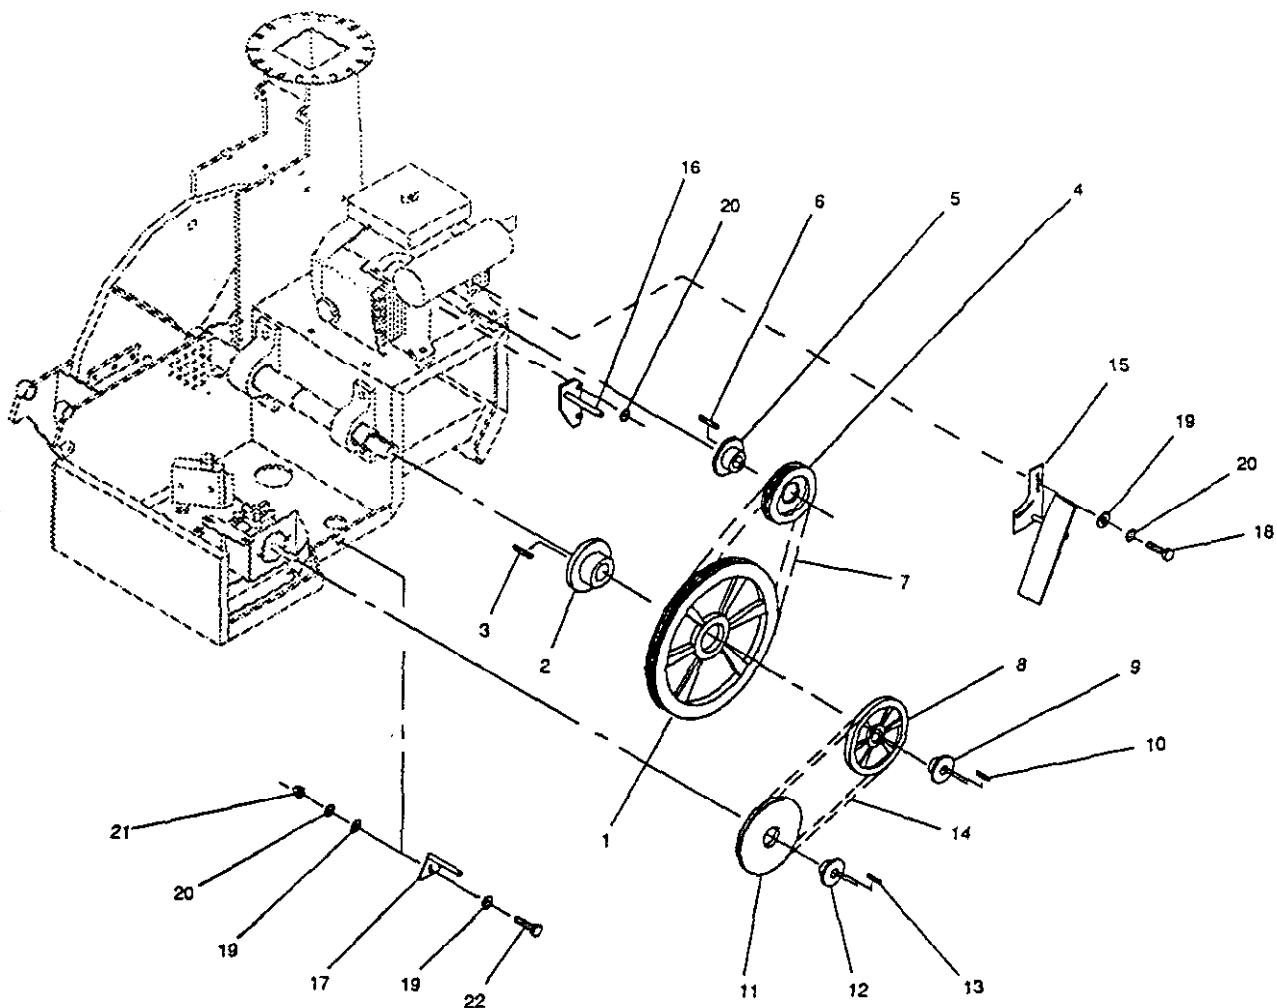


DRIVE BELTS

182-010

Ref. No.	Part No.	Description	No. Used
1	01-260-1630	Sheave	1
2	01-260-1650	Bushing, 2" SF	1
3	18-204-2171	Key, 1/2" Sq. x 2"	1
4	01-260-1670	Sheave	1
5	01-260-1640	Bushing, 1-1/8" SD	1
6	65-004-2511	Key, 1/4" Sq. x 2"	1
7	01-264-0800	Belt, 4B73	1
8	01-260-2020	Sheave	1
9	01-260-1660	Bushing, 1-1/4" H	1
10	---	Key, 1/4" x 3/16" x 1-1/4" (included with bushing)	1
11	01-260-2010	Sheave	1
12	01-260-2000	Bushing, P1 15mm	1

Ref. No.	Part No.	Description	No. Used
13	18-204-2961	Key, 5mm Sq. x .750" lg.	1
14	01-264-0240	Belt, A48	1
15	18-205-0341	Belt Stop	1
16	18-205-0391	Belt Stop-L.H.	1
17	18-205-2211	Bottom Belt Stop	1
18	01-178-0612	Capscrew - Hex Hd., 3/8" - 16 x 1-1/2"	2
19	01-166-0600	Flat Washer, 3/8"	4
20	01-166-0610	Lock Washer, 3/8"	5
21	01-188-0616	Hex Nut, 3/8" - 16	1
22	01-178-0610	Capscrew - Hex Hd., 3/8" - 16 x 1-1/4"	1

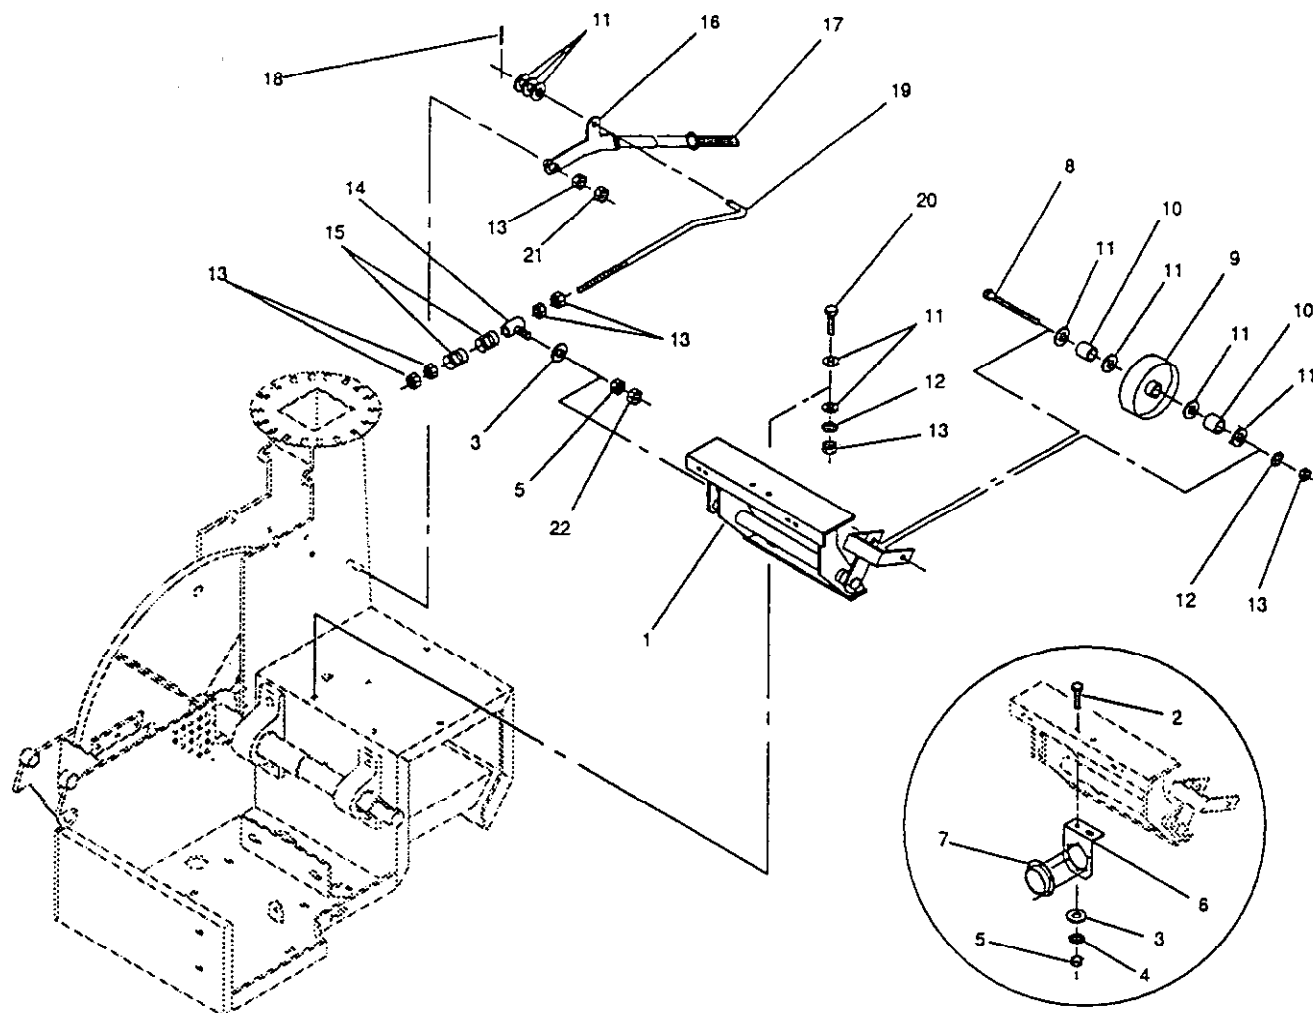


IDLER ASSEMBLY

182-011

Ref. No.	Part No.	Description	No. Used
1	18-205-0152	Idler Pivot Bracket	1
2	01-178-0608	Capscrew - Hex Hd., 3/8" - 16 x 1"	2
3	01-166-0600	Flat Washer, 3/8"	3
4	01-166-0610	Lock Washer, 3/8"	2
5	01-188-0616	Hex Nut, 3/8" - 16	4
6	41-004-3181	Hour Meter Bracket (optional)	1
7	01-288-0020	Hour Meter (optional)	1
8	01-178-0840	Capscrew - Hex Hd., 1/2" - 13 x 5"	1
9	01-268-0200	Idler Pulley	1
10	18-204-2181	Idler Spacer	2
11	01-166-0800	Flat Washer, 1/2"	11

Ref. No.	Part No.	Description	No. Used
12	01-166-0810	Lock Washer, 1/2"	3
13	01-188-0813	Hex Nut, 1/2" - 13	8
14	18-205-0291	Rod Pivot Bolt	1
15	01-261-0580	Spring, 1" OD x 1-1/4" lg.	2
16	18-205-0131	Idler Handle	1
17	01-259-0050	Foam Handle	1
18	01-151-0100	Cotter Pin, 3/16" x 1"	1
19	18-204-1731	Idler Rod	1
20	01-178-0814	Capscrew - Hex Hd., 1/2" - 13 x 1-3/4"	2
21	01-191-0813	Jam Nut, 1/2" - 13	1
22	01-191-0616	Jam Nut, 3/8" - 16	1

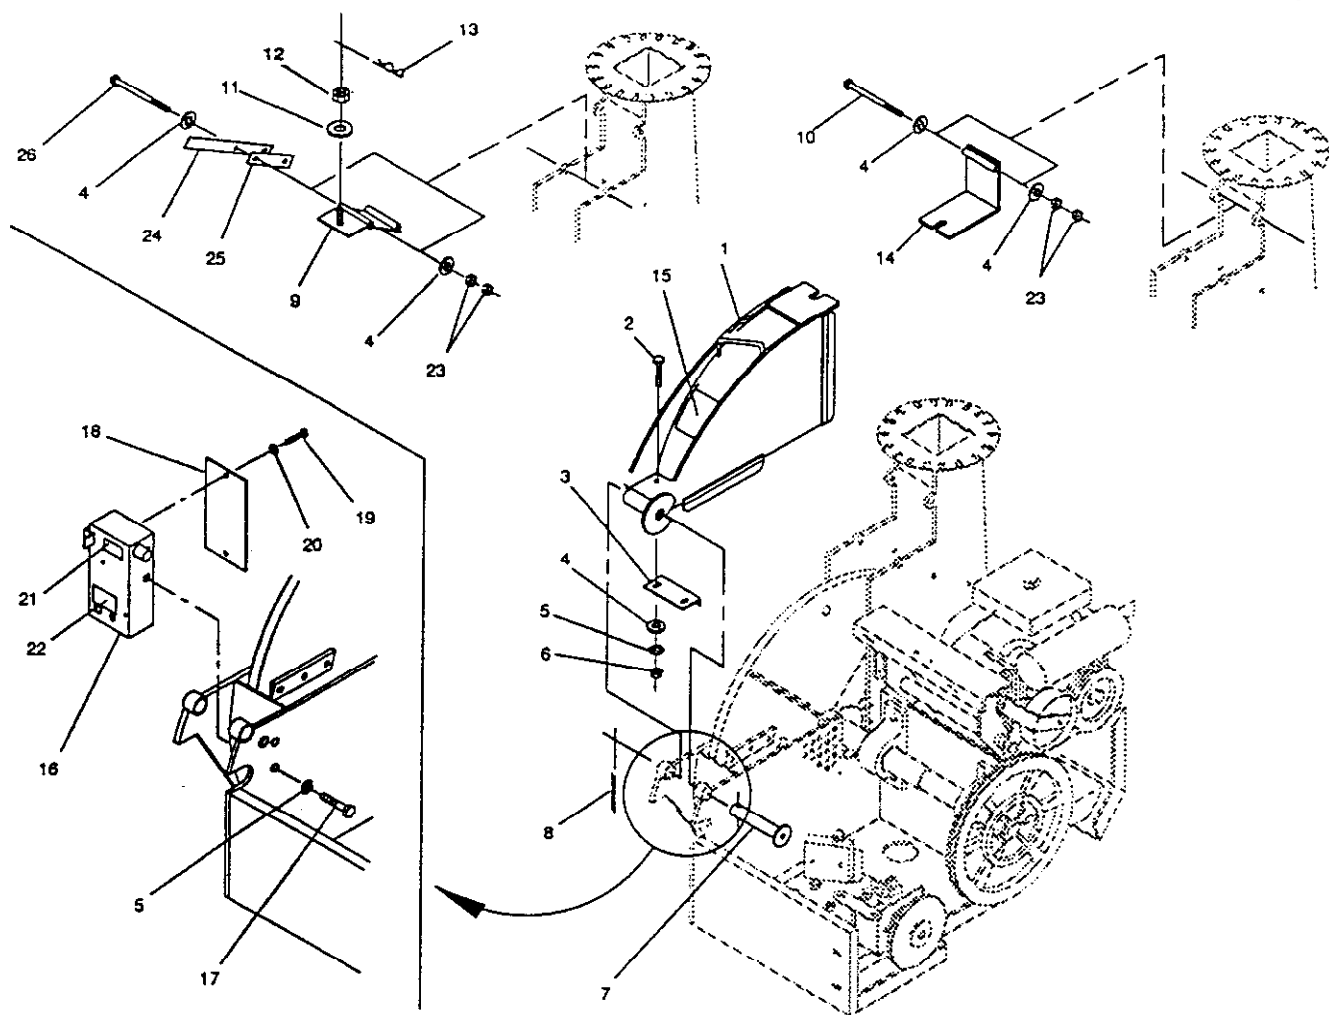


DRUM COVER

182-002

Ref. No.	Part No.	Description	No. Used
1	18-205-0233	Drum Cover	1
2	01-178-0612	Capscrew - Hex Hd., 3/8" - 16 x 1-1/2"	2
3	18-204-3631	Door Seal Plate	1
4	01-166-0600	Flat Washer, 3/8"	8
5	01-166-0610	Lock Washer, 3/8"	4
6	01-188-0616	Hex Nut, 3/8" - 16	2
7	18-205-0301	Hinge Pin	1
8	01-151-0060	Cotter Pin, 3/16" x 1-1/2"	1
9	18-205-0182	Wrapper Top	1
10	01-178-0652	Capscrew - Hex Hd., 3/8" - 16 x 6-1/2"	1
11	01-166-1200	Flat Washer, 3/4"	1
12	01-188-1210	Hex Nut, 3/4" - 10	1
13	01-159-0010	Presto Pin, 5/32" x 2-3/4"	1
14	18-205-0381	Cleanout Lid	1

Ref. No.	Part No.	Description	No. Used
15	01-506-0020	Decal - Danger	1
16	18-205-3372	Door Control Box	1
17	01-178-0608	Capscrew - Hex Hd., 3/8" - 16 x 1"	2
18	18-204-3521	Door Box Cover	1
19	01-178-0404	Capscrew - Hex Hd., 1/4" - 20 x 1/2"	2
20	01-166-0410	Lock Washer	2
21	01-506-1240	Decal - Door Lock Handle	1
22	01-506-1250	Decal - Door Lock Release/ Timer "On-Off"	1
23	01-191-0616	Jam Nut, 3/8" - 16	6
24	18-204-3601	Door Guide	1
25	18-204-3611	Door Guide Spacer	1
26	01-178-0660	Capscrew - Hex Hd., 3/8" - 16 x 7-1/2"	2

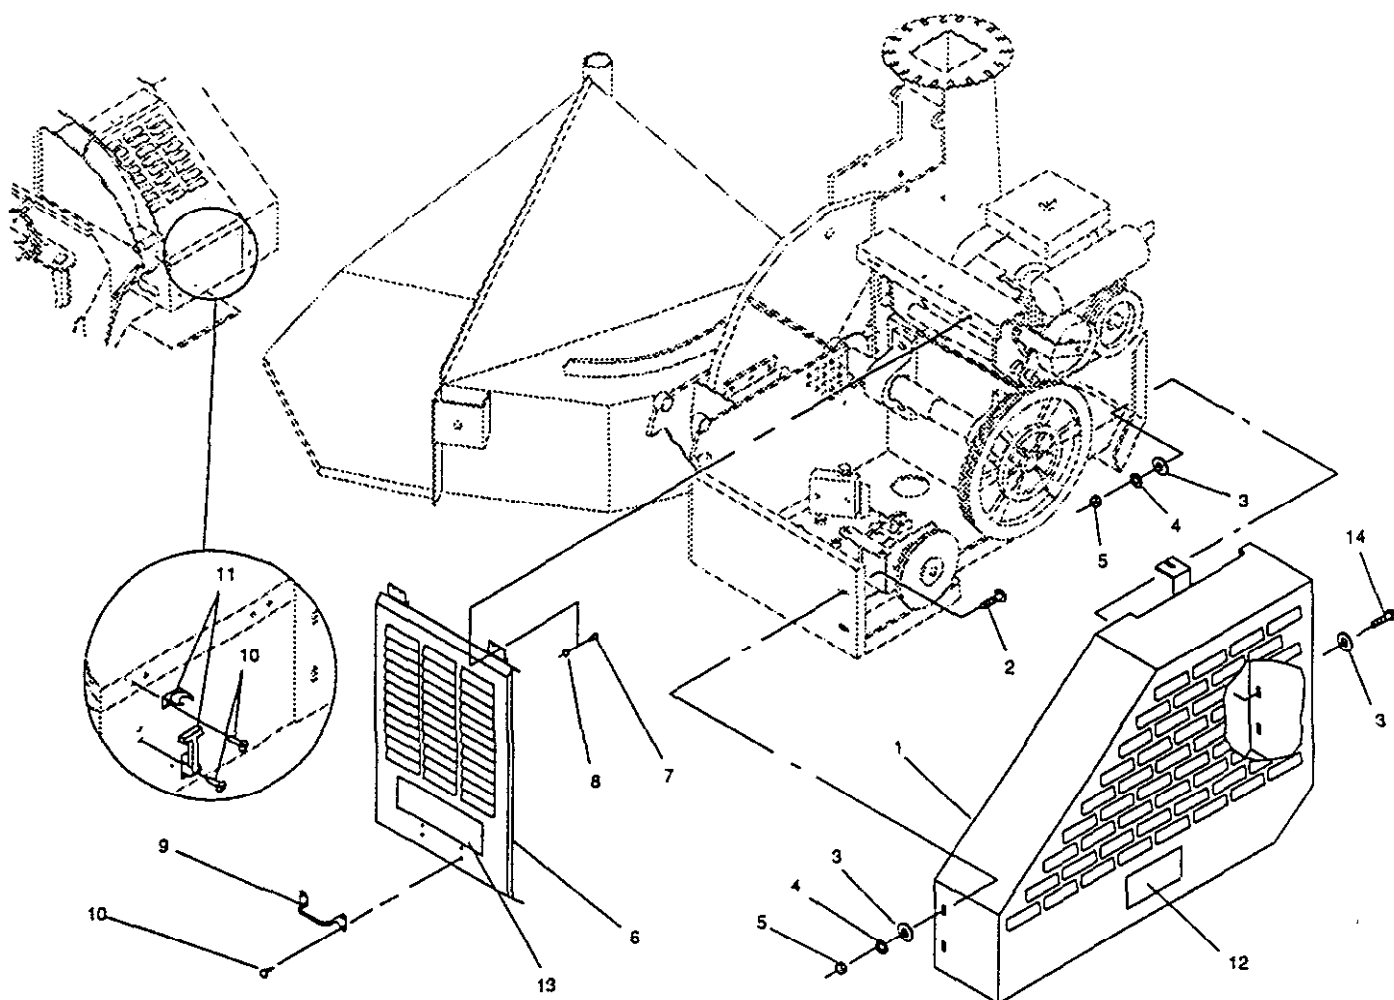


BELT GUARD & LOUVERED COVER

182-001

Ref. No.	Part No.	Description	No. Used
1	18-205-0332	Belt Guard	1
2	01-173-0612	Carriage Bolt, 3/8" - 16 x 1-1/2"	2
3	01-166-0600	Flat Washer, 3/8"	6
4	01-166-0610	Lock Washer, 3/8"	4
5	01-188-0616	Hex Nut, 3/8" - 16	4
6	18-205-0141	Louvered Cover	1
7	01-158-0200	Capscrew - Hex Hd., #10 - 24 x 1/2"	4

Ref. No.	Part No.	Description	No. Used
8	01-192-0200	Whiz Nut, #10 - 24	4
9	01-256-0140	Handle	1
10	01-161-0060	Pop Rivet, 3/16" x 1/2" sm. hd.	12
11	01-270-1350	Rubber Latch	2
12	01-506-0500	Decal - Toro	1
13	01-506-1230	Decal - Danger	1
14	01-178-0608	Capscrew - Hex Hd., 3/8" - 16 x 1"	2

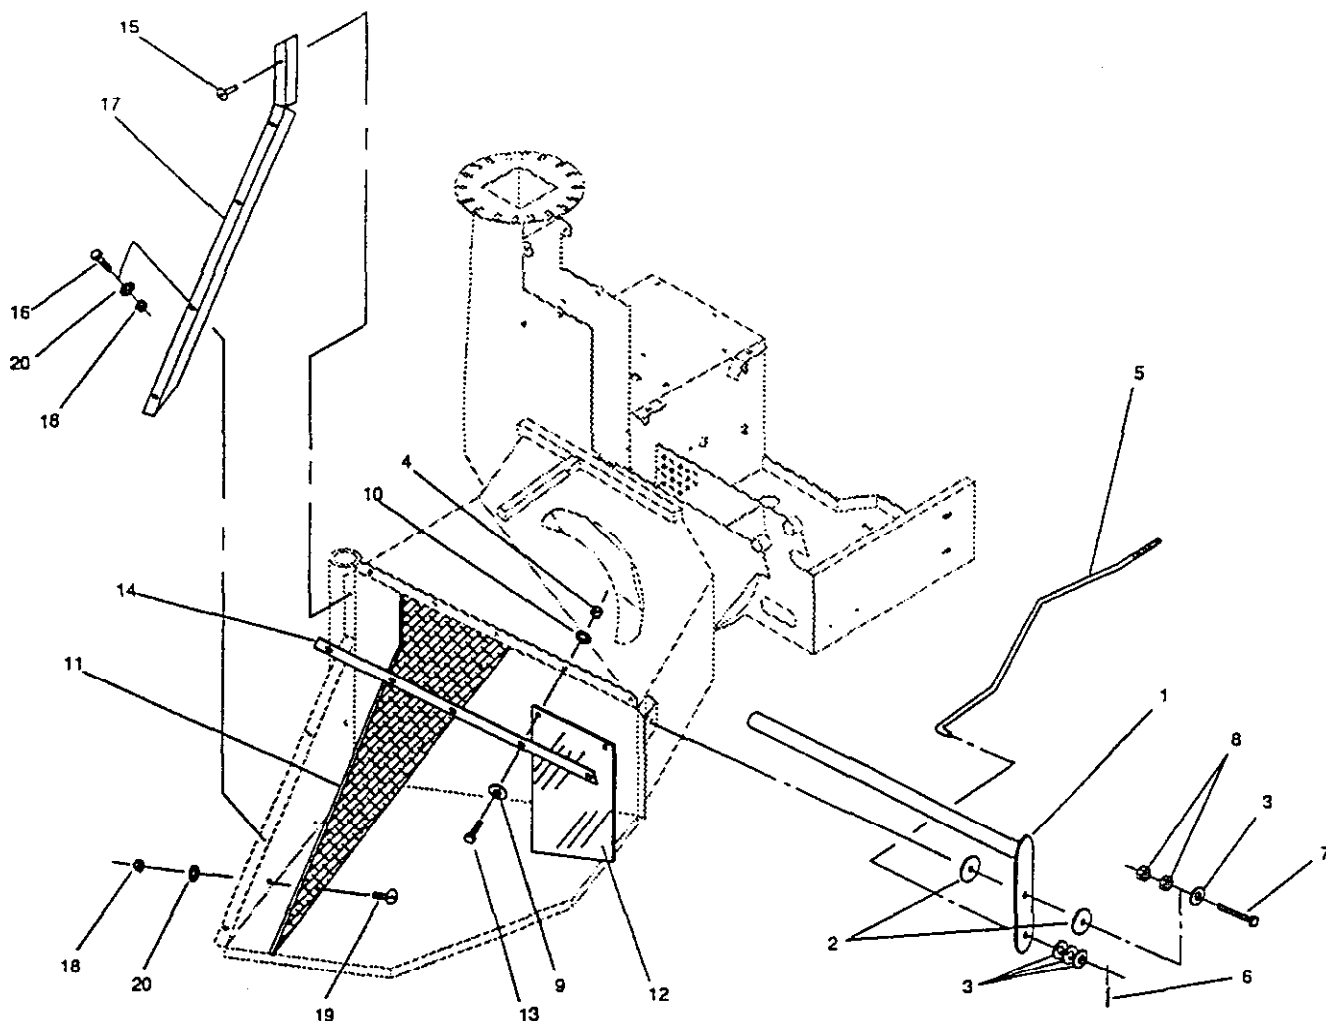


ROLLER LEVER & FEED TABLE

182-003

Ref. No.	Part No.	Description	No. Used
1	18-205-0281	Roller Lever	1
2	18-204-1541	Roller Lever Pad, 1/4" UHMW	2
3	01-166-0800	Flat Washer, 1/2"	4
4	01-188-0616	Hex Nut, 3/8" - 16	5
5	18-204-2331	Valve Rod	1
6	01-151-0040	Cotter Pin, 1/8" x 1"	1
7	01-178-0816	Capscrew - Hex Hd., 1/2" x 2"	1
8	01-191-0813	Jam Nut, 1/2" - 13	2
9	01-166-0600	Flat Washer, 3/8"	5
10	01-166-0610	Lock Washer, 3/8"	5
11	18-204-1061	Side Plate, 1/4" UHMW	1

Ref. No.	Part No.	Description	No. Used
12	18-204-1481	Feed Guard	4
13	01-178-0610	Capscrew - Hex Hd., 3/8" - 16 x 1-1/4"	5
14	18-204-1471	Feed Guard Flat	1
15	01-161-0020	Pop Rivet, 3/16" x 1/2" lg. hd.	1
16	01-178-0508	Capscrew - Hex Hd., 5/16" - 18 x 1"	4
17	18-204-1921	Corner Guard	1
18	01-188-0518	Hex Nut, 5/16" - 18	16
19	01-173-0508	Carriage Bolt, 5/16" - 18 x 1"	12
20	01-166-0510	Lock Washer, 5/16"	16

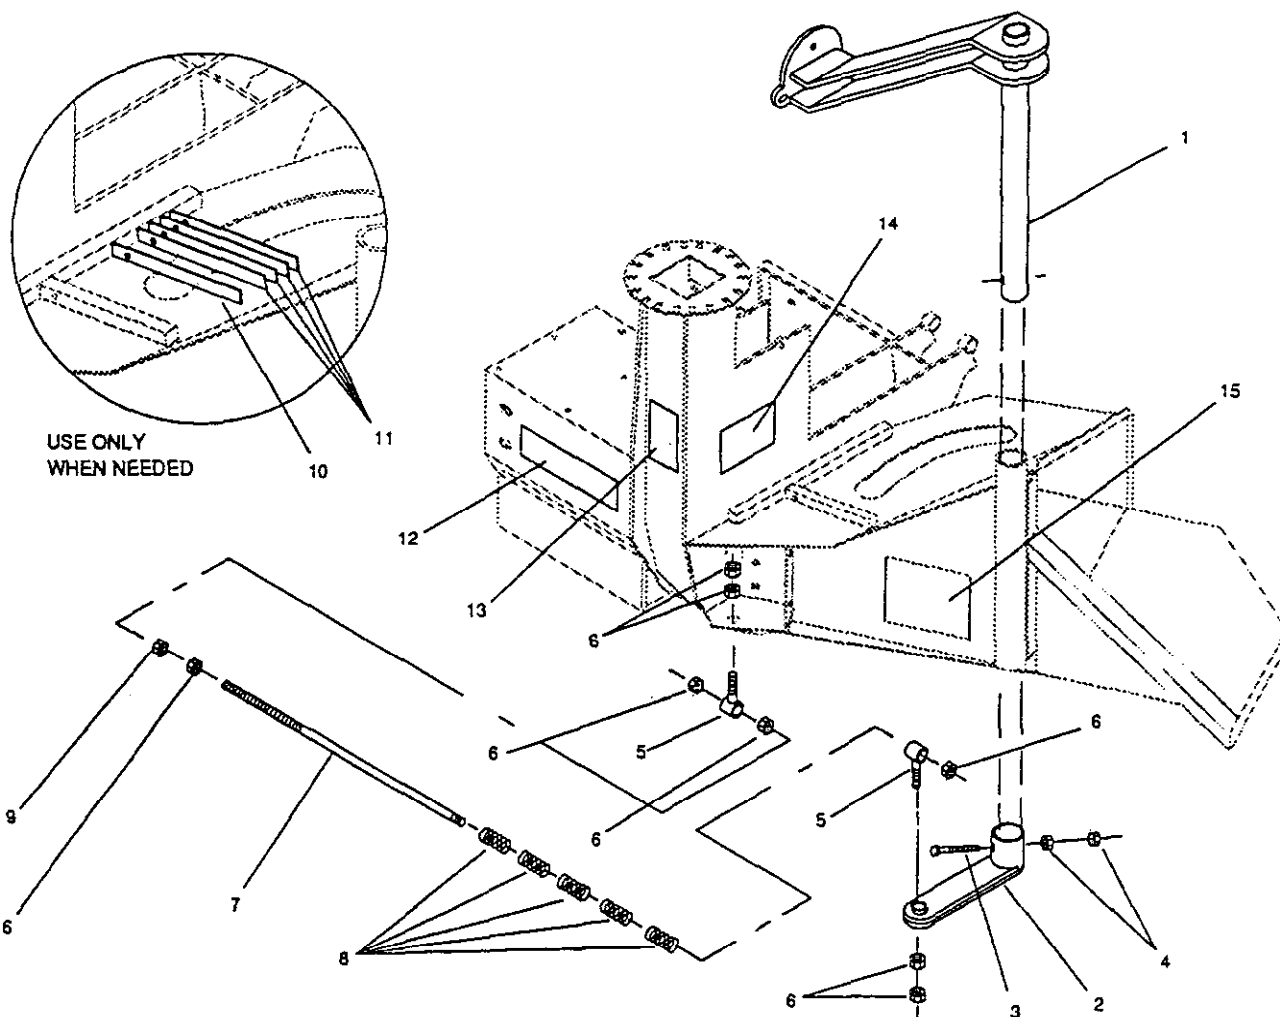


ROLLER PIVOT ARM

182-005

Ref. No.	Part No.	Description	No. Used
1	18-205-0212	Roller Pivot Arm	1
2	18-205-0161	Spring Bracket	1
3	01-178-0832	Capscrew - Hex Hd., 1/2" - 13 x 4"	1
4	01-188-0813	Hex Nut, 1/2" - 13	2
5	18-205-0221	Spring Rod Pivot Bolt	2
6	01-188-1210	Hex Nut, 3/4" - 10	8
7	18-204-0801	Spring Rod	1

Ref. No.	Part No.	Description	No. Used
8	01-261-0400	Spring, 1-1/2" OD x 5" lg.	5
9	01-191-1210	Jam Nut, 3/4" - 10	1
10	18-204-1981	Roller Spacer, 16 ga.	1
11	18-204-1991	Roller Spacer, 10 ga.	4
12	01-506-0910	Decal - Chipper 1820	1
13	01-506-0120	Decal - Disengage/Engage	1
14	01-506-0500	Decal - Toro	1
15	01-506-0260	Decal - Operating Instr.	1

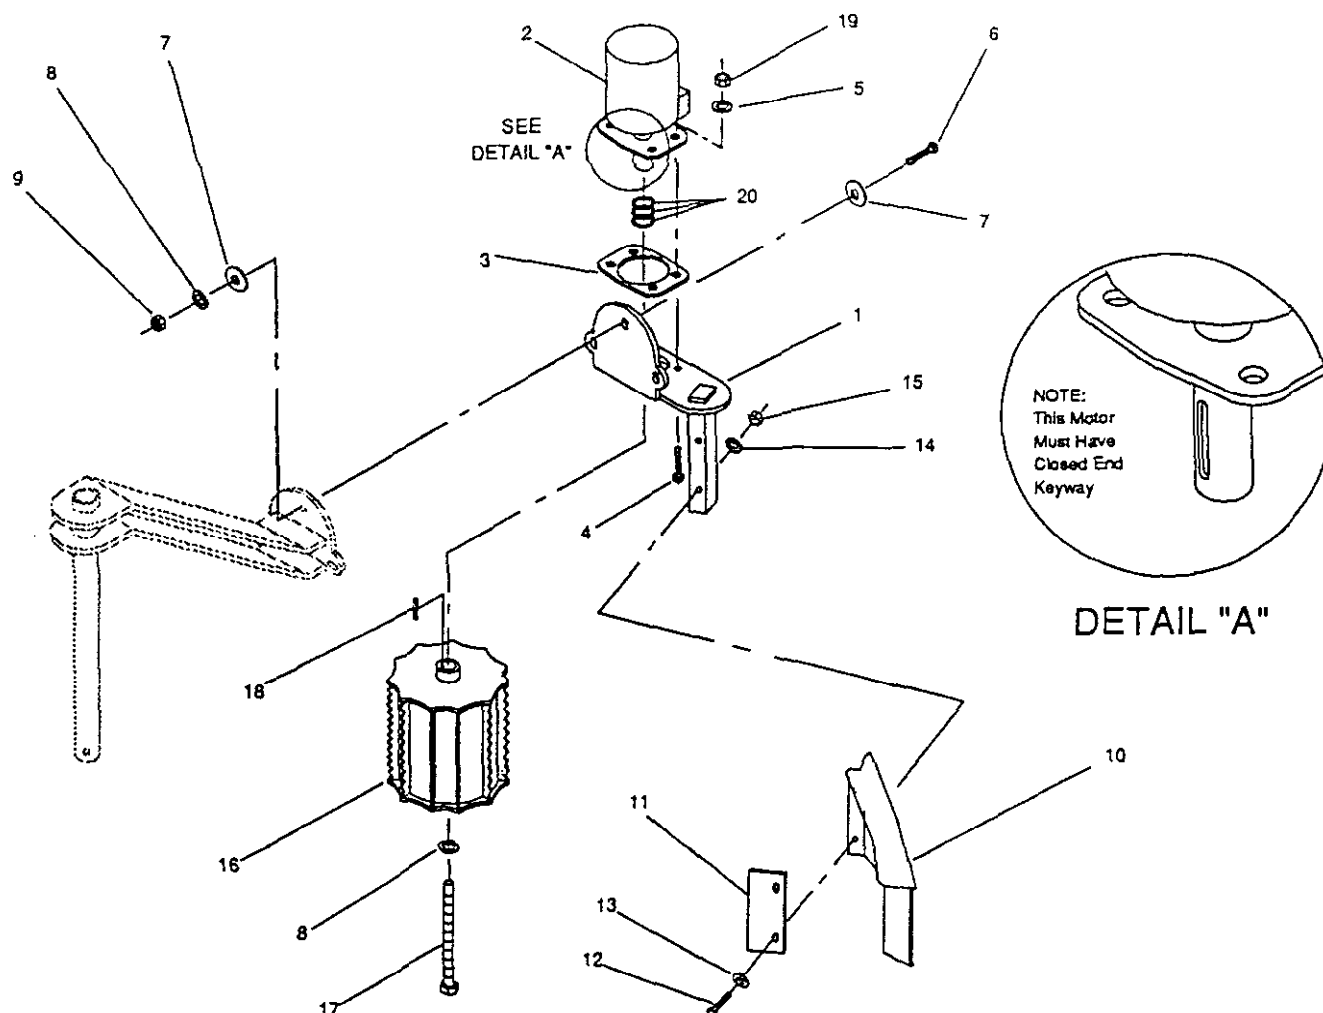


FEED ROLLER

182K-004

Ref. No.	Part No.	Description	No. Used
1	18-205-0202	Motor Plate	1
2	01-304-0420	Hydraulic Motor	1
3	01-304-0260	Seal Kit	1
4	18-204-0461	Roller Motor Spacer	1
5	01-178-0816	Capscrew - Hex Hd., 1/2" - 13 x 2"	4
6	01-166-0810	Lock Washer, 1/2"	4
7	01-178-1020	Capscrew - Hex Hd., 5/8" - 11 x 2-1/2"	3
8	18-204-0761	Arm Spacer Top	6
9	01-166-1010	Lock Washer, 5/8"	4
10	01-188-1011	Hex Nut, 5/8" - 11	3
	18-205-0251	Disc Guard	1

Ref. No.	Part No.	Description	No. Used
11	18-204-2231	Roller Guard	1
12	01-178-0622	Capscrew - Hex Hd., 3/8" - 16 x 2-3/4"	2
13	01-166-0600	Flat Washer, 3/8"	2
14	01-166-0610	Lock Washer, 3/8"	2
15	01-188-0616	Hex Nut, 3/8" - 16	2
16	18-205-0262	Feed Roller	1
17	18-205-0321	Roller Bolt	1
18	41-004-5201	Key, 5/16" Sq. x 1-1/2"	1
19	01-188-0813	Hex Nut, 1/2" - 13	4
20	01-168-2010	Machinery Bushing, 1-1/4" ID x 10 ga.	3(var)

* Not Illustrated

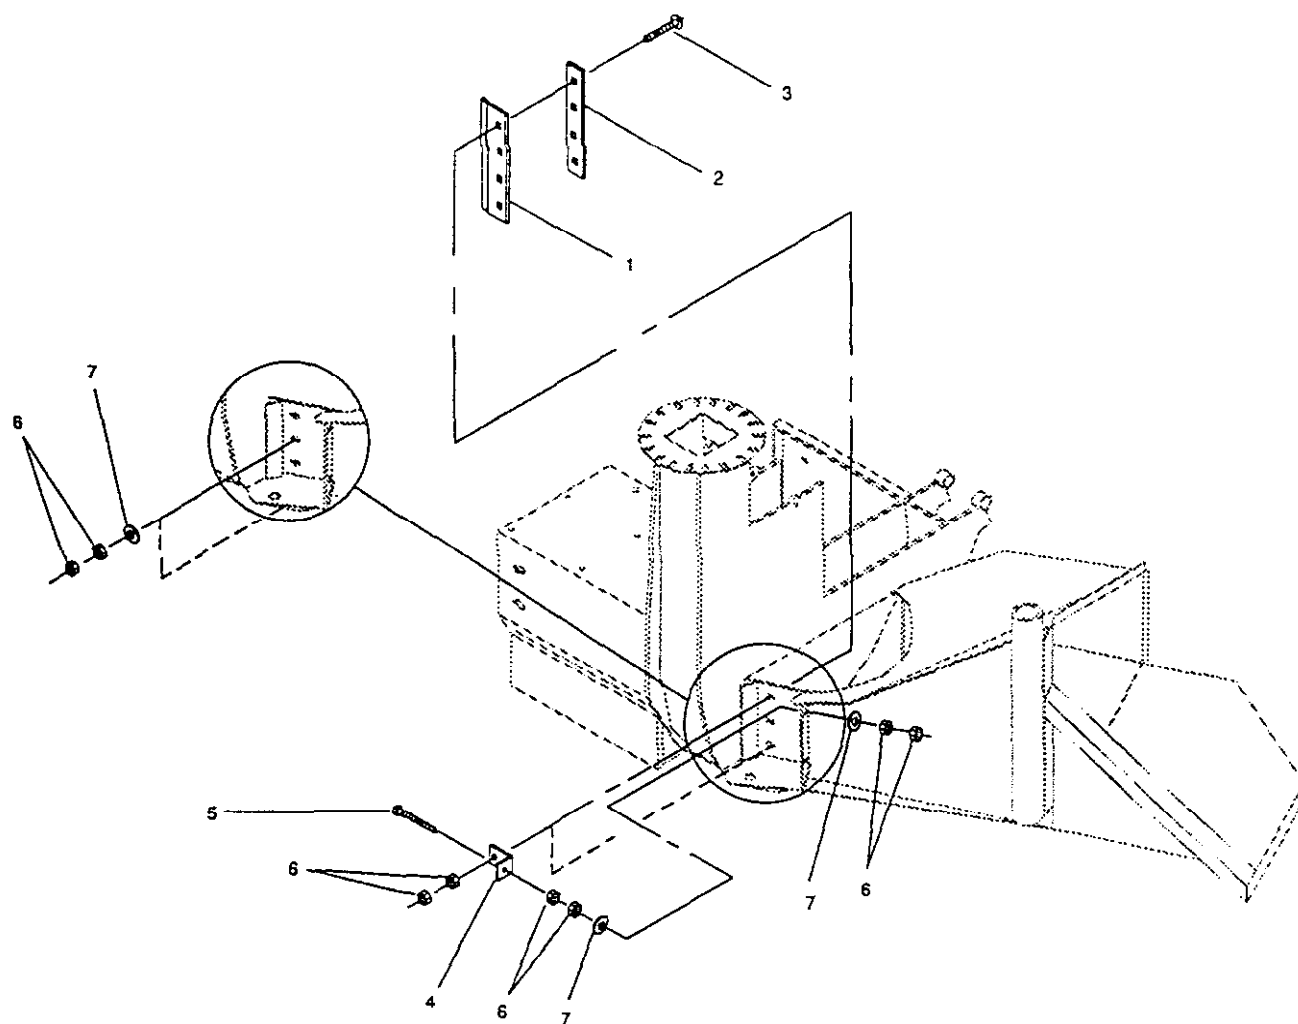


CUTTER BAR ASSEMBLY

182-006

Ref. No.	Part No.	Description	No. Used
1	18-204-3111	Cutter Bar	1
2	18-205-0271	Cutter Bar Spacer	1
3	01-173-0816	Carriage Bolt, 1/2" - 13 x 2"	4
4	18-204-1181	Cutter Bar Bracket	2

Ref. No.	Part No.	Description	No. Used
5	01-182-0832	Capscrew - Hex Hd., 1/2" - 13 x 4" all thread	2
6	01-188-0813	Hex Nut, 1/2" - 13	16
7	01-166-0800	Flat Washer, 1/2"	6

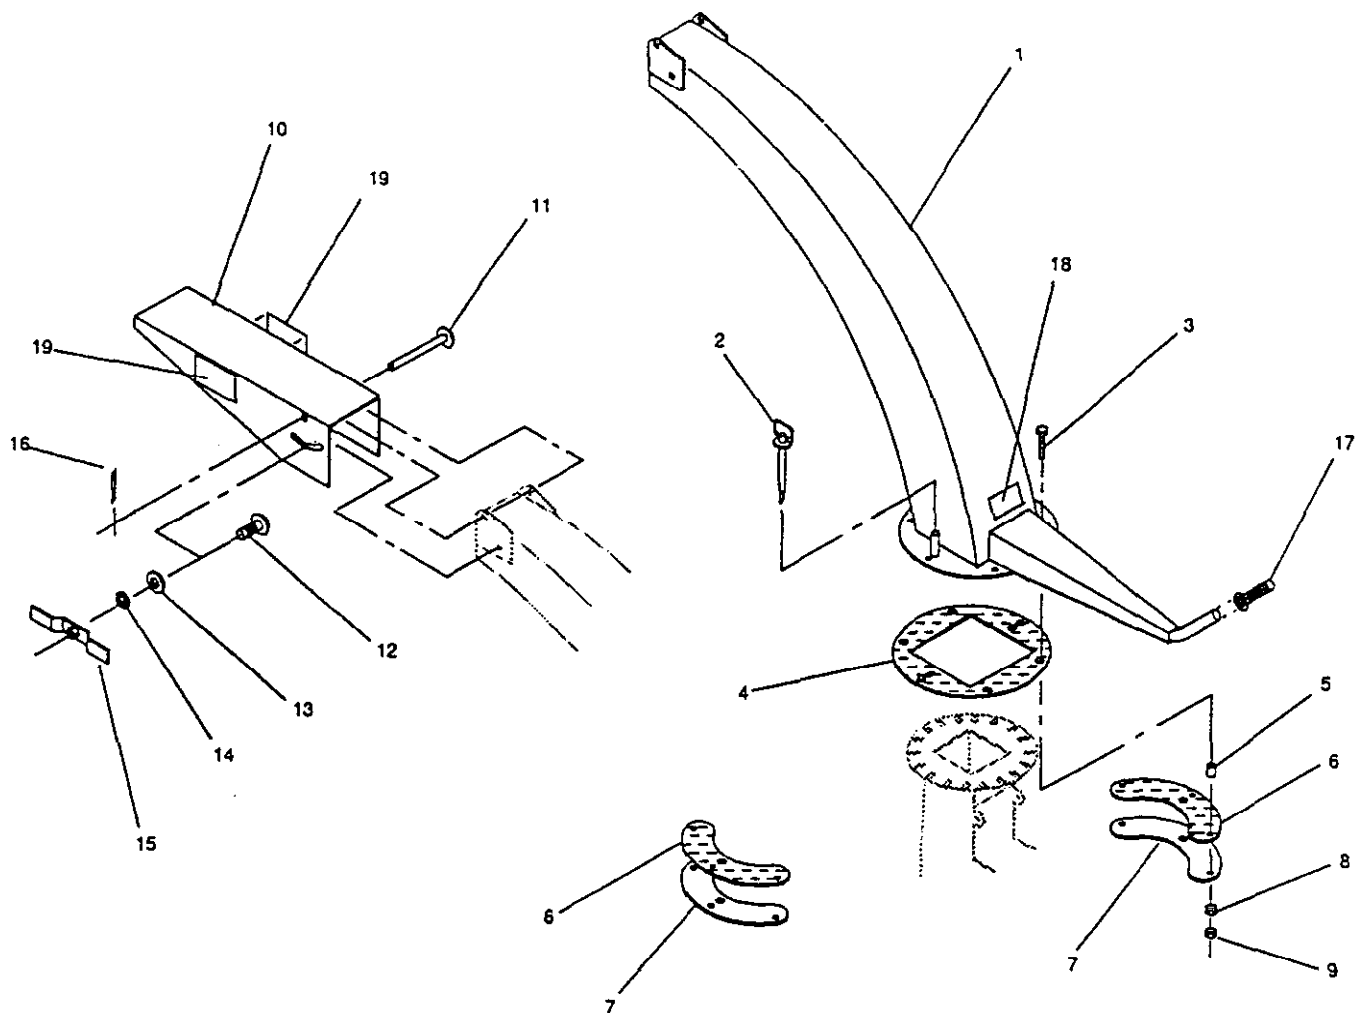


CHUTE ASSEMBLY

182K-013

Ref. No.	Part No.	Description	No. Used
1	18-205-0193	Chute	1
2	01-276-0160	Hitch Pin	1
3	01-178-0816	Capscrew - Hex Hd., 1/2" - 13 x 2"	6
4	18-204-0591	Chute Flange Spacer, 1/4" UHMW	1
5	18-204-1271	Directional Spacer	6
6	18-204-1201	Chute Washer, 1/4" UHMW	2
7	18-204-1191	Chute Clamp	2
8	01-188-0813	Hex Nut, 1/2" - 13	6
9	01-191-0813	Jam Nut, 1/2" - 13	6

Ref. No.	Part No.	Description	No. Used
10	18-204-1821	Deflector	1
11	18-205-0361	Deflector Pin	1
12	01-173-0816	Carriage Bolt, 1/2" - 13 x 2"	1
13	01-166-0800	Flat Washer, 1/2"	1
14	01-166-0810	Lock Washer, 1/2"	1
15	18-205-0311	Wing Nut	1
16	01-151-0040	Cotter Pin, 1/8" x 1"	1
17	01-259-0050	Foam Handle	1
18	01-506-0290	Decal - Danger	1
19	01-506-0300	Decal - Danger	2

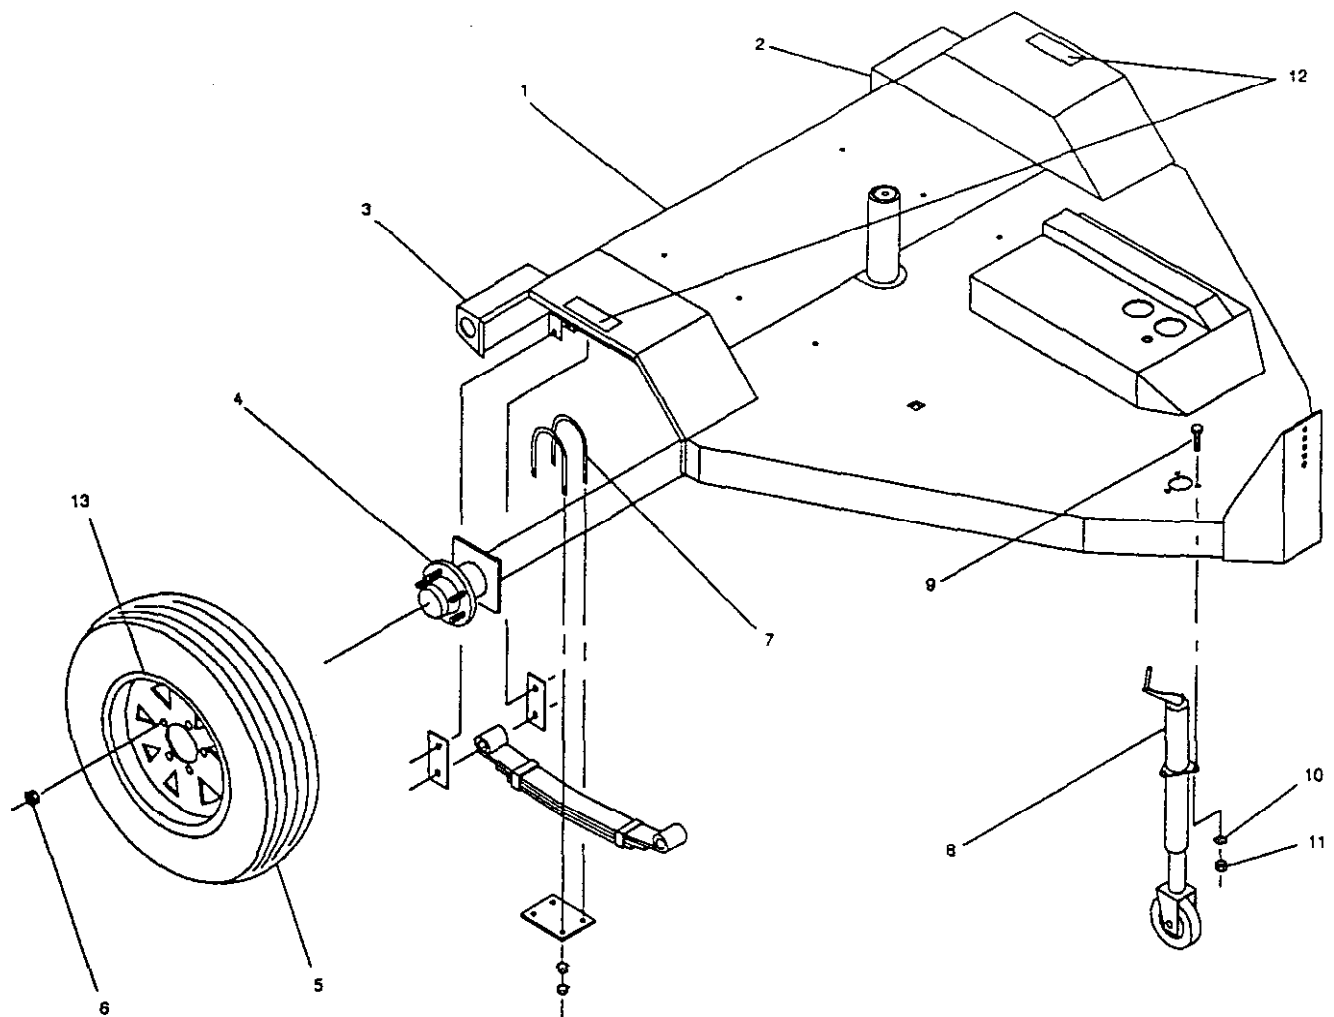


TRAILER ASSEMBLY

182-014

Ref. No.	Part No.	Description	No. Used
1	18-205-0103	Trailer Main Frame	1
2	01-607-0020	Tail Light, L.H.	1
3	01-607-0010	Tail Light, R.H.	1
4	01-285-0610	Axle	1
5	01-269-1510	Tire, B-78-13 6 ply	2
6	01-269-0300	Lug Nut, 1/2" - 20	10
7	01-285-0340	Hanger Kit	1
*	01-285-0260	Attaching Parts Kit	1

Ref. No.	Part No.	Description	No. Used
8	18-205-3001	Jack	1
9	01-178-0812	Capscrew - Hex Hd., 1/2" - 13 x 1-1/2"	3
10	01-166-0810	Lock Washer, 1/2"	3
11	01-188-0813	Hex Nut, 1/2" - 13	3
12	01-506-0540	Decal - No Riders	2
13	01-269-1520	Wheel	2

* Not Illustrated

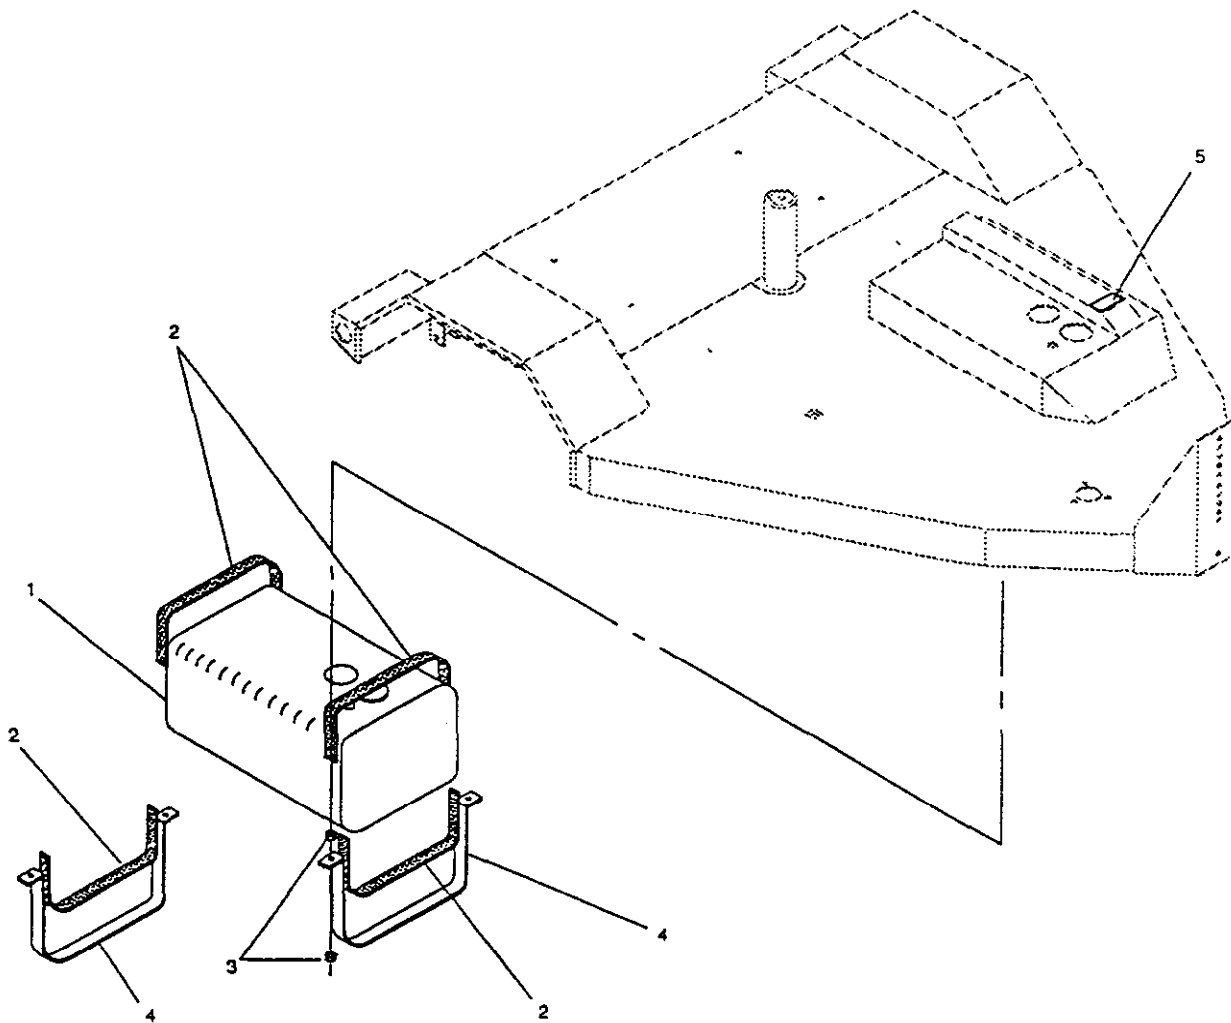


GAS TANK ASSEMBLY

182-015

Ref. No.	Part No.	Description	No. Used
1	01-280-0220	Gas Tank, 12 gal.	1
2	18-204-1781	Gas Tank Strap, 1/8" rubber	4
3	01-188-0616	Hex Nut, 3/8" - 16	9

Ref. No.	Part No.	Description	No. Used
4	18-204-1121	Gas Tank Strap	2
5	01-506-0460	Decal - Gas Only	1

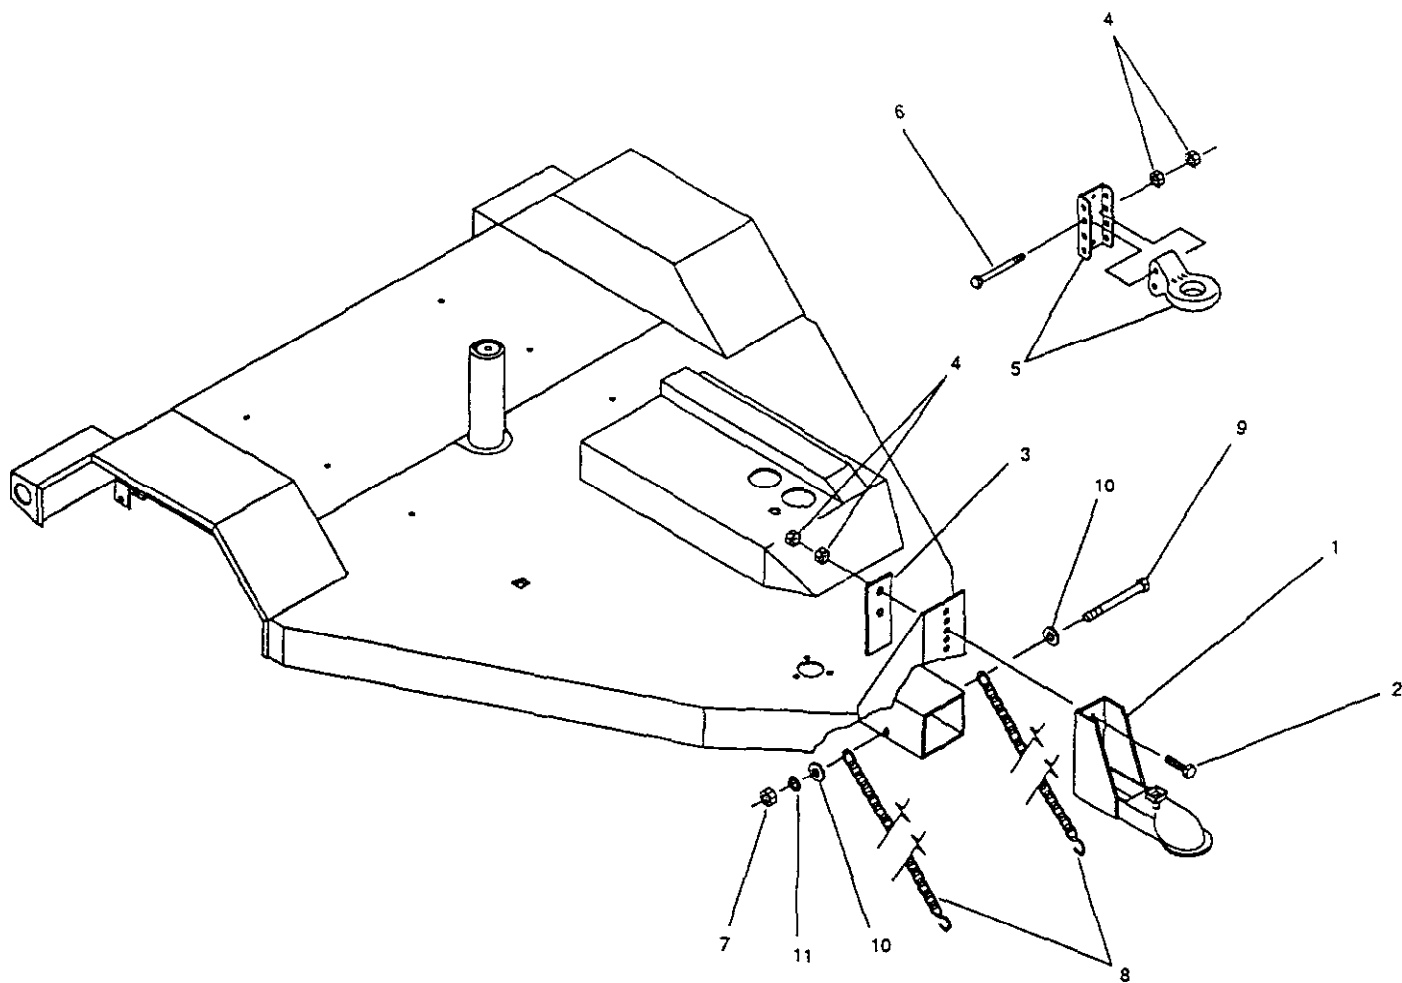


HITCH ASSEMBLY

182-016

Ref. No.	Part No.	Description	No. Used
1	31-005-0172	Hitch	1
2	01-178-1020	Capscrew - Hex Hd., 5/8" - 11 x 2-1/2"	2
3	31-004-0941	Hitch Bracket	1
4	01-188-1011	Hex Nut, 5/8" - 11	8
5	02-276-0100	Pintle Hitch (optional)	1
6	01-178-1040	Capscrew - Hex Hd., 5/8" - 11 x 5"	2

Ref. No.	Part No.	Description	No. Used
7	01-188-0616	Hex Nut, 3/8" - 16	1
8	01-251-0360	Safety Chain	2
9	01-178-0644	Capscrew - Hex Hd., 3/8" - 16 x 5-1/2"	1
10	01-166-0600	Flat Washer, 3/8"	2
11	01-166-0610	Lock Washer, 3/8"	1

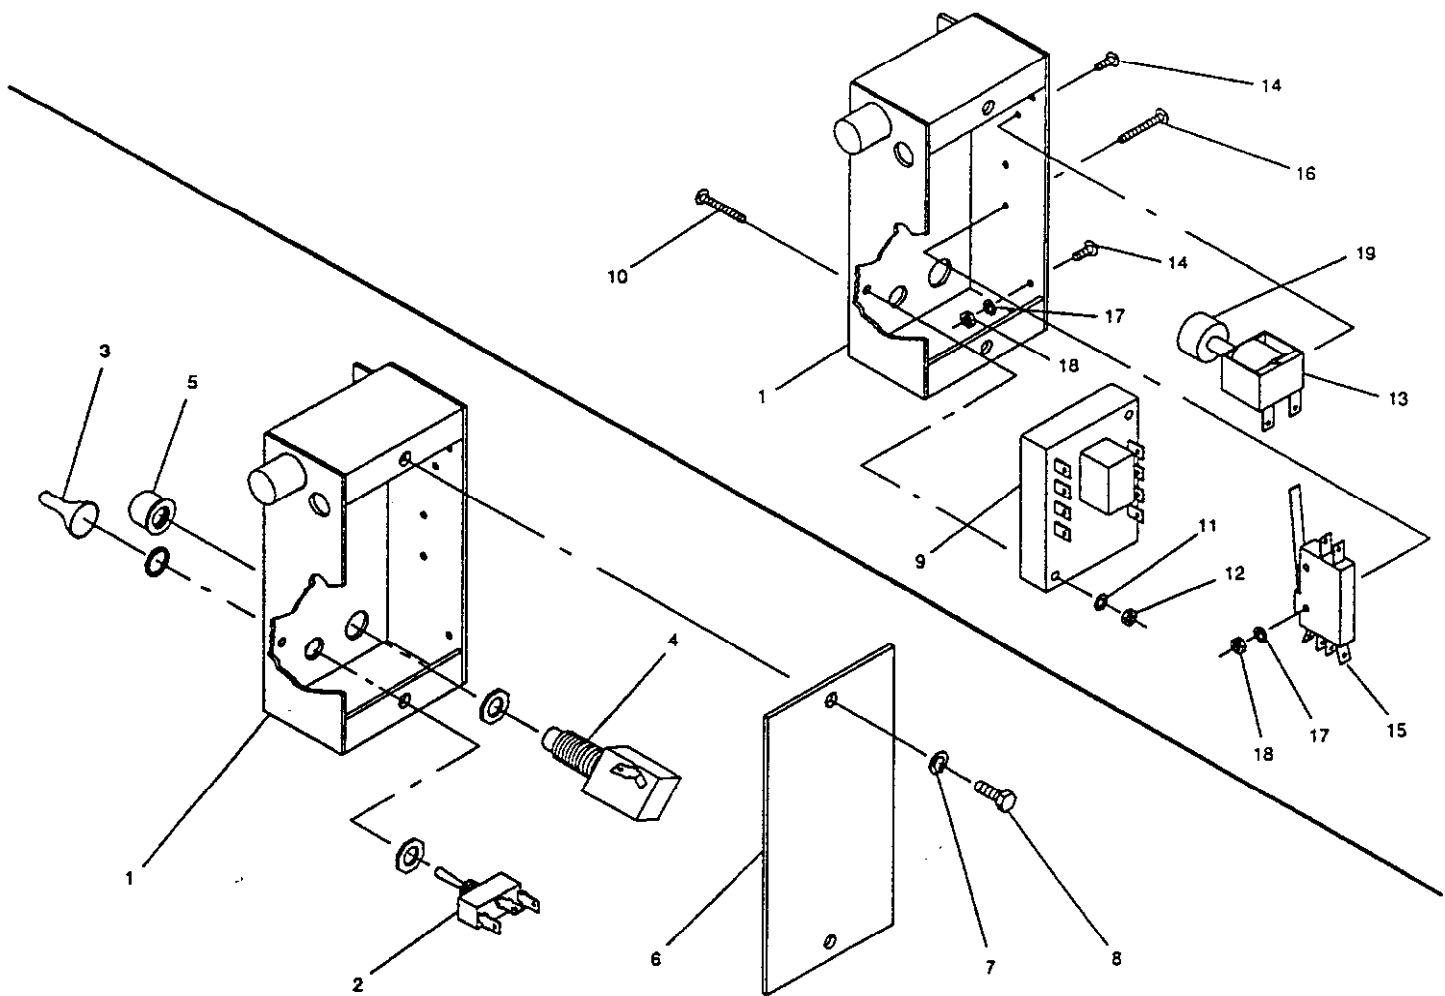

DOOR LOCK BOX ASSEMBLY


182-019


Ref. No.	Part No.	Description	No. Used
1	18-205-3372	Door Control Box	1
2	01-603-0880	Toggle Switch	1
3	01-603-0890	Toggle Seal	1
4	01-603-0870	Momentary Ground Switch	1
5	01-603-0900	Dust Cap	1
6	18-204-3521	Door Box Cover	1
7	01-166-0410	Lock Washer, 1/4"	2
8	01-178-0404	Capscrew - Hex Hd., 1/4" - 20 x 1/2"	2
9	01-612-0600	Timer	1
10	01-158-1470	Machine Screw - Rd. Hd., #8 - 32 x 1-1/4"	2
11	01-169-0140	Lock Washer, #8	2

Ref. No.	Part No.	Description	No. Used
12	01-192-0500	Hex Nut, #8 - 32	2
13	01-603-0860	Solenoid	1
14	01-158-1620	Machine Screw - Rd. Hd., #6 - 32 x 1/4"	3
15	01-603-0850	Snap Action Switch	1
16	01-158-1630	Machine Screw - Rd. Hd., #6 - 32 x 7/8"	2
17	01-169-0130	Lock Washer, #6	3
18	01-192-0490	Hex Nut, #6 - 32	3
19	18-204-3551	Solenoid Lock Stop	1
*	18-202-0011	Solenoid Assembly (Incl. Ref #13,19)	1
*	01-606-0360	Wiring Harness	1

* Not Illustrated

DOOR LOCK BOX WIRING DIAGRAM

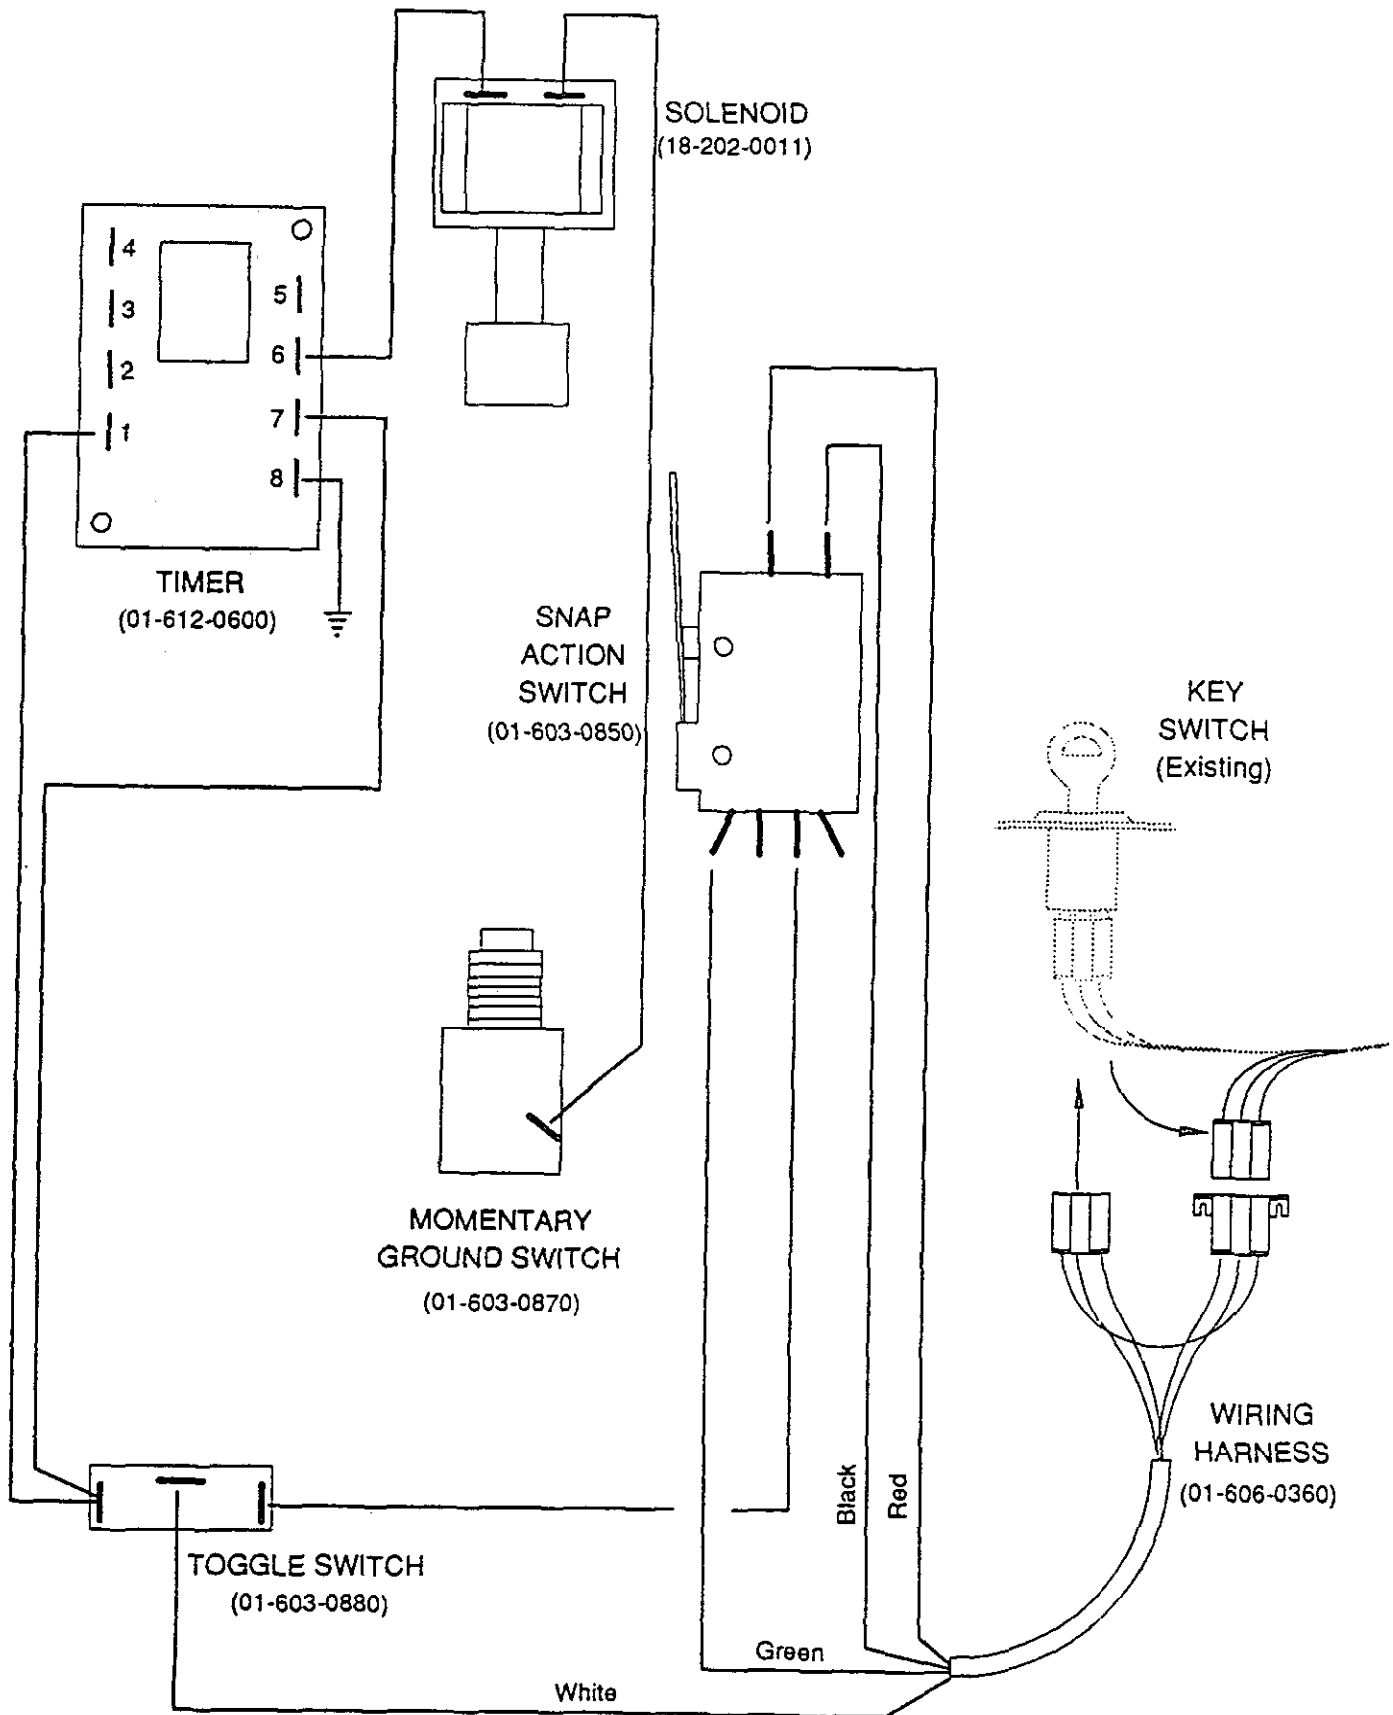

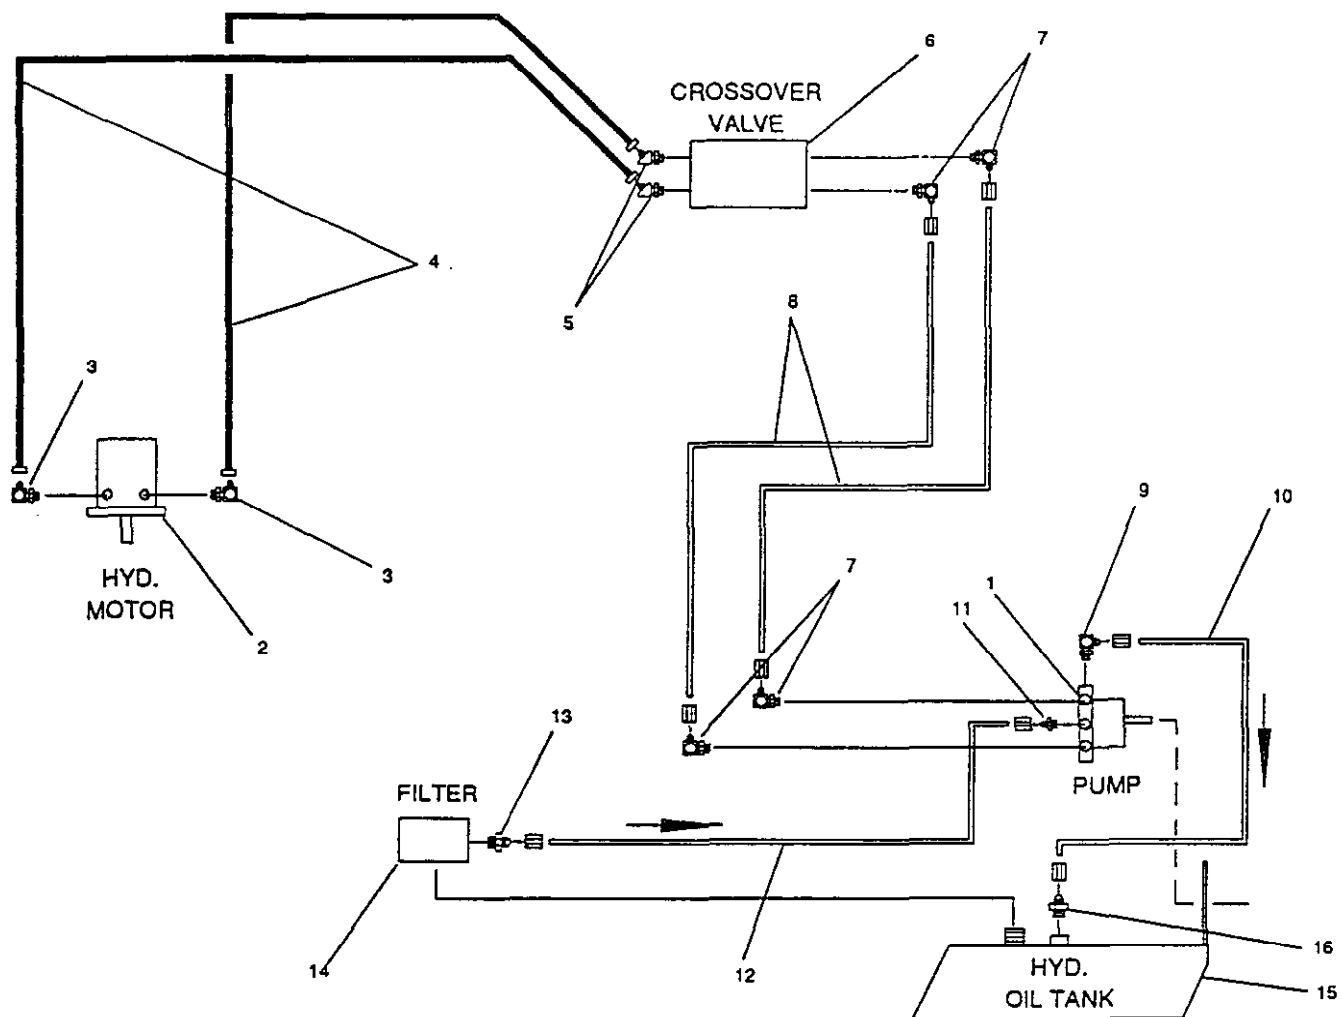

HYDRAULIC SCHEMATIC

182K-018

Ref. No.	Part No.	Description	No. Used
1	01-305-0790	Pump	1
2	01-304-0420	Hydraulic Motor	1
*	01-304-0260	Seal Kit	1
3	01-201-1520	Fitting, 6801-6-10	2
4	01-312-1610	Hyd. Hose, 3/8" x 60	2
5	01-201-2240	Fitting, 6802-6-8	2
6	01-308-0840	Crossover Valve	1
7	01-201-2290	Fitting, 3/4" - 16 O-ring x 3/8" tube	4
8	18-204-2381	Steel Tube, 3/8" x 10"	2
9	01-201-2270	Fitting, 9/16" - 18 O-ring x 3/8" tube	1

Ref. No.	Part No.	Description	No. Used
10	18-204-2371	Steel Tube, 3/8" x 9"	1
11	01-201-2340	Fitting, 7/16" - 20 O-ring x 1/4" tube	1
12	18-204-2361	Steel Tube, 1/4" x 5"	1
13	01-201-2260	Fitting, 3/8" NPT Male x 1/4" tube	1
14	01-317-0070	Filter	1
*	01-317-0100	Element & Seal Kit	1
15	18-205-2401	Hyd. Oil Tank	1
16	01-201-2280	Fitting, 3/8" NPT Male x 3/8" tube	1

* Not Illustrated

PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
—	Key	6	10	1	01-173-0816	Carriage Bolt	13	3	4
01-113-0160	Bearing	3	10	1	01-173-0816	Carriage Bolt	14	12	1
01-113-0200	Bearing	3	6	1	01-173-1220	Carriage Bolt	2	11	1
01-151-0040	Cotter Pin	10	6	1	01-178-0404	Capscrew - Hex Hd.	18	8	2
01-151-0040	Cotter Pin	14	16	1	01-178-0404	Capscrew - Hex Hd.	8	19	2
01-151-0060	Cotter Pin	8	8	1	01-178-0406	Capscrew - Hex Hd.	4	18	2
01-151-0100	Cotter Pin	7	18	1	01-178-0508	Capscrew - Hex Hd.	10	16	4
01-153-0160	Roll Pin	5	10	1	01-178-0608	Capscrew - Hex Hd.	7	2	2
01-158-0200	Capscrew - Hex Hd.	9	7	4	01-178-0608	Capscrew - Hex Hd.	8	17	2
01-158-1150	Capscrew - Flat Hd. Socket	3	2	6	01-178-0608	Capscrew - Hex Hd.	9	14	2
01-158-1470	Machine Screw - Rd. Hd.	18	10	2	01-178-0610	Capscrew - Hex Hd.	10	13	5
01-158-1620	Machine Screw - Rd. Hd.	18	14	3	01-178-0610	Capscrew - Hex Hd.	5	3	6
01-158-1630	Machine Screw - Rd. Hd.	18	16	2	01-178-0610	Capscrew - Hex Hd.	6	22	1
01-159-0010	Presto Pin	8	13	1	01-178-0612	Capscrew - Hex Hd.	2	6	6
01-161-0020	Pop Rivet	10	15	1	01-178-0612	Capscrew - Hex Hd.	4	5	4
01-161-0020	Pop Rivet	3	20	8	01-178-0612	Capscrew - Hex Hd.	6	18	2
01-161-0060	Pop Rivet	9	10	12	01-178-0612	Capscrew - Hex Hd.	8	2	2
01-166-0400	Flat Washer	4	16	2	01-178-0614	Capscrew - Hex Hd.	5	14	2
01-166-0410	Lock Washer	18	7	2	01-178-0616	Capscrew - Hex Hd.	5	8	2
01-166-0410	Lock Washer	4	17	2	01-178-0622	Capscrew - Hex Hd.	12	12	2
01-166-0410	Lock Washer	8	20	2	01-178-0644	Capscrew - Hex Hd.	17	9	1
01-166-0510	Lock Washer	10	20	16	01-178-0652	Capscrew - Hex Hd.	8	10	1
01-166-0600	Flat Washer	10	9	5	01-178-0660	Capscrew - Hex Hd.	8	26	2
01-166-0600	Flat Washer	12	13	2	01-178-0812	Capscrew - Hex Hd.	15	9	3
01-166-0600	Flat Washer	17	10	2	01-178-0812	Capscrew - Hex Hd.	2	5	1
01-166-0600	Flat Washer	2	7	6	01-178-0814	Capscrew - Hex Hd.	7	20	2
01-166-0600	Flat Washer	4	6	12	01-178-0816	Capscrew - Hex Hd.	10	7	1
01-166-0600	Flat Washer	5	4	14	01-178-0816	Capscrew - Hex Hd.	12	4	4
01-166-0600	Flat Washer	6	19	4	01-178-0816	Capscrew - Hex Hd.	14	3	6
01-166-0600	Flat Washer	7	3	3	01-178-0816	Capscrew - Hex Hd.	3	16	3
01-166-0600	Flat Washer	8	4	8	01-178-0824	Capscrew - Hex Hd.	5	16	1
01-166-0600	Flat Washer	9	3	6	01-178-0832	Capscrew - Hex Hd.	11	3	1
01-166-0610	Lock Washer	10	10	5	01-178-0840	Capscrew - Hex Hd.	7	8	1
01-166-0610	Lock Washer	12	14	2	01-178-1020	Capscrew - Hex Hd.	12	6	3
01-166-0610	Lock Washer	17	11	1	01-178-1020	Capscrew - Hex Hd.	17	2	2
01-166-0610	Lock Washer	2	8	6	01-178-1024	Capscrew - Hex Hd.	3	11	2
01-166-0610	Lock Washer	4	7	4	01-178-1040	Capscrew - Hex Hd.	17	6	2
01-166-0610	Lock Washer	5	5	6	01-178-1232	Capscrew - Hex Hd.	3	7	2
01-166-0610	Lock Washer	6	20	5	01-182-0832	Capscrew - Hex Hd.	13	5	2
01-166-0610	Lock Washer	7	4	2	01-188-0518	Hex Nut	10	18	16
01-166-0610	Lock Washer	8	5	4	01-188-0616	Hex Nut	10	4	5
01-166-0610	Lock Washer	9	4	4	01-188-0616	Hex Nut	12	15	2
01-166-0800	Flat Washer	10	3	4	01-188-0616	Hex Nut	16	3	9
01-166-0800	Flat Washer	13	7	6	01-188-0616	Hex Nut	17	7	1
01-166-0800	Flat Washer	14	13	1	01-188-0616	Hex Nut	2	9	6
01-166-0800	Flat Washer	7	11	11	01-188-0616	Hex Nut	4	8	8
01-166-0810	Lock Washer	12	5	4	01-188-0616	Hex Nut	5	6	8
01-166-0810	Lock Washer	14	14	1	01-188-0616	Hex Nut	6	21	1
01-166-0810	Lock Washer	15	10	3	01-188-0616	Hex Nut	7	5	4
01-166-0810	Lock Washer	2	4	1	01-188-0616	Hex Nut	8	6	2
01-166-0810	Lock Washer	7	12	3	01-188-0616	Hex Nut	9	5	4
01-166-1000	Flat Washer	3	12	4	01-188-0813	Hex Nut	11	4	2
01-166-1010	Lock Washer	12	8	4	01-188-0813	Hex Nut	12	19	4
01-166-1200	Flat Washer	3	8	4	01-188-0813	Hex Nut	13	6	16
01-166-1200	Flat Washer	8	11	1	01-188-0813	Hex Nut	14	8	6
01-168-2010	Machinery Bushing	12	20	3	01-188-0813	Hex Nut	15	11	3
01-168-3210	Machinery Bushing	3	17	2	01-188-0813	Hex Nut	3	5	18
01-168-3214	Machinery Bushing	3	21	1	01-188-0813	Hex Nut	5	12	2
01-169-0130	Lock Washer	18	17	3	01-188-0813	Hex Nut	7	13	8
01-169-0140	Lock Washer	18	11	2	01-188-1011	Hex Nut	12	9	3
01-170-0150	Clamp	4	13	2	01-188-1011	Hex Nut	17	4	8
01-173-0508	Carriage Bolt	10	19	12	01-188-1011	Hex Nut	3	13	4
01-173-0612	Carriage Bolt	9	2	2	01-188-1210	Hex Nut	11	6	8

* Not Illustrated

PART NUMBER INDEX(Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
01-188-1210	Hex Nut	2	14	1	01-304-0420	Hydraulic Motor	20	2	1
01-188-1210	Hex Nut	3	9	4	01-305-0790	Pump	20	1	1
01-188-1210	Hex Nut	8	12	1	01-305-0790	Pump	5	2	1
01-189-0616	Lock Nut	5	19	2	01-305-0820	Seal Kit	5	*	1
01-191-0616	Jam Nut	5	18	1	01-308-0840	Crossover Valve	20	6	1
01-191-0616	Jam Nut	7	22	1	01-308-0840	Crossover Valve	5	7	1
01-191-0616	Jam Nut	8	23	6	01-312-1610	Hyd. Hose	20	4	2
01-191-0813	Jam Nut	10	8	2	01-317-0070	Filter	20	14	1
01-191-0813	Jam Nut	14	9	6	01-317-0100	Element & Seal Kit	20	*	1
01-191-0813	Jam Nut	5	20	2	01-451-0020	Pipe Plug	4	4	1
01-191-0813	Jam Nut	7	21	1	01-455-0030	Pipe Elbow	4	3	1
01-191-1210	Jam Nut	11	9	1	01-456-0140	Pipe Nipple	4	2	1
01-191-1210	Jam Nut	2	15	1	01-506-0020	Decal - Danger	8	15	1
01-192-0200	Whiz Nut	9	8	4	01-506-0030	Decal - Danger	4	19	1
01-192-0490	Hex Nut	18	18	3	01-506-0120	Decal - Disengage/Engage	11	13	1
01-192-0500	Hex Nut	18	12	2	01-506-0260	Decal - Operating Instr.	11	15	1
01-201-1520	Fitting	20	3	2	01-506-0260	Decal - Operating Instr.	2	17	1
01-201-2240	Fitting	20	5	2	01-506-0290	Decal - Danger	14	18	1
01-201-2260	Fitting	20	13	1	01-506-0300	Decal - Danger	14	19	2
01-201-2270	Fitting	20	9	1	01-506-0320	Decal - Rev/N/Forward	2	18	1
01-201-2280	Fitting	20	16	1	01-506-0460	Decal - Gas Only	16	5	1
01-201-2290	Fitting	20	7	4	01-506-0500	Decal - Toro	11	14	1
01-201-2340	Fitting	20	11	1	01-506-0500	Decal - Toro	9	12	1
01-202-0190	Clamp	4	20	1	01-506-0540	Decal - No Riders	15	12	2
01-251-0360	Safety Chain	17	8	2	01-506-0560	Decal - Hydraulic Oil	5	17	1
01-256-0140	Handle	9	9	1	01-506-0910	Decal - Chipper 1820	11	12	1
01-256-0190	Lever	2	13	1	01-506-0910	Decal - Chipper 1820	2	16	1
01-259-0050	Foam Handle	14	17	1	01-506-1230	Decal - Danger	9	13	1
01-259-0050	Foam Handle	7	17	1	01-506-1240	Decal - Door Lock Handle	8	21	1
01-260-1630	Sheave	6	1	1	01-506-1250	Decal - Door Lock Release/ Timer "On-Off"	8	22	1
01-260-1640	Bushing	6	5	1	01-600-0060	Battery Cable	4	*	1
01-260-1650	Bushing	6	2	1	01-600-0160	Battery Cable	4	*	1
01-260-1660	Bushing	6	9	1	01-603-0850	Snap Action Switch	18	15	1
01-260-1670	Sheave	6	4	1	01-603-0860	Solenoid	18	13	1
01-260-2000	Bushing	6	12	1	01-603-0870	Momentary Ground Switch	18	4	1
01-260-2010	Sheave	6	11	1	01-603-0880	Toggle Switch	18	2	1
01-260-2020	Sheave	6	8	1	01-603-0890	Toggle Seal	18	3	1
01-261-0400	Spring	11	8	5	01-603-0900	Dust Cap	18	5	1
01-261-0580	Spring	7	15	2	01-606-0360	Wiring Harness	18	*	1
01-264-0240	Belt	6	14	1	01-607-0010	Tail Light	15	3	1
01-264-0800	Belt	6	7	1	01-607-0020	Tail Light	15	2	1
01-268-0200	Idler Pulley	7	9	1	01-612-0600	Timer	18	9	1
01-269-0300	Lug Nut	15	6	10	02-276-0100	Pintle Hitch	17	5	1
01-269-1510	Tire	15	5	2	18-202-0011	Solenoid Assembly	18	*	1
01-269-1520	Wheel	15	13	2	18-204-0451	Pivot Base	2	2	2
01-270-1350	Rubber Latch	9	11	2	18-204-0461	Roller Motor Spacer	12	3	1
01-270-2130	Fuel Pump	4	15	1	18-204-0591	Chute Flange Spacer	14	4	1
01-270-2260	Engine	4	1	1	18-204-0641	Rotate Stop	2	10	1
01-273-0260	Muffler	4	9	1	18-204-0761	Arm Spacer Top	12	7	6
01-273-0270	Muffler Tube	4	10	1	18-204-0801	Spring Rod	11	7	1
01-273-0280	Muffler Tube	4	11	1	18-204-1061	Side Plate	10	11	1
01-276-0160	Hitch Pin	14	2	1	18-204-1121	Gas Tank Strap	16	4	2
01-280-0220	Gas Tank	16	1	1	18-204-1181	Cutter Bar Bracket	13	4	2
01-283-0320	Blade	3	3	2	18-204-1191	Chute Clamp	14	7	2
01-285-0260	Attaching Parts Kit	15	*	1	18-204-1201	Chute Washer	14	6	2
01-285-0340	Hanger Kit	15	7	1	18-204-1271	Directional Spacer	14	5	6
01-285-0610	Axle	15	4	1	18-204-1391	Shaft Guard	3	19	1
01-288-0020	Hour Meter	7	7	1	18-204-1471	Feed Guard Flat	10	14	1
01-289-0390	Flywheel Cover	4	*	1	18-204-1481	Feed Guard	10	12	4
01-304-0260	Seal Kit	12	*	1	18-204-1541	Roller Lever Pad	10	2	2
01-304-0260	Seal Kit	20	*	1	18-204-1731	Idler Rod	7	19	1
01-304-0420	Hydraulic Motor	12	2	1					

* Not Illustrated

PART NUMBER INDEX(Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
18-204-1781	Gas Tank Strap	16	2	4	18-205-0171	Pivot End Cap	2	3	1
18-204-1821	Deflector	14	10	1	18-205-0182	Wrapper Top	8	9	1
18-204-1921	Corner Guard	10	17	1	18-205-0193	Chute	14	1	1
18-204-1961	Bearing Spacer	3	14	1	18-205-0202	Motor Plate	12	1	1
18-204-1971	Bearing Spacer	3	15	1	18-205-0212	Roller Pivot Arm	11	1	1
18-204-1981	Roller Spacer	11	10	1	18-205-0221	Spring Rod Pivot Bolt	11	5	2
18-204-1991	Roller Spacer	11	11	4	18-205-0233	Drum Cover	8	1	1
18-204-2121	Spacer	5	15	2	18-205-0251	Disc Guard	12	10	1
18-204-2161	Rotate Washer	2	12	1	18-205-0262	Feed Roller	12	16	1
18-204-2171	Key - Sq.	6	3	1	18-205-0271	Cutter Bar Spacer	13	2	1
18-204-2181	Idler Spacer	7	10	2	18-205-0281	Roller Lever	10	1	1
18-204-2231	Roller Guard	12	11	1	18-205-0291	Rod Pivot	5	11	1
18-204-2331	Valve Rod	10	5	1	18-205-0291	Rod Pivot Bolt	7	14	1
18-204-2331	Valve Rod	5	13	1	18-205-0301	Hinge Pin	8	7	1
18-204-2361	Steel Tube	20	12	1	18-205-0311	Wing Nut	14	15	1
18-204-2371	Steel Tube	20	10	1	18-205-0321	Roller Bolt	12	17	1
18-204-2381	Steel Tube	20	8	2	18-205-0332	Belt Guard	9	1	1
18-204-2961	Key - Sq.	6	13	1	18-205-0341	Belt Stop	6	15	1
18-204-3021	Small Bearing Spacer	3	18	1	18-205-0361	Deflector Pin	14	11	1
18-204-3111	Cutter Bar	13	1	1	18-205-0381	Cleanout Lid	8	14	1
18-204-3121	Blade Spacer	3	4	2	18-205-0391	Belt Stop-L.H.	6	16	1
18-204-3131	Blade Spacer	3	*	4	18-205-2211	Bottom Belt Stop	6	17	1
18-204-3521	Door Box Cover	18	6	1	18-205-2391	Pump Lever	5	9	1
18-204-3521	Door Box Cover	8	18	1	18-205-2401	Hyd. Oil Tank	20	15	1
18-204-3551	Solenoid Lock Stop	18	19	1	18-205-2401	Hydraulic Oil Tank	5	1	1
18-204-3601	Door Guide	8	24	1	18-205-3001	Jack	15	8	1
18-204-3611	Door Guide Spacer	8	25	1	18-205-3372	Door Control Box	18	1	1
18-204-3631	Door Seal Plate	8	3	1	18-205-3372	Door Control Box	8	16	1
18-205-0103	Trailer Main Frame	15	1	1	31-004-0941	Hitch Bracket	17	3	1
18-205-0113	Chipper Main Frame	2	1	1	31-005-0172	Hitch	17	1	1
18-205-0123	Chipper Disc	3	1	1	41-004-3181	Hour Meter Bracket	7	6	1
18-205-0131	Idler Handle	7	16	1	41-004-5201	Key - Sq.	12	18	1
18-205-0141	Louvered Cover	9	6	1	48-004-3831	Battery Hold Down	4	14	1
18-205-0152	Idler Pivot Bracket	7	1	1	54-004-1401	Muffler Guard	4	12	1
18-205-0161	Spring Bracket	11	2	1	65-004-2511	Key - Sq.	6	6	1

* Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit which is not reflected in your manual see your TORO Distributor or an Authorized Service Dealer for information and part numbers.

IDENTIFICATION & ORDERING

MODEL AND NUMBERS

The COMMERCIAL CHIPPER 1820 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the chipper housing. In any correspondence concerning the 1820, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from your TORO Distributor or an Authorized Service Dealer, supply the following information:

1. Model and serial number of the 1820.
2. Part number description and the quantity of part (s) desired.

NOTE: Do not order by reference number if a parts catalog is being used: use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Main Frame Mounting	2	Feed Roller	12
Chipper Disc Assembly	3	Cutter Bar	13
Engine Mounting	4	Chute Assembly	14
Hydraulic Oil Tank Assembly	5	Trailer Assembly	15
Drive Belts	6	Gas Tank Assembly	16
Idler Assembly	7	Hitch Assembly	17
Drum Cover	8	Door Lock Box Assembly	18
Belt Guard & Louvered Cover	9	Door Lock Box Wiring Diagram	19
Roller Lever & Feed Table	10	Hydraulic Schematic	20
Roller Pivot Arm	11	Part Number Index	21 - 23