



Form No. 3433-627 Rev B

**Count on it.**

# Parts Catalog

## TimeCutter® MX 4275

### Riding Mower

Model No. 75745—Serial No. 400000000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                                   |    |
|-------------------------------------------------------------------|----|
| Frame Assembly . . . . .                                          | 4  |
| Deck Lift Assembly . . . . .                                      | 6  |
| Tire and Caster Assembly . . . . .                                | 8  |
| Traction Drive Assembly . . . . .                                 | 10 |
| LH Hydro Transmission Assembly No. 139-7450 . . . . .             | 12 |
| RH Hydro Transmission Assembly No. 139-7451 . . . . .             | 14 |
| Brake Assembly . . . . .                                          | 16 |
| Rear Tire Assembly . . . . .                                      | 18 |
| Motion Control Assembly . . . . .                                 | 20 |
| Engine and Muffler Assembly . . . . .                             | 22 |
| Fuel System Assembly with Non-Canister Style Air Filter . . . . . | 24 |
| Carburetor Assembly . . . . .                                     | 26 |
| Air Intake and Filtration Assembly . . . . .                      | 28 |
| Ignition and Cooling Fan . . . . .                                | 30 |
| Crankcase and Crankshaft Assembly . . . . .                       | 32 |
| Governor Control Assembly . . . . .                               | 34 |
| Piston and Cylinder Head Assembly . . . . .                       | 36 |
| Blower Housing Assembly . . . . .                                 | 38 |
| Gasket and Seal Kit . . . . .                                     | 40 |
| Body Styling and Fuel Pod Assembly . . . . .                      | 42 |
| Electrical Assembly . . . . .                                     | 44 |
| 42in Deck and Decal Assembly . . . . .                            | 46 |
| Frame Decal Assembly . . . . .                                    | 48 |
| Seat Pan Assembly . . . . .                                       | 50 |
| Seat Assembly No. 140-5044 . . . . .                              | 52 |
| Clutch Assembly . . . . .                                         | 54 |
| Attachments and Accessories . . . . .                             | 56 |

# Frame Assembly

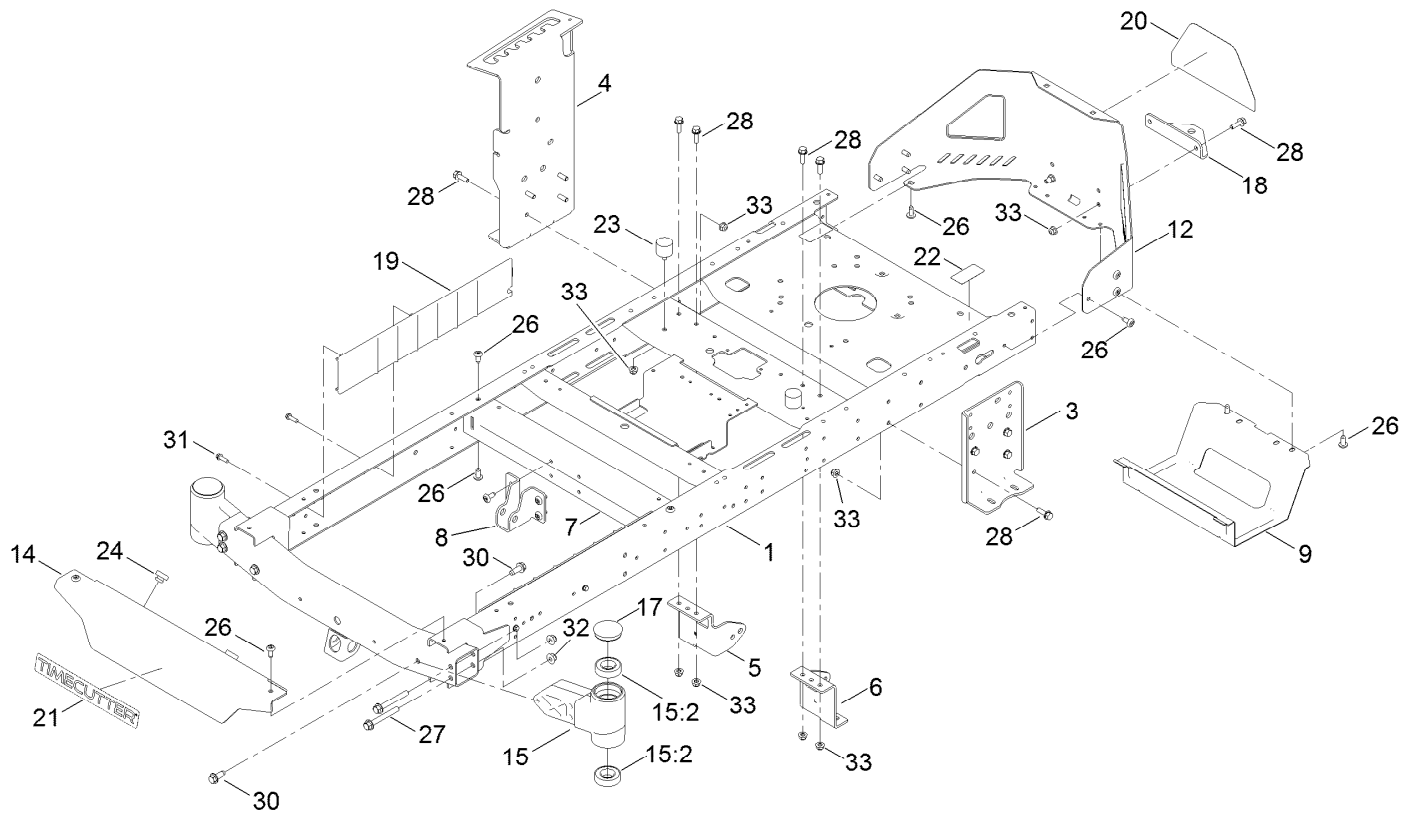

## Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 137-9820-01        | 1           | Frame Assembly                 | 18          | 117-1232-03        | 1           | Bracket-Hitch      |
| 3           | 138-7520-01        | 1           | Plate-Mount, Hydro             | 19          | 138-7516           | 2           | Guard-Rail         |
| 4           | 139-2352-01        | 1           | Plate-Mount Hydro, RH          | 20          | 139-5890           | 1           | Decal-Timecutter   |
| 5           | 137-7020-01        | 1           | Mount-Hydro, Front (Right)     | 21          | 139-2387           | 1           | Decal-Timecutter   |
| 6           | 139-3211-01        | 1           | Mount-Hydro, Front (Left)      | 22          | 121-2989           | 2           | Decal-Bypass       |
| 7           | 138-2527-01        | 1           | Brace-Cross, Lower             | 23          | 137-4803           | 2           | Bumper-Rubber      |
| 8           | 139-3260-01        | 1           | Bracket-Mount Damper,<br>Lower | 24          | 140-3460           | 2           | Bumper-Rubber      |
| 9           | 138-0867-03        | 1           | Guard-Muffler                  | 26          | 138-9753           | 20          | Screw              |
| 12          | 138-9820-03        | 1           | Guard-Engine                   | 27          | 139-2429           | 4           | Screw-HHF          |
| 14          | 138-7596-01        | 1           | Footrest                       | 28          | 3234-29            | 14          | Screw-HHF          |
| 15          | 140-2098           | 2           | Axle Stub ASM                  | 30          | 139-2428           | 4           | Screw-HWH          |
| 15:2        | 109-3678           | 2           | Bearing-Ball                   | 31          | 46-8091            | 4           | Screw-HWH          |
| 17          | 138-7200           | 2           | Cap-Grease                     | 32          | 139-2430           | 4           | Nut-HF, NI         |
|             |                    |             |                                | 33          | 104-8300           | 16          | Nut-HF, NI         |


# Deck Lift Assembly



## Deck Lift Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 137-7093-03        | 1           | Deck Lift ASM           | 15          | 138-9753           | 5           | Screw              |
| 2           | 138-6021           | 2           | Bracket-Pivot, Decklift | 16          | 3234-29            | 1           | Screw-HHF          |
| 3           | 137-9844           | 1           | LH Arm ASM              | 18          | 137-9847           | 2           | Screw-Shoulder     |
| 4           | 137-9846           | 1           | RH Arm ASM              | 20          | 93-8806            | 2           | Washer-Hardened    |
| 5           | 139-2350-01        | 1           | Bracket-HOC             | 21          | 3256-26            | 7           | Washer-Flat        |
| 6           | 138-2564           | 2           | Plate-Adjustment, HOC   | 23          | 104-8300           | 1           | Nut-HF, NI         |
| 7           | 137-7087-03        | 1           | Lever-Lift              | 24          | 104-8301           | 2           | Nut-HF, NI         |
| 8           | 138-6050           | 1           | Rod-Mount, Deck         | 25          | 3296-19            | 1           | Nut-Hex            |
| 9           | 119-8810           | 1           | Pin-Pivot               | 26          | 139-2392           | 1           | Decal-HOC          |
| 14          | 1-806005           | 7           | Pin-Cotter              | 27          | 1-633268           | 1           | Grip-Lever         |

# Tire and Caster Assembly

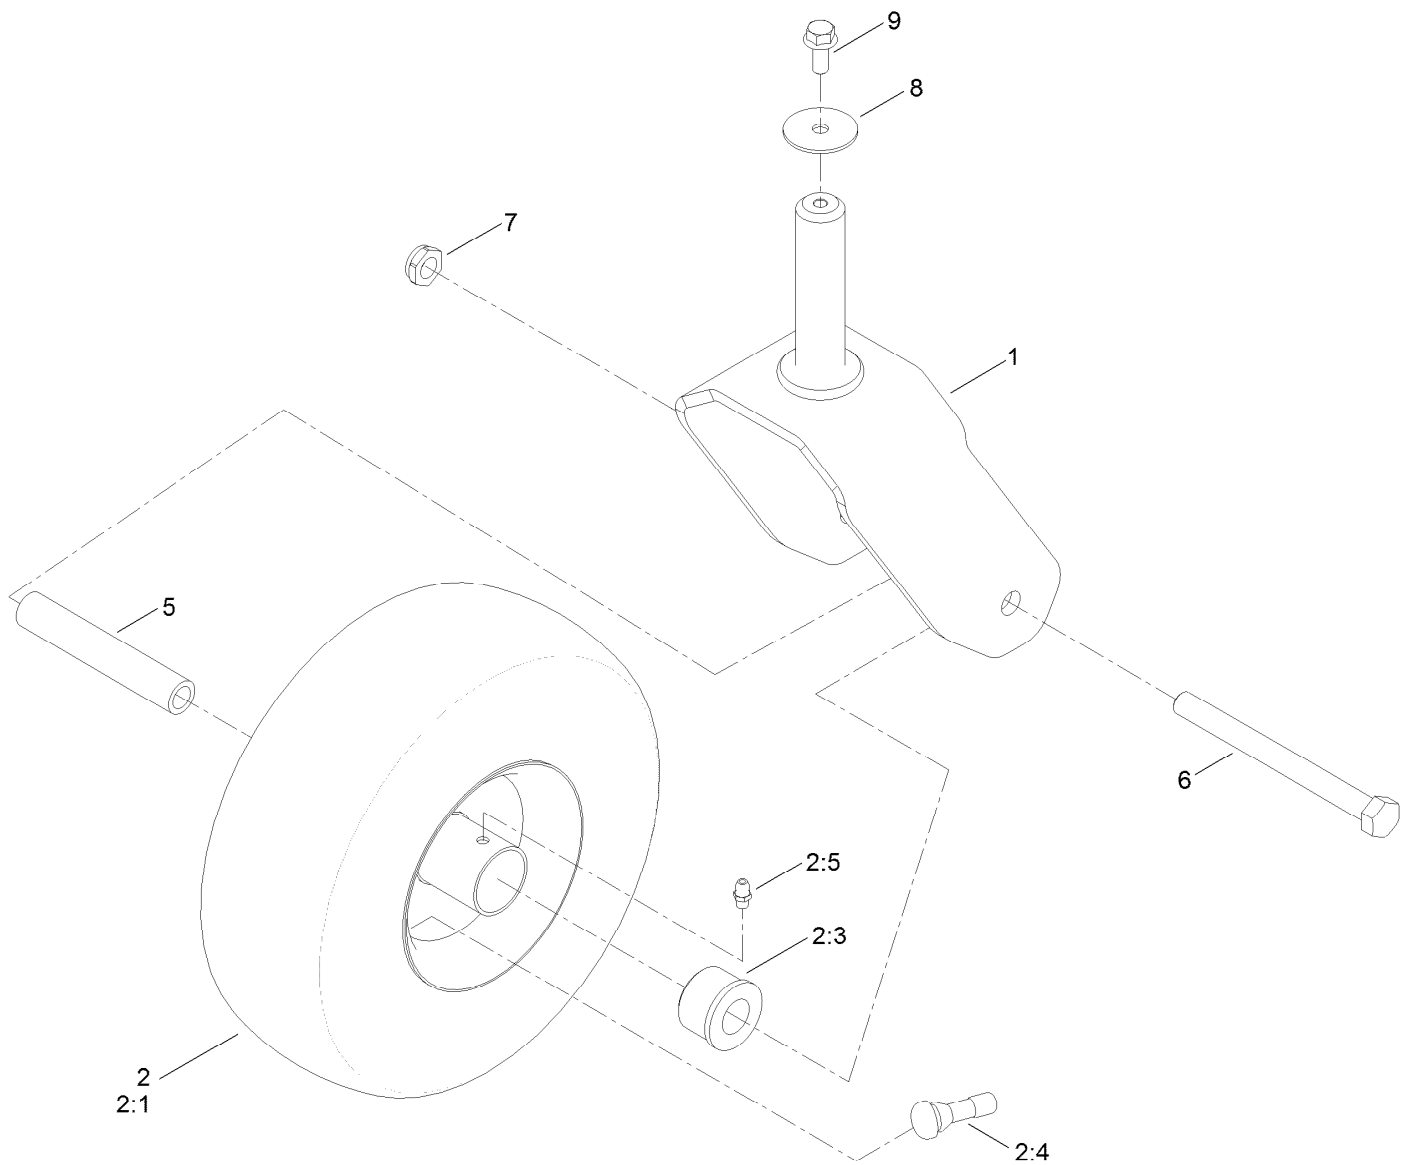

## Tire and Caster Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 139-3274-01        | 2           | Fork ASM           | 2:99        | 105-0844           | 1           | Tube-Inner●■       |
| 2           | 139-5842           | 2           | Tire ASM           | 5           | 138-7240           | 2           | Bushing-Spanner    |
| 2:1         | 140-2736           | 1           | Tire               | 6           | 325-22             | 2           | Screw-HH           |
| 2:3         | 114-1640           | 2           | Bushing-Flange     | 7           | 3296-45            | 2           | Nut-Hex            |
| 2:4         | 232-27             | 1           | Stem-Valve         | 8           | 3256-68            | 2           | Washer-Flat        |
| 2:5         | 302-5              | 1           | Fitting-Grease     | 9           | 3234-47            | 2           | Screw-HHF          |

● Not illustrated

■ Optional Equipment


# Traction Drive Assembly



## Traction Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 139-7450           | 1           | LH Hydro Transaxle ASM | 14          | 3230-8             | 1           | Screw-CARR         |
| 2           | 139-7451           | 1           | RH Hydro Transaxle ASM | 15          | 115-1794           | 1           | Screw-HHF          |
| 3           | 138-2571-03        | 1           | Crossplate-Hydro       | 16          | 138-7590           | 4           | Screw-HHF          |
| 4           | 139-2399           | 1           | V-Belt                 | 17          | 322-11             | 4           | Screw-HH           |
| 5           | 138-9809           | 1           | Spacer                 | 18          | 324-8              | 2           | Screw-HH           |
| 6           | 138-7276           | 1           | Arm-Idler              | 19          | 324-10             | 4           | Screw-HH           |
| 7           | 138-7277           | 1           | Spacer-Arm, Idler      | 21          | 5-4460             | 1           | Washer-Pivot       |
| 8           | 68-0030            | 1           | Idler                  | 22          | 104-8300           | 10          | Nut-HF, NI         |
| 9           | 138-7597           | 1           | Pulley-Idler, Flat     | 24          | 3296-48            | 6           | Nut-Hex            |
| 10          | 137-7040           | 1           | Spring-Return, Pedal   | 25          | 242-50             | 8           | Nut-Lug            |
| 11          | 138-7245           | 1           | Rod-Bypass, RH         | 32          | 3256-25            | 6           | Washer-Flat        |
| 12          | 138-7243           | 1           | Rod-Bypass, LH         | 33          | 3256-23            | 2           | Washer-Plain       |
| 13          | 3290-307           | 2           | Pin-Cotter             | 34          | 119-8952           | 2           | Washer             |

# LH Hydro Transmission Assembly No. 139-7450

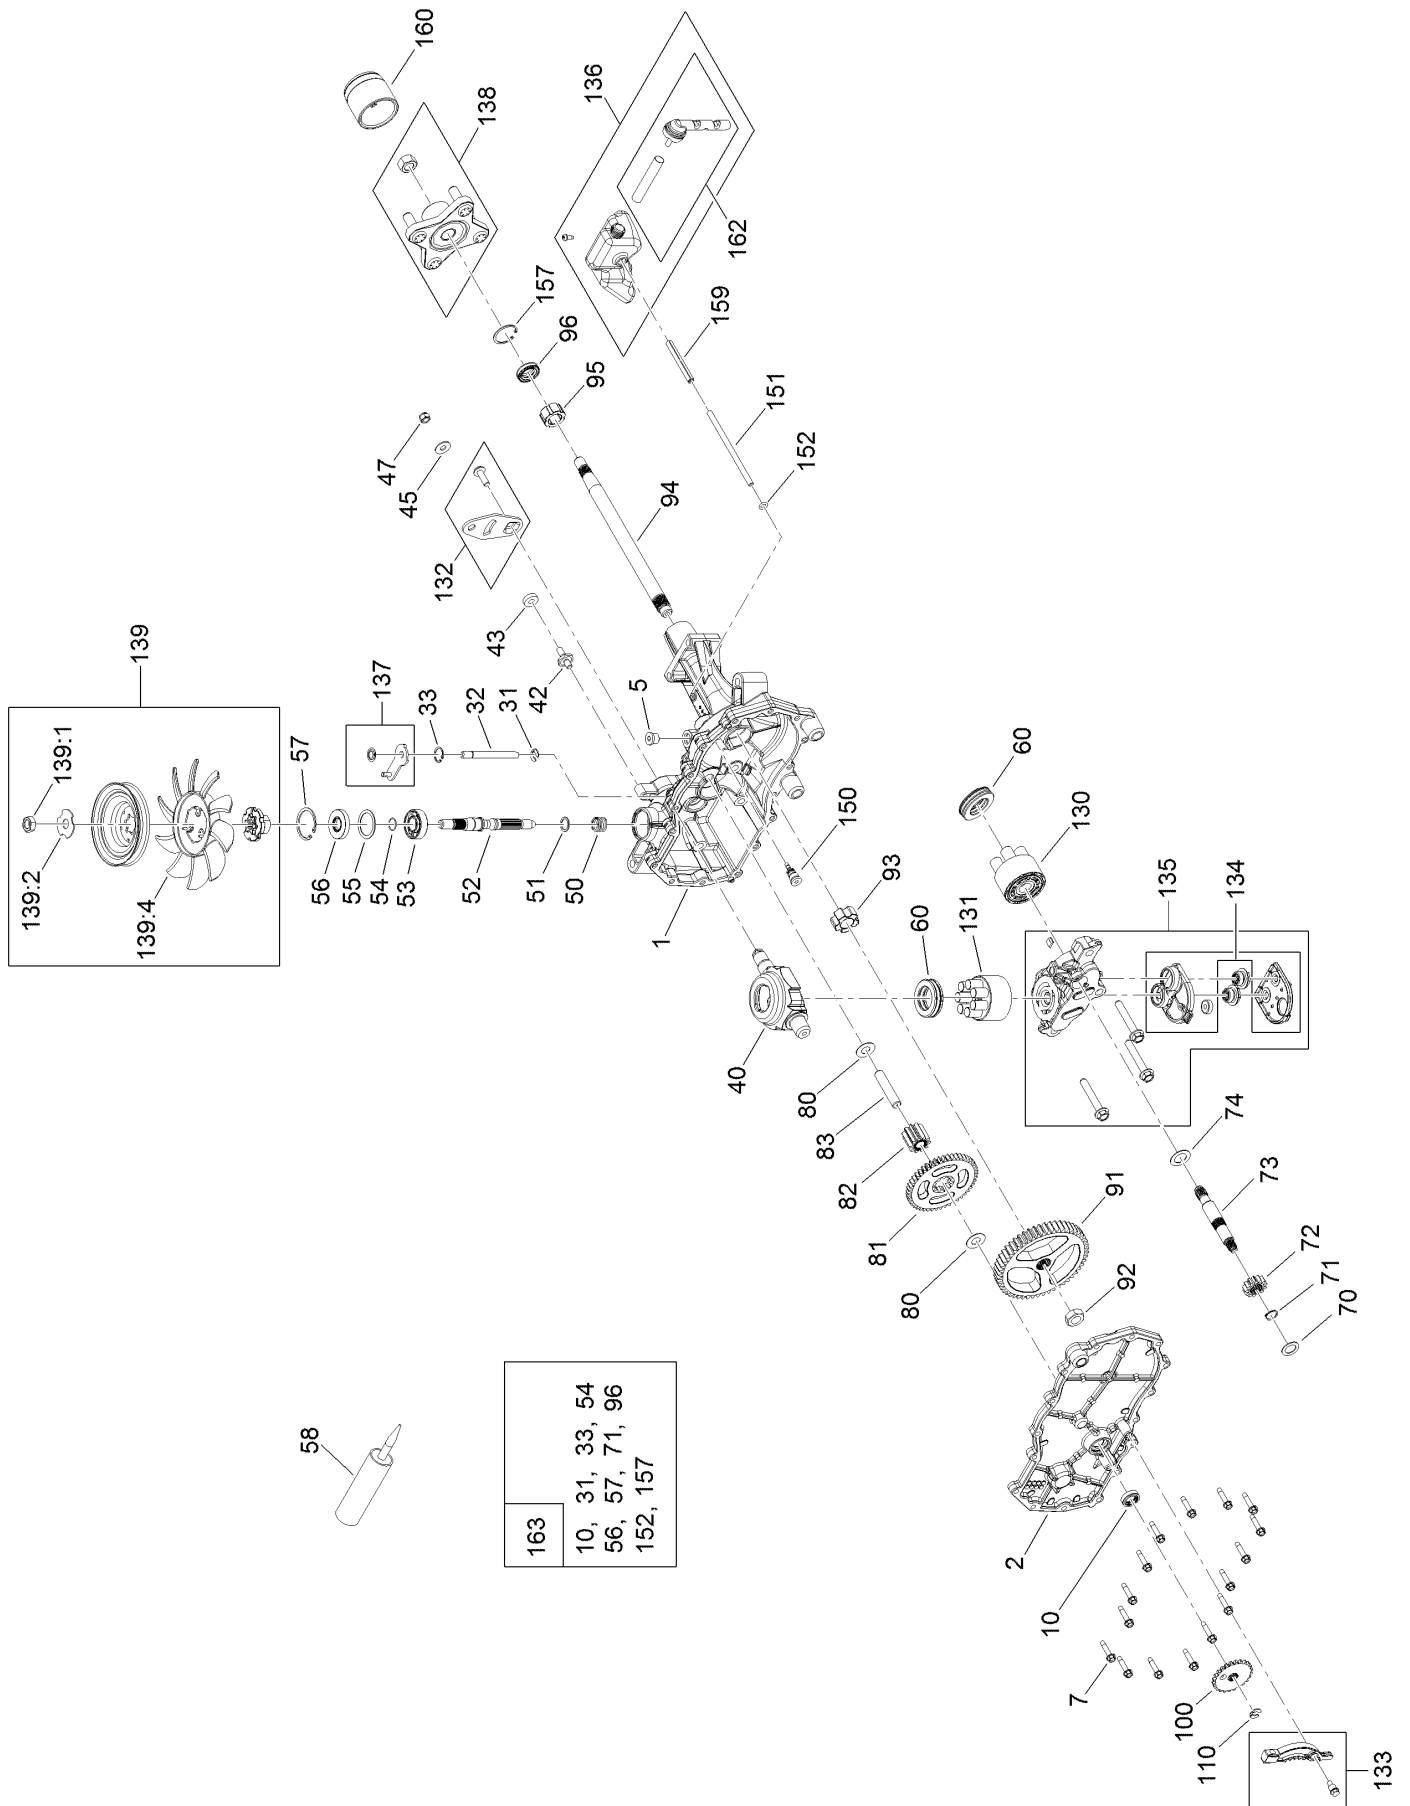


# LH Hydro Transmission Assembly No. 139-7450 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 120-5532           | 1           | Main Housing ASM         | 83          | 104-5329           | 1           | Pin-Jackshaft             |
| 2           | 120-5534           | 1           | Housing Side Kit         | 91          | 120-5539           | 1           | Gear-Bull                 |
| 5           | 104-2189           | 1           | Plug-Thread, Straight    | 92          | 104-2142           | 1           | Nut-HJ                    |
| 7           | 117-5359           | 16          | Screw-HHF                | 93          | 115-8314           | 1           | Bushing-Inboard           |
| 10          |                    | 1           | Seal-Lip ●               | 94          | 120-5540           | 1           | Shaft-Axle                |
| 31          | 106-8677           | 1           | Ring-Retaining, External | 95          | 120-5541           | 1           | Bearing-Sleeve            |
| 32          | 106-8678           | 1           | Rod-Bypass               | 96          | 120-5542           | 1           | Seal-Lip                  |
| 33          | 106-8679           | 1           | Ring-Retaining, Internal | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 40          | 104-5304           | 1           | Swashplate-Trunnion      | 110         | 106-8677           | 1           | Ring-Retaining, External  |
| 42          | 104-2116           | 1           | Stud                     | 130         | 103-2666           | 1           | Cylinder Block Kit        |
| 43          | 112-9853           | 1           | Puck-Friction            | 131         | 110-8561           | 1           | Pump Block ASM            |
| 45          | 114-8491           | 1           | Washer                   | 132         | 117-5362           | 1           | Control Arm Kit           |
| 47          | 105-1872           | 1           | Nut                      | 133         | 106-8688           | 1           | Brake Arm Kit             |
| 50          | 133-1793           | 1           | Spring-Block             | 134         | 112-9861           | 1           | Center Section Filter Kit |
| 51          | 120-5538           | 1           | Washer                   | 135         | 114-1634           | 1           | Filter Kit                |
| 52          | 104-5306           | 1           | Shaft-Input              | 136         | 121-5730           | 1           | RH Expansion Tank Kit     |
| 53          | 104-5311           | 1           | Bearing-Ball             | 137         | 120-5549           | 1           | Bypass Kit                |
| 54          | 104-5307           | 1           | Ring-Retaining           | 138         | 121-5731           | 1           | Hub Kit                   |
| 55          | 104-5308           | 1           | Spacer                   | 139         | 135-7349           | 1           | Fan And Pulley Kit        |
| 56          | 104-5310           | 1           | Seal-Lip                 | 139:1       | 116-9714           | 1           | Nut-HJ                    |
| 57          | 104-5309           | 1           | Ring-Retaining           | 139:2       | 116-9708           | 1           | Washer-Slotted            |
| 58          | 104-2147           | 1           | Sealant                  | 139:4       | 135-7364           | 1           | Fan 7.0 X 10 Blade        |
| 60          | 94-6922            | 2           | Bearing-Thrust           | 150         | 104-5349           | 1           | Fitting-SAE               |
| 70          | 104-5339           | 1           | Washer-Flat              | 151         | 115-8302           | 1           | Hose                      |
| 71          | 104-5340           | 1           | Ring-Retaining           | 152         | 104-5361           | 1           | O-Ring                    |
| 72          | 104-5316           | 1           | Gear-Pinnion, 13T        | 157         | 120-7102           | 1           | Ring-Retaining            |
| 73          | 106-8683           | 1           | Shaft-Motor              | 159         | 121-5728           | 1           | Case-Tube                 |
| 74          | 104-5360           | 1           | Washer                   | 160         | 125-0041           | 1           | Cap-Axle                  |
| 80          | 119-5541           | 1           | Washer                   | 162         | 139-3278           | 1           | Breather ASM Kit          |
| 81          | 104-5317           | 1           | Gear-10T/48T             | 163         | 120-7103           | 1           | Seal And Ring Kit         |
| 82          | 104-5318           | 1           | Gear-Jackshaft, 10T      |             |                    |             |                           |

● Not serviced separately

# RH Hydro Transmission Assembly No. 139-7451

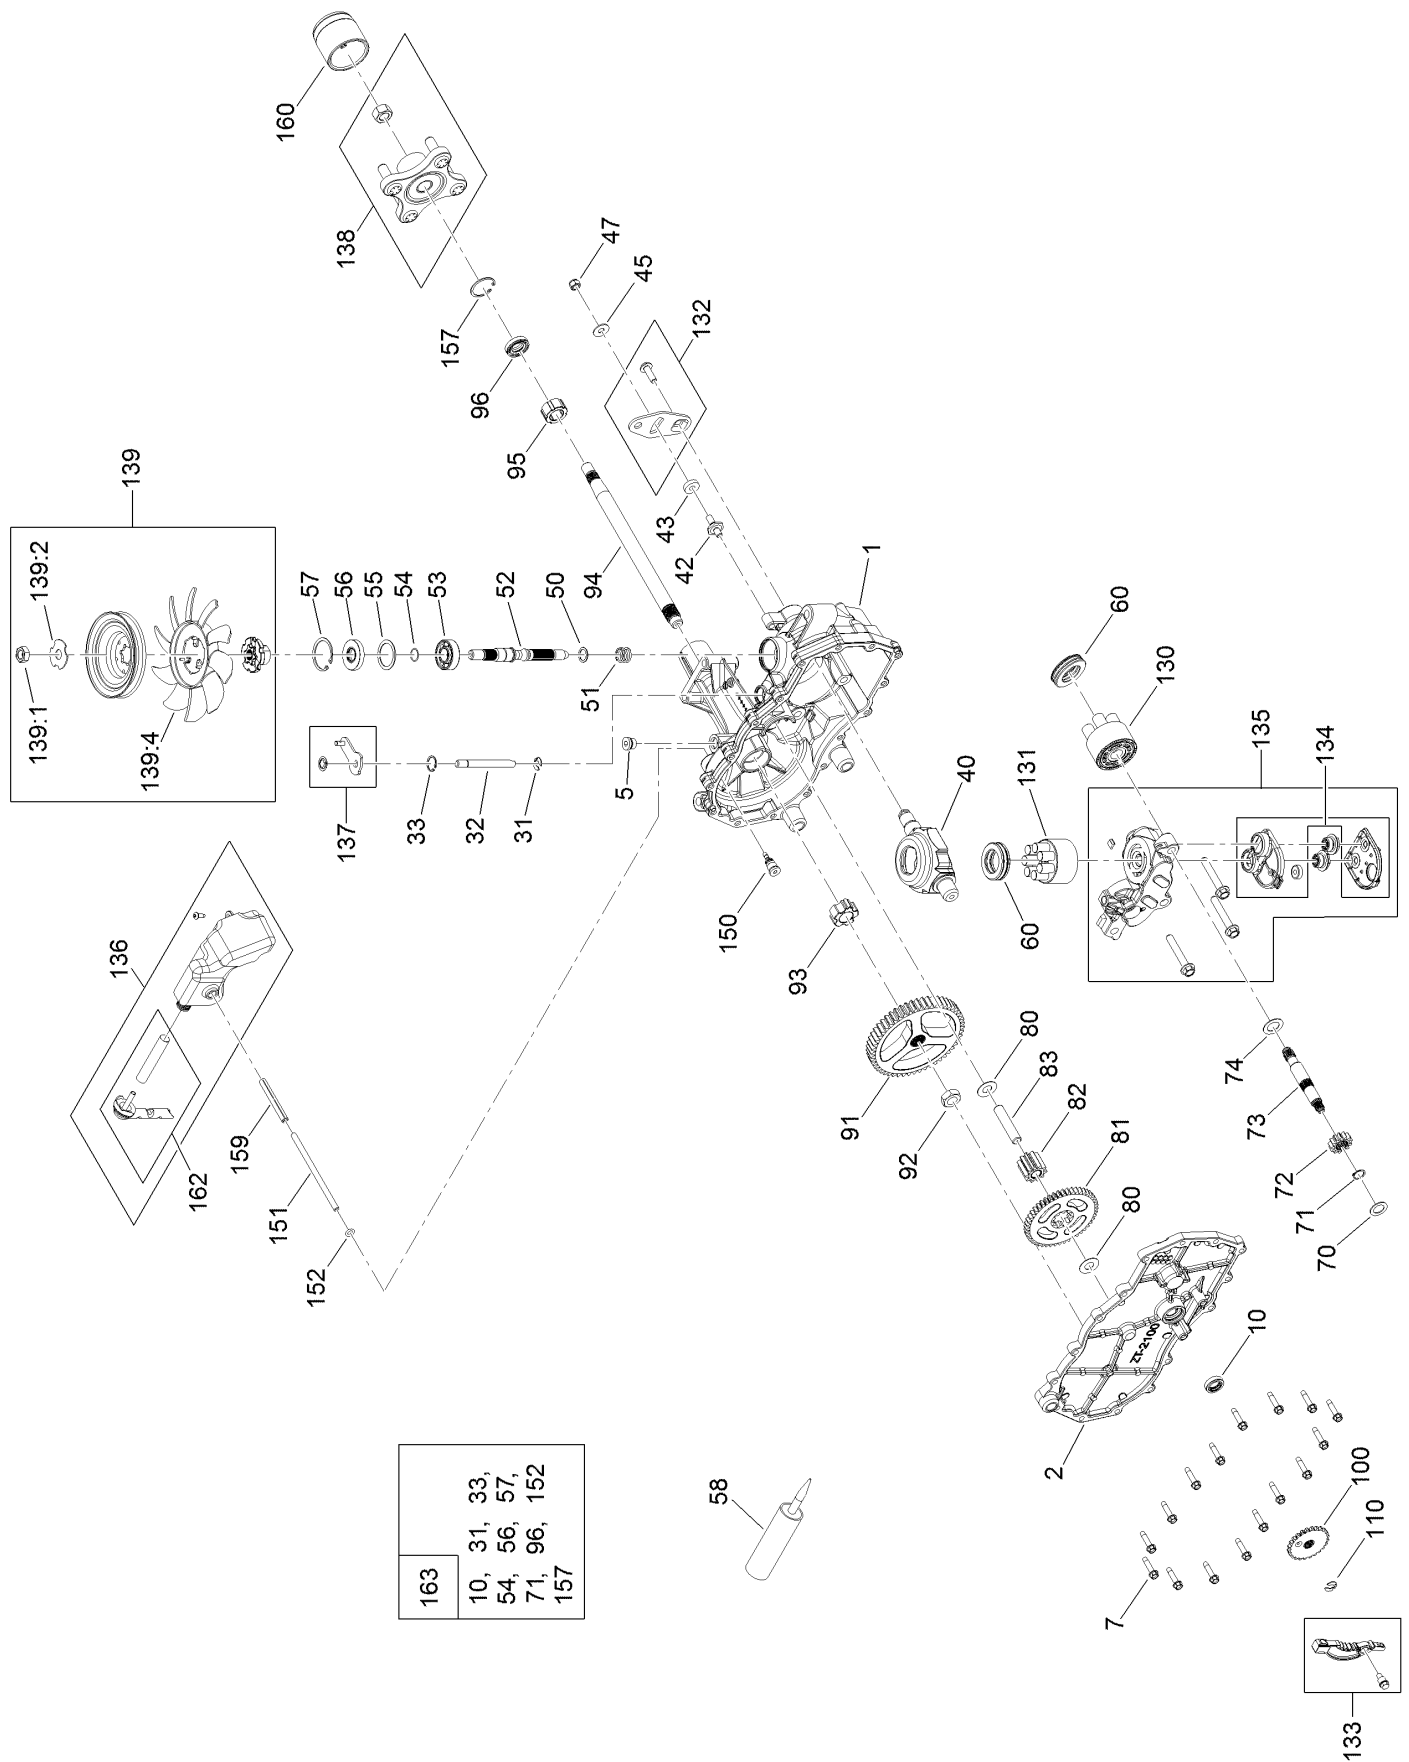

# RH Hydro Transmission Assembly No. 139-7451 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 120-5531           | 1           | Main Housing ASM         | 83          | 104-5329           | 1           | Pin-Jackshaft             |
| 2           | 120-5533           | 1           | Housing Side Kit         | 91          | 120-5539           | 1           | Gear-Bull                 |
| 5           | 104-2189           | 1           | Plug-Thread, Straight    | 92          | 104-2142           | 1           | Nut-HJ                    |
| 7           | 117-5359           | 16          | Screw-HHF                | 93          | 115-8314           | 1           | Bushing-Inboard           |
| 10          |                    | 1           | Seal-Lip ●               | 94          | 120-5540           | 1           | Shaft-Axle                |
| 31          | 106-8677           | 2           | Ring-Retaining, External | 95          | 120-5541           | 1           | Bearing-Sleeve            |
| 32          | 106-8678           | 1           | Rod-Bypass               | 96          | 120-5542           | 1           | Seal-Lip                  |
| 33          | 106-8679           | 1           | Ring-Retaining, Internal | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 40          | 104-5304           | 1           | Swashplate-Trunnion      | 110         | 106-8677           | 1           | Ring-Retaining, External  |
| 42          | 104-2116           | 1           | Stud                     | 130         | 103-2666           | 1           | Cylinder Block Kit        |
| 43          | 112-9853           | 1           | Puck-Friction            | 131         | 110-8561           | 1           | Pump Block ASM            |
| 45          | 114-8491           | 1           | Washer                   | 132         | 117-5362           | 1           | Control Arm Kit           |
| 47          | 105-1872           | 1           | Nut                      | 133         | 106-8688           | 1           | Brake Arm Kit             |
| 50          | 120-5538           | 1           | Washer                   | 134         | 112-9862           | 1           | Center Section Filter Kit |
| 51          | 133-1793           | 1           | Spring-Block             | 135         | 114-1634           | 1           | Filter Kit                |
| 52          | 104-5306           | 1           | Shaft-Input              | 136         | 121-5735           | 1           | LH Expansion Tank Kit     |
| 53          | 104-5311           | 1           | Bearing-Ball             | 137         | 107-2489           | 1           | Bypass Arm Kit            |
| 54          | 104-5307           | 1           | Ring-Retaining           | 138         | 121-5731           | 1           | Hub Kit                   |
| 55          | 104-5308           | 1           | Spacer                   | 139         | 135-7349           | 1           | Fan And Pulley Kit        |
| 56          | 104-5310           | 1           | Seal-Lip                 | 139:1       | 116-9714           | 1           | Nut-HJ                    |
| 57          | 104-5309           | 1           | Ring-Retaining           | 139:2       | 116-9708           | 1           | Washer-Slotted            |
| 58          | 104-2147           | 1           | Sealant                  | 139:4       | 135-7364           | 1           | Fan 7.0 X 10 Blade        |
| 60          | 94-6922            | 2           | Bearing-Thrust           | 150         | 104-5349           | 1           | Fitting-SAE               |
| 70          | 104-5339           | 1           | Washer-Flat              | 151         | 115-8302           | 1           | Hose                      |
| 71          | 104-5340           | 1           | Ring-Retaining           | 152         | 104-5361           | 1           | O-Ring                    |
| 72          | 104-5316           | 1           | Gear-Pinnion, 13T        | 157         | 120-7102           | 1           | Ring-Retaining            |
| 73          | 106-8683           | 1           | Shaft-Motor              | 159         | 121-5728           | 1           | Case-Tube                 |
| 74          | 104-5360           | 1           | Washer                   | 160         | 125-0041           | 1           | Cap-Axle                  |
| 80          | 119-5541           | 1           | Washer                   | 162         | 139-3278           | 1           | Breather ASM Kit          |
| 81          | 104-5317           | 1           | Gear-10T/48T             | 163         | 120-7103           | 1           | Seal And Ring Kit         |
| 82          | 104-5318           | 1           | Gear-Jackshaft, 10T      |             |                    |             |                           |

● Not serviced separately

# Brake Assembly



## Brake Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 138-2514           | 1           | Brake Box ASM        | 7           | 3290-307           | 2           | Pin-Cotter         |
| 2           | 133-9284-03        | 1           | Bracket-Mount, Brake | 8           | 32144-36           | 4           | Screw-PPH          |
| 3           | 138-2591           | 1           | Rod-Brake, LH        | 9           | 32144-4            | 2           | Screw-HWH          |
| 4           | 138-2592           | 1           | Rod-Brake, RH        | 10          | 119-8952           | 6           | Washer             |
| 5           | 117-1169           | 4           | Spring-Compression   | 11          | 3296-42            | 2           | Nut-Lock, NI       |

# Rear Tire Assembly




## Rear Tire Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 139-5846           | 2           | Tire ASM           |
| 1:1         | 140-2729           | 1           | Tire               |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1:3         | 232-27             | 1           | Stem-Valve         |
| 1:99        | 107-2491           | 1           | Tube-Tire ●        |

● Not illustrated


# Motion Control Assembly

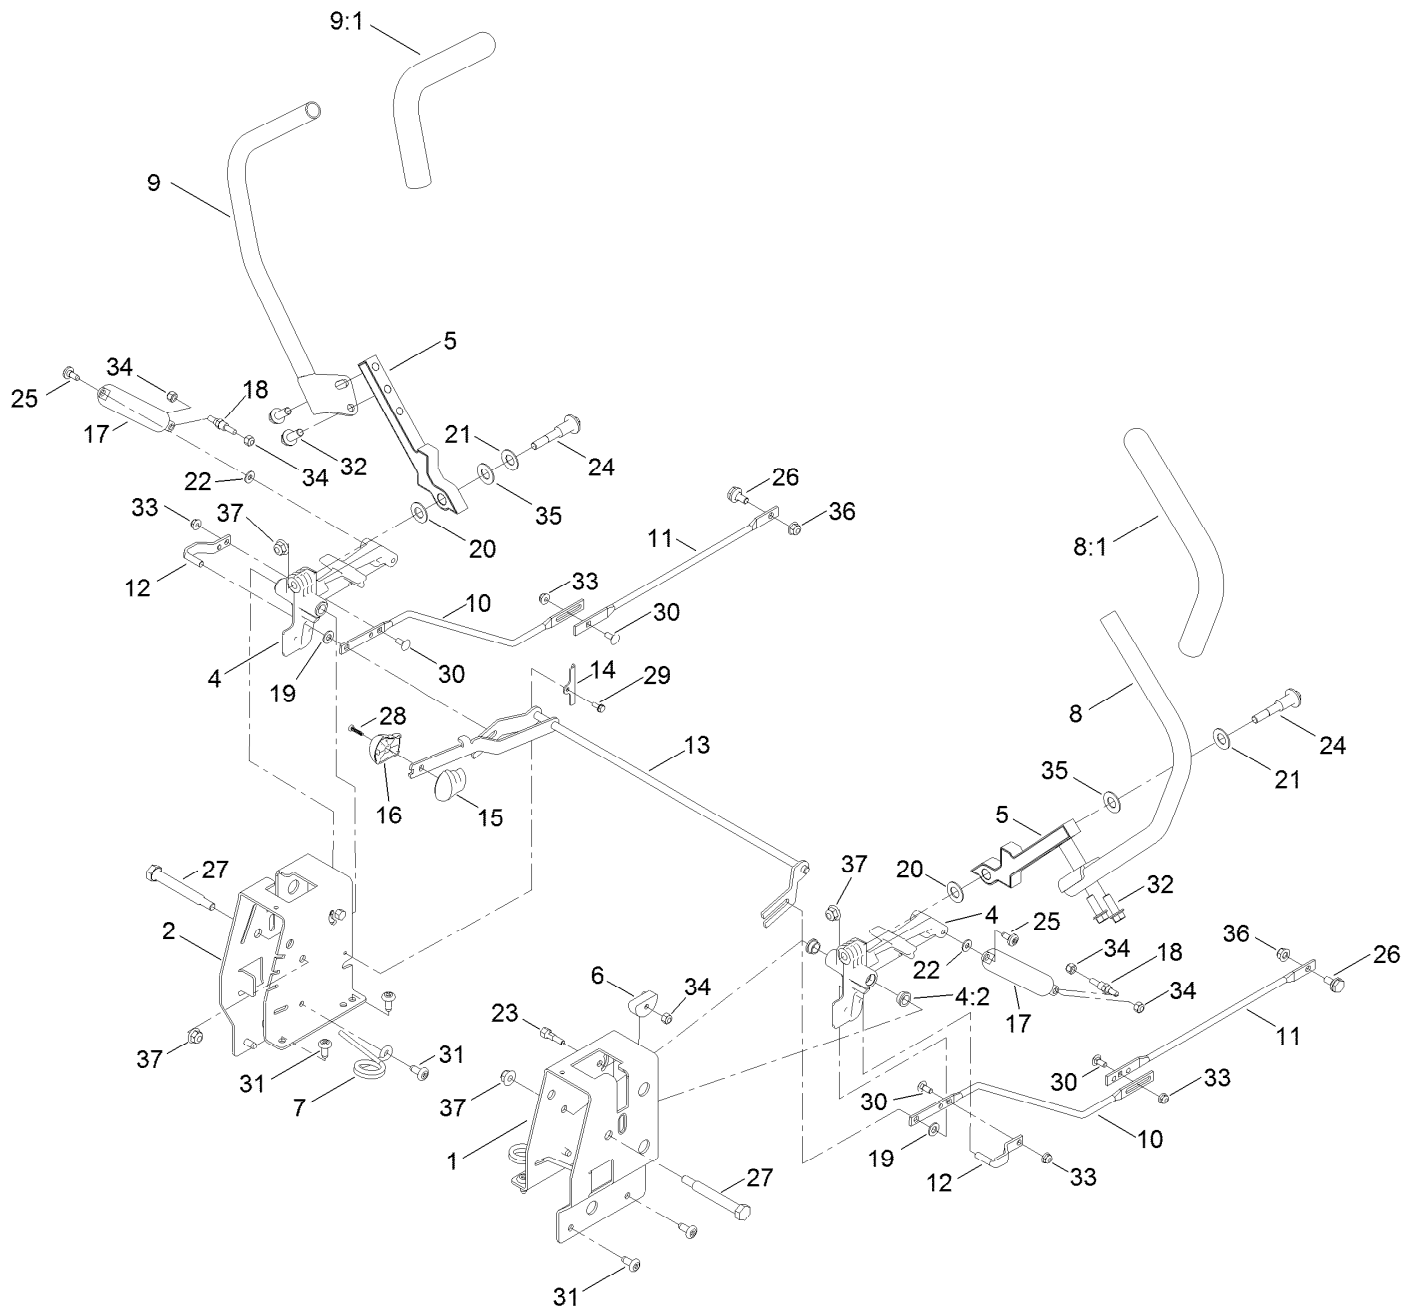

## Motion Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 138-7598-03        | 1           | Plate-Control Box, LH | 19          | 93-6079            | 2           | Spacer-Nylon          |
| 2           | 138-7599-03        | 1           | Plate-Control Box, RH | 20          | 120-2273           | 2           | Washer-Nylon          |
| 4           | 119-3470           | 2           | Actuator Arm ASM      | 21          | 119-8925           | 2           | Washer-Belleville     |
| 4:2         | 256-156            | 2           | Bushing-Flange        | 22          | 119-8952           | 2           | Washer                |
| 5           | 133-9299-05        | 2           | Arm-Control           | 23          | 139-5811           | 2           | Bolt-Pivot, Eccentric |
| 6           | 139-5803           | 2           | Eccentric             | 24          | 117-1198           | 2           | Bolt-Pivot            |
| 7           | 138-7539           | 2           | Spring-Torsion        | 25          | 120-7950           | 2           | Screw-Torx            |
| 8           | 133-7055           | 1           | Handle-Control, LH    | 26          | 37-8771            | 2           | Bolt-Shoulder, HF     |
| 8:1         | 121-0726           | 1           | Grip                  | 27          | 115-5099           | 2           | Bolt-Pivot            |
| 9           | 133-7057           | 1           | Handle-Control, RH    | 28          | 94-4496            | 1           | Screw-PPH             |
| 9:1         | 121-0726           | 1           | Grip                  | 29          | 32144-1            | 2           | Screw-Taptite         |
| 10          | 138-2580           | 2           | Rod-Hydro, Front      | 30          | 3229-11            | 4           | Screw-CARR            |
| 11          | 138-2579           | 2           | Rod-Hydro, Rear       | 31          | 138-9753           | 10          | Screw                 |
| 12          | 121-1753           | 2           | Pin-Rod, Hydro        | 32          | 3234-42            | 4           | Screw-HHF             |
| 13          | 138-9750           | 1           | Speed Control ASM     | 33          | 104-7201           | 4           | Nut-HF, NI            |
| 14          | 138-7541           | 2           | Plate-Retainer        | 34          | 3296-42            | 6           | Nut-Lock, NI          |
| 15          | 132-9368           | 1           | Knob-RH               | 35          | 117-1240           | 2           | Washer                |
| 16          | 132-9369           | 1           | Knob-LH               | 36          | 104-8300           | 2           | Nut-HF, NI            |
| 17          | 132-6853           | 2           | Damper-Non Cavitating | 37          | 104-8301           | 4           | Nut-HF, NI            |
| 18          | 138-7215           | 2           | Stud-Damper           |             |                    |             |                       |

# Engine and Muffler Assembly

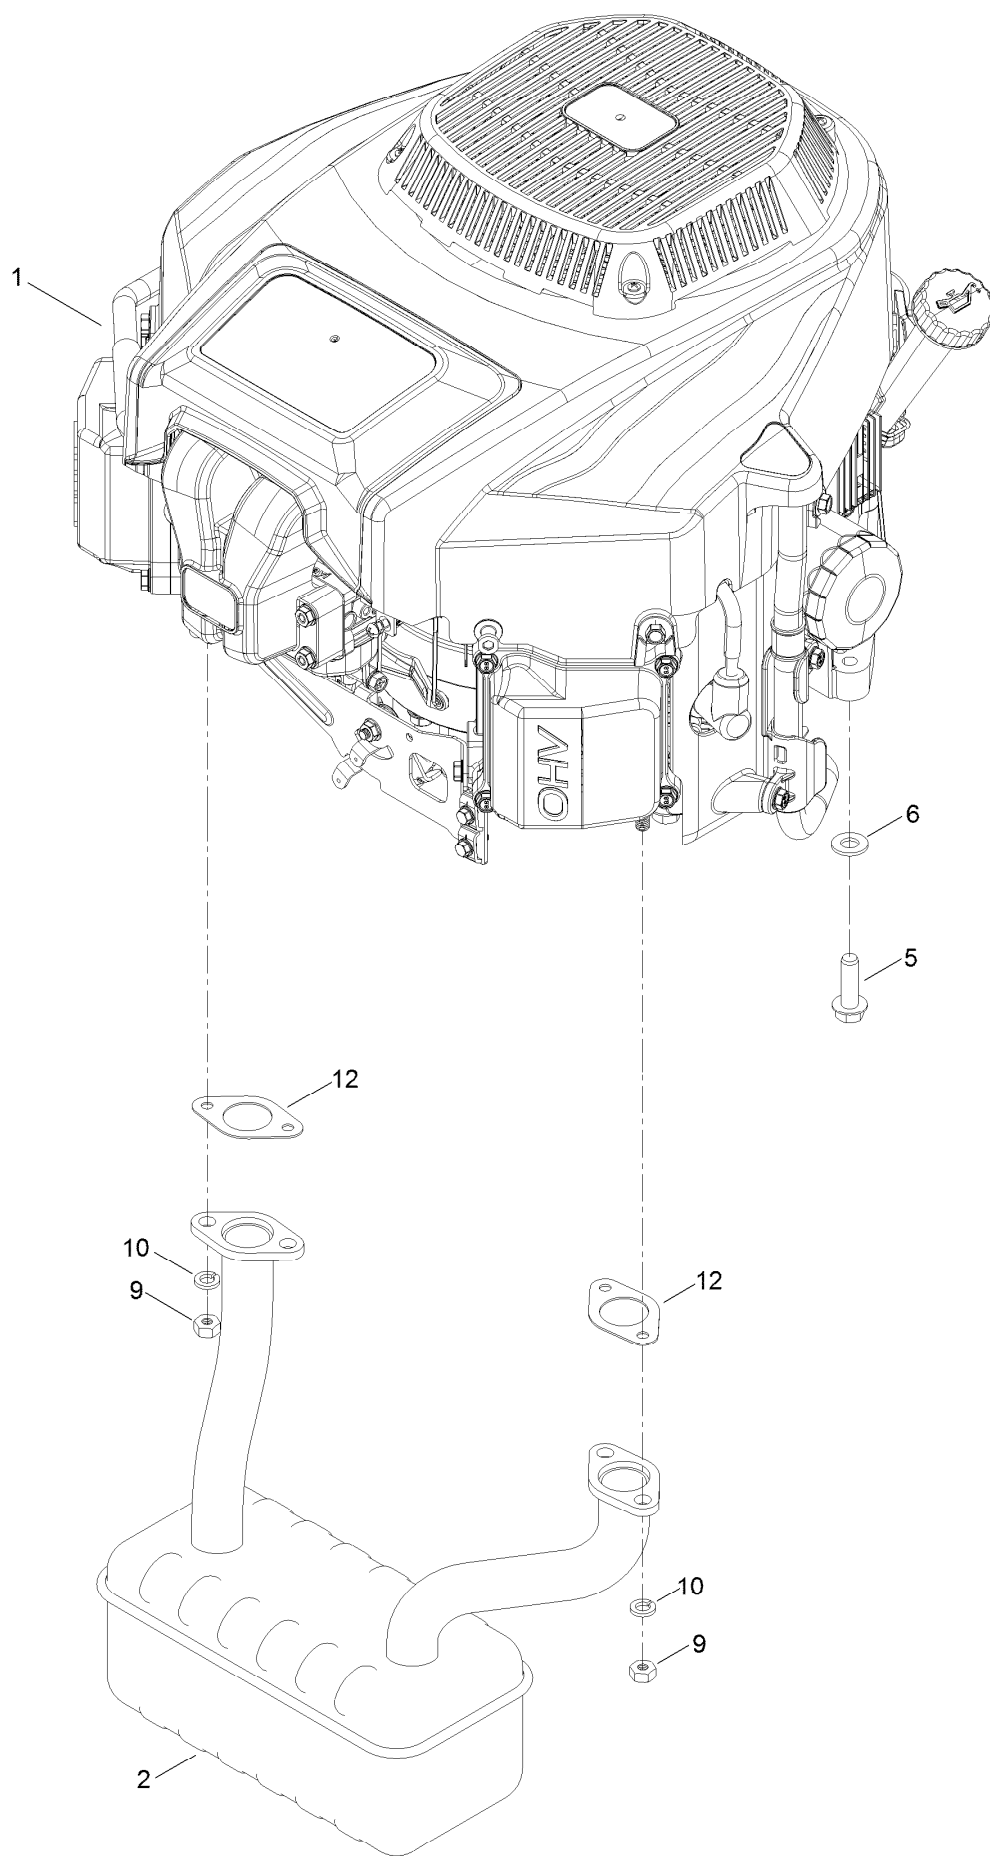


## Engine and Muffler Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 139-0603           | 1           | Engine-2P77F       |
| 2           | 139-5865           | 1           | Muffler            |
| 5           | 32144-109          | 4           | Screw-Thd          |
| 6           | 3256-24            | 3           | Washer-Flat        |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 9           | 121-0199           | 4           | Nut-HH             |
| 10          | 127-9279           | 4           | Washer-Lock, Split |
| 12          | 120-4317           | 2           | Gasket-Exhaust     |

## Fuel System Assembly with Non-Canister Style Air Filter

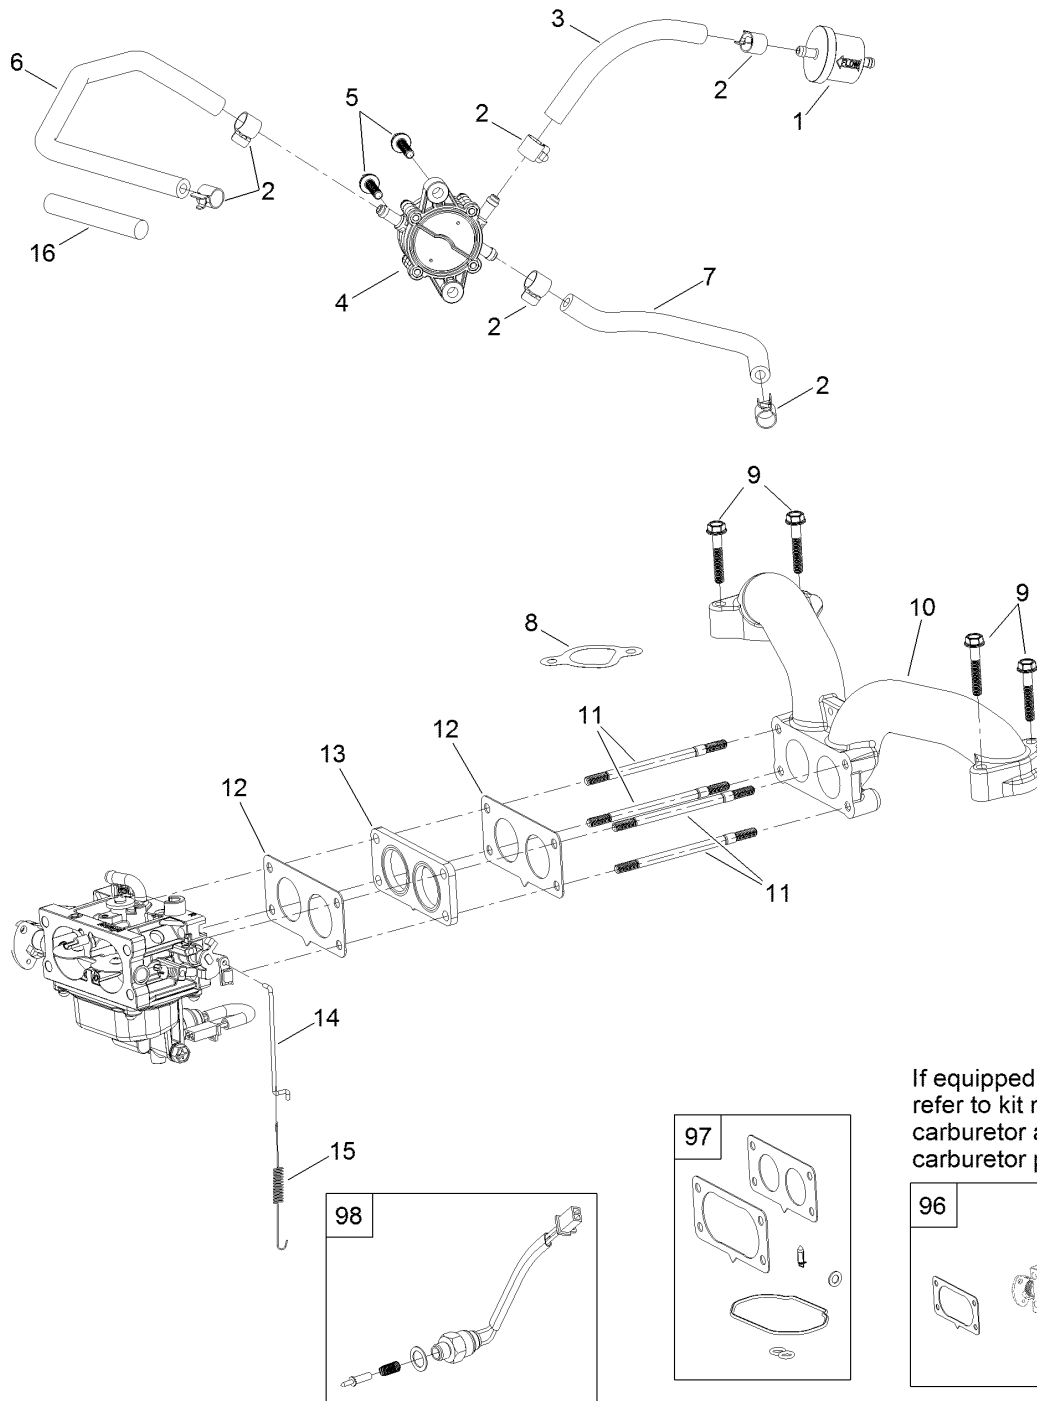


If equipped with canister type air filter refer to kit model 135-6195 for carburetor assembly and internal carburetor parts.

## Fuel System Assembly with Non-Canister Style Air Filter (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 133-1563           | 1           | Filter-Fuel        | 11          | 127-9245           | 4           | Stud                       |
| 2           | 120-4251           | 6           | Clamp-Fuel Line    | 12          | 127-9246           | 2           | Gasket-Carburetor          |
| 3           | 120-4371           | 1           | Line-Fuel          | 13          | 127-9247           | 1           | Insulator-Carburetor       |
| 4           | 127-9206           | 1           | Pump-Fuel          | 14          | 133-9963           | 1           | Linkage-Throttle           |
| 5           | 120-4225           | 2           | Screw-HHF          | 15          | 133-9964           | 1           | Spring-Return, Throttle    |
| 6           | 127-9205           | 1           | Hose-Fuel          | 16          | 127-9355           | 1           | Sleeve-Fuel Line Protector |
| 7           | 127-9207           | 1           | Hose-Fuel          | 96          | 136-7840           | 1           | Carburetor Replacement Kit |
| 8           | 127-9230           | 2           | Gasket-Intake      | 97          | 127-9290           | 1           | Carburetor Repair Kit      |
| 9           | 120-4284           | 4           | Screw-HHF          | 98          | 127-9292           | 1           | Solenoid Kit               |
| 10          | 127-9244           | 1           | Manifold-Intake    | 99          | 136-7837           | 1           | High Altitude Kit ●        |

● Not illustrated

# Carburetor Assembly

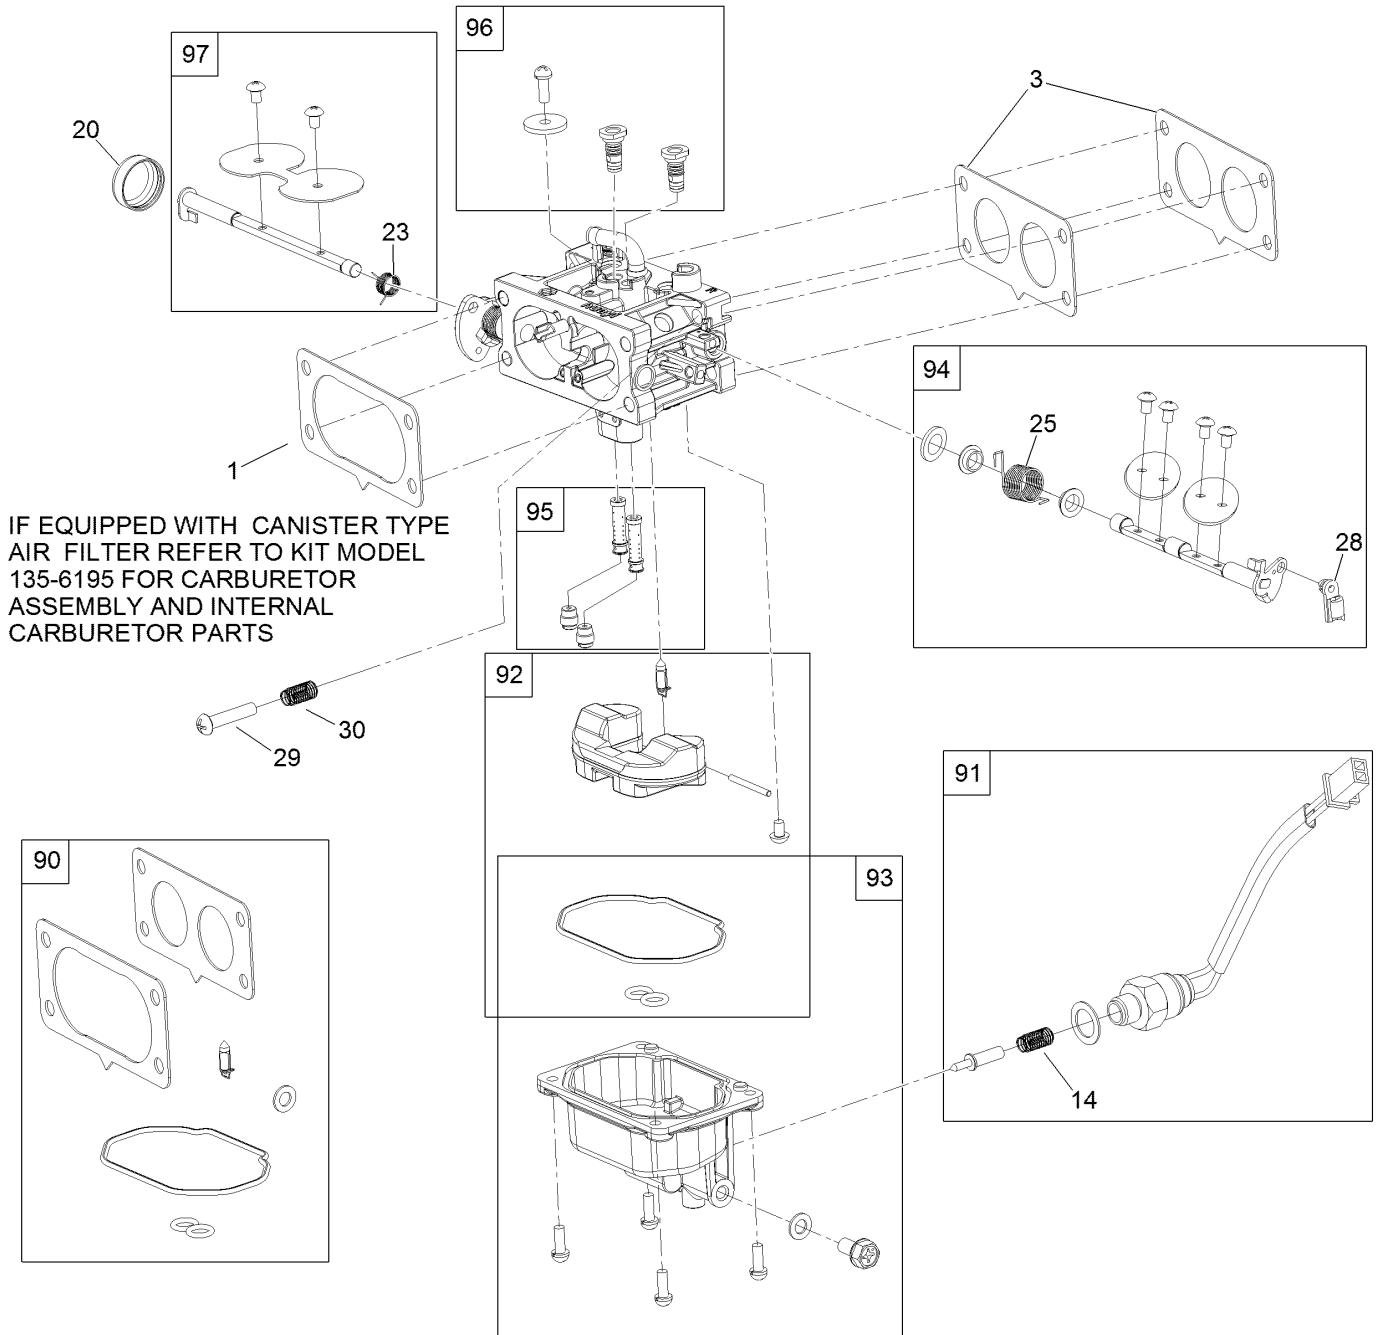


## Carburetor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 127-9251           | 1           | Gasket-Carburetor  | 90          | 127-9290           | 1           | Carburetor Repair Kit |
| 3           | 127-9246           | 2           | Gasket-Carburetor  | 91          | 127-9292           | 1           | Solenoid Kit          |
| 14          | 127-9319           | 1           | Spring             | 92          | 127-9340           | 1           | Float Kit             |
| 20          | 127-9325           | 1           | Cover-Shaft, Choke | 93          | 127-9341           | 1           | Bowl Kit              |
| 23          | 127-9328           | 1           | Spring             | 94          | 133-9817           | 1           | Throttle Shaft Kit    |
| 25          | 127-9330           | 1           | Spring             | 95          | 136-7844           | 1           | Nozzle And Jet Kit    |
| 28          | 127-9333           | 1           | Clamp-Lock         | 96          | 136-7899           | 1           | Idle Jet Kit          |
| 29          | 127-9334           | 1           | Screw-PPH          | 97          | 127-9345           | 1           | Choke Shaft Kit       |
| 30          | 127-9335           | 1           | Spring             |             |                    |             |                       |

# Air Intake and Filtration Assembly

IF EQUIPPED WITH CANISTER TYPE AIR FILTER  
REFER TO KIT MODEL 135-6195 TO LOOK UP PARTS

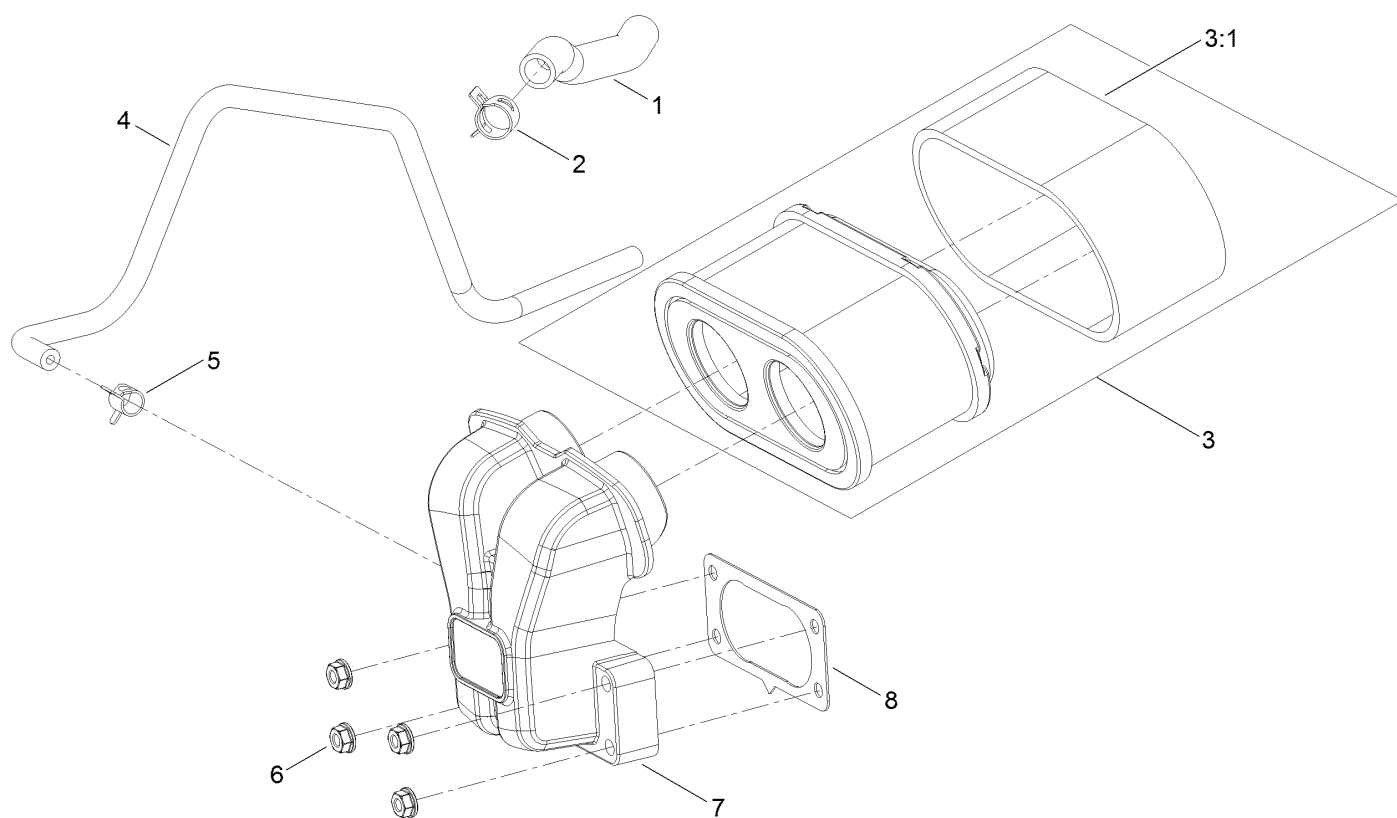


## Air Intake and Filtration Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-9235           | 1           | Tube-Breather      |
| 2           | 127-9234           | 2           | Clamp-Hose         |
| 3           | 136-7806           | 1           | Air Filter Kit     |
| 3:1         | 136-7804           | 1           | Prefilter          |
| 4           | 127-9253           | 1           | Hose-Fuel          |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 5           | 127-9187           | 1           | Clamp-Hose           |
| 6           | 120-4236           | 4           | Nut-Flange           |
| 7           | 127-9047           | 1           | Manifold-Filter, Air |
| 8           | 127-9251           | 1           | Gasket-Carburetor    |

# Ignition and Cooling Fan

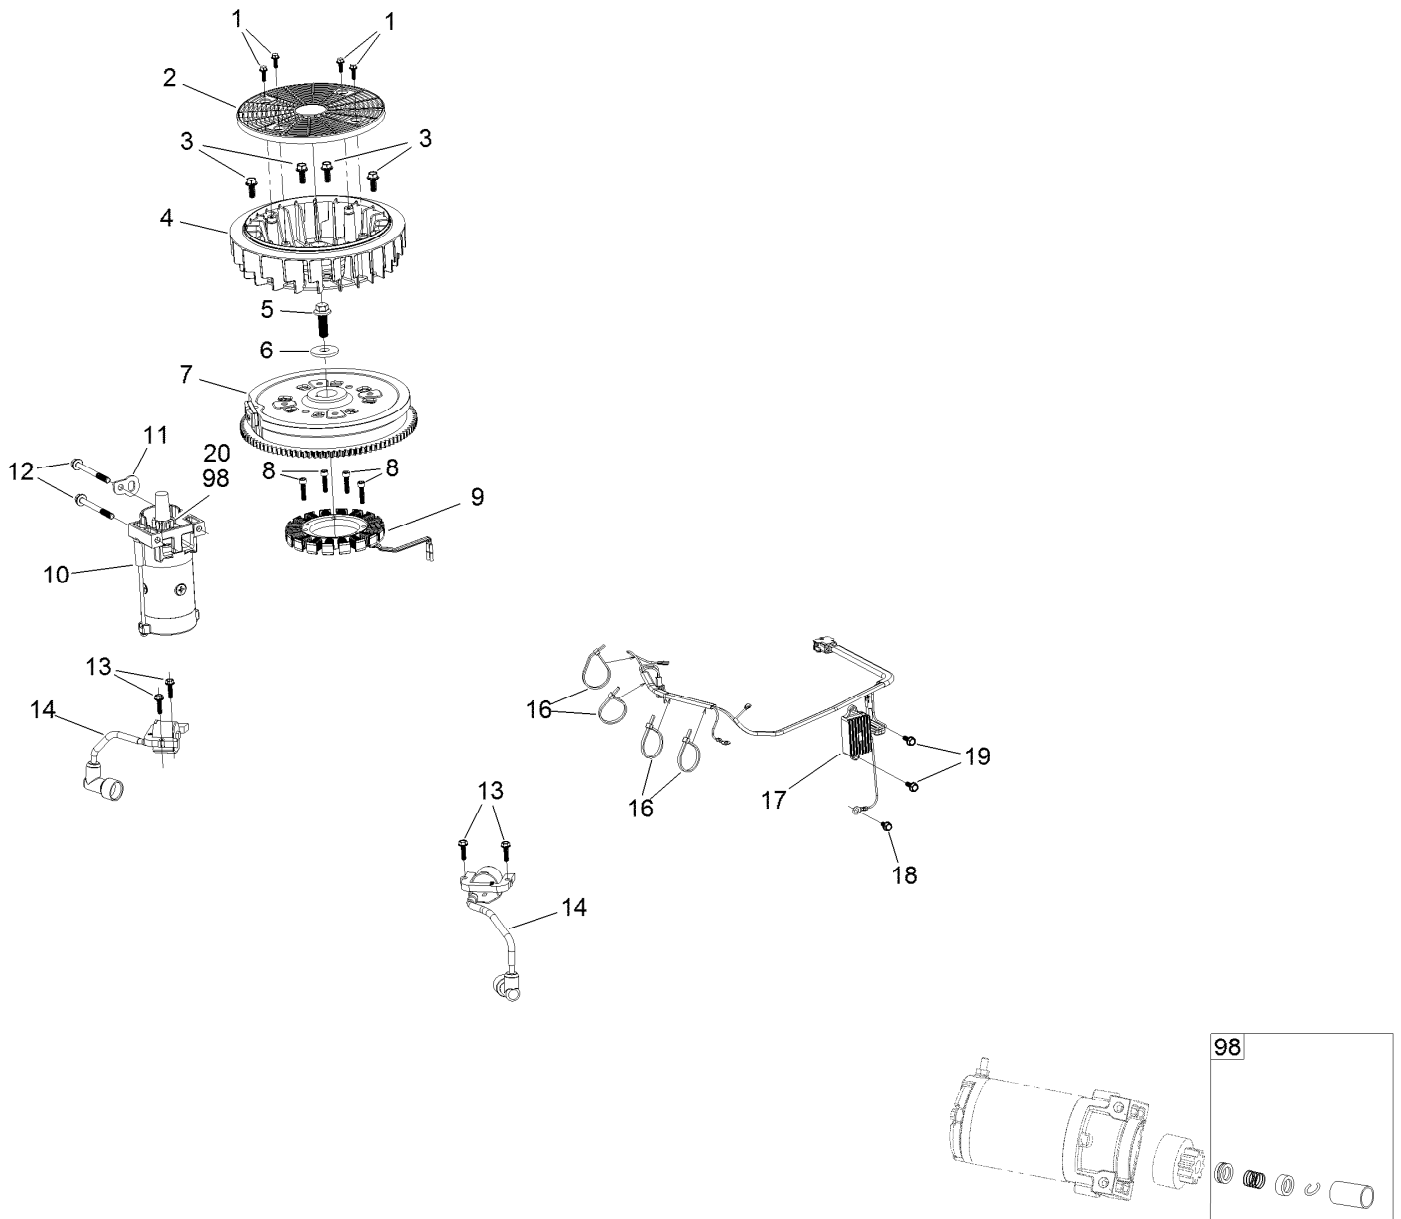


## Ignition and Cooling Fan (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-9197           | 4           | Screw-HWH          |
| 2           | 127-9198           | 1           | Screen-Rotating    |
| 3           | 127-9199           | 4           | Screw-HWH          |
| 4           | 127-9200           | 1           | Fan-Cooling        |
| 5           | 127-9201           | 1           | Screw-HWH          |
| 6           | 127-9202           | 1           | Washer-Spring      |
| 7           | 127-9306           | 1           | Flywheel           |
| 8           | 127-9210           | 4           | Screw-HSH          |
| 9           | 136-7876           | 1           | Alternator         |
| 10          | 136-7880           | 1           | Motor-Starter      |
| 11          | 127-9208           | 1           | Bracket-Lift       |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              |
|-------------|--------------------|-------------|---------------------------------|
| 12          | 120-4231           | 2           | Screw-HHF                       |
| 13          | 121-0007           | 4           | Bolt-Flange                     |
| 14          | 136-7883           | 2           | Ignition Coil ASM               |
| 16          | 127-9220           | 4           | Tie-Zip                         |
| 17          | 136-7879           | 1           | Regulator-Voltage,<br>W/Harness |
| 18          | 120-4216           | 1           | Screw-HHF                       |
| 19          | 120-4232           | 2           | Screw-HHF                       |
| 20          | 133-1562           | 1           | Pinion-Starter                  |
| 98          | 133-1566           | 1           | Starter Repair Kit              |


# Crankcase and Crankshaft Assembly

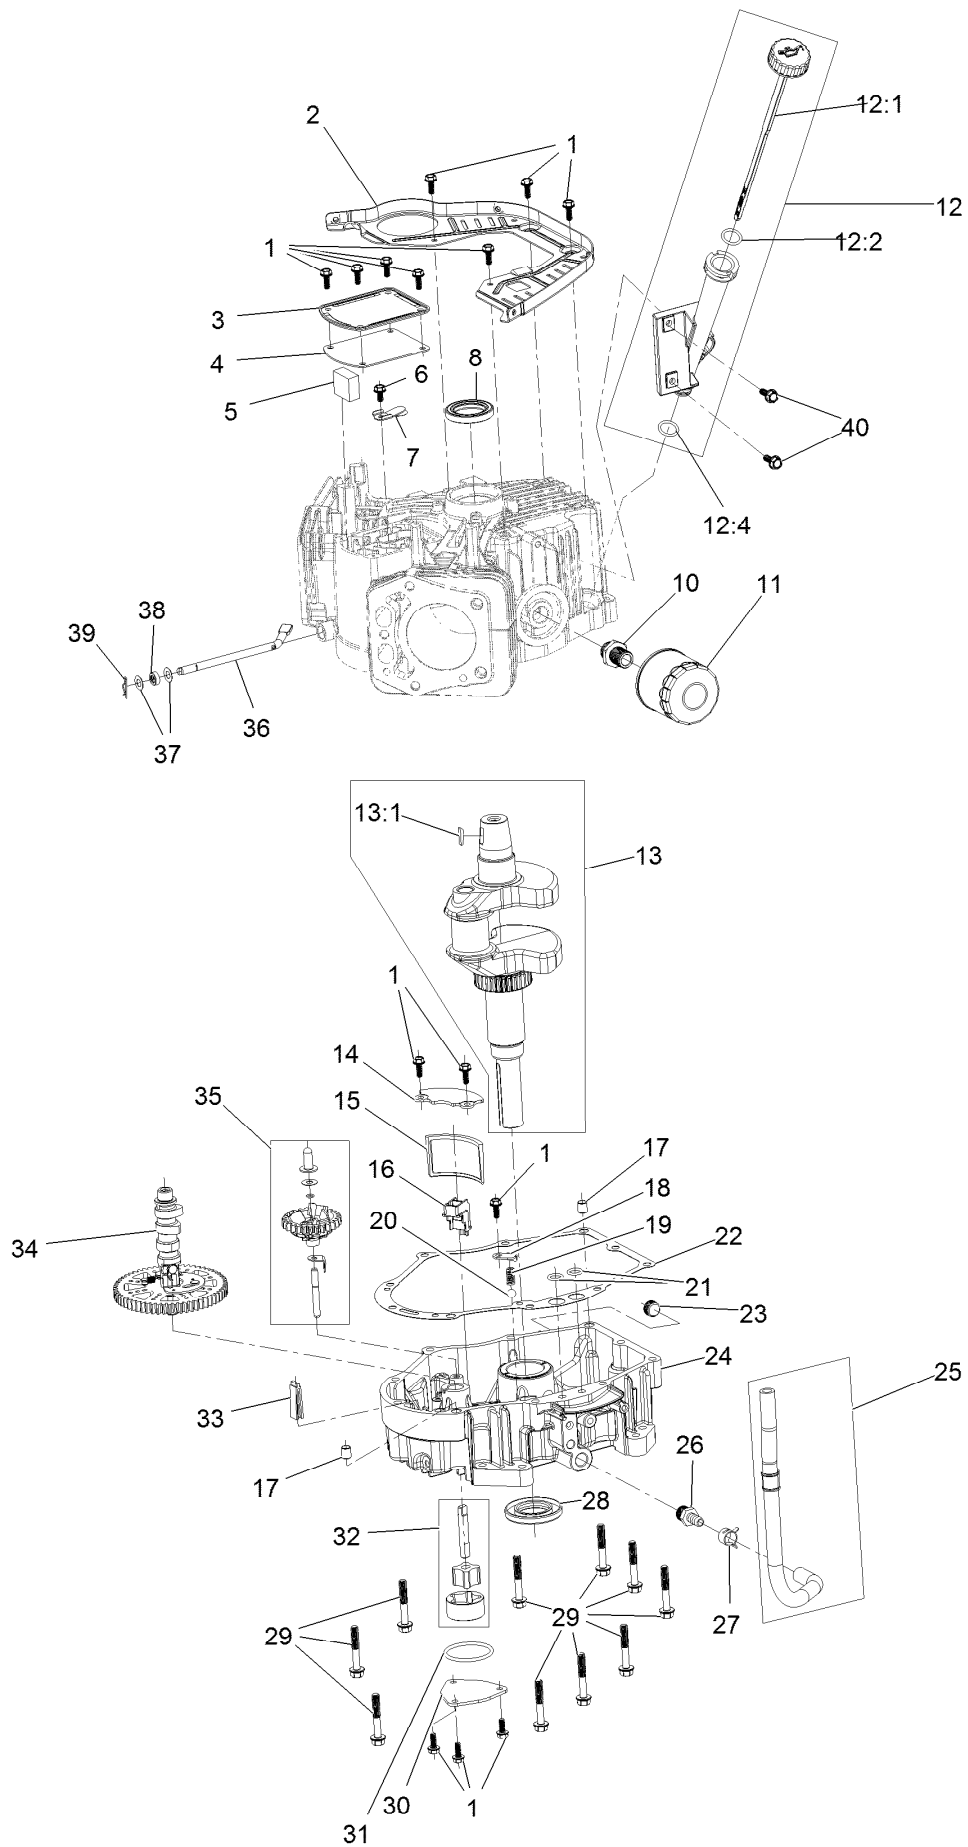

## Crankcase and Crankshaft Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-4232           | 14          | Screw-HHF           | 20          | 127-9266           | 1           | Valve-Ball              |
| 2           | 127-9212           | 1           | Baffle              | 21          | 120-4262           | 2           | O-Ring                  |
| 3           | 127-9213           | 1           | Cover-Breather      | 22          | 127-9267           | 1           | Gasket-Cover, Crankcase |
| 4           | 127-9214           | 1           | Gasket-Breather     | 23          | 133-9805           | 1           | Plug-Drain              |
| 5           | 127-9215           | 1           | Filter-Breather     | 24          | 133-9806           | 1           | Cover-Crankcase         |
| 6           | 120-4216           | 1           | Screw-HHF           | 25          | 127-9293           | 1           | Oil Drain Hose ASM      |
| 7           | 127-9217           | 1           | Valve-Breather      | 26          | 127-9275           | 1           | Fitting-Hose            |
| 8           | 120-4267           | 1           | Seal-Oil            | 27          | 127-9276           | 1           | Clamp-Hose              |
| 10          | 136-7884           | 1           | Adaptor-Filter, Oil | 28          | 127-9271           | 1           | Seal                    |
| 11          | 136-7848           | 1           | Filter-Oil          | 29          | 121-0473           | 10          | Screw-HHF               |
| 12          | 127-9218           | 1           | Oil Tube ASM        | 30          | 127-9274           | 1           | Cover-Oil Pump          |
| 12:1        | 127-9283           | 1           | Dipstick            | 31          | 127-9273           | 1           | O-Ring                  |
| 12:2        | 127-9284           | 1           | O-Ring              | 32          | 127-9272           | 1           | Oil Pump ASM            |
| 12:4        | 127-9286           | 1           | O-Ring              | 33          | 120-4275           | 1           | Deflector-Oil, Rubber   |
| 13          | 127-9255           | 1           | Crankshaft          | 34          | 133-1568           | 1           | Camshaft                |
| 13:1        | 120-4320           | 1           | Key-Woodruff        | 35          | 136-7882           | 1           | Governor ASM            |
| 14          | 127-9261           | 1           | Cover-Screen, Oil   | 36          | 127-9238           | 1           | Shaft-Governor          |
| 15          | 127-9262           | 1           | Screen-Oil          | 37          | 120-4258           | 2           | Washer-Plain            |
| 16          | 127-9263           | 1           | Retainer-Screen     | 38          | 120-4257           | 1           | Seal-Oil                |
| 17          | 120-4274           | 2           | Pin-Dowel           | 39          | 120-4256           | 1           | Pin-Hair                |
| 18          | 127-9264           | 1           | Plate-Retainer      | 40          | 120-4232           | 2           | Screw-HHF               |
| 19          | 127-9265           | 1           | Spring              |             |                    |             |                         |

# Governor Control Assembly

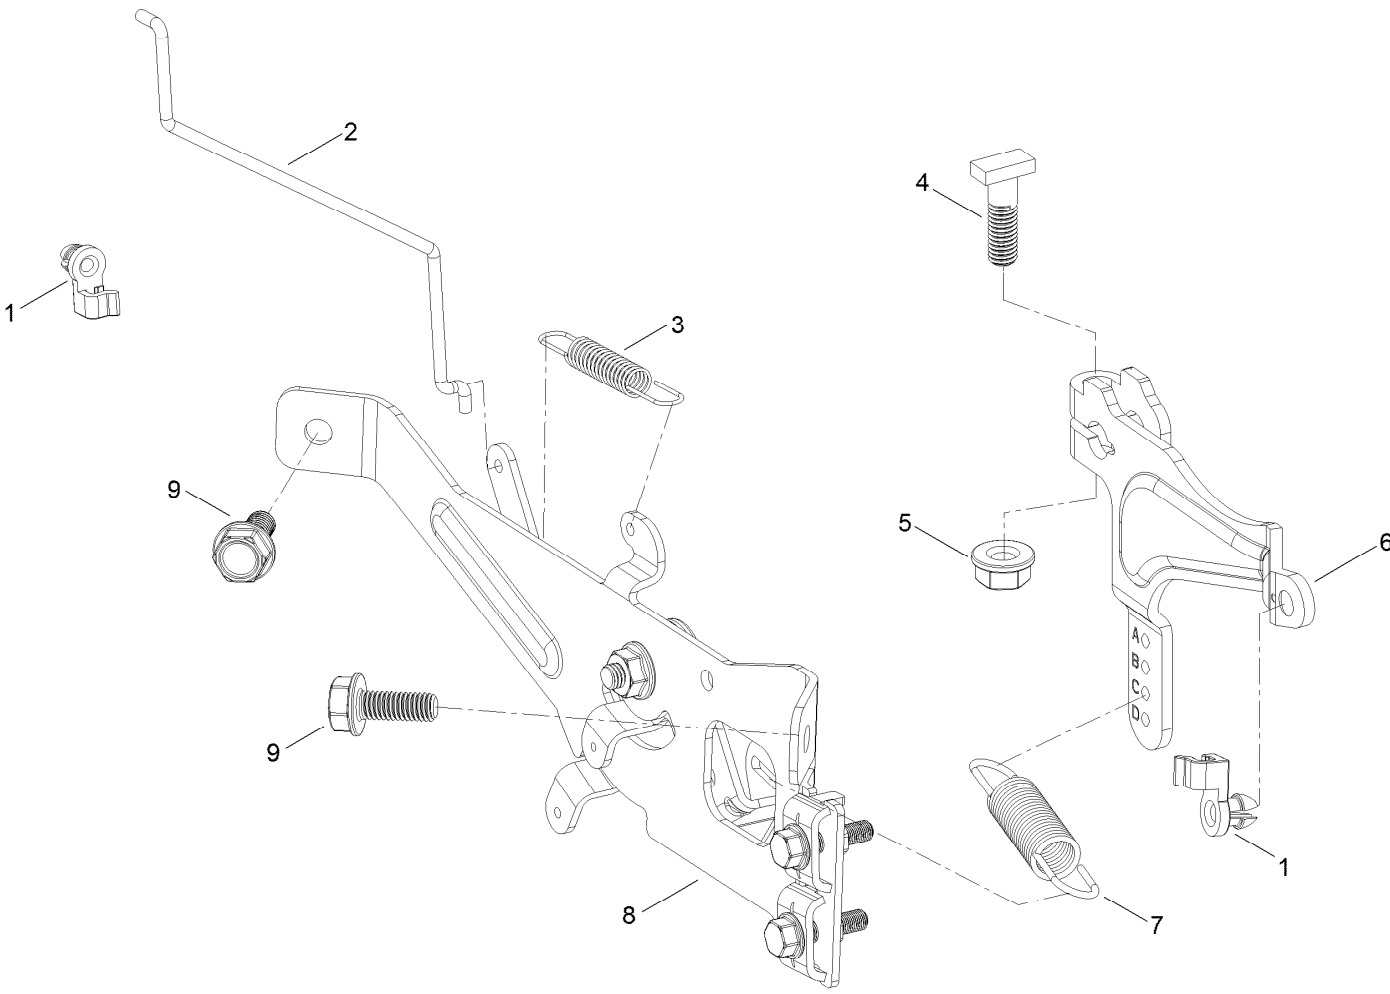


## Governor Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-9250           | 2           | Clip-Linkage       |
| 2           | 127-9242           | 1           | Linkage-Choke      |
| 3           | 127-9241           | 1           | Spring-Governor    |
| 4           | 120-4238           | 1           | Bolt-Arm, Governor |
| 5           | 120-4236           | 1           | Nut-Flange         |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 6           | 133-9961           | 1           | Arm-Governor       |
| 7           | 133-9962           | 1           | Spring-Governor    |
| 8           | 133-1570           | 1           | Control Plate ASM  |
| 9           | 120-4232           | 2           | Screw-HHF          |


# Piston and Cylinder Head Assembly

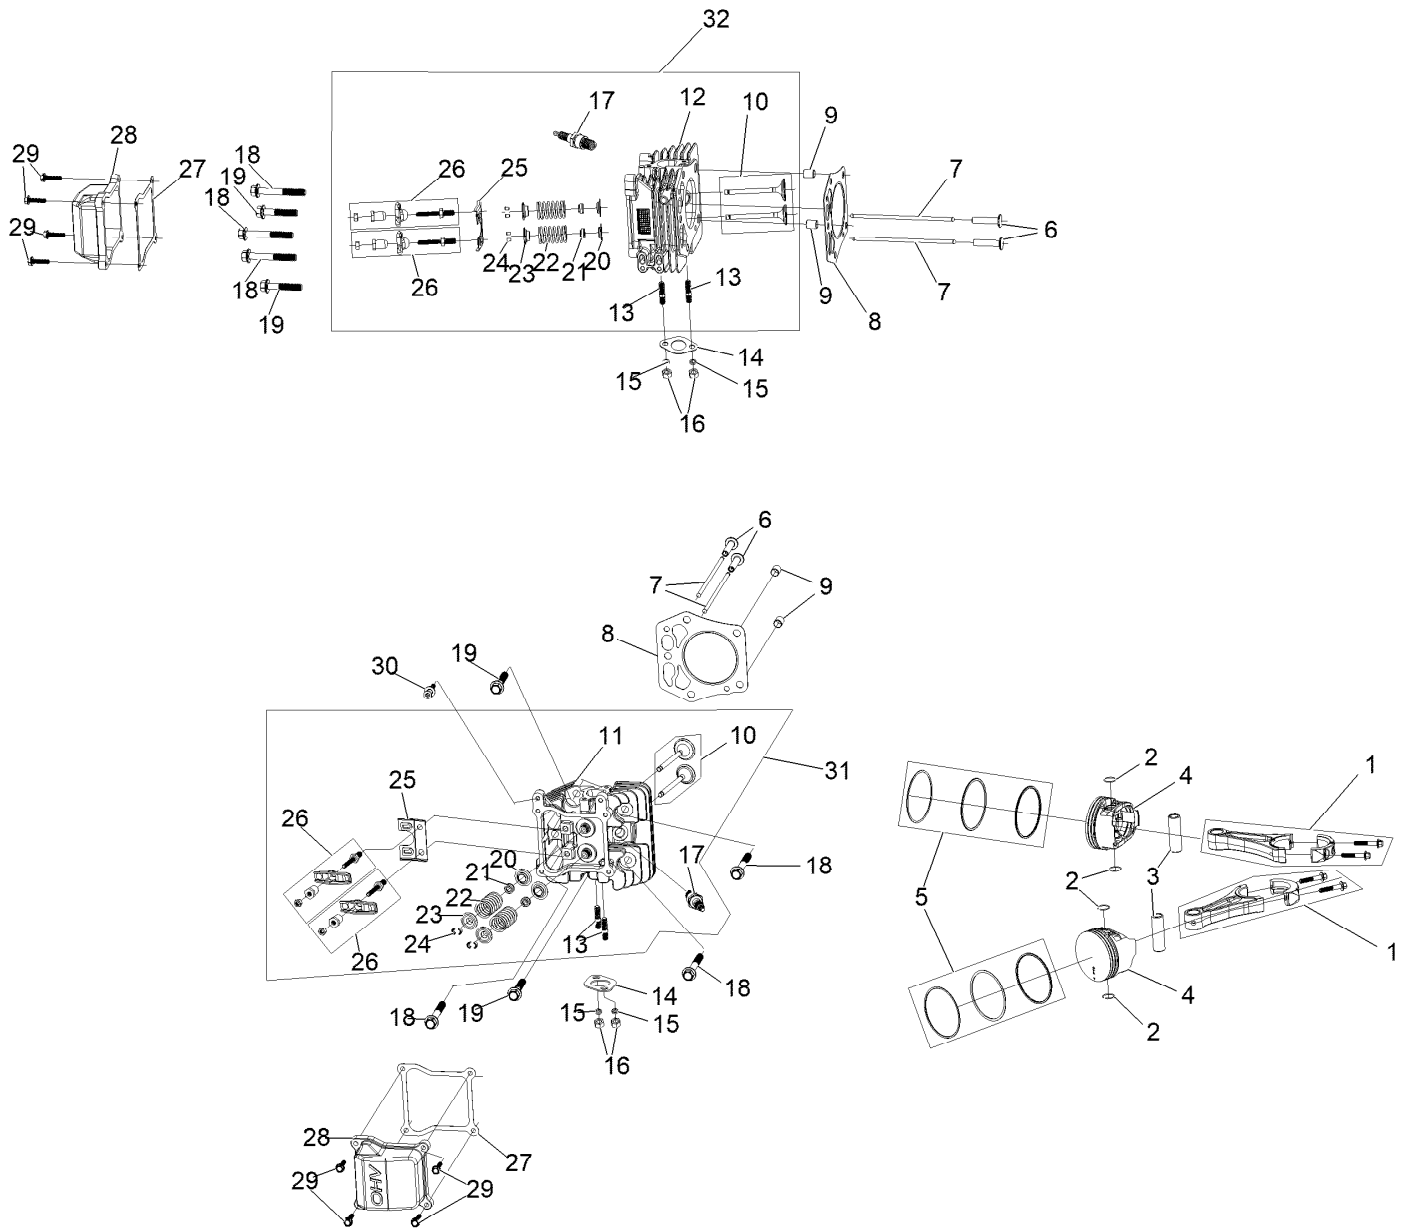

## Piston and Cylinder Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 127-9256           | 2           | Connecting Rod ASM    | 17          | 81-3250            | 2           | Spark Plug              |
| 2           | 127-9258           | 4           | Clip-Pin, Piston      | 18          | 127-9231           | 6           | Screw-HWH               |
| 3           | 127-9257           | 2           | Pin-Piston            | 19          | 127-9232           | 4           | Screw-HWH               |
| 4           | 127-9259           | 2           | Piston                | 20          | 120-4303           | 4           | Seat-Spring, Valve      |
| 5           | 127-9260           | 2           | Piston Ring Set       | 21          | 120-4304           | 4           | Seal-Stem, Valve        |
| 6           | 127-9224           | 4           | Lifter-Valve          | 22          | 120-4305           | 4           | Spring-Valve            |
| 7           | 127-9225           | 4           | Rod-Push              | 23          | 120-4306           | 4           | Retainer-Spring, Valve  |
| 8           | 127-9226           | 2           | Gasket-Head, Cylinder | 24          | 120-4307           | 8           | Keeper-Valve            |
| 9           | 127-9227           | 4           | Pin-Dowel             | 25          | 127-9233           | 2           | Plate-Guide, Push Rod   |
| 10          | 127-9228           | 2           | Valve Set             | 26          | 136-7881           | 4           | Rocker Arm ASM          |
| 11          | 133-9802           | 1           | Head-Cylinder, Right  | 27          | 127-9295           | 2           | Gasket-Valve Cover      |
| 12          | 133-9804           | 1           | Head-Cylinder, Left   | 28          | 127-9050           | 2           | Cover-Valve             |
| 13          | 121-0464           | 4           | Stud-Exhaust          | 29          | 120-4225           | 8           | Screw-HHF               |
| 14          | 120-4317           | 2           | Gasket-Exhaust        | 30          | 120-4214           | 1           | Screw-Shoulder, HH      |
| 15          | 127-9279           | 4           | Washer-Lock, Split    | 31          | 136-7891           | 1           | Complete Right Head ASM |
| 16          | 121-0199           | 4           | Nut-HH                | 32          | 136-7892           | 1           | Complete Left Head ASM  |

# Blower Housing Assembly

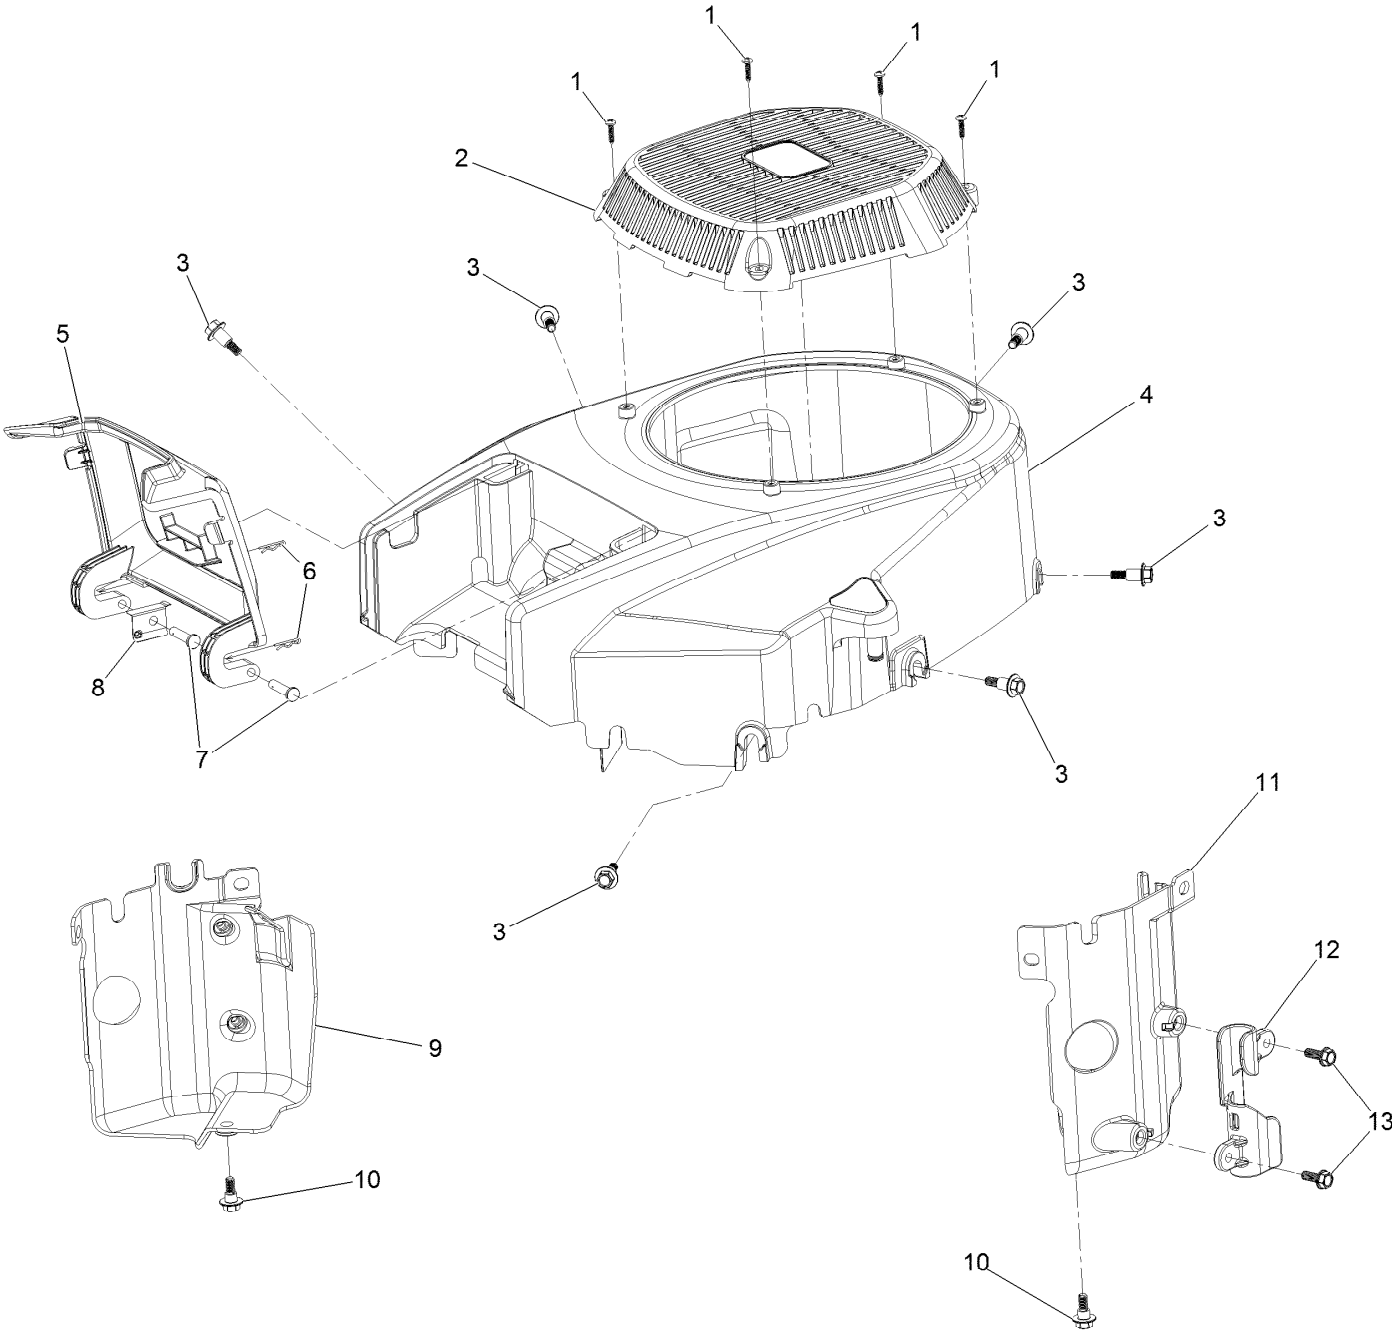


## Blower Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|---------------------|
| 1           | 133-1571           | 4           | Screw-PPH, Plastic  | 8           | 127-9281           | 1           | Plate-Spring        |
| 2           | 127-9045           | 1           | Cover-Fan           | 9           | 136-7877           | 1           | Baffle-Air, Left    |
| 3           | 127-9196           | 6           | Screw-Shoulder, HWH | 10          | 120-4210           | 2           | Screw-Shoulder, HHF |
| 4           | 133-1572           | 1           | Shroud-Engine       | 11          | 136-7878           | 1           | Baffle-Air, Right   |
| 5           | 127-9046           | 1           | Door-Filter, Air    | 12          | 127-9287           | 1           | Cleat-Hose          |
| 6           | 127-9280           | 2           | Pin-Hair            | 13          | 120-4232           | 2           | Screw-HHF           |
| 7           | 127-9282           | 2           | Pin                 |             |                    |             |                     |

# Gasket and Seal Kit


1

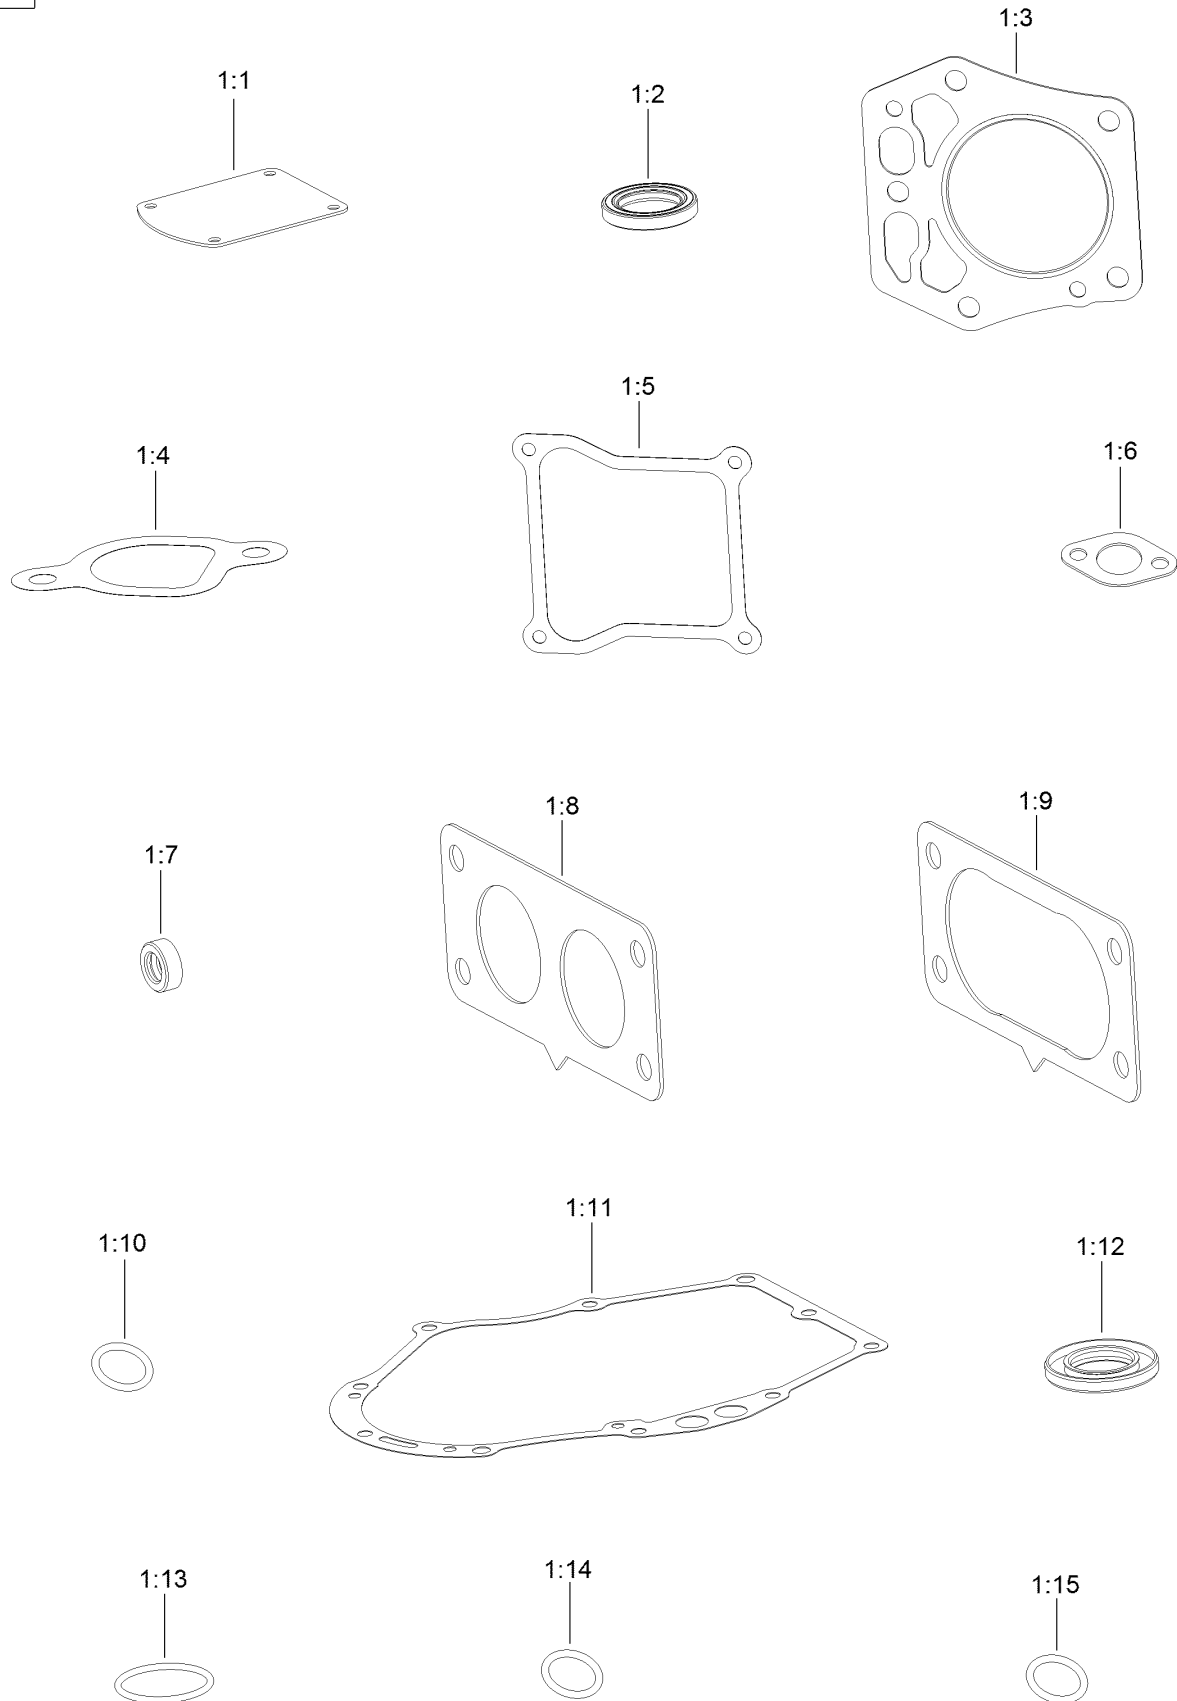

## Gasket and Seal Kit (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 127-9296           | 1           | Gasket And Seal Kit   | 1:8         | 127-9246           | 2           | Gasket-Carburetor       |
| 1:1         | 127-9214           | 1           | Gasket-Breather       | 1:9         | 127-9251           | 1           | Gasket-Carburetor       |
| 1:2         | 120-4267           | 1           | Seal-Oil              | 1:10        | 120-4262           | 2           | O-Ring                  |
| 1:3         | 127-9226           | 2           | Gasket-Head, Cylinder | 1:11        | 127-9267           | 1           | Gasket-Cover, Crankcase |
| 1:4         | 127-9230           | 2           | Gasket-Intake         | 1:12        | 127-9271           | 1           | Seal                    |
| 1:5         | 127-9295           | 2           | Gasket-Valve Cover    | 1:13        | 127-9273           | 1           | O-Ring                  |
| 1:6         | 120-4317           | 2           | Gasket-Exhaust        | 1:14        | 127-9284           | 1           | O-Ring                  |
| 1:7         | 120-4257           | 1           | Seal-Oil              | 1:15        | 127-9286           | 1           | O-Ring                  |


# Body Styling and Fuel Pod Assembly

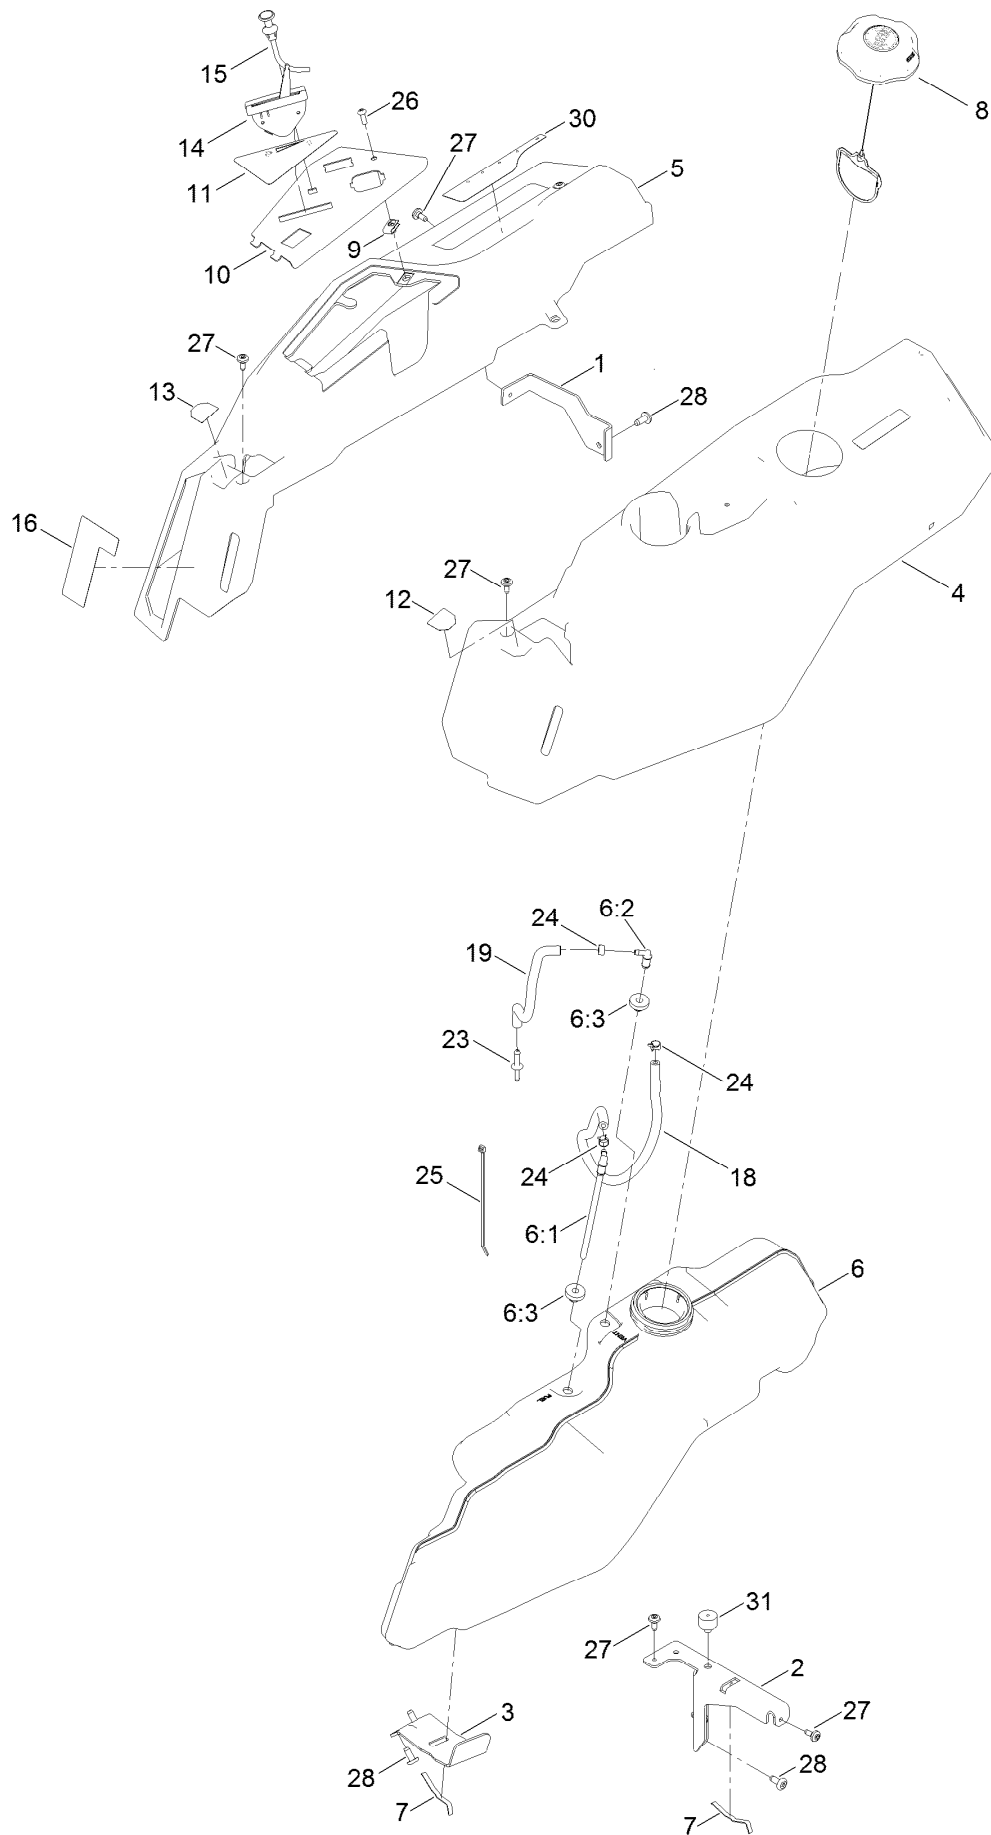

## Body Styling and Fuel Pod Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 138-9810-03        | 1           | Bracket-Pod             | 13          | 139-2394           | 1           | Decal-Control Lever, RH |
| 2           | 138-6071-03        | 1           | Support-Pod, LH         | 14          | 139-2403           | 1           | Cable-Throttle          |
| 3           | 139-3271-03        | 1           | Support-Tank, Fuel      | 15          | 139-2402           | 1           | Cable-Choke             |
| 4           | 138-6074           | 1           | Pod-LH                  | 16          | 139-2388           | 1           | Decal-Smart Speed       |
| 5           | 139-2404           | 1           | Pod-RH, Myride          | 18          | 109-0298           | 1           | Line-Fuel               |
| 6           | 138-6072           | 1           | Fuel Tank ASM           | 19          | 110-3447           | 1           | Hose-Fuel               |
| 6:1         | 139-1091           | 1           | Connector-Elbow, 90 DEG | 23          | 117-5399           | 1           | Adaptor-Orifice         |
| 6:2         | 117-7400           | 1           | Fitting-Plastic         | 24          | 2412-98            | 3           | Clamp-Hose              |
| 6:3         | 46-6560            | 2           | Bushing                 | 25          | 614249             | 1           | Tie-Cable               |
| 7           | 609830             | 2           | Spring                  | 26          | 3258-166           | 1           | Screw-PRH               |
| 8           | 137-4119           | 1           | Cap-Fuel, Ratcheting    | 27          | 120-7950           | 6           | Screw-Torx              |
| 9           | 107069             | 1           | Clip                    | 28          | 138-9753           | 5           | Screw                   |
| 10          | 139-2380-05        | 1           | Panel-Control           | 30          | 139-2397           | 1           | Decal-Adjustment        |
| 11          | 139-2391           | 1           | Decal-Panel, Control    | 31          | 120-7893           | 1           | Bumper-Grommet          |
| 12          | 139-2395           | 1           | Decal-Control Lever, LH |             |                    |             |                         |


# Electrical Assembly

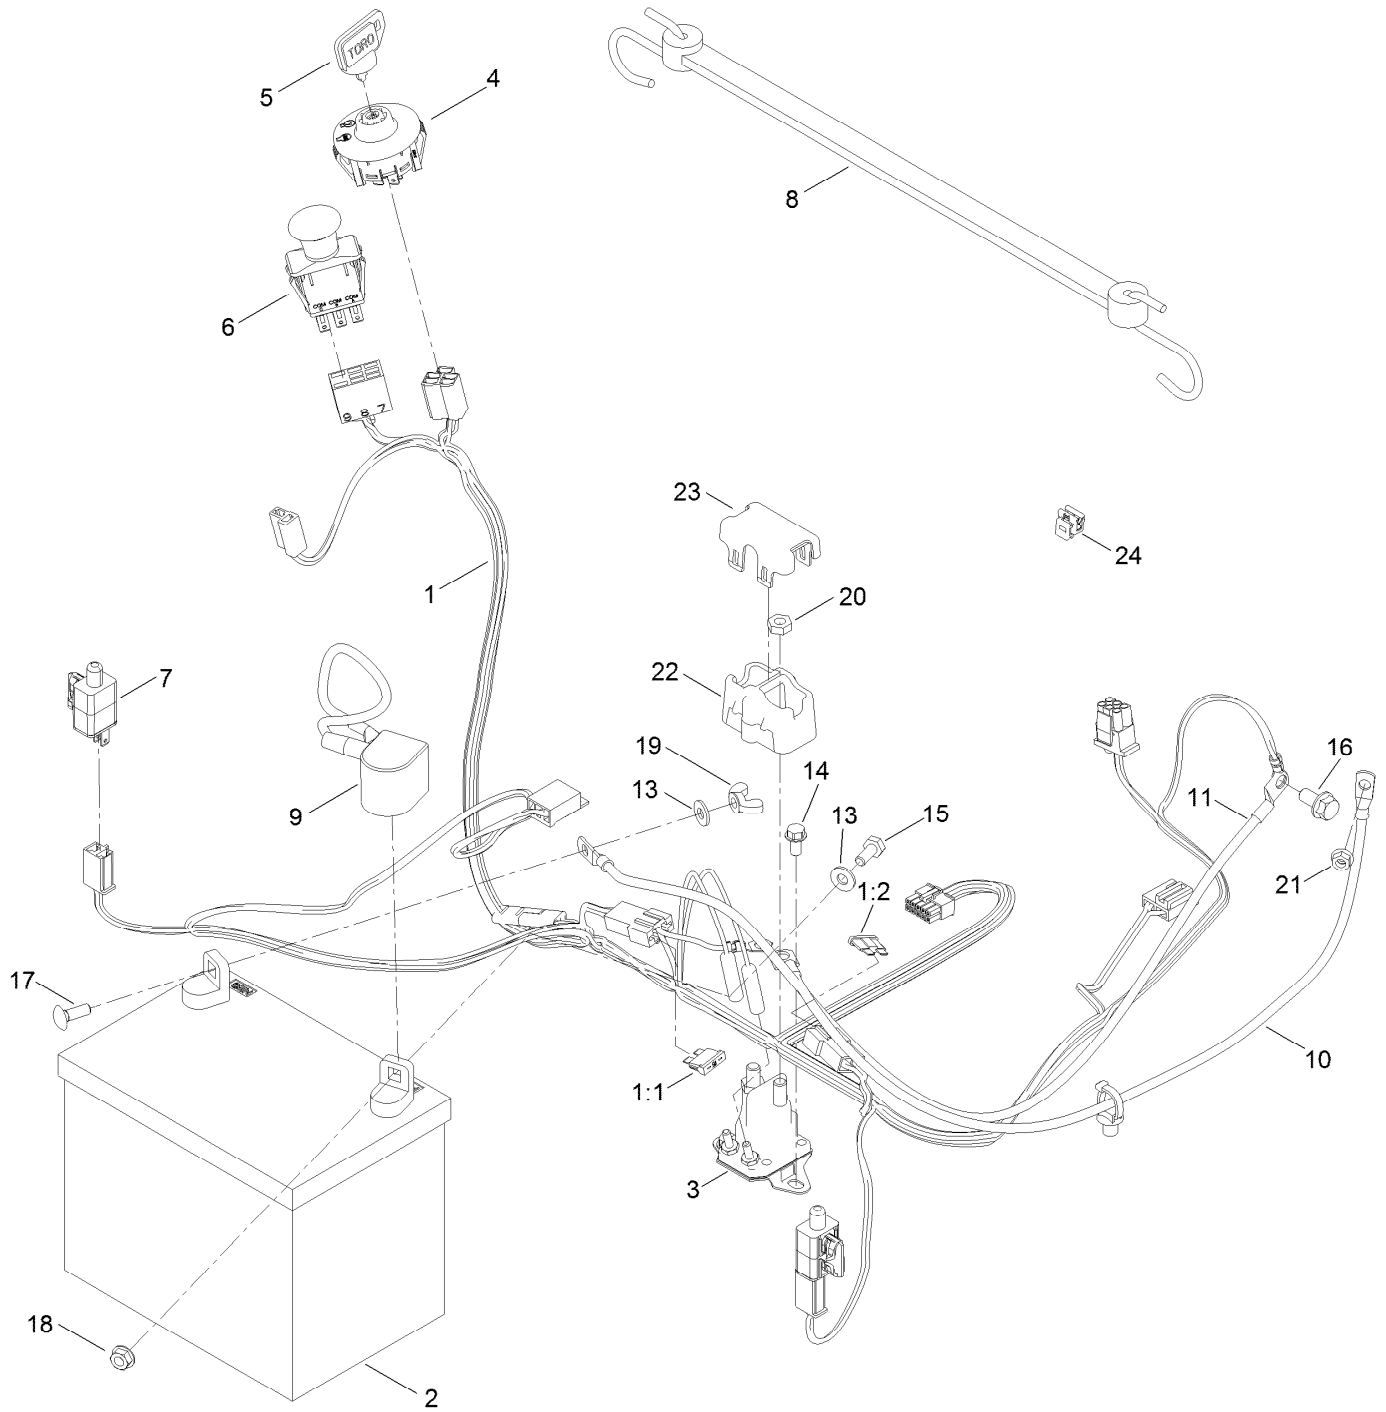

## Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|---------------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 138-2521           | 1           | Harness-Wire                    | 11          | 110-6793           | 1           | Cable-Battery, Black |
| 1:1         | 109355             | 1           | Fuse-Blade, 15 Amp              | 13          | 3256-22            | 2           | Washer-Flat          |
| 1:2         | 109102             | 1           | Fuse-Blade, 25 Amp              | 14          | 32144-4            | 2           | Screw-HWH            |
| 2           | 105-1692           | 1           | Battery, 230CCA W/O Electrolyte | 15          | 321-3              | 1           | Screw-HH             |
| 3           | 117-1197           | 1           | Solenoid                        | 16          | 3234-14            | 1           | Screw-HHF            |
| 4           | 137-4100           | 1           | Switch-Ignition                 | 17          | 3229-1             | 1           | Screw-CARR           |
| 5           | 63-8360            | 1           | Key-Ignition                    | 18          | 32128-33           | 1           | Nut-HF               |
| 6           | 103-5221           | 1           | Switch-PTO                      | 19          | 32103-22           | 1           | Nut-Wing             |
| 7           | 110-6765           | 2           | Switch                          | 20          | 3220-2             | 2           | Nut-Jam              |
| 8           | 139-2381           | 1           | Strap-Rubber                    | 21          | 33003-00           | 1           | Nut-HF               |
| 9           | 140-2713           | 1           | Cable-Battery, Pos              | 22          | 140-2080           | 1           | Cover-Solenoid       |
| 10          | 139-2431           | 1           | Cable-Battery, Red (8 Gauge)    | 23          | 140-2081           | 1           | Cap-Solenoid         |
|             |                    |             |                                 | 24          | 32180-418          | 1           | Clip-Harness         |


# 42in Deck and Decal Assembly

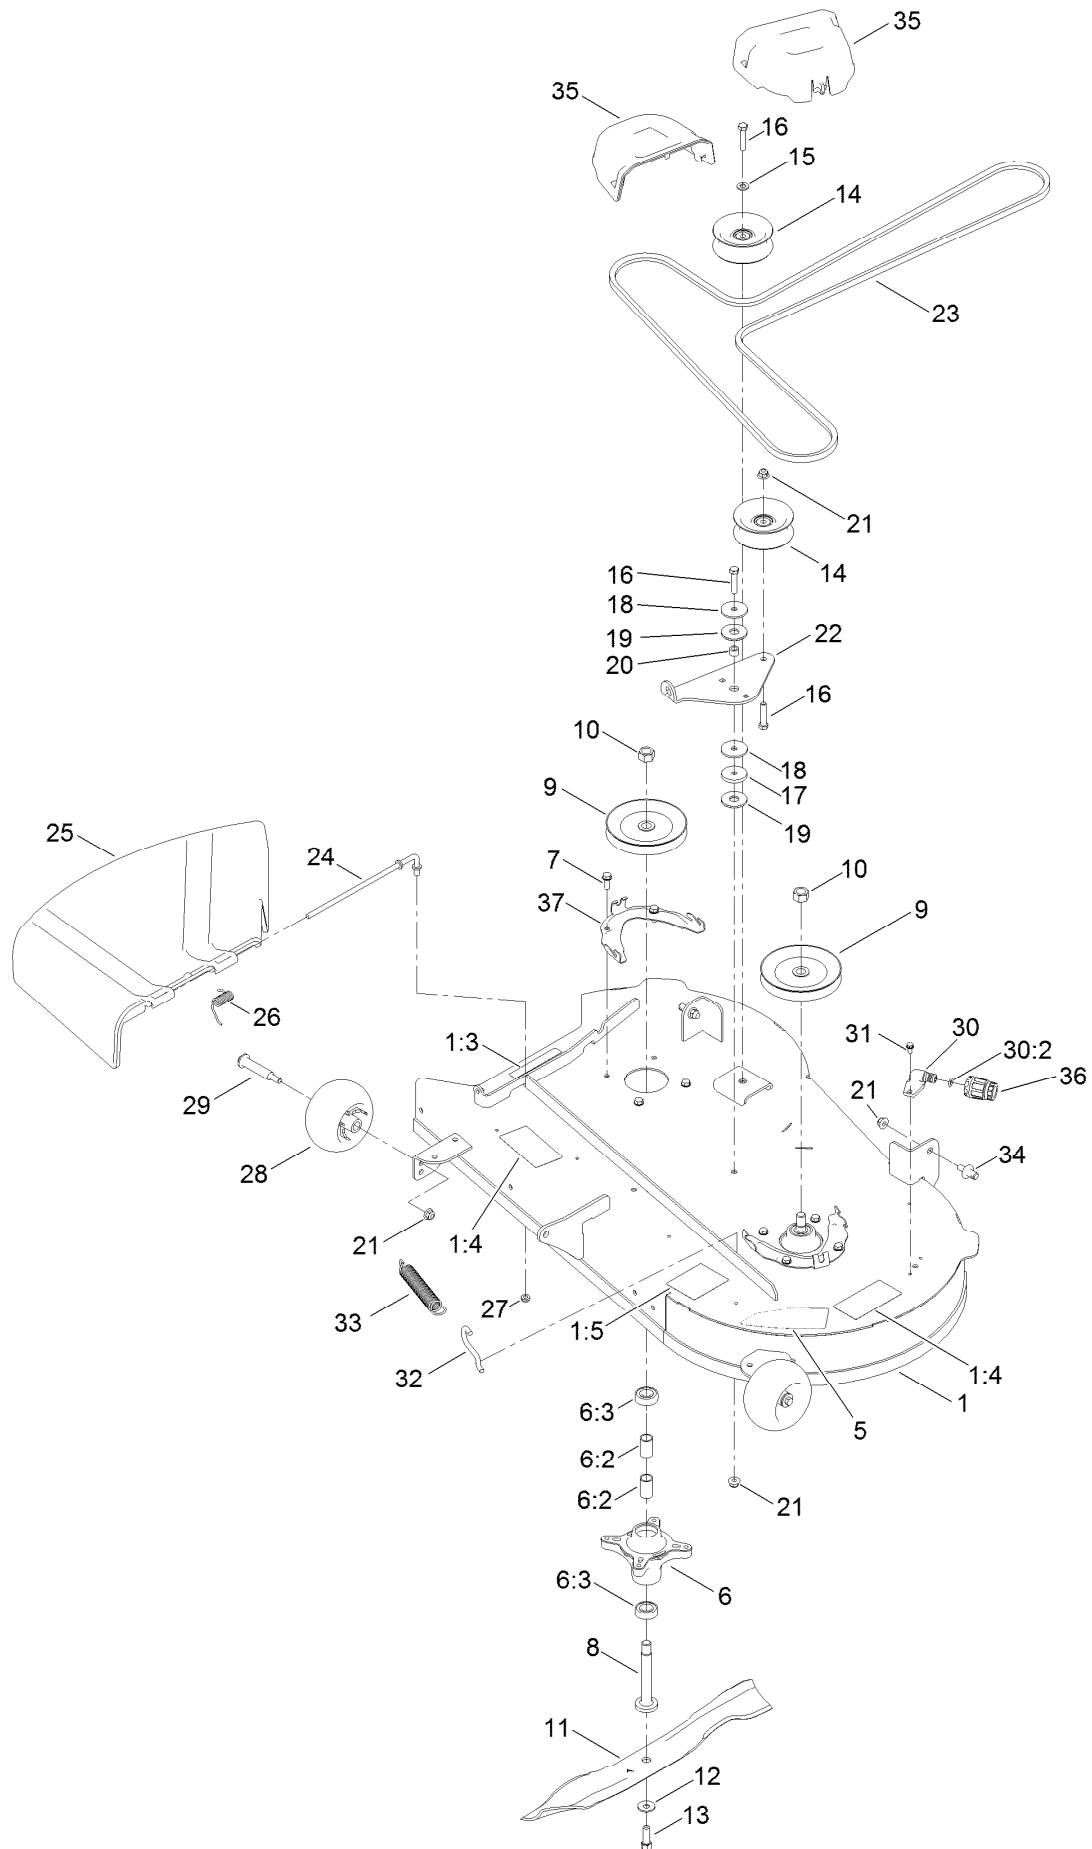

## 42in Deck and Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 138-9769           | 1           | 42In Deck And Decal ASM | 19          | 114-0463           | 2           | Washer-Friction, Composite |
| 1:3         | 93-7009            | 1           | Decal-Danger            | 20          | 115-4986           | 1           | Spacer                     |
| 1:4         | 132-0872           | 2           | Decal-Danger, Deck      | 21          | 104-8301           | 6           | Nut-HF, NI                 |
| 1:5         | 105-7015           | 1           | Decal-Routing, Belt     | 22          | 138-7262           | 1           | Arm-Idler                  |
| 5           | 140-2123           | 1           | Decal-Deck              | 23          | 119-8819           | 1           | V-Belt                     |
| 6           | 139-3214           | 2           | Spindle ASM             | 24          | 137-2019           | 1           | Rod-Pivot                  |
| 6:2         | 120-7935           | 2           | Spacer                  | 25          | 138-7502           | 1           | Deflector-Discharge        |
| 6:3         | 138-9770           | 2           | Bearing-Ball            | 26          | 138-7268           | 1           | Spring-Torsion             |
| 7           | 32144-41           | 8           | Screw-Taptite           | 27          | 3296-59            | 1           | Nut-Lock, NI               |
| 8           | 117-7268           | 2           | Shaft-Spindle           | 28          | 1-603299           | 2           | Roller-Scalp, Anti         |
| 9           | 139-2433           | 2           | Pulley                  | 29          | 112-3977           | 2           | Bolt-Shoulder              |
| 10          | 3219-6             | 2           | Nut-Hex                 | 30          | 133-9289           | 1           | Fitting-Washout            |
| 11          | 137-1999-03        | 2           | Blade                   | 30:2        | 133-9290           | 1           | O-Ring                     |
| 12          | 3290-465           | 2           | Washer-Belleville       | 31          | 32144-4            | 2           | Screw-HWH                  |
| 13          | 26-0671            | 2           | Screw-HH                | 32          | 138-7267           | 1           | Hook-Spring, Return        |
| 14          | 132-9420           | 2           | Pulley-Idler, Flat      | 33          | 138-7265           | 1           | Spring Extension           |
| 15          | 3256-24            | 1           | Washer-Flat             | 34          | 139-5871           | 2           | Pin-Deck                   |
| 16          | 323-9              | 3           | Screw-HH                | 35          | 139-5887           | 2           | Cover-Belt                 |
| 17          | 110-9981           | 1           | Washer-Plain            | 36          | 95-3270            | 1           | Connector-Hose             |
| 18          | 63-7400            | 2           | Washer-Rebound          | 37          | 139-3272-03        | 2           | Bracket-Cover, Belt        |

# Frame Decal Assembly

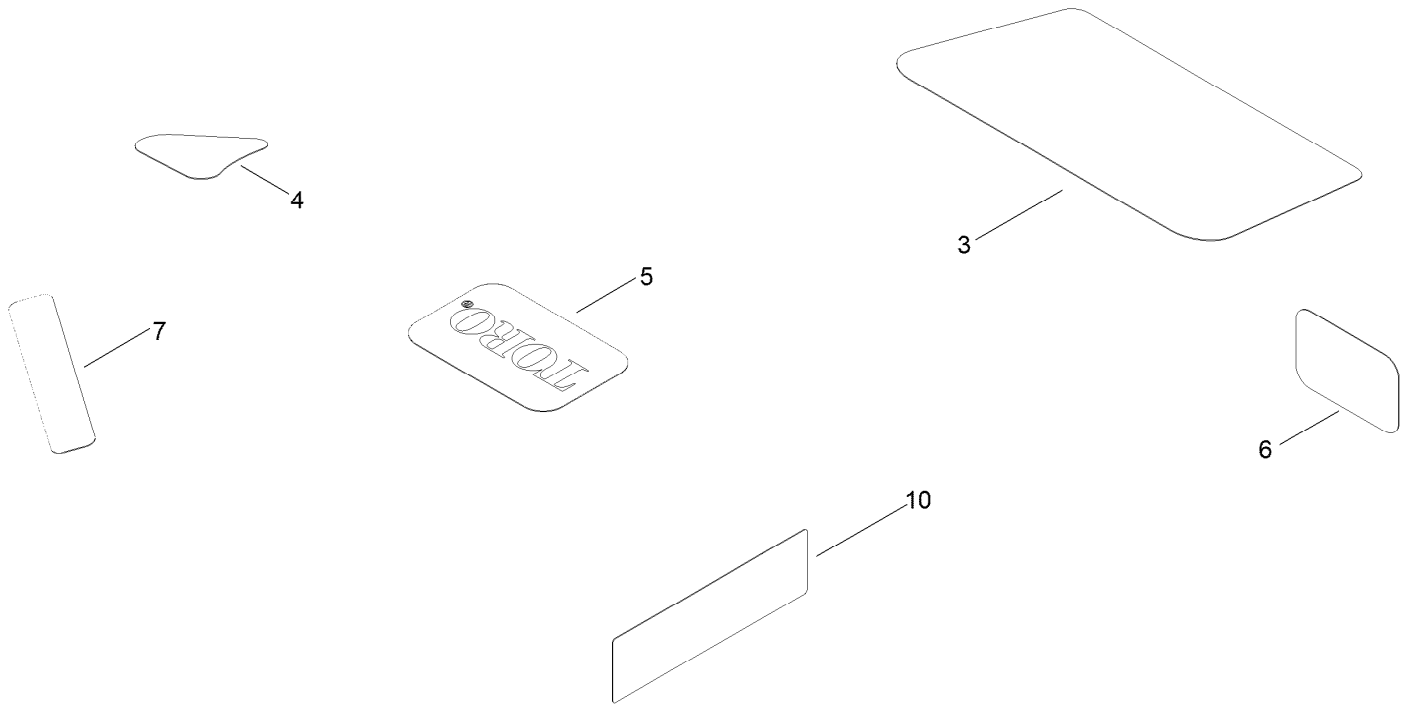


## Frame Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 3           | 136-5597           | 1           | Decal-Engine       |
| 4           | 131-1097           | 1           | Decal-Drain, Oil   |
| 5           | 131-4157           | 1           | Decal              |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 6           | 127-9076           | 1           | Placard-Intake     |
| 7           | 132-0904           | 1           | Decal-Shutdown     |
| 10          | 140-2099           | 1           | Decal              |



Seat Pan Assembly

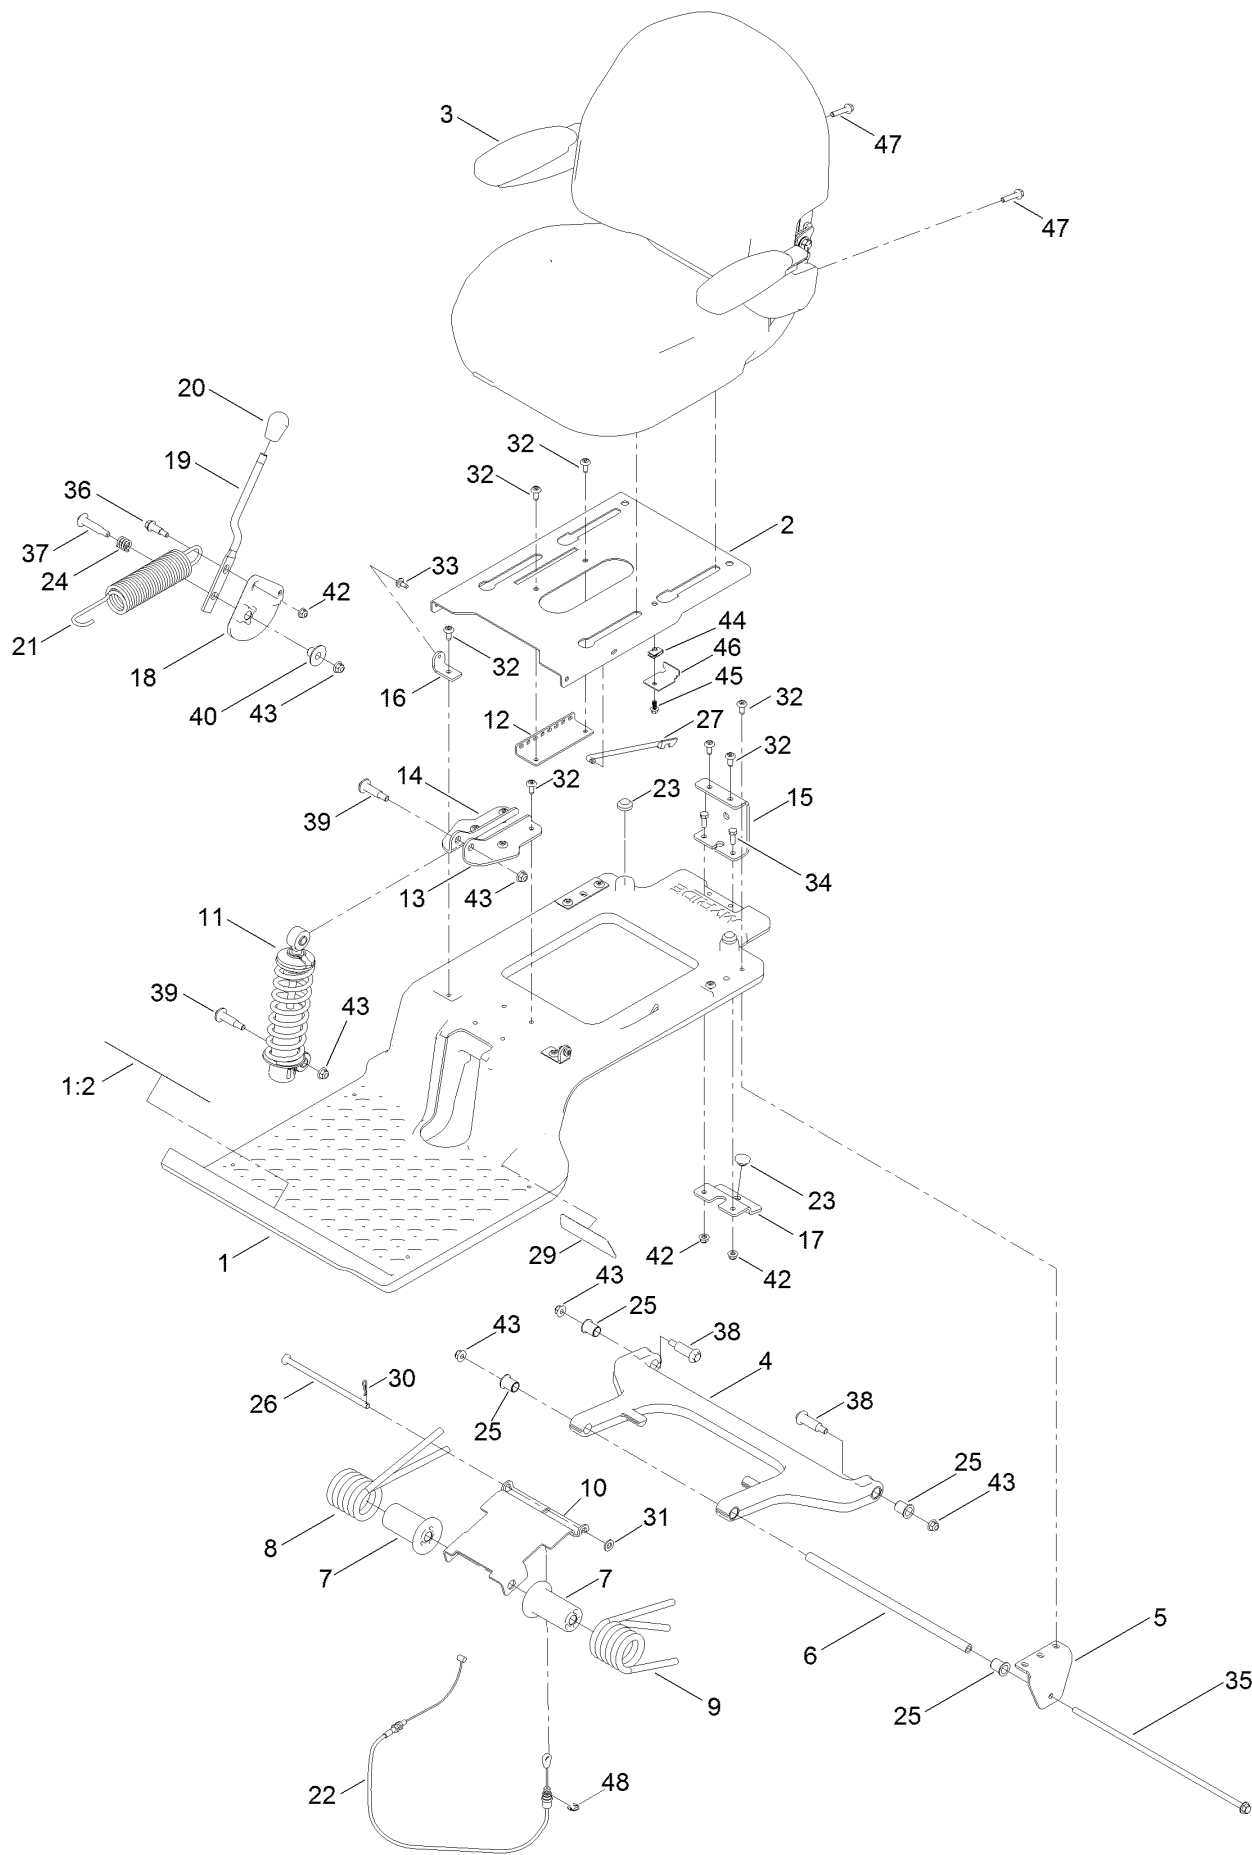

## Seat Pan Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|---------------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 140-5046           | 1           | Subframe ASM                    | 23          | 135-0505           | 3           | Bumper-Seat              |
| 1:2         | 132-0869           | 1           | Decal-Danger                    | 24          | 139-5858           | 1           | Spring-Compression       |
| 2           | 138-7540-03        | 1           | Pan-Seat                        | 25          | 138-2573           | 4           | Bushing-Flange           |
| 3           | 140-5044           | 1           | Seat ASM                        | 26          | 138-9813           | 1           | Rod-Adjustment           |
| 4           | 138-2563           | 1           | Arm, Swing                      | 27          | 138-2596           | 1           | Rod-Prop, Seat           |
| 5           | 138-7517           | 2           | Bracket-Mount, Swing Arm        | 29          | 140-0357           | 1           | Decal-Myride             |
| 6           | 138-7549           | 1           | Tube-Spacer                     | 30          | 1-806003           | 1           | Pin-Cotter               |
| 7           | 138-9776           | 2           | Retainer-Spring                 | 31          | 3256-24            | 1           | Washer-Flat              |
| 8           | 137-7018           | 1           | Spring-Torsion, RH              | 32          | 138-9753           | 14          | Screw                    |
| 9           | 137-1983           | 1           | Spring-Torsion, LH              | 33          | 120-7950           | 2           | Screw-Torx               |
| 10          | 138-7566-03        | 1           | Plate-Adjuster                  | 34          | 322-4              | 2           | Screw-HH                 |
| 11          | 139-2427           | 1           | Shock/Spring ASM                | 35          | 138-7548           | 1           | Screw-HHF                |
| 12          | 131-4008-03        | 1           | Bracket-Latch, Seat             | 36          | 130-2344           | 1           | Bolt-Shoulder            |
| 13          | 133-9318-03        | 1           | Bracket-Shock Mount, Upper (LH) | 37          | 92-1057            | 1           | Bolt-Shoulder            |
| 14          | 133-9319-03        | 1           | Bracket-Shock Mount, Upper (RH) | 38          | 138-2547           | 2           | Bolt-Shoulder            |
| 15          | 138-9788           | 1           | Bracket-Cable                   | 39          | 136-7198           | 2           | Bolt-Shoulder            |
| 16          | 138-7522           | 2           | Bracket-Seat                    | 40          | 139-5800           | 1           | Bushing - Flange         |
| 17          | 139-2361-03        | 1           | Bracket Lower                   | 42          | 104-8300           | 3           | Nut-HF, NI               |
| 18          | 138-9814           | 1           | Pulley - Cam                    | 43          | 119-4042           | 6           | Nut-HF, NI               |
| 19          | 138-9822           | 1           | Lever - Adjustment              | 44          | 107069             | 1           | Clip                     |
| 20          | 139-5807           | 1           | Knob-Lever                      | 45          | 99-6810            | 1           | Screw-HHF                |
| 21          | 138-9848           | 1           | Spring-Extension                | 46          | 138-7214           | 1           | Bracket-Stop, Seat       |
| 22          | 138-9812           | 1           | Cable-Adjustment, Myride        | 47          | 140-5024           | 2           | Screw-HHF                |
|             |                    |             |                                 | 48          | 32120-47           | 1           | Ring-Retaining, External |

# Seat Assembly No. 140-5044

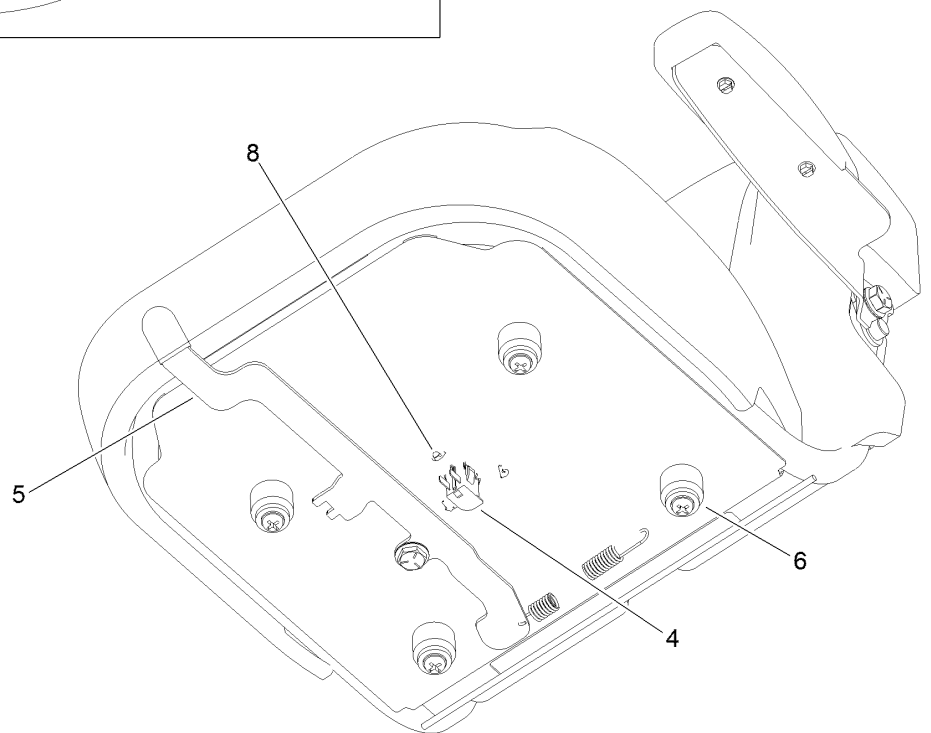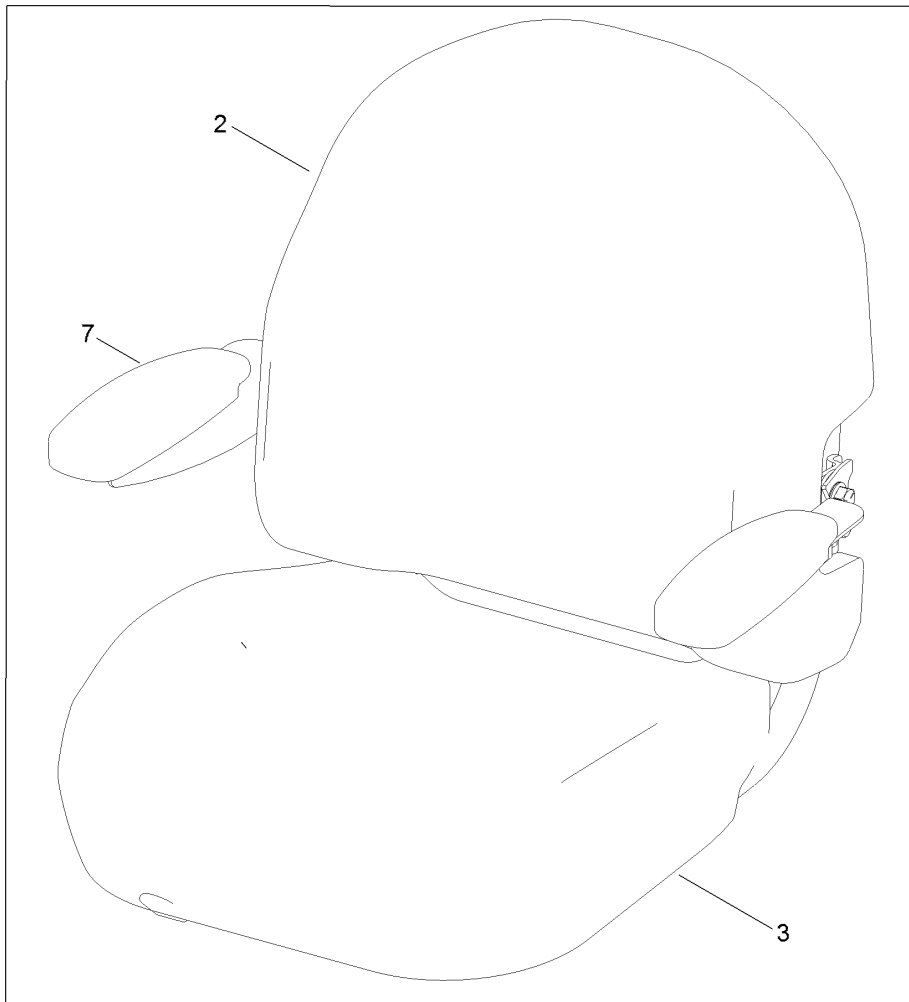


## Seat Assembly No. 140-5044 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 140-2733           | 1           | Seat ASM           |
| 2           | 140-5041           | 1           | Cover-Seat Back    |
| 3           | 140-5042           | 1           | Cover-Seat Base    |
| 4           | 82-2190            | 1           | Switch-Bail        |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 5           | 131-4153           | 1           | Track ASM            |
| 6           | 131-4154           | 1           | Bushing ASM          |
| 7           | 139-5823           | 1           | Arm Rest Kit         |
| 8           | 140-3468           | 1           | Cap-Switch, Actuator |

# Clutch Assembly

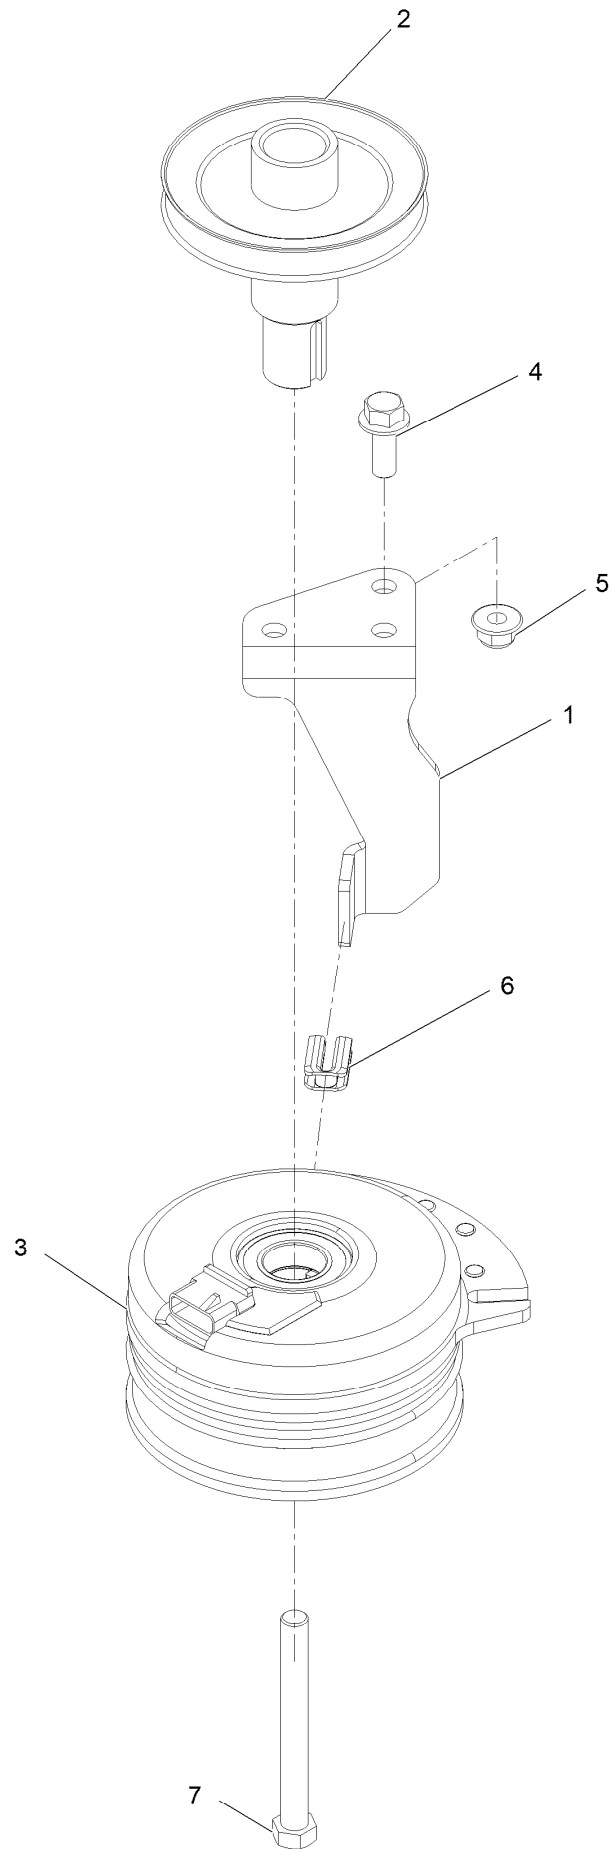

## Clutch Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 138-7275           | 1           | Stop-Clutch (Narrow) | 5           | 104-8301           | 1           | Nut-HF, NI         |
| 2           | 138-9792           | 1           | Pulley-Engine        | 6           | 120-2217           | 1           | Isolator-Clutch    |
| 3           | 117-7468           | 1           | Clutch-Electric      | 7           | 3212-16            | 1           | Screw-HH           |
| 4           | 3234-42            | 1           | Screw-HHF            |             |                    |             |                    |

# Attachments and Accessories

## For 75745 TimeCutter MX 4275 Riding Mower

| Product Name                                                                     | Model/Part   |
|----------------------------------------------------------------------------------|--------------|
| Hourmeter Kit .....                                                              | 116-5461     |
| Seat Cover w/Arm Rest .....                                                      | 117-0097     |
| Striping Kit .....                                                               | 121-5702     |
| Jack Kit .....                                                                   | 127-6666     |
| Fuel Stabilizer .05 oz .....                                                     | 130-2393     |
| 4-Cycle Fuel, Snow And Lawn 32oz Can .....                                       | 131-3823     |
| Toro Premium Fuel Treatment 12 Oz Bottle .....                                   | 131-6572     |
| Heavy Duty Air Cleaner Kit .....                                                 | 135-6195     |
| Replacement Blade Kit .....                                                      | 137-1999-03P |
| Maintenance Kit Toro V-twin Engine .....                                         | 139-0646     |
| Maintenance Kit Toro .....                                                       | 139-0649     |
| 42 Inch Recycler Kit .....                                                       | 139-3265     |
| 42 Inch Bagging Enhancement Kit .....                                            | 139-7478     |
| Front Weight Kit .....                                                           | 140-2050     |
| Heavy Duty Spring Kit .....                                                      | 140-2051     |
| Assist Bar Kit .....                                                             | 140-2052     |
| Sunshade Kit .....                                                               | 140-2054     |
| LED Light Kit .....                                                              | 140-2056     |
| Deck Footlift Assist Kit .....                                                   | 140-2059     |
| Floormat Kit .....                                                               | 140-2061     |
| Jack Mount Kit .....                                                             | 140-2711     |
| 10w30 4-Cycle Engine Oil (32oz Bottle) .....                                     | 38280        |
| Toro 4-Cycle SAE 30 Oil (32oz Bottle) .....                                      | 38903        |
| Storage Cover .....                                                              | 490-7516     |
| Mower Deck Drive Belt, TimeCutter SS Riding Mower with 42-inch Mowing Deck ..... | 79004        |
| Twin Bagger, Timecutter 42 Inch Fab .....                                        | 79411        |
| ROPS Kit .....                                                                   | 79485        |
| Slope Sensor Kit .....                                                           | 79486        |

## For 75745TA TimeCutter MX 4275 Riding Mower

| Product Name                                   | Model/Part   |
|------------------------------------------------|--------------|
| Hourmeter Kit .....                            | 116-5461     |
| Seat Cover w/Arm Rest .....                    | 117-0097     |
| Striping Kit .....                             | 121-5702     |
| Jack Kit .....                                 | 127-6666     |
| Fuel Stabilizer .05 oz .....                   | 130-2393     |
| 4-Cycle Fuel, Snow And Lawn 32oz Can .....     | 131-3823     |
| Toro Premium Fuel Treatment 12 Oz Bottle ..... | 131-6572     |
| Heavy Duty Air Cleaner Kit .....               | 135-6195     |
| Replacement Blade Kit .....                    | 137-1999-03P |
| Maintenance Kit Toro V-twin Engine .....       | 139-0646     |
| Maintenance Kit Toro .....                     | 139-0649     |
| 42 Inch Recycler Kit .....                     | 139-3265     |
| 42 Inch Bagging Enhancement Kit .....          | 139-7478     |

## Attachments and Accessories (continued)

|                                                                                 |          |
|---------------------------------------------------------------------------------|----------|
| Front Weight Kit .....                                                          | 140-2050 |
| Heavy Duty Spring Kit.....                                                      | 140-2051 |
| Assist Bar Kit .....                                                            | 140-2052 |
| Sunshade Kit .....                                                              | 140-2054 |
| LED Light Kit.....                                                              | 140-2056 |
| Deck Footlift Assist Kit .....                                                  | 140-2059 |
| Floormat Kit .....                                                              | 140-2061 |
| Jack Mount Kit .....                                                            | 140-2711 |
| 10w30 4-Cycle Engine Oil (32oz Bottle).....                                     | 38280    |
| Toro 4-Cycle SAE 30 Oil (32oz Bottle) .....                                     | 38903    |
| Storage Cover .....                                                             | 490-7516 |
| Mower Deck Drive Belt, TimeCutter SS Riding Mower with 42-inch Mowing Deck..... | 79004    |
| Twin Bagger, Timecutter 42 Inch Fab.....                                        | 79411    |
| ROPS Kit .....                                                                  | 79485    |
| Slope Sensor Kit.....                                                           | 79486    |

**Notes:**

**Notes:**



**Count on it.**