




VERTEX® S-SERIES

Model No. VXS740EKC52400—Serial No. 413950474 and Up

Picture below may not reflect actual product.

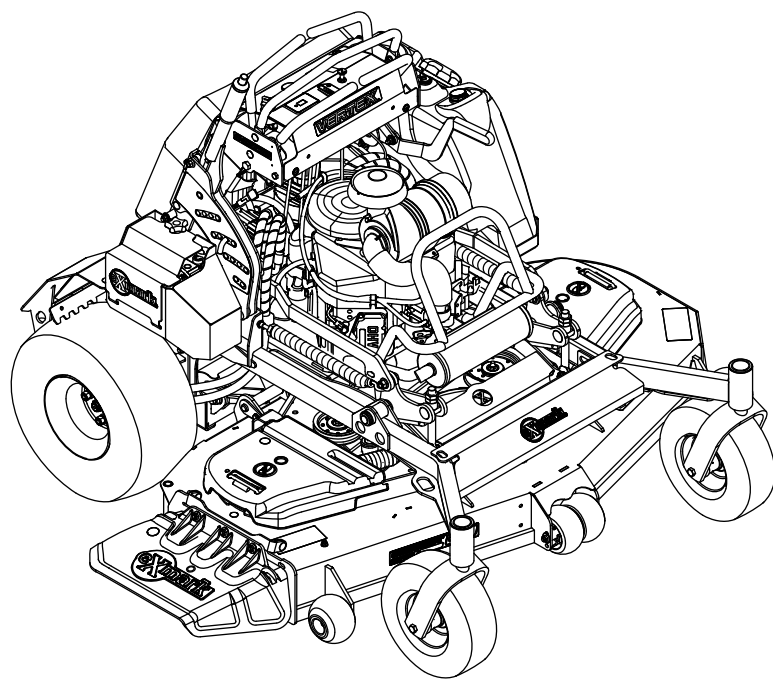

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Touch Up Paint


Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

Contents

Main Frame Assembly	4
Front Caster and Fork Assembly	6
Caster Wheel and Fork Assembly	8
Hydraulic Assembly	10
Rear Wheel Assembly	12
Park Brake Assembly	14
Fuel Assembly	16
Fuel Tank Assembly	18
Controls and Tower Assembly	20
Motion Control Assembly (Short)	22
Motion Control Assembly (Long)	24
Electrical Assembly	26
Harness Assembly	28
Deck Lift Assembly	30
Engine Assembly	32
Complete Deck Assembly	34
Deck Assembly	36
Deck W/Decals Assembly	38
Idler Arm Assembly No. 116-3806	40
Platform and Pad Assembly	42


Main Frame Assembly

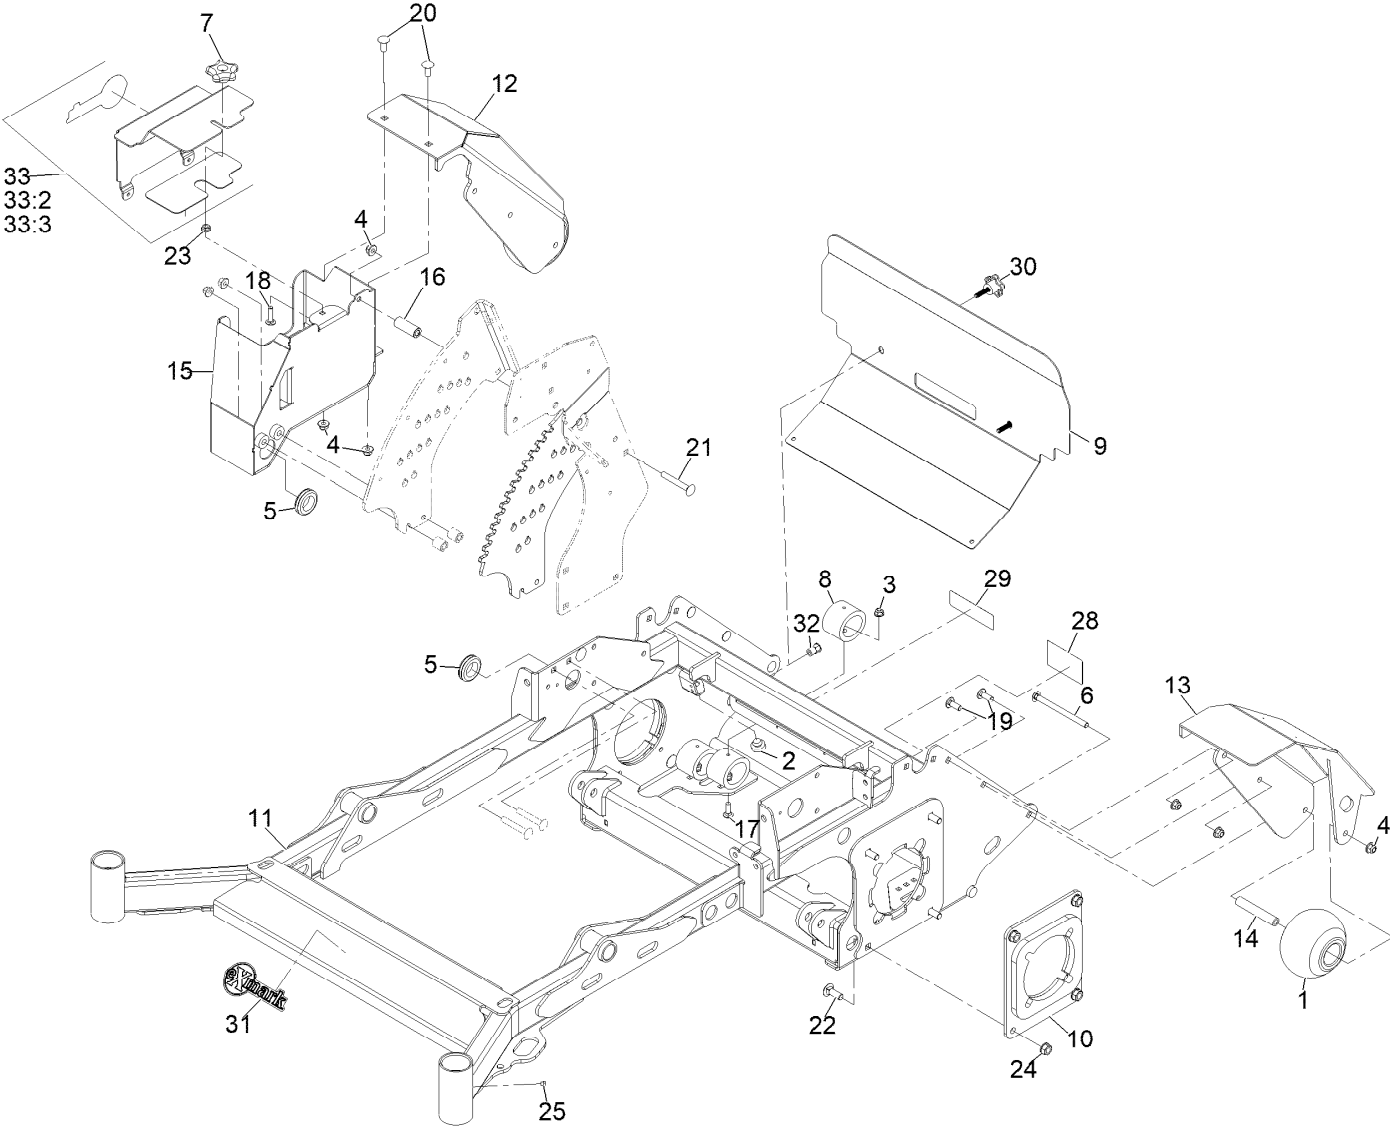

Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-8415	2	Roller-Anti-Scalp	18	3230-29	1	Screw-CARR
2	104-1412	2	Bumper-Rubber	19	3231-22	4	Bolt-Carriage 3/8-16 X 1
3	104-8300	4	Nut-Nyloc 5/16-18 Flg	20	3231-27	2	Bolt-Carriage 3/8-16 X 7/8
4	104-8301	9	Nut-Nyloc 3/8-16 Flg	21	3231-9	1	Bolt-Carriage 3/8-16 X 2 3/4
5	108-3723	2	Grommet	22	3232-2	8	Bolt-CARR
6	109-6795	2	Bolt-Carriage 3/8-16 X 5	23	32128-20	1	Nut-Whizlock 5/16-18
7	117-5976	1	Knob-Handle	24	32128-37	8	Nut-Whizlock 7/16-14
8	135-2548	4	Bumper-Isolator	25	1-811010	2	Plug
9	142-8804-03	1	Guard-Rear Foot	28	116-8253	1	Decal-Drive Release
10	142-8803-03	2	Wld-Mtr Mount 48/52	29	112-9028	1	Decal-Cover, Missing
11	142-8823	1	Mainframe ASM -48/52	30	139-2401	2	Knob
12	142-6264-01	1	Fender- Wheel RH [red]	31	126-6575	1	Decal-Exmark Logo
13	142-6265-01	1	Fender- Wheel LH [red]	32	137-1218	2	Nut-Clinch
14	142-6400	2	Spacer- Roller	33	142-8510	1	ASM-Lid Battery W/Pad
15	142-6571-03	1	Weld-Battery Box	33:2	142-9384	1	Pad-Battery Box Lid
16	142-6675	1	Spacer- Roller	33:3	126-6575	1	Decal-Exmark Logo
17	3230-2	4	Bolt-Carriage 5/16-18 X 1				

Front Caster and Fork Assembly

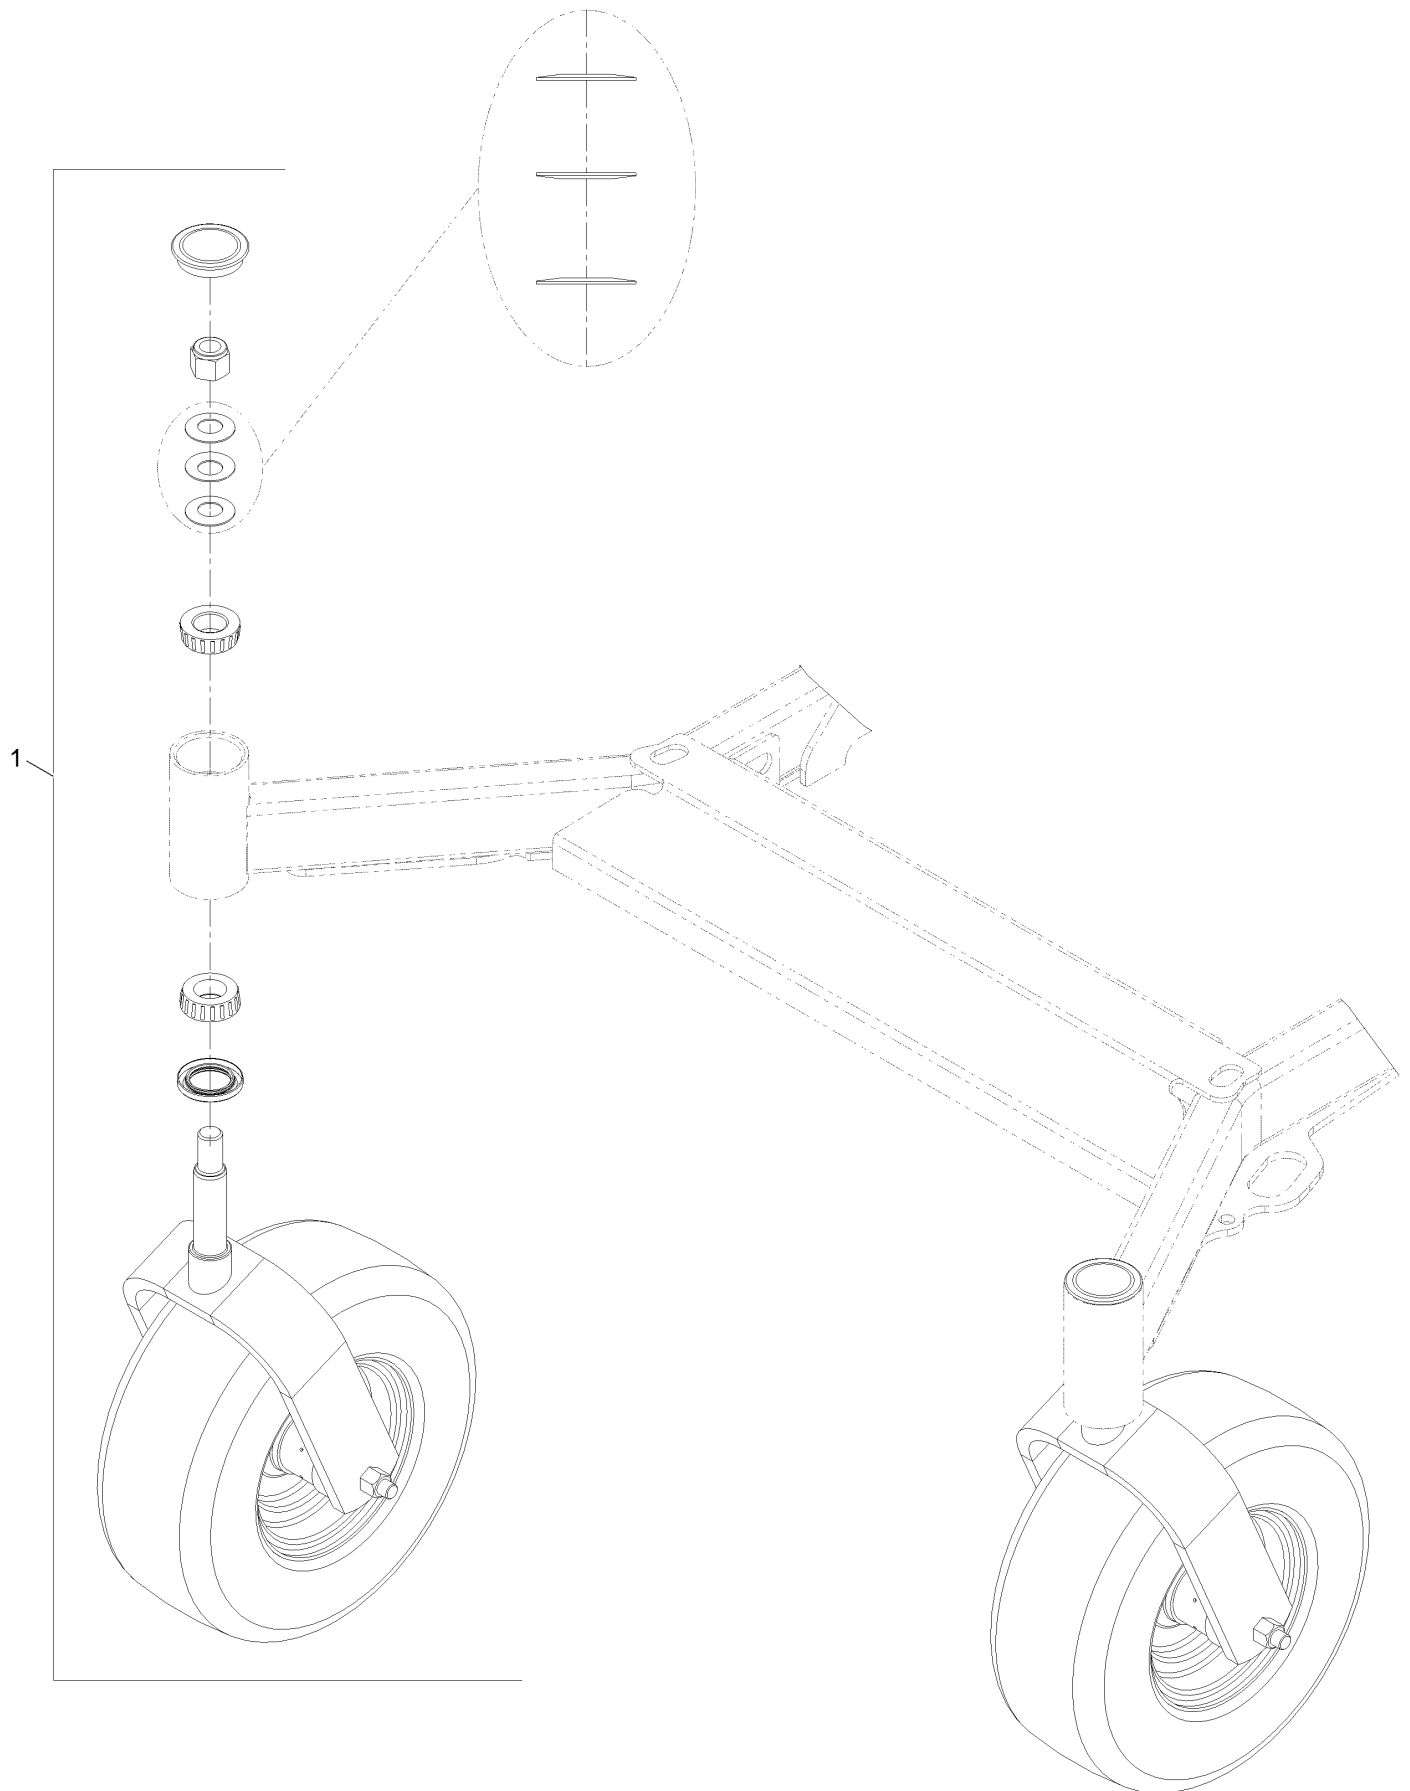


Front Caster and Fork Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		2	ASM-Front Caster W/Fork ●

● Not serviced separately

Caster Wheel and Fork Assembly

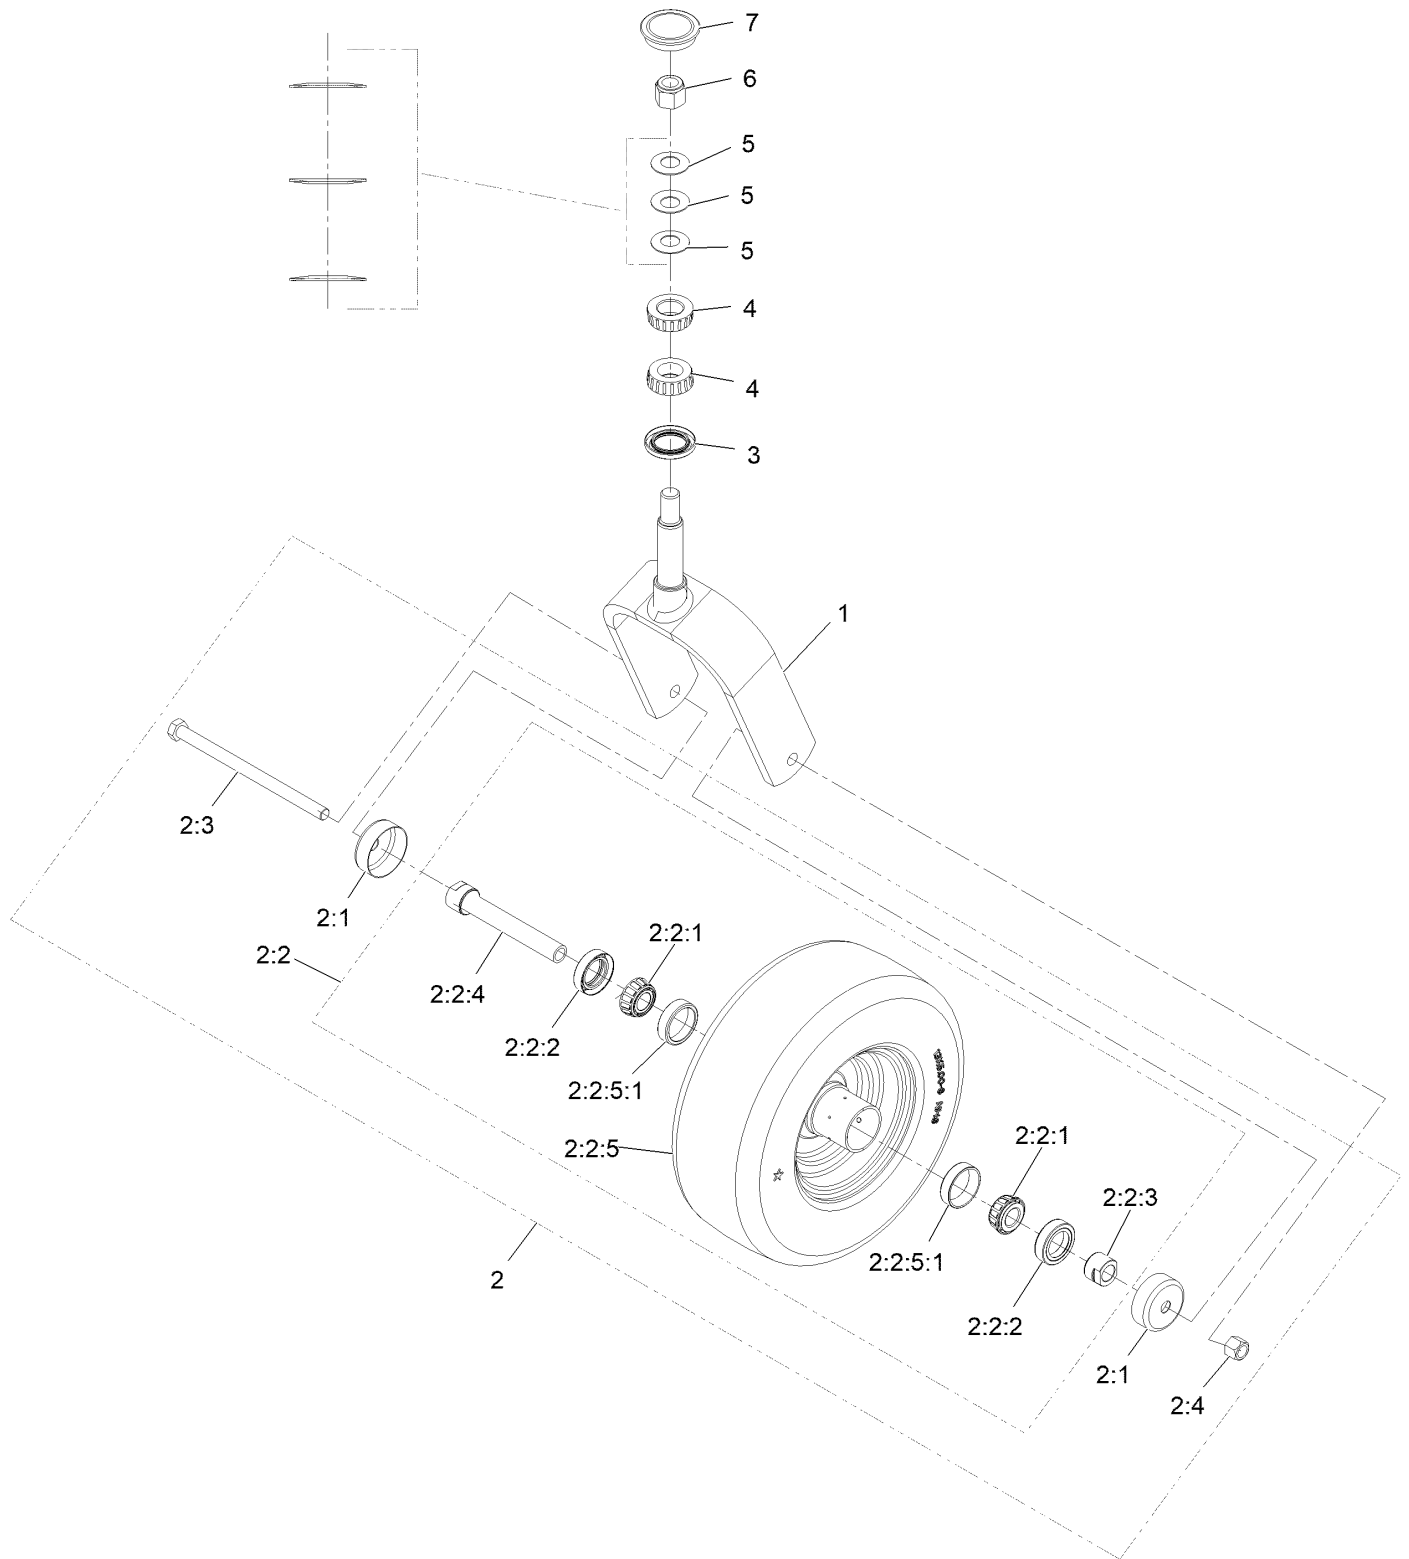

Caster Wheel and Fork Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-4770-01	1	Weld-Caster, Fork
2	109-9126	1	Wheel & Tire ASM
2:1	103-2768	2	Guard-Seal
2:2		1	Wheel And Tire ASM ●
2:2:1	1-633585	2	Bearing-Cone Tapered Roller
2:2:2	103-0063	2	Seal-Double Lip
2:2:3	103-3051	1	Spacer-Nut ■
2:2:4	126-5360	1	Axle-Caster
2:2:5		1	Wheel And Tire ASM ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2:2:5:1	1-633584	2	Bearing-Cup
2:3	325-42	1	Screw-HH 1/2-13 X 8
2:4	3296-23	1	Nut-Nyloc 1/2-13
3	116-5647	1	Seal-Grease
4	1-543509	2	Cone-Bearing Tapered Roller
5	1-633508	3	Washer-Spring Disc
6	3296-51	1	Nut-Nyloc 3/4-10
7	103-4882	1	Cap-Grease

● Not serviced separately

■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

Hydraulic Assembly

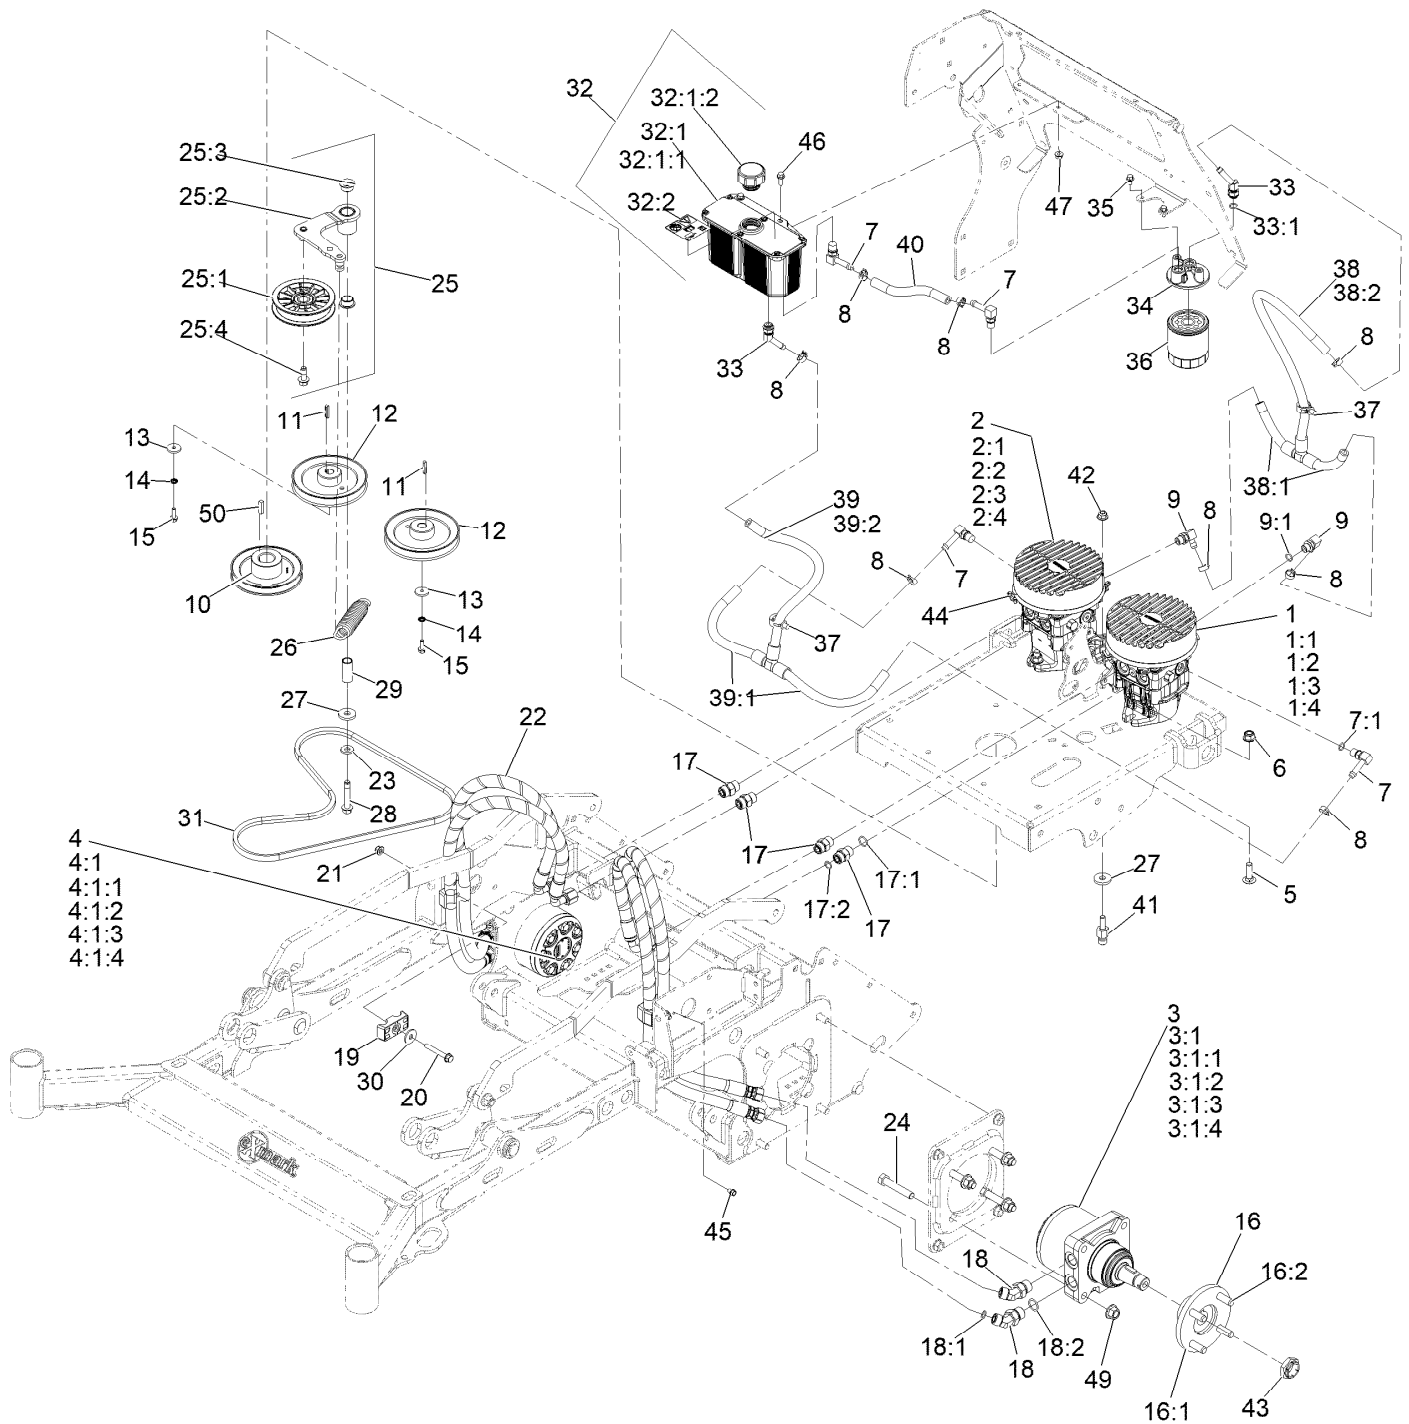


Hydraulic Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-8892	1	Pump-12Cc Lt W/Shock Valve	18:2	237-80	1	O-Ring
1:1	126-2479	1	Kit, 10Cc/12Cc Pump Kit	19	94-8105	4	Clamp-Tube
1:2	105-6184	1	Seal Overhaul Kit	20	139-4479	2	Screw-HHF
1:3	103-7489	1	Guard, Pw Pump Fan	21	104-8300	2	Nut-Nyloc 5/16-18 Flg
1:4	103-7488	1	Fan, Pw Pump Cooling	22	142-6300	4	Hose ASM-HYD HP
2	142-8893	1	Pump-12Cc Rt W/Shock Valve	23	98-5975	1	Washer-Spring Disc 3/8
2:1	126-2479	1	Kit, 10Cc/12Cc Pump Kit	24	325-11	8	Screw-HH 1/2-13 X 2 3/4
2:2	105-6184	1	Seal Overhaul Kit	25	142-6821	1	ASM-Pump Idler
2:3	103-7489	1	Guard, Pw Pump Fan	25:1	109-4077	1	Pulley-Idler, Flat
2:4	103-7488	1	Fan, Pw Pump Cooling	25:2	142-6820	1	ASM-Pump Idler Arm
3	142-8578	1	Motor, TI240 LH	25:3	109-8054	2	Bushing-Flanged
3:1	130-1788	1	Seal Kit	25:4	126-1680	1	Screw-HHF
3:1:1		5	Seal-Ring, Viton ●■	26	135-1272	1	Spring, Extension
3:1:2		1	Seal-Commutator ●■	27	1-373034	2	Washer
3:1:3		1	Seal-Dirt/Water, Hi Temp ●■	28	126-2956	1	Screw-HHF 3/8-16 X 2 1/4
3:1:4		1	Seal-Shaft ●■	29	126-2954	1	Pivot, Idler
4	142-8577	1	Motor, TI240 RH	30	52-2861	2	Washer
4:1	130-1788	1	Seal Kit	31	142-8149	1	Belt- Cog A 54
4:1:1		5	Seal-Ring, Viton ●■	32	126-1248	1	ASM, HYD Reservoir
4:1:2		1	Seal-Commutator ●■	32:1		1	Reservoir-HYD ■
4:1:3		1	Seal-Dirt/Water, Hi Temp ●■	32:1:1	103-1948	1	Cap-Reservoir, HYD
4:1:4		1	Seal-Shaft ●■	32:1:2	142-2792	1	O-Ring
5	3232-3	4	Bolt-Carriage 7/16-14 X 1 1/2	32:2	115-4212	1	Decal-Warning
6	114-8417	4	Nut-HF, NI	33	103-1807	2	Fitting-Barbed, 45 DEG
7	100-4887	4	Fitting-Elbow, 90	33:1	237-42	1	O-Ring
7:1	237-42	1	O-Ring	34	103-2888	1	Head-Filter
8	103-1988	8	Clamp-Hose 11/16	35	3234-13	2	Screw-HH Flg 1/4-20 X 1/2
9	126-2927	2	Fitting-90 DEG	36	109-4180	1	Element, Oil Filter
9:1	237-42	1	O-Ring	37	32180-030	2	Clip-Tie
10	116-1946	1	Sheave-Pump, Drive	38	142-7809	1	ASM-Hydraulic Lo-Pres
11	135-7971	2	Key	38:1	142-6776	2	Hose, LP Hydro
12	142-6433	2	Sheave-Pump	38:2	142-6775	1	Hose, LP Hydro
13	142-8011	2	Washer-1.00 OD X .25 ID	39	142-7810	1	ASM-Hydraulic Lo-Pres
14	1-323235	2	Washer-Spring	39:1	142-6773	2	Hose, LP Hydro
15	142-8012	2	Screw-HHF	39:2	142-6772	1	Hose, LP Hydro
16	18-3209	2	Wheel Hub/Stud ASM	40	142-6771	1	Hose, LP Hydro
16:1	10-6870-03	1	Hub-Wheel	41	126-0423	1	Pin-Spring, Anchor
16:2	10-6830	4	Stud-Type, Drive	42	104-8301	1	Nut-Nyloc 3/8-16 Flg
17	340-4	4	Fitting-Straight	43	116-1399	2	Locknut
17:1	237-30	1	O-Ring	44	1-303287	4	Tie-Cable 5 1/2 (Small)
17:2	237-79	1	O-Ring	45	137-4795	2	Screw
18	340-89	4	Fitting-HYD, 45 DEG	46	3234-4	2	Screw-HH Flg 1/4-20 X 3/4
18:1	237-30	1	O-Ring	47	32128-32	2	Nut-Hex 1/4-20 Side Lock
				49	99-5107	8	Nut-Lock 1/2-13
				50	1-807259	1	Key

● Not illustrated

■ Not serviced separately


Rear Wheel Assembly

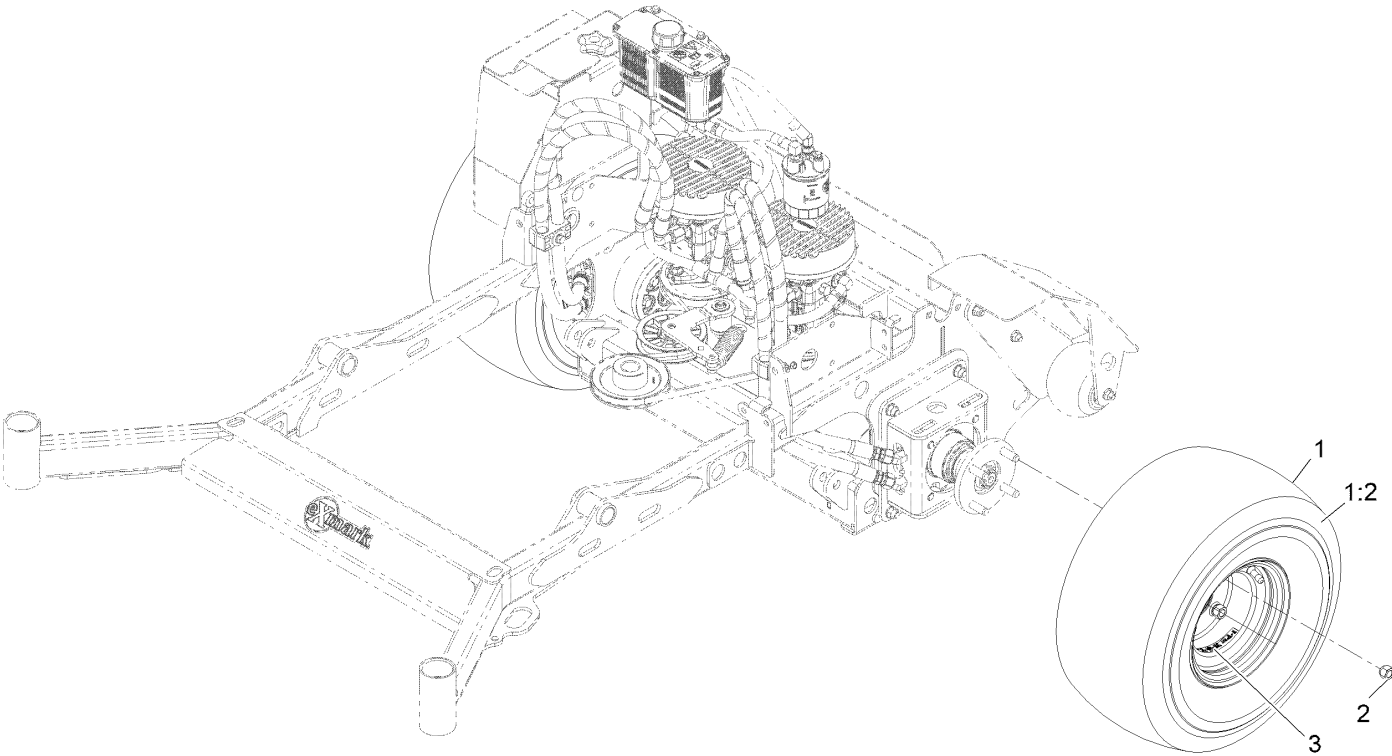

Rear Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-6054	2	Wheel/Tire ASM	2	242-50	8	Nut-Lug 1/2-20
1:2	142-6416	1	Tire	3	126-2055	2	Decal-Torque, Wheel Hub Lug


Park Brake Assembly

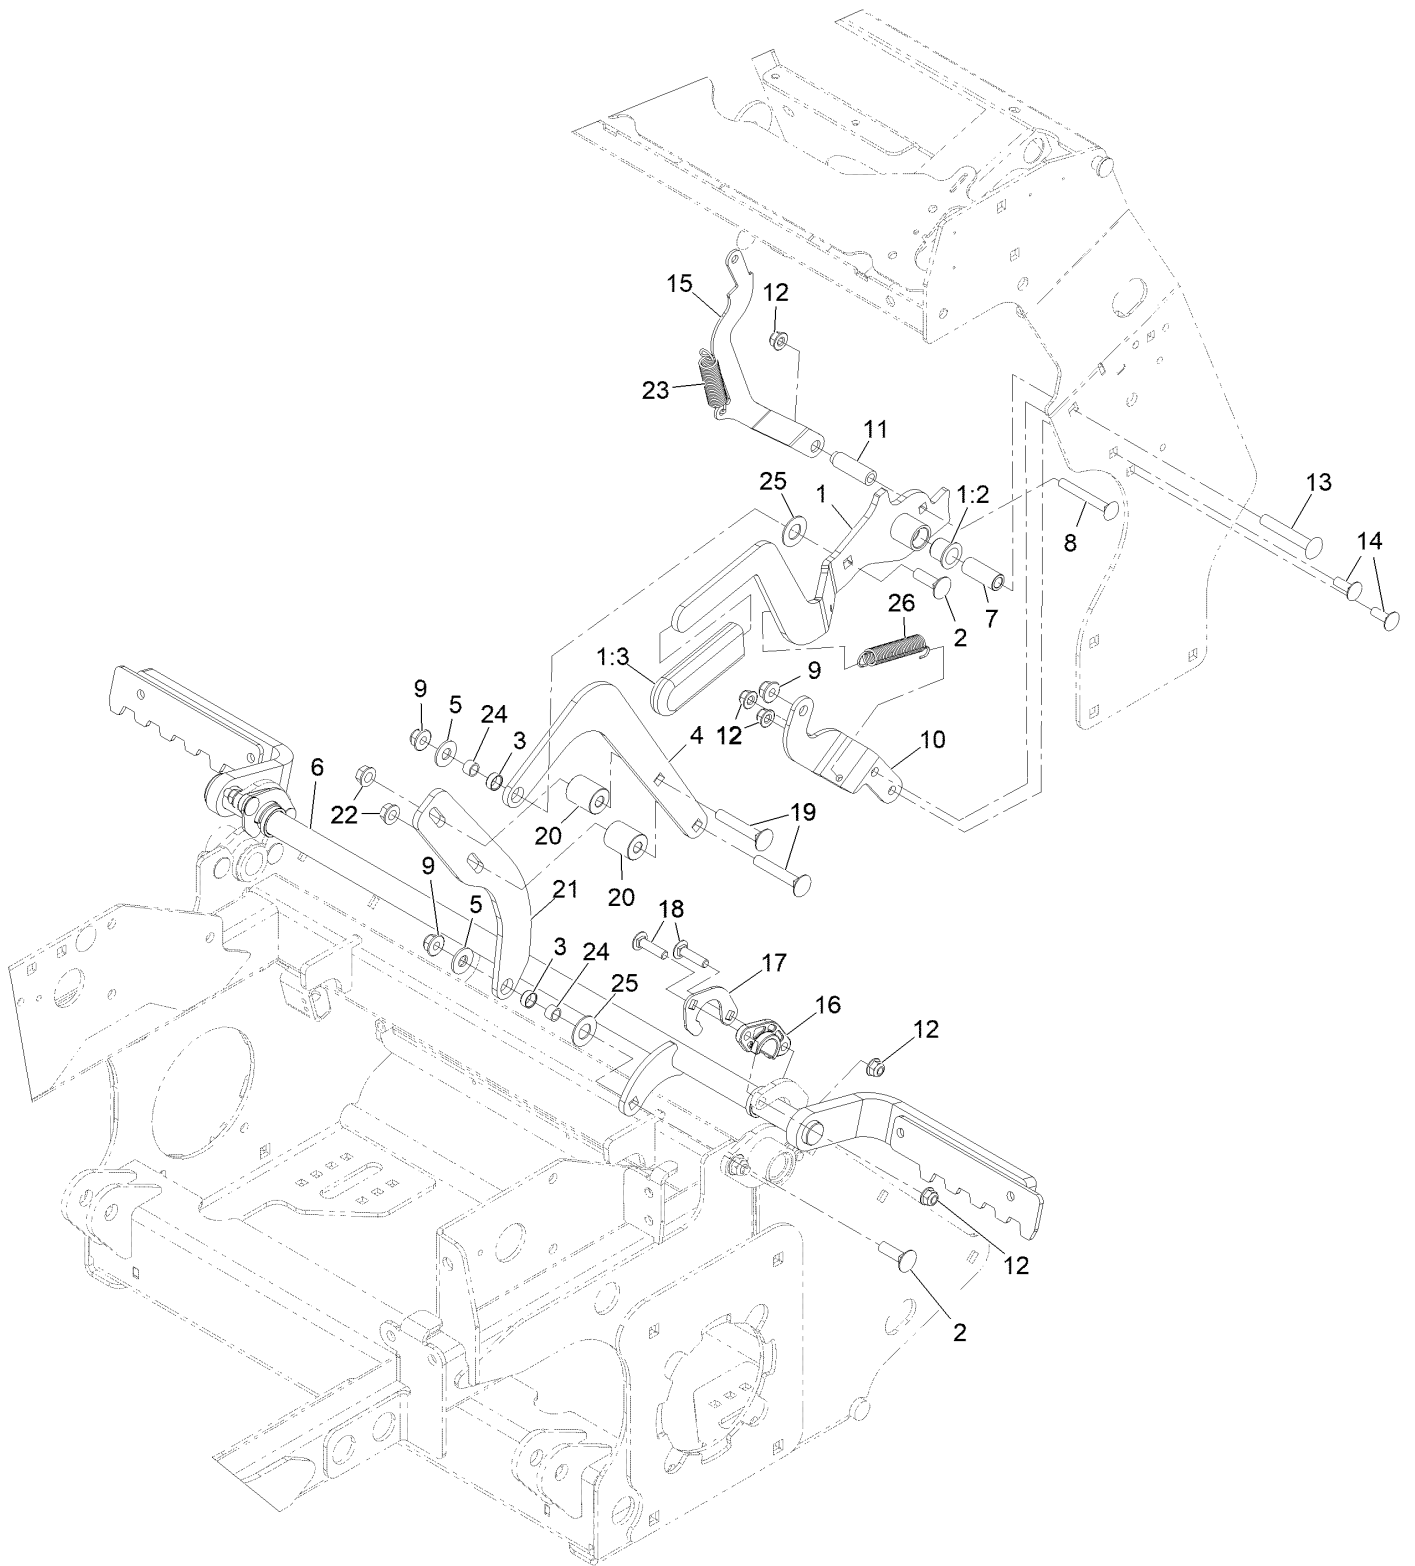

Park Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	146-0208	1	ASM-Handle Brake	13	3231-44	1	Bolt-Carriage 3/8-16 X 2 1/2
1:2	108-2974	2	Bushing-Flange	14	3230-10	2	Bolt-Carriage 5/16-18 X 7/8
1:3	1-633268	1	Grip-Lever	15	142-7765-03	1	Link-Brake Control Lock
2	3231-25	2	Bolt-Carriage 3/8-16 X 1 1/4	16	115-5065	2	Bushing-Flange
3	133-5109	2	Bearing-Sleeve	17	135-7867	2	Support, Bearing
4	142-7464	1	Link-Brake Upper	18	3230-29	4	Screw-Carriage 5/16-18 X 1 1/4
5	3256-4	2	Washer-3/8 Std	19	3231-7	2	Bolt-Carriage 3/8-16 X 2 1/4
6	142-7470-03	1	ASM-Brake Shaft [black]	20	142-7467	2	Spacer-.39 ldx1.0 Odx1.2 L
7	146-0245	1	Spacer-Pivot	21	142-9372	1	Link - Lower Brake
8	3230-8	1	Bolt-Carriage 5/16-18 X 2 1/2	22	3290-357	2	Nut-Whizlock 3/8-16
9	104-8301	3	Nut-Nyloc 3/8-16 Flg	23	126-2127	1	Spring-Extension
10	146-0570-03	1	Bracket-Brake Lever Supt	24	142-7468	2	Spacer-Brake Pivot
11	142-6746	1	Spacer-.31 X 1.25 Yz	25	61-1950	2	Washer-Plastic
12	104-8300	7	Nut-Nyloc 5/16-18 Flg	26	109-7124	1	Spring-Extension


Fuel Assembly

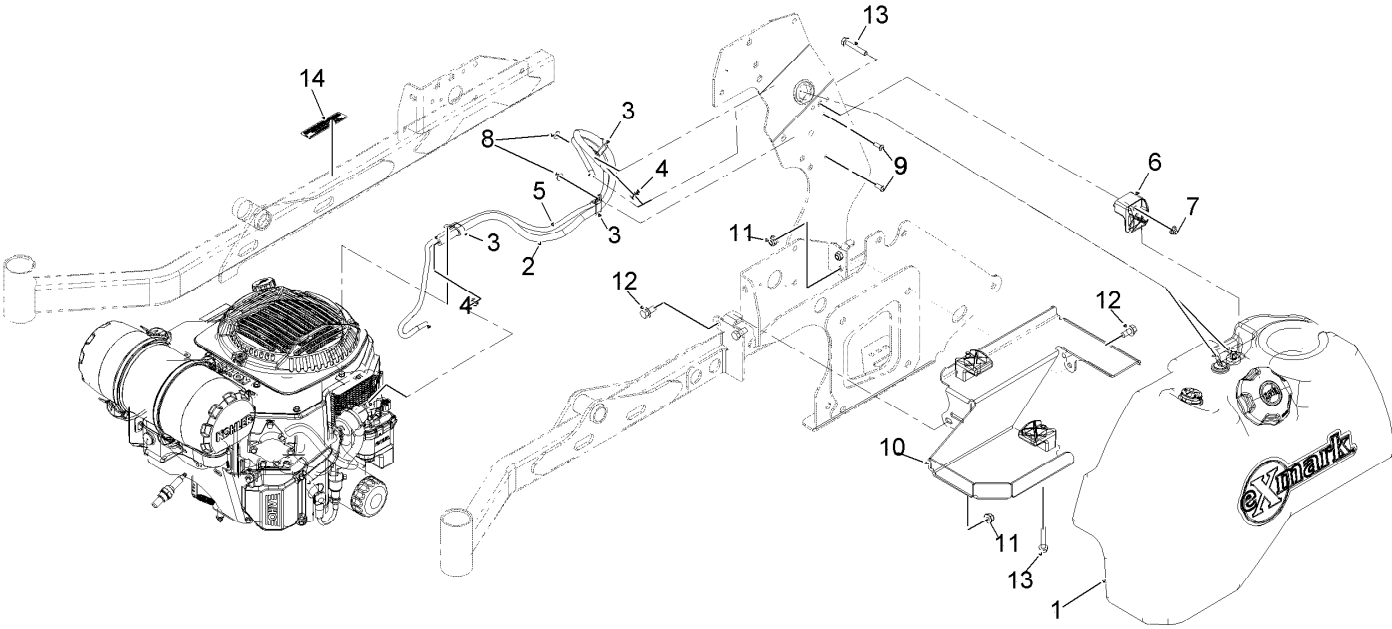

Fuel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-6113	1	ASM, Fuel Tank 8 Gal	8	32128-33	2	Nut-Whizlock 1/4-20
2	109-0275	1	Hose-Fuel Line 32"	9	3274-69	2	Screw-HSBH
3	119-8153	3	Clamp-R, Double Tube	10	142-5959-03	1	Bracket, Fuel Tank
4	2412-98	2	Clamp-Hose	11	104-8301	4	Nut-Nyloc 3/8-16 Flg
5	116-4346	1	Hose-Emissions	12	3234-1	4	Screw-HH Flg 3/8-16 X 3/4
6	107-4543	3	Clamp	13	142-6275	3	Screw-HHF
7	104-8300	3	Nut-Nyloc 5/16-18 Flg	14	133-8062	1	Decal-Arrestor, Spark

Fuel Tank Assembly

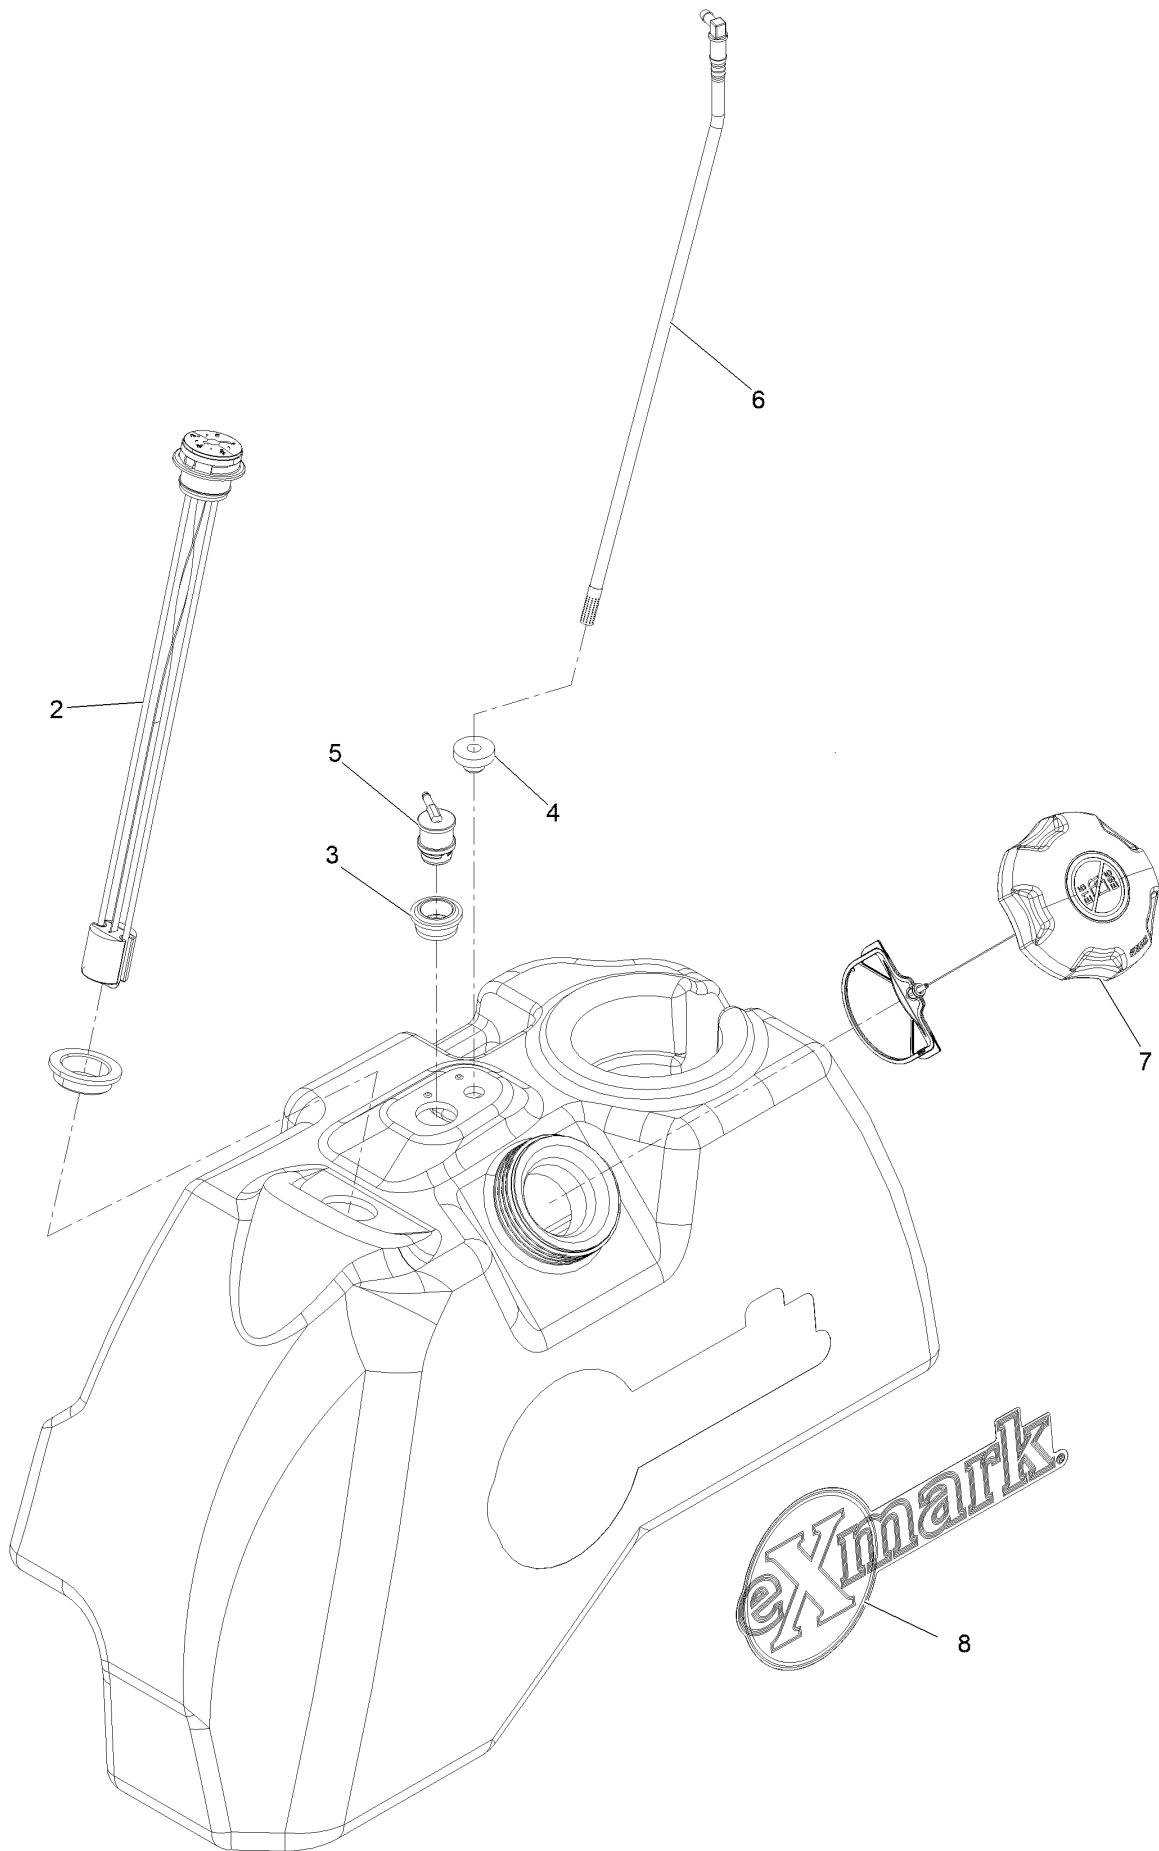


Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	142-8013	1	ASM-Fuel Gauge	7	137-4119	1	Cap-Fuel, Ratcheting
3	114-0284	1	Grommet	8	142-6800	1	Decal-Exmark Logo Fuel
4	46-6560	1	Bushing	99	135-3694	1	Kit-Fuel Gauge Replacement ●
5	119-3547	1	Valve-Vent, Fuel				
6	132-9905	1	Pipe-Stand				

● Not illustrated


Controls and Tower Assembly

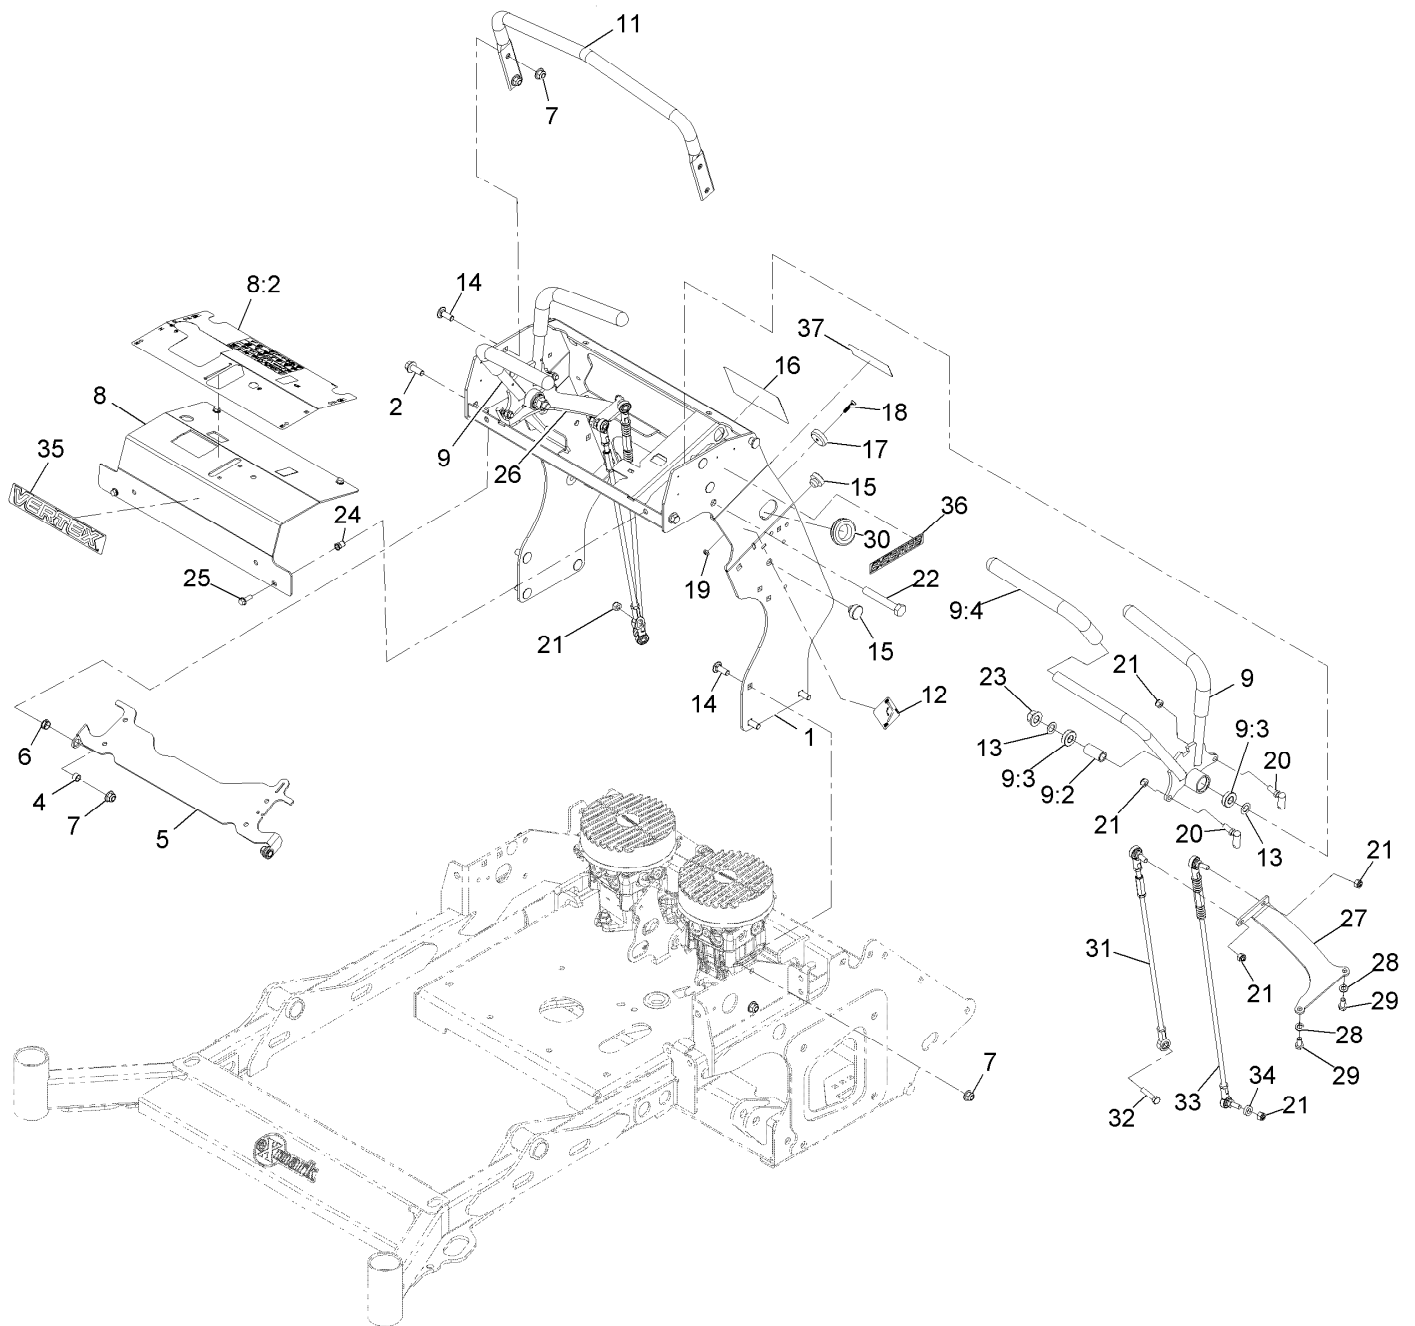

Controls and Tower Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-6031-01	1	ASM-Tower [red]	18	142-7830	2	Screw Flat HD #10-24X1.00
2	3234-42	2	Screw HHF 3/8-16 X 1	19	110-3145	2	Nut-Lock
4	142-7468	2	Spacer-Brake Pivot	20	2411-33	4	Balljoint-RH (W/Grommet)
5	142-7749-03	1	Plate-Motion Cntrl Lock	21	3296-4	11	Nut-Lock 5/16-24
6	116-1393	2	Bushing	22	325-13	2	Screw-HH 1/2-13 X 3 1/4
7	104-8301	12	Nut-Nyloc 3/8-16 Flg	23	99-5107	2	Nut-Lock 1/2-13
8	142-8251	1	Panel-Control W/ Decal	24	138-2760	4	Nut-Clinch, Hex
8:2	146-0288	1	Decal-Control Panel EFI	25	119-1138	4	Screw-HHF
9	142-6057	2	ASM-Ctrl Lever	26	142-6017-03	1	Bracket-Link Ctrl LH
9:2	142-6579	1	Spacer	27	142-6018-03	1	Bracket-Link Ctrl RH
9:3	52-2450	2	Bearing-Ball	28	3253-4	4	Washer-Lock 5/16
9:4	116-2357	2	Grip-Handle, Control	29	3210-3	4	Screw-HH 5/16-24 X 3/4
11	142-6067-03	1	Bar-Reference	30	108-3723	1	Grommet
12	116-5988	1	Decal-Park Brake, CE	31	142-8611	2	ASM-Motion Control Short
13	98-1629	4	Washer	32	3210-8	1	Screw-HH 5/16-24 X 1 1/2
14	3231-22	10	Bolt-Carriage 3/8-16 X 1	33	142-7545	2	ASM-Motion Control Long
15	104-1412	5	Bumper-Rubber	34	142-7724	2	Spacer
16	142-7432	1	Decal-Service Aid	35	142-8185	1	Decal-Vertex Logo
17	142-7895	2	Magnet-Rare Earth Thigh Pad	36	126-6998	2	Decal-S-Series
				37	142-8303	1	Decal-Fuse


Motion Control Assembly (Short)

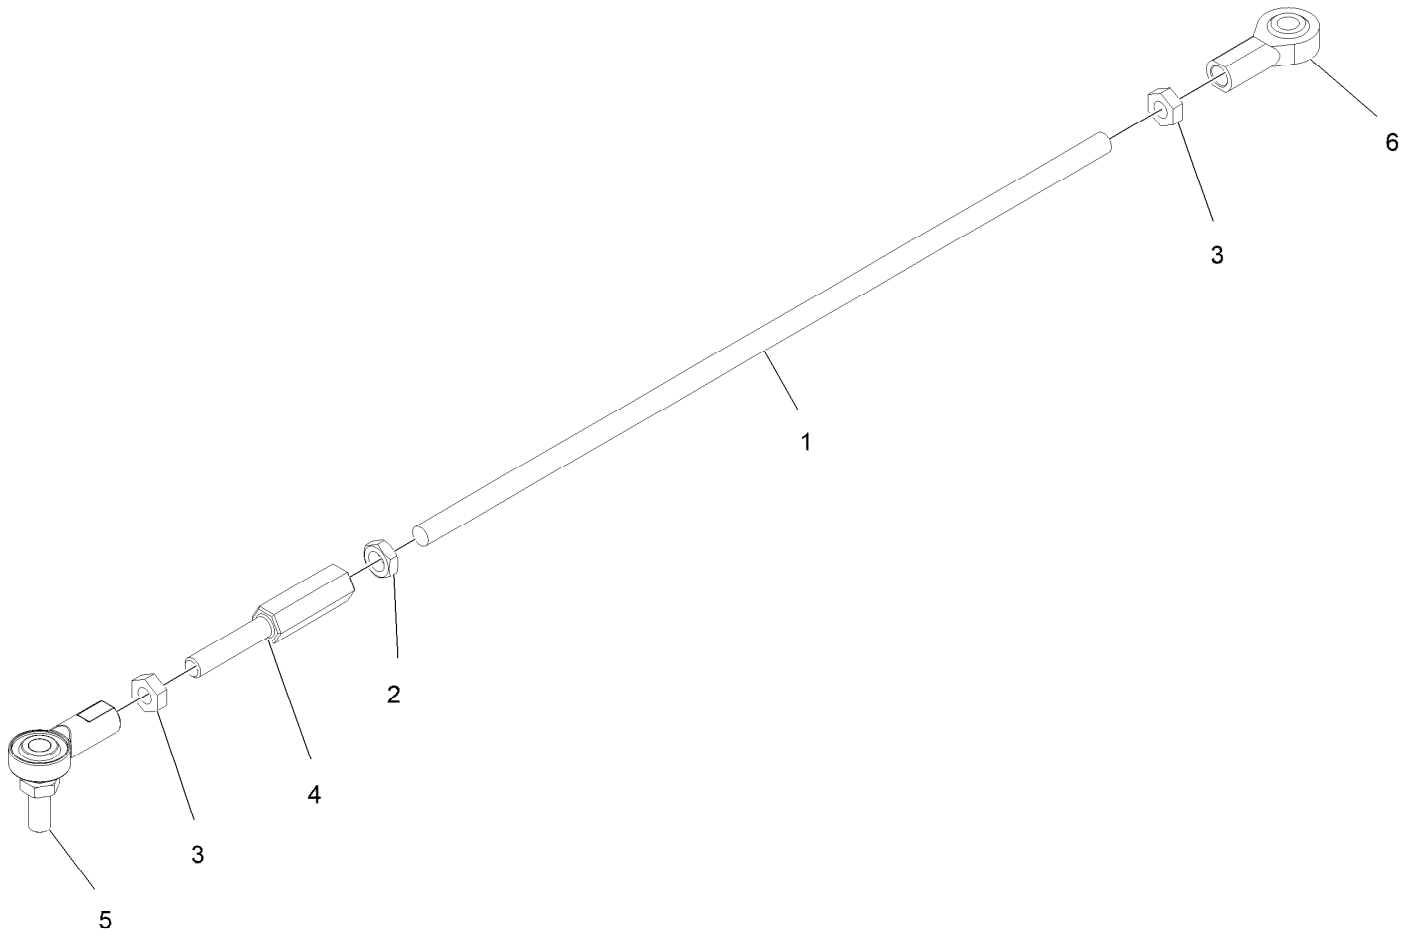

Motion Control Assembly (Short) (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-8610	1	Rod-Motion Control Short	4	142-7543	1	Rod-Adjust
2	3220-20	1	Nut-Jam 5/16-24 LH	5	1-513132	1	Joint, Ball
3	3220-2	2	Nut-Jam 5/16-24	6	1-543017	1	Balljoint


Motion Control Assembly (Long)

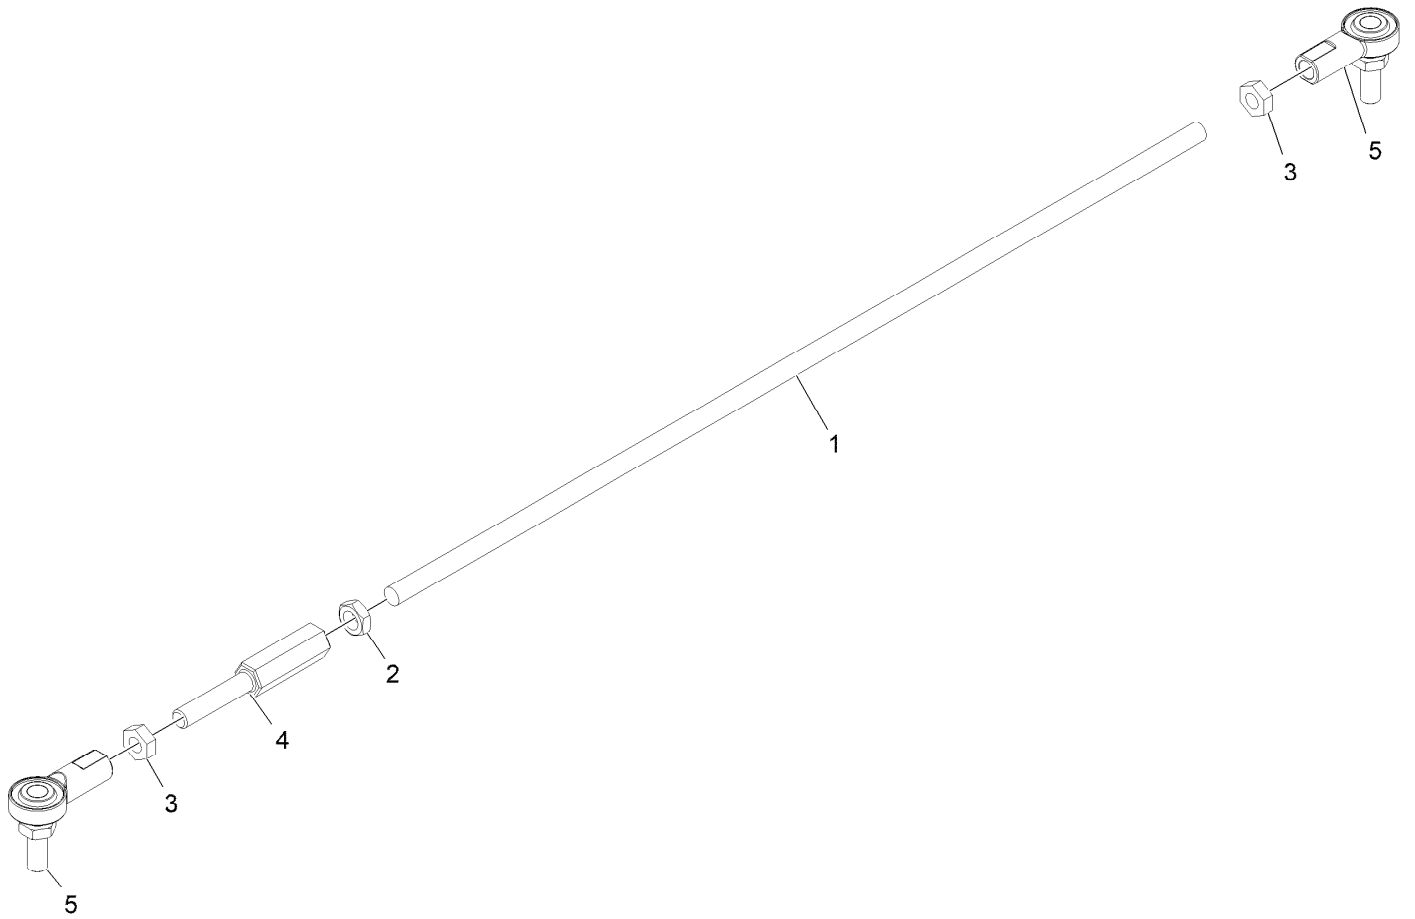

Motion Control Assembly (Long) (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-7544	1	Rod-Motion Control Long	4	142-7543	1	Rod-Adjust
2	3220-20	1	Nut-Jam 5/16-24 LH	5	1-513132	2	Joint, Ball
3	3220-2	2	Nut-Jam 5/16-24				

Electrical Assembly

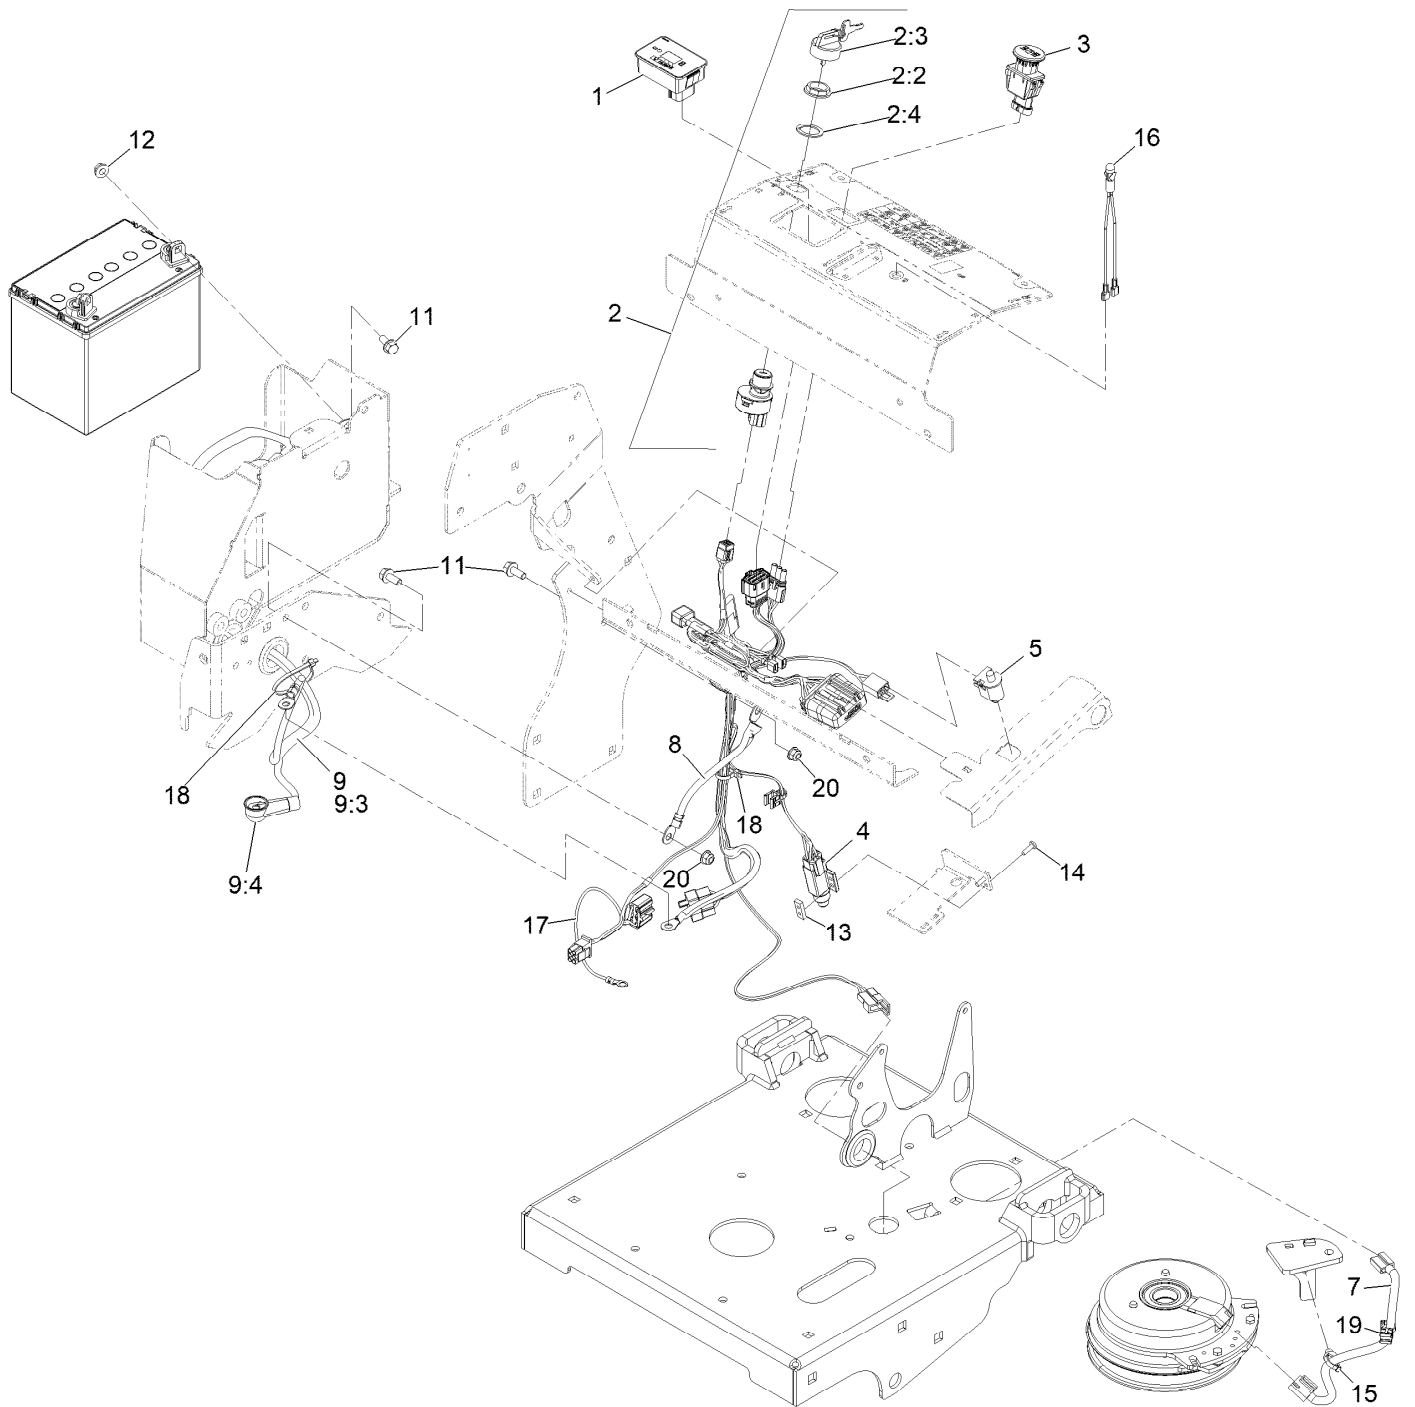


Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-7401	1	Module-Hour Meter	9:4	AU21001545	1	Boot-Battery, Red
2	126-6285	1	Ignition Switch ASM	11	3234-5	4	Screw-HH Flg 5/16-18 X 3/4
2:2	108-8660	1	Nut-Mounting	12	32128-20	2	Nut-Whizlock 5/16-18
2:3	106-5270	1	Ignition Key Set	13	1-633181	1	Plate-Tapped
2:4	108-8659	1	Washer-Backup	14	3290-500	2	Screw-PPH #10-24 X 5/8
3	126-6187	1	Switch-PTO, Sealed	15	32180-030	1	Clip-Tie
4	99-7407	1	Switch	16	1-643267	1	Indicator-Red LED
5	82-2190	1	Switch	17	142-8461	1	Harness-Indicator Light, EFI
7	126-0624	1	Harness-Clutch Pigtail	18	3290-378	4	Tie-Cable
8	142-6462	1	Harness-Wiring ●	19	32180-078	1	Clip-Edge
9	142-6765	1	Harness-Battery	20	104-8300	2	Nut-Nyloc 5/16-18 Flg
9:3	32180-008	1	Insulator-Lug, Red				

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.


Harness Assembly

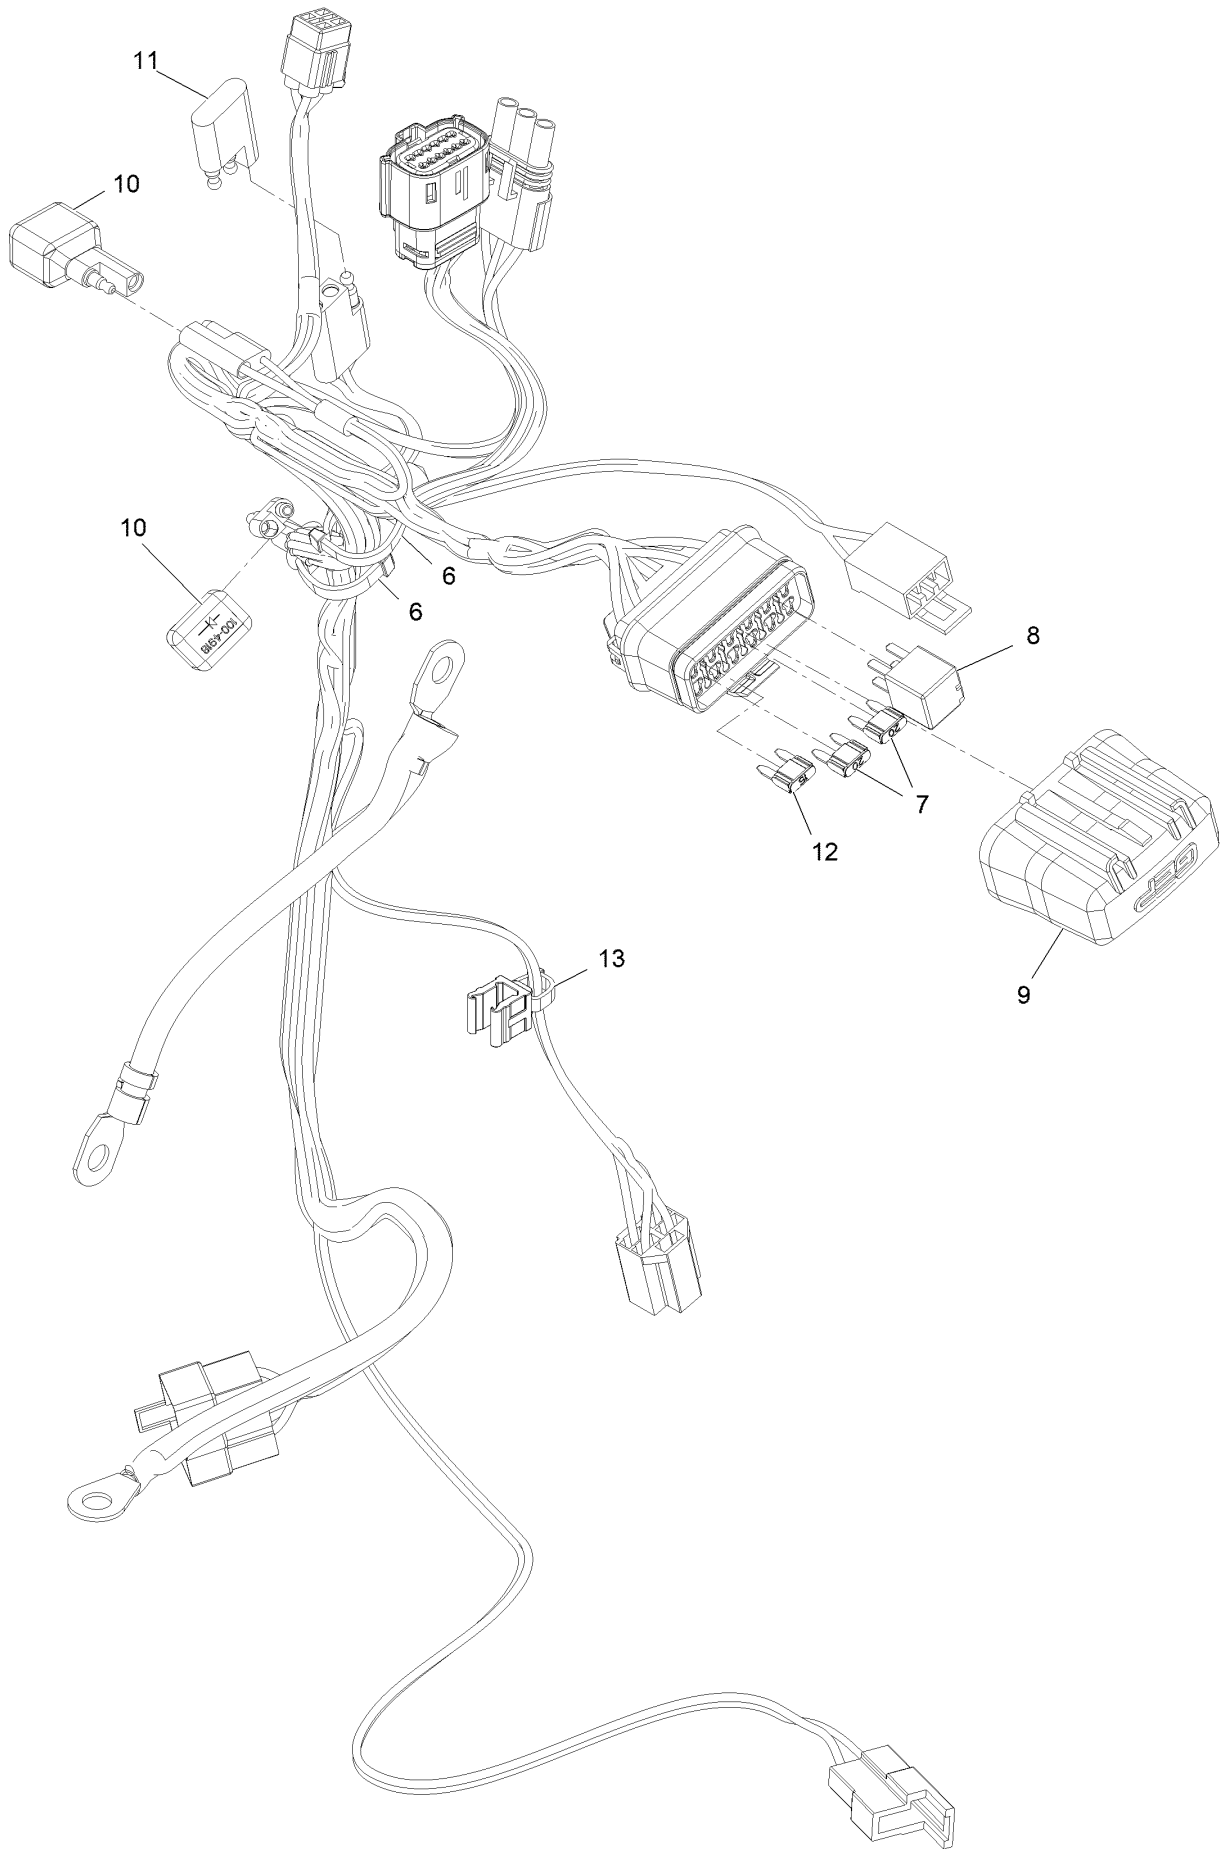

Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	32180-030	2	Clip-Tie	11	32180-197	1	Cap-Plug
7	121-8868	2	Fuse-Mini Blade, 20 Amp	12	121-8867	1	Fuse-Mini Blade, 15 Amp
8	126-3991	1	Relay-Micro	13	32180-082	1	Clip-Edge W/Tie, Perpendicular
9	32180-176	1	Cover-Block, Fuse				
10	100-4918	2	Diode				


Deck Lift Assembly

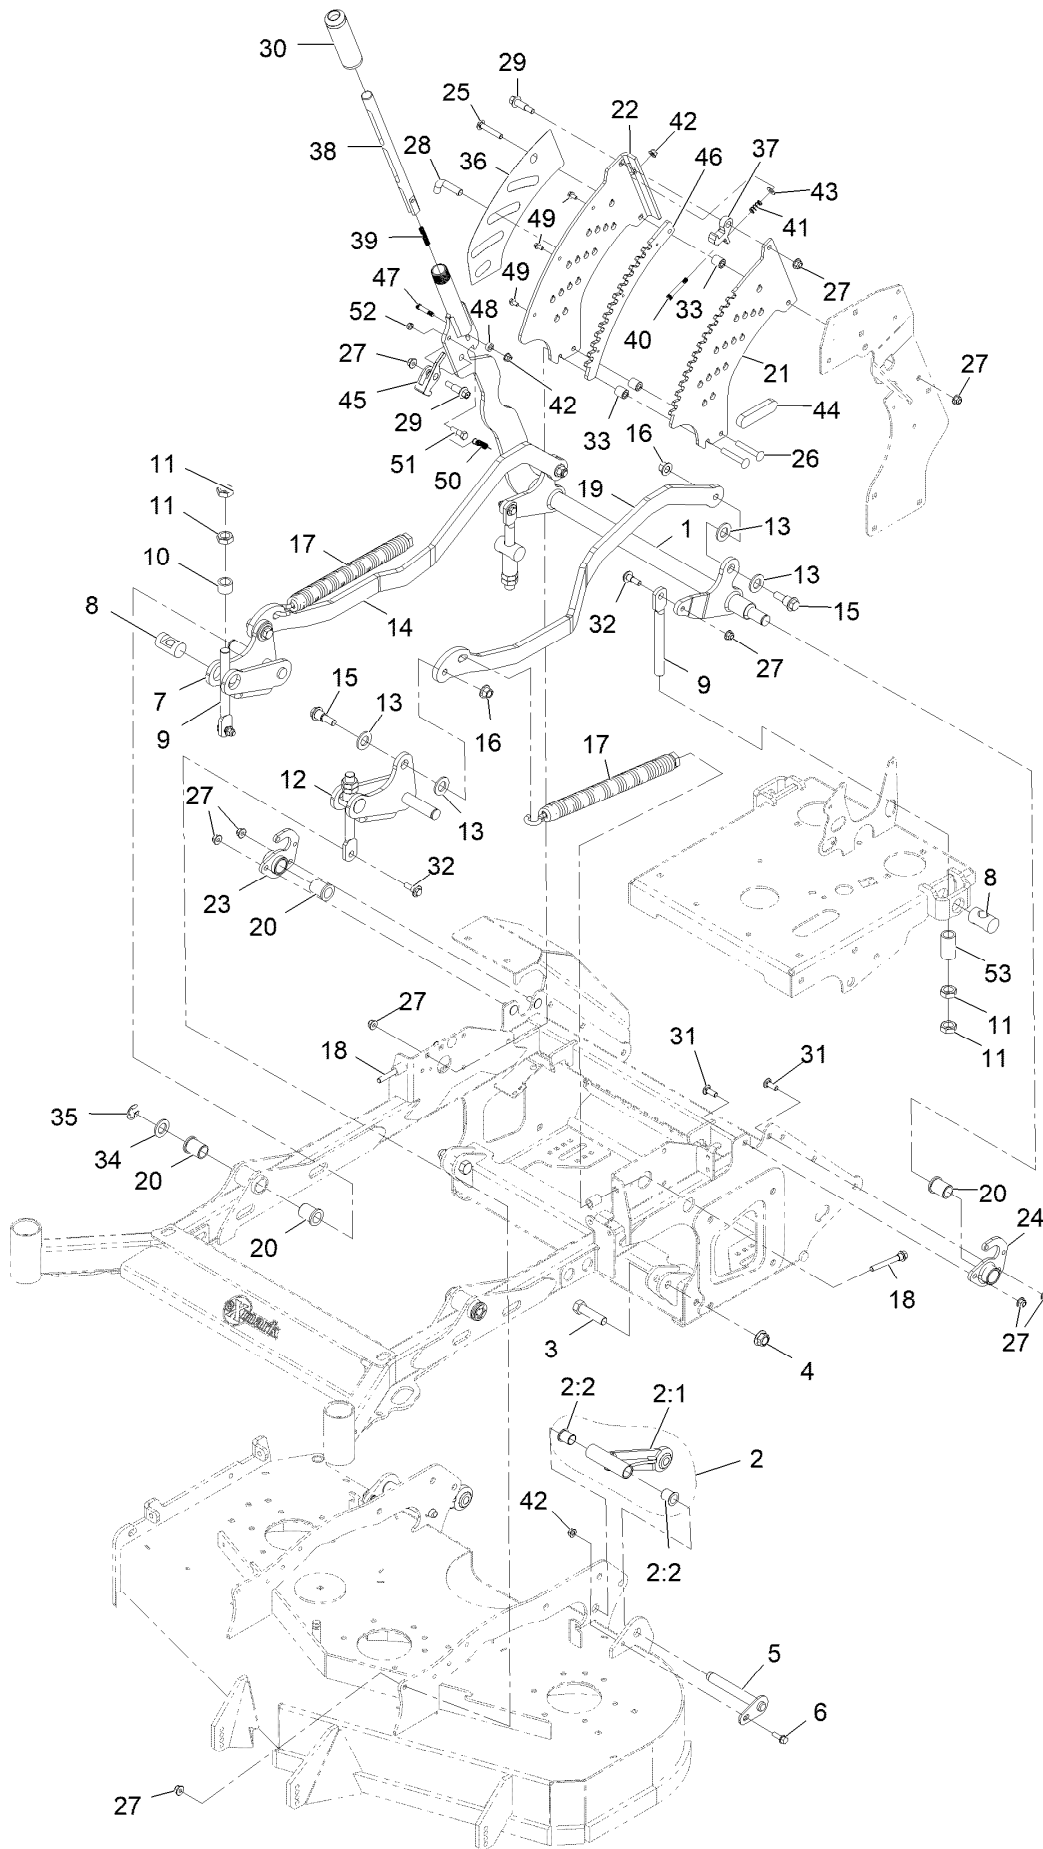

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	146-0906-03	1	Cross Shaft-Decklift-Rear [black]	26	3231-44	2	Bolt-Carriage 3/8-16 X 2 1/2
2	142-5096	2	ASM-Deck Strut W/Bushings	27	104-8301	13	Nut-Nyloc 3/8-16 Flg
2:1	142-9276	1	ASM-Deck Strut	28	116-5584	1	Pin-HOC
2:2	142-5095	2	Bushing-Igus Flng .75X1	29	62-1330	2	Bolt-Shoulder
3	121-2111	2	Screw-HH 5/8-18 X 2 1/2 Gr5	30	142-6679-03	1	Grip-Handle-Decklift
4	142-8396	2	Nut-Flng 5/8-18 Ctrlock GR G	31	3231-22	4	Bolt-Carriage 3/8-16 X 1
5	142-6519	2	ASM-Deck Strut Pin	32	109-9840	4	Screw-Hex Flange 3/8-16 X .80
6	3234-29	2	Screw-HH Flg 5/16-18 X 1	33	142-6720	3	Spacer-HOC
7	142-7944-03	1	Weld-Arm-Decklift-Front-RH	34	103-0357	2	Washer
8	142-7939	4	Trunion-Deck Lift	35	32151-103	2	E-Ring
9	142-9163	4	Link,Deck Lift Adjuster	36	142-6805	1	Decal-Height Of Cut
10	142-7940	2	Spacer-Decklift	37	142-7290	1	Pawl-Decklift
11	3220-7	8	Nut-Jam 3/4-16	38	142-6524	1	Plunger-Top
12	142-7945-03	1	Weld-Arm-Decklift-Front-LH	39	142-7365	1	Spring-Compression
13	3256-28	8	Washer-3/4 SAE	40	142-7437	1	Screw-Shoulder-Cap
14	142-8670-03	1	Link-Decklift-RH	41	117-1031	1	Spring-Compression
15	116-0780	4	Screw-Shoulder HHF 1/2-13 X 1.12	42	104-8300	4	Nut-Nyloc 5/16-18 Flg
16	99-5107	4	Nut-Lock 1/2-13	43	107-0279	1	Washer
17	116-0886	2	Spring-Extension	44	142-7963	1	Plate-Guide HOC Inner
18	92-7674	2	Screw-SHCS 3/8-16 X 2.212	45	142-8673	1	Pawl-Lock-Decklift
19	142-8671-03	1	Link-Decklift-LH	46	142-9151	1	Plate-Doubler-HOC-Lock
20	142-4794	6	Bushing-Flanged	47	142-8707	1	Screw-Shoulder-Cap
21	142-9150	1	Plate-Inner-HOC	48	107-3237	1	Spacer
22	142-8589-03	1	Plate-Outer-HOC	49	119-1065	3	Screw-HWH
23	146-0972	1	Support-HOC Shaft RH	50	110-9458	1	Spring-Extension
24	146-0971	1	Support-HOC Shaft LH	51	121-6991	1	Bolt-Shoulder
25	3231-40	1	Bolt-Carriage 3/8-16 X 2 1/4	52	3296-47	1	Nut-Nyloc 5/16-18 Thin
				53	142-8897	2	Spacer 1.13 O.D. X .81 I.D. X 2.05L

Engine Assembly

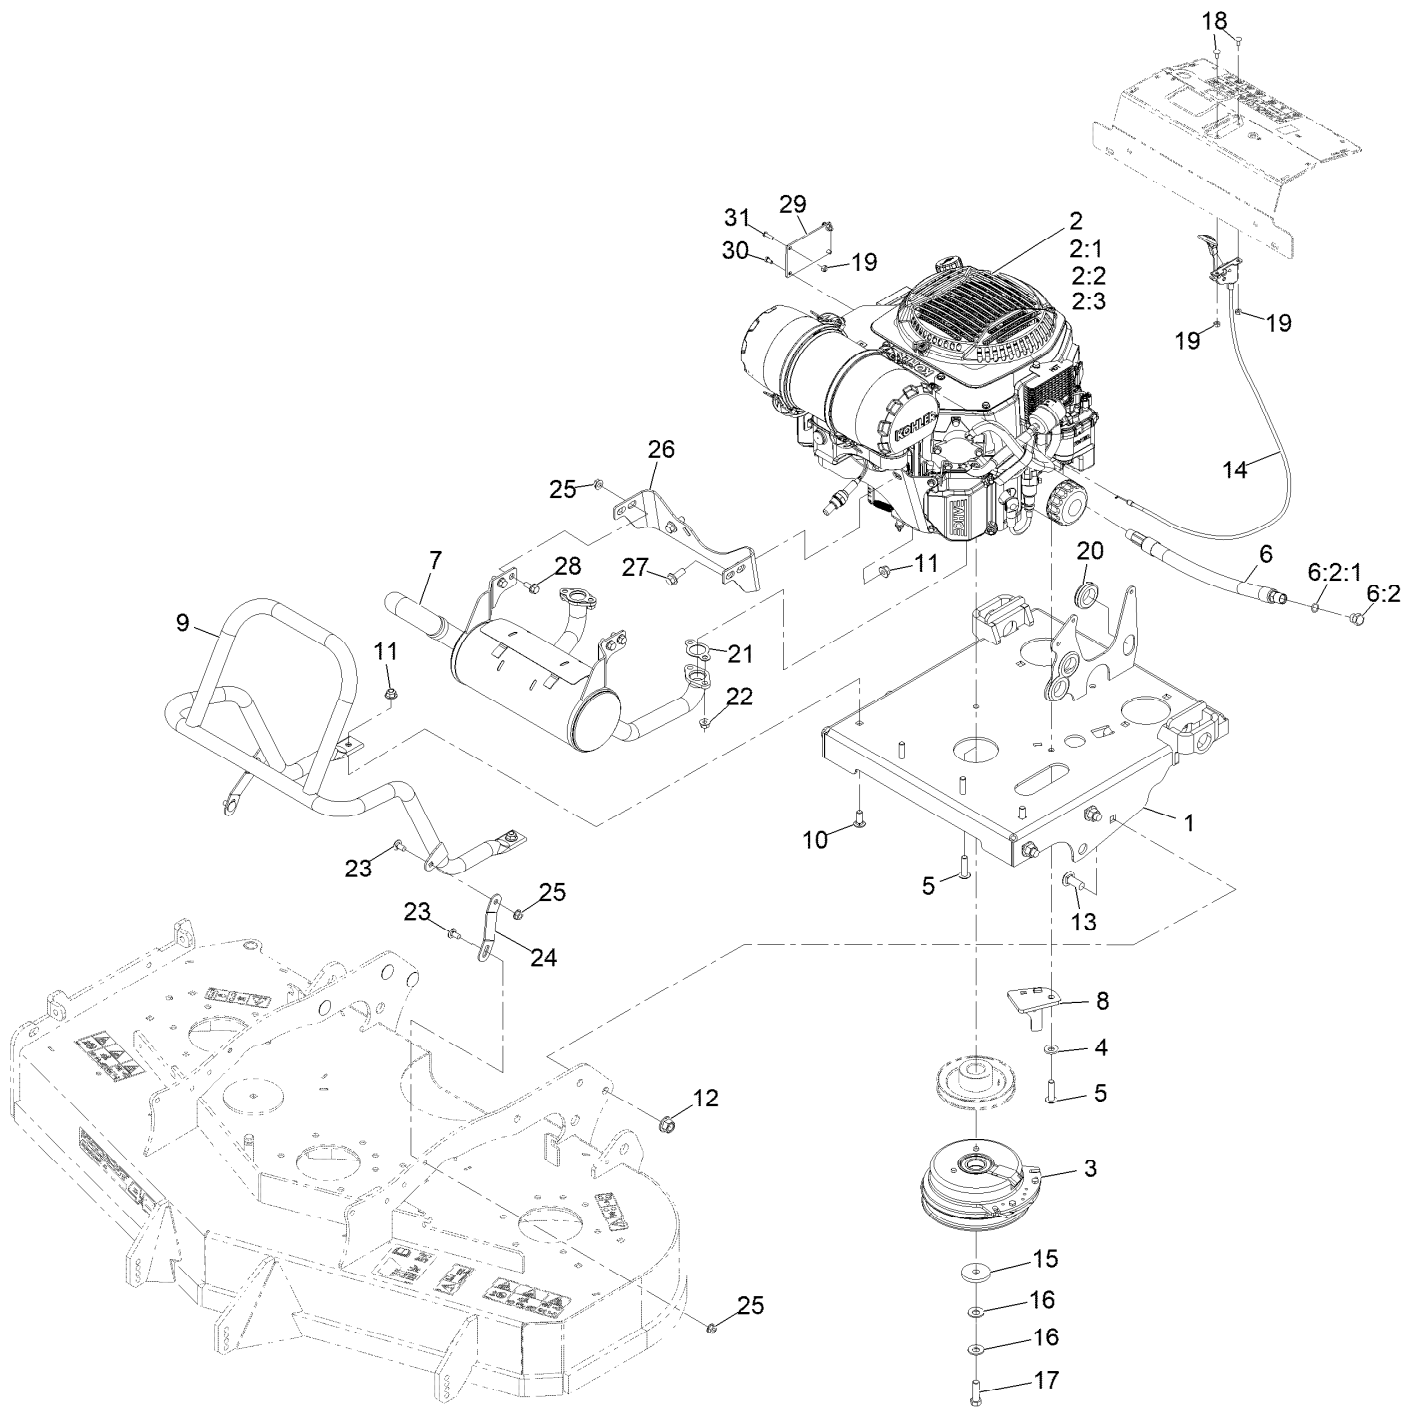


Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-8814-01	1	Wld-Engine Deck	13	3233-26	6	Screw-CARR,Shortneck
2		1	Engine-Kohler, Ek-Ecv740-3070 ■▲	14	135-2169	1	Control, Throttle
2:1		1	Kohler 52 050 02-S Engine Oil Filter ■▲	15	109-6919	1	Washer-Clutch
2:2		1	Kohler 25 083 01-S Engine Air Filter ■▲	16	1-603610	2	Washer-Spring Disc 7/16
2:3		1	Kohler 25 083 04-S Safety Filter ■▲	17	109-9761	1	Screw-HH 7/16-20 X 1 1/2 W/Loctite
3	116-1604	1	Clutch	18	1-807513	2	Bolt-Carriage #10-24 X 1/2
4	98-5975	3	Washer-Spring Disc 3/8	19	3296-2	4	Nut-Nyloc #10-24
5	126-0983	4	Screw-BHTF	20	108-3723	3	Grommet
6	116-5108	1	Oil Drain Hose ASM	21	110-6697	2	Gasket-Exhaust
6:2	353-508	1	Plug-W/O-Ring ●	22	68-9400	4	Nut-Flange
6:2:1	237-42	1	O-Ring	23	3230-18	4	Bolt-Carriage 5/16-18 X 5/8
7	142-8063	1	Muffler- Kohler, EFI	24	142-7748-03	2	Strap, Muffler Guard
8	142-6567	1	ASM-Clutch Anchor	25	32128-25	8	Nut-Hex 5/16-18 Side Lock
9	142-6783-03	1	Tube-Guard Muffler	26	132-1168	1	Bracket-Muffler
10	3231-22	2	Bolt-Carriage 3/8-16 X 1	27	3234-42	2	Screw HHF 3/8-16 X 1
11	104-8301	4	Nut-Nyloc 3/8-16 Flg	28	3234-5	4	Screw-HH Flg 5/16-18 X 3/4
12	99-5107	6	Nut-Lock 1/2-13	29	142-9198	1	Bracket-Ecu
				30	121-6320	2	Screw-HH
				31	104-2408	2	Screw-HSBH

● Torque to 24-26 ft-lb
▲ Obtain parts from www.kohlerplus.com

■ Not serviced separately


Complete Deck Assembly

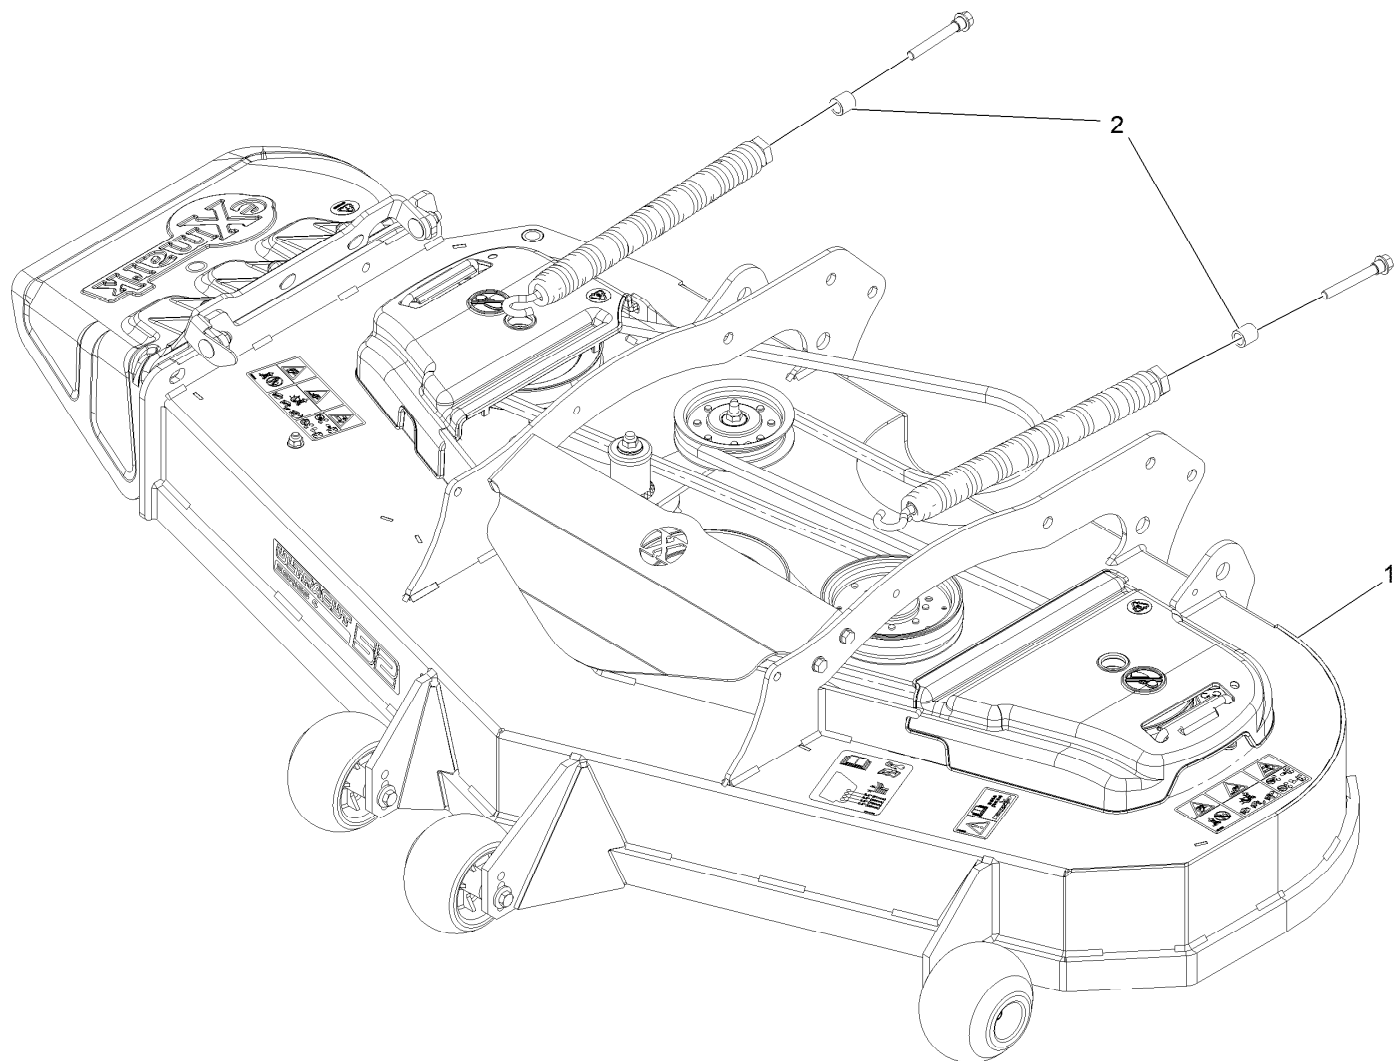

Complete Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-8065	1	ASM-Deck Complete 524
2	142-8316	2	Spacer - HOC Spring

Deck Assembly

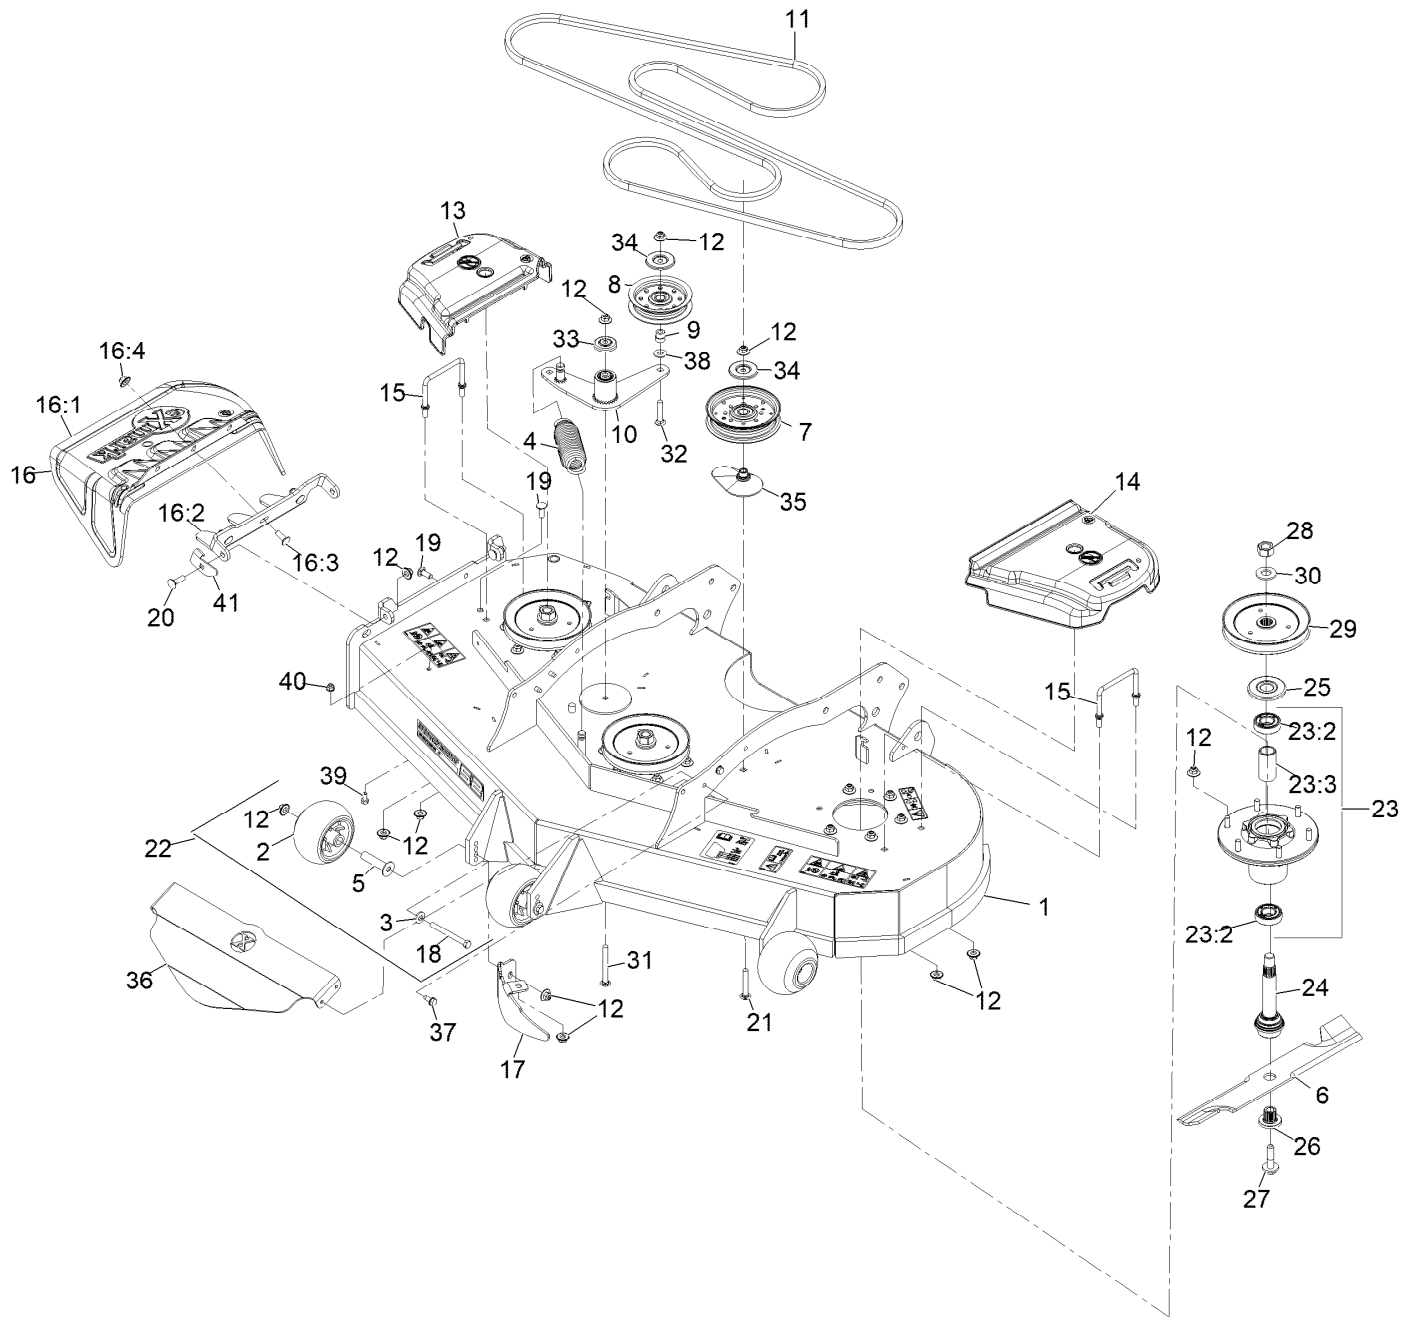

Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-5078	1	ASM-Deck W/Decals 524	19	3231-22	2	Screw-CARR
2	103-8415	3	Roller-Anti-Scalp	20	3231-25	2	Bolt-CARR
3	98-5975	3	Washer-Belleville	21	3231-44	1	Screw-CARR
4	116-6317	1	Spring-Extension	22	116-9981	3	Kit, Anti-Scalp Roller
5	116-8131	3	Axle, Roller	23	116-3344	3	ASM-Cutter Hsg With Bearings
6	116-5175	3	Blade-Extreme 2, 18.00" ●	23:2	116-0720	2	Bearing-Ball
6	103-6402	3	Blade-Notched	23:3	116-3312	1	Spacer-Bearing
6	103-6392	3	Blade, Mulching ▲	24	116-3341	3	ASM-Spindle And Seal ◆
6	103-6387	3	Blade, Low Lift ●	25	116-1286	3	Guard,Bearing Top .989
6	103-6382	3	Blade, Solid ●	26	103-3037	3	Bushing, Splined
7	126-9187	1	Pulley-Idler, Flat	27	109-9220	3	Screw-Sems ■ □
8	116-3626	1	Pulley-Idler	28	116-7306	3	Nut-Hex
9	1-513791	1	Bushing	29	116-0675	3	Sheave,Blade Drive 6.50
10	116-3806	1	Idler Arm ASM W/Bearings	30	103-2802	3	Washer
11	126-6626	1	Belt-V	31	3231-11	1	Screw-CARR
12	109-6658	32	Nut-Flange, NI	32	3231-6	1	Screw-CARR
13	109-6935	1	Cover-Belt, RH	33	103-2916	1	Guard-Top
14	109-6936	1	Cover-Belt, LH	34	126-8043	2	Shield-Dust
15	109-6982	2	Wireform-Cover	35	109-2872	1	Spacer-Pulley
16	109-7188	1	ASM,Discharge Chute	36	142-6764-01	1	Guard-Front Deck
16:1	109-2738	1	Chute, Discharge	37	32144-11	4	Screw-HWH
16:2	109-8675-01	1	Bracket,Discharge Chute	38	3256-4	1	Washer-Flat
16:3	3231-22	3	Screw-CARR	39	322-2	1	Screw-HH
16:4	109-6658	3	Nut-Flange, NI	40	104-8300	1	Nut-HF, NI
17	116-5814-01	1	Baffle-Dogleg, Lz-Vt52	41	135-0064	1	Stop-Discharge Chute
18	116-9362	3	Screw-HH				

● Optional Equipment


■ Torque to 50-60 ft-lb

▲ Requires installation of mulch kit for proper mulching. See your Exmark dealer for details.

◆ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize) to spindle shaft

□ Apply lubricant to threads as needed to prevent seizing. Copper based anti-seize preferable. Grease is an acceptable substitute.


Deck W/Decals Assembly

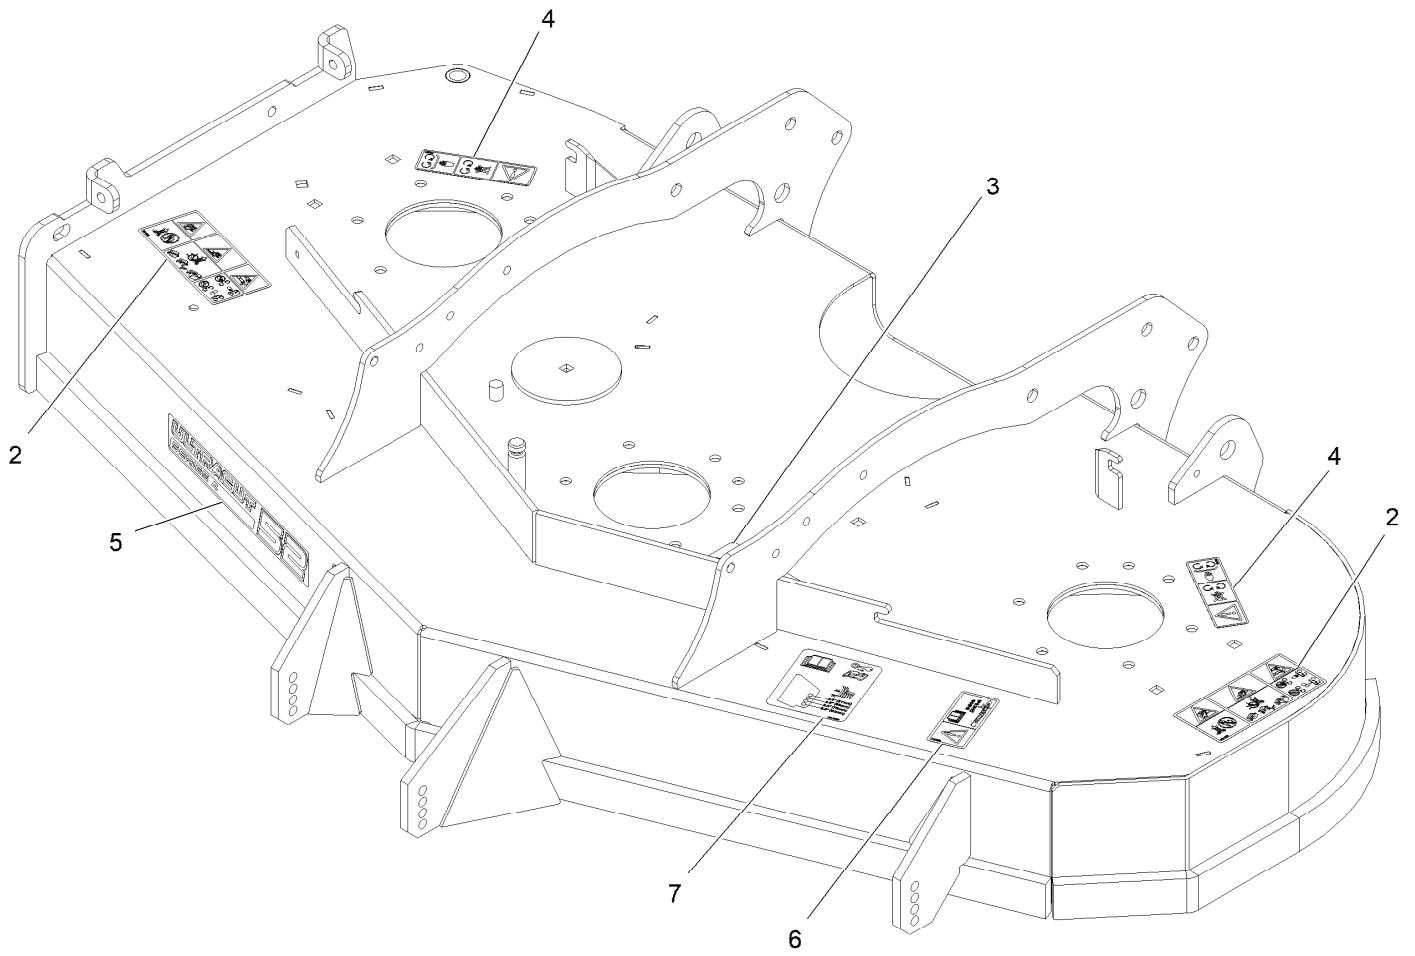

Deck W/Decals Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	135-5210	2	Decal-Warning Thrown Obj	5	126-6588	1	Decal, 524
3	116-8774	1	Decal-Belt Routing	6	116-8283	1	Decal-Torque, Bolt
4	112-9028	2	Decal-Cover, Missing	7	109-6036	1	Decal-Roller, Anti-Scalp

Idler Arm Assembly No. 116-3806

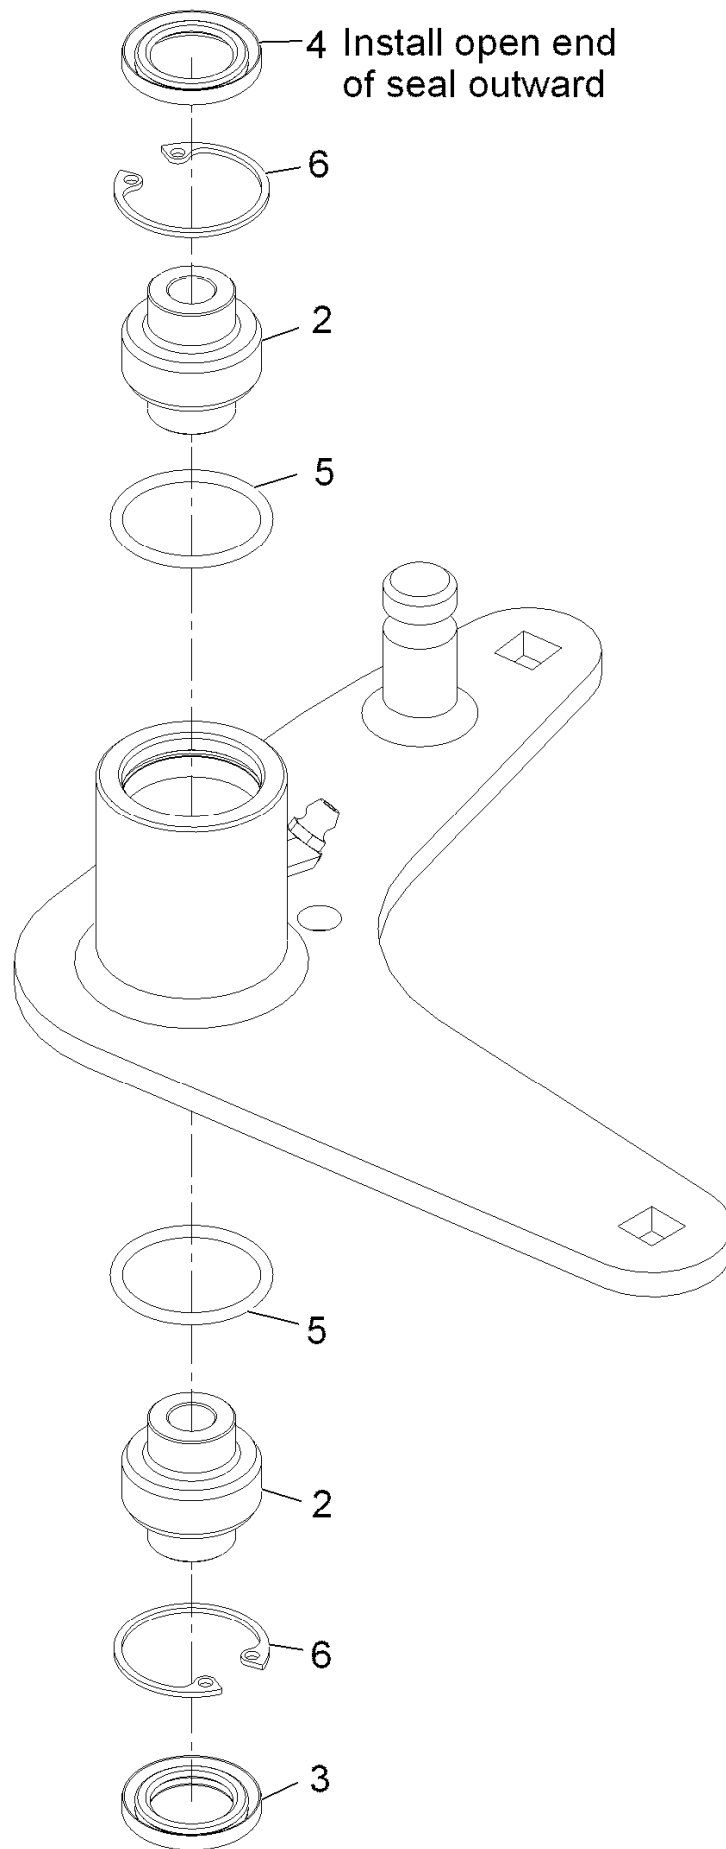


Idler Arm Assembly No. 116-3806 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	103-3504	2	Bearing-Spherical
3	103-3505	1	Seal-Lip, Double
4	103-3506	1	Seal-Single Lip

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	106-7159	2	O-Ring
6	32120-10	2	Ring-Retaining

Platform and Pad Assembly

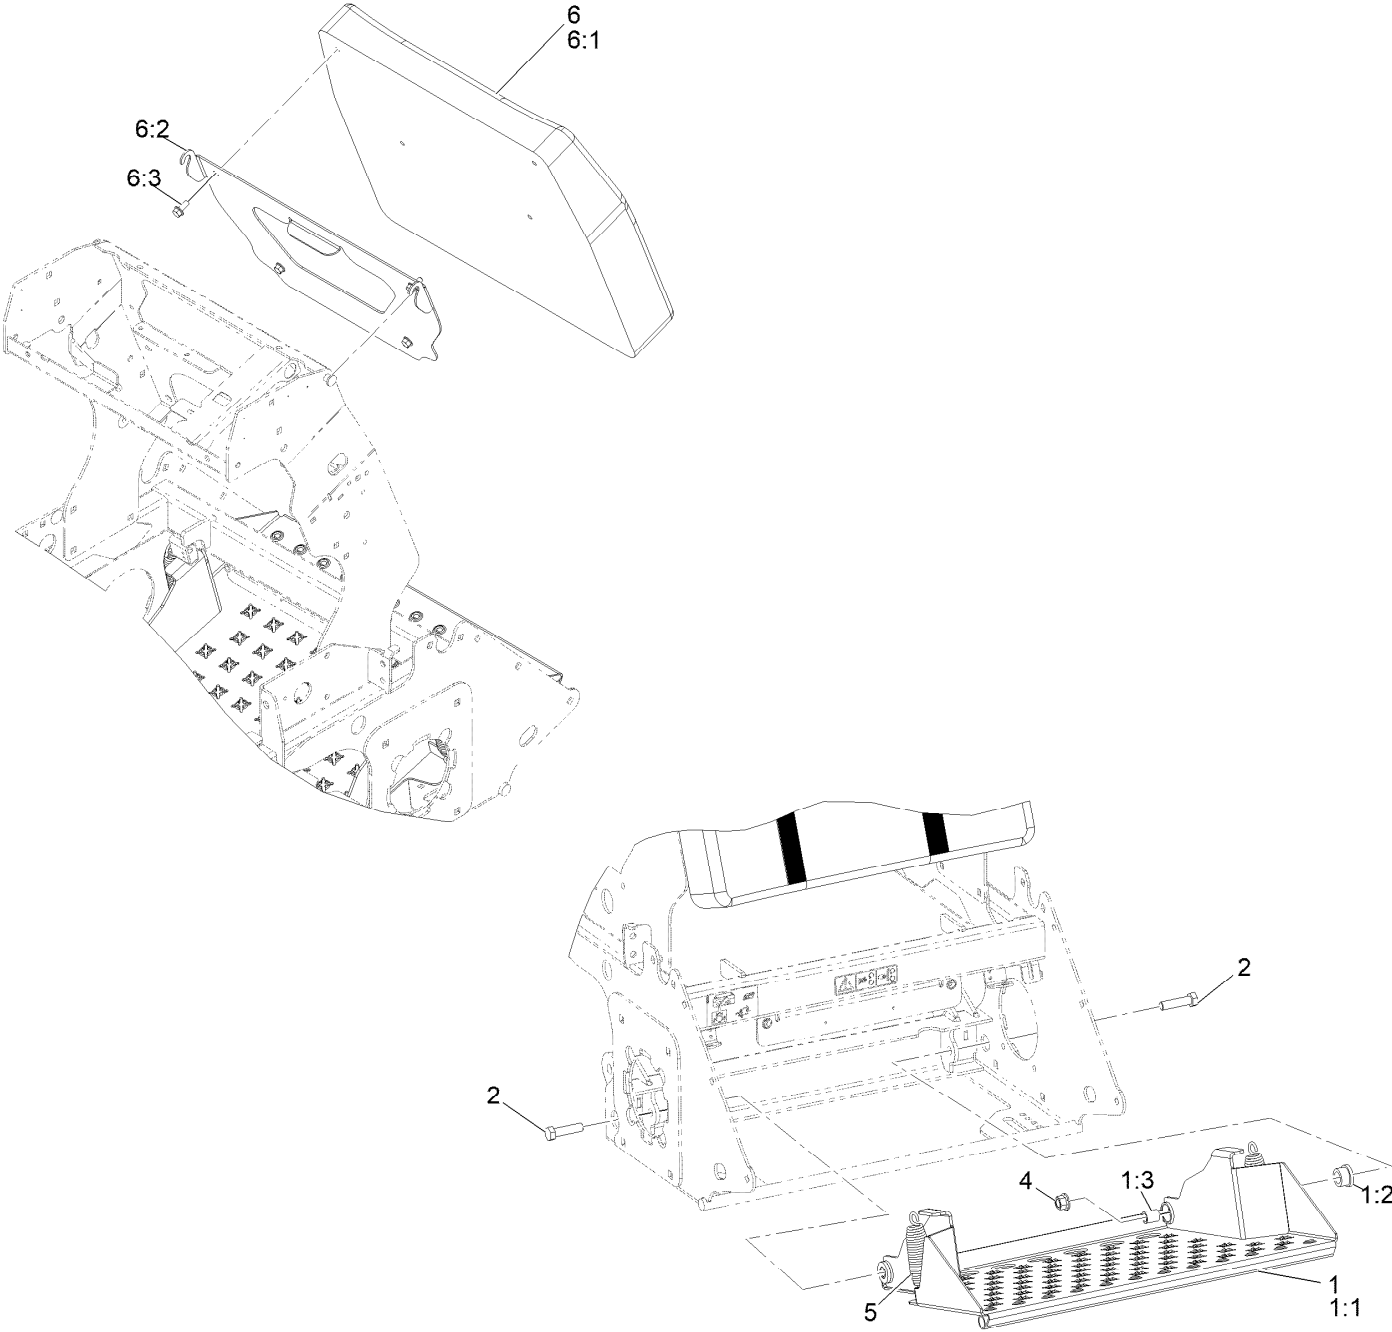

Platform and Pad Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-8866	1	ASM-Operators Platform	4	99-5107	2	Nut-Lock 1/2-13
1:1	142-8852-03	1	ASM-Operator Platform [black]	5	116-6316	2	Spring-Extension
1:2	142-6033	2	Bushing-Rubber	6	142-6003	1	ASM-Thigh Pad
1:3	142-6034	2	Spacer	6:1	142-6002	1	Pad-Thigh
2	325-8	2	Screw-HH 1/2-13 X 1 1/4	6:2	142-7710-01	1	Plate-Hinge-Thigh Pad
				6:3	3234-5	4	Screw-HH Flg 5/16-18 X 3/4

Notes:

Notes:

Notes:



MAXIMIZE THE PERFORMANCE OF YOUR EXMARK MACHINE.



EXMARK® PREMIUM ENGINE OIL

Exmark now offers a family of engine oil viscosities to perform well in any environment. Each viscosity has the same synthetic formulation to give you what you need in punishing conditions. We designed each grade to the highest quality, making it ideal even for diesel applications. Coupled with Exmark Premium Fuel Treatment, we have the performance products to make your machine hum.

EXMARK PREMIUM ENGINE OIL SAE 30/10W-30

- Meets zero shear requirements of a straight grade SAE 30 as well as the cold temp properties of a 10W-30.
- Most versatile oil in the industry.
- Superior corrosion protection over conventional oil - even in corrosive, humid environments.

EXMARK PREMIUM ENGINE OIL SAE 20W-50

- Perfect for your big block engine, or any application in severe service.
- Same full synthetic formulation as all other Exmark Premium viscosities.
- Also effective for use in severe service small block engines.

EXMARK PREMIUM ENGINE OIL SAE 10W-50

- Full synthetic formulation gives you peak performance. Don't settle for less.
- Wide span multi-grade combines easy starting in cold weather with maximum protection in high temperature operation.
- Reduce friction & wear over standard mineral formulations.

EXMARK PREMIUM ENGINE OIL SAE 0W-40

- The perfect choice for when the weather turns cold or unpredictable, and your Exmark UTV has to perform.
- Commercial quality for severe service.
- Advanced additive package helps prevent corrosion from long-term storage.

EXMARK PREMIUM ENGINE OIL UTV FORMULATION

- 4-cycle high-temp formulation.
- Heavier viscosity, full synthetic, perfect for your UTV.

EXMARK PREMIUM UTV EXTREME CONDITIONS GEAR OIL

- SAE 80W-90, designed to keep your UTV performing at its peak.
- Shear stable, hypoid gear lube.
- Includes a premium additive system to combat wear, oxidation, rust & corrosion.

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	SUN SHADE
DECK LIFT ASSIST KIT	TRASH CONTAINER
HITCH KIT	TURF STRIPER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
12V POWER PORT	ULTRA VAC QUICK DISPOSAL SYSTEM
MICRO-MULCH SYSTEM	

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2022 Exmark Mfg. Co., Inc.
415 Industrial Row
Beatrice, NE 68310
All Rights Reserved

Part No. 4506-353 Rev. A
(402) 223-6375
Printed in the USA.



www.exmark.com