



# Super Recycler<sup>®</sup>

## Walk Power Lawn Mower

Model No. 20039—230000001 and Up

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


## Contents

| <b>Description</b>                           | <b>Page</b> | <b>Description</b>                           | <b>Page</b> |
|--|-------------|--|-------------|
| Housing and Wheel Assembly . . . . .         | 3           | Briggs and Stratton Model 122607-0118-E1 . . | 15          |
| Gear Case Assembly No. 104-7674 . . . . .    | 4           | Air Cleaner Assembly                         |             |
| Gear Case and Wheel Assembly . . . . .       | 5           | Briggs and Stratton Model 122607-0118-E1 . . | 16          |
| Engine Assembly . . . . .                    | 6           | Governor Assembly                            |             |
| Handle and Control Assembly . . . . .        | 7           | Briggs and Stratton Model 122607-0118-E1 . . | 17          |
| Battery and Switch Assembly . . . . .        | 8           | Muffler and Fuel Tank Assembly               |             |
| Rear Bag Discharge Chute Assembly . . . . .  | 9           | Briggs and Stratton Model 122607-0118-E1 . . | 18          |
| Rear Bagger Assembly . . . . .               | 10          | Blower Housing Assembly                      |             |
| Cylinder Assembly                            |             | Briggs and Stratton Model 122607-0118-E1 . . | 19          |
| Briggs and Stratton Model 122607-0118-E1 . . | 11          | Starter Assembly                             |             |
| Cylinder Head Assembly                       |             | Briggs and Stratton Model 122607-0118-E1 . . | 20          |
| Briggs and Stratton Model 122607-0118-E1 . . | 12          | Starter Assembly                             |             |
| Crankshaft Assembly                          |             | Briggs and Stratton Model 122607-0118-E1 . . | 21          |
| Briggs and Stratton Model 122607-0118-E1 . . | 13          | Gasket Assembly                              |             |
| Crankcase Assembly                           |             | Briggs and Stratton Model 122607-0118-E1 . . | 22          |
| Briggs and Stratton Model 122607-0118-E1 . . | 14          | Carburetor Overhaul Kit Assembly             |             |
| Carburetor Assembly                          |             | Briggs and Stratton Model 122607-0118-E1 . . | 23          |

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| <b>Abbreviation</b> | <b>Meaning</b>                    | <b>Abbreviation</b> | <b>Meaning</b>          |
|---------------------|-----------------------------------|---------------------|-------------------------|
| AR . . . . .        | as required                       | HYD . . . . .       | hydraulic               |
| ASM . . . . .       | assembly                          | INC . . . . .       | incorporated            |
| CARR . . . . .      | carriage                          | LH . . . . .        | left hand               |
| DEG . . . . .       | degrees                           | NI . . . . .        | nylon insert            |
| FH . . . . .        | flat head                         | PPH . . . . .       | Phillips pan head       |
| GA . . . . .        | gauge                             | PTH . . . . .       | Phillips truss head     |
| HF . . . . .        | hex flange                        | PTO . . . . .       | power take off          |
| HH . . . . .        | hex head                          | RH . . . . .        | right hand              |
| HHF . . . . .       | hex head flange                   | SFH . . . . .       | slotted fillister head  |
| HLH . . . . .       | hex lag head                      | SHH . . . . .       | slotted hex head        |
| HJ . . . . .        | hex jam                           | SQH . . . . .       | square head             |
| HOC . . . . .       | height-of-cut                     | SHWH . . . . .      | slotted hex washer head |
| HS . . . . .        | hex socket                        | SPH . . . . .       | slotted pan head        |
| HSBH . . . . .      | hex socket button head            | SRH . . . . .       | slotted round head      |
| HSFH . . . . .      | hex socket flat head              | STD . . . . .       | standard                |
| HSH . . . . .       | hex socket head                   | TAP . . . . .       | self tapping            |
| HWH . . . . .       | hex washer head                   | TTH . . . . .       | Torx truss head         |
| HWHTF . . . . .     | hex washer head<br>thread forming | WH . . . . .        | wing head               |

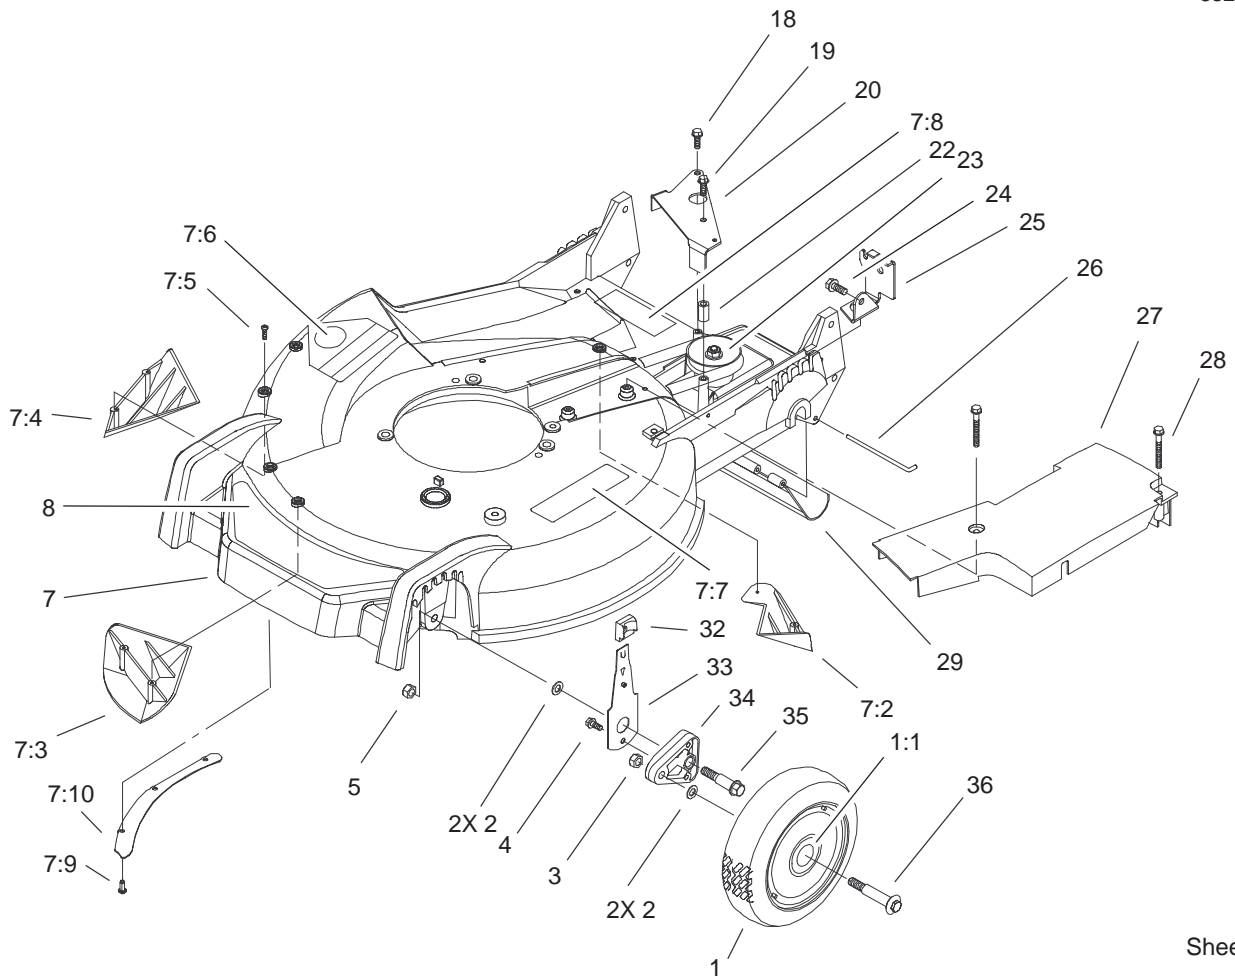

Sheet No.:2

## Housing and Wheel Assembly


| Ref. No. | Part No.    | Qty. | Description                      |
|----------|-------------|------|----------------------------------|
| 1        | 98-7130     | 2    | Wheel ASM                        |
| 1:1      | 27-6250     | 2    | Bushing                          |
| 2        | 40-1940     | 4    | Washer                           |
| 3        | 603773      | 2    | Nut                              |
| 4        | 32144-85    | 2    | Screw-HH                         |
| 5        | 3296-6      | 2    | Nut-Lock, NI                     |
| 7        | 105-1307    | 1    | Housing-Service                  |
| 7:2      | 92-1750     | 1    | Kicker-Rear                      |
| 7:3      | 92-1720     | 1    | Kicker-Front                     |
| 7:4      | 92-1730     | 1    | Kicker-RH                        |
| 7:5      | 32144-111   | 6    | Screw-PPH                        |
| 7:6      | 43-8480     | 1    | Decal-Danger                     |
| 7:7      | 93-0248     | 1    | Decal-Warning                    |
| 7:8      | 99-6018     | 1    | Decal-Warning                    |
| 7:9      | 63-8590     | 3    | Screw                            |
| 7:10     | 105-1316-03 | 1    | Sheet-Lip                        |
| 8        | 99-6010     | 1    | Decal-Deck                       |
| 18       | 49-2040     | 1    | Screw-Tapping                    |
| 19       | 92-1616     | 1    | Screw-HWHTF                      |
| 20       | 99-1513-03  | 1    | Bracket-Transmission<br>Actuator |
| 22       | 614673      | 1    | Bushing-Plate,<br>Actuator       |
| 23       | 104-7674    | 1    | Gear Case ASM                    |
| 24       | 32144-70    | 1    | Screw-HH                         |

| Ref. No. | Part No.   | Qty. | Description                |
|----------|------------|------|----------------------------|
| 25       | 99-1512-03 | 1    | Bracket-Cable,<br>Traction |
| 26       | 33-3208    | 1    | Rod-Shield                 |
| 27       | 104-7906   | 1    | Cover-Belt                 |
| 28       | 37-7260    | 1    | Screw-HH                   |
| 29       | 44-0580    | 1    | Shield-Trailing            |
| 32       | 25-7740    | 2    | Knob-Arm                   |
| 33       | 66-0541    | 2    | Front Spring Arm ASM       |
| 34       | 66-0580    | 2    | Arm-Pivot, Front           |
| 35       | 66-0560    | 2    | Bolt-Shoulder              |
| 36       | 92-1057    | 2    | Bolt-Shoulder              |







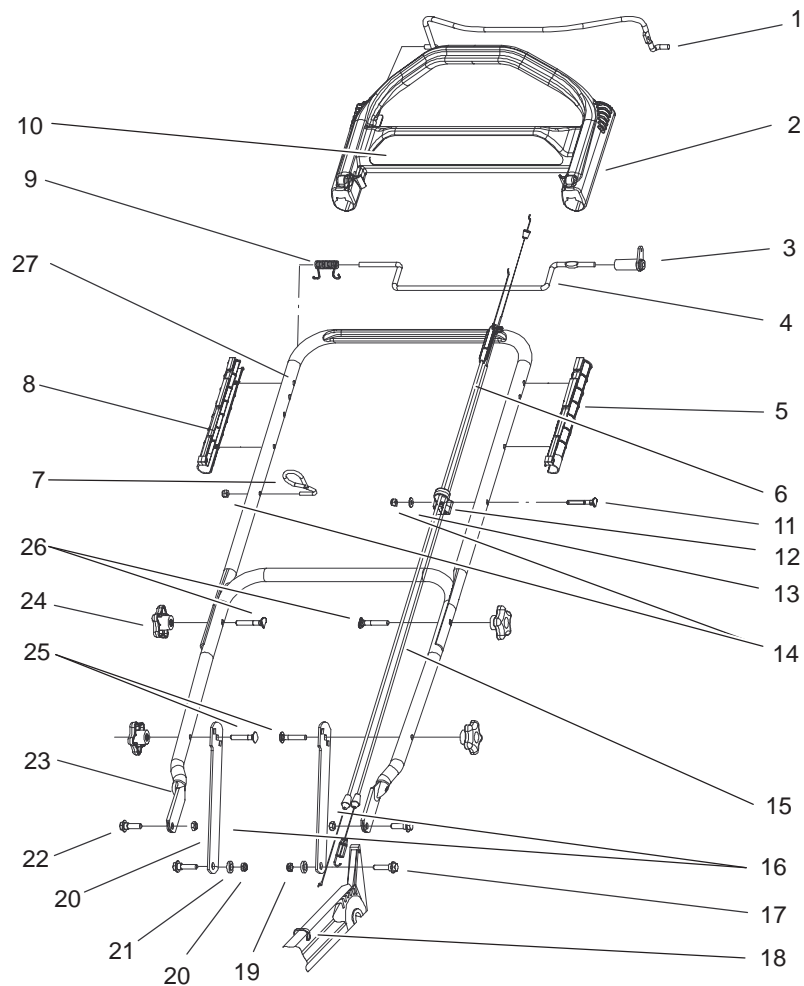

Sheet No.:5


## Handle and Control Assembly

| Ref. No. | Part No.    | Qty. | Description           | Ref. No. | Part No.    | Qty. | Description  |
|----------|-------------|------|-----------------------|----------|-------------|------|--------------|
| 1        | 104-8679-03 | 1    | Bail-Brake            | 26       | 92-2260     | 2    | Screw-Handle |
| 2        | 104-8678    | 1    | Handle-Personal Pace  | 27       | 104-8680-05 | 1    | Handle-Upper |
| 3        | 99-1589     | 1    | Lever-Traction        |          |             |      |              |
| 4        | 99-1588     | 1    | Bar-Control, Traction |          |             |      |              |
| 5        | 105-6842    | 1    | Guide-LH              |          |             |      |              |
| 6        | 106-5750    | 1    | Cable-Brake           |          |             |      |              |
| 7        | 86-9671     | 1    | Guide-Rope            |          |             |      |              |
| 8        | 105-6841    | 1    | Guide-RH              |          |             |      |              |
| 9        | 104-8690    | 1    | Spring-Torsion        |          |             |      |              |
| 10       | 105-8613    | 1    | Decal-Console         |          |             |      |              |
| 11       | 321-50      | 1    | Screw-HH              |          |             |      |              |
| 12       | 99-5239     | 1    | Anchor-Cable          |          |             |      |              |
| 13       | 3256-1      | 1    | Washer-Flat           |          |             |      |              |
| 14       | 3296-73     | 2    | Nut-Lock, NI          |          |             |      |              |
| 15       | 106-8300    | 1    | Cable-Traction        |          |             |      |              |
| 16       | 99-5248-03  | 2    | Latch-Handle          |          |             |      |              |
| 17       | 27-7210     | 2    | Screw-Shoulder        |          |             |      |              |
| 18       | 100-2894    | 1    | Tie-Cable             |          |             |      |              |
| 19       | 3296-47     | 1    | Nut-Lock, NI          |          |             |      |              |
| 20       | 3296-72     | 3    | Nut-Lock, NI          |          |             |      |              |
| 21       | 3-3287      | 2    | Spacer-Latch, Handle  |          |             |      |              |
| 22       | 27-7211     | 2    | Screw-Shoulder        |          |             |      |              |
| 23       | 99-5249-05  | 1    | Handle-Lower          |          |             |      |              |
| 24       | 106-4161    | 4    | Knob-Handle           |          |             |      |              |
| 25       | 99-6019     | 2    | Screw-CARR            |          |             |      |              |







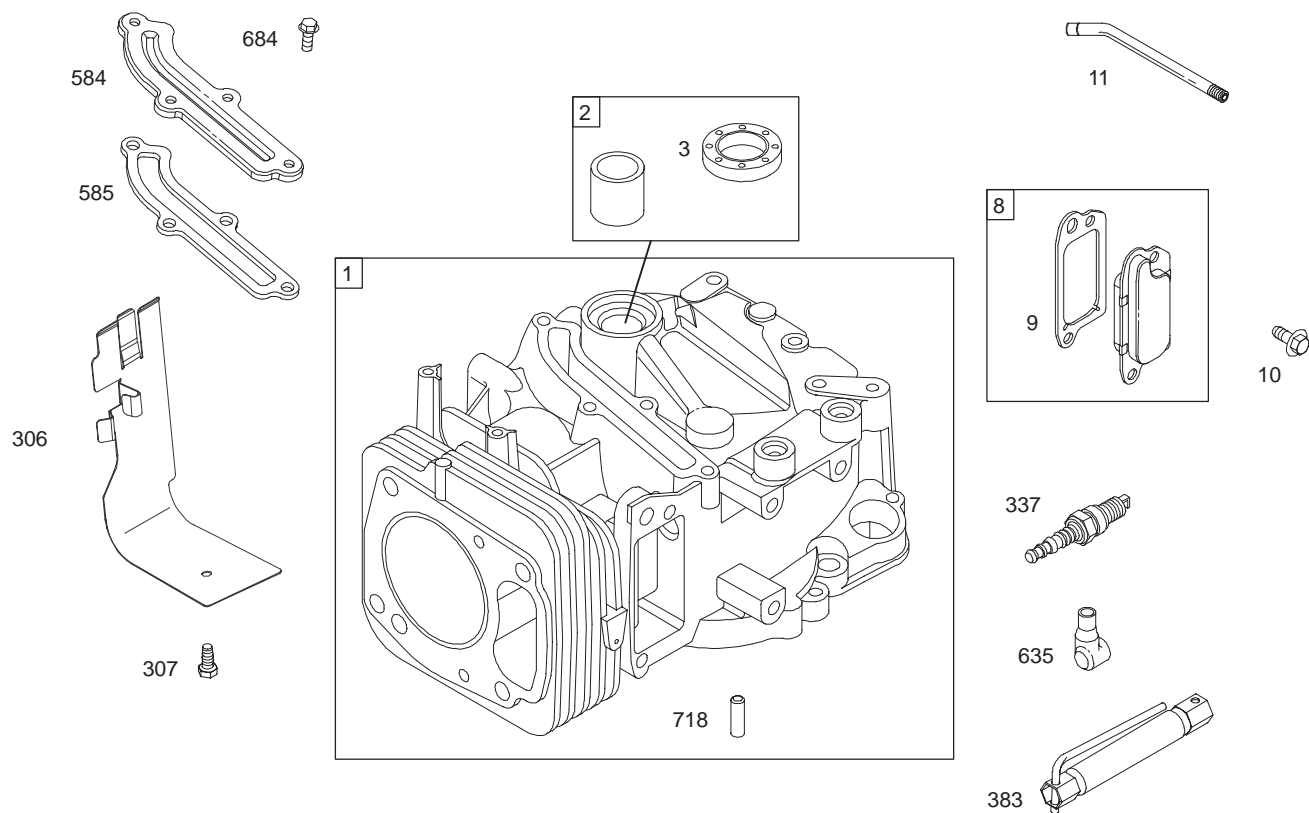


Assemblies include all parts shown in frames.

## Cylinder Assembly Briggs and Stratton Model 122607-0118-E1

| Ref. No. | Part No. | Qty. | Description                           | Ref. No. | Part No. | Qty. | Description    |
|----------|----------|------|---------------------------------------|----------|----------|------|----------------|
| 1        | 499678   | 1    | Cylinder Assembly                     | 1058     | 274979   | 1    | Owner's Manual |
| 2        | 399269   | 1    | Kit-Bushing/Seal<br>(Magneto Side)    |          |          |      |                |
| ★3       | 299819   | 1    | Seal-Oil<br>(Magneto Side)            |          |          |      |                |
| 8        | 495786   | 1    | Breather Assembly                     |          |          |      |                |
| △★9      | 272481   | 1    | Valve Cover Gasket                    |          |          |      |                |
| 10       | 691125   | 1    | Screw<br>(Breather Assembly)          |          |          |      |                |
| 11       | 691260   | 1    | Breather Tube                         |          |          |      |                |
| 306      | 691232   | 1    | Shield-Cylinder                       |          |          |      |                |
| 307      | 690345   | 1    | Screw<br>(Cylinder Shield)            |          |          |      |                |
| 337      | 692051   | 1    | Sparkplug                             |          |          |      |                |
| 383      | 19374    | 1    | Wrench-Sparkplug                      |          |          |      |                |
| 584      | 692342   | 1    | Cover-Breather<br>Passage             |          |          |      |                |
| ★585     | 691879   | 1    | Gasket-Breather<br>Passage            |          |          |      |                |
| 635      | 66538    | 1    | Boot-Sparkplug                        |          |          |      |                |
| 684      | 690345   | 1    | Screw<br>(Breather Passage<br>Gasket) |          |          |      |                |
| 718      | 690959   | 1    | Pin-Locating                          |          |          |      |                |

△ Included in Valve Gasket Set-Ref. 1095. **Obtain Parts from Briggs and Stratton**

★ Included in Engine Gasket Set-Ref. 358.

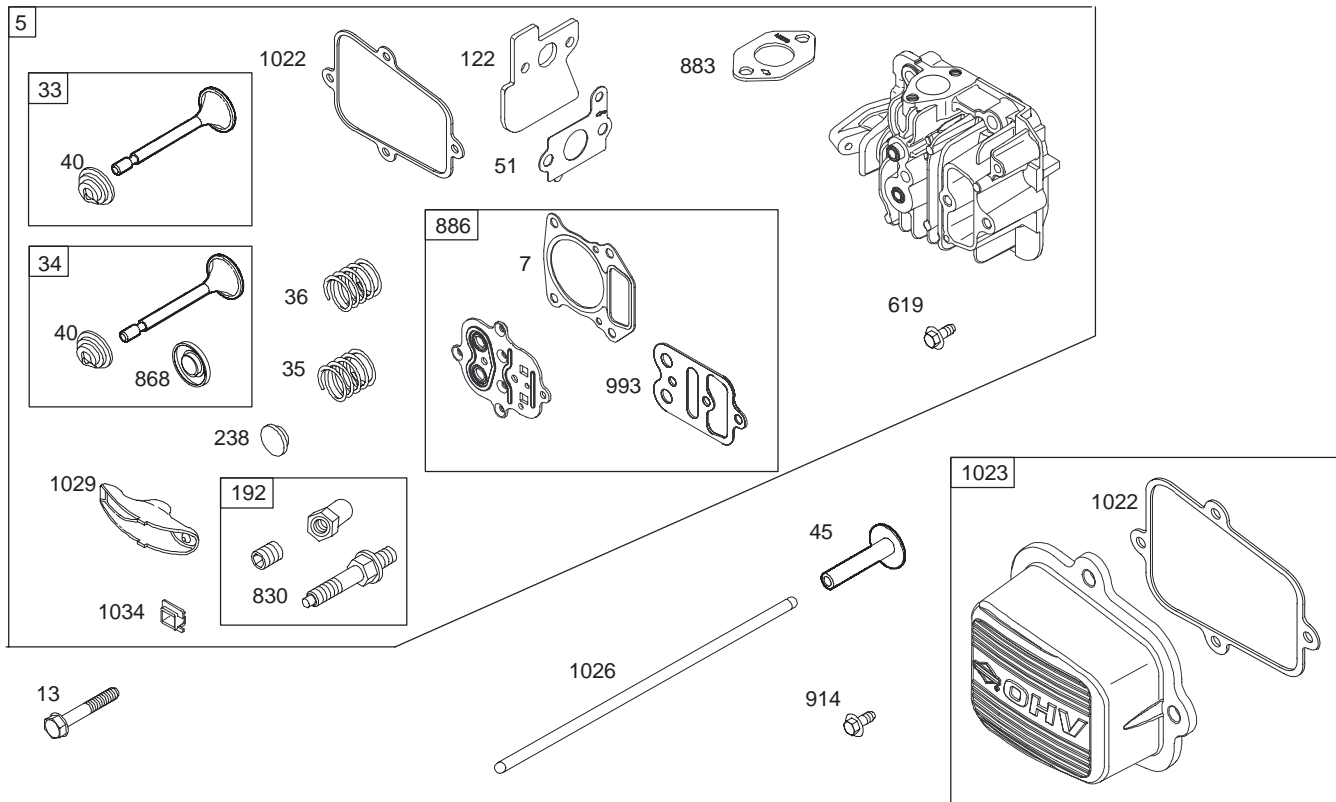

Assemblies include all parts shown in frames.

## Cylinder Head Assembly Briggs and Stratton Model 122607-0118-E1

| Ref. No. | Part No. | Qty. | Description                    |
|----------|----------|------|--------------------------------|
| 5        | 695276   | 1    | Head-Cylinder                  |
| Δ★7      | 695166   | 1    | Gasket-Cylinder Head           |
| 13       | 691137   | 1    | Screw                          |
| 33       | 499642   | 1    | Valve-Exhaust                  |
| 34       | 499641   | 1    | Valve-Intake                   |
| 35       | 691304   | 1    | Spring-Valve (Intake)          |
| 36       | 691304   | 1    | Spring-Valve (Exhaust)         |
| 40       | 692194   | 1    | Retainer-Valve                 |
| 45       | 690977   | 1    | Tappet-Valve                   |
| Δ★◆51    | 692668   | 1    | Gasket-Intake                  |
| Δ★◆122   | 692799   | 1    | Spacer-Carburetor              |
| 192      | 694543   | 1    | Adjuster-Rocker Arm            |
| 238      | 691300   | 1    | Cap-Valve                      |
| 619      | 691108   | 1    | Screw (Cylinder Head Plate)    |
| 830      | 694544   | 1    | Stud-Rocker Arm                |
| Δ★868    | 692044   | 1    | Seal-Valve                     |
| Δ★883    | 691893   | 1    | Gasket-Exhaust                 |
| 886      | 696268   | 1    | Gasket Kit-Cylinder Head/Plate |

| Ref. No. | Part No. | Qty. | Description                |
|----------|----------|------|----------------------------|
| 914      | 693398   | 1    | Screw (Rocker Cover)       |
| Δ★993    | 694088   | 1    | Gasket-Cylinder Head Plate |
| Δ★1022   | 692694   | 1    | Gasket-Rocker Cover        |
| 1023     | 690214   | 1    | Cover-Rocker               |
| 1026     | 692045   | 1    | Rod-Push                   |
| 1029     | 691230   | 1    | Arm-Rocker                 |
| 1034     | 691343   | 1    | Guide-Push Rod             |


Δ Included in Valve Gasket Set-Ref. 1095.

● Included in Carburetor Overhaul Kit-Ref. 121.

★ Included in Engine Gasket Set-Ref. 358.

◆ Included in Carburetor Gasket Set-Ref. 977.

**Obtain Parts from Briggs and Stratton**

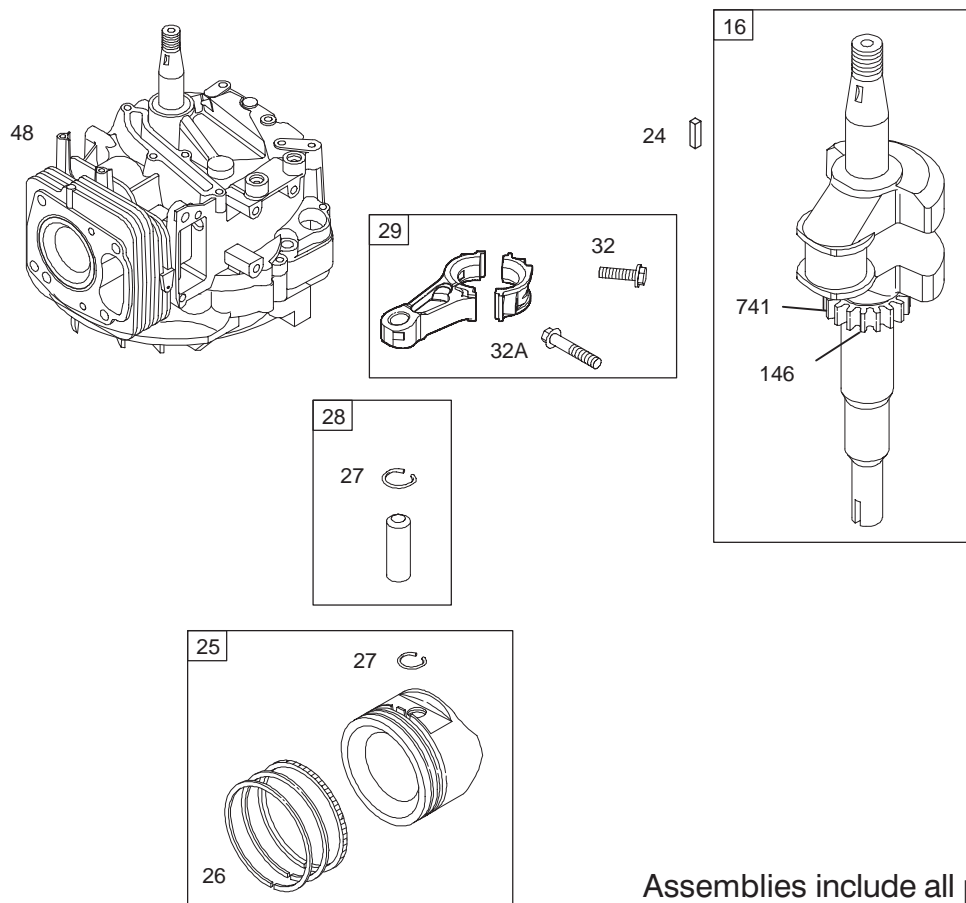


Assemblies include all parts shown in frames.

## Crankshaft Assembly Briggs and Stratton Model 122607-0118-E1

| Ref. No. | Part No. | Qty. | Description                      |
|----------|----------|------|----------------------------------|
| 16       | 695950   | 1    | Crankshaft                       |
| 24       | 222698   | 1    | Key-Flywheel                     |
| 25       | 499627   | 1    | Piston Assembly (Standard)       |
|          | 692788   | 1    | Piston Assembly (.010" Oversize) |
|          | 692789   | 1    | Piston Assembly (.020" Oversize) |
|          | 692790   | 1    | Piston Assembly (.030" Oversize) |
| 26       | 499631   | 1    | Ring Set (Standard)              |
|          | 692785   | 1    | Ring Set (.010" Oversize)        |
|          | 692786   | 1    | Ring Set (.020" Oversize)        |
|          | 692787   | 1    | Ring Set (.030" Oversize)        |
| 27       | 691866   | 1    | Lock-Piston Pin                  |
| 28       | 499423   | 1    | Pin-Piston                       |
| 29       | 499424   | 1    | Rod-Connecting                   |
| 32       | 691664   | 1    | Screw (Connecting Rod)           |

| Ref. No. | Part No. | Qty. | Description            |
|----------|----------|------|------------------------|
| 32A      | 695759   | 1    | Screw (Connecting Rod) |
| 48       | 694898   | 1    | Short Block            |
| 146      | 690979   | 1    | Key-Timing             |
| 741      | 691830   | 1    | Gear-Timing            |

Obtain Parts from Briggs and Stratton

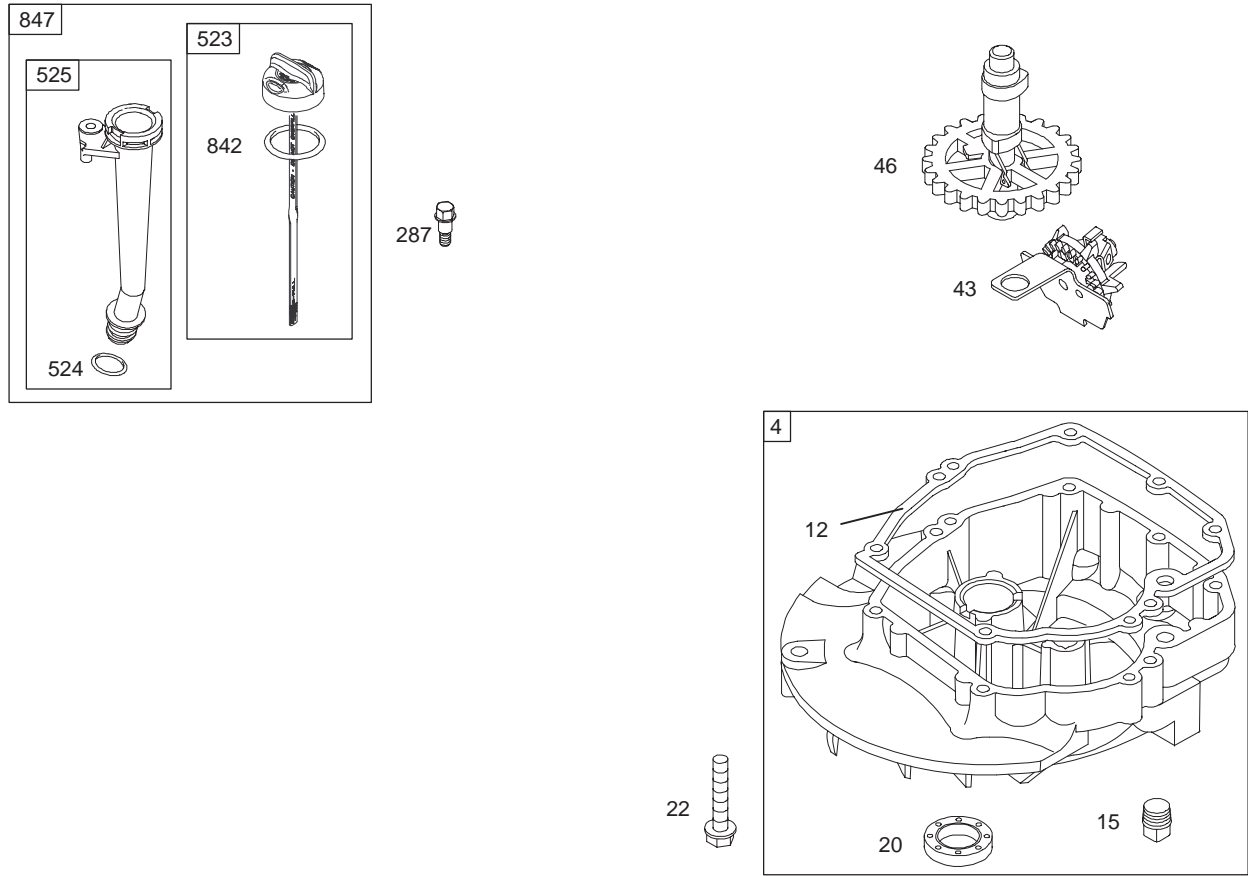


Assemblies include all parts shown in frames.

## Crankcase Assembly Briggs and Stratton Model 122607-0118-E1

| Ref. No. | Part No. | Qty. | Description                    |
|----------|----------|------|--------------------------------|
| 4        | 499619   | 1    | Sump-Engine                    |
| ★12      | 692232   | 1    | Gasket-Crankcase               |
| 15       | 691680   | 1    | Plug-Oil Drain                 |
| ★20      | 399781   | 1    | Seal-Oil<br>(PTO Side)         |
| 22       | 691092   | 1    | Screw<br>(Engine Sump)         |
| 43       | 691997   | 1    | Slinger-Governor/Oil           |
| 46       | 694039   | 1    | Camshaft                       |
| 287      | 690940   | 1    | Screw<br>(Dipstick Tube)       |
| 523      | 499621   | 1    | Tube-Dipstick                  |
| ★524     | 692296   | 1    | Seal-Dipstick Tube             |
| 525      | 495265   | 1    | Tube-Dipstick                  |
| ★842     | 691031   | 1    | Seal-O Ring<br>(Dipstick Tube) |
| 847      | 692047   | 1    | Assembly-Dipstick/<br>Tube     |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

★ Included in Engine Gasket Set-Ref. 358. Obtain Parts from Briggs and Stratton

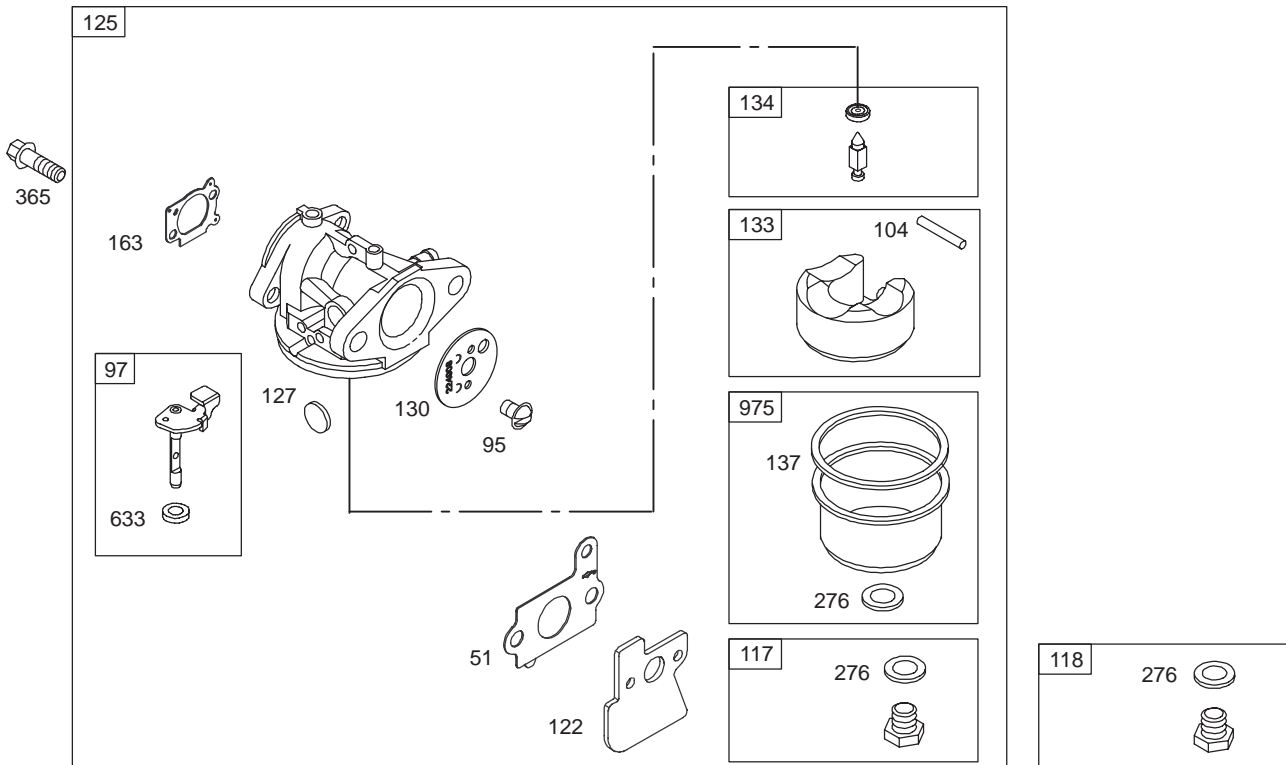


## Carburetor Assembly Briggs and Stratton Model 122607-0118-E1

| Ref. No. | Part No. | Qty. | Description                  |
|----------|----------|------|------------------------------|
| Δ★◆51    | 692668   | 1    | Gasket-Intake                |
| 95       | 691636   | 1    | Screw<br>(Throttle Valve)    |
| 97       | 499682   | 1    | Shaft-Throttle               |
| ●104     | 691242   | 1    | Pin-Float Hinge              |
| 117      | 498978   | 1    | Jet-Main<br>(Standard)       |
| 118      | 498975   | 1    | Jet-Main<br>(High Altitude)  |
| Δ★◆122   | 692799   | 1    | Spacer-Carburetor            |
| 125      | 694202   | 1    | Carburetor                   |
| ●127     | 694468   | 1    | Plug-Welch                   |
| 130      | 691203   | 1    | Valve-Throttle               |
| 133      | 398187   | 1    | Float-Carburetor             |
| ●134     | 398188   | 1    | Kit-Needle/Seat              |
| ◆137     | 693981   | 1    | Gasket-Float Bowl            |
| Δ★◆163   | 691894   | 1    | Gasket-Air Cleaner           |
| ●◆276    | 271716   | 1    | Washer-Sealing               |
| 365      | 691136   | 1    | Screw<br>(Carburetor)        |
| ●◆633    | 691321   | 1    | Seal-Choke-Throttle<br>Shaft |
| 975      | 493640   | 1    | Bowl-Float                   |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

Δ Included in Valve Gasket Set-Ref. 1095.  
 ★ Included in Engine Gasket Set-Ref. 358.  
**Obtain Parts from Briggs and Stratton**

● Included in Carburetor Overhaul Kit-Ref. 121.  
 ◆ Included in Carburetor Gasket Set-Ref. 977.

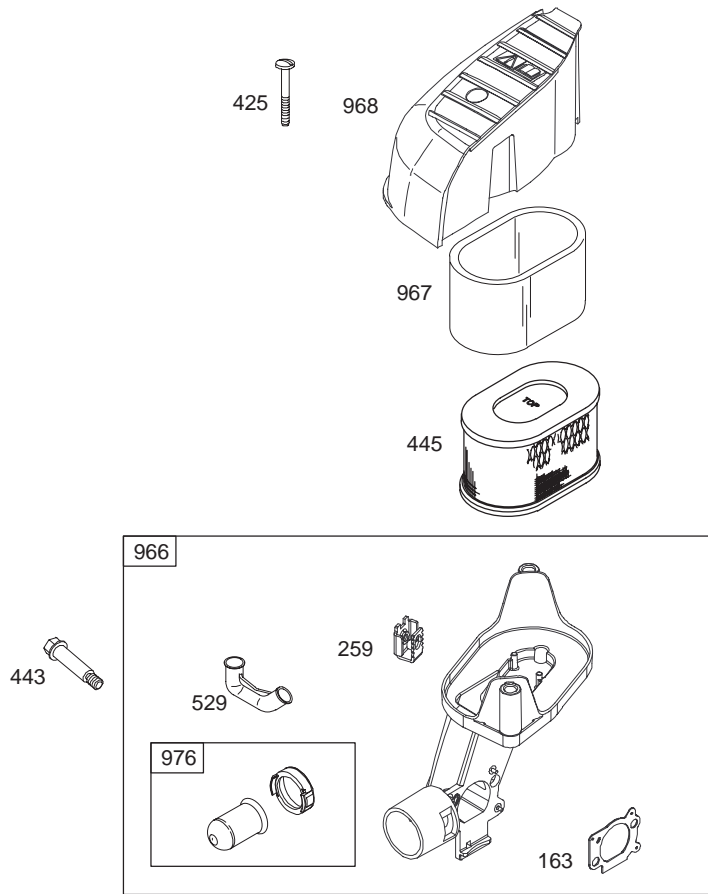

Assemblies include all parts shown in frames.

## Air Cleaner Assembly Briggs and Stratton Model 122607-0118-E1

| Ref. No. | Part No. | Qty. | Description                           |
|----------|----------|------|---------------------------------------|
| Δ★◆163   | 691894   | 1    | Gasket-Air Cleaner                    |
| 259      | 691189   | 1    | Bracket-Casing Clamp                  |
| 425      | 690244   | 1    | Screw<br>(Air Cleaner Cover)          |
| 443      | 690255   | 1    | Screw<br>(Air Cleaner Primer Bracket) |
| 445      | 690610   | 1    | Filter-Air Cleaner Cartridge          |
| 529      | 692937   | 1    | Grommet                               |
| 966      | 690243   | 1    | Base-Air Cleaner Primer               |
| 967      | 273356   | 1    | Filter-Pre Cleaner                    |
| 968      | 692692   | 1    | Cover-Air Cleaner                     |
| 976      | 694395   | 1    | Primer-Carburetor                     |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |
|          |          |      |             |
|          |          |      |             |
|          |          |      |             |
|          |          |      |             |
|          |          |      |             |
|          |          |      |             |
|          |          |      |             |
|          |          |      |             |
|          |          |      |             |


Δ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.

**Obtain Parts from Briggs and Stratton**

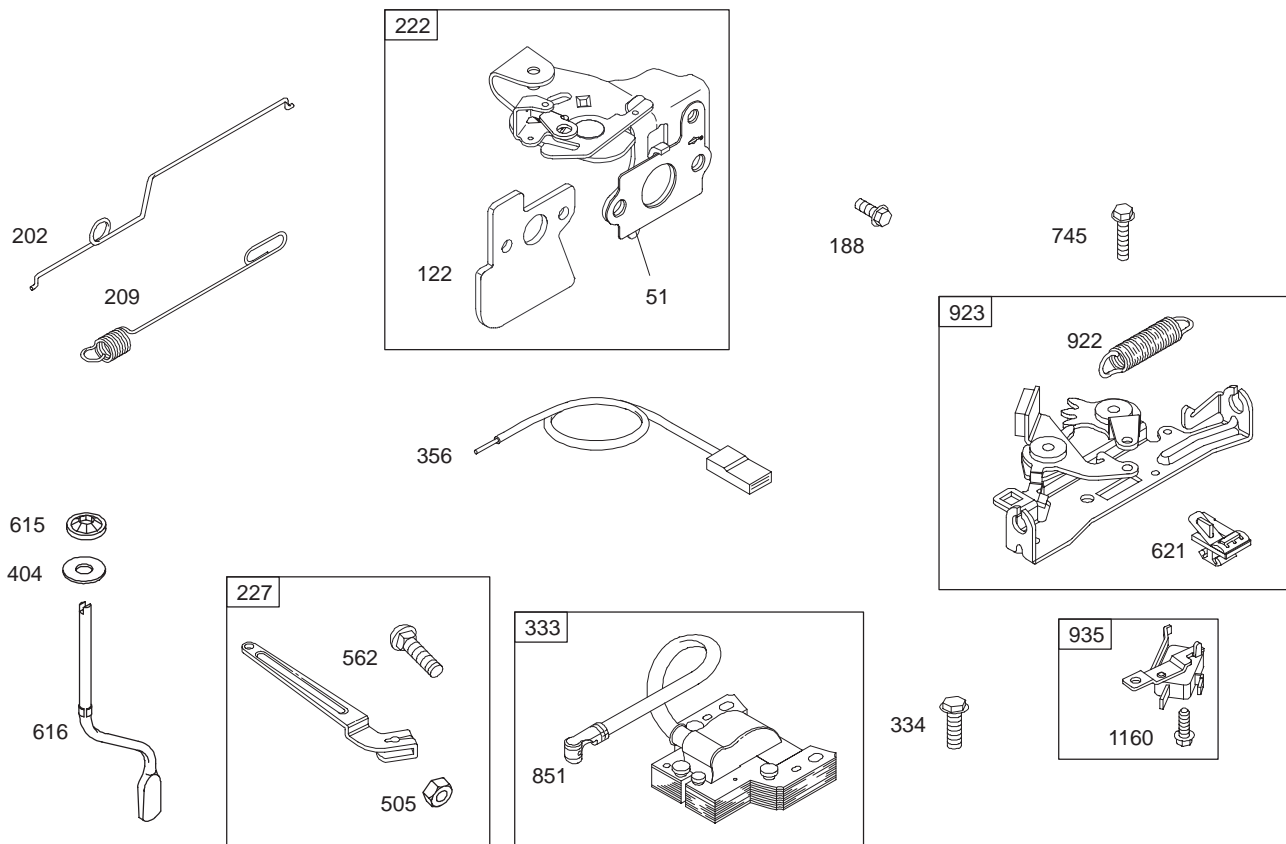

Assemblies include all parts shown in frames.

## Governor Assembly Briggs and Stratton Model 122607-0118-E1

| Ref. No. | Part No. | Qty. | Description                          |
|----------|----------|------|--------------------------------------|
| △★◆51    | 692668   | 1    | Gasket-Intake                        |
| △★◆122   | 692799   | 1    | Spacer-Carburetor                    |
| 188      | 693168   | 1    | Screw<br>(Control Bracket)           |
| 202      | 691303   | 1    | Link-Mechanical<br>Governor          |
| 209      | 690319   | 1    | Spring-Governor                      |
| 222      | 692723   | 1    | Bracket-Control                      |
| 227      | 691467   | 1    | Lever-Governor<br>Control            |
| 333      | 802574   | 1    | Armature-Magneto                     |
| 334      | 691061   | 1    | Screw<br>(Magneto Armature)          |
| 356      | 692390   | 1    | Wire-Stop                            |
| 404      | 690272   | 1    | Washer<br>(Governor Crank)           |
| 505      | 231082   | 1    | Nut<br>(Governor Control<br>Lever)   |
| 562      | 94852    | 1    | Screw<br>(Governor Control<br>Lever) |
| 615      | 690340   | 1    | Retainer-Governor<br>Shaft           |


| Ref. No. | Part No. | Qty. | Description                 |
|----------|----------|------|-----------------------------|
| 616      | 691308   | 1    | Crank-Governor              |
| 621      | 692310   | 1    | Switch-Stop                 |
| 745      | 691648   | 1    | Screw<br>(Brake)            |
| 851      | 493880   | 1    | Terminal-Sparkplug          |
| 922      | 691831   | 1    | Spring-Brake                |
| 923      | 691994   | 1    | Brake Assembly              |
| 935      | 499421   | 1    | Switch-Interlock            |
| 1160     | 691627   | 1    | Screw<br>(Interlock Switch) |

△ Included in Valve Gasket Set-Ref. 1095.  
★ Included in Engine Gasket Set-Ref. 358.

◆ Included in Carburetor Overhaul Kit-Ref. 121.  
◆ Included in Carburetor Gasket Set-Ref. 977.

**Obtain Parts from Briggs and Stratton**



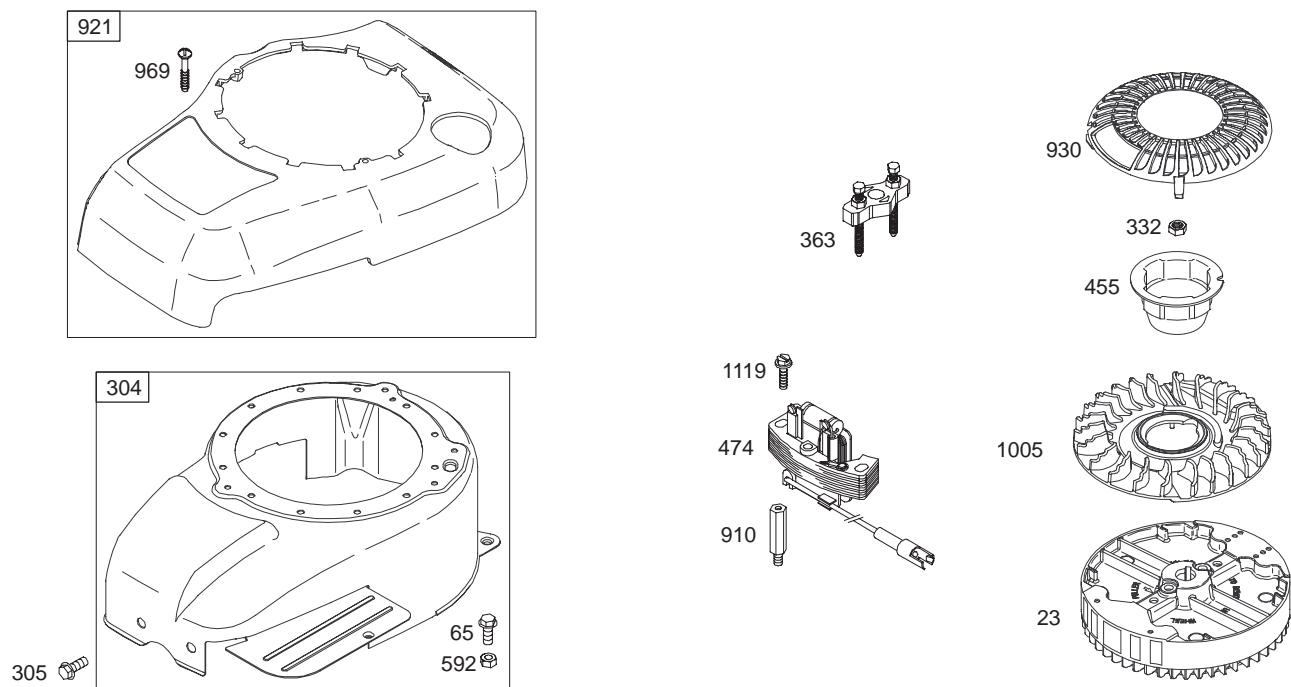

1036 Emission Label


Assemblies include all parts shown in frames.

## Blower Housing Assembly Briggs and Stratton Model 122607-0118-E1

| Ref. No. | Part No. | Qty. | Description                        |
|----------|----------|------|------------------------------------|
| 23       | 696569   | 1    | Flywheel                           |
| 65       | 690837   | 1    | Screw<br>(Rewind Starter)          |
| 304      | 499677   | 1    | Housing-Blower                     |
| 305      | 690960   | 1    | Screw<br>(Blower Housing)          |
| 332      | 690662   | 1    | Nut<br>(Flywheel)                  |
| 363      | 19069    | 1    | Puller-Flywheel                    |
| 455      | 695161   | 1    | Cup-Flywheel                       |
| 474      | 691991   | 1    | Alternator                         |
| 592      | 690800   | 1    | Nut<br>(Rewind Starter)            |
| 910      | 691094   | 1    | Stud<br>(Alternator)               |
| 921      | 692699   | 1    | Cover-Blower Housing               |
| 930      | 692691   | 1    | Guard-Rewind                       |
| 969      | 691138   | 1    | Screw<br>(Blower Housing<br>Cover) |
| 1005     | 691346   | 1    | Fan-Flywheel                       |
| 1036     | 696767   | 1    | Label-Emission                     |
| 1119     | 691648   | 1    | Screw<br>(Alternator)              |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

Obtain Parts from Briggs and Stratton

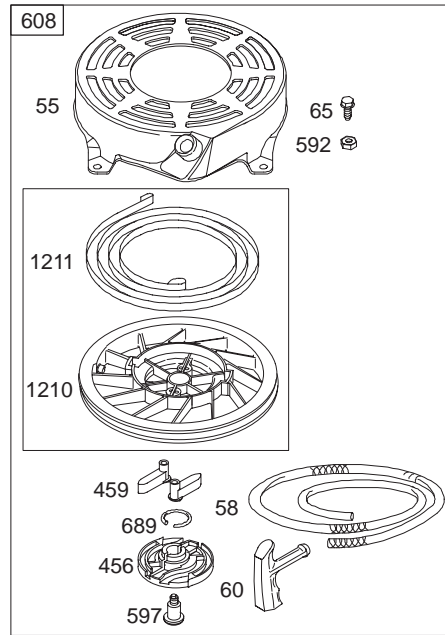


Assemblies include all parts shown in frames.

## Starter Assembly Briggs and Stratton Model 122607-0118-E1

| Ref. No. | Part No. | Qty. | Description                              |
|----------|----------|------|--|
| 55       | 691421   | 1    | Housing-Rewind Starter                   |
| 58       | 280399   | 1    | Rope-Starter<br>(Cut to Required Length) |
| 60       | 281434   | 1    | Grip-Starter Rope                        |
| 65       | 690837   | 1    | Screw<br>(Rewind Starter)                |
| 456      | 692299   | 1    | Plate-Pawl Friction                      |
| 459      | 281505   | 1    | Pawl-Ratchet                             |
| 592      | 690800   | 1    | Nut (Rewind Starter)                     |
| 597      | 691696   | 1    | Screw<br>(Pawl Friction Plate)           |
| 608      | 497680   | 1    | Starter-Rewind                           |
| 689      | 691855   | 1    | Spring-Friction                          |
| 1210     | 498144   | 1    | Pulley/Spring<br>Assembly<br>(Pulley)    |
| 1211     | 498144   | 1    | Pulley/Spring<br>Assembly<br>(Spring)    |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

Obtain Parts from Briggs and Stratton

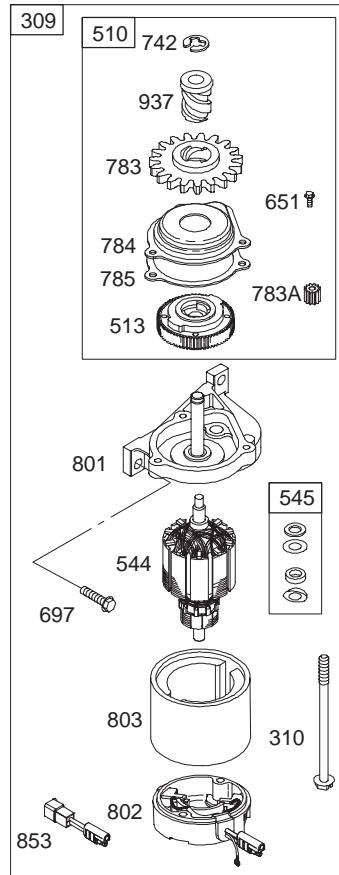

Assemblies include all parts shown in frames.



## Starter Assembly Briggs and Stratton Model 122607-0118-E1

| Ref. No. | Part No. | Qty. | Description                   |
|----------|----------|------|-------------------------------|
| 309      | 695550   | 1    | Motor-Starter                 |
| 310      | 692327   | 1    | Bolt<br>(Starter Motor)       |
| 510      | 494147   | 1    | Drive-Starter                 |
| 513      | 692358   | 1    | Clutch-Drive                  |
| 544      | 690786   | 1    | Armature-Starter              |
| 545      | 492919   | 1    | Washer Set                    |
| 651      | 690345   | 1    | Screw<br>(Starter Gear Cover) |
| 697      | 691127   | 1    | Screw<br>(Drive Cap)          |
| 742      | 93941    | 1    | Retainer-E Ring               |
| 783      | 691918   | 1    | Gear-Pinion                   |
| 783A     | 691269   | 1    | Gear-Pinion                   |
| 784      | 692341   | 1    | Cover-Gear                    |
| 785      | 692352   | 1    | Gasket-Starter Cover          |
| 801      | 690782   | 1    | Cap-Drive                     |
| 802      | 695267   | 1    | Cap-End                       |
| 803      | 695266   | 1    | Housing-Starter               |
| 853      | 695268   | 1    | Adapter-Wire                  |
| 937      | 691325   | 1    | Spline-Starter                |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

Obtain Parts from Briggs and Stratton



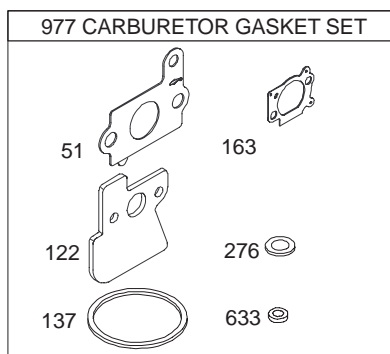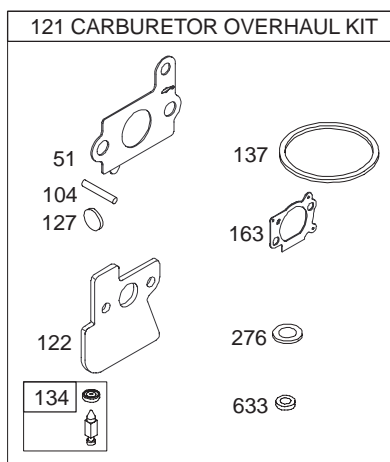

Assemblies include all parts shown in frames.

## Carburetor Overhaul Kit Assembly Briggs and Stratton Model 122607-0118-E1

| Ref. No. | Part No. | Qty. | Description               |
|----------|----------|------|---------------------------|
| Δ★◆51    | 692668   | 1    | Gasket-Intake             |
| ●104     | 691242   | 1    | Pin-Float Hinge           |
| 121      | 692703   | 1    | Kit-Carburetor Overhaul   |
| Δ★◆122   | 692799   | 1    | Spacer-Carburetor         |
| ●127     | 694468   | 1    | Plug-Welch                |
| ●134     | 398188   | 1    | Kit-Needle/Seat           |
| ●◆137    | 693981   | 1    | Gasket-Float Bowl         |
| Δ★◆163   | 691894   | 1    | Gasket-Air Cleaner        |
| ●◆276    | 271716   | 1    | Washer-Sealing            |
| ●◆633    | 691321   | 1    | Seal-Choke/Throttle Shaft |
| 977      | 692704   | 1    | Gasket Set-Carburetor     |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

Δ Included in Valve Gasket Set-Ref. 1095.  
 ★ Included in Engine Gasket Set-Ref. 358.  
**Obtain Parts from Briggs and Stratton**

● Included in Carburetor Overhaul Kit-Ref. 121.  
 ◆ Included in Carburetor Gasket Set-Ref. 977.

