



## Mid-Size Mower

### ProLine Hydro 15hp with 36in Side Discharge Mower

Model No. 30527—230000001 and Up

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

## Contents

| <b>Description</b>                           | <b>Page</b> | <b>Description</b>                         | <b>Page</b> |
|----------------------------------------------|-------------|--------------------------------------------|-------------|
| Engine and Fuel System Assembly .....        | 3           | Cylinder Head, Valve and Breather Assembly |             |
| Transmission and Drive Pulley Assembly ..... | 4           | Kohler Model CV15T–41608 .....             | 18          |
| Linkage Assembly .....                       | 5           | Ignition and Electrical Assembly           |             |
| Wheel Drive Assembly .....                   | 6           | Kohler Model CV15T–41608 .....             | 19          |
| Hydraulic Assembly .....                     | 7           | Blower Housing And Baffle Assembly         |             |
| Lower Control Assembly .....                 | 8           | Kohler Model CV15T–41608 .....             | 20          |
| Upper Handle Assembly .....                  | 9           | Starter Assembly                           |             |
| Electrical Assembly .....                    | 11          | Kohler Model CV15T–41608 .....             | 21          |
| Deck Assembly .....                          | 12          | Fuel System Assembly                       |             |
| Front Castor, Belt Tension, and              |             | Kohler Model CV15T–41608 .....             | 22          |
| Blade Brake System Assembly .....            | 13          | Engine Controls Assembly                   |             |
| Spindle, Blade and Belt Assembly .....       | 15          | Kohler Model CV15T–41608 .....             | 23          |
| Crankcase Assembly                           |             | Air Cleaner Assembly                       |             |
| Kohler Model CV15T–41608 .....               | 16          | Kohler Model CV15T–41608 .....             | 24          |
| Oil Pan and Lubrication Assembly             |             | Exhaust Assembly                           |             |
| Kohler Model CV15T–41608 .....               | 17          | Kohler Model CV15T–41608 .....             | 25          |


## Accessories

| <b>Description</b>    | <b>Model / Part No.</b> | <b>Description</b>  | <b>Model / Part No.</b> |
|-----------------------|-------------------------|---------------------|-------------------------|
| Recycler Kit .....    | 30142                   | Parking Brake ..... | 106–2746                |
| Bagging Kit .....     | 30198                   | Atomic Blade .....  | 104–8590                |
| Low Sail Blades ..... | 103–2508                |                     |                         |

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| <b>Abbreviation</b> | <b>Meaning</b>                    | <b>Abbreviation</b> | <b>Meaning</b>          |
|---------------------|-----------------------------------|---------------------|-------------------------|
| AR .....            | as required                       | HYD .....           | hydraulic               |
| ASM .....           | assembly                          | INC .....           | incorporated            |
| CARR .....          | carriage                          | LH .....            | left hand               |
| DEG .....           | degrees                           | NI .....            | nylon insert            |
| FH .....            | flat head                         | PPH .....           | Phillips pan head       |
| GA .....            | gauge                             | PTH .....           | Phillips truss head     |
| HF .....            | hex flange                        | PTO .....           | power take off          |
| HH .....            | hex head                          | RH .....            | right hand              |
| HHF .....           | hex head flange                   | SFH .....           | slotted fillister head  |
| HLH .....           | hex lag head                      | SHH .....           | slotted hex head        |
| HJ .....            | hex jam                           | SQH .....           | square head             |
| HOC .....           | height-of-cut                     | SHWH .....          | slotted hex washer head |
| HS .....            | hex socket                        | SPH .....           | slotted pan head        |
| HSBH .....          | hex socket button head            | SRH .....           | slotted round head      |
| HSFH .....          | hex socket flat head              | STD .....           | standard                |
| HSH .....           | hex socket head                   | TAP .....           | self tapping            |
| HWH .....           | hex washer head                   | TTH .....           | Torx truss head         |
| HWHTF .....         | hex washer head<br>thread forming | WH .....            | wing head               |

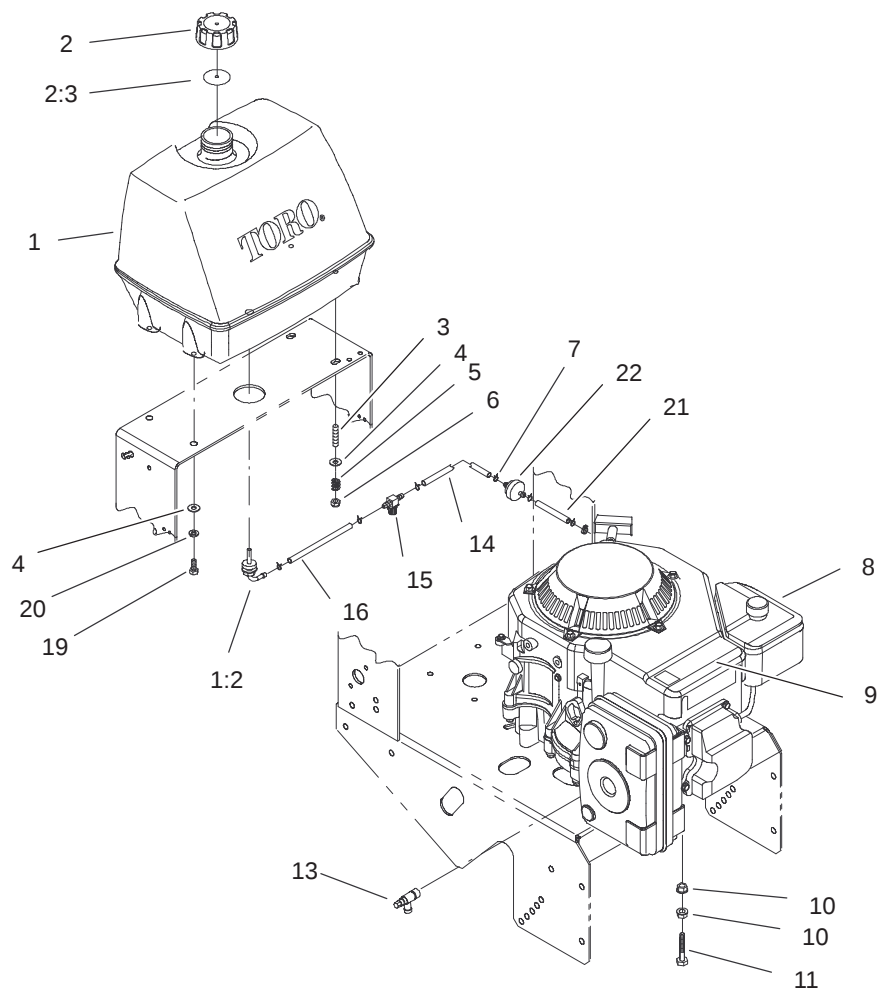


Sheet No.:2

## Engine and Fuel System Assembly

| Ref. No. | Part No. | Qty. | Description                    |
|----------|----------|------|--------------------------------|
| 1        | 106-0730 | 1    | Fuel Tank ASM                  |
| 1:2      | 103-2605 | 1    | Fitting-Fuel, Bulkhead         |
| 2        | 88-3980  | 1    | Gas Cap ASM                    |
| 2:3      | 88-4010  | 1    | Gasket-Cap, Gas                |
| 3        | 1-633023 | 2    | Stud                           |
| 4        | 3256-23  | 4    | Washer-Flat                    |
| 5        | 1-633349 | 2    | Spring-Tank, Fuel              |
| 6        | 3296-47  | 2    | Nut-Lock, NI                   |
| 7        | 1-303077 | 6    | Clamp                          |
| ☆8       |          | 1    | Engine-Kohler,<br>Cv15t-41608  |
| 9        | 106-0699 | 1    | Decal-Warning, Hot<br>Surfaces |
| 10       | 3290-357 | 2    | Nut-HHF                        |
| 11       | 323-13   | 1    | Screw-HH                       |
| 13       | 103-1965 | 1    | Valve-Drain, Oil               |
| 14       | 103-2944 | 1    | Line-Fuel                      |
| 15       | 1-603776 | 1    | Hose-Line, Fuel                |
| 16       | 1-603955 | 1    | Hose-Fuel                      |
| 19       | 322-3    | 2    | Screw-HH                       |
| 20       | 1-805005 | 2    | Washer-Lock                    |
| 21       | 1-603954 | 1    | Hose-Line, Fuel                |
| 22       | 1-303197 | 1    | Filter-Fuel                    |

☆ Not serviced separately

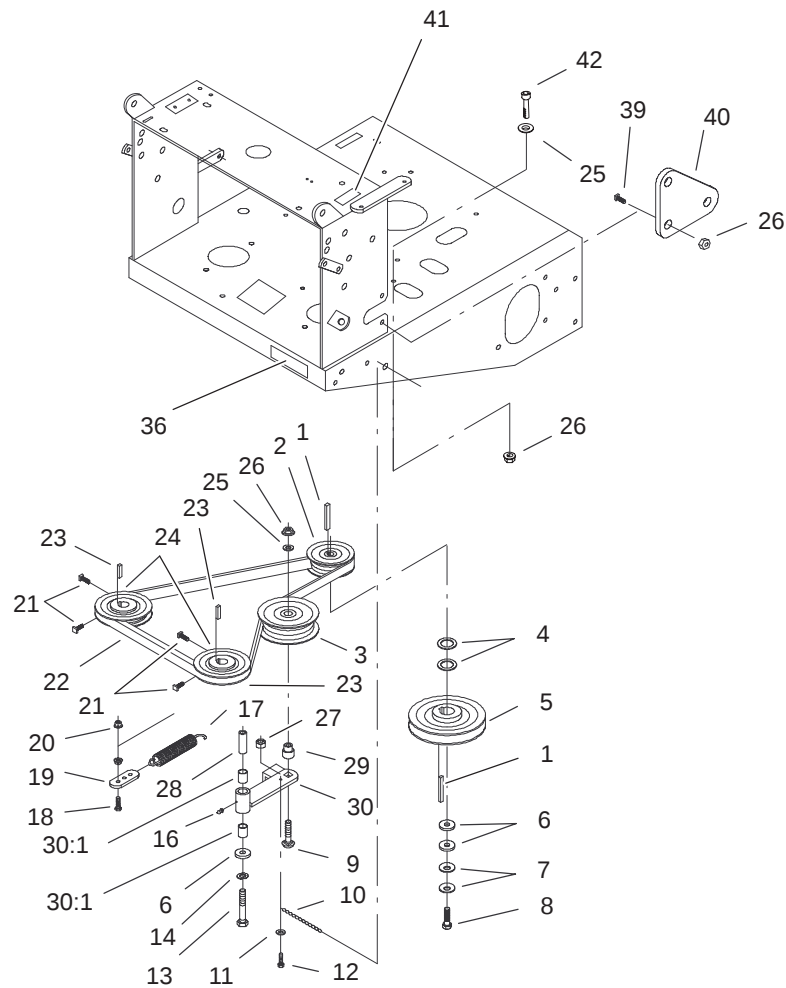


Sheet No.:3

## Transmission and Drive Pulley Assembly

| Ref. No. | Part No. | Qty. | Description        |
|----------|----------|------|--------------------|
| 1        | 1-807259 | 2    | Key                |
| 2        | 1-653035 | 1    | Sheave W/Hub       |
| 3        | 1-603843 | 1    | Pulley-Idler       |
| 4        | 1-523157 | 2    | Washer-Spacer      |
| 5        | 103-1668 | 1    | Sheave             |
| 6        | 1-373034 | 3    | Washer             |
| 7        | 1-603610 | 2    | Washer-Spring      |
| 8        | 3212-6   | 1    | Screw-HH           |
| 9        | 3231-29  | 1    | Screw-CARR         |
| 10       | 1-323365 | 1    | Chain-Link, Twist  |
| 11       | 3256-14  | 1    | Washer-Flat        |
| 12       | 1-809069 | 1    | Screw-Cap HH       |
| 13       | 323-12   | 1    | Screw-HH           |
| 14       | 3253-5   | 1    | Washer-Lock        |
| 16       | 302-19   | 1    | Fitting-Grease     |
| 17       | 1-603402 | 1    | Spring-Extension   |
| 18       | 322-5    | 1    | Screw-HH           |
| 19       | 1-603801 | 1    | Anchor-Spring      |
| 20       | 32128-20 | 6    | Nut-HF             |
| 21       | 1-803050 | 4    | Screw-Set          |
| 22       | 106-2740 | 1    | V-Belt-Hydro Drive |
| 23       | 1-807272 | 2    | Key                |
| 24       | 1-413010 | 2    | Sheave W/Hub       |
| 25       | 3256-24  | 2    | Washer-Flat        |
| 26       | 3290-357 | 7    | Nut-HHF            |
| 27       | 3296-2   | 1    | Nut-Lock           |


| Ref. No. | Part No. | Qty. | Description          |
|----------|----------|------|----------------------|
| 28       | 1-603044 | 1    | Bushing              |
| 29       | 1-603496 | 1    | Bushing-Idler        |
| 30       | 1-602521 | 1    | Idler Arm ASM        |
| 30:1     | 1-513034 | 2    | Sleeve-Bearing       |
| 36       | 98-0776  | 1    | Decal-Caution        |
| 39       | 323-4    | 2    | Screw-HH             |
| 40       | 1-413497 | 1    | Bellcrank            |
| 41       | 95-2814  | 1    | Decal-Shut Off, Fuel |
| 42       | 323-7    | 1    | Screw-HH             |

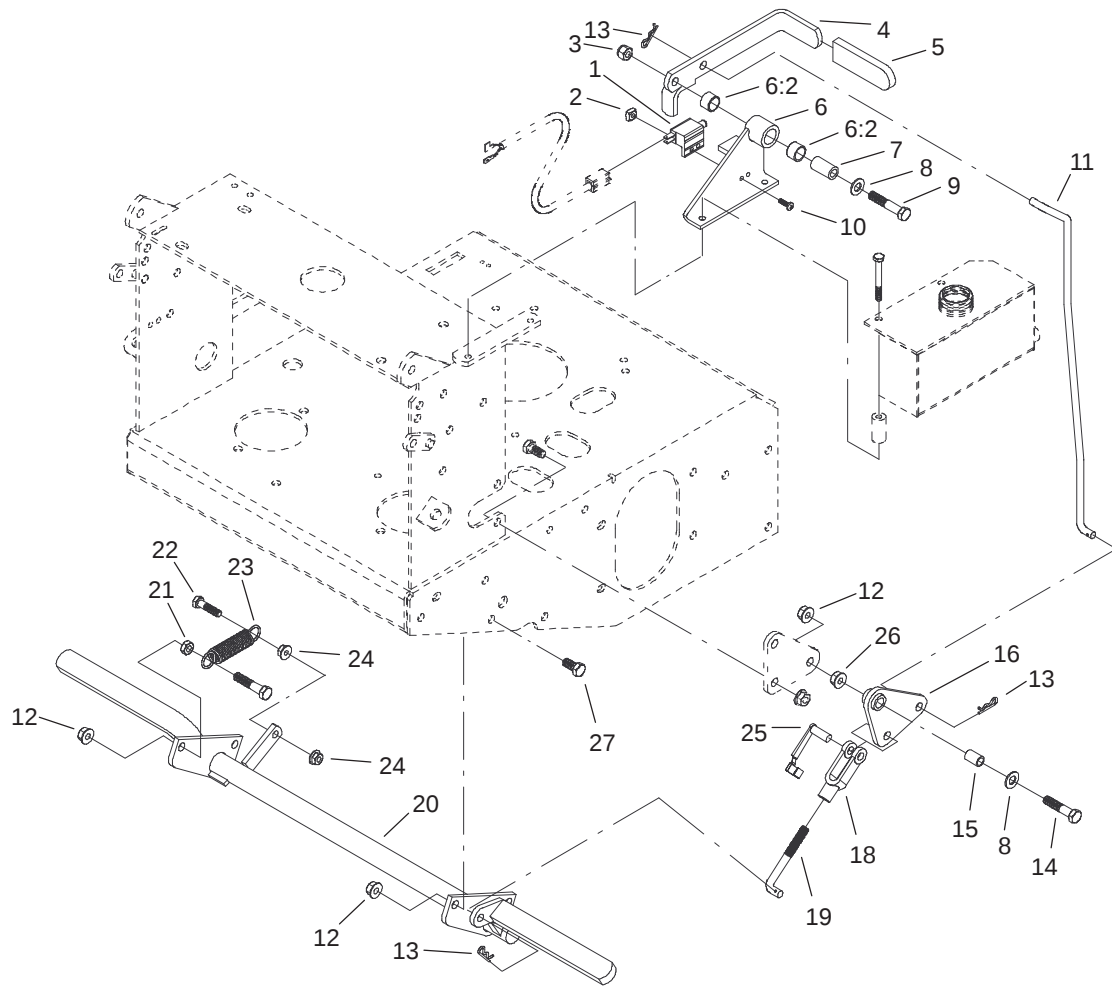

Sheet No.:4

## Linkage Assembly

| Ref. No. | Part No.    | Qty. | Description           | Ref. No. | Part No. | Qty. | Description |
|----------|-------------|------|-----------------------|----------|----------|------|-------------|
| 1        | 1-513051    | 1    | Switch-Open, Normally | 26       | 32128-21 | 1    | Nut-HF      |
| 2        | 1-633181    | 1    | Plate-Tapped          | 27       | 323-4    | 3    | Screw-HH    |
| 3        | 3296-39     | 1    | Nut-Lock, NI          |          |          |      |             |
| 4        | 1-412501-03 | 1    | Lever-Parkbrake       |          |          |      |             |
| 5        | 1-303020    | 1    | Grip-Lever            |          |          |      |             |
| 6        | 1-414504    | 1    | Bracket ASM           |          |          |      |             |
| 6:2      | 1-413347    | 2    | Sleeve-Bushing        |          |          |      |             |
| 7        | 1-413344    | 1    | Bushing-Pivot         |          |          |      |             |
| 8        | 3256-24     | 2    | Washer-Flat           |          |          |      |             |
| 9        | 323-10      | 1    | Screw-HH              |          |          |      |             |
| 10       | 3290-500    | 2    | Screw-PPH             |          |          |      |             |
| 11       | 1-413496    | 1    | Linkage-Upper         |          |          |      |             |
| 12       | 3290-357    | 5    | Nut-HHF               |          |          |      |             |
| 13       | 1-806003    | 3    | Pin-Hair              |          |          |      |             |
| 14       | 323-9       | 2    | Screw-HH              |          |          |      |             |
| 15       | 1-303548    | 1    | Bushing-Plastic       |          |          |      |             |
| 16       | 1-414508    | 1    | Bellcrank ASM         |          |          |      |             |
| 18       | 1-633131    | 1    | Yoke-Linkage, Brake   |          |          |      |             |
| 19       | 1-413489    | 1    | Linkage-Lower         |          |          |      |             |
| 20       | 103-2085-03 | 1    | Brake                 |          |          |      |             |
| 21       | 3218-3      | 1    | Nut-Jam               |          |          |      |             |
| 22       | 322-6       | 1    | Screw-HH              |          |          |      |             |
| 23       | 1-323161    | 1    | Spring-Idler          |          |          |      |             |
| 24       | 32128-20    | 2    | Nut-HF                |          |          |      |             |
| 25       | 103-2399    | 1    | Pin-Spring, Clevis    |          |          |      |             |

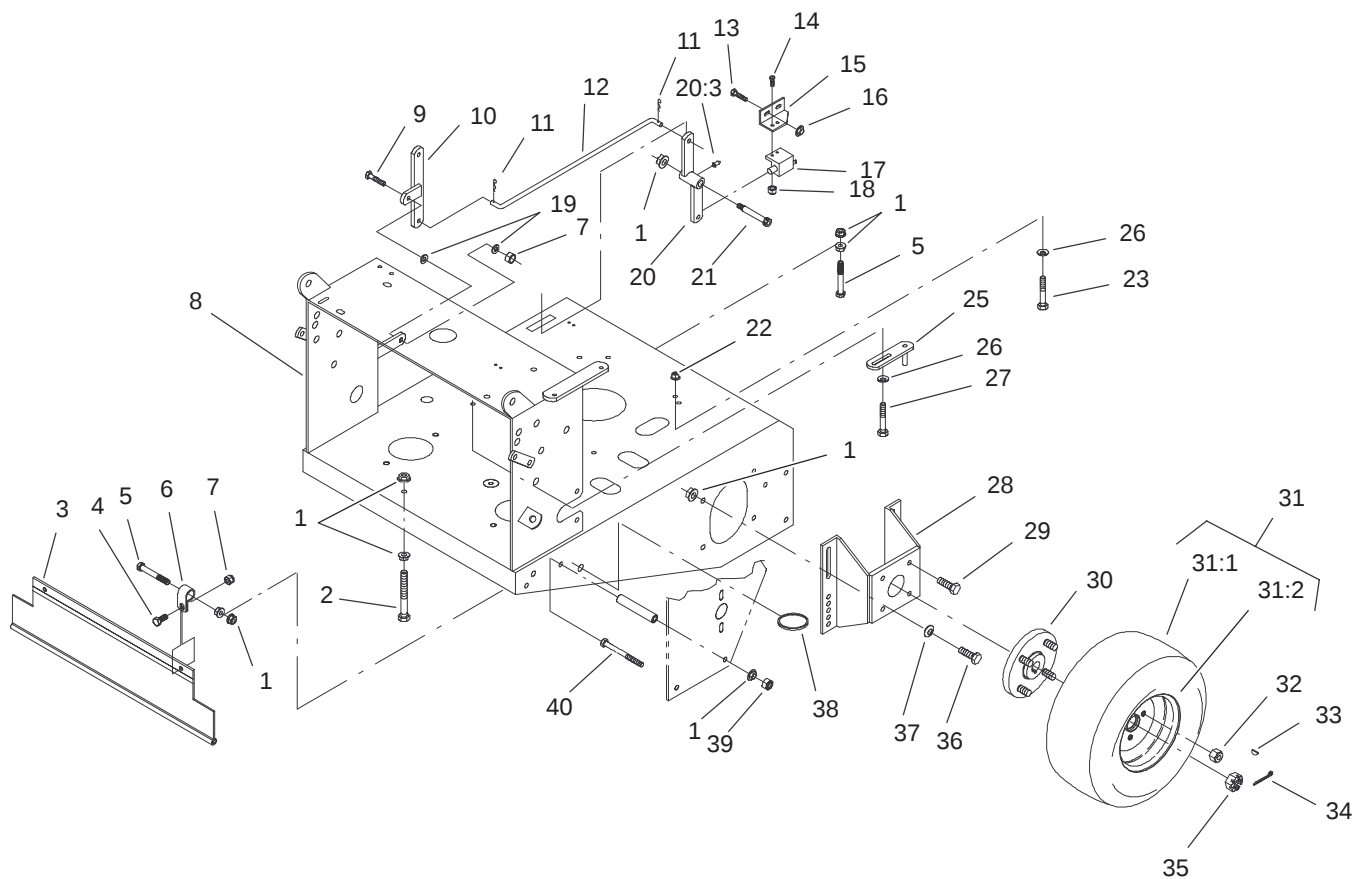


Sheet No.:5

## Wheel Drive Assembly

| Ref. No. | Part No.    | Qty. | Description           |
|----------|-------------|------|-----------------------|
| 1        | 3290-357    | 8    | Nut-HHF               |
| 2        | 323-11      | 1    | Screw-HH              |
| 3        | 103-2056    | 1    | Shield-Drag           |
| 4        | 322-3       | 2    | Screw-HH              |
| 5        | 323-13      | 4    | Screw-HH              |
| 6        | 1-413510    | 2    | Clip-Loom             |
| 7        | 3296-29     | 3    | Nut-Lock, NI          |
| 8        | 103-2908-01 | 1    | Deck-Rear             |
| 9        | 322-6       | 2    | Screw-HH              |
| 10       | 1-322090-01 | 1    | Bellcrank             |
| 11       | 1-806003    | 3    | Pin-Hair              |
| 12       | 1-323172    | 1    | Linkage-Engage, Blade |
| 13       | 321-3       | 2    | Screw-HH              |
| 14       | 3290-500    | 2    | Screw-PPH             |
| 15       | 1-323213    | 1    | Bracket-Switch, Blade |
| 16       | 32128-33    | 2    | Nut-HF                |
| 17       | 1-513051    | 1    | Switch-Open, Normally |
| 18       | 1-633181    | 1    | Plate-Tapped          |
| 19       | 3256-23     | 5    | Washer-Flat           |
| 20       | 1-322108    | 1    | Bellcrank ASM         |
| 20:3     | 302-40      | 1    | Fitting-Grease        |
| 21       | 1-809062    | 1    | Screw                 |
| 22       | 32128-20    | 6    | Nut-HF                |
| 23       | 33114-025   | 3    | Screw-HH              |

| Ref. No. | Part No.    | Qty. | Description        |
|----------|-------------|------|--------------------|
| 25       | 1-322110    | 1    | Guide-Belt         |
| 26       | 1-303334    | 4    | Washer-Spring      |
| 27       | 33114-030   | 1    | Screw-HH           |
| 28       | 1-322162-01 | 2    | Mount-Motor        |
| 29       | 3234-12     | 8    | Screw-HHF          |
| 30       | 1-602997    | 2    | Hub W/Studs        |
| ★31      |             | 2    | Wheel And Tire ASM |
| 31:1     | 1-413474    | 1    | Tire-Turfmaster    |
| 31:2     | 1-603715    | 1    | Wheel-Rim          |
| 32       | 242-50      | 8    | Nut-Lug            |
| 33       | 1-807019    | 2    | Key-Woodruff       |
| 34       | 1-806800    | 2    | Pin-Cotter         |
| 35       | 32136-5     | 2    | Nut-Slotted        |
| 36       | 323-6       | 8    | Screw-HH           |
| 37       | 98-5975     | 8    | Washer-Belleville  |
| 38       | 1-323366    | 1    | Ring-Split         |
| 39       | 3296-39     | 1    | Nut-Lock, NI       |
| 40       | 323-23      | 1    | Screw-HH           |

★ Not serviced separately

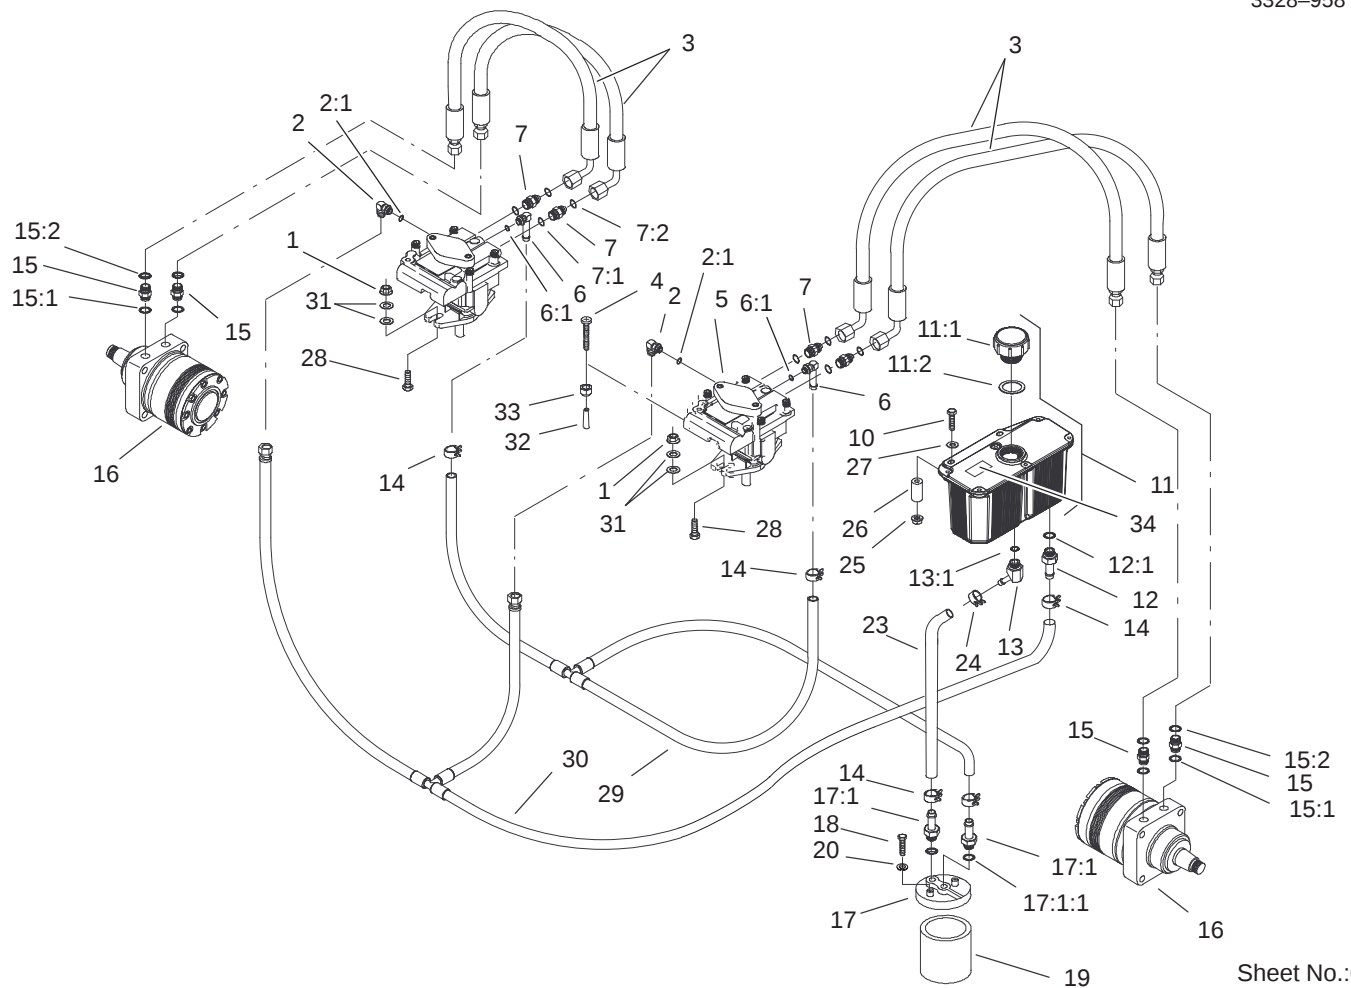


Sheet No.:6

## Hydraulic Assembly

| Ref. No. | Part No. | Qty. | Description         |
|----------|----------|------|---------------------|
| 1        | 3290-357 | 4    | Nut-HHF             |
| 2        | 1-513840 | 2    | Fitting-90°         |
| 2:1      | 237-42   | 1    | O-Ring              |
| 3        | 1-403102 | 4    | Hose-Pressure, High |
| 4        | 1-801063 | 2    | Screw               |
| 5        | 1-613042 | 2    | Pump                |
| 6        | 1-603989 | 2    | Fitting             |
| 6:1      | 237-78   | 1    | O-Ring              |
| 7        | 1-603990 | 4    | Fitting-Straight    |
| 7:1      | 237-79   | 1    | O-Ring              |
| 7:2      | 1-603992 | 1    | O-Ring              |
| 10       | 321-15   | 2    | Screw-HH            |
| 11       | 103-1946 | 1    | Reservoir-HYD       |
| 11:1     | 103-1948 | 1    | Cap-Reservoir, HYD  |
| 11:2     | 103-1949 | 1    | Gasket-Cap          |
| 12       | 103-1801 | 1    | Adapter-Straight    |
| 12:1     | 237-42   | 1    | O-Ring              |
| 13       | 103-1807 | 1    | Elbow-45°           |
| 13:1     | 237-42   | 1    | O-Ring              |
| 14       | 103-1988 | 5    | Clamp-Hose          |
| 15       | 1-603991 | 4    | Fitting-Straight    |
| 15:1     | 237-80   | 1    | O-Ring              |
| 15:2     | 1-603992 | 1    | O-Ring              |
| 16       | 1-603718 | 2    | Motor-Wheel         |
| 17       | 103-2889 | 1    | Filter Head ASM     |
| 17:1     | 103-1912 | 2    | Adapter-Straight    |

| Ref. No. | Part No. | Qty. | Description      |
|----------|----------|------|------------------|
| 17:1:1   | 237-42   | 1    | O-Ring           |
| 18       | 321-3    | 2    | Screw-HH         |
| 19       | 1-633750 | 1    | Filter-HYD       |
| 20       | 1-805004 | 2    | Washer-Lock      |
| 23       | 103-2959 | 1    | Hose-Charge      |
| 24       | 103-1716 | 1    | Clamp-Hose       |
| 25       | 32128-33 | 2    | Nut-HF           |
| 26       | 103-2191 | 2    | Spacer           |
| 27       | 3256-22  | 2    | Washer-Flat      |
| 28       | 323-7    | 4    | Screw-HH         |
| 29       | 103-2057 | 1    | HYD Hose ASM     |
| 30       | 103-2073 | 1    | HYD Hose ASM     |
| 31       | 3256-3   | 8    | Washer-Flat      |
| 32       | 1-613073 | 2    | Grip-Valve, Dump |
| 33       | 3296-42  | 2    | Nut-Lock, NI     |
| 34       | 1-523552 | 1    | Decal-Tank, HYD  |

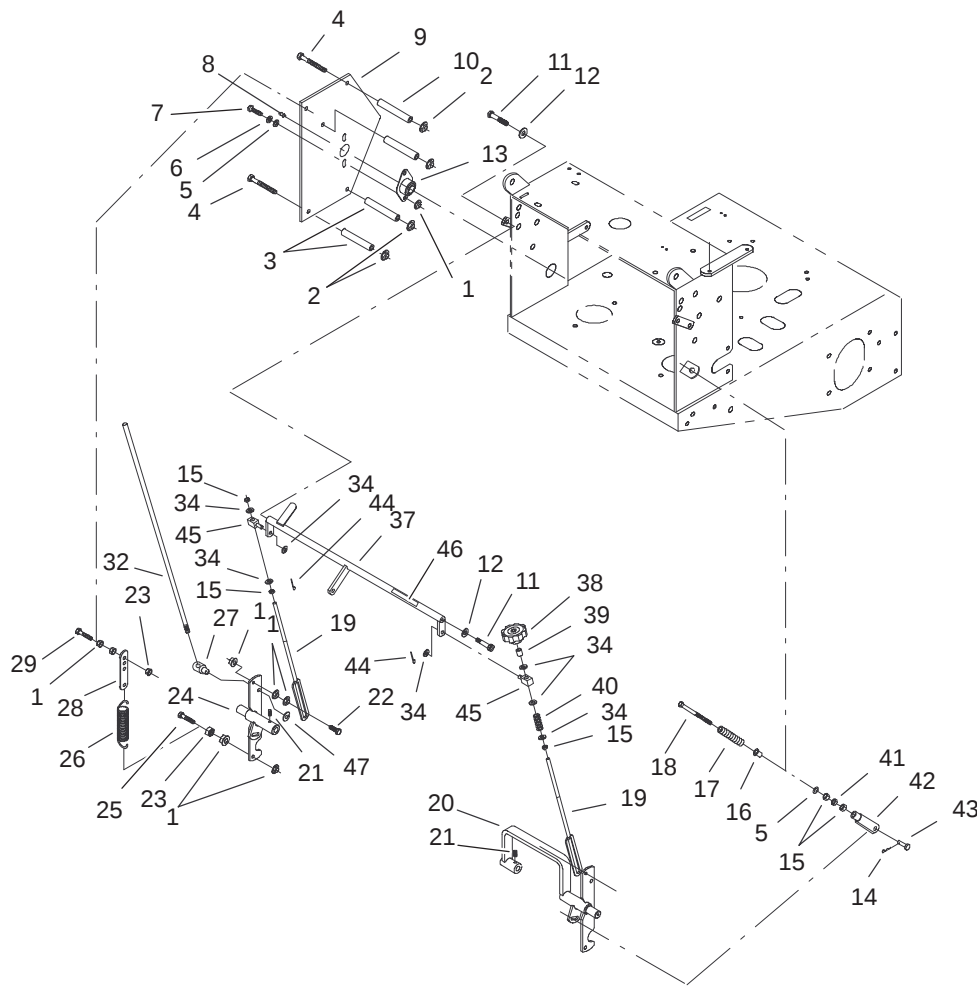


Sheet No.:7

## Lower Control Assembly

| Ref. No. | Part No.    | Qty. | Description            |
|----------|-------------|------|------------------------|
| 1        | 32128-20    | 12   | Nut-HF                 |
| 2        | 3290-357    | 8    | Nut-HHF                |
| 3        | 1-323197-01 | 4    | Spacer-Shield          |
| 4        | 323-16      | 7    | Screw-HH               |
| 5        | 3256-2      | 6    | Washer-Flat            |
| 6        | 1-805005    | 4    | Washer-Lock            |
| 7        | 322-3       | 4    | Screw-HH               |
| 8        | 302-19      | 2    | Fitting-Grease         |
| 9        | 1-413201-01 | 2    | Shield                 |
| 10       | 1-323195-01 | 4    | Spacer-Shield          |
| 11       | 1-809056    | 2    | Screw                  |
| 12       | 3256-24     | 2    | Washer-Flat            |
| 13       | 1-633102    | 2    | Bearing-Flange, Side   |
| 14       | 1-806003    | 2    | Pin-Hair               |
| 15       | 3219-2      | 7    | Nut-Hex                |
| 16       | 1-603735    | 2    | Bushing-Flanged        |
| 17       | 1-603807    | 2    | Spring-Return, Neutral |
| 18       | 1-603737    | 2    | Bolt-Return, Neutral   |
| 19       | 1-413350    | 2    | Link-Control, Speed    |
| 20       | 103-1191-01 | 1    | Shaft-Control, RH      |
| 21       | 1-803022    | 2    | Screw-Set              |
| 22       | 1-403180    | 2    | Screw-HH               |
| 23       | 3296-29     | 4    | Nut-Lock, NI           |
| 24       | 103-1190-01 | 1    | Shaft-Control, LH      |
| 25       | 322-6       | 2    | Screw-HH               |


| Ref. No. | Part No.    | Qty. | Description              |
|----------|-------------|------|--------------------------|
| 26       | 1-603693    | 2    | Spring-Extension         |
| 27       | 103-1235    | 2    | Swivel-Lever, Drive      |
| 28       | 1-613089    | 2    | Tab-Spring, Extension    |
| 29       | 1-800016    | 2    | Bolt-TAP HH              |
| 32       | 1-413219    | 2    | Rod-Lever, Drive         |
| 34       | 3256-23     | 7    | Washer-Flat              |
| 37       | 1-412203-01 | 1    | Crank-Control, Speed     |
| 38       | 1-413151    | 1    | Knob-Tracking            |
| 39       | 1-603903    | 1    | Spacer                   |
| 40       | 1-323245    | 1    | Spring-Compression       |
| 41       | 3220-2      | 2    | Nut                      |
| 42       | 1-303105    | 2    | Yoke-Adjustable          |
| 43       | 1-808280    | 2    | Pin-Clevis               |
| 44       | 3272-5      | 2    | Pin-Cotter               |
| 45       | 1-603676    | 2    | Swivel-Adjustable, Short |
| 46       | 105-4109    | 1    | Decal-Tracking           |
| 47       | 32151-47    | 2    | Ring-Retaining           |

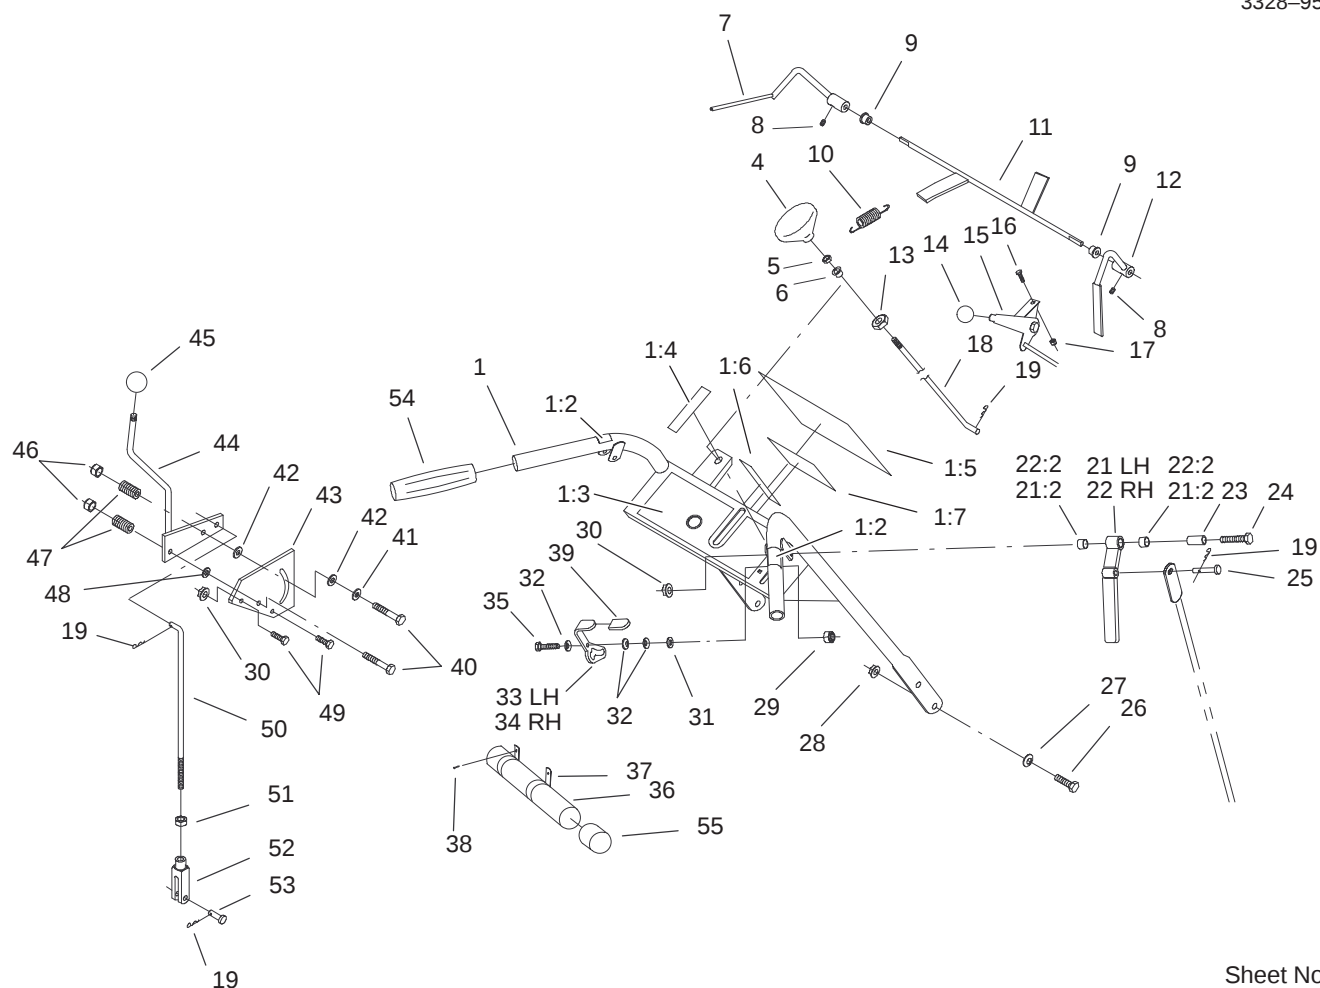

Sheet No.:8

## Upper Handle Assembly

| Ref. No. | Part No.    | Qty. | Description                       | Ref. No. | Part No. | Qty. | Description           |
|----------|-------------|------|-----------------------------------|----------|----------|------|-----------------------|
| 1        | 106-0751    | 1    | Handle ASM                        | 21:2     | 1-413152 | 2    | Sleeve-Bushing        |
| 1:2      | 105-4110    | 2    | Decal-Lock, Neutral               | 22       | 103-0219 | 1    | RH Drive Lever ASM    |
| 1:3      | 106-2738    | 1    | Decal-Warning                     | 22:2     | 1-413152 | 2    | Sleeve-Bushing        |
| 1:4      | 1-323689    | 1    | Decal,Throttle                    | 23       | 1-603749 | 2    | Bushing-Lever, Drive  |
| 1:5      | 106-0750    | 1    | Decal-Proline                     | 24       | 321-9    | 2    | Screw-HH              |
| 1:6      | 95-5537     | 1    | Decal-Engage, Deck                | 25       | 1-613055 | 2    | Pin-Clevis            |
| 1:7      | 106-2743    | 1    | Decal-Caution, Brake              | 26       | 323-6    | 4    | Screw-HH              |
| 4        | 1-323134    | 1    | Knob-Push/Pull                    | 27       | 98-5975  | 4    | Washer-Belleville     |
| 5        | 3218-2      | 1    | Nut-Jam                           | 28       | 3290-357 | 4    | Nut-HHF               |
| 6        | 1-323143    | 1    | Bearing-Nylon                     | 29       | 3296-42  | 2    | Nut-Lock, NI          |
| 7        | 1-412183-03 | 1    | Lever-LH                          | 30       | 32128-33 | 4    | Nut-HF                |
| 8        | 1-803322    | 2    | Screw-Set                         | 31       | 3256-2   | 2    | Washer-Flat           |
| 9        | 1-303365    | 2    | Bushing-Nylon                     | 32       | 1-303435 | 6    | Washer-Spring         |
| 10       | 1-303363    | 1    | Spring-Extension                  | 33       | 1-413148 | 1    | Latch-Lever, LH Drive |
| 11       | 106-2717-03 | 1    | Operator Presence Control Rod ASM | 34       | 1-413150 | 1    | Latch-Lever, RH Drive |
| 12       | 1-412185-03 | 1    | Lever-RH                          | 35       | 321-10   | 2    | Screw-HH              |
| 13       | 1-323142    | 1    | Nut-Push                          | 36       | 104-7050 | 1    | Housing-Manual        |
| 14       | 1-513592    | 1    | Knob-Ball                         | 37       | 2412-120 | 2    | R-Clamp               |
| 15       | 1-323322    | 1    | Cable-Control, Throttle           | 38       | 32104-76 | 2    | Screw                 |
| 16       | 1-807513    | 2    | Bolt-CARR                         | 39       | 1-303019 | 2    | Grip-Latch            |
| 17       | 3296-2      | 2    | Nut-Lock                          | 40       | 322-10   | 2    | Screw-HH              |
| 18       | 1-323181    | 1    | Linkage-Blade                     | 41       | 1-603716 | 1    | Washer-Friction       |
| 19       | 1-806003    | 3    | Pin-Hair                          | 42       | 1-323244 | 2    | Washer-Friction       |
| 21       | 103-0218    | 1    | LH Drive Lever ASM                | 43       | 1-603730 | 1    | Plate-Lever, Shifter  |
|          |             |      |                                   | 44       | 106-2748 | 1    | Lever-Shift           |
|          |             |      |                                   | 45       | 1-603175 | 1    | Knob-Ball             |

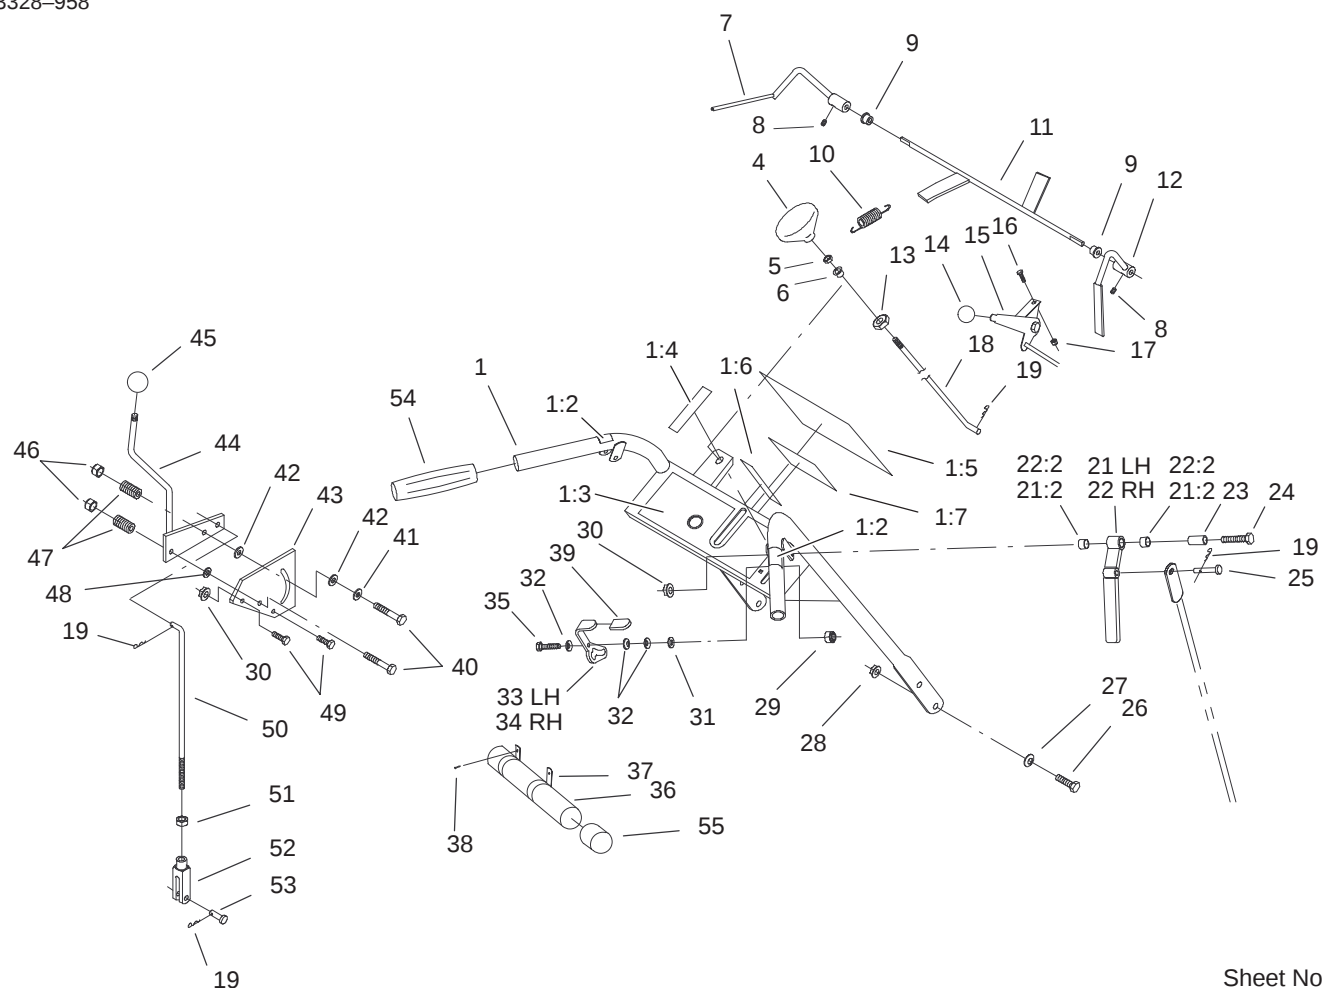


Sheet No.:8

## Upper Handle Assembly (Continued)

| Ref. No. | Part No. | Qty. | Description        |
|----------|----------|------|--------------------|
| 46       | 3296-29  | 2    | Nut-Lock, NI       |
| 47       | 1-323245 | 2    | Spring-Compression |
| 48       | 3256-23  | 1    | Washer-Flat        |
| 49       | 321-3    | 2    | Screw-HH           |
| 50       | 1-323522 | 1    | Rod-Control, Speed |
| 51       | 3220-2   | 1    | Nut                |
| 52       | 1-303105 | 1    | Yoke-Adjustable    |
| 53       | 1-808280 | 1    | Pin-Clevis         |
| 54       | 1-303097 | 2    | Grip-Handle        |
| 55       | 104-7048 | 1    | Cap-Housing        |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

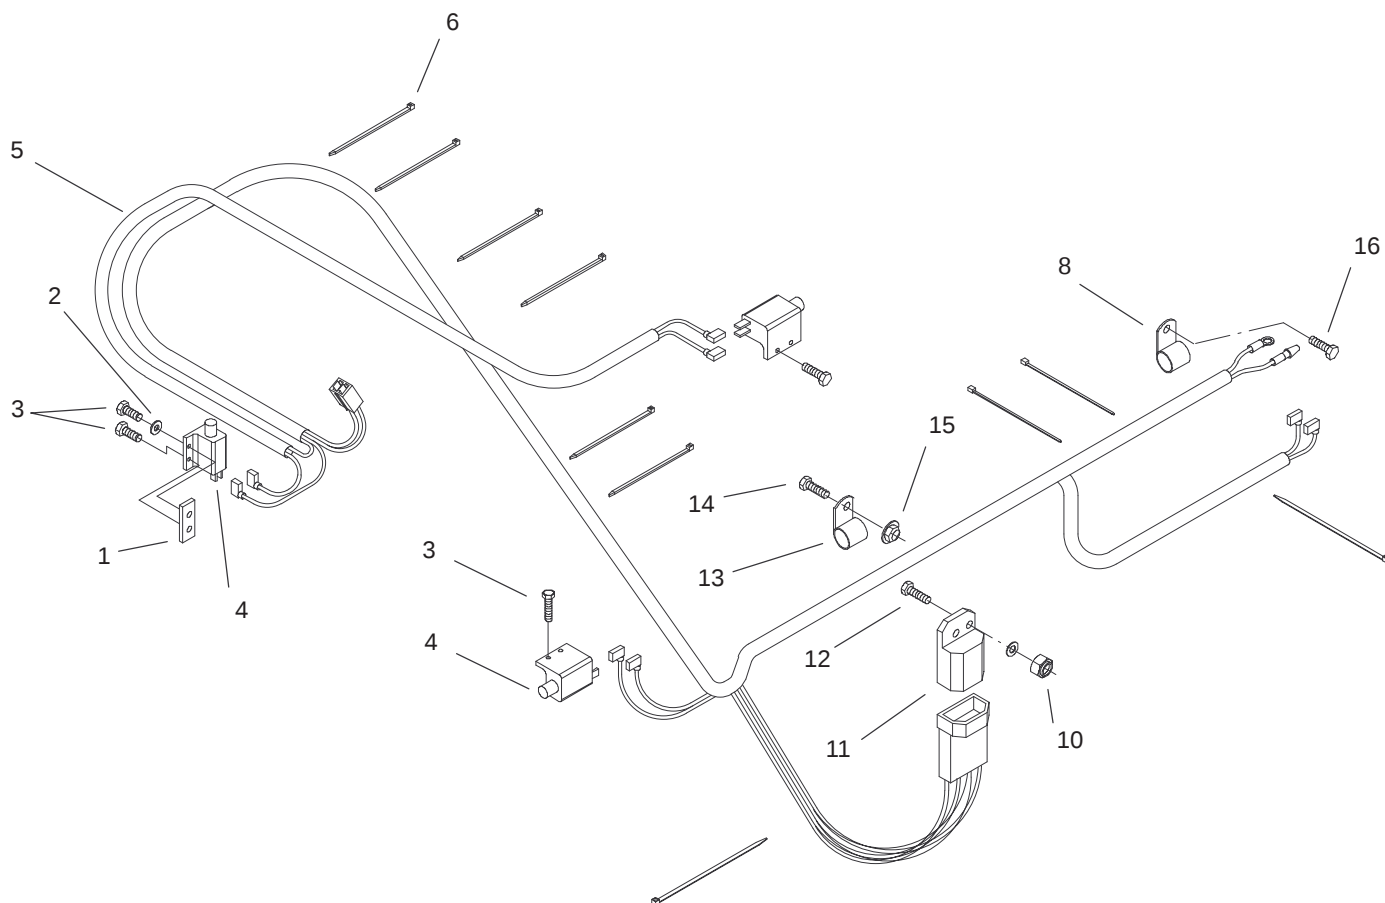


Sheet No.:9

# Electrical Assembly

| Ref. No. | Part No.  | Qty. | Description              |
|----------|-----------|------|--------------------------|
| 1        | 1-633181  | 2    | Plate-Tapped             |
| 2        | 3256-14   | 1    | Washer-Flat              |
| 3        | 3290-500  | 3    | Screw-PPH                |
| 4        | 1-513051  | 2    | Switch-Open,<br>Normally |
| 5        | 103-2286  | 1    | Harness-Wire             |
| 6        | 1-303287  | 6    | Tie-Plastic              |
| 8        | 1-413510  | 1    | Clip-Loom                |
| 10       | 3296-42   | 2    | Nut-Lock, NI             |
| 11       | 1-323430  | 1    | Module-Interlock         |
| 12       | 321-4     | 1    | Screw-HH                 |
| 13       | 1-603727  | 1    | Clip-Loom                |
| 14       | 321-3     | 1    | Screw-HH                 |
| 15       | 32128-33  | 1    | Nut-HF                   |
| 16       | 33114-016 | 1    | Screw-HH                 |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

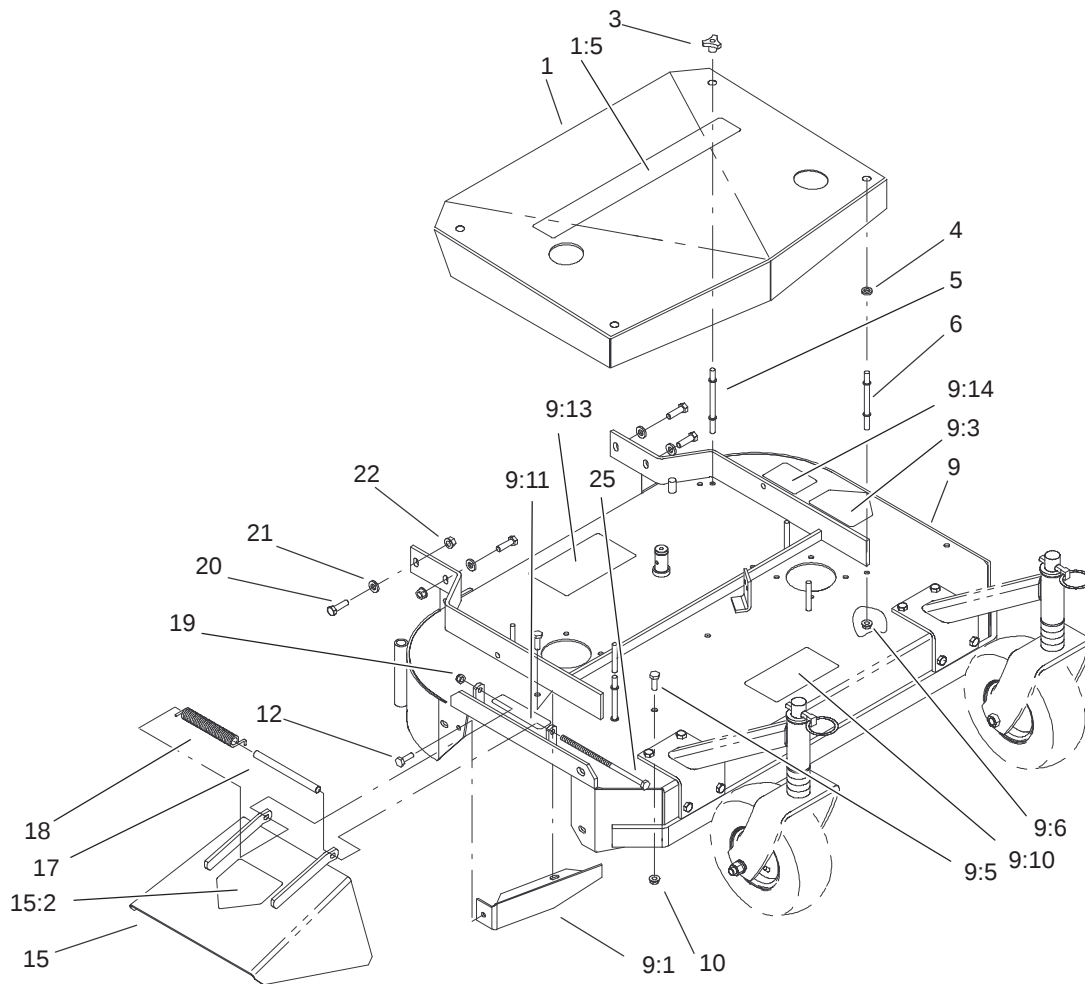


Sheet No.:10

## Deck Assembly

| Ref. No. | Part No.    | Qty. | Description               |
|----------|-------------|------|---------------------------|
| 1        | 1-304258    | 1    | Belt Shield ASM           |
| 1:5      | 106-0711    | 1    | Decal-Proline 36          |
| 3        | 1-323385    | 4    | Knob-3 Prong              |
| 4        | 1-323417    | 4    | Washer                    |
| 5        | 1-303536    | 2    | Stud-Shield, Belt (Long)  |
| 6        | 1-303537    | 2    | Stud-Shield, Belt (Short) |
| 9        | 105-4680    | 1    | Deck ASM                  |
| 9:1      | 1-302189-01 | 1    | Baffle                    |
| 9:3      | 1-403005    | 1    | Decal-Danger              |
| 9:5      | 322-2       | 8    | Screw-HH                  |
| 9:6      | 32128-20    | 8    | Nut-HF                    |
| 9:10     | 66-1340     | 1    | Decal-Danger              |
| 9:11     | 98-5954     | 1    | Decal-Missing, Cover      |
| 9:13     | 98-3296     | 1    | Decal-Routing, Belt       |
| 9:14     | 98-5130     | 1    | Decal-Torque              |
| 10       | 32128-20    | 12   | Nut-HF                    |
| 12       | 322-2       | 7    | Screw-HH                  |
| 15       | 1-304256    | 1    | Chute-Discharge           |
| 15:2     | 54-9220     | 1    | Decal-Danger              |
| 17       | 98-3281     | 1    | Spacer-Spring             |
| 18       | 98-3280     | 1    | Spring-Deflector          |
| 19       | 3296-29     | 1    | Nut-Lock, NI              |
| 20       | 323-8       | 6    | Screw-HH                  |
| 21       | 98-5975     | 6    | Washer-Belleville         |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
| 22       | 3290-357 | 14   | Nut-HHF     |
| 25       | 322-50   | 1    | Screw-HH    |

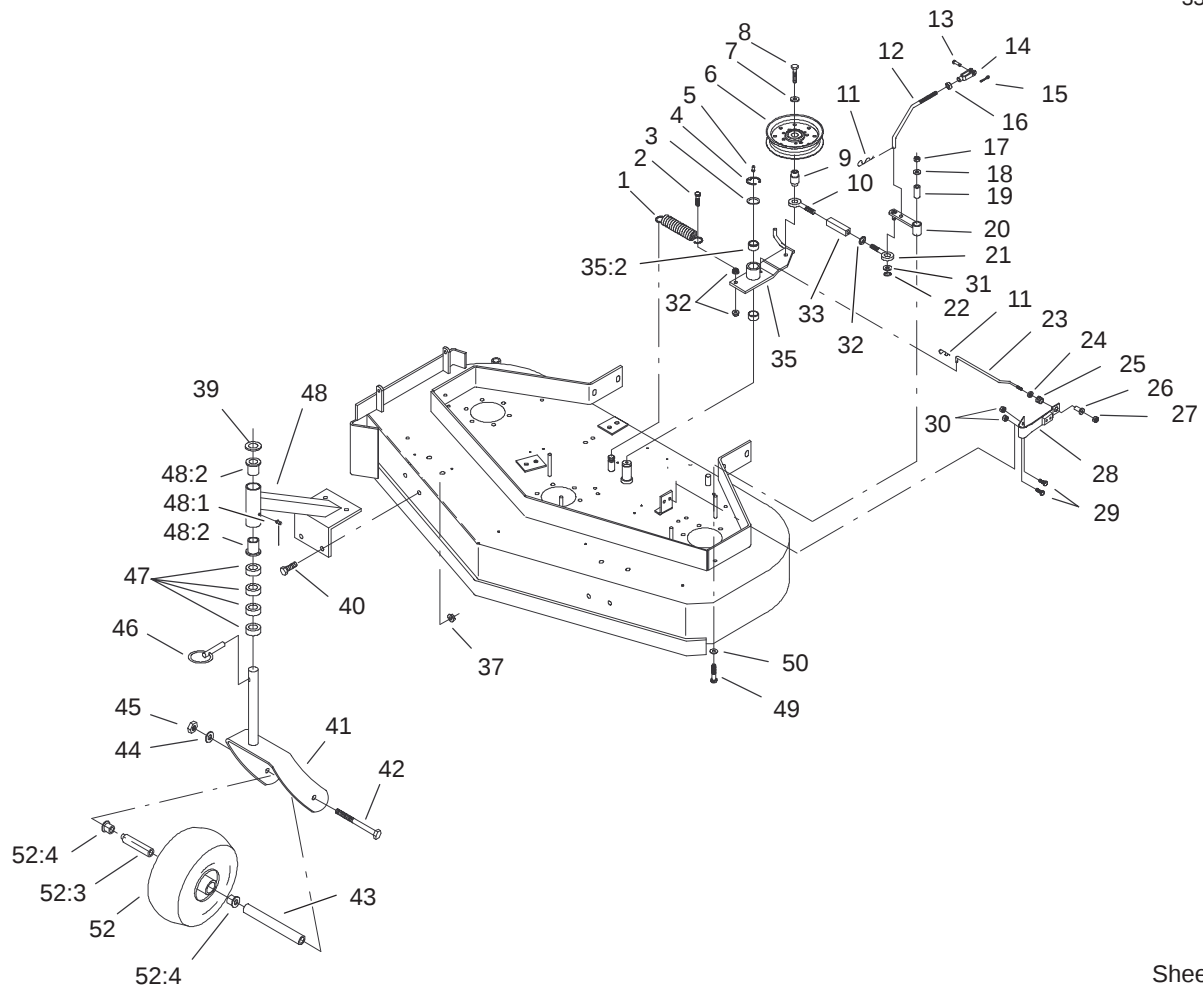


Sheet No.:12

## Front Castor, Belt Tension, and Blade Brake System Assembly

| Ref. No. | Part No.  | Qty. | Description         |
|----------|-----------|------|---------------------|
| 1        | 1-323071  | 1    | Spring-Extension    |
| 2        | 322-6     | 1    | Screw-HH            |
| 3        | 1-303352  | 1    | Washer-Spindle      |
| 4        | 32151-103 | 1    | Ring-Snap           |
| 5        | 302-19    | 1    | Fitting-Grease      |
| 6        | 1-603843  | 1    | Pulley-Idler        |
| 7        | 98-5975   | 3    | Washer-Belleville   |
| 8        | 702809    | 1    | Screw-Cap           |
| 9        | 1-303434  | 1    | Bushing-Engagement  |
| 10       | 1-303348  | 1    | Eyebolt-Thread, LH  |
| 11       | 1-806003  | 3    | Pin-Hair            |
| 12       | 1-323174  | 1    | Linkage-Arm, Assist |
| 13       | 1-808280  | 1    | Pin-Clevis          |
| 14       | 1-303105  | 1    | Yoke-Adjustable     |
| 15       | 3272-5    | 1    | Pin-Cotter          |
| 16       | 3219-2    | 1    | Nut-Hex             |
| 17       | 3296-29   | 1    | Nut-Lock, NI        |
| 18       | 3256-3    | 1    | Washer-Flat         |
| 19       | 1-403179  | 1    | Tube-Pivot          |
| 20       | 1-322235  | 1    | Arm-Assist          |
| 21       | 1-303238  | 1    | Eyebolt-Thread, RH  |
| 22       | 32120-35  | 1    | E-Ring              |
| 23       | 1-323715  | 1    | Rod-Brake           |
| 24       | 1-323748  | 1    | Ring-Push On        |

| Ref. No. | Part No.    | Qty. | Description        |
|----------|-------------|------|--------------------|
| 25       | 1-323747    | 1    | Spring-Compression |
| 26       | 1-323746    | 1    | Spacer-Flanged     |
| 27       | 3296-56     | 1    | Nut-Lock, NI       |
| 28       | 1-324372    | 1    | Pad/Spring ASM     |
| 29       | 321-4       | 2    | Screw-HH           |
| 30       | 3296-42     | 2    | Nut-Lock, NI       |
| 31       | 3256-23     | 1    | Washer-Flat        |
| 32       | 32128-20    | 3    | Nut-HF             |
| 33       | 1-303236    | 1    | Body-Turnbuckle    |
| 35       | 103-3600    | 1    | Idler Arm ASM      |
| 35:2     | 1-323729    | 2    | Sleeve-Bearing     |
| 37       | 3290-357    | 8    | Nut-HHF            |
| 39       | 1-513338    | 2    | Washer-Flat        |
| 40       | 323-4       | 8    | Screw-HH           |
| 41       | 1-322145-01 | 2    | Fork               |
| 42       | 325-20      | 2    | Screw-HH           |
| 43       | 1-513547    | 2    | Spacer             |
| 44       | 3253-7      | 2    | Washer-Lock        |
| 45       | 3217-9      | 2    | Nut-HH             |
| 46       | 1-809020    | 2    | Pin                |
| 47       | 1-303314    | 8    | Spacer-Caster      |
| 48       | 1-302203    | 2    | Support ASM        |
| 48:1     | 302-52      | 1    | Fitting-Grease     |
| 48:2     | 1-303514    | 2    | Bearing-Flanged    |

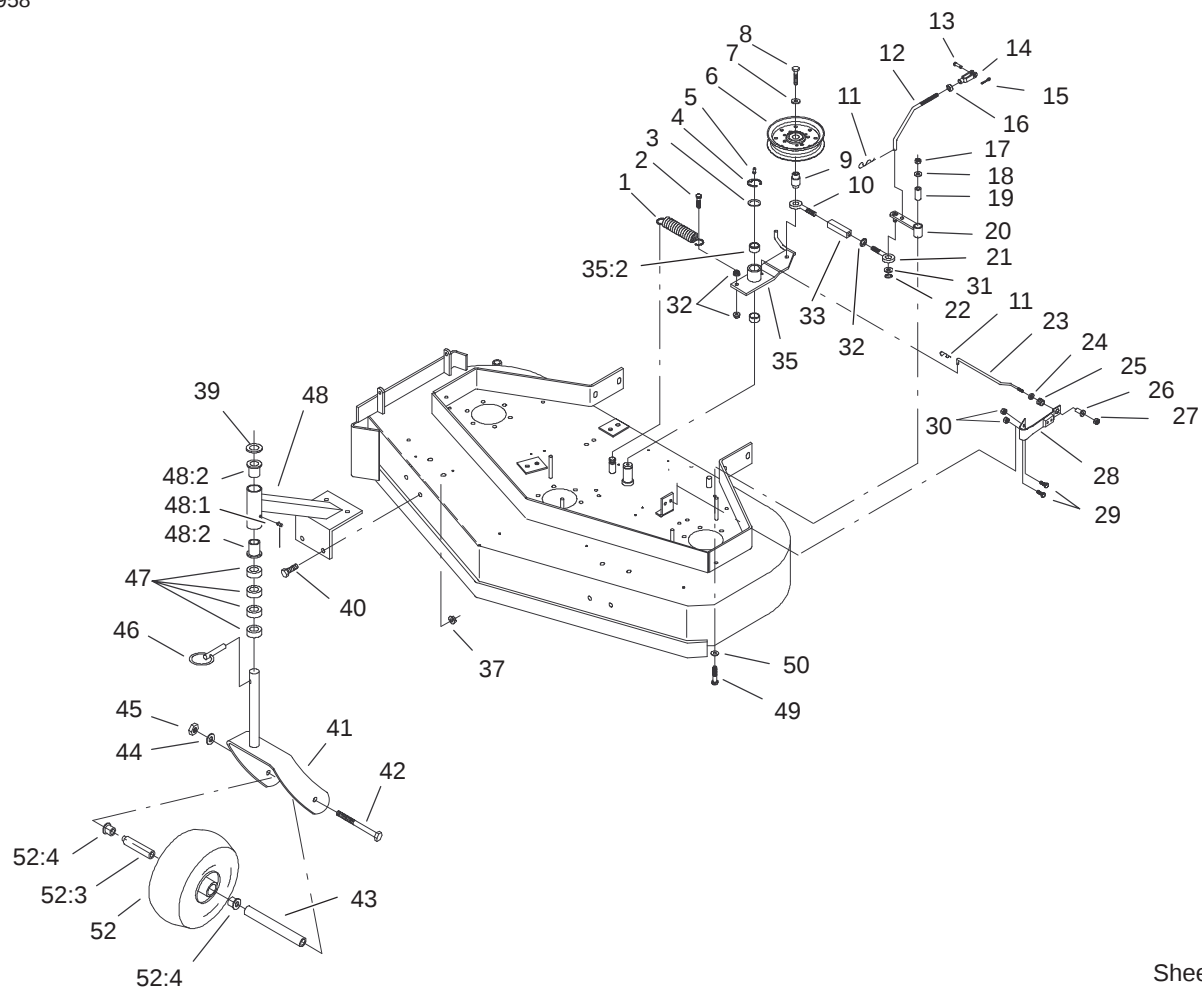


Sheet No.:12

## Front Castor, Belt Tension, and Blade Brake System Assembly (Continued)

| Ref. No. | Part No. | Qty. | Description        |
|----------|----------|------|--------------------|
| 49       | 322-10   | 1    | Screw-HH           |
| 50       | 1-303334 | 1    | Washer-Spring      |
| 52       | 1-513648 | 2    | Wheel And Tire ASM |
| 52:3     | 1-513809 | 1    | Bearing            |
| 52:4     | 1-513810 | 2    | Bushing            |


| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

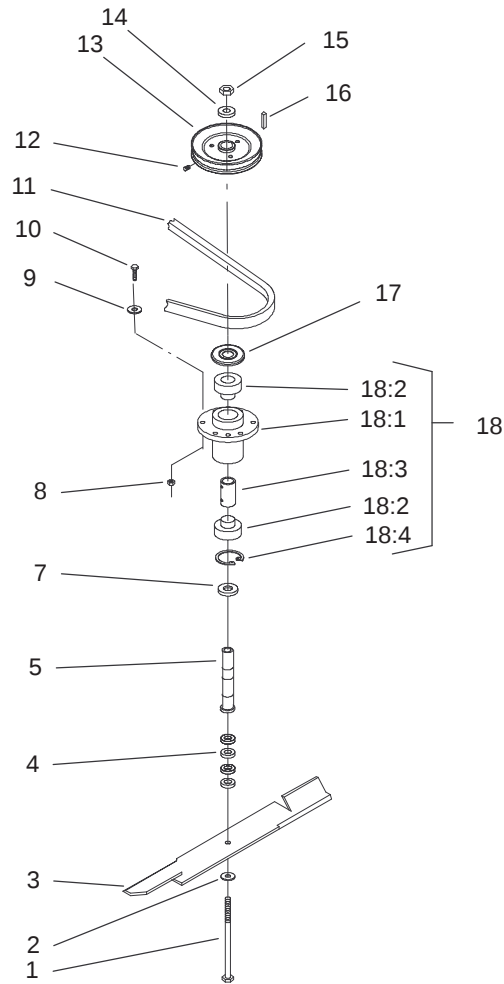

Sheet No.:13

**Spindle, Blade and Belt Assembly**

| Ref. No. | Part No. | Qty. | Description             | Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------------------|----------|----------|------|-------------|
| 1        | 1-800861 | 2    | Screw-Cap, HH           |          |          |      |             |
| 2        | 1-513208 | 2    | Washer-Spring           |          |          |      |             |
| 3        | 103-2528 | 2    | Blade-Notched           |          |          |      |             |
| 3        | 103-2508 | 2    | Blade-Low Lift          |          |          |      |             |
| 4        | 1-323539 | 8    | Spacer-Drive, Blade     |          |          |      |             |
| 5        | 1-323529 | 2    | Tube-Spindle, Short     |          |          |      |             |
| 7        | 103-2535 | 2    | Spacer-Guard, Bottom    |          |          |      |             |
| 8        | 32128-20 | 8    | Nut-HF                  |          |          |      |             |
| 9        | 1-303334 | 8    | Washer-Spring           |          |          |      |             |
| 10       | 322-6    | 8    | Screw-HH                |          |          |      |             |
| 11       | 106-2741 | 1    | V-Belt                  |          |          |      |             |
| 12       | 1-803310 | 2    | Screw-Set               |          |          |      |             |
| 13       | 1-403183 | 2    | Sheave                  |          |          |      |             |
| 14       | 1-323339 | 2    | Washer-Retainer, Sheave |          |          |      |             |
| 15       | 3219-6   | 2    | Nut-Hex                 |          |          |      |             |
| 16       | 1-807267 | 2    | Key                     |          |          |      |             |
| 17       | 103-1330 | 2    | Guard-Bearing, Top      |          |          |      |             |
| 18       | 103-2533 | 2    | Cutter Housing ASM      |          |          |      |             |
| 18:1     | 1-323532 | 1    | Housing-Spindle         |          |          |      |             |
| 18:2     | 103-2477 | 2    | Bearing-Ball            |          |          |      |             |
| 18:3     | 103-2534 | 1    | Spacer-Bearing          |          |          |      |             |
| 18:4     | 32120-8  | 1    | Ring-Snap               |          |          |      |             |

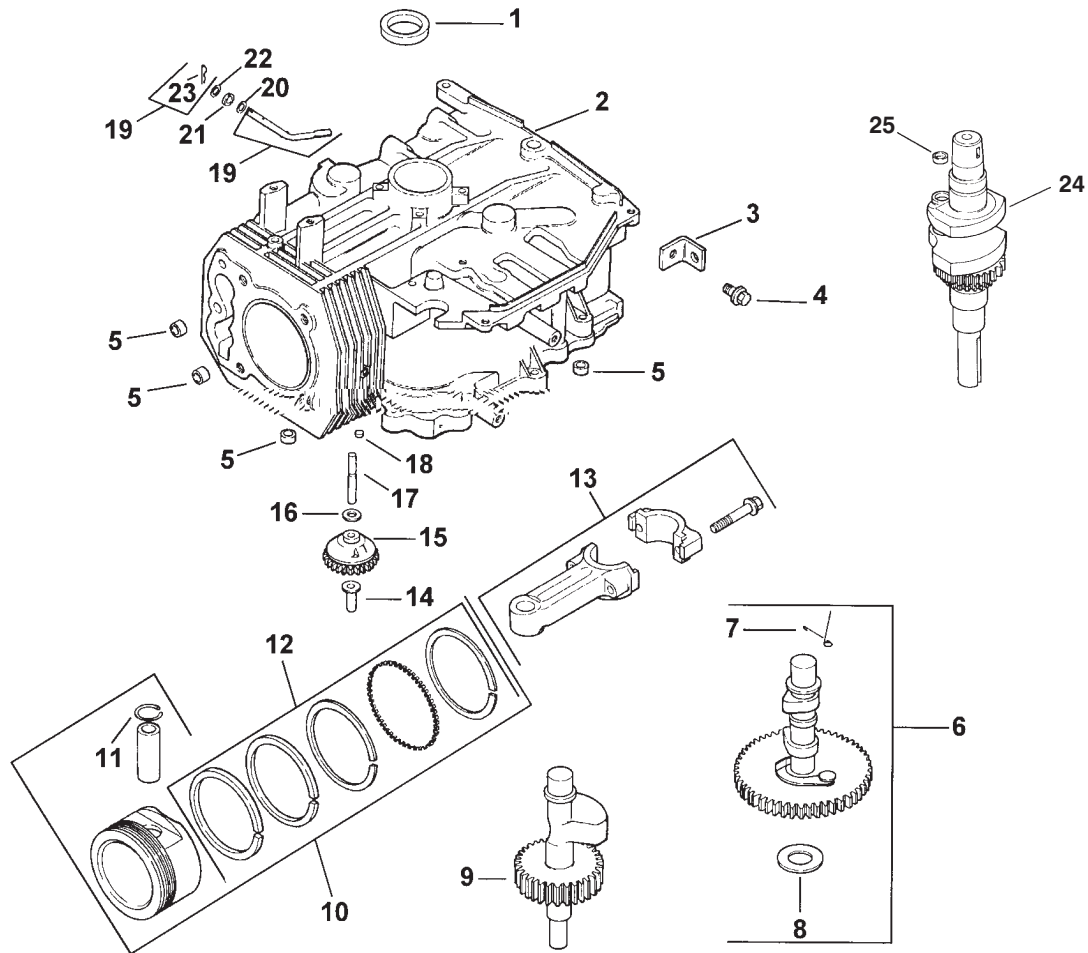


## Crankcase Assembly Kohler Model CV15T-41608

| Ref. No. | Part No.    | Qty. | Description                         |
|----------|-------------|------|-------------------------------------|
| 1        | 12 032 03-S | 1    | Seal-Crankshaft                     |
| 2        | 12 522 18-S | 1    | Shortblock                          |
| 3        | 12 445 02-S | 1    | Strap-Lifting                       |
| 4        | M-839025-S  | 1    | Screw-HF M8x1.25x25                 |
| 5        | 24 380 13-S | 4    | Dowel-Locating                      |
| 6        | 12 755 49-S | 1    | Kit-Camshaft (Incl. 7-8)            |
| 7        | 12 089 31-S | 1    | Spring-Actuating                    |
| 8        | 12 422 07-S | A/R  | Shim-Camshaft, White                |
| 8        | 12 422 08-S | 1    | Shim-Camshaft, Blue                 |
| 8        | 12 422 09-S | A/R  | Shim-Camshaft, Red                  |
| 8        | 12 422 10-S | A/R  | Shim-Camshaft, Yellow               |
| 8        | 12 422 11-S | A/R  | Shim-Camshaft, Green                |
| 8        | 12 422 12-S | A/R  | Shim-Camshaft, Gray                 |
| 8        | 12 422 13-S | A/R  | Shim-Camshaft, Black                |
| 9        | 12 144 27-S | 1    | Shaft-Balance                       |
| 10       | 12 874 07-S | 1    | Piston w/Ring Set STD (Incl. 11,12) |
| 10       | 12 874 08-S | 1    | Set-Piston w/Ring .25               |
| 10       | 12 874 09-S | 1    | Set-Piston w/Ring .50               |
| 10       | 12 874 11-S | 1    | Set-Piston w/Ring .08               |
| 11       | 12 018 02-S | 2    | Retainer-Piston Pin                 |
| 12       | 12 108 07-S | 1    | Ring Set STD                        |
| 12       | 12 108 08-S | 1    | Ring Set .25                        |
| 12       | 12 108 09-S | 1    | Ring Set .50                        |

| Ref. No. | Part No.    | Qty. | Description                         |
|----------|-------------|------|-------------------------------------|
| 13       | 12 067 05-S | 1    | Rod-Connecting, STD                 |
| 13       | 12 067 06-S | 1    | Rod-Connecting .25                  |
| 14       | 12 380 01-S | 1    | Pin-Governor Regulating             |
| 15       | 12 043 05-S | 1    | Gear-Governor                       |
| 16       | M-631005-S  | 1    | Washer-Plain, 6mm                   |
| 17       | 12 144 02-S | 1    | Shaft-Governor Gear                 |
| 18       | 52 139 09-S | 1    | Plug-Cup                            |
| 19       | 12 755 64-S | 1    | Kit-Governor Cross Shaft (Incl. 23) |
| 20       | X-25-102-S  | 1    | Washer-Plain, 1/4                   |
| 21       | 12 032 01-S | 1    | Seal-Governor Cross Shaft           |
| 22       | M-631015-S  | 1    | Washer-Plain, 6mm                   |
| 23       | 12 154 05-S | 1    | Clip-Hitch Pin                      |
| 24       | 12 014 30-S | 1    | Crankshaft ASM (Incl. 25)           |
| 25       | 12 139 01-S | 1    | Plug-Cup                            |
| *        | 12 755 93-S | 1    | Set-Gasket                          |


\* Not illustrated  
Order Parts from Kohler

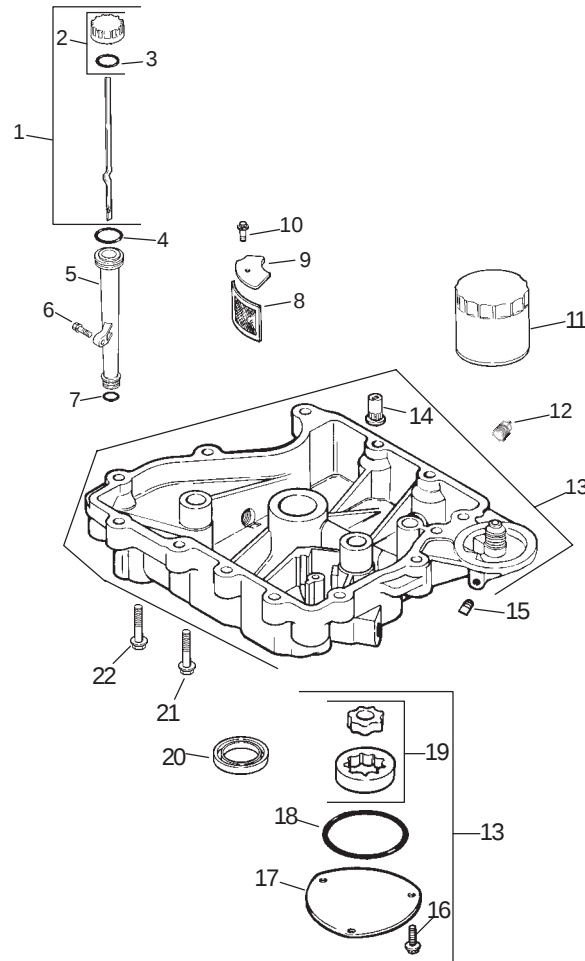

## Oil Pan and Lubrication Assembly Kohler Model CV15T-41608

| Ref. No. | Part No.    | Qty. | Description                     | Ref. No. | Part No.    | Qty. | Description             |
|----------|-------------|------|---------------------------------|----------|-------------|------|-------------------------|
| 1        | 12 038 01-S | 1    | Dipstick ASM(Incl. 2-3)         | 19       | 12 393 01-S | 1    | Pump-Oil                |
| 2        | 25 755 13-S | 1    | Kit-Oil Fill Cap (Incl. 3)      | 20       | 12 032 03-S | 1    | Seal-Oil (PTO End)      |
| 3        | 12 153 03-S | 1    | O Ring-Dipstick                 | 21       | 24 086 16-S | 11   | Screw-HF,<br>M8x1.25x45 |
| 4        | 12 153 02-S | 1    | O Ring-Upper Oil Fill<br>Tube   | 22       | 24 086 17-S | 1    | Screw-HF,<br>M8x1.25x45 |
| 5        | 12 123 04-S | 1    | Tube-Oil Fill                   |          |             |      |                         |
| 6        | M-545020-S  | 1    | Screw-HF, M5x0.8x20             |          |             |      |                         |
| 7        | 12 153 01-S | 1    | O Ring-Lower Oil Fill<br>Tube   |          |             |      |                         |
| 8        | 25 162 07-S | 1    | Screen-Oil Pickup               |          |             |      |                         |
| 9        | 12 096 03-S | 1    | Cover-Oil Pickup<br>Screen      |          |             |      |                         |
| 10       | M-545016-S  | 1    | Screw-HF, M5x0.8x16             |          |             |      |                         |
| 11       | 52 050 02-S | 1    | Filter-Oil                      |          |             |      |                         |
| 12       | 25 139 57-S | 1    | Plug-Pipe, 3/8 SH               |          |             |      |                         |
| 13       | 12 199 50-S | 1    | Oil Pan ASM<br>(Incl.14, 16-19) |          |             |      |                         |
| 14       | 25 462 09-S | 1    | Valve-Oil Pressure<br>Relief    |          |             |      |                         |
| 15       | 25 139 52-S | 1    | Plug-Pipe,1/8                   |          |             |      |                         |
| 16       | M-545016-S  | 3    | Screw-HF, M5x0.8x16             |          |             |      |                         |
| 17       | 12 096 34-S | 1    | Cover-Oil Pump                  |          |             |      |                         |
| 18       | 12 153 06-S | 1    | O Ring-Oil Pump<br>Cover        |          |             |      |                         |

Order Parts From Kohler

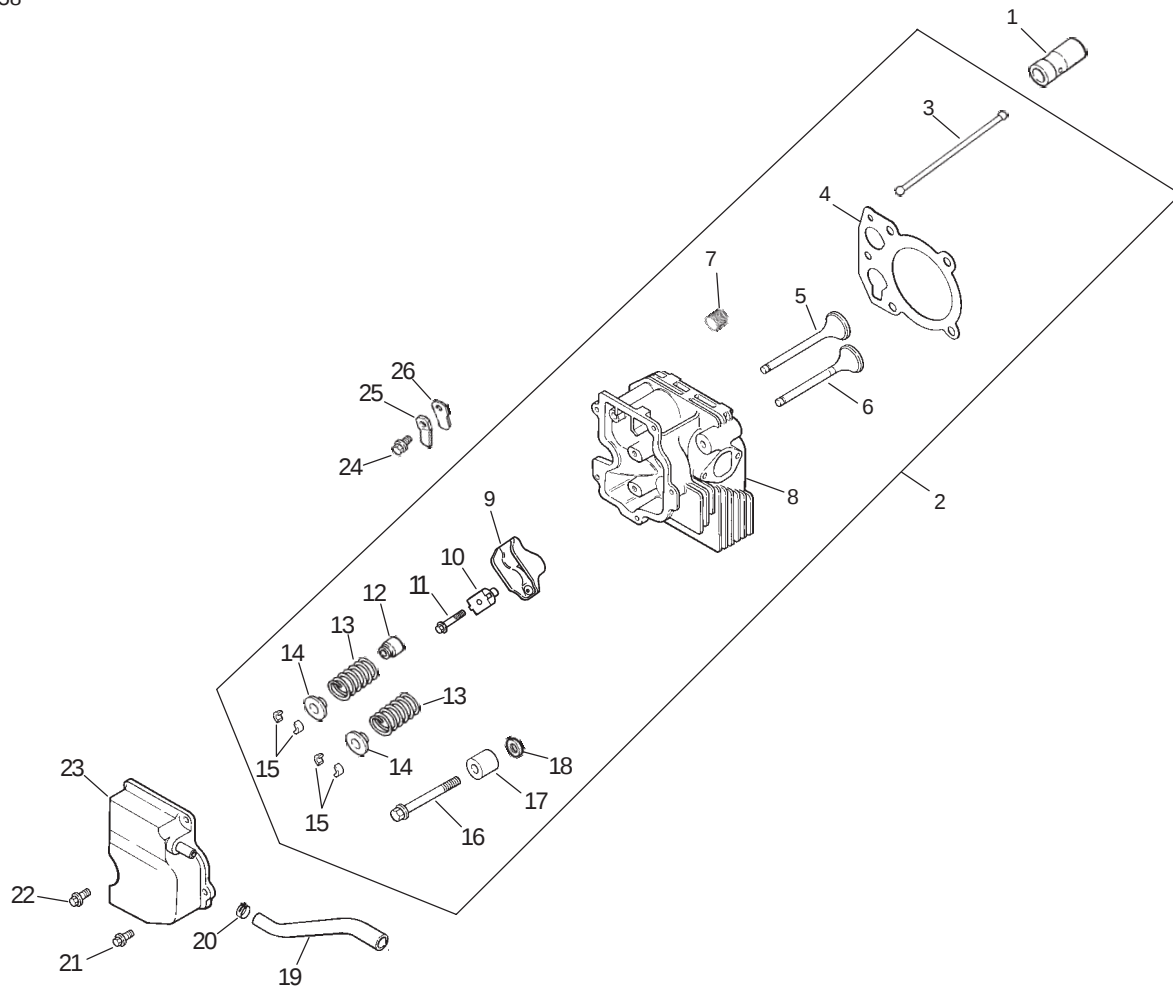


## Cylinder Head, Valve and Breather Assembly Kohler Model CV15T-41608

| Ref. No. | Part No.    | Qty. | Description                                                                                                                                                           |
|----------|-------------|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1        | 12 351 01-S | 2    | Lifter-Valve                                                                                                                                                          |
| 2        | 12 755 81-S | 1    | Kit-Cylinder Head<br>(Incl. 3-13, 18-21, 25,<br>Carburator Gasket<br>12 041 01-S(2),<br>Exhaust Manifold<br>Gasket 12 041 03-S,<br>Air Cleaner Gasket<br>12 041 02-S) |
| 3        | 12 411 01-S | 2    | Rod-Push                                                                                                                                                              |
| 4        | 12 041 10-S | 1    | Gasket-Cylinder Head                                                                                                                                                  |
| 5        | 12 017 01-S | 1    | Valve-Intake STD                                                                                                                                                      |
| 5        | 12 017 02-S | 1    | Valve-Intake .25                                                                                                                                                      |
| 6        | 12 016 01-S | 1    | Valve-Exhaust STD                                                                                                                                                     |
| 6        | 12 016 02-S | 1    | Valve-Exhaust, .25                                                                                                                                                    |
| 7        | 25 139 60-S | 1    | Plug-Pipe, HSH 1/8                                                                                                                                                    |
| 8        | 12 318 19-S | 1    | Head - Cylinder                                                                                                                                                       |
| 9        | 25 186 01-S | 2    | Arm-Rocker                                                                                                                                                            |
| 10       | 12 599 03-S | 2    | Pivot-Rocker Arm                                                                                                                                                      |
| 11       | M-640034-S  | 2    | Screw-HF M6x1.0x34                                                                                                                                                    |
| 12       | 24 032 05-S | 1    | Seal-Valve Stem                                                                                                                                                       |
| 13       | 12 089 01-S | 2    | Spring-Valve                                                                                                                                                          |
| 14       | 12 173 01-S | 2    | Cap-Valve Spring                                                                                                                                                      |
| 15       | 12 755 03-S | 2    | Kit-Retainer                                                                                                                                                          |

| Ref. No. | Part No.    | Qty. | Description                      |
|----------|-------------|------|----------------------------------|
| 16       | 12 086 15-S | 5    | Screw-HF M10x1.5x81              |
| 17       | 12 112 13-S | 1    | Spacer-Head Bolt<br>Exhaust Port |
| 18       | 12 468 05-S | 1    | Washer-Plain 13/32               |
| 19       | 12 326 03-S | 1    | Hose-Breather                    |
| 20       | 25 237 14-S | 2    | Clamp-Hose                       |
| 21       | M-645020-S  | 3    | Screw-HF M6x1.0x20               |
| 22       | M-640034-S  | 2    | Screw-HF M6x1.0x34               |
| 23       | 12 096 07-S | 1    | Cover-Valve w/Nipple             |
| 24       | M-545010-S  | 1    | Screw-HF M5x0.8x10               |
| 25       | 12 018 01-S | 1    | Retainer-Breather<br>Reed        |
| 26       | 12 402 02-S | 1    | Reed-Breather                    |

Order Parts from Kohler

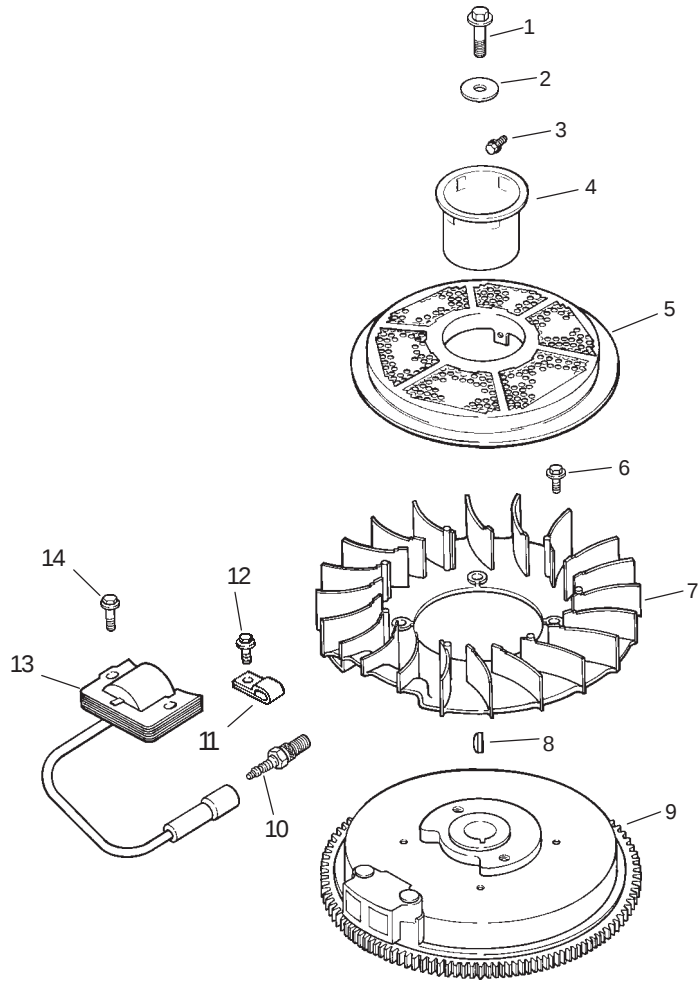


# **Ignition and Electrical Assembly** **Kohler Model CV15T-41608**

| Ref. No. | Part No.    | Qty. | Description                      |
|----------|-------------|------|----------------------------------|
| 1        | 12 086 14-S | 1    | Screw-HF,M10x1.5x46              |
| 2        | 12 468 03-S | 1    | Washer-Plain, 3/8                |
| 3        | M-545010-S  | 3    | Screw-HF,M5x0.8x10               |
| 4        | 12 109 07-S | 1    | Cup-Drive, Starter               |
| 5        | 12 162 09-S | 1    | Screen-Grass                     |
| 6        | 25 086 47-S | 4    | Bolt-Shoulder                    |
| 7        | 12 157 03-S | 4    | Fan                              |
| 8        | X-42-15-S   | 1    | Key                              |
| 9        | 12 025 31-S | 1    | Flywheel                         |
| 8        | 12 403 01-S | 1    | Rectifier-Unregulated,<br>15 amp |
| 9        | X-22-11-S   | 2    | Washer - Lock                    |
| 10       | 12 132 06-S | 1    | Spark Plug                       |

| Ref. No. | Part No.    | Qty. | Description                                                                              |
|----------|-------------|------|------------------------------------------------------------------------------------------|
| 11       | X-728-1-S   | 2    | Clip-Cable                                                                               |
| 10       | M-639016-S  | 2    | Screw-HF, M6x1.0x16                                                                      |
| 11       | 41 155 03-S | 1    | Connector                                                                                |
| 12       | M-545010-S  | 2    | Screw-HF, M5x0.8x10                                                                      |
| 13       | 12 584 05-S | 1    | Module-Ignition                                                                          |
| 13       | M-548025-S  | 2    | Screw-HH M5x0.8x25                                                                       |
| 14       | M-545020-S  | 2    | Screw-HF, M5x0.8x20                                                                      |
| *        | 25 518 05-S | 1    | Lead-Black, Rectifier/<br>Regulator,(5"-14Gauge<br>Uninsulated Push On<br>Tab Terminals) |
| *        | 12 454 03-S | 1    | Tie-Wire                                                                                 |

\* Not illustrated  
 Order Parts From Kohler

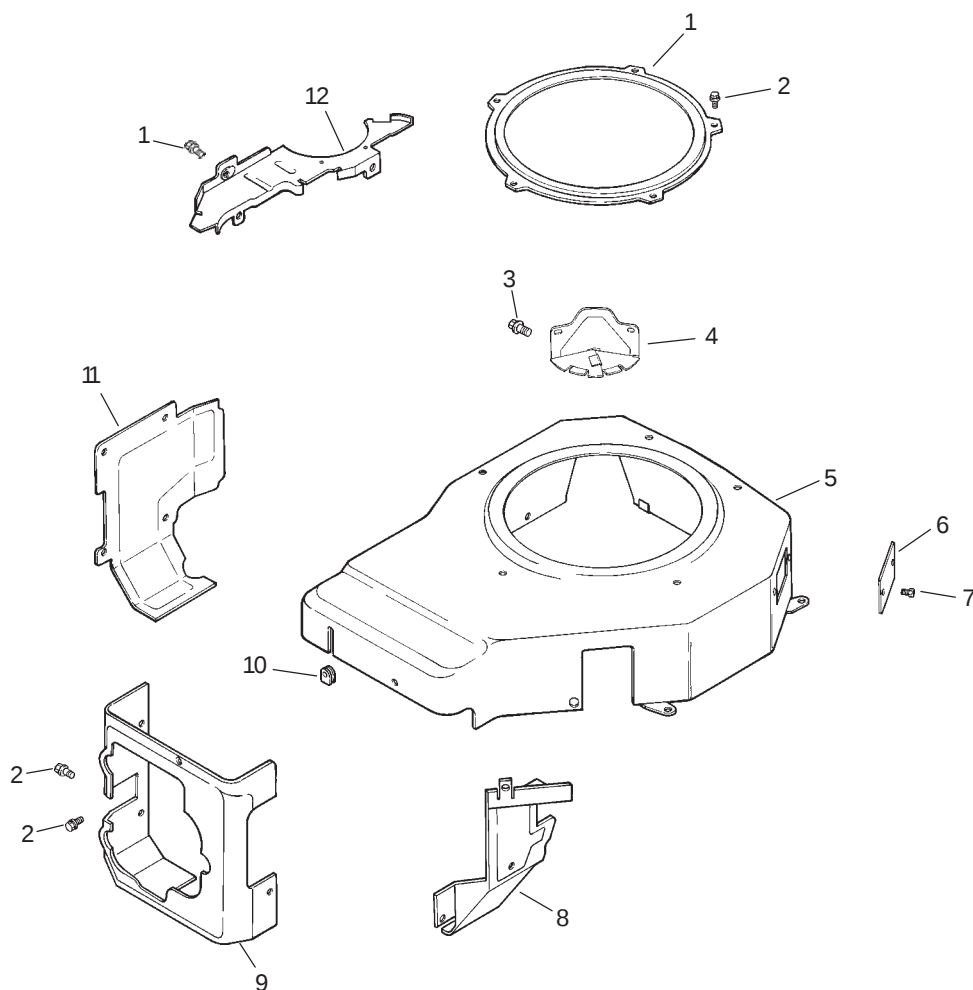


# Blower Housing And Baffle Assembly Kohler Model CV15T-41608

| Ref. No. | Part No.     | Qty. | Description                   |
|----------|--------------|------|-------------------------------|
| 1        | 12 314 10 S  | 1    | Guard—Grass Screen            |
| 2        | M—545010—S   | 9    | Screw—HF, M5x0.8x10           |
| 3        | M—550010—S   | 6    | Screw—HF, M5x0.8x10           |
| 4        | 12 096 29—S  | 1    | Cover—Starter                 |
| 5        | 12 027 53—S  | 1    | Housing—Blower                |
| 6        | 12 096 27—S  | 1    | Cover—Rectifier/<br>Regulator |
| 7        | M—6390 16—S  | 2    | Screw—HF, M6x1.0x16           |
| 8        | 12 063 10—S  | 1    | Baffle—Intake, Side           |
| 9        | 12 063 08—S  | 1    | Baffle—Cylinder Head          |
| 10       | 12 313 03—S  | 1    | Grommet—Spark Plug<br>leads   |
| 11       | 12 063 19—S  | 1    | Baffle—Cylinder               |
| 12       | 12 146 07—S  | 1    | Plate—Blower Housing          |
| *        | 12 113 112—S | 1    | Decal—Horsepower              |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

\* Not illustrated  
Order Parts From Kohler

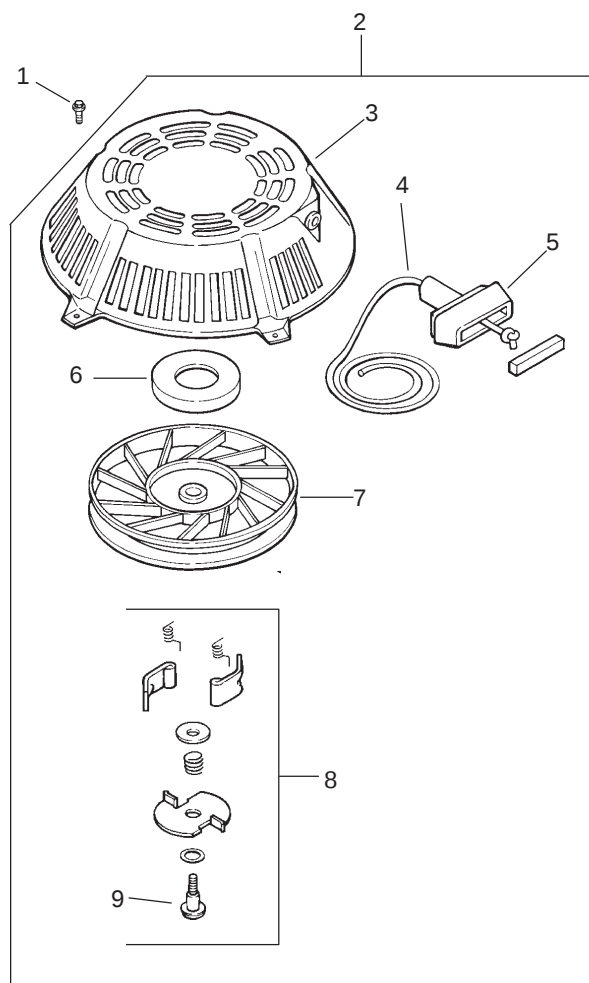


# Starter Assembly

## Kohler Model CV15T-41608

| Ref. No. | Part No.    | Qty. | Description                            |
|----------|-------------|------|----------------------------------------|
| 1        | M-550010-S  | 5    | Screw-HF, M5x0.8x10                    |
| 2        | 12 165 01-S | 1    | Starter ASM<br>Retractable (Incl. 3-9) |
| 3        | 12 081 01-S | 1    | Housing-Starter                        |
| 4        | 12 160 01-S | 1    | Rope-Starter                           |
| 5        | 25 166 01-S | 1    | Handle-Recoil                          |
| 6        | 12 089 06-S | 1    | Spring & Keeper                        |
| 7        | 12 093 01-S | 1    | Pulley                                 |
| 8        | 12 757 06-S | 1    | Kit-Dog Repair<br>(incl. 9)            |
| 9        | 41 086 09-S | 1    | Screw-Posidrive                        |
| *        | 12 113 07-S | 1    | Decal-Starting                         |


\* Not illustrated  
Order Parts From Kohler

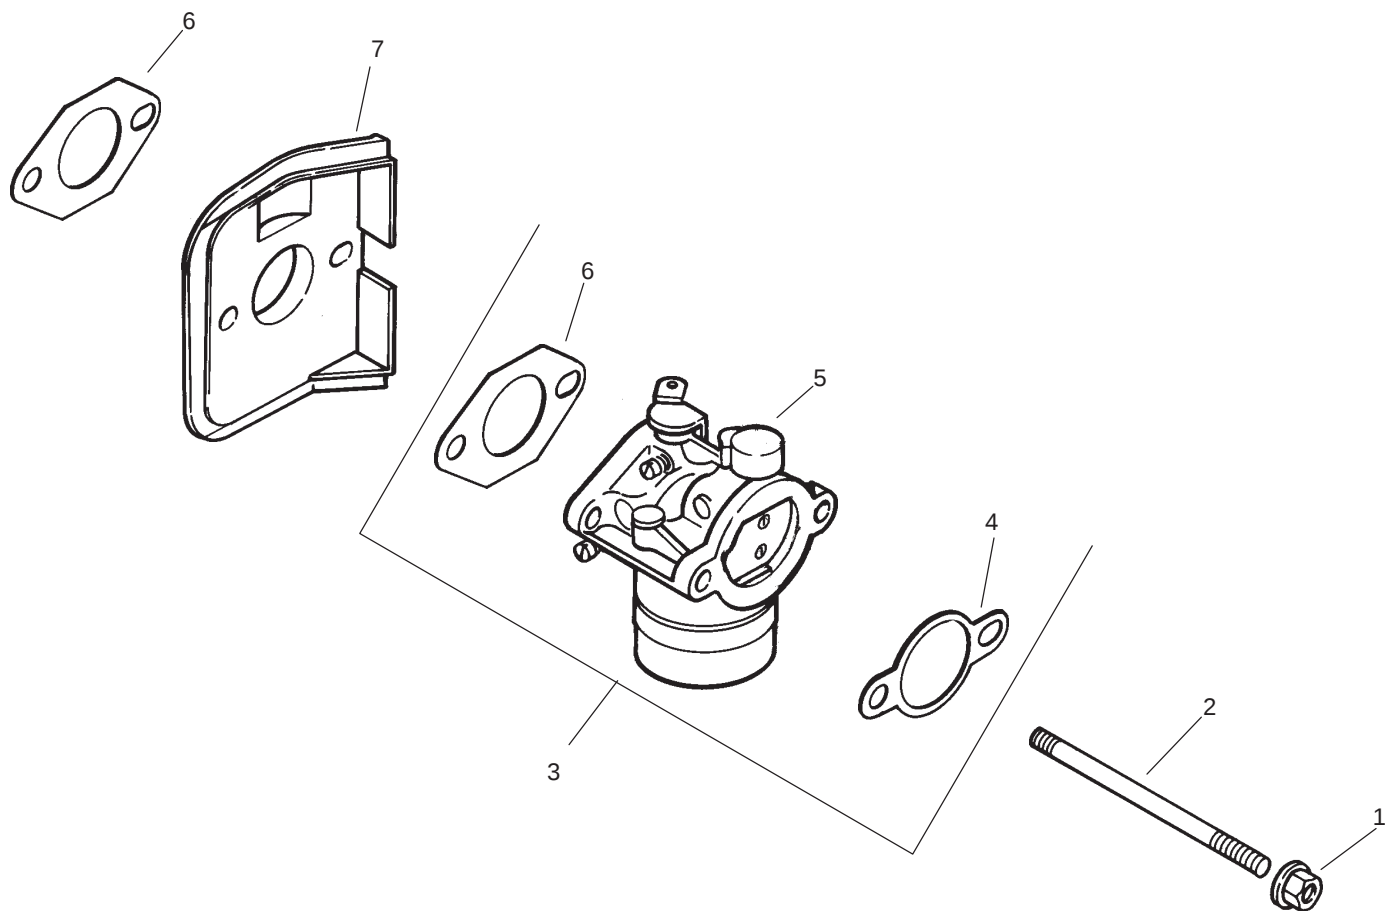

**Fuel System Assembly**  
**Kohler Model CV15T-41608**

| Ref. No. | Part No.    | Qty. | Description            | Ref. No. | Part No. | Qty. | Description |
|----------|-------------|------|------------------------|----------|----------|------|-------------|
| 1        | M-641060-S  | 2    | Nut-HF M6x1.0          |          |          |      |             |
| 2        | M-629116-S  | 2    | Stud M6x1.0x116        |          |          |      |             |
| 3        | 12 853 80-S | 1    | Kit-Carburetor         |          |          |      |             |
|          |             |      | w/Gaskets (Incl. 4-6)  |          |          |      |             |
| 4        | 12 041 02-S | 1    | Gasket-Air Cleaner     |          |          |      |             |
| 5        | 12 053 80   | 1    | Carburetor ASM (For    |          |          |      |             |
|          |             |      | Information Only Not   |          |          |      |             |
|          |             |      | Available Separately)  |          |          |      |             |
|          |             |      | (Service With Kits     |          |          |      |             |
|          |             |      | 12 757 02-S Float Kit  |          |          |      |             |
|          |             |      | 12 757 03-S Carb.      |          |          |      |             |
|          |             |      | Repair Kit and         |          |          |      |             |
|          |             |      | 12 757 08-S Choke      |          |          |      |             |
|          |             |      | Repair Kit)            |          |          |      |             |
| 6        | 12 041 01-S | 2    | Gasket-Carburetor      |          |          |      |             |
| 7        | 12 265 04-S | 1    | Deflector-Heat         |          |          |      |             |
| 8        | 47 154 01-S | 1    | Clip-Cable             |          |          |      |             |
| *        | 12 757 02-S | 1    | Kit-Float              |          |          |      |             |
| *        | 12 757 08-S | 1    | Kit-Choke Repair       |          |          |      |             |
| *        | 12 757 03-S | 1    | Kit-Carburetor Repair  |          |          |      |             |
| *        | 12 755 92-S | 1    | Kit-High Altitude with |          |          |      |             |
|          |             |      | Gaskets                |          |          |      |             |

\* Not illustrated  
Order Parts From Kohler

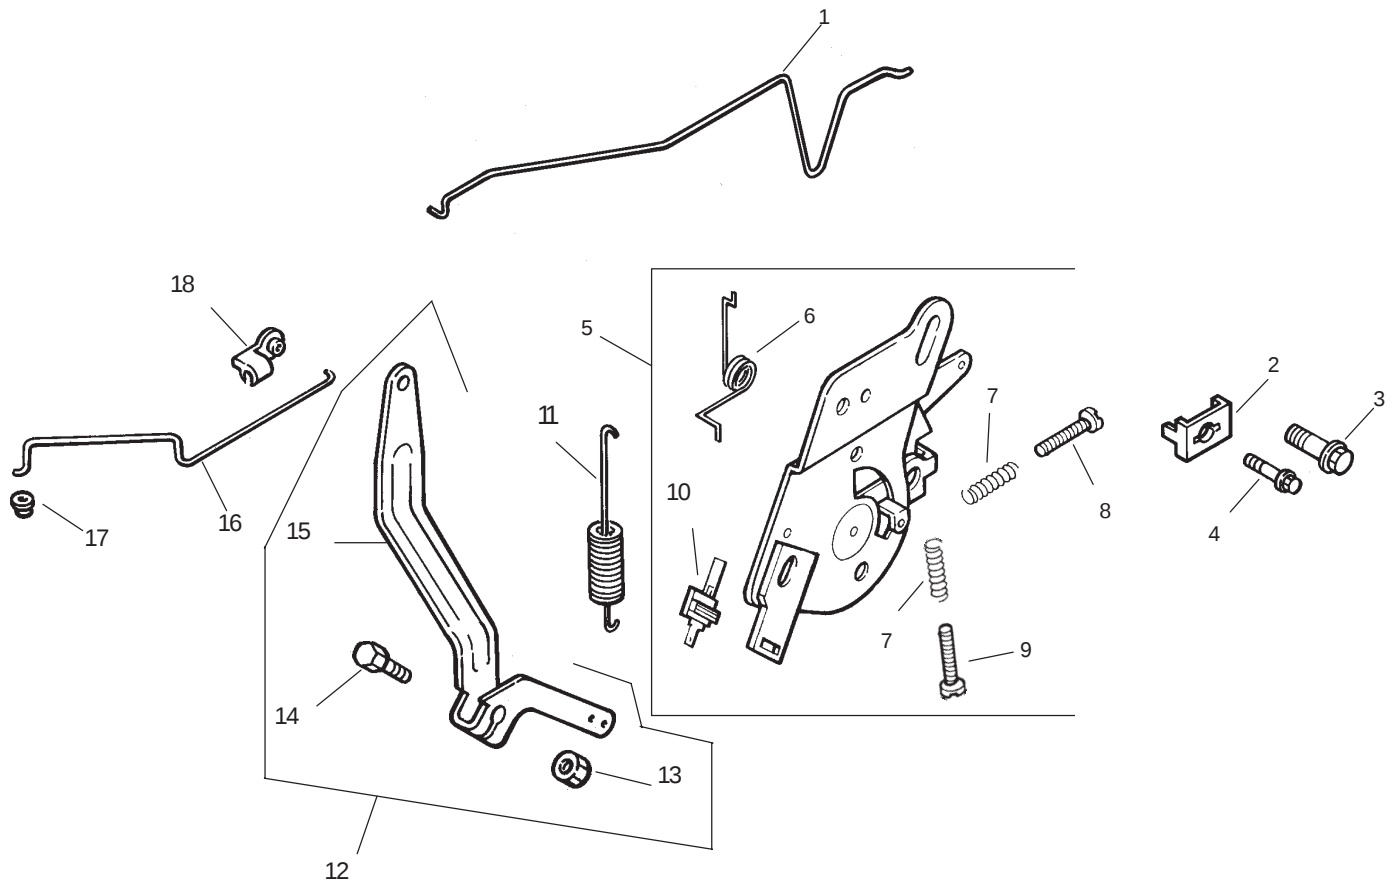


## Engine Controls Assembly Kohler Model CV15T-41608

| Ref. No. | Part No.    | Qty. | Description                           |
|----------|-------------|------|---------------------------------------|
| 1        | 12 079 07-S | 1    | Linkage-Choke                         |
| 2        | 12 237 01-S | 1    | Clamp-Cable                           |
| 3        | M-664020-S  | 2    | Screw-Lobed Socket<br>M6x1.0x20       |
| 4        | M-545016-S  | 1    | Screw-HF M5x .08x16                   |
| 5        | 12 536 06-S | 1    | Control-Speed ASM                     |
| 6        | 12 089 23-S | 1    | Spring-Choke Return<br>(Incl. 6-10)   |
| 7        | 12 089 11-S | 2    | Spring-Speed Control                  |
| 8        | 12 086 38-S | 1    | Screw-Pan Hd with<br>Loctite          |
| 9        | M-443020-S  | 1    | Screw-SPH,<br>M4x0.7x20               |
| 10       | 25 452 14   | 1    | Terminal-Kill Switch                  |
| 11       | 12 089 19-S | 1    | Spring-Governor                       |
| 12       | 12 755 83-S | 1    | Kit - Governor Lever<br>(Incl. 13-15) |
| 13       | 12 100 07-S | 1    | Nut-HF                                |
| 14       | 52 211 04-S | 1    | Bolt-Round HD                         |
| 15       | 12 090 28-S | 1    | Lever-Governor                        |
| 16       | 12 079 01-S | 1    | Linkage-Throttle                      |
| 17       | 25 158 08-S | 1    | Bushing-Linkage<br>Retaining          |

| Ref. No. | Part No.    | Qty. | Description                 |
|----------|-------------|------|-----------------------------|
| 18       | 25 158 11-S | 1    | Bushing-Throttle<br>Linkage |


Order Parts From Kohler

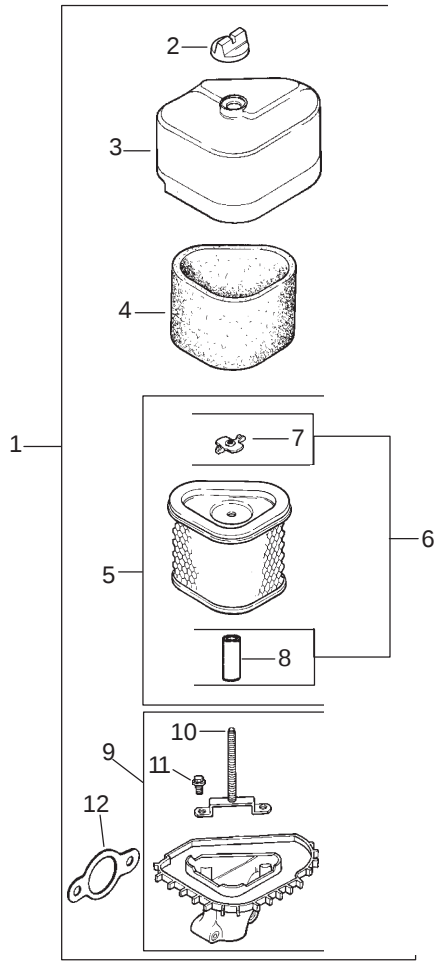

**Air Cleaner Assembly**  
**Kohler Model CV15T-41608**

| Ref. No. | Part No.    | Qty. | Description                        | Ref. No. | Part No. | Qty. | Description |
|----------|-------------|------|------------------------------------|----------|----------|------|-------------|
| 1        | 12 743 02-S | 1    | Kit-Air Cleaner<br>(Incl. 2-12)    |          |          |      |             |
| 2        | 25 341 03-S | 1    | Knob-Air Cleaner<br>Cover          |          |          |      |             |
| 3        | 12 096 38-S | 1    | Cover-Air Cleaner                  |          |          |      |             |
| 4        | 12 083 12-S | 1    | Element-Precleaner                 |          |          |      |             |
| 5        | 12 083 10-S | 1    | Element-Air Cleaner<br>(Incl. 6-8) |          |          |      |             |
| 6        | 12 743 12-S | 1    | Kit-Seal (Incl. 7-8)               |          |          |      |             |
| 7        | 12 100 08-S | 1    | Nut-Wing                           |          |          |      |             |
| 8        | 12 032 11-S | 1    | Seal                               |          |          |      |             |
| 9        | 12 094 07-S | 1    | Base-Air Cleaner<br>(Incl. 10,11)  |          |          |      |             |
| 10       | 12 072 04-S | 1    | Stud-M6x1.0x66                     |          |          |      |             |
| 11       | 12 086 01-S | 2    | Screw-#10 Hi-Lo<br>Thread Forming  |          |          |      |             |
| 12       | 12 041 02-S | 1    | Gasket-Air Cleaner                 |          |          |      |             |
| *        | 12 113 04-S | 1    | Decal-Air Cleaner                  |          |          |      |             |

\* Not illustrated  
Order Parts From Kohler

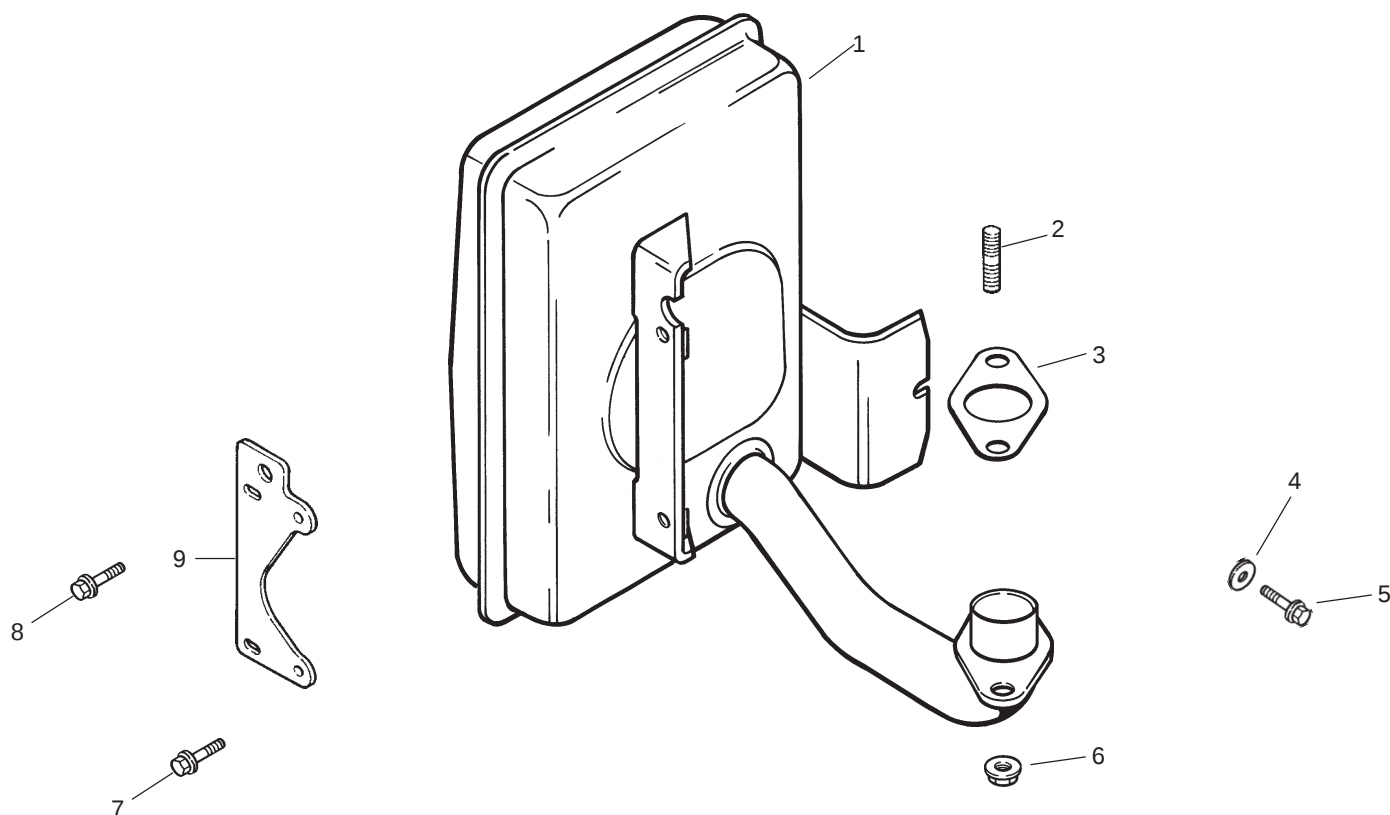

# Exhaust Assembly Kohler Model CV15T-41608

| Ref. No. | Part No.    | Qty. | Description                |
|----------|-------------|------|----------------------------|
| 1        | 12 068 44-S | 1    | Muffler                    |
| 2        | 25 072 04-S | 2    | Stud M8x1.25x33            |
| 3        | 12 041 03-S | 1    | Gasket-Exhaust<br>Manifold |
| 4        | X-25-78-S   | 1    | Washer-Plain,1/4           |
| 5        | M-545016-S  | 1    | Screw-HF, M5x0.8x16        |
| 6        | M-841080-S  | 2    | Nut-HF, M8x1.25            |
| 7        | M-645016-S  | 2    | Screw-HF, M6x1.0x16        |
| 8        | M-645025-S  | 2    | Screw-HF, M6x1.0x25        |
| 9        | 12 126 71-S | 1    | Bracket-Muffler            |
| *        | 12 112 20-S | 2    | Spacer                     |

\* Not illustrated  
Obtain Parts From Kohler

## Maintenance Record

[illegible]

## Maintenance Record

[illegible]

