
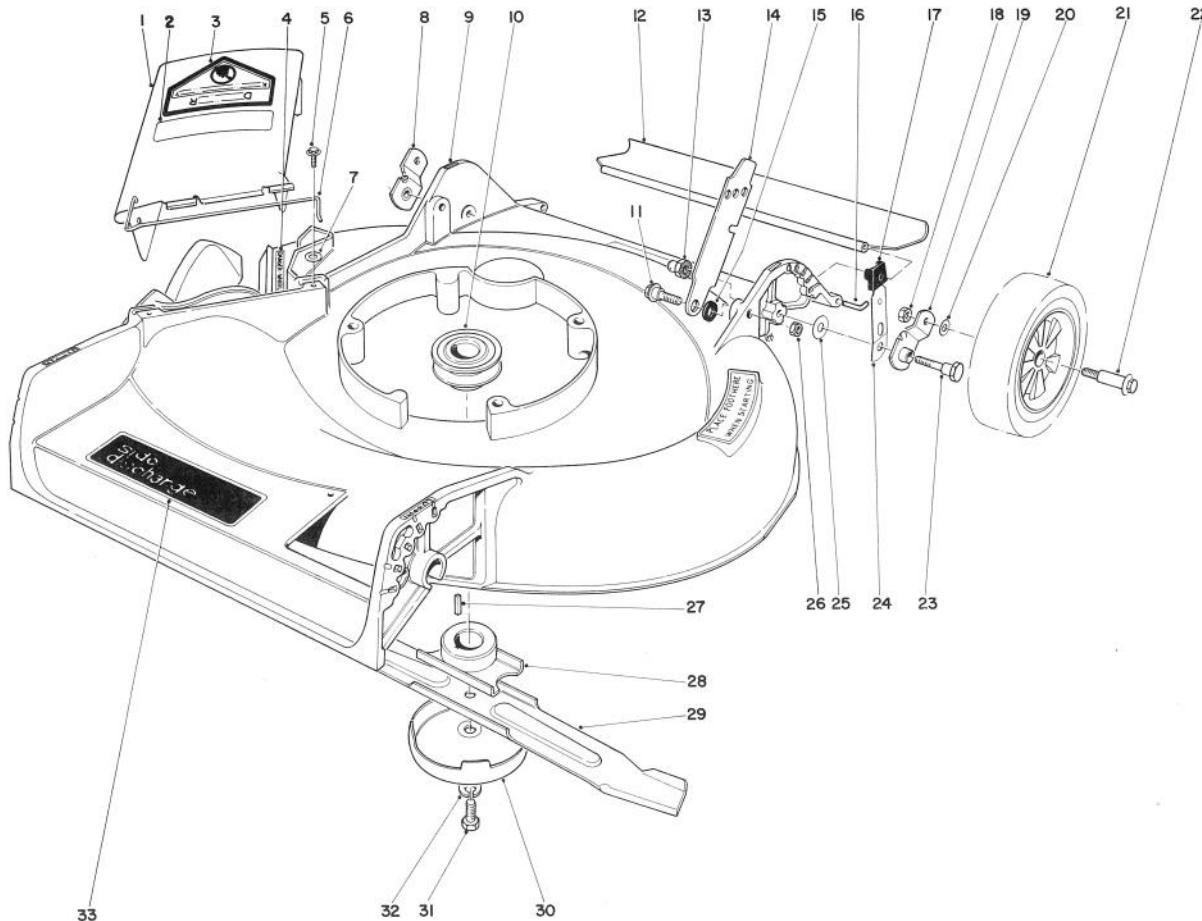


TORO

MODEL NO. 21738 – 2000001 & UP

**PARTS
CATALOG****21" SELF PROPELLED KEY-LECTRIC®
SIDE DISCHARGE****HOUSING ASSEMBLY**

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	27-7810	Deflector Cover Assembly (Incl. Ref. #2, 3 & 6)	1	15	27-6510	Spacer – Handle Latch	2
2	39-9130	Decal – Caution	1	16	33-3201	Rod Shield	1
3	39-5770	Decal – Danger	1	17	25-7740	Knob Arm	2
4	22-7350	Decal – Danger	1	18	32146-6	Locknut	2
5	12-3270	Screw Special	2	19	20-2140	Pivot Arm "A"	1
6	20-2640	Hinge Spring	1	20	40-1940	Washer	2
7	3256-22	Washer	2	21	27-6200	Wheel & Tire Assembly	2
8	20-2130	Pivot Arm "B"	1	22	27-6230	Wheel Bolt	2
9	8-7959	Housing	1	23	3-0655	Pivot Screw	2
10	21-5580	Pulley Driver	1	24	25-8000	Spring Arm	2
11	27-7210	Shoulder Screw	2	25	5-4460	Pivot Washer	2
12	22-4950	Rear Shield	1	26	32146-5	Locknut	2
13	12-2080	Nut – Handle Pivot	2	27	27-6300	Square Key	1
14	5-2446	Handle Latch	2	28	20-2750	Blade Retainer	1
				29	20-2720	Blade	1

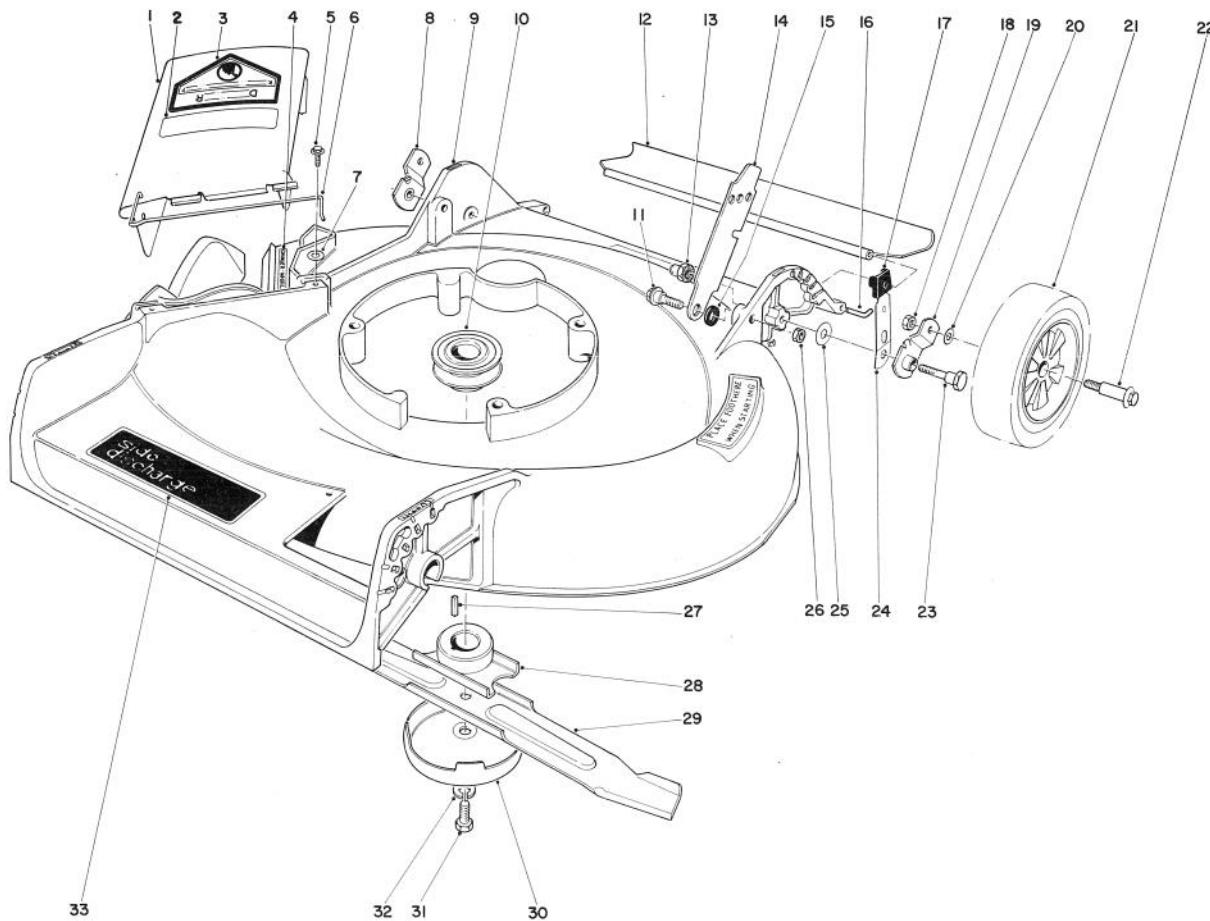


HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
30	8-4240	Cup Anti Scalp	1
31	3-5246	Screw Special	1
32	3253-22	Lockwasher	1

Ref. No.	Part No.	Description	No. Used
33	44-0440	Decal — Side Discharge	1
*	8-9939	Loose Parts	1
*	25-9150	Decal — Serial Replacement	1


*Not Illustrated

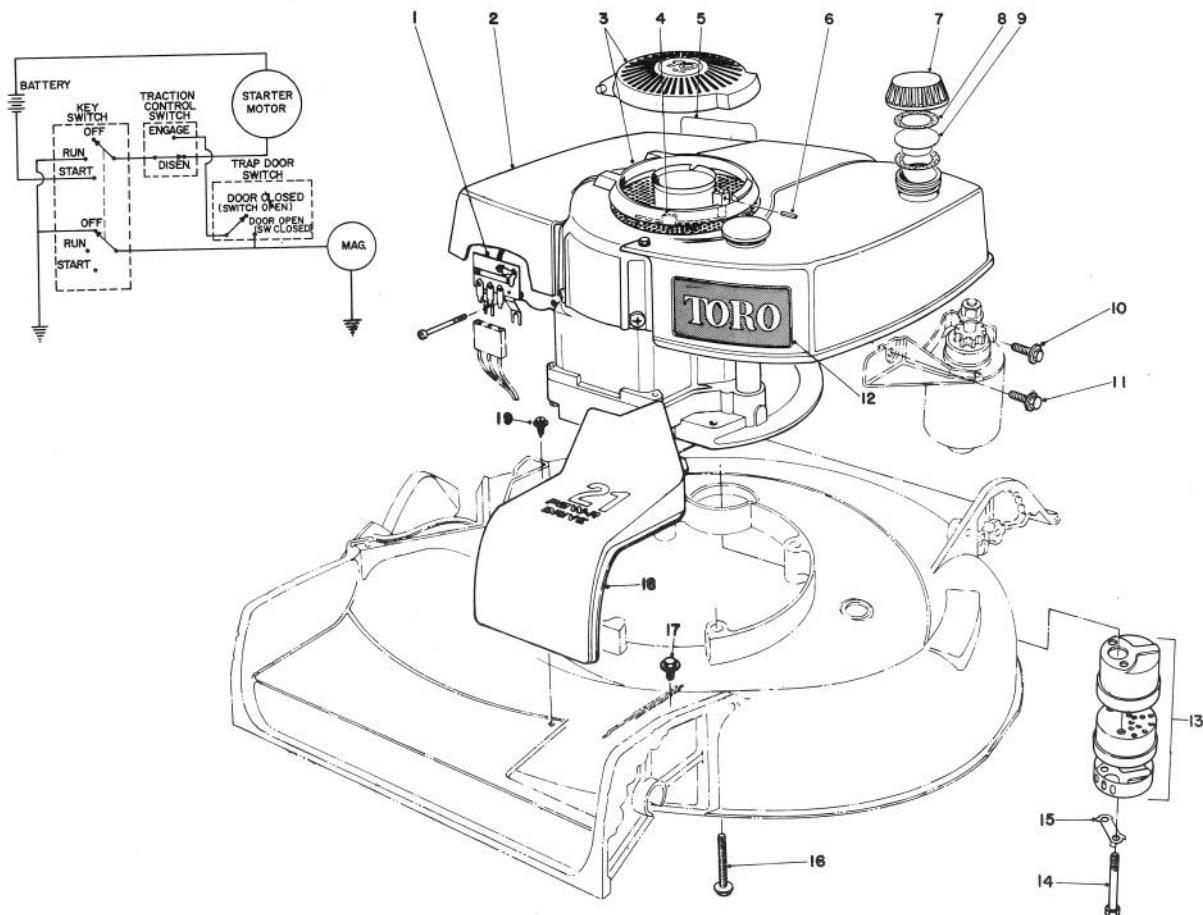

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	24-9770	Switch & Junction Box	1	13	5-4769	Muffler Assembly (Incl. Ref. #14 & 15)	1
2	221-684	Engine	1	*	39-5930	Spark Arrestor Muffler Assembly (Optional) (Incl. Ref. #14 & 15)	1
3	38-3080	Cover Assembly	1	14	321-20	Screw Hex Hd.	2
4	25-1570	Clip Wire	2	15	3-5094	Locking Clip	1
5	37-1580	Decal – Maintenance	1	16	11-0580	Screw	3
6	32121-90	Spring Pin	1	17	32144-11	Screw Hex Hd.	1
7	27-7870	Gas Cap (Incl. Ref. #8 & 9)	1	18	28-4730	Cover Belt Drive	1
8	2210-144	Gasket	1	19	12-5450	Screw Special	2
9	2210-143	Baffle	1	..*	33-2930	Starter Rope	1
10	12-3270	Screw Special	1				
11	11-9760	Screw Special	1				
12	44-0510	Decal Engine	1				

*Not Illustrated

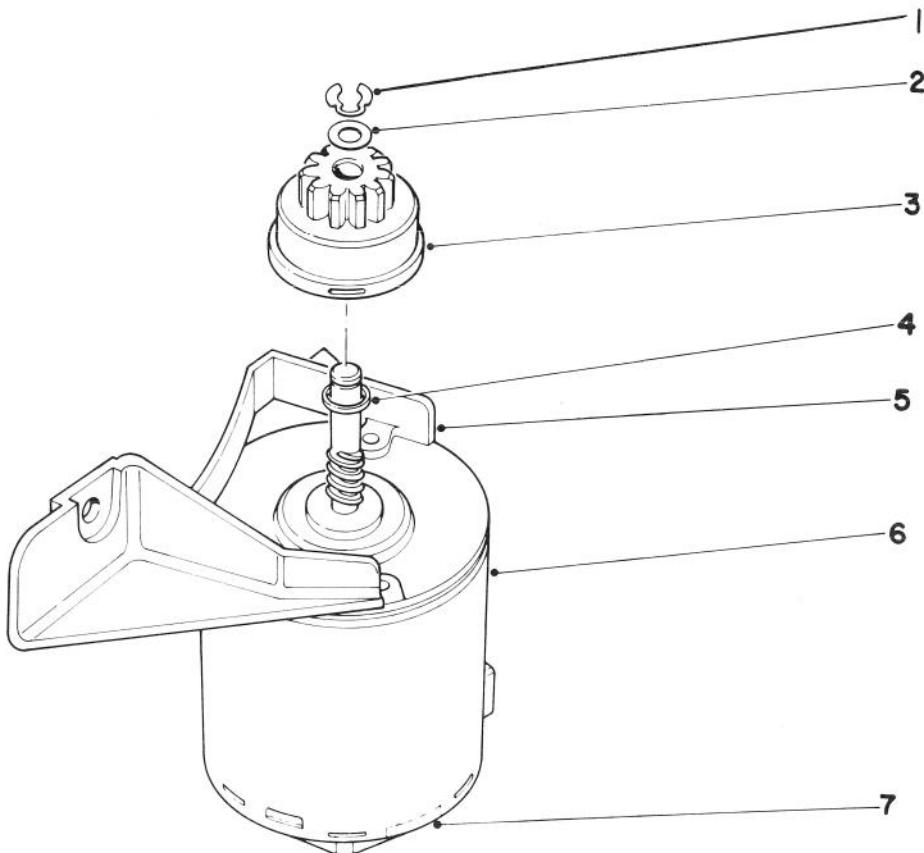


STARTER MOTOR

Ref. No.	Part No.	Description	No. Used
1	32151-47	Retaining Ring	1
2	25-3970	Washer	1
3	25-3960	Pinion Assembly	1
4	23-9590	Spacer	1

Ref. No.	Part No.	Description	No. Used
5	218-472	Mounting Bracket	1
6	25-3950	Starter Motor	1
7	218-494	End Plate	1
*	25-3940	Starter Motor Assembly (Incl. Ref. #1-7)	1

*Not Illustrated

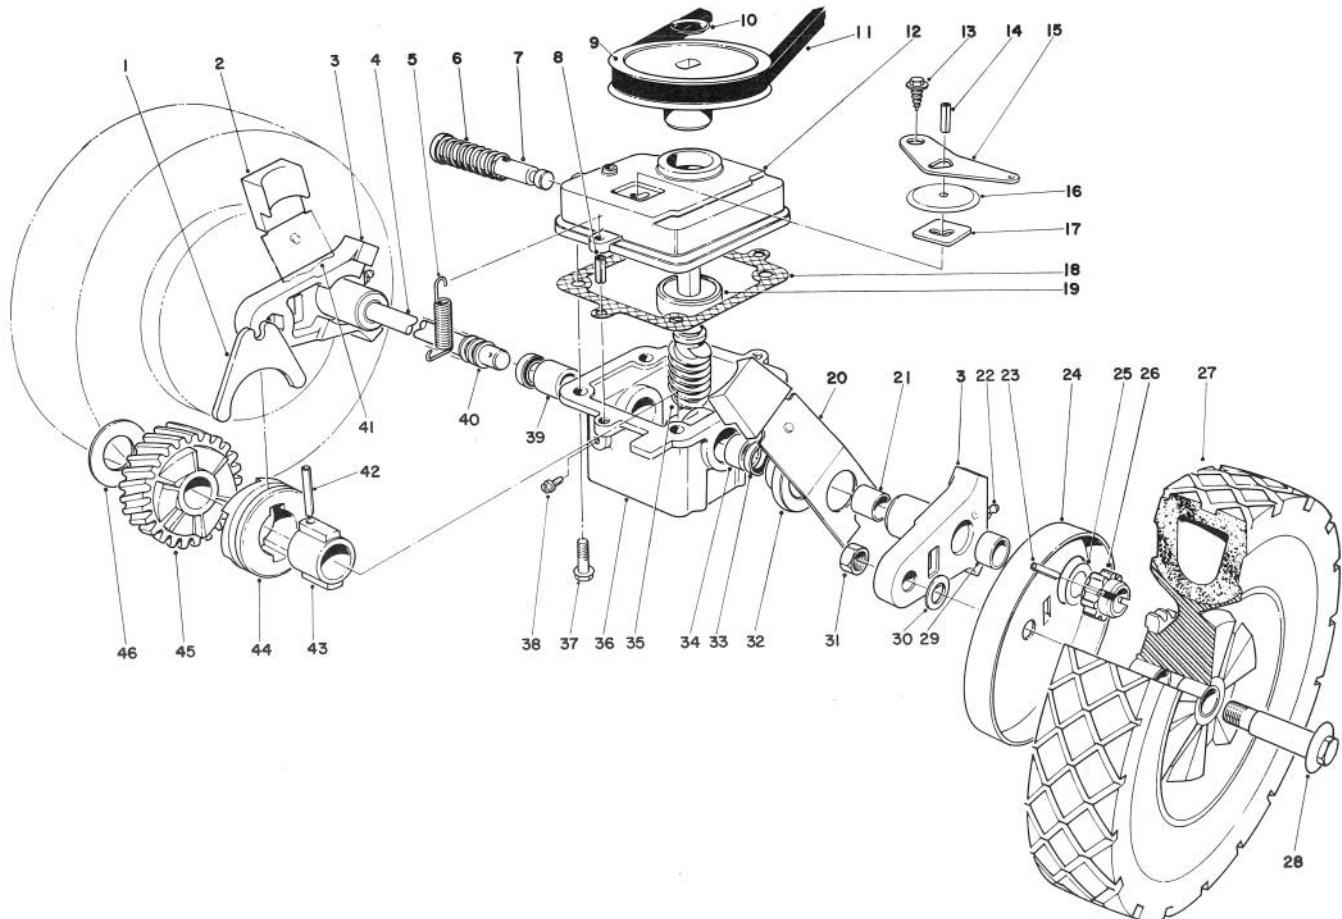


GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5-3247	Shifter Fork	1
2	25-7740	Knob Arm	2
3	38-2220	Pivot Arm (Incl. Ref. #21, 22 & 29)	2
4	37-9440	Drive Shaft	1
5	17-4490	Spring Belt Tension	1
6	3-0731	Spring	1
7	5-3248	Shifter Rod	1
8	32121-1	Roll Pin	2
9	20-2780	Pulley	1
10	3290-346	Push On Retainer	1
11	5-4505	V-Belt	1
12	39-1100	Cover — Gear Case	1
13	32140-64	Self Tapping Screw	1
14	32121-23	Roll Pin	1
15	5-3252	Shifter Arm	1
16	3-2615	Transmission Dust Cover	1
17	3-0681	Latch Plate	1
18	36-1000	Gasket Gear Case	1
19	251-284	Ball Bearing	1
20	25-7930	Spring Arm L.H.	1
21	256-206	Bushing	2
22	302-18	Grease Fitting	2
23	32121-98	Spiral Pin	2
24	18-9820	Wheel Cover	2

Ref. No.	Part No.	Description	No. Used
25	18-9810	Thrust Washer	2
26	18-9690	Gear — Pinion	2
27	36-7790	Wheel & Tire Assembly	2
28	27-6230	Wheel Bolt	2
29	256-1	Bushing	2
30	40-1940	Washer	2
31	32146-6	Locknut	2
32	3-2646	End Cap	2
33	253-140	Oil Seal	2
34	256-110	Bushing	1
35	8-5679	Worm Shaft & Gear (Incl. Ref. #45)	1
36	8-0479	Gear Case (Incl. Ref. #33, 34 & 39)	1
37	11-9760	Screw	4
38	28-1550	Screw Nylon	1
39	256-263	Bushing	1
40	24-7920	Cover — Drive Shaft	1
41	25-7920	Spring Arm R.H.	1
42	32121-88	Coil Pin	1
43	3-0721	Sleeve	1
44	19-5660	Clutch Jaw	1
45	3-0724	Helical Gear	1
46	* 8-6889	Thrust Washer Gear Case Assembly Complete	1


*Not Illustrated

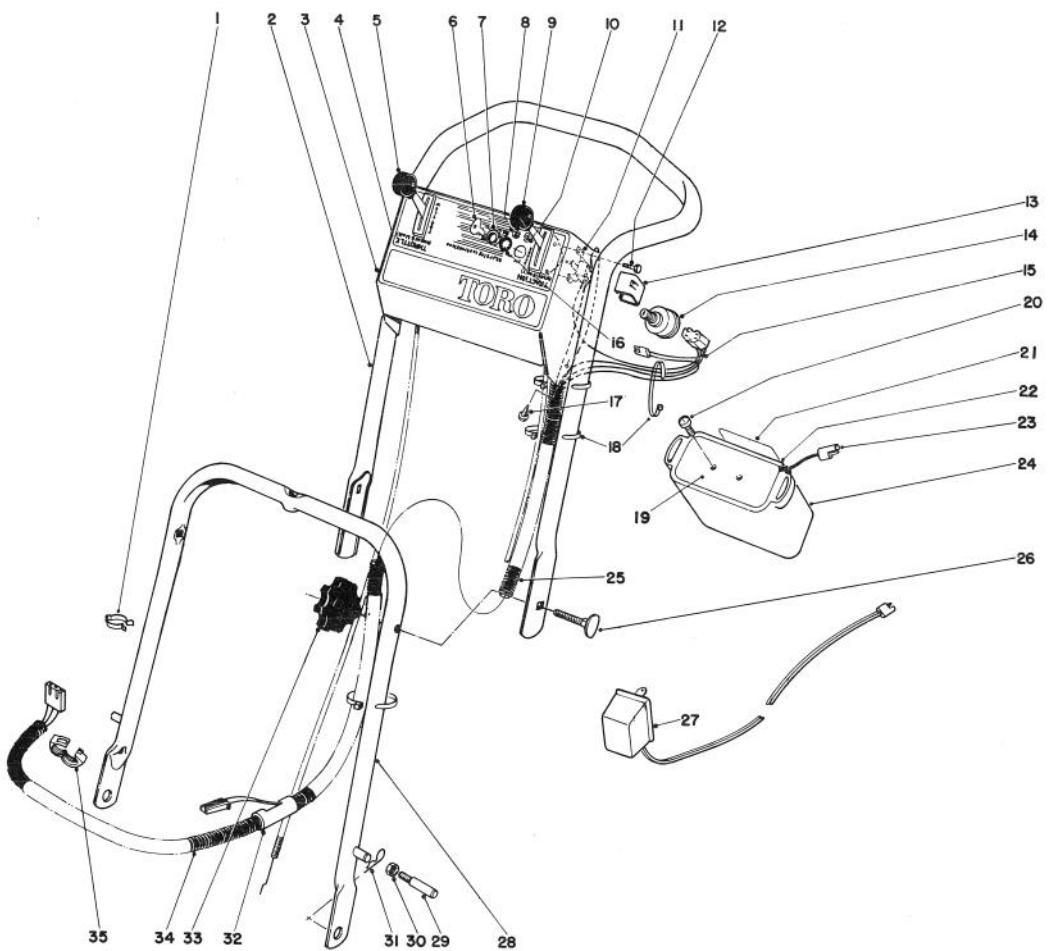

HANDLE ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	218-466	Clip	1
2	26-0540	Upper Handle	1
3	21-5160	Control Plate	1
4	26-2220	Decal Control Plate	1
5	33-2546	Throttle Control	1
6	218-412	Key	2
7	218-461	Nut	1
8	3296-9	Nut	2
9	33-2552	Traction Control	1
10	3256-21	Washer	2
11	24-9760	Safety Switch	1
12	3290-124	Screw	2
13	25-1590	Cover Switch	1
14	23-0660	Starter Switch	1
15	25-0090	Wiring Harness	1
16	3254-5	Lockwasher	1
17	32104-76	Screw	4
18	3290-378	Cable Tie	4

Ref. No.	Part No.	Description	No. Used
19	39-0630	Cover	1
20	32104-29	Self Tapping Screw	2
21	36-5380	Decal - Charger	1
22	38-4180	Battery Assembly (Incl. Ref. #19-21 & 23-24)	1
23	11-3790	Plug & Wire Assembly	1
24	39-0640	Container Battery	1
25	25-5650	Cover-Wiring Harness Upper	1
26	17-9420	Handle Screw	2
27	6-9780	Battery Charger	1
28	42-1480	Lower Handle	1
29	17-9380	Handle Pin	2
30	32146-8	Locknut	2
31	3290-255	Hair Pin Cotter	2
32	2412-49	Breakout Fitting	1
33	19-4050	Handle Knob	2
34	25-5660	Cover-Wiring Harness Lower	1
35	2412-48	Ring Fitting	1

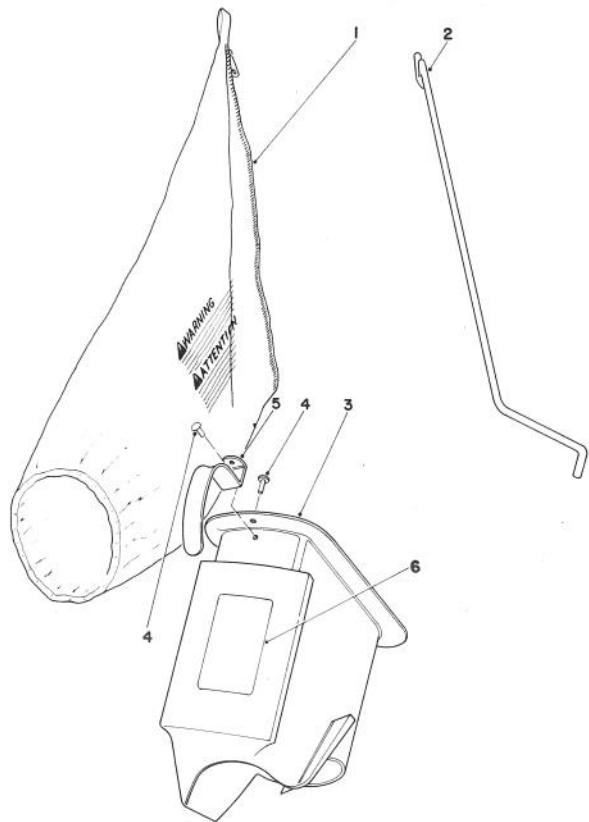

BAGGING KIT NO. 36-8380 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	6-0929	Grass Bag	1	4	3295-26	Rivet	2
2	20-4590	Bag Rod	1	5	20-4650	Handle Chute	1
3	6-1089	Grass Chute (Incl. Ref. #4-5)	1	6	36-5230	Decal - Bag Chute	1

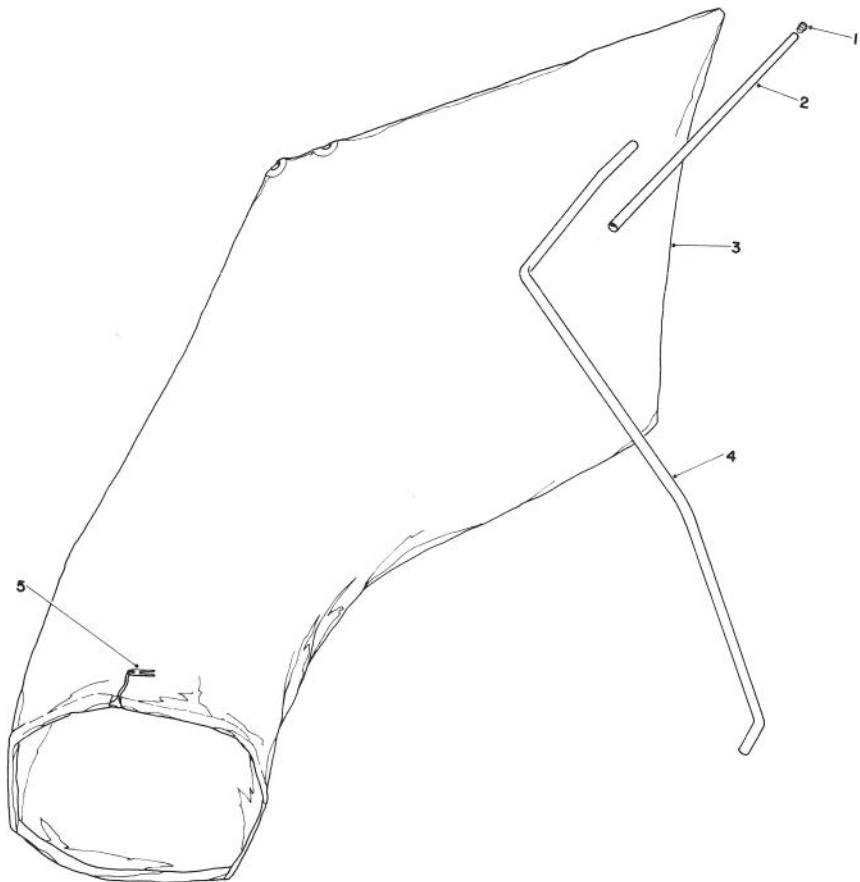


GIANT BAGGING KIT NO. 29-9750 (Optional)

Ref. No.	Part No.	Description	No. Used
1	2410-29	Cap	1
2	29-7000	Tube 25"	1
*	11-0650	Tube 28"	1

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
3	8-4719	Bag (Incl. Ref. #5)	1
4	22-4820	Hanger Rod	1
5	3-2781	Bag Cord Fasteners	1

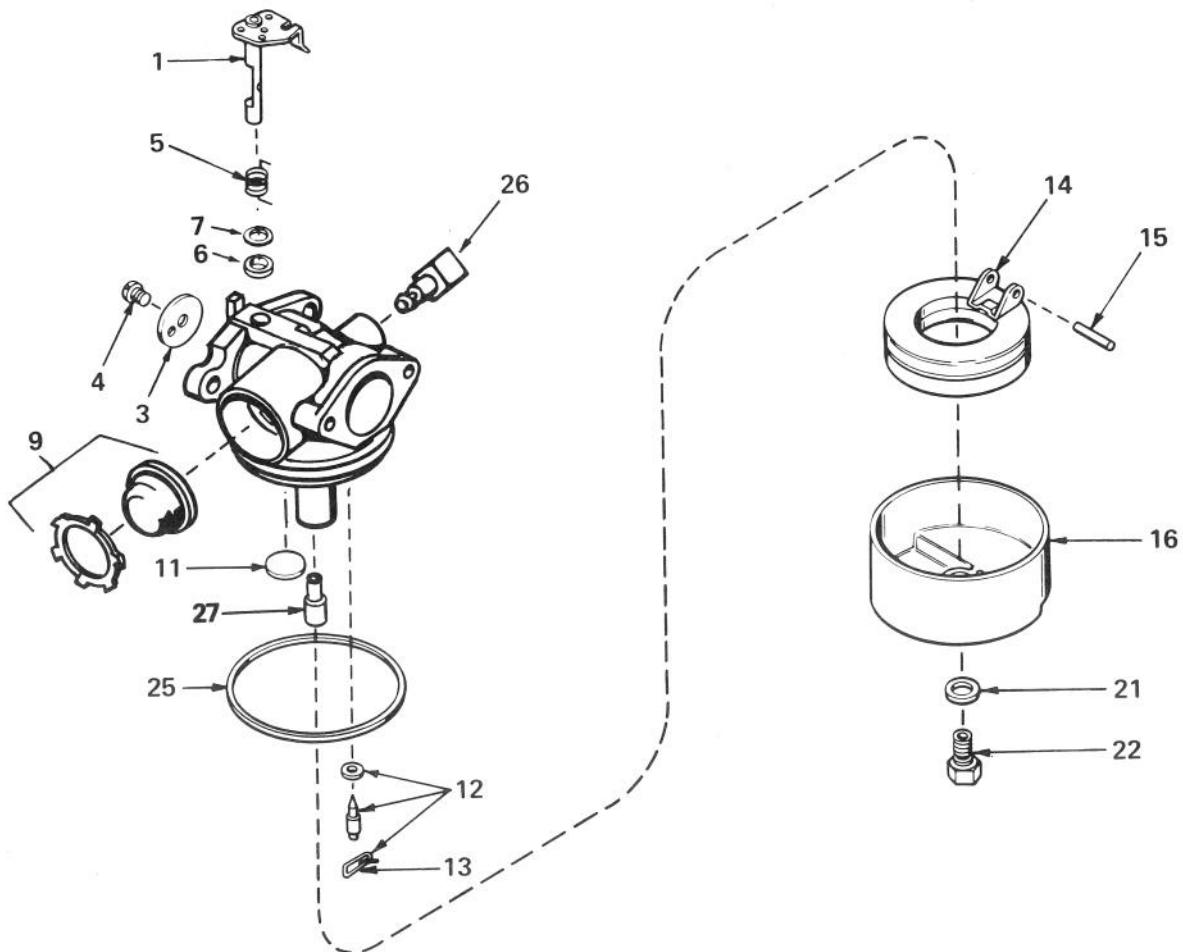


CARBURETOR NO. 632050A

Ref. No.	Part No.	Description	No. Used
1	631615	Shaft & Lever Assy., Throttle	1
3	631616	Shutter, Throttle	1
4	650506	Screw, Throttle Shutter	1
5	631767	Spring, Return	1
6	631971	Seal, Dust	1
7	631184	Washer, Flat	1
9	632047	Bulb & Retainer, Primer	1
11	631027	Plug, Welch	1
12	631021	Inlet Needle, Seat & Clip Assy. (Incl. Ref. #13)	1

Ref. No.	Part No.	Description	No. Used
13	631022	Clip, Inlet Needle	1
14	632019	Float, Carburetor	1
15	631024	Shaft, Float	1
16	631700	Bowl, Float	1
21	631334	Gasket, Bowl-to-Body	1
22	631935	Nut, Float Bowl	1
25	631028	Gasket, Bowl-to-Body	1
26	631807	Fitting, Fuel Inlet	1
27	632158	Spacer	1

ENGINE TECUMSEH MODEL NO. TNT 100-10056D

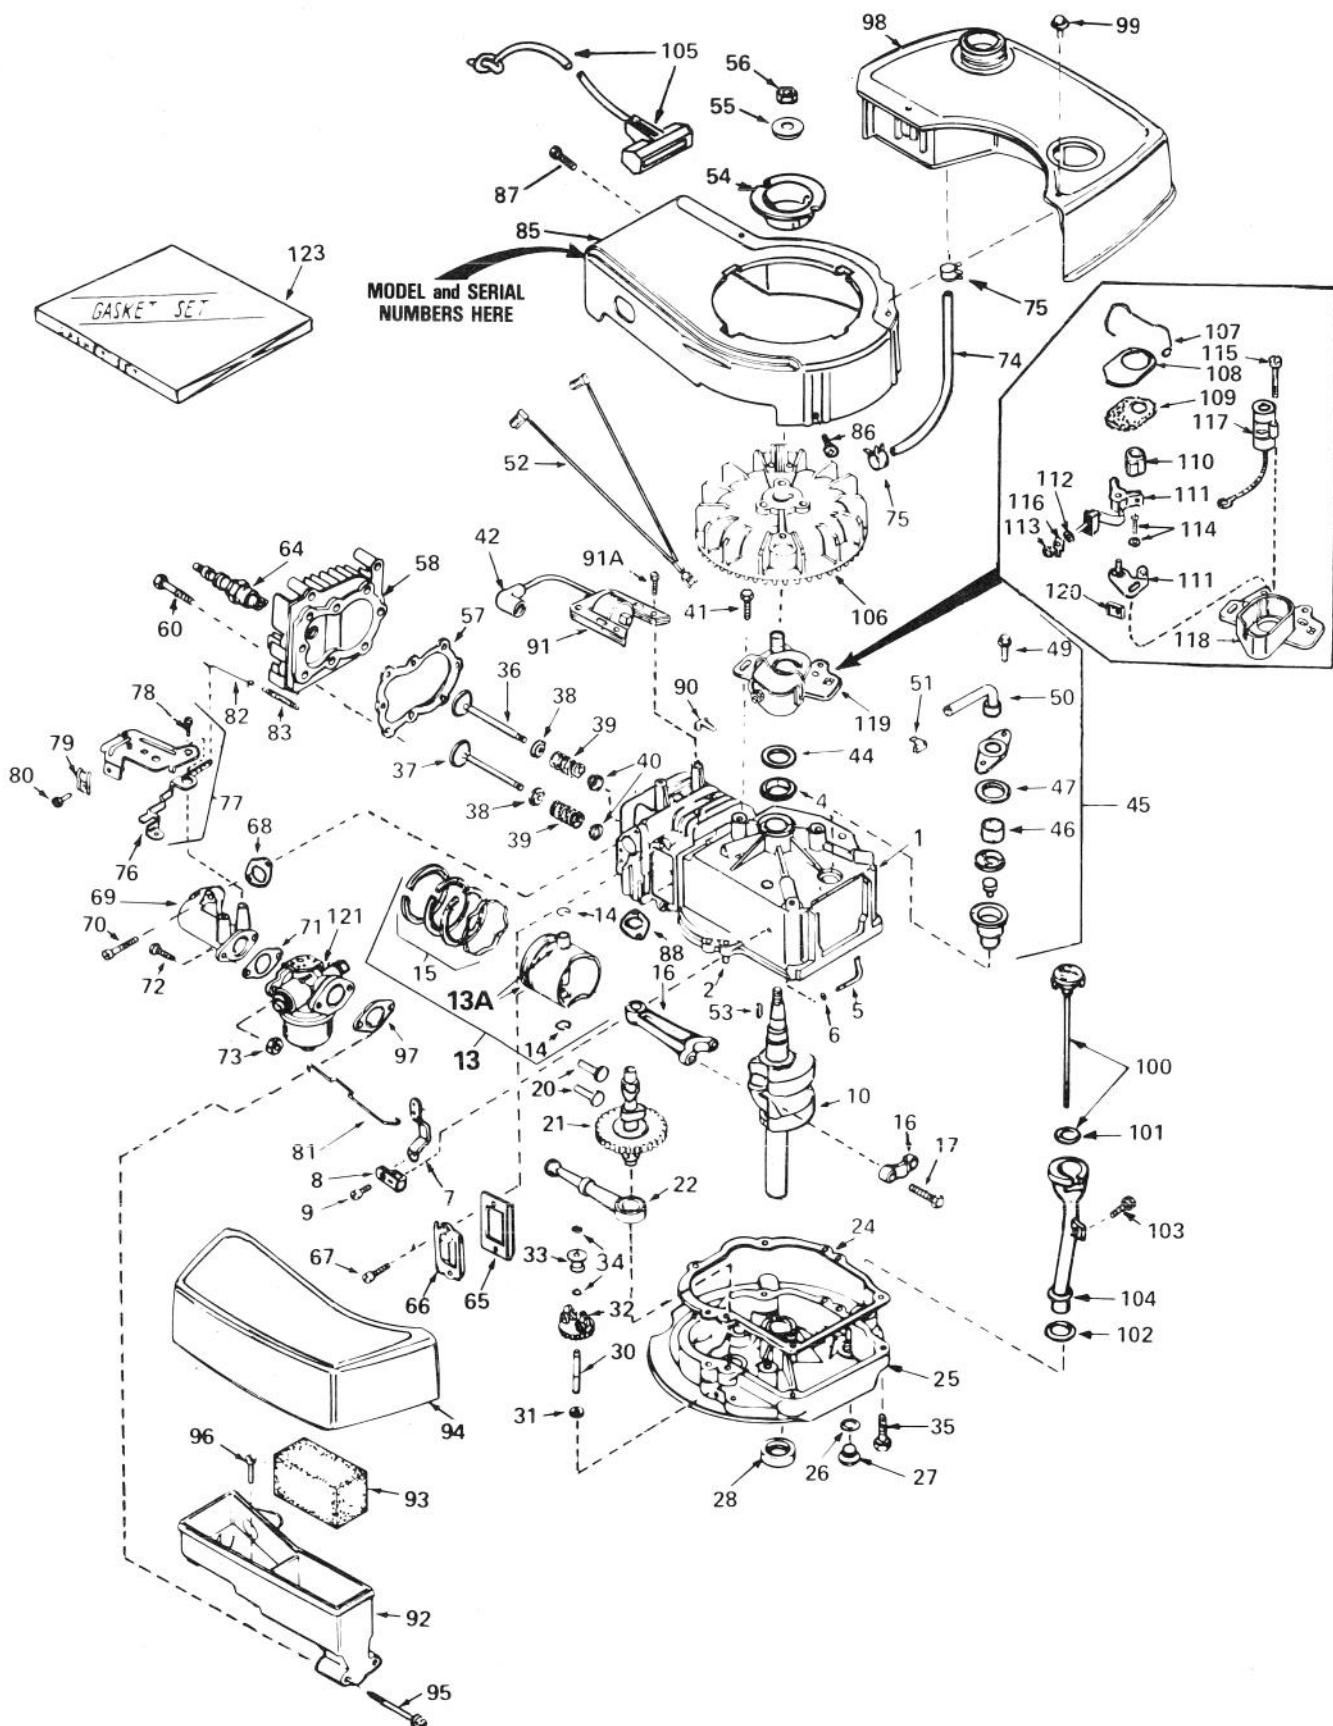

ENGINE TECUMSEH MODEL NO. TNT 100-10056D

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	34429	Cylinder Assy. (Incl. Ref. #2 & 4)	1	57	*33015	Gasket, Cylinder Head	1
2	26727	Pin, Dowel	2	58	34242	Head, Cylinder	1
4	32600	Seal, Oil	1	60	6021A	Screw, Hex Flange Hd.	8
5	30589	Rod, Governor (Incl. Ref. #6)	1	64	33636	Plug, Spark (Champion J-8 or Equivalent) Except for Canada	1
6	28277	Washer, Flat	1	64	34251	Resistor Spark Plug (Canadian Regulations Req. RJ-17 LM Resistor Spark Plug)	1
7	32651	Lever, Governor	1	65	*27234	Gasket, Valve Spring Cover	1
8	31335	Clamp, Governor Lever	1	66	32755	Cover, Valve Spring Box	1
9	650548	Screw, Hex Washer Hd.	1	67	650128	Screw, Fil. Hd.	2
10	34440	Crankshaft	1	68	*34690	Gasket, Intake Pipe	1
13	34520	Piston, Pin & Ring Assy. (Incl. Ref. #13A, 14 & 15) (Std.)	1	69	33004A	Pipe, Intake (Incl. Ref. #68)	1
13	34521	Piston, Pin & Ring Assy. (Incl. Ref. #13A, 14 & 15) (.010 Oversize)	1	70	650451	Screw, Hex Hd.	2
13	34522	Piston, Pin & Ring Assy. (Incl. Ref. #13A, 14 & 15) (.020 Oversize)	1	71	*31688	Gasket, Carburetor	1
13A	32603B	Piston & Pin Assy. (Incl. Ref. #14) (Std.)	1	72	6201	Screw, Hex Hd.	2
13A	32604B	Piston & Pin Assy. (Incl. Ref. #14) (.010 Oversize)	1	73	29752	Nut & Lockwasher Assy.	2
13A	32605B	Piston & Pin Assy. (Incl. Ref. #14) (.020 Oversize)	1	74	30705	Line, Fuel	1
14	20381	Ring, Piston Pin Retaining	2	75	26460	Clamp, Fuel Line	2
15	32606	Ring Set, Piston (Std.)	1	76	34310	Lever, Control	1
15	32607	Ring Set, Piston (.010 Oversize)	1	77	33889A	Control Assy., Speed (Incl. Ref. #76 & 78)	1
15	32608	Ring Set, Piston (.020 Oversize)	1	78	650804	Screw, Hex Washer Hd. Shoulder Self-Tap	1
16	30963B	Rod Assy., Conn. (Incl. Ref. #17)	1	79	27793	Clip, Conduit	1
17	32610A	Bolt, Connecting Rod	2	80	28942	Screw, Hex Washer Hd.	1
20	27241	Lifter, Valve	2	81	34336	Link, Governor-to-Throttle	1
21	33553	Camshaft (Mech. Comp. Release)	1	82	33151	Link, Governor Spring	1
22	29914	Pump Assy., Oil	1	83	33890	Spring, Governor	1
24	*26750A	Gasket, Mounting Flange	1	85	33907A	Housing, Blower	1
25	30594B	Flange Assy., Mounting (Incl. Ref. #26 thru 30)	1	86	650497	Screw, Flex Pan Hd.	2
26	*28833	Gasket, Oil Drain Plug	1	87	30200	Screw, Hex Washer Hd. Self-Tap	2
27	27244	Plug, Oil Drain	1	88	*30081	Gasket, Exhaust	1
28	26208	Seal, Oil	1	90	29443	Clip, Fuel Line	1
30	30574	Shaft, Mech. Governor	1	91	34431	Lamination & Coil Assy.	1
31	30590A	Washer, Flat	1	91A	650814	Screw, Hex Washer Hd.	2
32	30591	Gear Assy., Gov. (Incl. Ref. #31)	1	92	33895	Body, Air Cleaner	1
33	30588A	Spool, Governor	1	93	33896	Filter, Air Cleaner	1
34	29193	Ring, Retaining	2	94	33897	Cover, Air Cleaner	1
35	650488	Screw, Hex Hd.	6	95	650762	Screw, Fil. Hd.	2
36	29314A	Valve, Intake (Std.) (Incl. Ref. #38, 39 & 40)	1	96	650784	Screw, Hex Hd. W/Flatwasher	1
36	29315B	Valve, Intake (1/32" Oversize) (Incl. Ref. #38, 39 & 40)	1	97	*33051	Gasket, Air Cleaner	1
37	29313B	Valve, Exhaust (Std.) (Incl. Ref. #38, 39 & 40)	1	98	33904A	Tank, Fuel	1
37	29315B	Valve, Exhaust (1/32" Oversize) (Incl. Ref. #38, 39 & 40)	1	99	28763	Screw, Hex Washer Hd.	2
38	31671	Cap, Upper Valve Spring	2	100	33894A	Dipstick, Oil (Incl. Ref. #101) (Twist Lock)	1
39	31672	Spring, Valve	2	101	33590	"O" Ring	1
40	31673	Cap, Lower Valve Spring	2	102	34265	Gasket	1
41	650489	Screw, Hex Hd.	2	103	650562	Screw, Hex Washer Hd.	1
42	610118	Cover, Spark Plug	1	104	34380	Tube, Oil Filler (Plastic)	1
44	33876	Gasket, Stator	1	105	590343	Rope Assy., Starter	1
45	34214A	Breather Assy. (Incl. Ref. #46, 47, 49, 50 & 51)	1	106	611010	Flywheel	1
46	33734	Element, Breather	1	107	30551	Spring, Breaker Box Dust Cover	1
47	*33735	Gasket, Breather	1	108	610947	Cover, Breaker Box Dust	1
49	30200	Screw, Hex Washer Hd. Self-Tap	2	109	610955	Gasket, Dust Cover	1
50	33886	Tube, Breather	1	110	30992	Cam, Breaker	1
51	33887	Clip, Breather Tube	1	111	30547A	Breaker Assy.	1
52	34459	Wire, Ground	1	112	610385	Washer, Terminal	1
53	610995	Key, Flywheel	1	113	610408	Nut, Terminal	1
54	34461	Pulley, Starter	1	114	29181	Screw & Washer Assy., Breaker	1
55	650815	Washer, Belleville	1	115	610593	Screw, Condenser Fastening	1
56	650816	Nut, Flywheel	1	116	33356	Tab, Ground Terminal	1
				117	30548B	Condenser	1
				118	611008	Core & Plate Group	1
				119	611006	Stator Assy. (Incl. Ref. #107, 111 thru 118 & 120)	1
				120	30549	Felt, Cam Wiper	1
				121	632050A	Carburetor (Incl. Ref. #71)	1
				123	33906A	Gasket Set (Incl. Items Marked *)	1

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Mower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on the mower housing between the rear wheels. In any correspondence concerning the mower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the mower.
2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A ONE YEAR LIMITED WARRANTY

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product	1 Year
Residential Products Used Commercially . . .	45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Consumer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND

FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.