



Form No. 3471-357 Rev A

Count on it.

Parts Catalog

Multi Pro[®] WM Turf Sprayer

Model No. 41240—Serial No. 417500000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame, Stand and Boom Mount Assembly	4
Control Console Assembly	6
Pump Mount Assembly	7
Pump Assembly No. 145-3382	8
Spray Tank Assembly	10
200 Gallon Spray Tank Assembly No. 138-8371	11
Spray Tank Lid Assembly No. 138-6283	12
Filter Assembly No. 130-7096	13
Spray Valve Assembly	14
Agitation Manifold Assembly	15
Section Manifold Assembly	17
Hose Assembly	18
Boom Lift Assembly	20
Hydraulic Cylinder Assembly No. 117-0701	21
On-Off Boom Lift Valve Assembly No. 136-2400	22
Electrical Assembly	23
Center Boom Assembly	24
LH Single Turret Body Assembly No. 108-3725	25
Double Turret Body Assembly No. 108-3727	26
RH Single Body Turret Assembly No. 108-3726	27
Boom Mounting Assembly	28
Boom Pivot Assembly	29
Left and Right Hand Boom Assembly	30
Attachments and Accessories	31

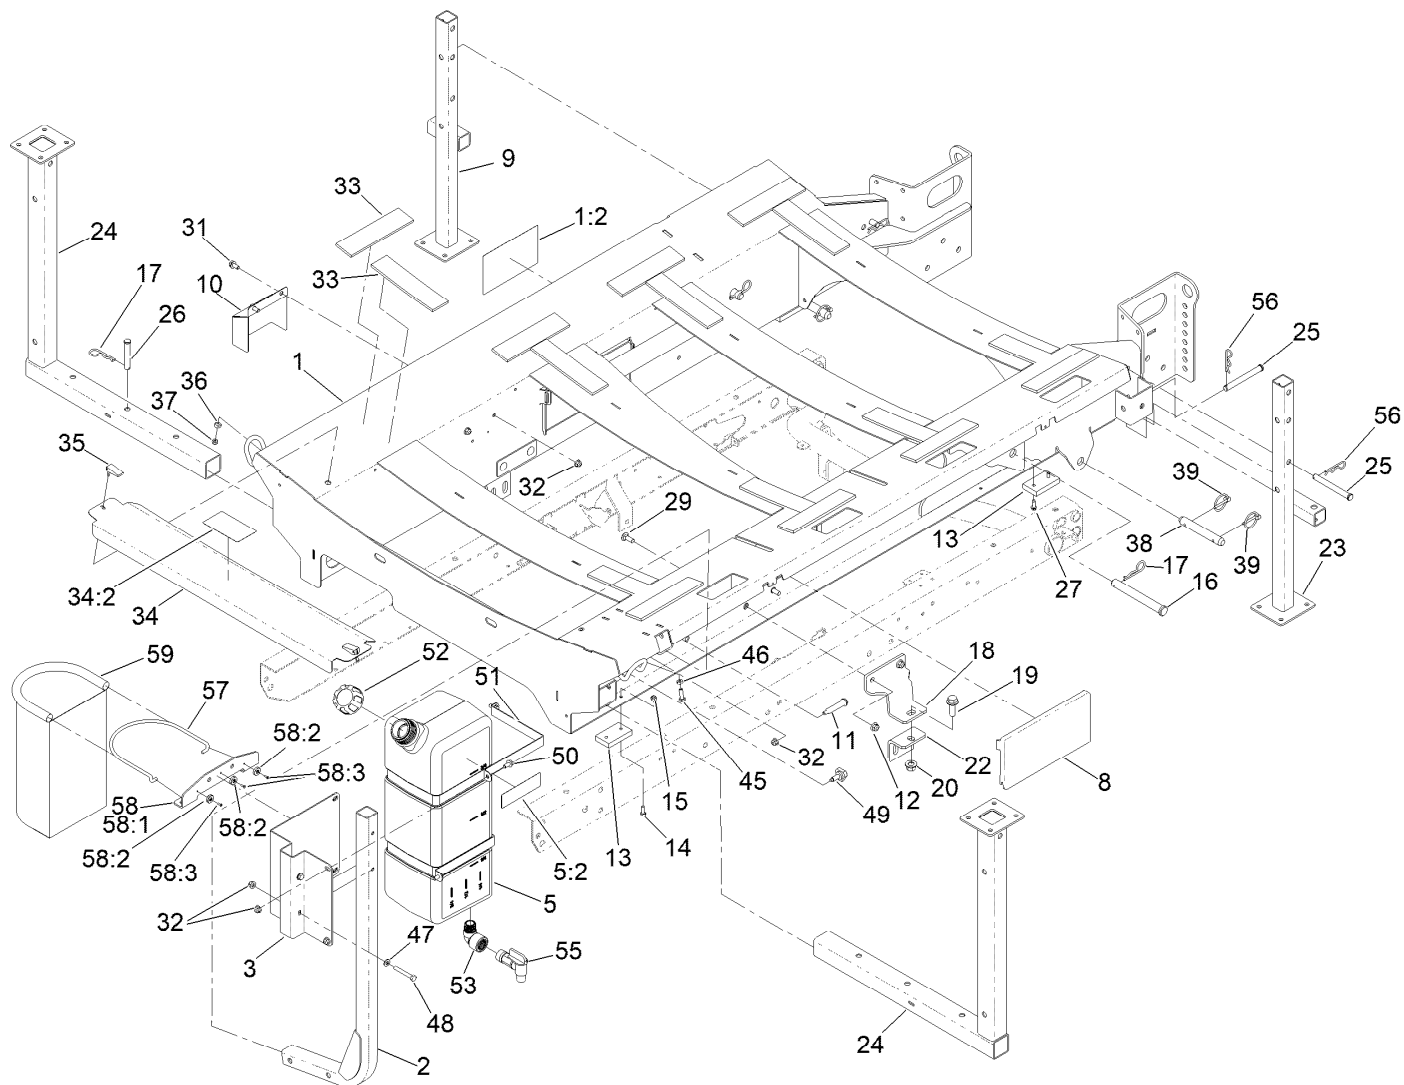


Frame, Stand and Boom Mount Assembly

Ref.	Part Number	Qty.	Description
1	127-3984	1	Skid ASM
1:2	127-3936	2	Decal-Danger
2	131-5791-03	1	Tube
3	131-5796-03	1	Mount-Tank, Eye Wash
5	132-7745	1	Fresh Water Tank ASM
5:2	120-0616	3	Decal-Water, Fresh
8	125-0798	2	Cover-Access
9	125-8108-03	1	Jack Stand-Rear, RH
10	125-8138-03	1	Guard-Relay
11	136-7199	2	Bolt-Shoulder
12	104-8301	4	Nut-HF, NI
13	93-9719	4	Block-Wear
14	321-4	4	Screw-HH
15	3296-42	4	Nut-Lock, NI
16	120-5587	2	Pin-Clevis
17	3290-343	4	Pin-Hair
18	125-0809	2	Bracket-Mount, Front
19	100-6116	2	Screw-HHF

Ref.	Part Number	Qty.	Description
20	99-5107	2	Nut-HF Nylock
22	92-2667-03	2	Bracket-Mount
23	125-0840-03	1	Jack Stand-Rear
24	125-0841-03	2	Stand-Front
25	283-83	4	Pin-Clevis
26	283-55	2	Pin-Clevis
27	49-2040	4	Screw-HWHTF
29	3231-2	4	Bolt-CARR
31	3234-14	2	Screw-HHF
32	104-8300	10	Nut-HF, NI
33	125-8094	16	Pad-Tank
34	127-3985	1	Skid Cover ASM
34:2	127-3937	1	Decal-Warning, Engine Cover
35	106-6777	2	Handle-Latch, Swell
36	106-6778	2	Bushing-Latch, Swell
37	1-804254	2	Nut-Lock, HH
38	92-1233	2	Pin-Clevis

● Not illustrated

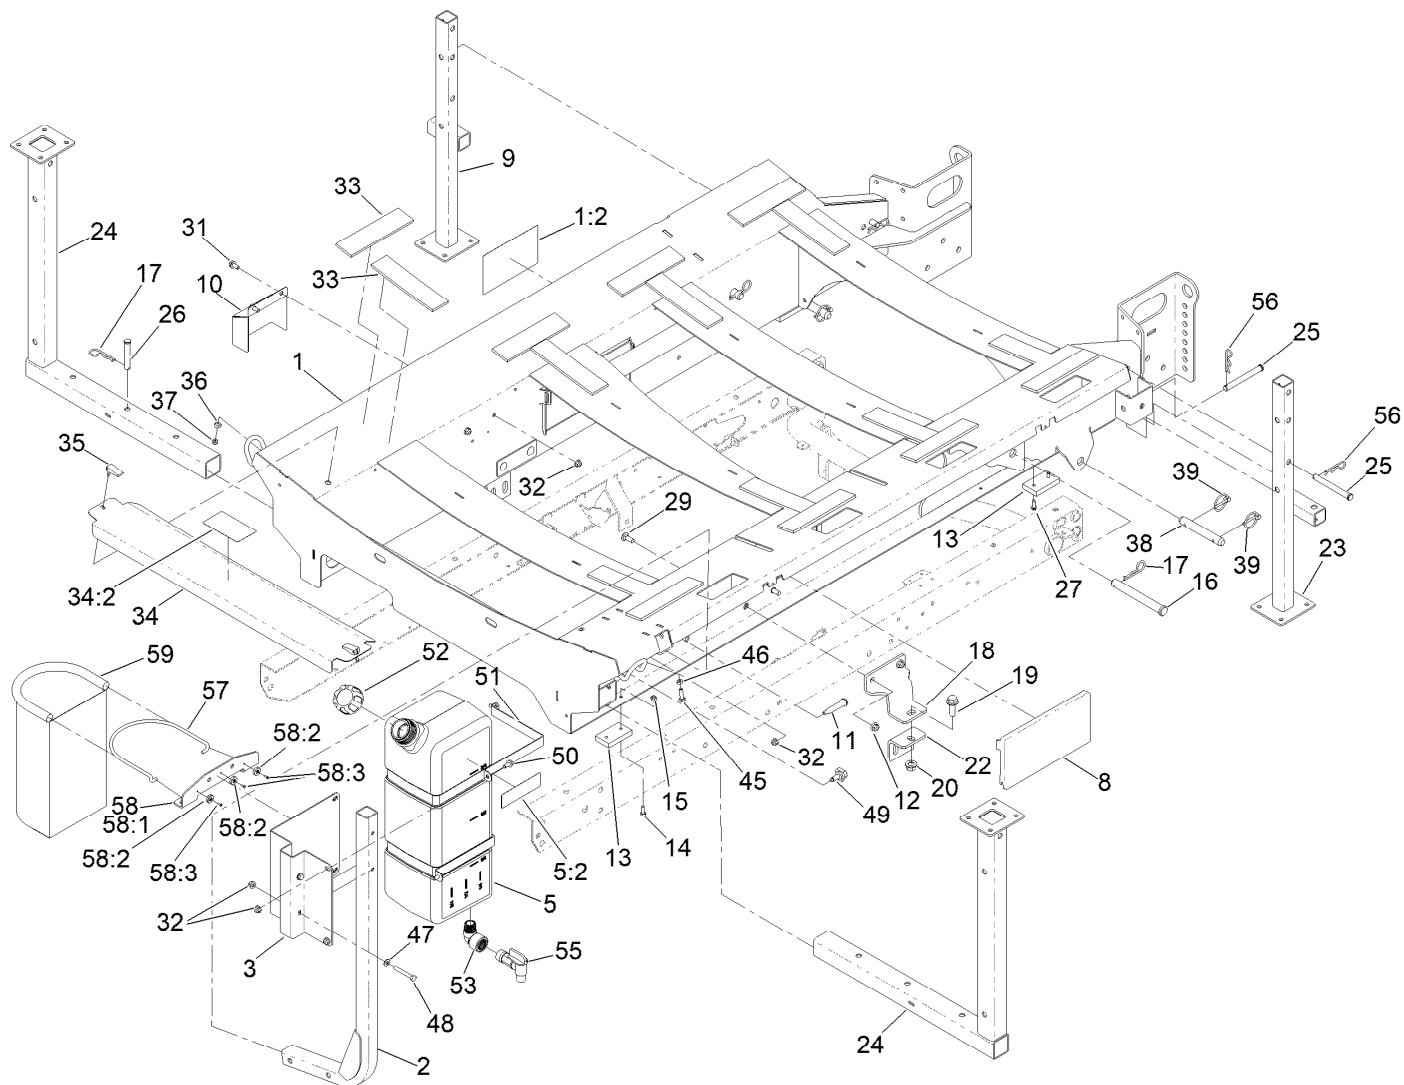


Frame, Stand and Boom Mount Assembly (continued)

Ref.	Part Number	Qty.	Description
39	92-1298	4	Pin-Lynch
45	322-5	1	Screw-HH
46	3218-2	1	Nut-Hex Jam
47	3256-23	2	Washer-Plain
48	322-11	2	Screw-HH
49	95-9648	2	Knob
50	3234-7	4	Screw-HHF
51	132-7628-03	2	Band-Tank, Eye Wash
52	106-5052	1	Cap-Water, Fresh
53	132-7706	1	Elbow-90 DEG
55	100-7011	1	Spigot-90 DEG

Ref.	Part Number	Qty.	Description
56	3290-355	4	Pin-Hair
57	117-0546	1	Rod-Bag, Storage
58	147-4666	1	Storage Mount, ASM
58:1	145-3366-03	1	Bracket-Mount, Storage Bag
58:2	140-7369	3	Magnet
58:3	3290-55	3	Rivet-Pop
59	161-6765	1	Bag-Storage
99	125-0842-03	2	Stand-Extension, Front ●
99	283-55	4	Pin-Clevis ●
99	3290-343	4	Pin-Hair ●
99	T0000-3423	2	Jack-Sidewind ●


● Not illustrated

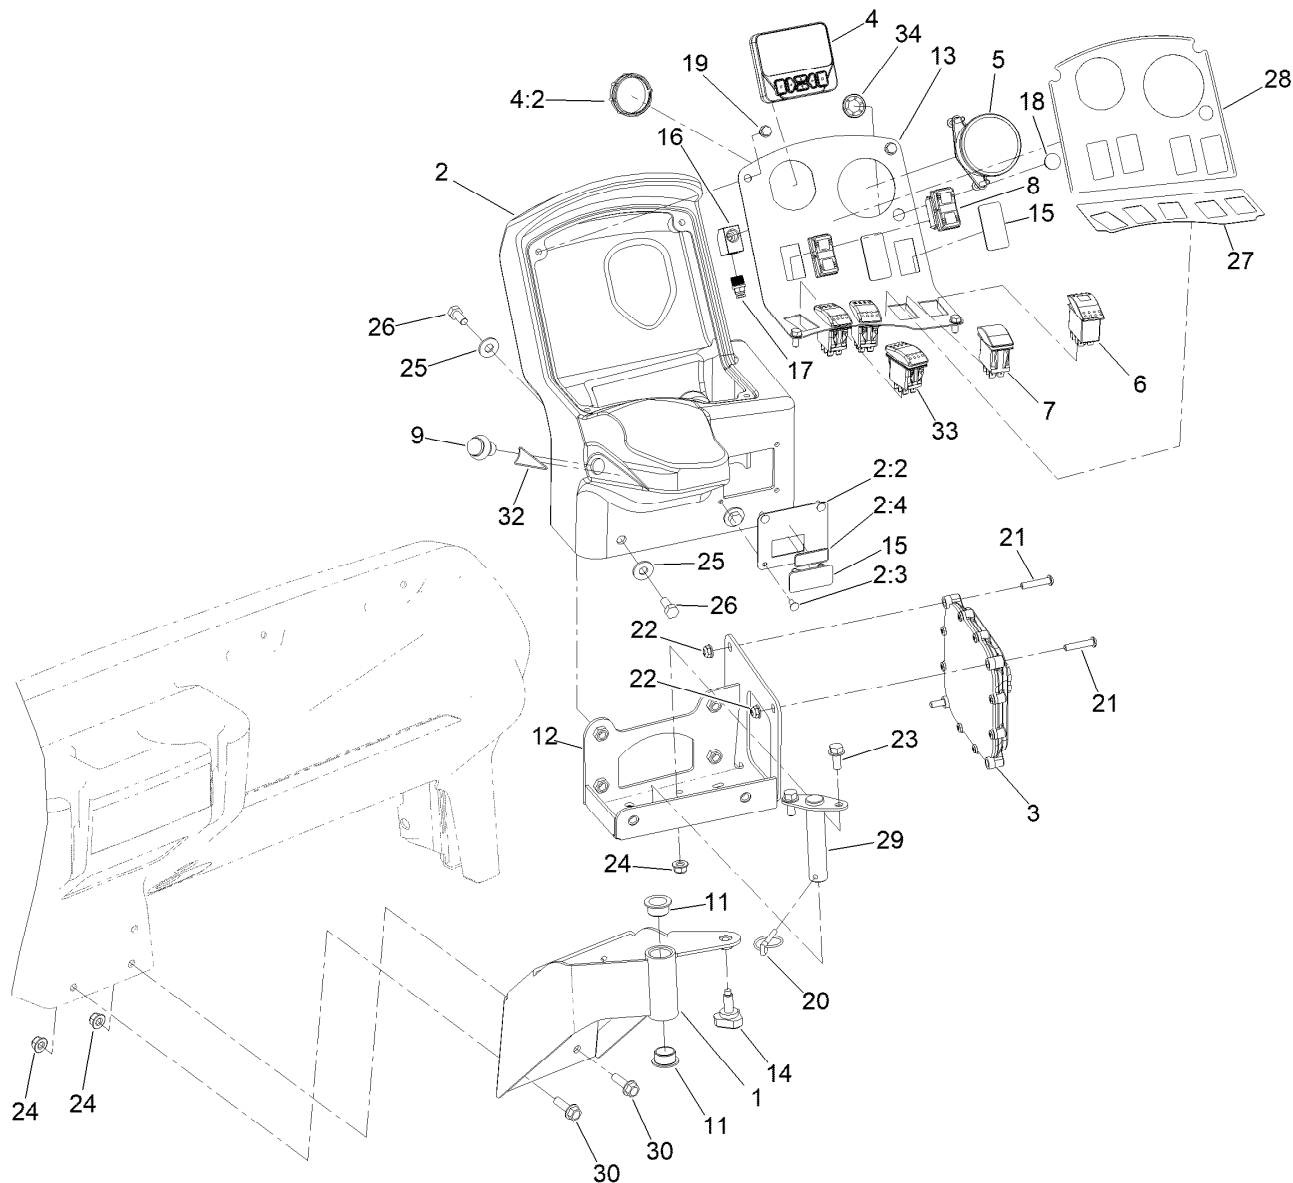

Control Console Assembly


Ref.	Part Number	Qty.	Description
1	131-5795-03	1	Bracket-Console
2	131-9618	1	Control-Console
2:2	131-9607	1	Plate-Switch
2:3	3290-409	4	Rivet
2:4	131-5808	1	Decal-Switch
3	122-3374	1	Controller
4	161-1700	1	Display-LCD
4:2	161-1723	1	Nut-Display
5	120-8546	1	Gauge-Pressure
6	100-8490	1	Switch-Rocker, On-None-On
7	100-1535	1	Switch-Rocker, (On)-Off-(On)
8	125-0899	2	Switch-Rocker
9	125-7996	1	Switch-Pb, Momentary
11	109-8054	2	Bushing-Flange
12	125-4021-0P	1	Bracket - Pivot, Console [prime
13	125-4020-03	1	Panel-Control
14	95-9648	1	Knob

Ref.	Part Number	Qty.	Description
15	99-7420	3	Plug-Hole
16	131-9605	1	Fitting-Elbow-90
17	100-8674	1	Coupler-Tube
18	119-5329	1	Plug-Hole
19	93-6083	4	Screw-HWH
20	3290-495	1	Pin-Klik
21	120-0834	3	Screw-HSBH
22	104-7201	3	Nut-HF, NI
23	3234-5	2	Screw-HHF
24	104-8300	5	Nut-HF, NI
25	3256-71	6	Washer-Flat
26	322-43	6	Screw-HH
27	130-8294	1	Decal-Console
28	125-4052	1	Decal-Console, Upper
29	125-4054	1	Pin
30	3234-17	3	Screw-HHF
32	125-8139	1	Decal-Master Boom Switch
33	95-8999	3	Switch-Rocker, On-None-On
34	1-323142	1	Nut-Push

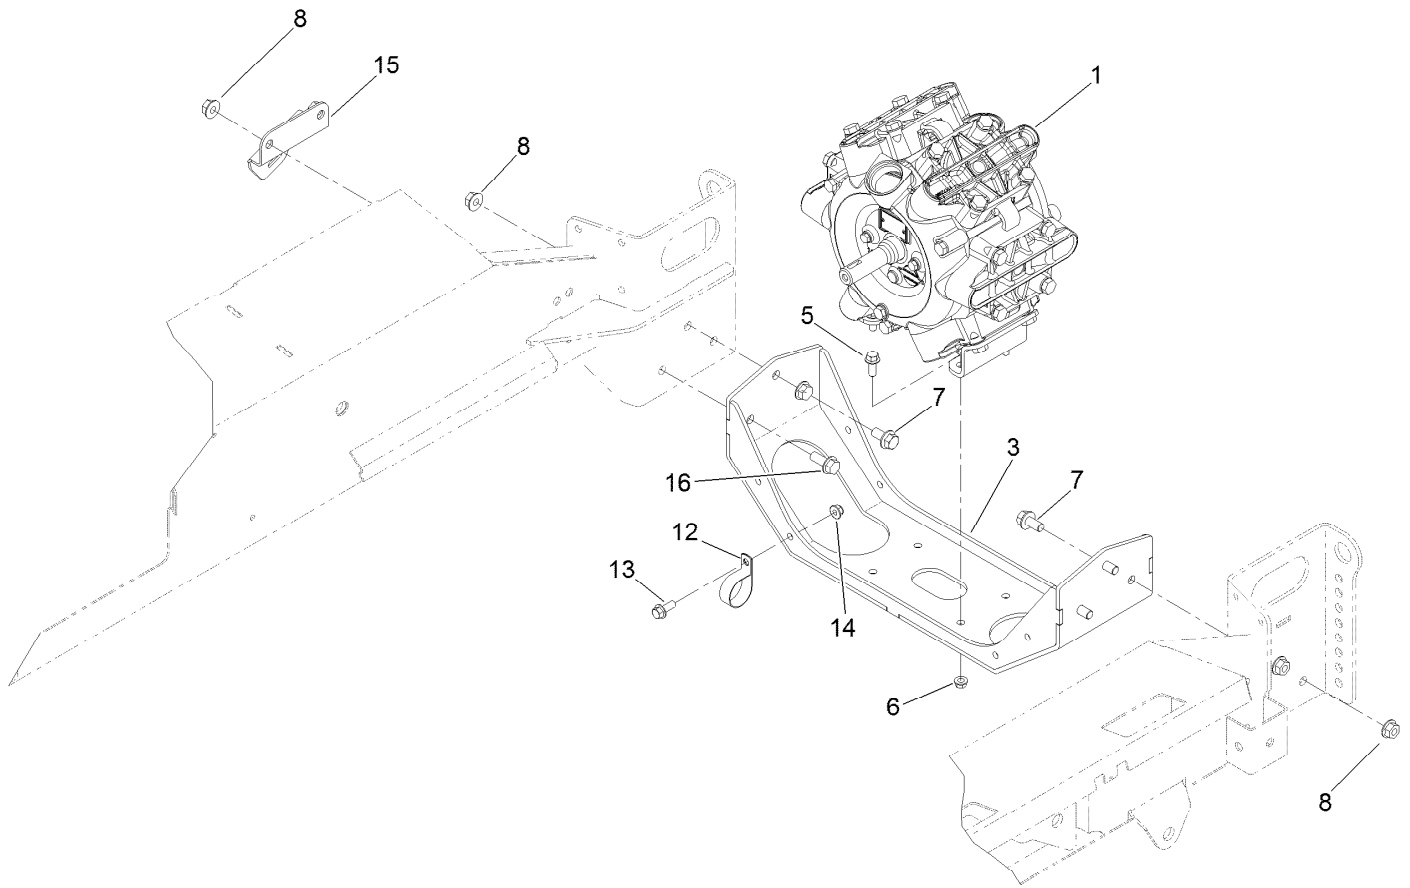

Pump Mount Assembly

Ref.	Part Number	Qty.	Description
1	145-3382	1	Pump ASM
3	125-8053-03	1	Mount-Pump
5	3234-11	4	Screw-HHF
6	3290-357	4	Nut-HSF
7	3234-6	4	Screw-HHF
8	32128-49	6	Nut-HHF
12	2412-147	1	Clamp-R
13	3234-42	1	Screw-HHF
14	104-8301	1	Nut-HF, NI
15	133-2867-03	1	Bracket-Mount Valve Drain
16	3234-38	2	Screw-HHF

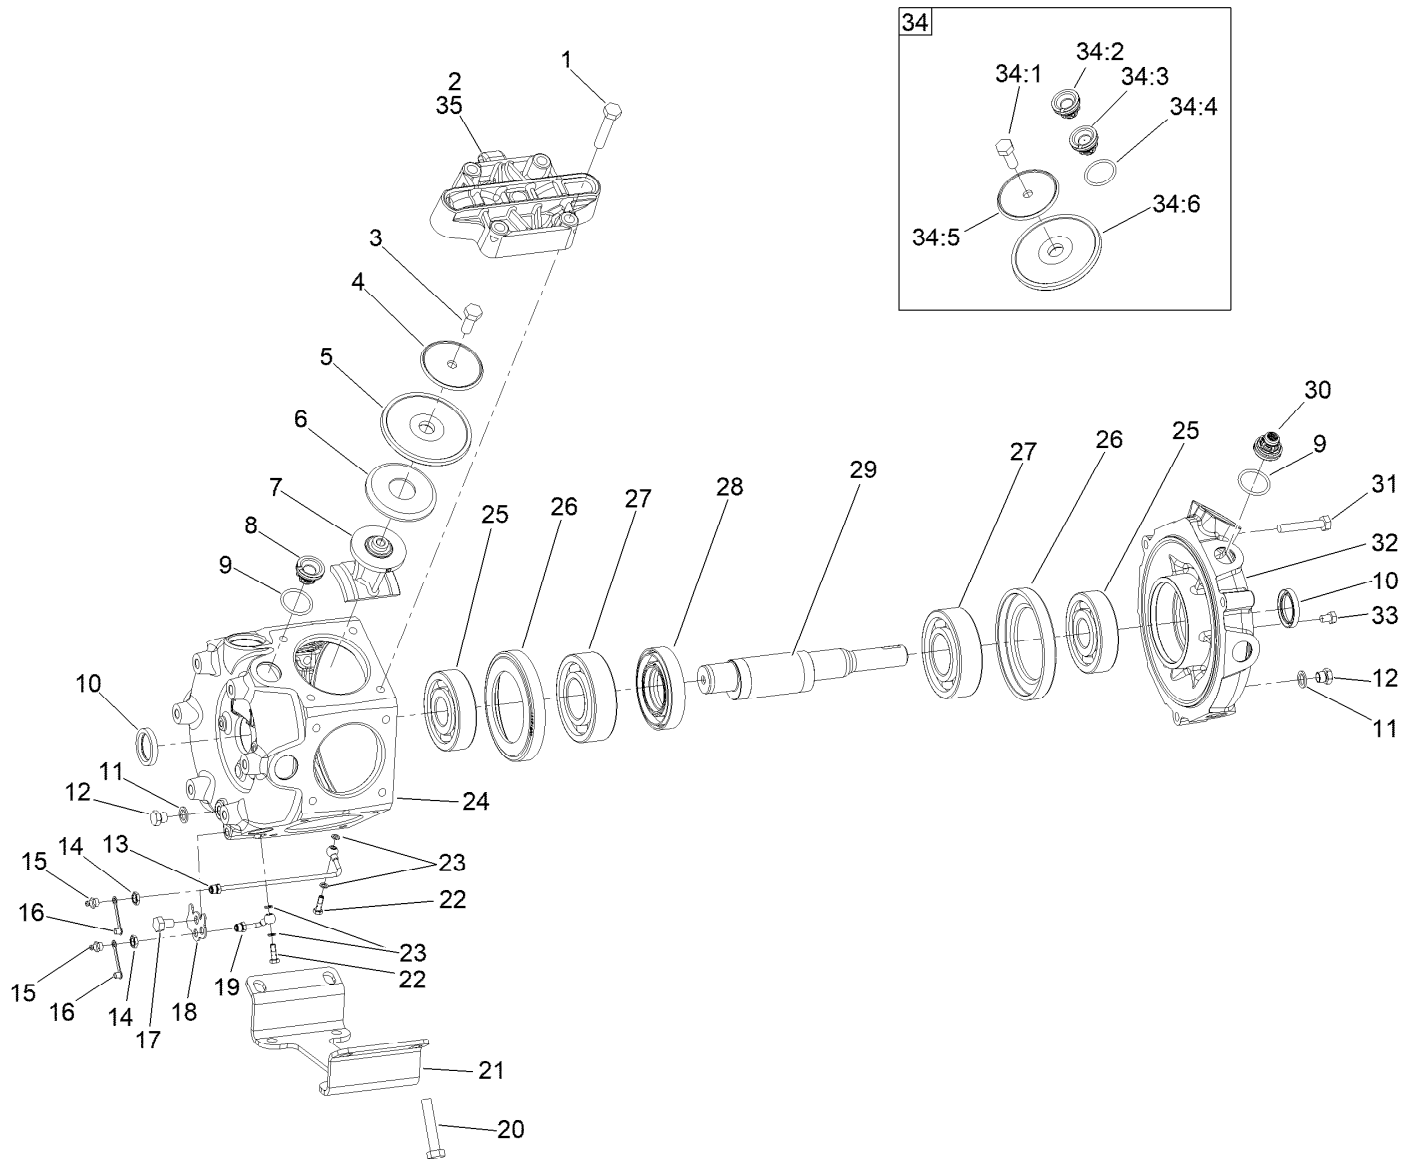


Pump Assembly No. 145-3382

Ref.	Part Number	Qty.	Description
1	120-0773	20	Bolt-Hex
2		6	Cover-Pump ●
3	120-0777	6	Bolt-Hex
4	120-0778	6	Disc-Diaphragm
5	120-0779	6	Diaphragm
6	120-0780	6	Disc-Backing, Diaphragm
7	120-0781	6	Rod-Connecting
8	99-0861	10	Valve-Pump
9	100-6651	12	O-Ring
10	120-0783	2	Seal-Oil
11	120-0786	2	Seal
12	120-0785	2	Plug
13	133-2877	1	Tube-Banjo, Long
14	133-2878	2	Nut
15	133-2879	2	Nipple-Grease
16	133-2880	2	Cap-Grease Nipple, Yellow
17	136-2252	1	Bolt-Hex
18	133-2875	1	Plate-Nipple, Grease

Ref.	Part Number	Qty.	Description
19	133-2876	1	Tube-Banjo, Short
20	120-0774	4	Bolt-Hex
21	120-0787	1	Foot-Pump
22	133-2830	2	Bolt-Banjo
23	136-2251	4	Gasket
24	133-2821	1	Housing-Pump, Main
25	120-0788	2	Bearing-Ball
26	133-2820	2	Spacer-Metal
27	120-0791	2	Bearing-Ball
28	133-2827	1	Distance Ring
29	133-2825	1	Shaft-Crank
30	120-0793	2	Valve W/Hole
31	120-0794	3	Bolt-Hex
32	133-2822	1	Housing-Pump, Front
33	120-0784	4	Bolt-Hex
34	120-0796	1	Pump Kit
34:1	120-0777	6	Bolt-Hex
34:2	99-0861	10	Valve-Pump

● Not serviced separately

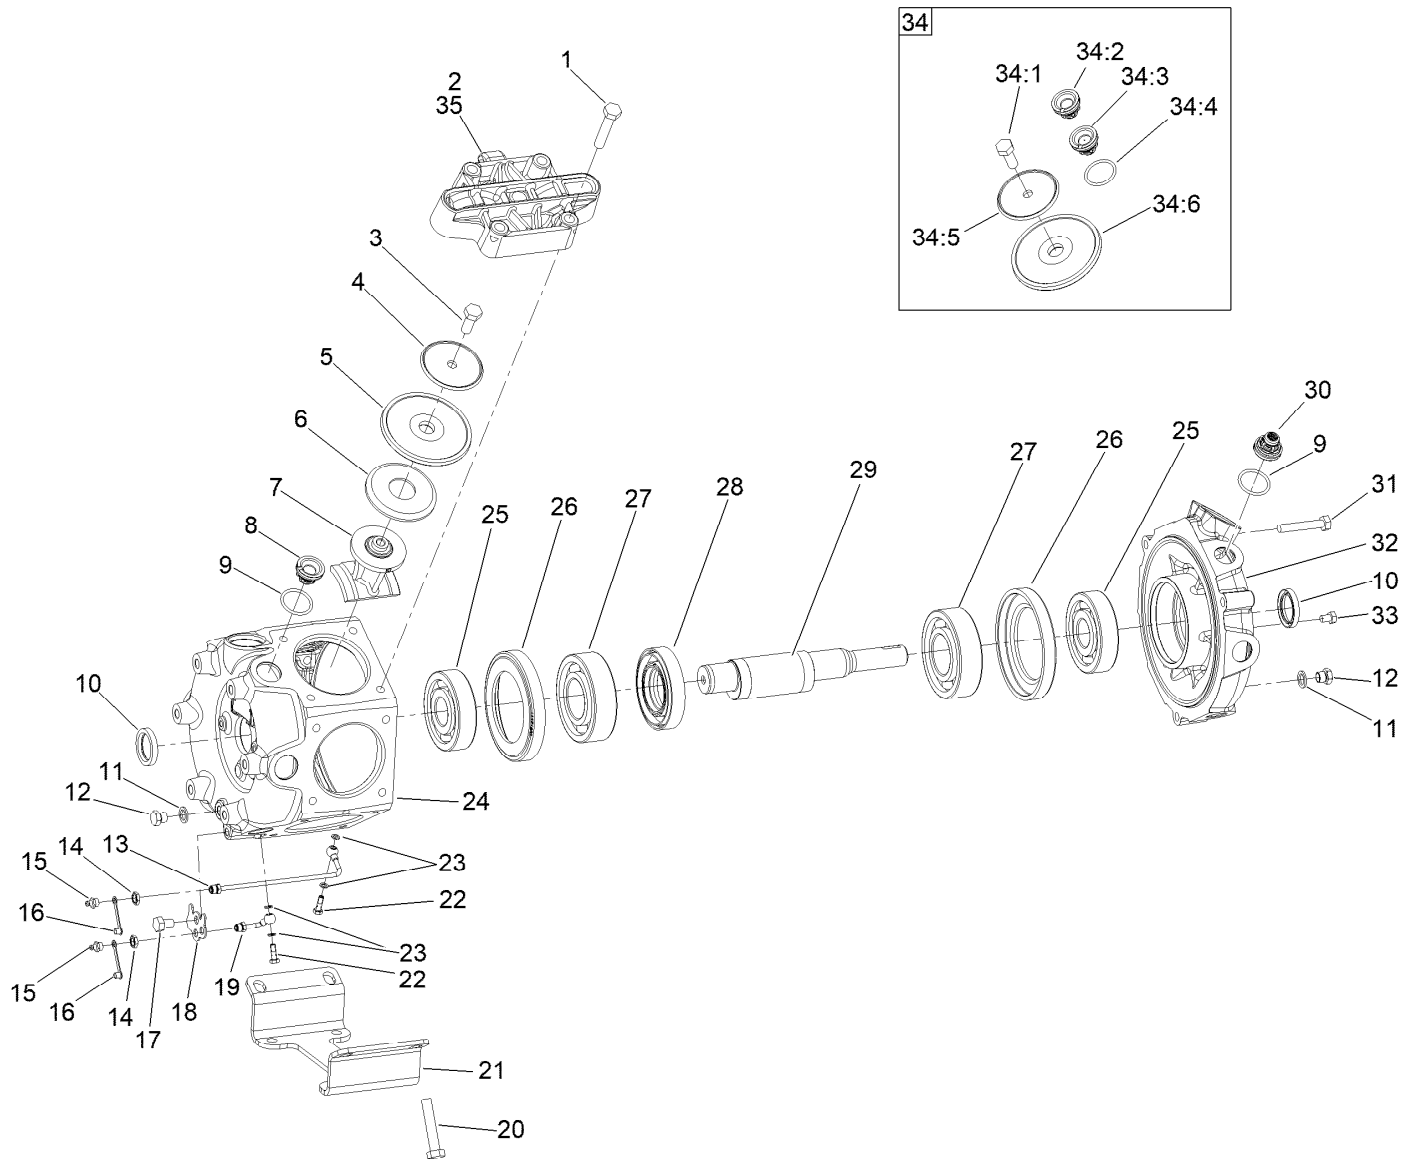


Pump Assembly No. 145-3382 (continued)

Ref.	Part Number	Qty.	Description
34:3	120-0793	2	Valve W/Hole
34:4	100-6651	12	O-Ring
34:5	120-0778	6	Disc-Diaphragm

Ref.	Part Number	Qty.	Description
34:6	120-0779	6	Diaphragm
35	145-3399	1	Pump Head Kit


● Not serviced separately

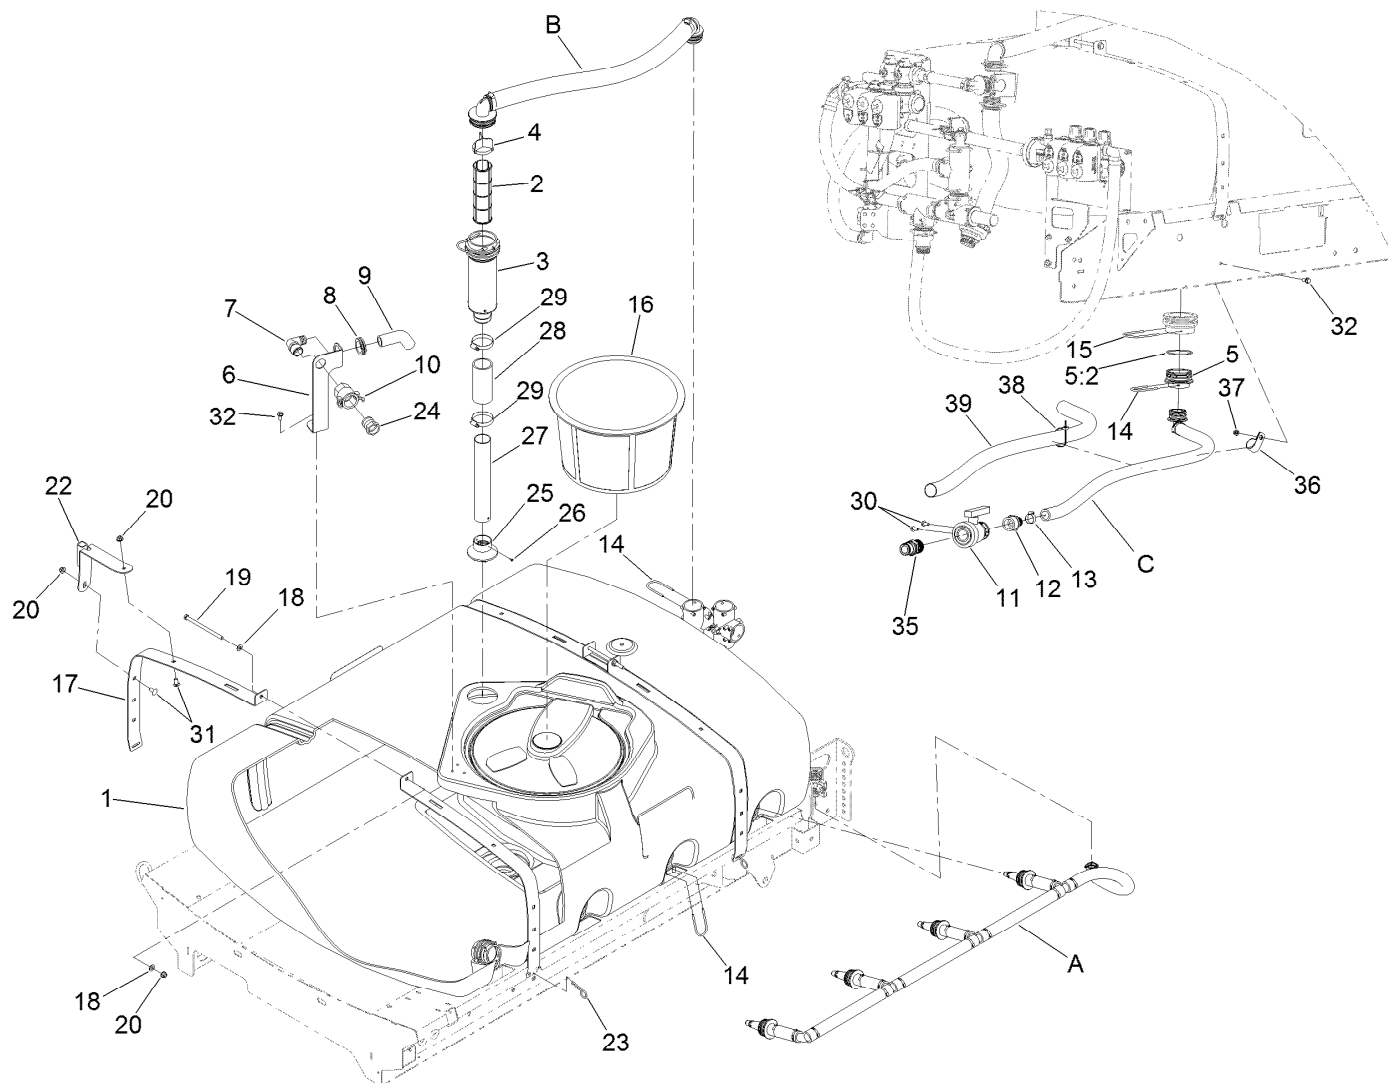

Spray Tank Assembly

Ref.	Part Number	Qty.	Description
1	138-8371	1	200 Gallon Tank
2	100-8642	1	Screen-Suction
3	130-7096	1	Filter ASM
4	100-8641	1	Vane-Screen
5	117-7928	1	Adapter ASM
5:2	100-6989	1	O-Ring
6	110-5082-03	1	Bracket-Anti Siphon
7	41140	1	Elbow
8	110-5090	1	Grommet
9	110-5088	1	Hose-Fill
10	100-6779	1	Coupling-Female
11	108-0069	1	Valve-Ball
12	110-5224	1	Fitting-Barbed, Straight
13	2412-34	1	Clamp-Hose
14	100-8635	6	Fork
15	117-7996	1	Fork
16	119-9419	1	Basket-Filter
17	125-4081-03	4	Band-Tank
18	3256-24	4	Washer-Plain


Ref.	Part Number	Qty.	Description
19	323-58	2	Bolt-TAP, HH
20	104-8301	4	Nut-HF, NI
22	127-3920-03	1	Bracket-Storage
23	3290-343	4	Pin-Hair
24	41316	1	Adapter-Quick
25	100-6714	1	Foot-Tube, Suction
26	108-3270	1	Screw-TAP
27	125-8128	1	Tube-Suction
28	100-8649	1	Hose-Suction
29	2412-130	2	Clamp-Hose
30	3234-7	2	Screw-HHF
31	3231-21	2	Screw-CARR
32	3234-5	2	Screw-HHF
35	132-7787	1	Coupler-Quick
36	114-9566	1	Clamp-R
37	104-8300	1	Nut-HF, NI
38	3290-378	1	Tie-Cable
39	136-2272	1	Tubing-Convolutd, Slit

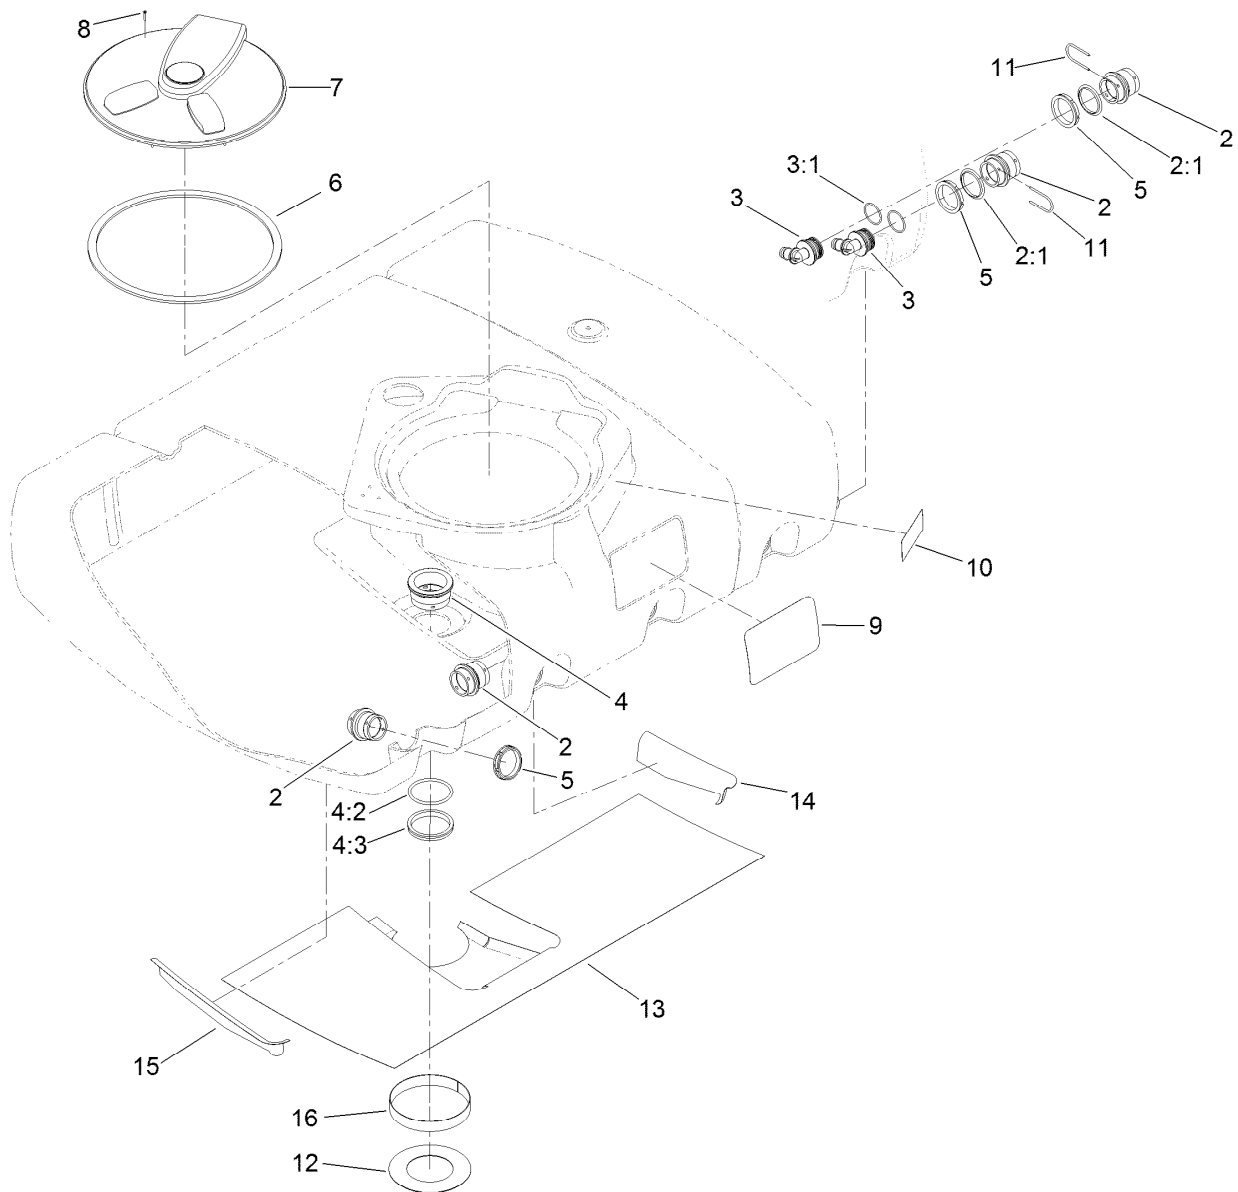

200 Gallon Spray Tank Assembly No. 138-8371


Ref.	Part Number	Qty.	Description
2	108-3358	6	Fitting-Bulkhead
2:1	107-2864	1	Gasket-Bulkhead
3	106-4933	2	Hosebarb ASM
3:1	100-8637	1	O-Ring
4	117-7851	1	Bulkhead ASM
4:2	100-8646	1	Gasket-Bulkhead
4:3	100-8647	1	Nut-Bulkhead
5	100-7051	6	Nut-Bulkhead
6	119-9378	1	Gasket-Lid, Tank
7	138-6283	1	Lid ASM - Sprayer Tank

Ref.	Part Number	Qty.	Description
8	107-8635	8	Screw-PFH
9	125-8064	2	Decal-Tank
10	120-0622	1	Decal-Warning
11	100-8635	2	Fork
12	127-3967	1	Shield-Sump, Bottom
13	127-3960	1	Shield-Sump, Center
14	127-3962	1	Shield-Sump, Rear
15	127-3961	1	Shield-Sump, Front
16	127-3988	1	Shield-Sump, Side

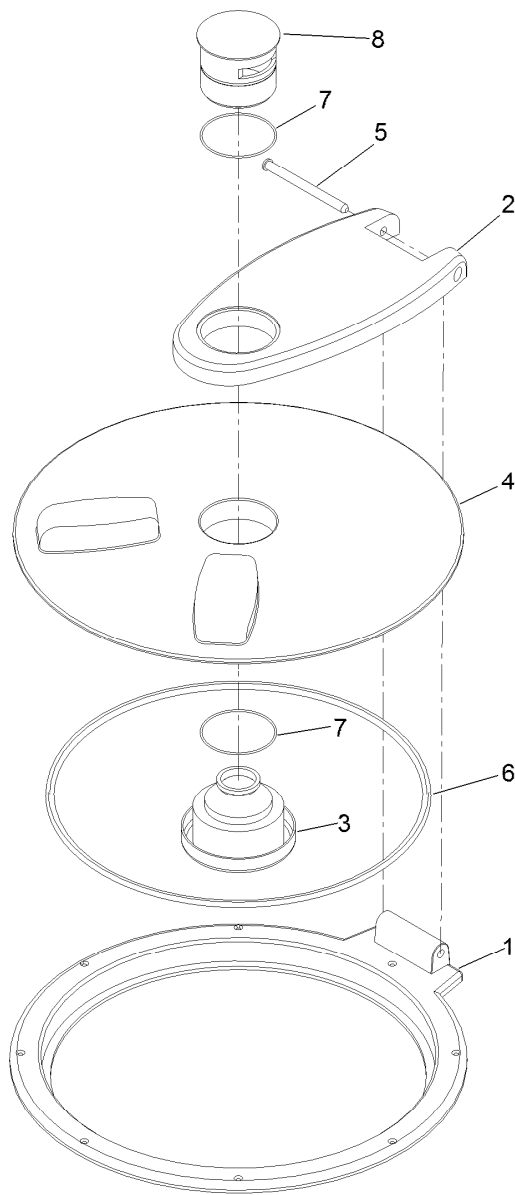


Spray Tank Lid Assembly No. 138-6283

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-9381	1	Ring-Lid
2	119-9382	1	Arm-Lid
3	119-9383	1	Vent-Lid
4	119-9384	1	Cover-Lid
5	119-9385	1	Pin-Pivot
6	138-6281	1	Seal - Tank Lid
7	119-9386	2	O-Ring
8	119-9387	1	Cap-Lid

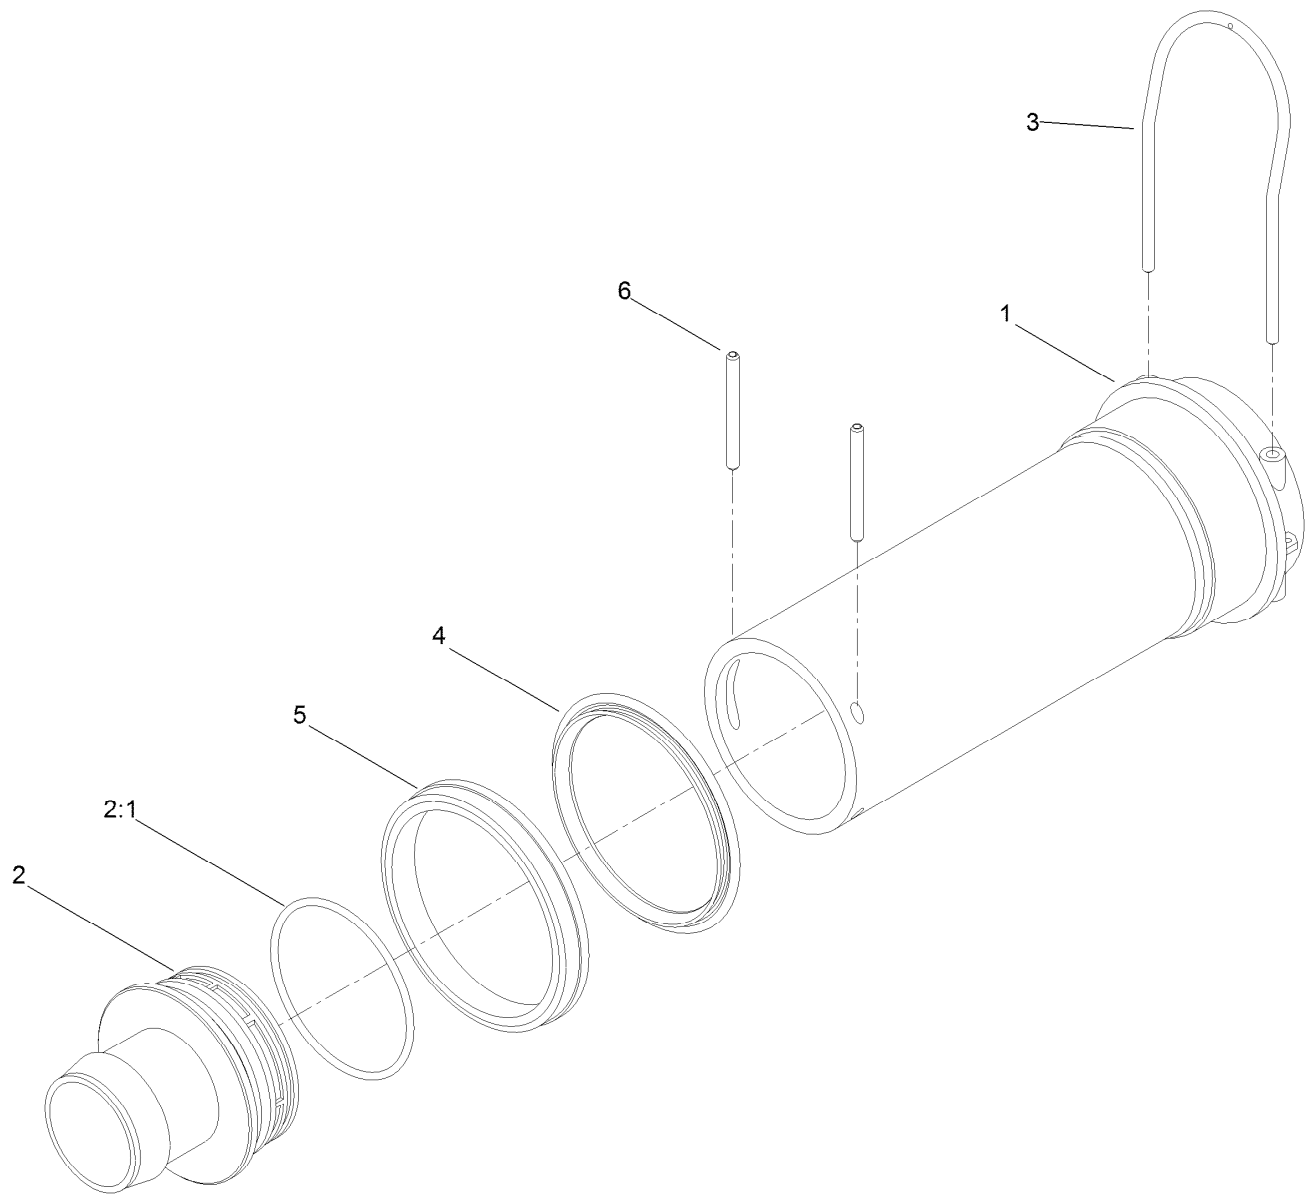

Filter Assembly No. 130-7096

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-8643	1	Housing-Filter
2	106-4942	1	Hosebarb-Straight
2:1	100-6989	1	O-Ring
3	100-8636	1	Fork-Special
4	100-8646	1	Gasket-Bulkhead
5	100-8647	1	Nut-Bulkhead
6	100-8644	2	Pin-Expansion

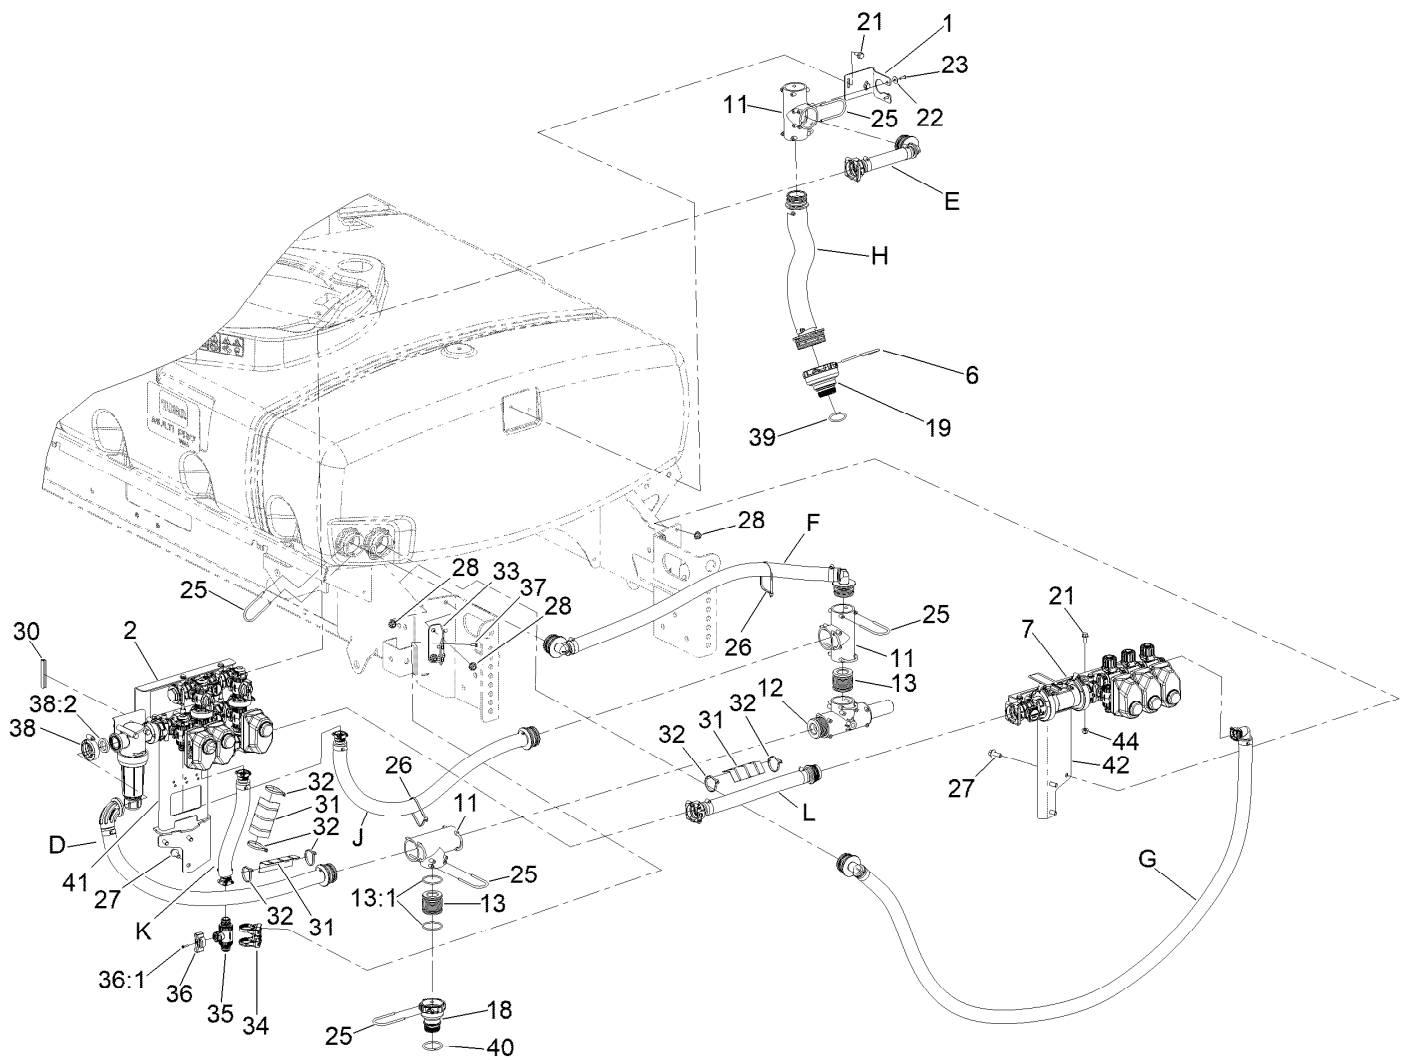


Spray Valve Assembly

Ref.	Part Number	Qty.	Description
1	131-3704	1	Bracket-Fitting, Tee
2		1	Manifold ASM, Agitation ●
6	117-7996	1	Fork
7		1	Manifold ASM, Section ●
11	100-6704	3	Tee
12	117-7874	1	Relief Valve ASM
13	106-4947	2	Connector
13:1	100-8637	2	O-Ring
18	133-2881	1	Fitting
19	133-2883	1	Fitting
21	3234-47	6	Screw-HHF
22	3256-61	2	Washer-Flat
23	32144-32	2	Screw-PPH
25	100-8635	12	Fork
26	3290-379	2	Tie-Cable
27	3234-42	6	Screw-HHF
28	104-8301	6	Nut-HF, NI
30	131-9636	1	Trim-Manifold, Agitation

Ref.	Part Number	Qty.	Description
31	AU112950	3	Protector-Hose
32	3290-378	6	Tie-Cable
33	132-4325-03	1	Mount-Bracket, Agitation
34	132-4302	1	Mount-Valve
35	131-0249	1	On/Off 2-Way Valve Kit
36	131-0264	1	Agitation Throttling Handle Kit
36:1	131-0263	1	Screw-Handle
37	33113-012	4	Screw-HH
38	127-9829	1	Clamp/Gasket Kit
38:2	127-1145	1	Gasket-Flange
39	133-2882	1	O-Ring
40	133-2884	1	O-Ring
41	161-4124-03	1	Mount-Valves, Mpwm [black]
42	147-4686-03	1	Mount-Valves, Boom Mpwn [black]
44	104-8300	4	Nut-HF, NI


● Not serviced separately

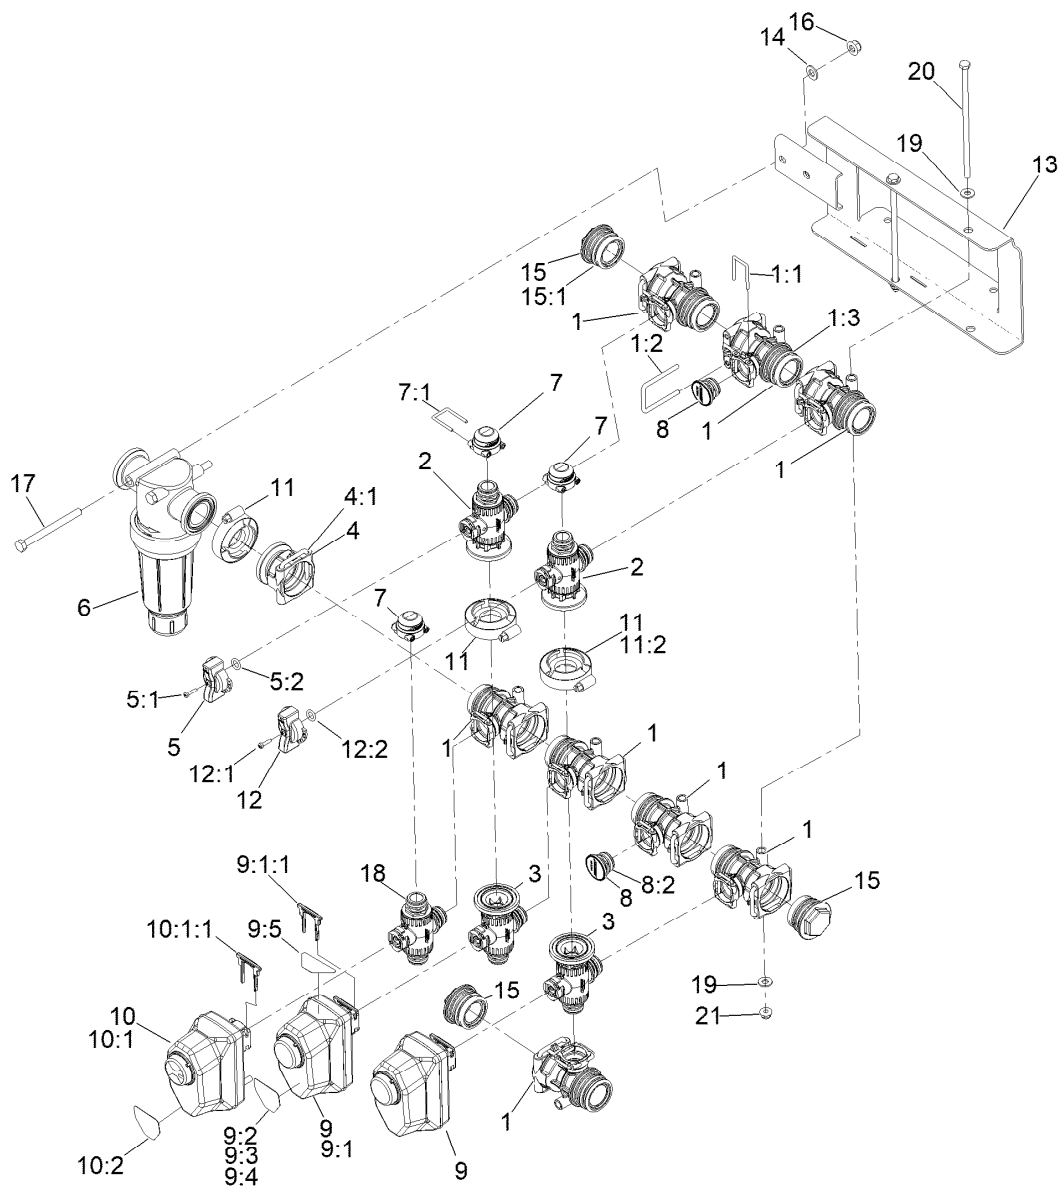

Agitation Manifold Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	147-3187	8	Kit-Qf, Manifold Tee	9	140-7377	2	Kit-Actuator Pi, On/Off
1:1	147-3185	1	Pin-Fork, Qf Small	9:1		1	Actuator - On/Off ●
1:2	147-3186	1	Pin-Fork, Qf Large	9:1:1	130-7301	1	Hairpin-Actuator
1:3	147-3188	1	Seal-Manifold, Qf Series	9:2	127-6979	1	Decal-Valve, Agitation
2	161-4110	2	Kit-Tx2 Manifold Valve, Reg	9:3	127-6981	1	Decal-Valve, On/Off
3	147-3192	2	Kit-Tx2, 3Way Flange Manifold	9:4	127-6982	1	Decal-Valve, Master Boom
4	147-3189	1	Kit-Qf, Flange-M100 Female	9:5	127-6976	1	Decal-Valve, Bypass Adjust
4:1	147-3186	1	Pin-Fork, Qf Large	10	144-6163	1	Kit-Actuator Regulating Pi
5	131-0265	1	Agitation Regulating Handle Kit	10:1		1	Actuator-Regulating Pi ●
5:1	131-0263	1	Screw-Handle	10:1:1	130-7301	1	Hairpin-Actuator
5:2	127-1197	1	O-Ring-Stem	10:2	127-6984	1	Decal-Valve, Regulating
6	131-3791	1	Filter-Pressure	11	127-9829	3	Clamp/Gasket Kit
7	127-9811	3	Fitting-Cap, Female	11:2	127-1145	1	Gasket-Flange
7:1	133-0398	1	Pin-Fork	12	131-0266	1	Master Regulating Handle Kit
8	127-9810	2	Male Cap Fitting Kit	12:1	131-0263	1	Screw-Handle
8:2	127-1187	1	O-Ring, Endcap	12:2	127-1197	1	O-Ring-Stem
				13	161-4105	1	Agitation-Mount, ASM

● Not serviced separately

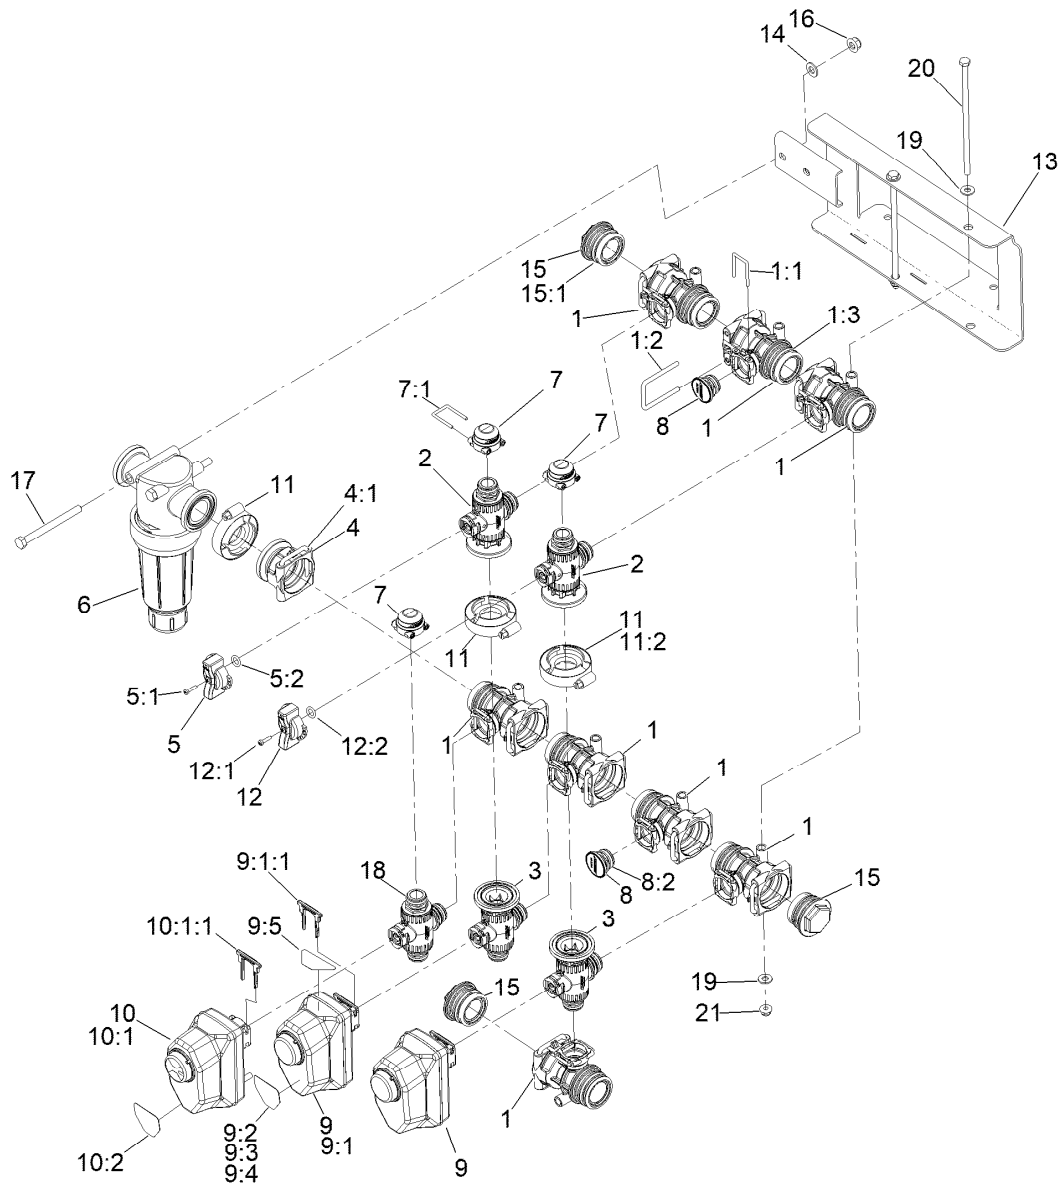


Agitation Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
14	3256-23	2	Washer-Plain
15	147-3193	3	Kit Qf, Plug-Male W/O Port
15:1	147-3188	1	Seal-Manifold, Qf Series
16	104-8300	2	Nut-HF, NI
17	322-22	2	Screw-HH

Ref.	Part Number	Qty.	Description
18	161-4111	1	Kit-Tx2 Manifold Qd, Reg
19	3256-22	4	Washer-Flat
20	161-4128	2	Screw-HH
21	104-7201	2	Nut-HF, NI


● Not serviced separately

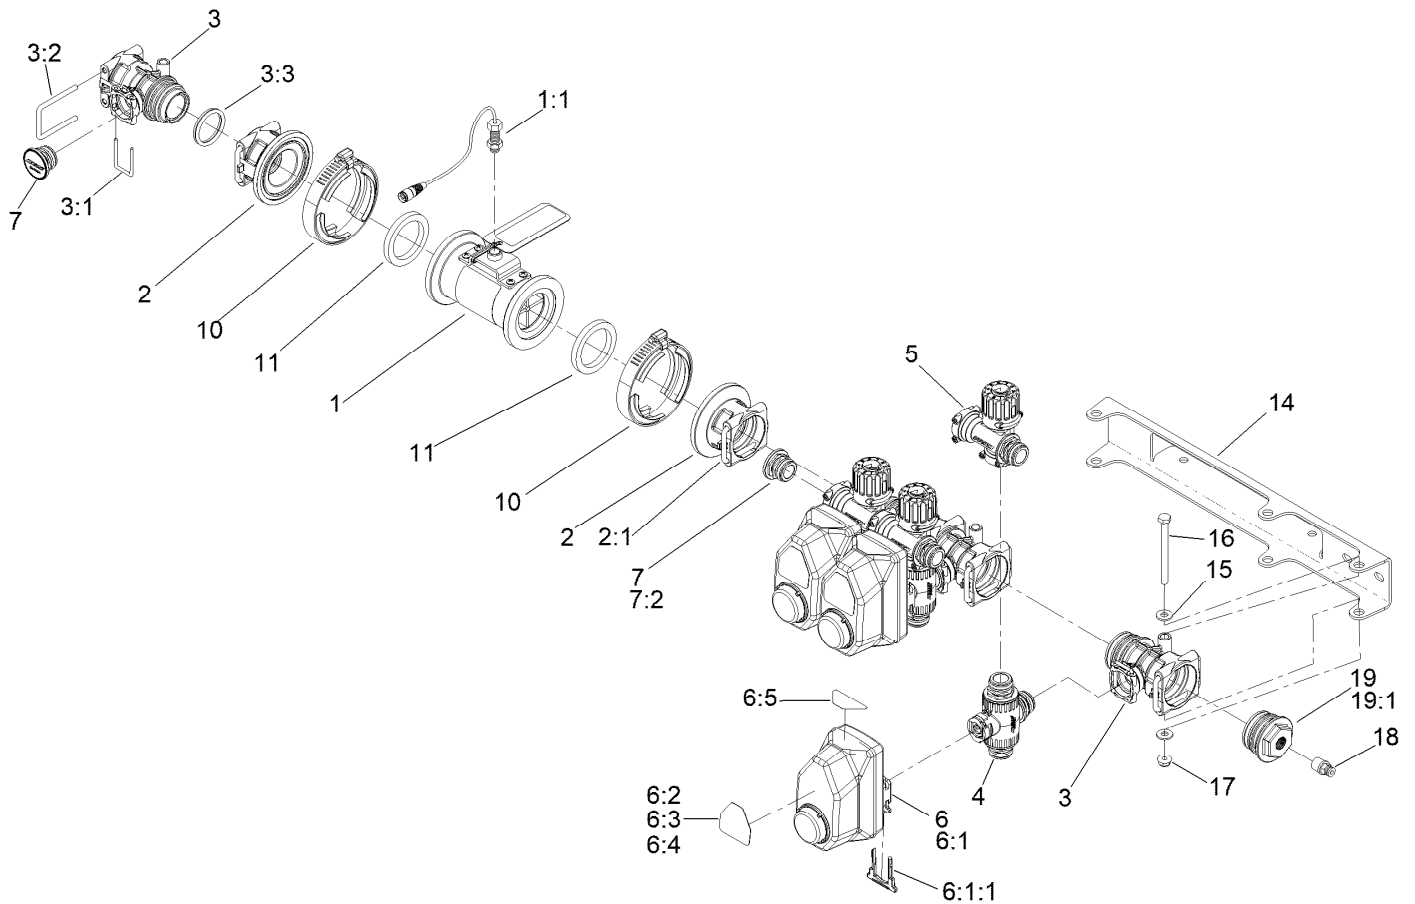

Section Manifold Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	147-4730	1	Flow Meter ASM	6:3	127-6981	1	Decal-Valve, On/Off
1:1	147-4733	1	Sensor - Flow Meter, Fm270Plf	6:4	127-6982	1	Decal-Valve, Master Boom
2	147-3197	2	Kit Qf, Flange-M200 Female	6:5	127-6976	1	Decal-Valve, Bypass Adjust
2:1	147-3186	1	Pin-Fork, Qf Large	7	127-9810	2	Male Cap Fitting Kit
3	147-3187	4	Kit-Qf, Manifold Tee	7:2	127-1187	1	O-Ring, Endcap
3:1	147-3185	1	Pin-Fork, Qf Small	10	104-9089	2	Clamp-Screw, Worm
3:2	147-3186	1	Pin-Fork, Qf Large	11	104-9090	2	Gasket
3:3	147-3188	1	Seal-Manifold, Qf Series	14	147-4659	1	Brkt-Section
4	147-3183	3	Kit-Tx2 - 3Way Manifold	15	3256-22	6	Washer-Flat
5	127-9805	3	Bypass Valve ASM	16	321-23	3	Screw-HH
6	140-7377	3	Kit-Actuator Pi, On/Off	17	104-7201	3	Nut-HF, NI
6:1		1	Actuator - On/Off ●	18	131-3709	1	Coupler
6:1:1	130-7301	1	Hairpin-Actuator	19	161-4187	1	Kit Qf, Plug-Male W/Port
6:2	127-6979	1	Decal-Valve, Agitation	19:1	147-3188	1	Seal-Manifold, Qf Series


● Not serviced separately

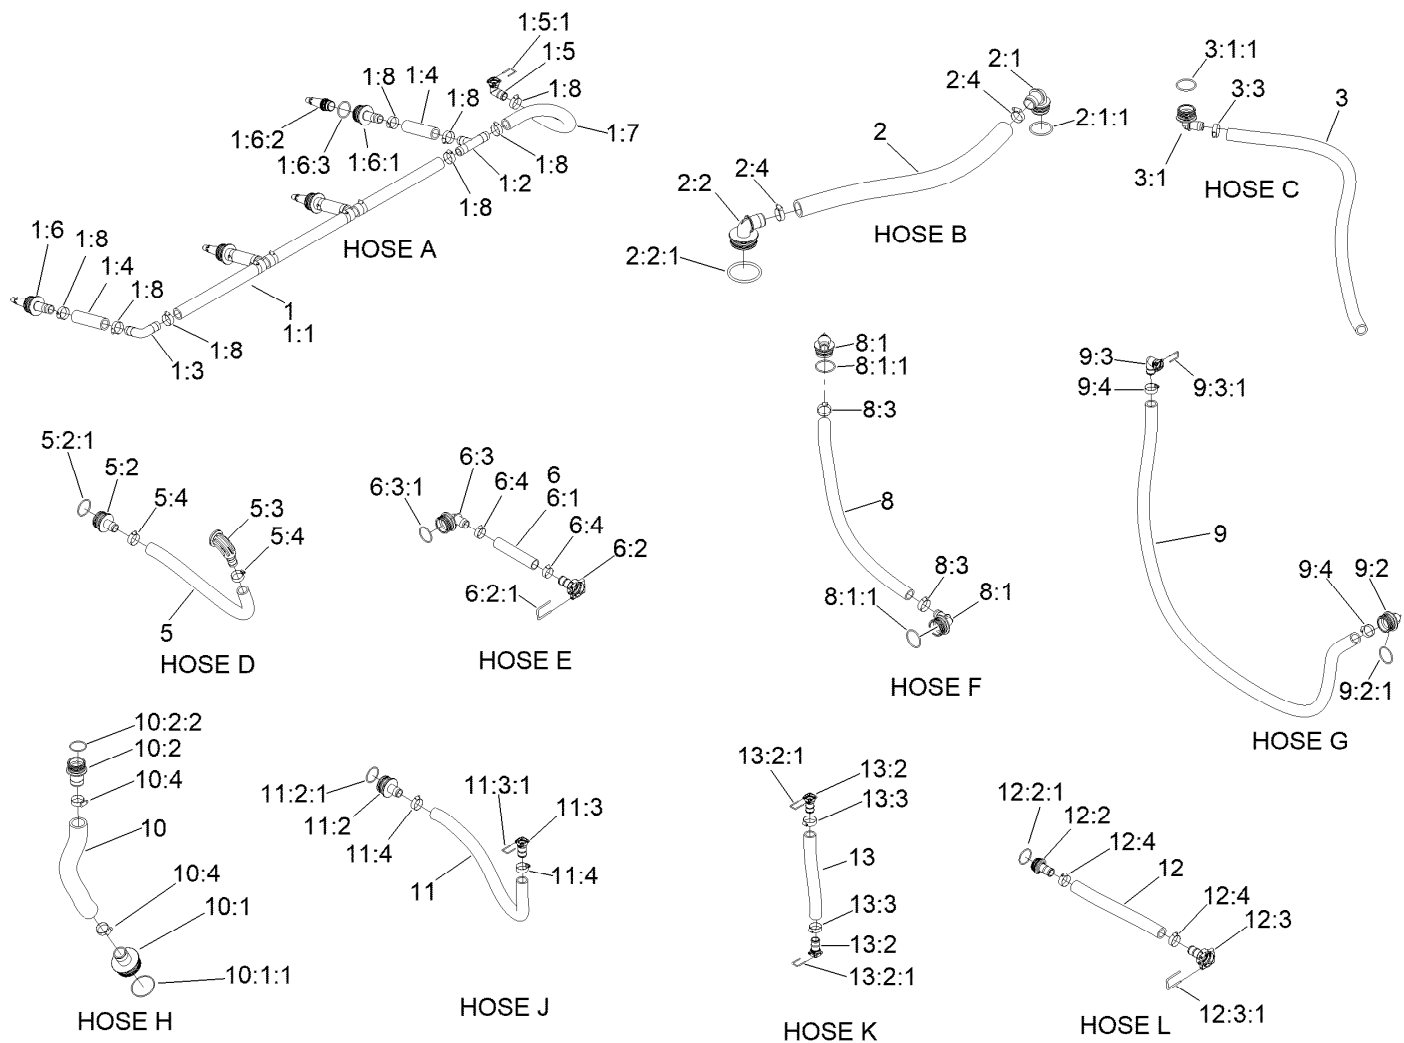

Hose Assembly

Ref.	Part Number	Qty.	Description
1	139-3095	1	Hose-Agitation, ASM
1:1	117-7862	3	Hose-Main Agitation
1:2	117-7866	3	Tee-Hosebarb
1:3	117-7867	1	Elbow-Hosebarb
1:4	119-0441	4	Hose-Agitaiton
1:5	131-0213	1	90 DEG Barb Fitting Kit
1:5:1	133-0398	1	Pin-Fork
1:6	131-3731	4	Agitation Nozzle ASM
1:6:1	131-3732	1	Fitting-Barb
1:6:2	120-8579	1	Nozzle-Agitation
1:6:3	121-4996	1	O-Ring
1:7	131-3785	1	Hose-Supply
1:8	2412-34	16	Clamp-Hose
2	125-0645	1	Upper Suction Hose ASM
2:1	110-5156	1	Suction Elbow ASM
2:1:1	100-8637	1	O-Ring
2:2	106-4952	1	Hosebarb-90 DEG
2:2:1	100-6989	1	O-Ring
2:4	41327	2	Clamp-Hose
3	133-2868	1	Drain Hose ASM
3:1	106-4933	1	Hosebarb ASM


Ref.	Part Number	Qty.	Description
3:1:1	100-8637	1	O-Ring
3:3	2412-34	1	Clamp-Hose
5	132-4329	1	Hose-Supply
5:2	106-4932	1	Hosebarb-Straight
5:2:1	100-8637	1	O-Ring
5:3	131-0241	1	Fitting-Elb 90
5:4	2412-34	2	Clamp-Hose
6	161-4154	1	Hose ASM, Agitation Bypass
6:1	161-4165	1	Hose-Agitation, Bypass
6:2	161-4117	1	Kit-Fitting, Qf 1" Barb Female
6:2:1	147-3186	1	Pin-Fork, Qf Large
6:3	106-4933	1	Hosebarb ASM
6:3:1	100-8637	1	O-Ring
6:4	2412-34	2	Clamp-Hose
8	125-0639	1	Regulating Hose ASM
8:1	106-4933	2	Hosebarb ASM
8:1:1	100-8637	1	O-Ring
8:3	2412-34	2	Clamp-Hose
9	132-4333	1	Hose-Bypass
9:2	106-4933	1	Hosebarb ASM

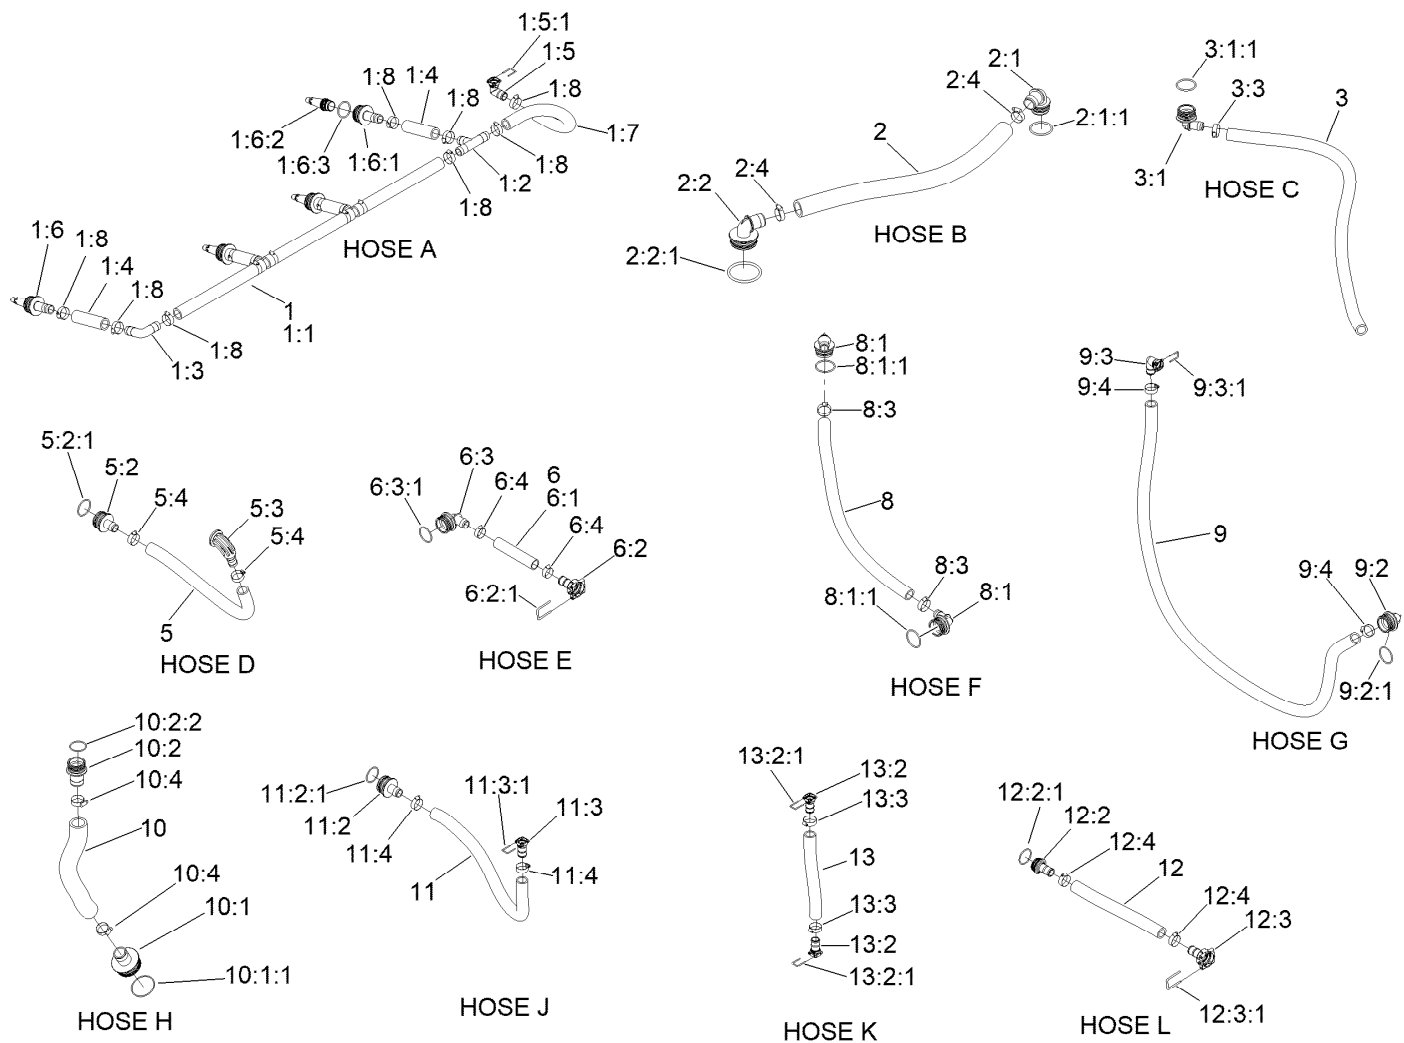

Hose Assembly (continued)

Ref.	Part Number	Qty.	Description
9:2:1	100-8637	1	O-Ring
9:3	131-0213	1	90 DEG Barb Fitting Kit
9:3:1	133-0398	1	Pin-Fork
9:4	2412-34	2	Clamp-Hose
10	125-0643	1	Lower Suction Hose ASM
10:1	117-7965	1	Hosebarb ASM
10:1:1	100-6989	1	O-Ring
10:2	117-7982	1	Hosebarb ASM
10:2:2	100-8637	1	O-Ring
10:4	41327	2	Clamp-Hose
11	132-4330	1	Hose-Regulating
11:2	106-4932	1	Hosebarb-Straight
11:2:1	100-8637	1	O-Ring
11:3	127-9806	1	Fitting Kit


Ref.	Part Number	Qty.	Description
11:3:1	133-0398	1	Pin-Fork
11:4	2412-34	2	Clamp-Hose
12	161-4127	1	Hose ASM, Flow-Meter
12:2	161-4116	1	Kit-Fitting, Qf 1" Barb Male
12:2:1	147-3188	1	Seal-Manifold, Qf Series
12:3	161-4117	1	Kit-Fitting, Qf 1" Barb Female
12:3:1	147-3186	1	Pin-Fork, Qf Large
12:4	2412-34	2	Clamp-Hose
13	132-4326	1	Hose-Agitation, Supply
13:2	127-9806	2	Fitting Kit
13:2:1	133-0398	1	Pin-Fork
13:3	2412-34	2	Clamp-Hose

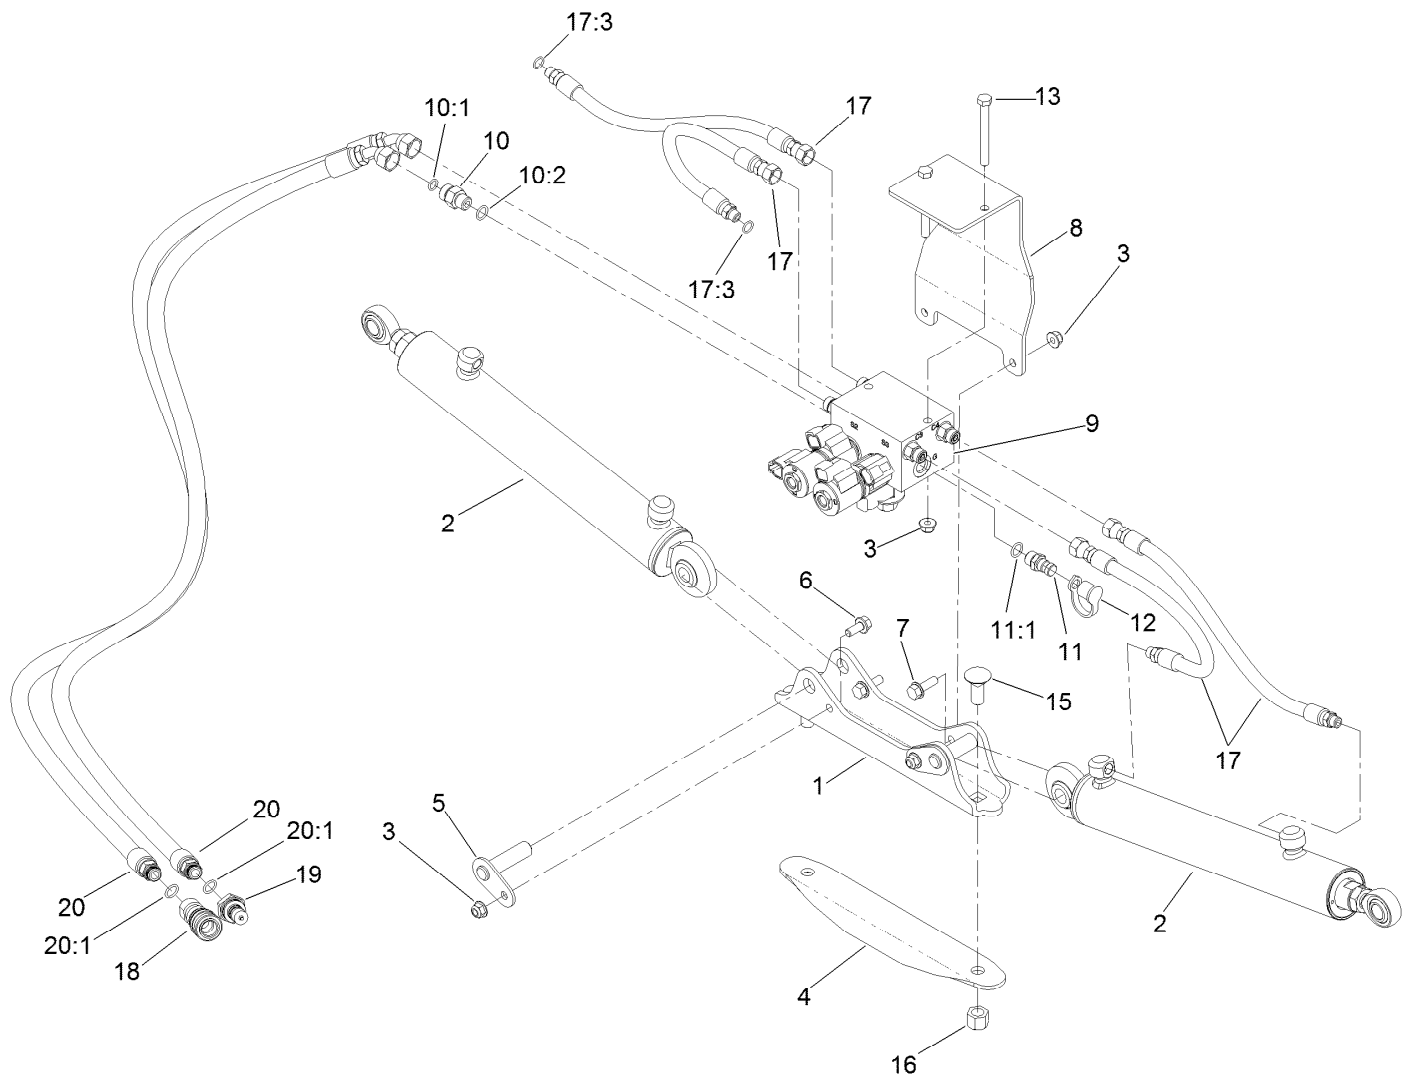

Boom Lift Assembly

Ref.	Part Number	Qty.	Description
1	119-4856-03	1	Plate-Mount, Cylinders
2	117-0701	2	Hydraulic Cylinder ASM
3	104-8300	6	Nut-HF, NI
4	131-0297-03	1	Plate-Stiffener, Boom
5	112-7884	2	Pin-Pivot
6	110-5053	2	Screw-HHF
7	3234-29	2	Screw-HHF
8	130-8201-03	1	Mount-Valve
9	136-2400	1	On-Off Boom Lift Valve ASM
10	340-2	2	Fitting-Straight
10:1	237-22	1	O-Ring
10:2	237-42	1	O-Ring

Ref.	Part Number	Qty.	Description
11	59-7410	1	Fitting-Diagnostic
11:1	237-42	1	O-Ring
12	354-79	1	Cap-Dust
13	322-14	2	Screw-HH
15	110-5067	2	Screw-CARR
16	99-5107	2	Nut-HF Nylock
17	119-4859	4	Hose ASM
17:3	237-78	1	O-Ring
18	106-7968	1	Coupler-Quick, Female
19	106-7969	1	Coupler-Quick, Male
20	127-9717	2	Hose ASM
20:1	237-42	1	O-Ring

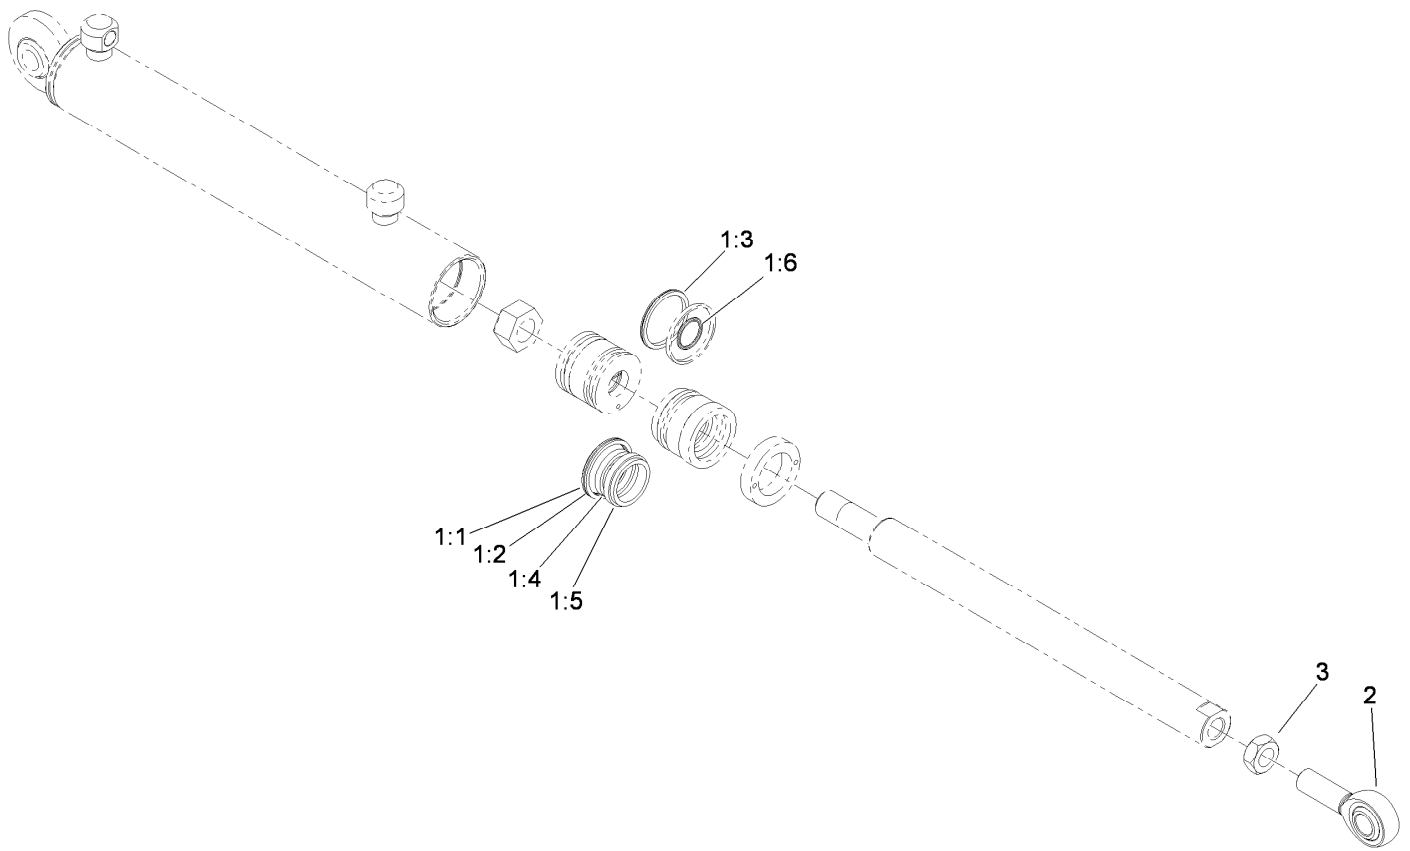


Hydraulic Cylinder Assembly No. 117-0701

Ref.	Part Number	Qty.	Description
1	119-8026	1	Seal Kit ●
1:1		1	O-Ring ■
1:2		1	Ring-Backup ■
1:3		1	Bp Seal ■
1:4		1	Bs Seal ■
1:5		1	Dust Seal ■
1:6		1	O-Ring ■
2	119-8027	1	Rod End
3	3220-6	1	Nut-Jam

● Not illustrated


■ Not serviced separately

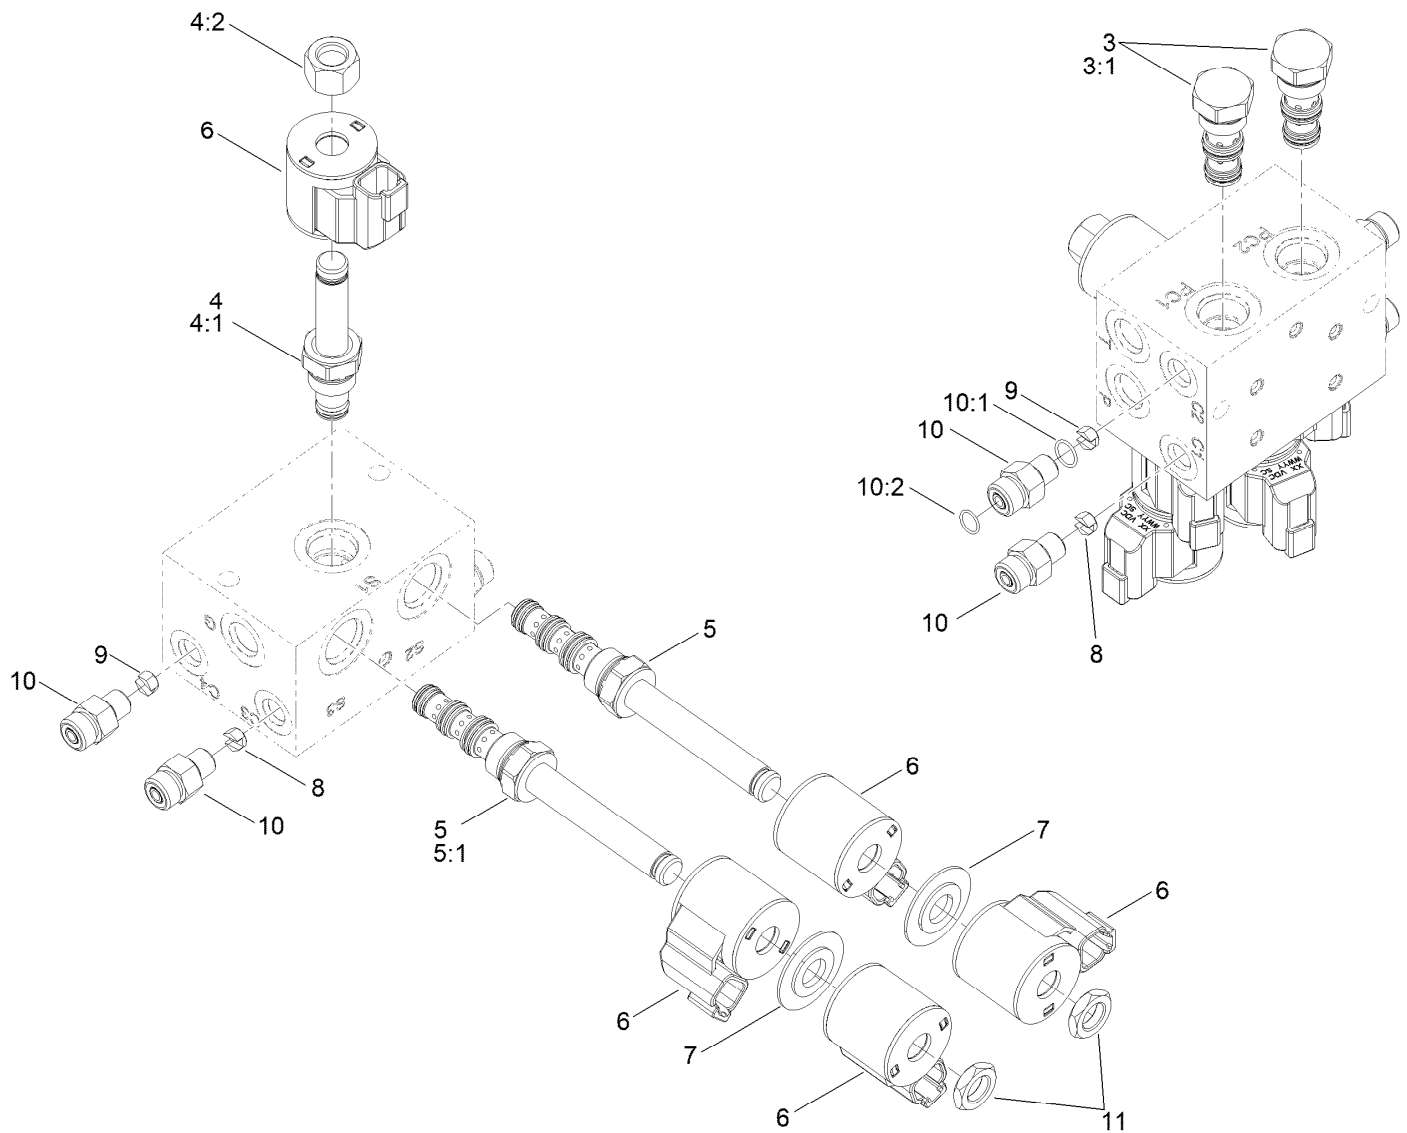

On-Off Boom Lift Valve Assembly No. 136-2400


Ref.	Part Number	Qty.	Description
3	136-2430	2	Valve-Check, Po
3:1	120-0886	1	Seal Kit
4	107-7517	1	Valve-Solenoid
4:1	105-9156	1	Seal Kit
4:2	107-7812	1	Nut-Solenoid
5	120-2587	2	Valve-Solenoid
5:1	112-6520	1	Seal Kit ●
6	119-8036	5	Coil
7	120-2586	2	Spacer-Coil
8	110-8903	2	Orifice-Control, Flow (0.055)
9	125-8849	2	Orifice-Flow Control
10	340-92	4	Fitting-Straight
10:1	237-78	1	O-Ring
10:2	237-21	1	O-Ring
11	110-2634	2	Nut-Coil

● Not illustrated

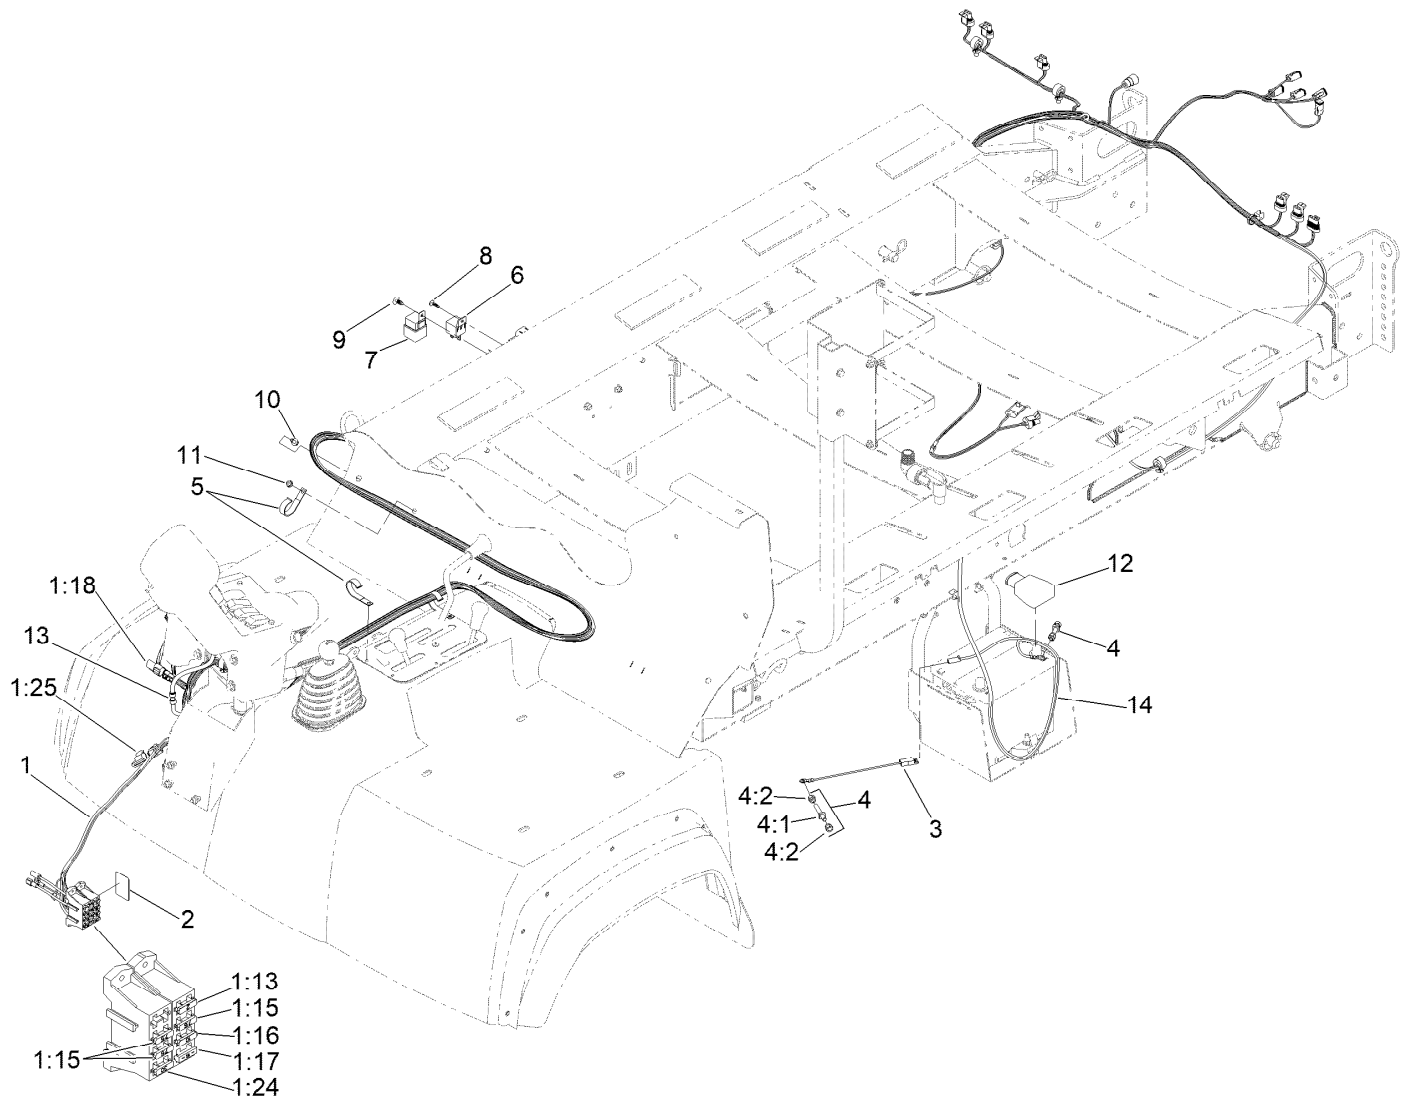


Electrical Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	122-3542	1	Harness-Wire, Mpwm [m2M]	4:2	32180-108	2	Nut-Hex Shoulder
1:13	94-6710	1	Fuse-2 Amp	5	106-1429	3	Clamp-J
1:15	114241	2	Fuse-Blade, 7.5 Amp	6	99-7435	1	Relay
1:16	218-578	1	Fuse-Blade, 10 Amp	7	99-7430	1	Relay-Mini
1:17	109355	1	Fuse-Blade, 15 Amp	8	125-8067	1	Plug-Plastic
1:18	32180-043	2	Resistor-120 Ohm	9	104-0395	1	Plug-Plastic
1:24	109103	1	Fuse-Blade, 30 Amp	10	3234-13	1	Screw-HHF
1:25	32180-089	1	Cap-Plug, 3 Way	11	104-7201	1	Nut-HF, NI
2	127-3966	1	Decal-Fuse Block	12	32180-110	1	Insulator-Lead Cast
3	108-9455	1	Harness-Wire, Fusible Link	13	132-7773	1	Connector-Hose
4	112-9921	2	Bolt ASM	14	122-3543	1	Harness-Wire, Mpwm [m2M]
4:1	32180-107	1	Bolt-Clamp, Battery				

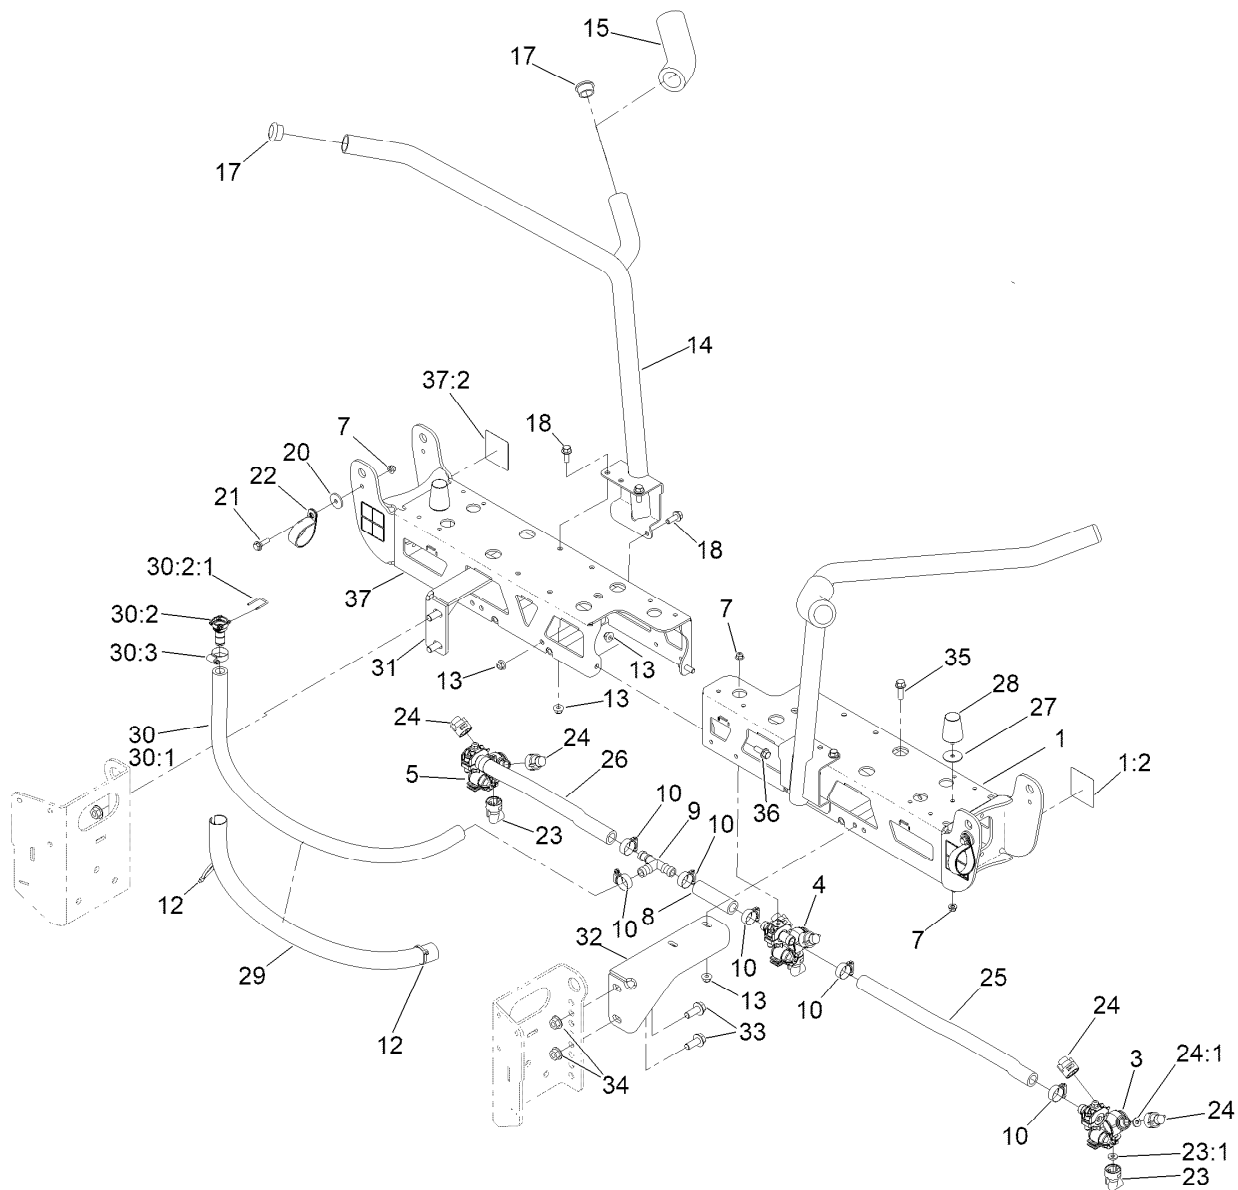

Center Boom Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	136-0381	1	Boom-LH	24	95-9187	6	Cap-Blank
1:2	120-0617	2	Decal-Warning, Pinch, Crush	24:1	40998	1	Seat-Gasket
3	108-3725	1	LH Single Body Turret ASM	25	108-3735	1	Hose-Boom, Center (LH)
4	108-3727	1	Double Turret Body ASM	26	108-3718	1	Hose-Boom, Center (RH)
5	108-3726	1	RH Single Body Turret ASM	27	3256-68	2	Washer-Flat
7	104-8300	7	Nut-HF, NI	28	110-5070	2	Bumper
8	108-3717	1	Hose-Boom	29	127-3923	1	Conduit-Convolutd
9	108-3439	1	Tee	30	132-4335	1	Hose-Center Boom
10	2412-129	7	Clamp-Hose	30:1	127-9770	1	Hose-Shutoff
12	3290-378	2	Tie-Cable	30:2	127-9807	1	Straight Fitting Kit
13	104-8301	12	Nut-HF, NI	30:2:1	133-0398	1	Pin-Fork
14	161-4174	2	Cradle ASM	30:3	2412-129	1	Clamp-Hose
15	108-3457	2	Spacer	31	127-8955-03	1	Mount-Boom
17	108-3489	4	Cap-Tube	32	127-8956-03	1	Mount-Boom
18	110-5052	6	Screw-HHF	33	110-5057	4	Capscrew-HHF
20	108-3743	2	Washer	34	139-1689	4	Nut-HF
21	108-3744	2	Screw-Shoulder	35	110-5050	4	Screw-HHF
22	114-9566	2	Clamp-R	36	3234-42	2	Screw-HHF
23	95-9186	3	Cap	37	136-0382	1	Boom-RH
23:1	40998	1	Seat-Gasket	37:2	120-0617	2	Decal-Warning, Pinch, Crush

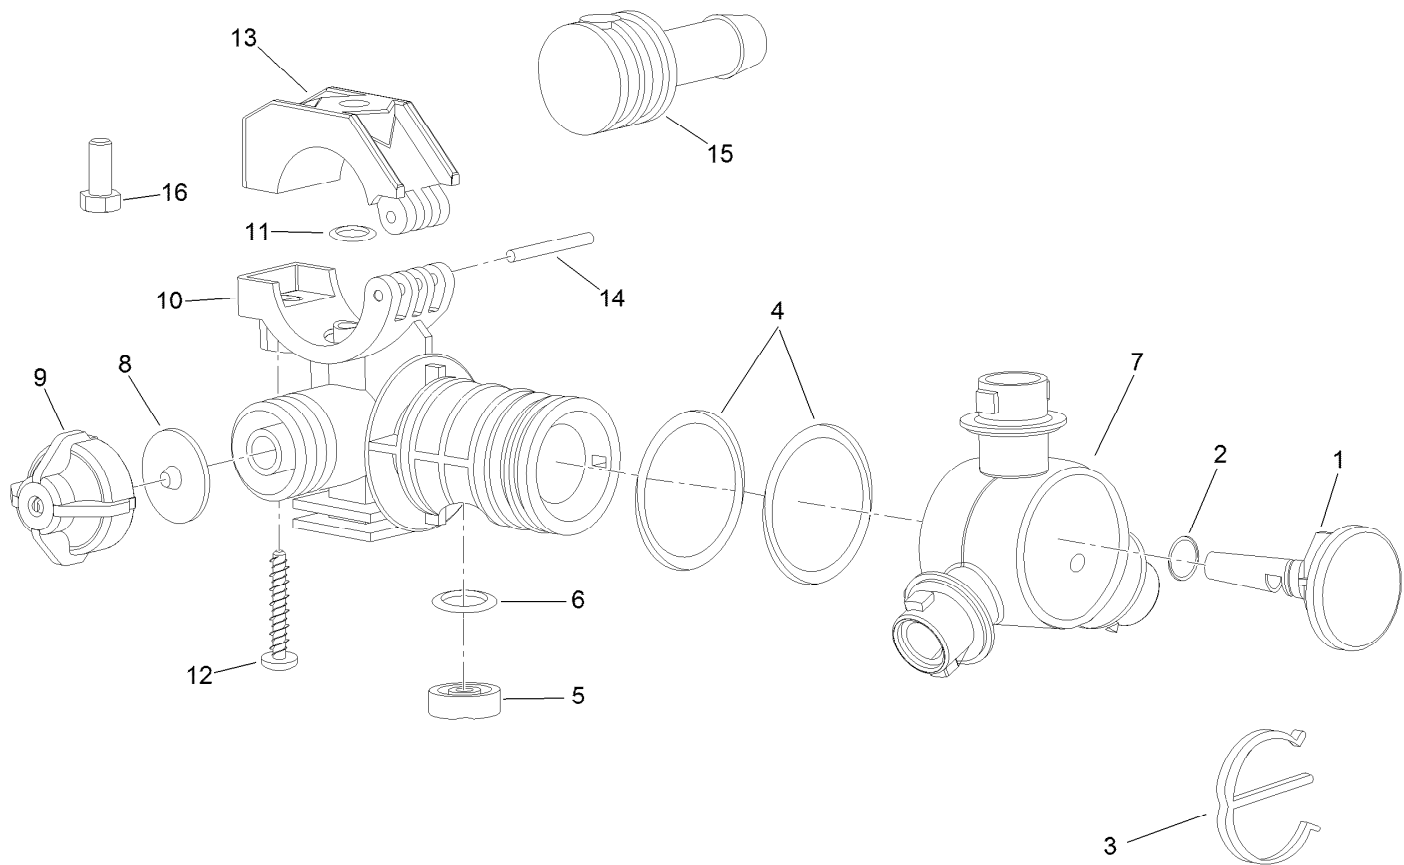

LH Single Turret Body Assembly No. 108-3725

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9201	1	Shank-Hose
16	322-3	1	Screw-HH

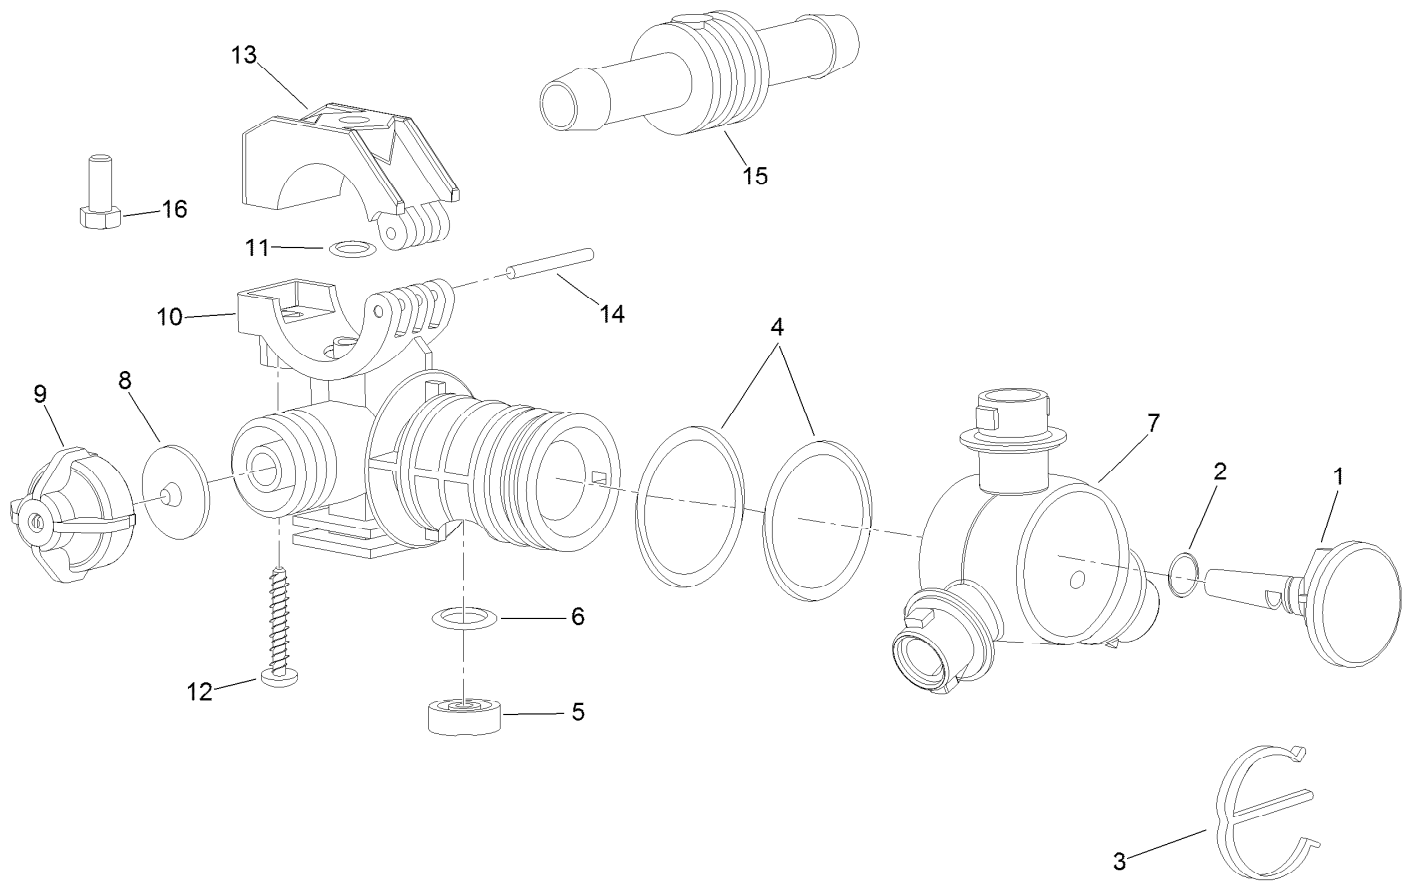

Double Turret Body Assembly No. 108-3727

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9202	1	Shank-Hose
16	322-3	1	Screw-HH

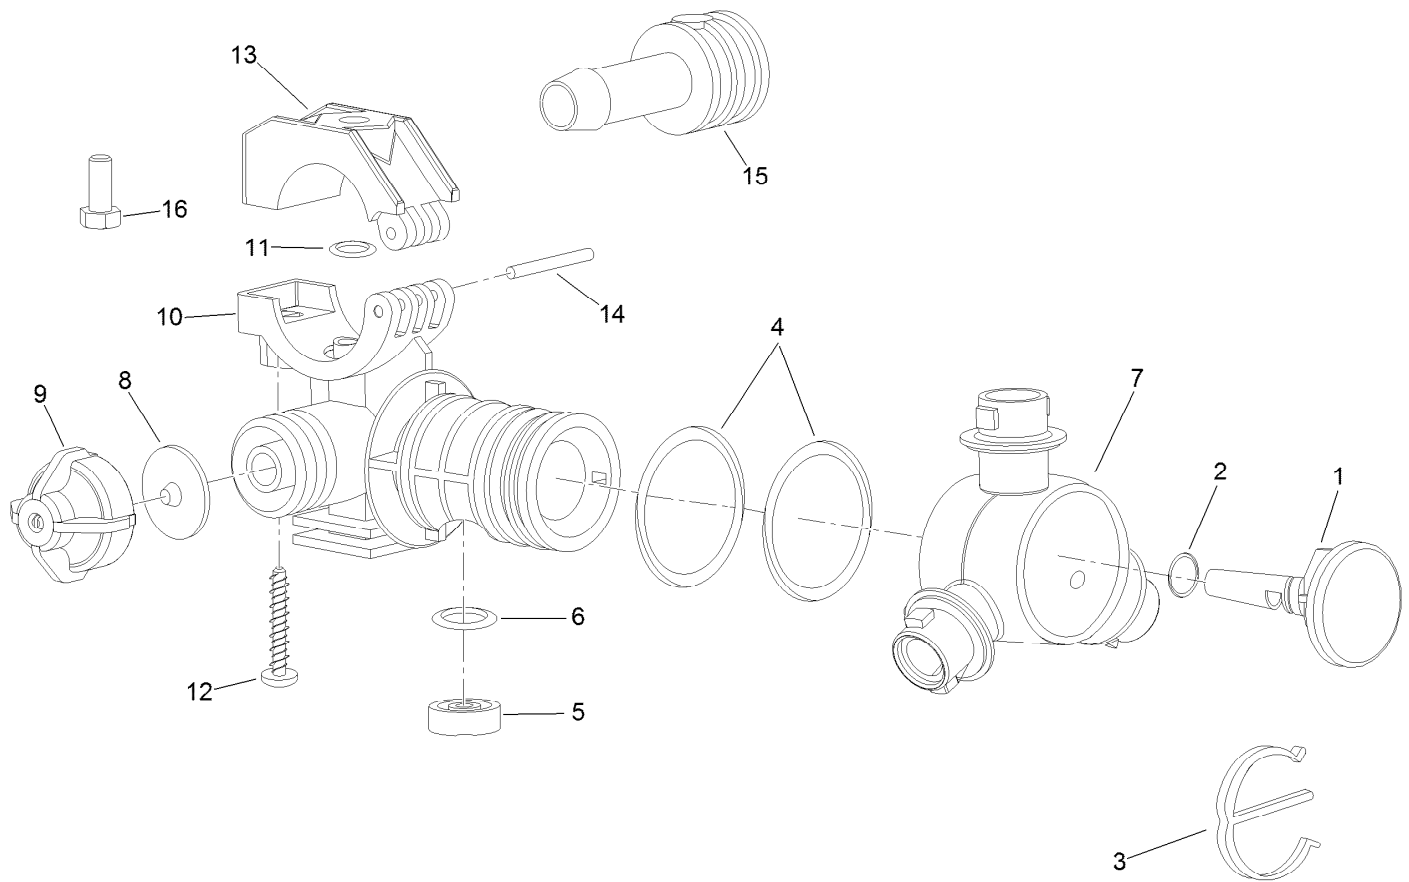

RH Single Body Turret Assembly No. 108-3726

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9201	1	Shank-Hose
16	322-3	1	Screw-HH

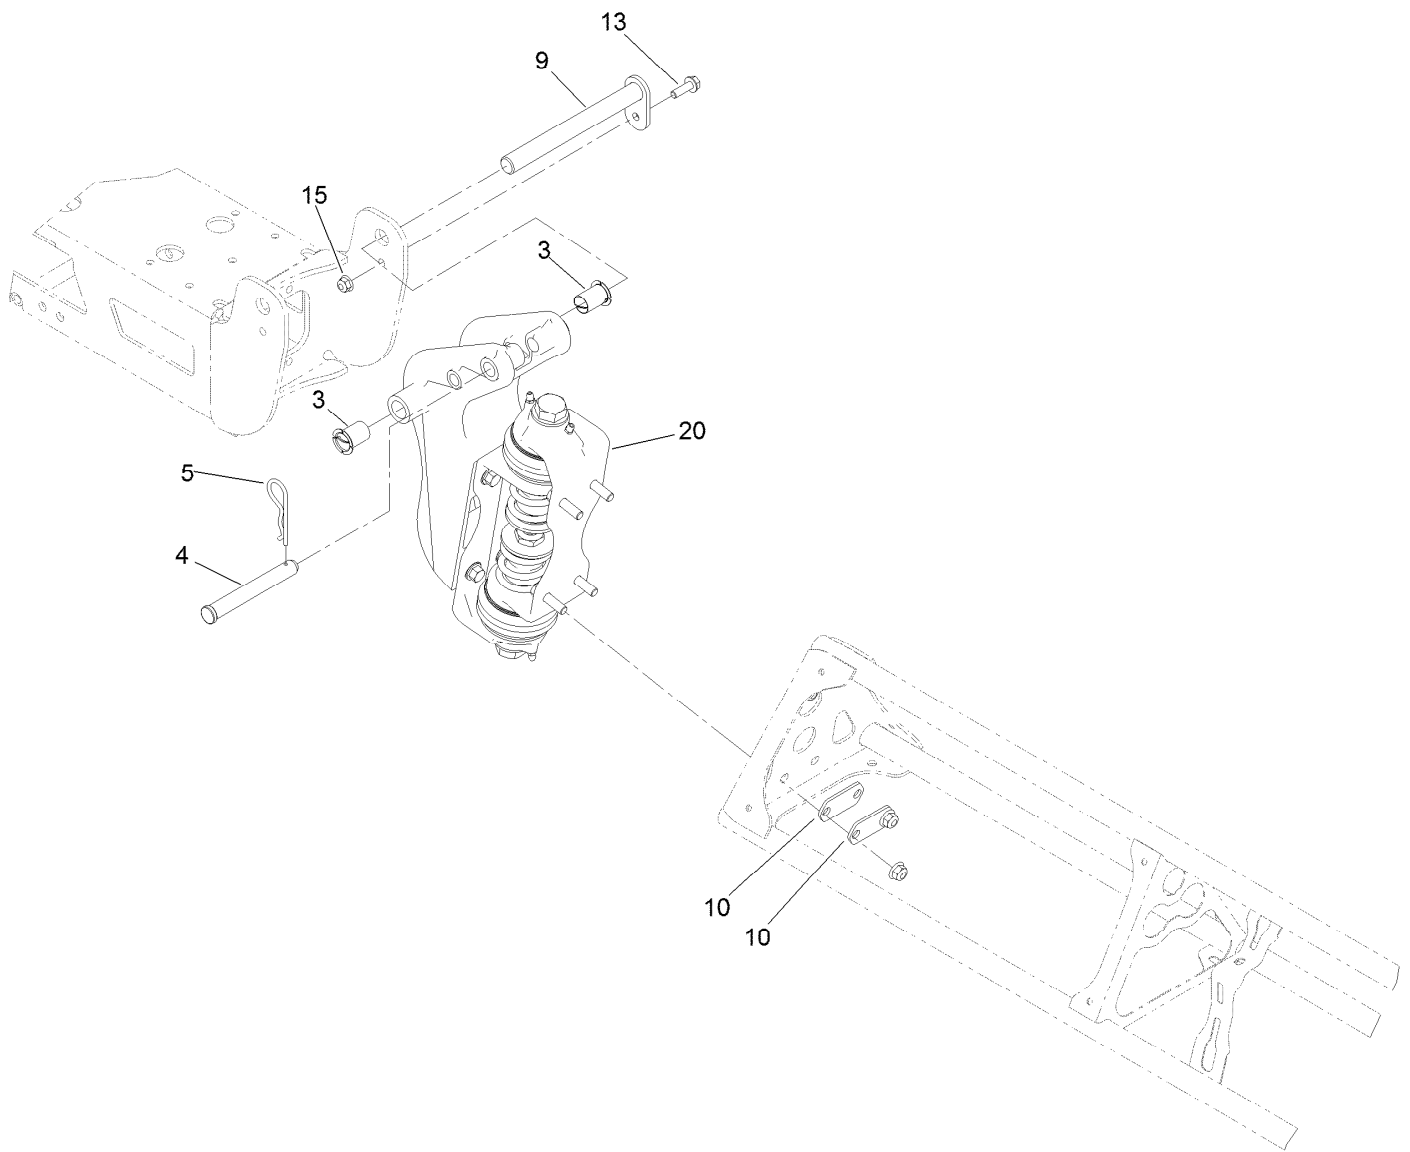

Boom Mounting Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	100-8541	4	Bushing-A Arm
4	108-3436	2	Pin-Clevis
5	3290-468	2	Pin-Cotter
9	108-3419	2	Pivot Pin ASM
10	108-3605	8	Plate-Backing
13	108-3748	2	Screw-HHF
15	104-8300	2	Nut-HF, NI
20		2	Pivot Bracket Assembly ●

● Not serviced separately

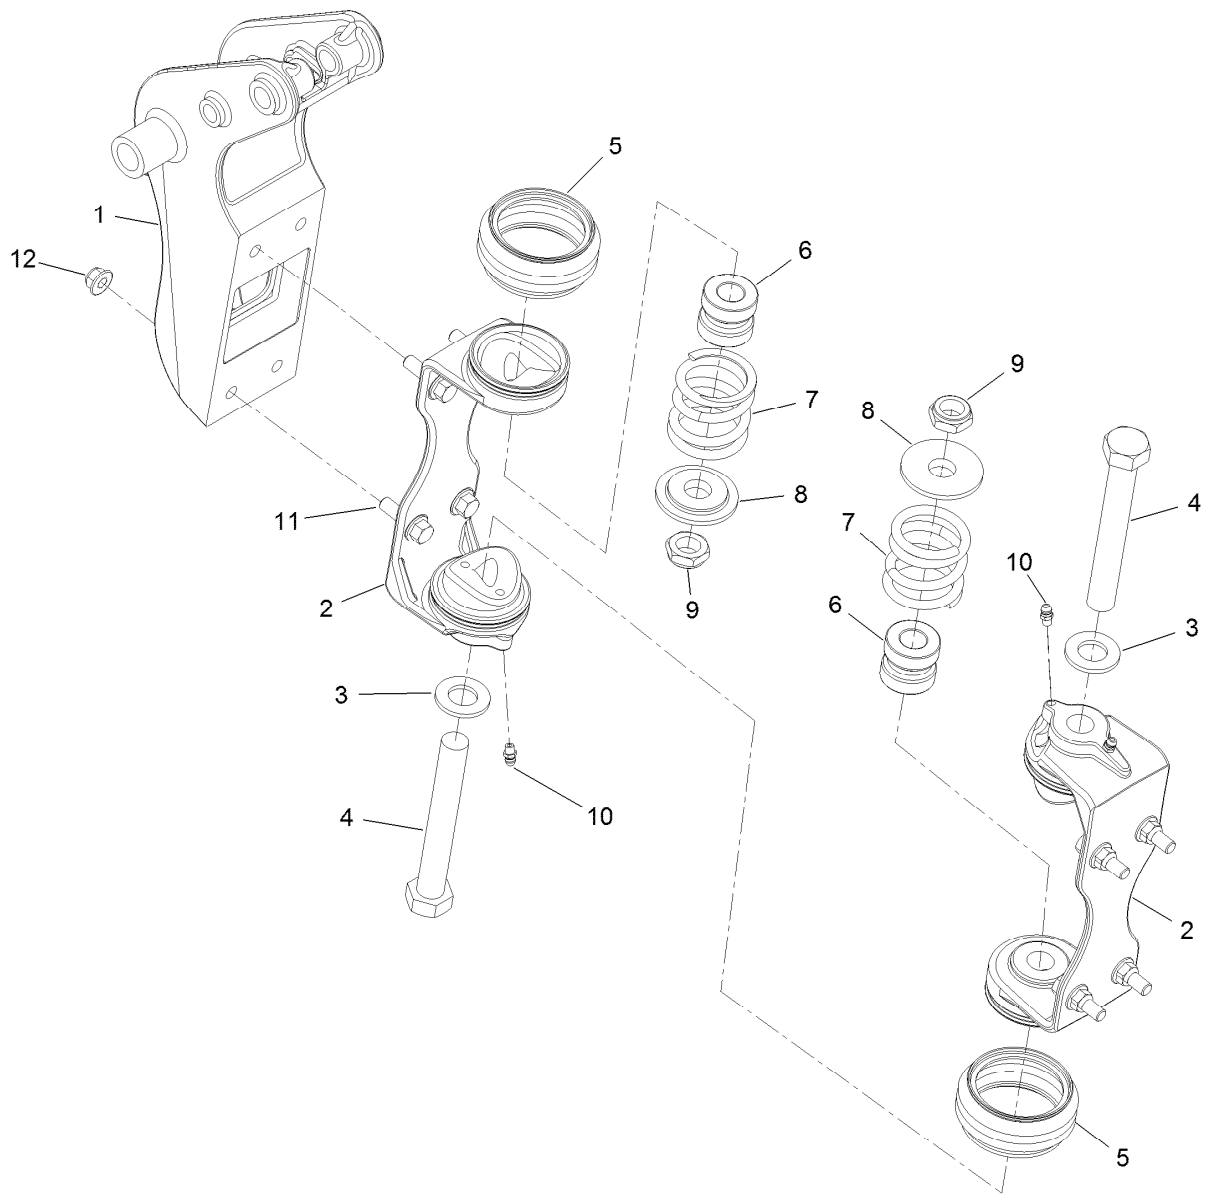

Boom Pivot Assembly

Ref.	Part Number	Qty.	Description
1	137-1673	1	Bracket-Pivot
2	137-1674	2	Hinge
3	110-5054	2	Washer-Flat
4	108-3738	2	Screw-HH
5	108-3459	2	Boot-Hinge
6	120-8541	2	Dampener-Hinge
7	108-3440	2	Spring-Breakaway, Boom
8	108-3444	2	Retainer-Spring
9	3296-15	2	Nut-Lock, NI
10	302-5	4	Fitting-Grease
11	110-5050	8	Screw-HHF
12	104-8301	8	Nut-HF, NI

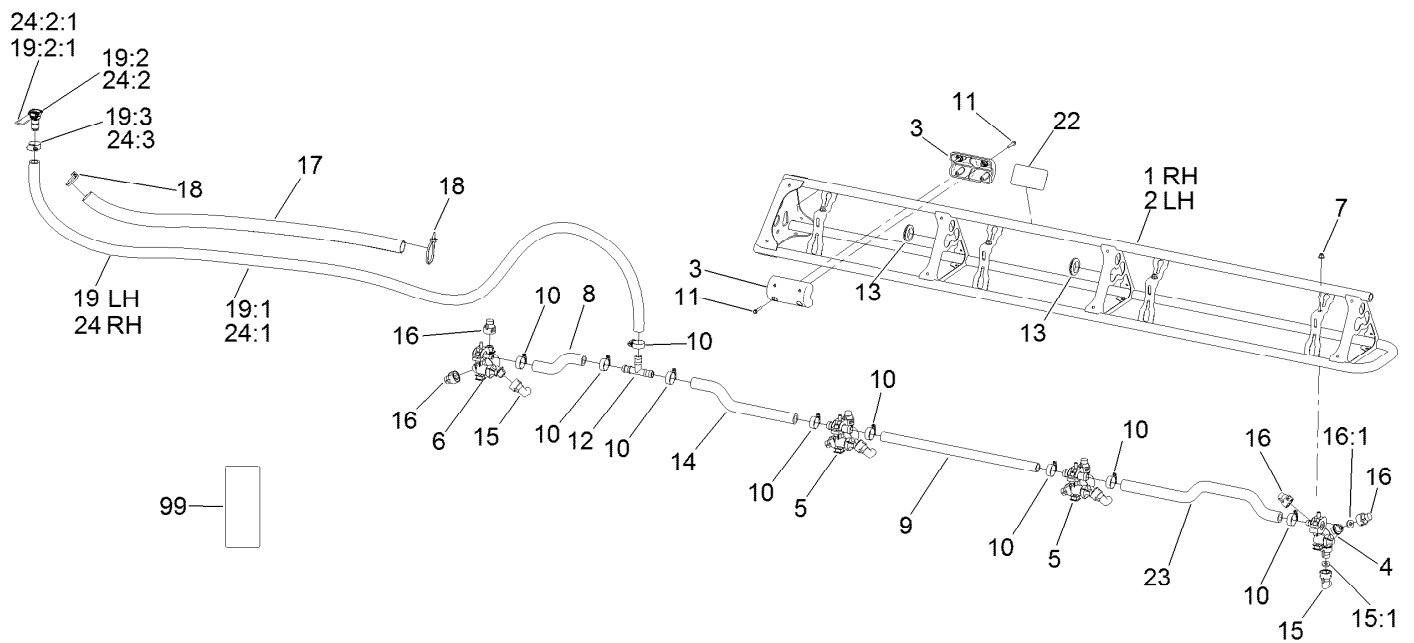

Left and Right Hand Boom Assembly

Ref.	Part Number	Qty.	Description
1	108-3524-03	1	Boom-RH
2	108-3525-03	1	Boom-LH
3	119-9368	8	Block Slide
4	108-3725	2	LH Single Body Turret ASM
5	108-3727	4	Double Turret Body ASM
6	108-3726	2	RH Single Body Turret ASM
7	104-8300	8	Nut-HF, NI
8	136-0437	2	Hose-Formed
9	40506	2	Hose-Jumper
10	2412-129	18	Clamp-Hose
11	119-9369	16	Screw-HHF
12	108-3439	2	Tee
13	240-3	4	Grommet-Rubber
14	136-0436	2	Hose-Formed
15	95-9186	8	Cap
15:1	40998	1	Seat-Gasket
16	95-9187	16	Cap-Blank

Ref.	Part Number	Qty.	Description
16:1	40998	1	Seat-Gasket
17	107-8650	2	Conduit-Convolutd
18	3290-378	4	Tie-Cable
19	132-4334	1	Hose-Left Boom
19:1	131-3790	1	Hose-Boom, RH
19:2	127-9807	1	Straight Fitting Kit
19:2:1	133-0398	1	Pin-Fork
19:3	2412-129	1	Clamp-Hose
22	104-8904	2	Decal-Grasp Boom Here
23	108-3735	2	Hose-Boom, Center (LH)
24	132-4324	1	Hose-Boom
24:1	127-9769	1	Hose-Supply
24:2	127-9807	1	Straight Fitting Kit
24:2:1	133-0398	1	Pin-Fork
24:3	2412-129	1	Clamp-Hose
99	119-9434	1	Decal-Magnetic

Attachments and Accessories

For 41240 — Multi Pro WM Turf Sprayer

Product Name	Model/Part
Cab Kit.....	07392
Premium ATF (Drum).....	108-1185
Premium ATF (Pail)	108-1186
Premium All Purpose Grease (Tube)	108-1190
License Plate Kit	120-8506
Covered Boom Spring Upgrade Kit.....	120-8508
Premium Engine Oil 10w30 (55 Gallon Drum)	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Fan Kit (EFI, Gas Engine Only).....	127-9719
Lance Suction Assembly	127-9826
Multi Pro WM Turf Sprayer Finishing Kit (Automatic).....	131-3301
Multi Pro WM Turf Sprayer Finishing Kit (Manual).....	131-3302
Cab Finishing Kit, 2016 and After Multi Pro WM Turf Sprayer.....	133-2725
Ultra Sonic Boom Finishing Kit, 2013 and After Multi Pro WM Turf Sprayer	133-2808
Foam Marker Finishing Kit	136-0459
Pump Head Kit.....	145-3399
Rear Work Light Kit.....	41010
Single Nozzle Kit.....	41023
Hand Spray Wand Kit	41118
Pro Foam Concentrate (4 x 1 Gallon)	41157
Nozzalert - Mp Nozzle Flow System	41166
Ultra Sonic Boom Leveling Kit	41219
Tank Clean Rinse Kit	41241
Chemical Pre-Mix Kit	41244
Electric Hose Reel Kit	41245
Foam Marker Kit	41249
Drift Reduction Boom Shroud Kit	41602
Pro-Foam.....	41607



Count on it.