




MODEL NO. 57300-3000001 & UP
MODEL NO. 57360-3000001 & UP

PARTS CATALOG

8 AND 11 H.P. LAWN TRACTOR ELECTRIC START

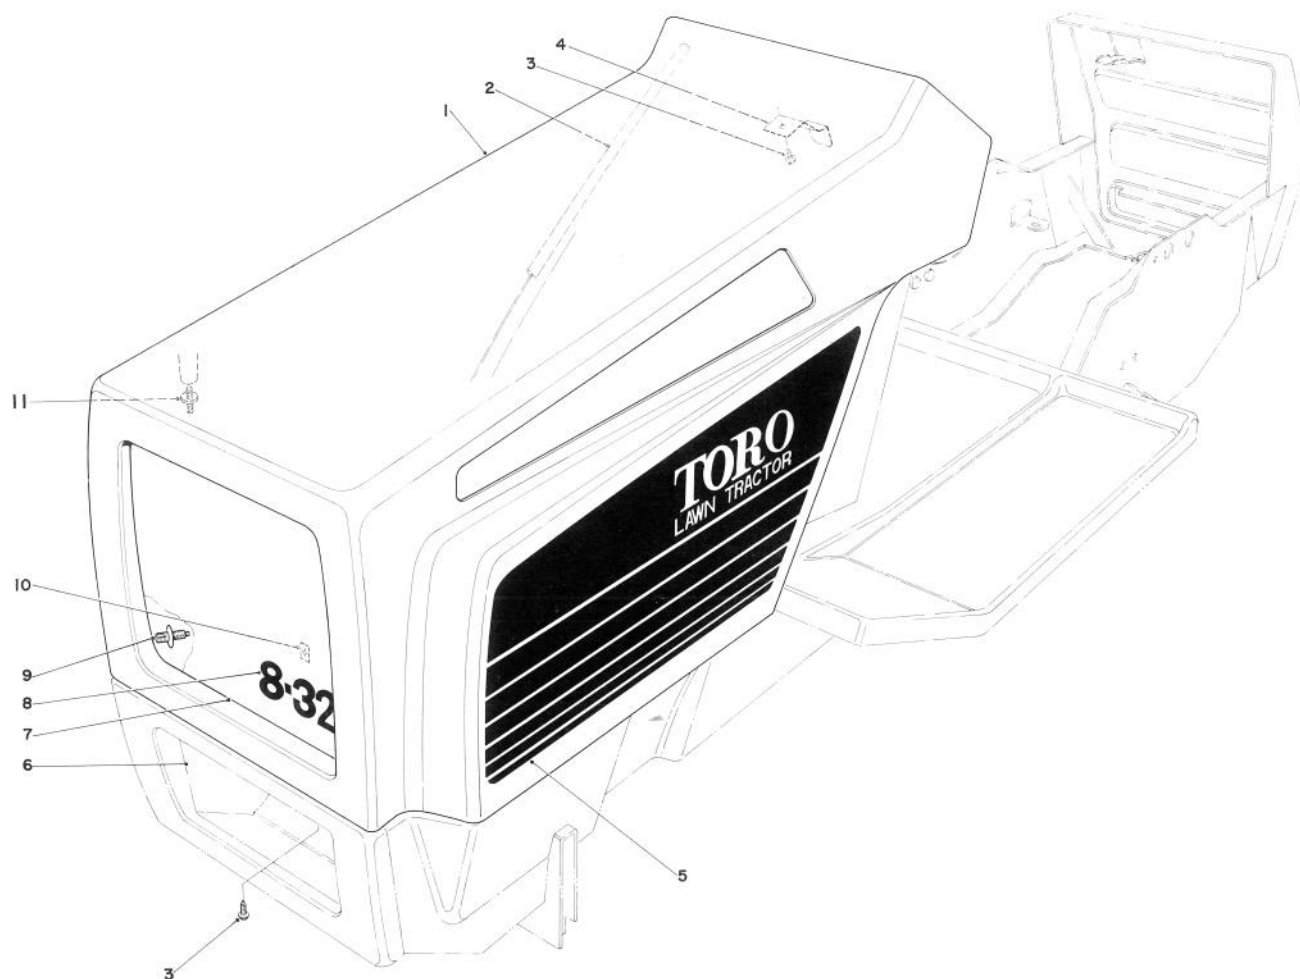


HOOD ASSEMBLY MODEL 57300

Ref. No.	Part No.	Description	No. Used
1	8-6679	Hood (Incl. Ref. #9 & 11)	1
2	28-3810	Rubber Extension — Seal	2
3	32104-76	Screw — Self Tapping	9
4	27-9130	Spring — Latch	1
5	47-5170	Decal — Hood L.H.	1
*	47-5180	Decal — Hood R.H.	1

Ref. No.	Part No.	Description	No. Used
6	28-0010	Lower Grille	1
7	36-2110	Grille — Hood	1
8	28-2660	Name Plate — Grille	1
9	27-9120	Stud — Hinge Bracket	4
10	3290-299	Tinnerman Nut	2
11	39-6800	Stud — Hood Duct	4

*Not Illustrated

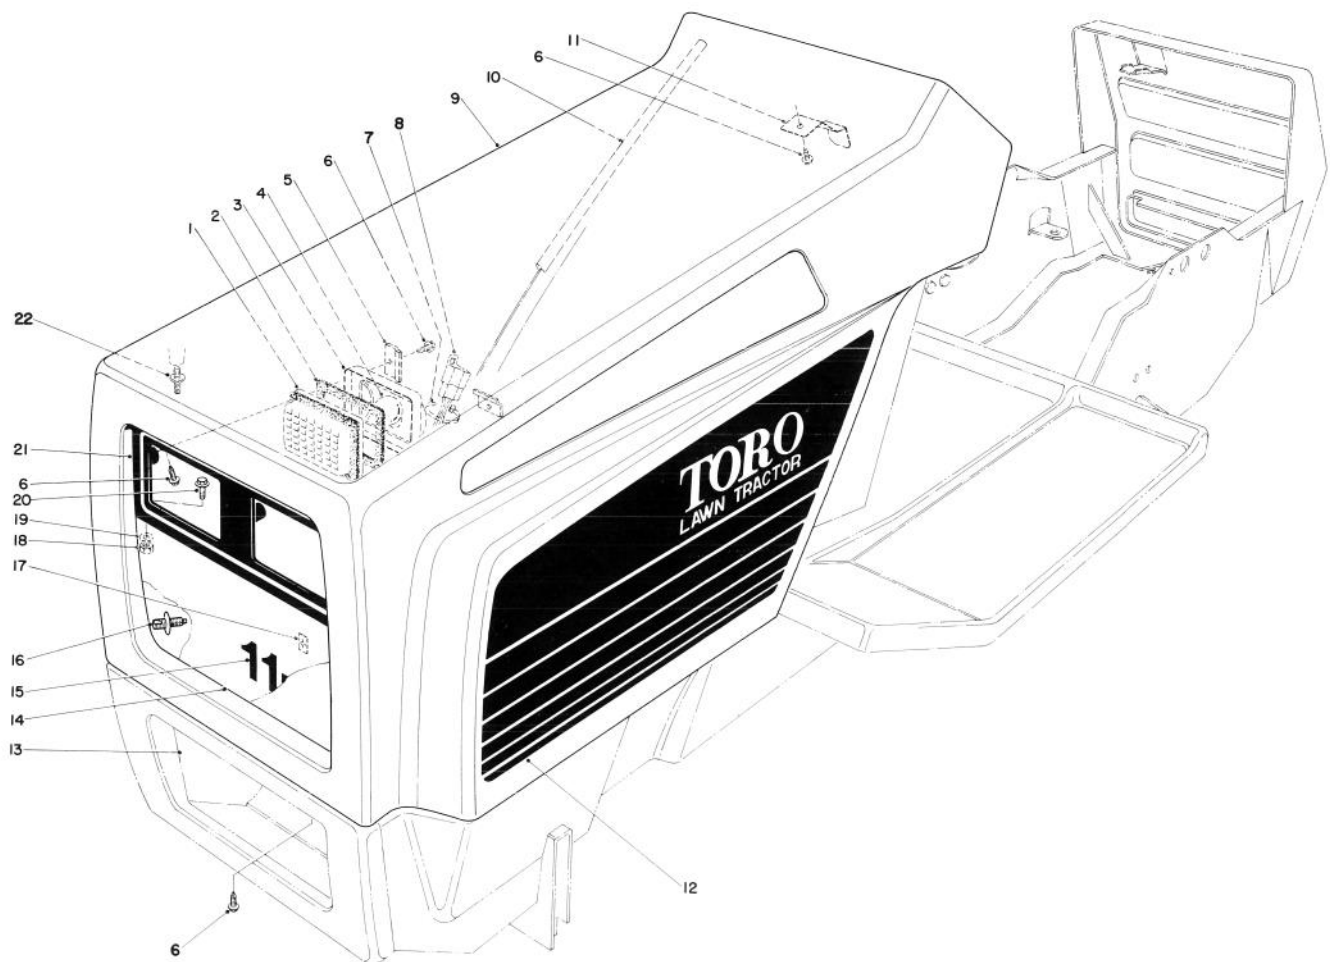


HOOD ASSEMBLY MODEL 57360

Ref. No.	Part No.	Description	No. Used
1	219-14	Lens	2
2	219-13	Lens Gasket	4
3	38-2580	Reflector	2
4		Bulb GE #1156	2
5	28-0050	Clamp — Headlight	3
6	32104-76	Self Tapping Screw	12
7	3290-378	Cable Tie	1
8	218-493	Connector Body	1
9	8-6679	Hood (Incl. Ref. #16 & 22)	1
10	28-3810	Rubber Extrusion — Seal	2
11	27-9130	Spring — Latch	1
12	47-5170	Decal — Hood L.H.	1

Ref. No.	Part No.	Description	No. Used
*	47-5180	Decal — Hood R.H.	1
13	28-0010	Grille — Lower	1
14	36-2090	Grille — Head Light	1
15	36-2510	Name Plate — Grille	1
16	27-9120	Stud — Hinge Bracket	4
17	3290-299	Tinnerman Nut	2
18	32153-1	Locknut	2
19	3256-21	Washer	2
20	3290-144	Hex Hd. Machine Screw	2
21	28-0040	Panel Headlight	1
22	39-6800	Stud — Hood Duct	4
*	8-3579	Headlight Assy. (Incl. Ref. #1-4)	2

*Not Illustrated

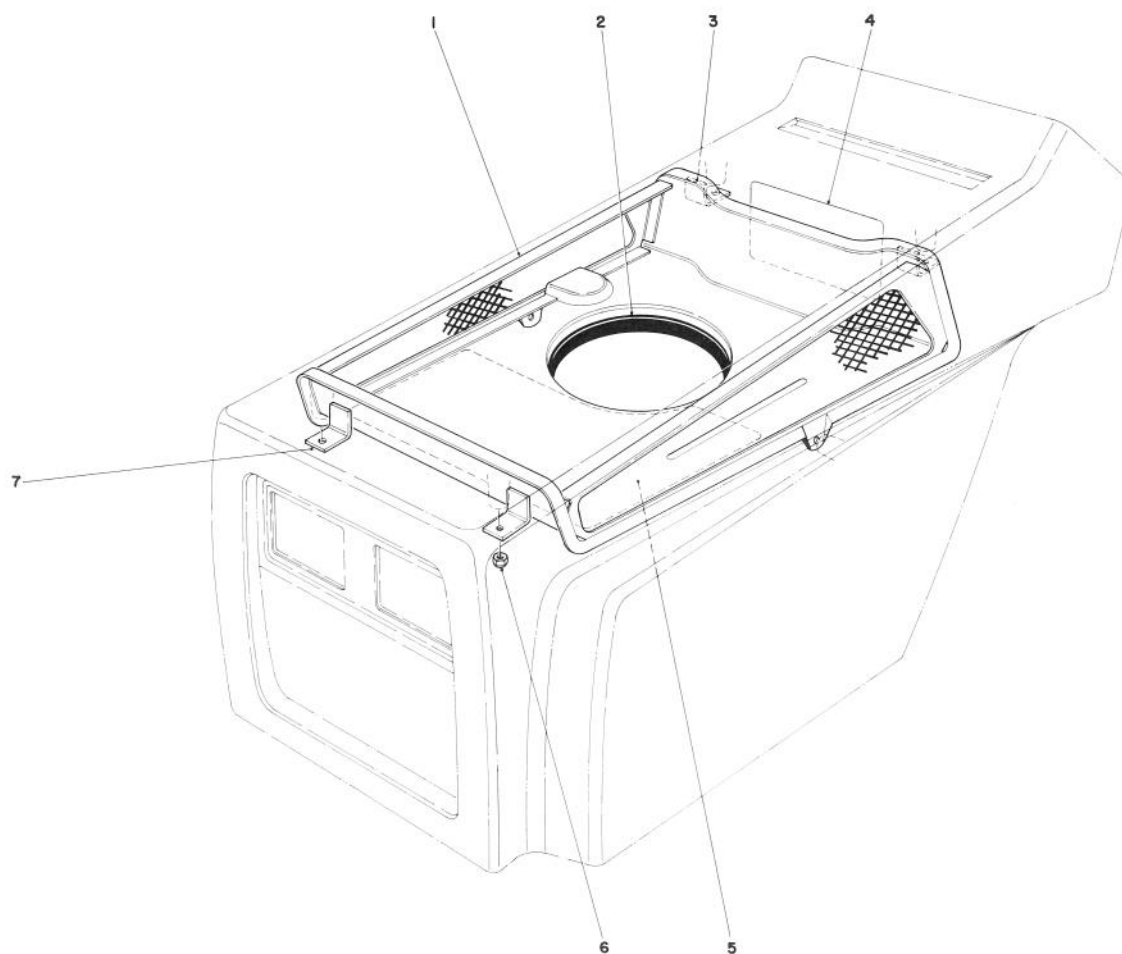


HOOD DUCT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	39-5090	Hood Duct (Model 57360)	1
*	39-5140	Hood Duct (Model 57300)	1
2	36-8160	Seal — Engine	1
3	39-8880	Bracket Rear Duct Support	2

Ref. No.	Part No.	Description	No. Used
4	44-5860	Decal — Belt Change	1
5	36-5190	Decal — Service	1
6	32152-4	Locknut	4
7	39-5340	Bracket Duct Support	2

*Not Illustrated

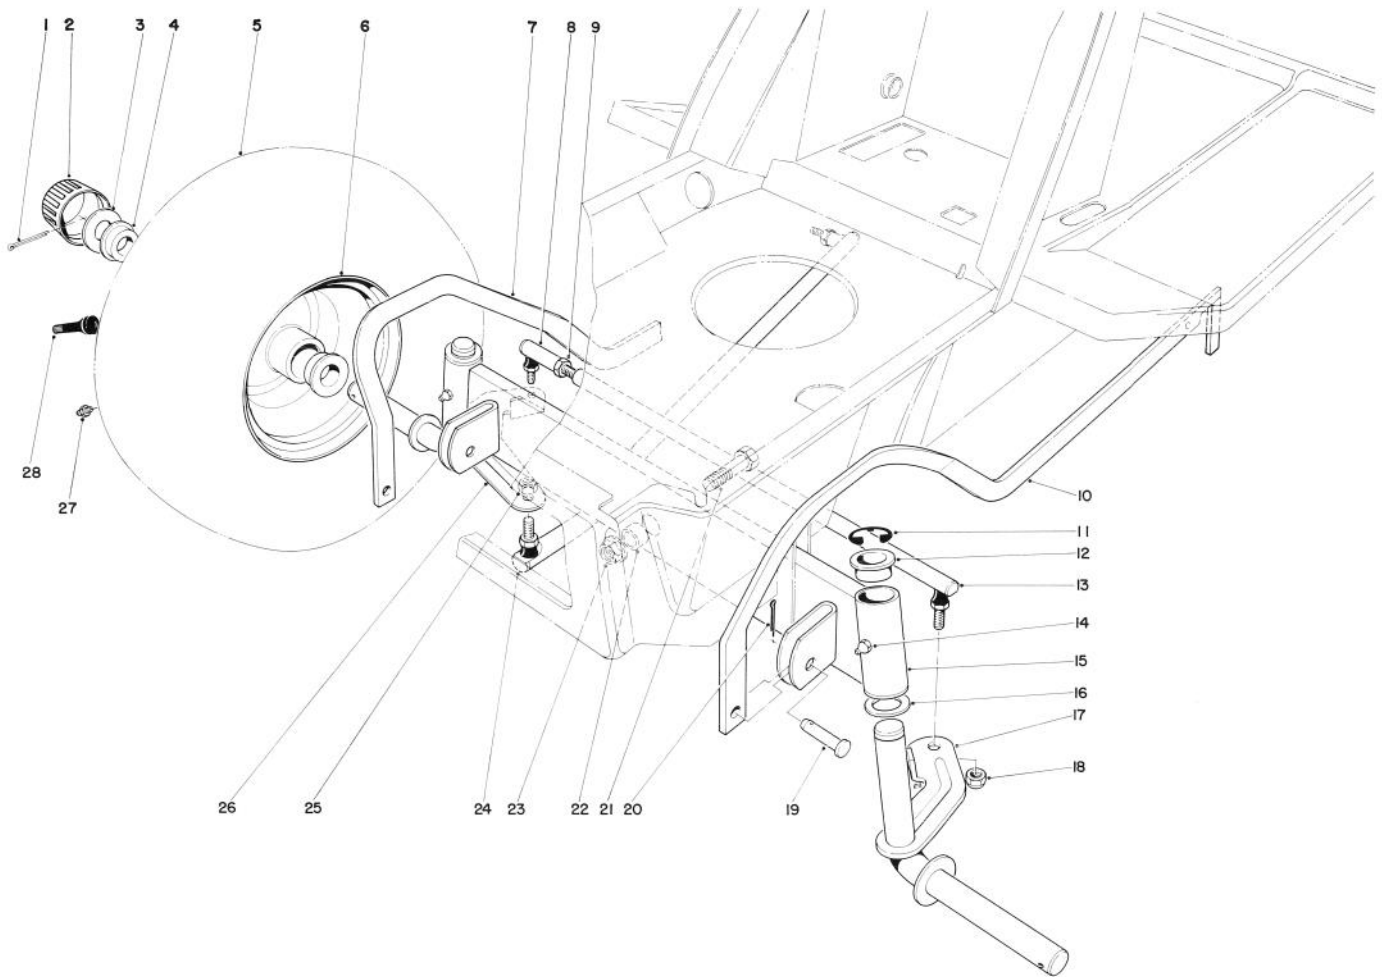


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-12	Cotter Pin	2
2	28-0060	Hub Cap	2
3	28-2480	Washer	2
4	251-210	Ball Bearing	4
5	231-94	Tire	2
6	242-60	Rim	2
7	28-0200	Parallel Link R.H.	1
8	2411-32	Ball Joint	1
9	3220-2	Nut — Jam	1
10	28-0210	Parallel Link L.H.	1
11	32151-48	E. Ring	2
12	27-9080	Flange Bearing	4
13	47-5160	Tie Rod Steering	1
14	302-49	Grease Fitting	2
15	36-1500	Front Axle (Incl. Ref. #12)	1

Ref. No.	Part No.	Description	No. Used
16	3-6498	Thrust Washer	2
17	36-1560	Spindle L.H.	1
18	3296-20	Locknut	2
19	283-2	Clevis Pin	2
20	3272-6	Cotter Pin	2
21	325-6	Capscrew	1
22	28-0380	Spacer Front Axle	1
23	32128-23	Flange Nut	1
24	39-1910	Steering Arm	1
25	3296-5	Locknut	1
26	36-1550	Spindle R.H.	1
27	302-5	Grease Fitting	2
28	232-27	Valve Stem w/Cap	2
*	232-38	Inner Tube (Optional)	2

*Not Illustrated

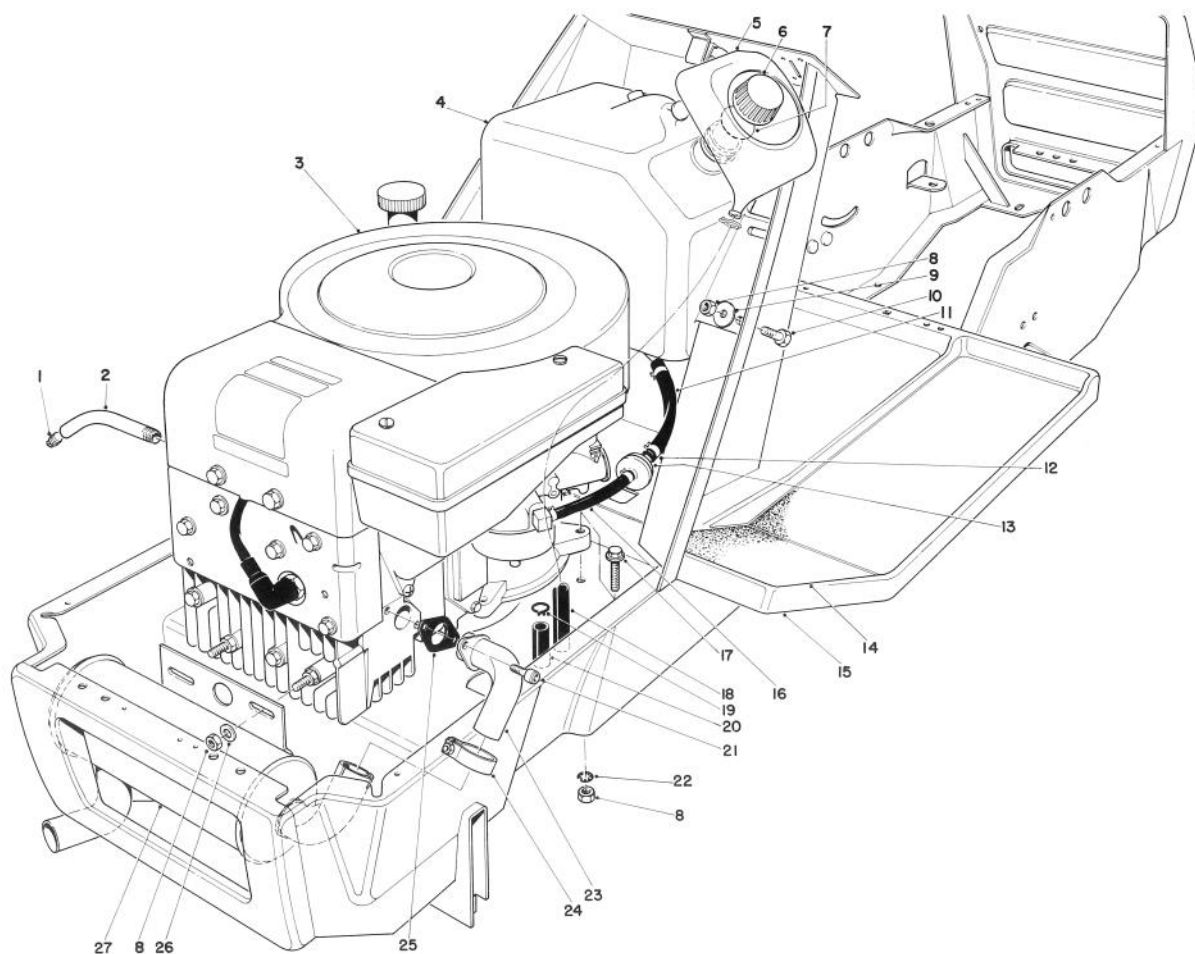


ENGINE ASSEMBLY MODEL 57300

Ref. No.	Part No.	Description	No. Used
1	281-1	Pipe Plug	1
2	28-8650	Drain Tube — Oil	1
3	221-746	Engine	1
4	44-8230	Gas Tank (Incl. Ref. #5)	1
5		Funnel — Overflow	1
6	28-9680	Gas Cap (Incl. Ref. #7)	1
7	28-9670	Gasket — Gas Cap	1
8	32152-1	Locknut	10
9	5-1350	Washer	4
10	322-3	Cap Screw	4
11	47-2980	Gas Hose	1
12	2210-185	Hose Clamp	4
13	42-5240	Fuel Filter	1
14	27-9050	Foot Tread — L.H.	1
*	27-9040	Foot Tread — R.H.	1
15	44-8130	Frame	1

Ref. No.	Part No.	Description	No. Used
16	42-5220	Gas Hose	1
17	322-7	Capscrew	4
18	39-4030	Hose — Funnel	1
19	2412-62	Hose Clamp	2
20	39-4040	Hose — Carburetor Drain	1
21	3274-52	Hex Socket Capscrew	2
22	3254-2	Lockwasher	4
23	28-0170	Exhaust Pipe	1
24	28-4200	Clamp — Exhaust Pipe	1
25†		Exhaust Gasket	1
26	3256-23	Washer	2
27	27-9070	Muffler	1
*	3290-378	Cable Tie	2
*	36-7880	Muffler — Spark Arrester (Optional)	1
*	11-4629	Loose Parts	1

*Not Illustrated

†Obtain from local Briggs & Stratton dealer.

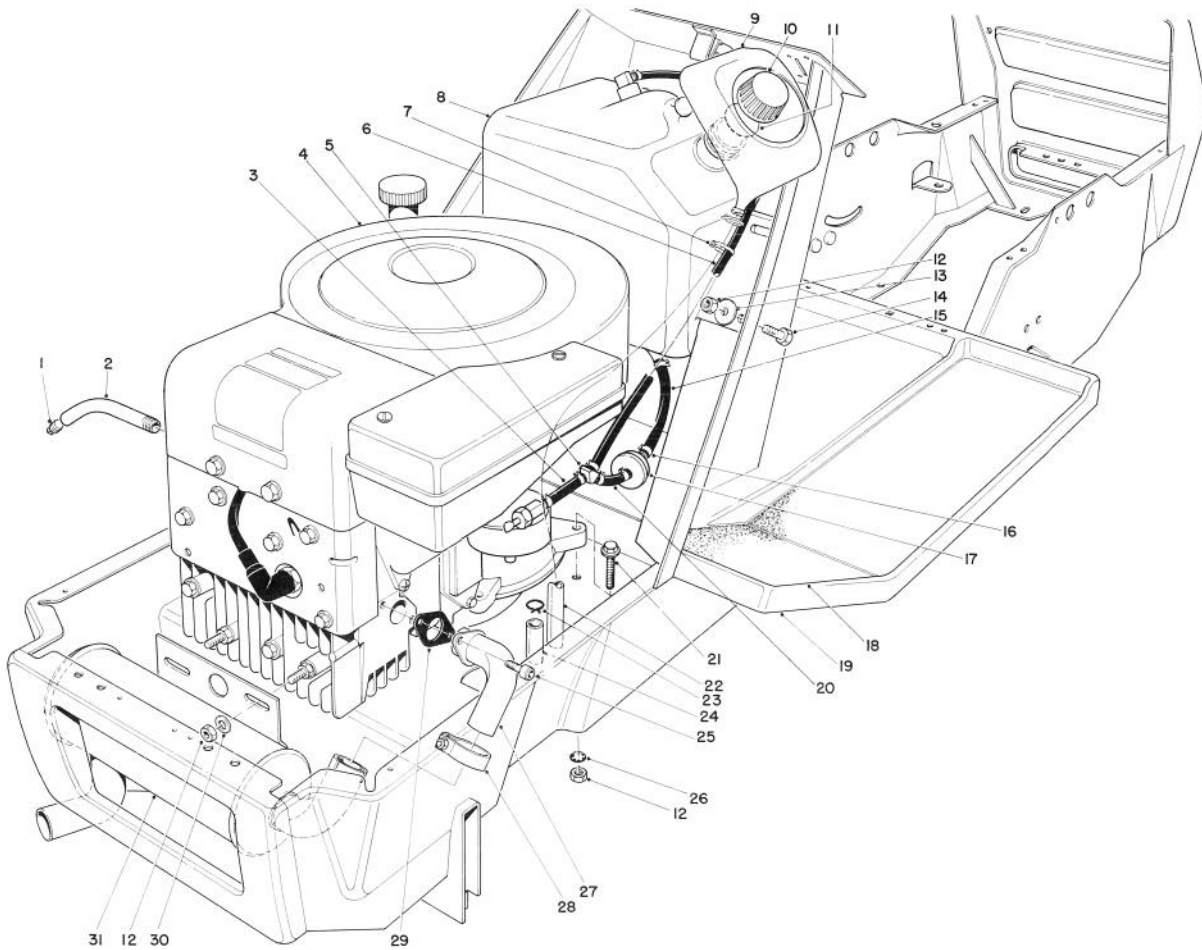


ENGINE ASSEMBLY MODEL 57360

Ref. No.	Part No.	Description	No. Used
1	281-1	Pipe Plug	1
2	28-8650	Drain Tube Oil	1
3	47-2970	Hose — Gas	1
4	221-747	Engine	1
5	353-778	Fitting — Barbed Y	1
6	47-2990	Hose — Gas Return	1
7	3290-381	Cable Tie	1
8	44-8240	Gas Tank Assy. (Incl. Ref. #9)	1
9		Funnel — Overflow	1
10	28-9680	Gas Cap Assy. (Incl. Ref. #11)	1
11	28-9670	Gasket — Gas Cap	1
12	32152-1	Locknut	10
13	5-1350	Washer	4
14	322-3	Capscrew	4
15	47-2980	Hose — Gas	1
16	2210-185	Clamp — Hose	8
17	42-5240	Fuel Filter	1
18	27-9050	Foot Tread L.H.	1

Ref. No.	Part No.	Description	No. Used
*	27-9040	Foot Tread R.H.	1
19	44-8130	Frame	1
20	47-2960	Hose — Gas	1
21	322-7	Capscrew	4
22	39-4030	Hose — Funnel	1
23	2412-62	Clamp — Hose	2
24	39-4040	Hose — Carburetor Drain	1
25	3274-53	Hex Socket Hd. Capscrew	2
26	3254-2	Lockwasher	4
27	28-0290	Exhaust Pipe	1
28	23-7760	Clamp — Exhaust Pipe	1
29†		Exhaust Gasket	1
30	3256-23	Washer	2
31	28-0300	Muffler	1
*	3290-378	Cable Tie	2
*	36-7890	Muffler — Spark Arrester (Optional)	1
*	11-4649	Loose Parts	1

*Not Illustrated

†Obtain from local Briggs & Stratton dealer.

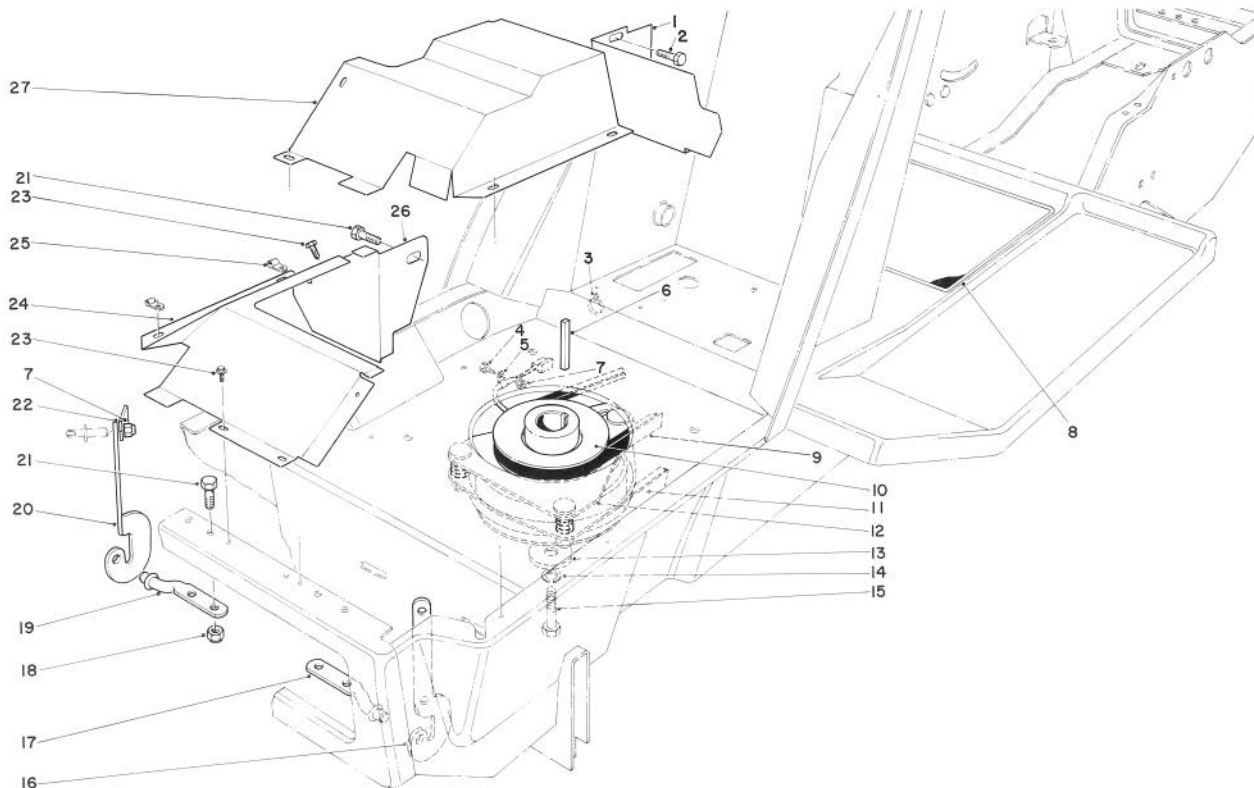


CLUTCH & PULLEY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-3990	Support — Exhaust Shield (Model #57360)	1
*	28-3870	Support — Exhaust Shield (Model #57300)	1
2	321-3	Capscrew	1
3	3290-410	Push Mount Tie	1
4	321-4	Capscrew	1
5	2412-66	Clamp	1
6	5-1336	Square Key	1
7	32152-4	Locknut	5
8	44-5850	Decal — Operation	1
9	28-2650	V-Belt — Traction	1
10	44-5940	Pulley — Ground Drive	1
11	28-5250	V-Belt — Deck	1
12	44-0770	Clutch Assembly — Deck	1
13	44-8160	Washer	1
14	3253-22	Lockwasher	1
15	3212-24	Capscrew	1

Ref. No.	Part No.	Description	No. Used
16	28-0120	Bracket — Hinge L.H.	1
17	28-0110	Hinge Pin — Hood L.H.	1
18	32152-1	Locknut	4
19	28-0100	Hinge Pin — Hood R.H.	1
20	28-0130	Bracket — Hinge R.H.	1
21	322-2	Capscrew	5
22	37-0170	Bracket — Screen Support	2
23	32104-76	Screw — Self Tapping	12
24	33-0840	Heat Shield (Model #57360)	1
*	33-0950	Heat Shield (Model #57300)	1
25	2412-51	Clamp (Model #57360)	2
26	28-3980	Support — Heat Shield (Model #57360)	1
*	28-3900	Support — Heat Shield (Model #57300)	1
27	33-0820	Heat Shield (Model #57360)	1
*	33-0940	Heat Shield (Model #57300)	1


*Not Illustrated

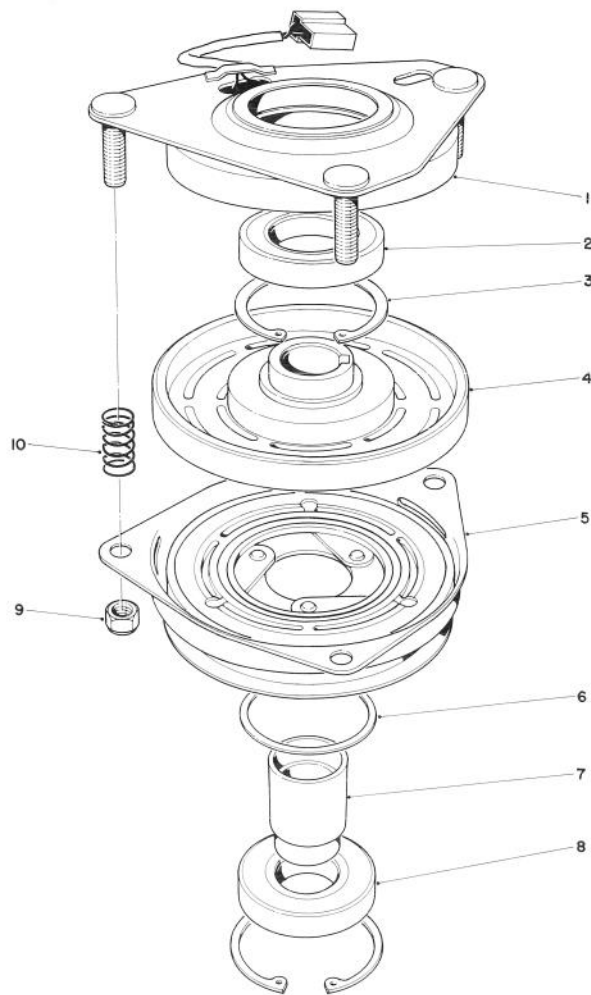

CLUTCH ASSEMBLY NO. 44-0770

Ref. No.	Part No.	Description	No. Used
1	44-8350	Field Assembly (Incl. Ref. #2 & 3)	1
2	251-292	Bearing — Field	1
3	44-8310	Retaining Ring	2
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1

Ref. No.	Part No.	Description	No. Used
5	44-8370	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7 & 8)	1
6	44-8330	Spacer — Pulley Bearing	1
7	44-8340	Bearing Collar	1
8	251-291	Bearing — Pulley	1
9	3296-6	Locknut	3
10	44-8320	Spring	3

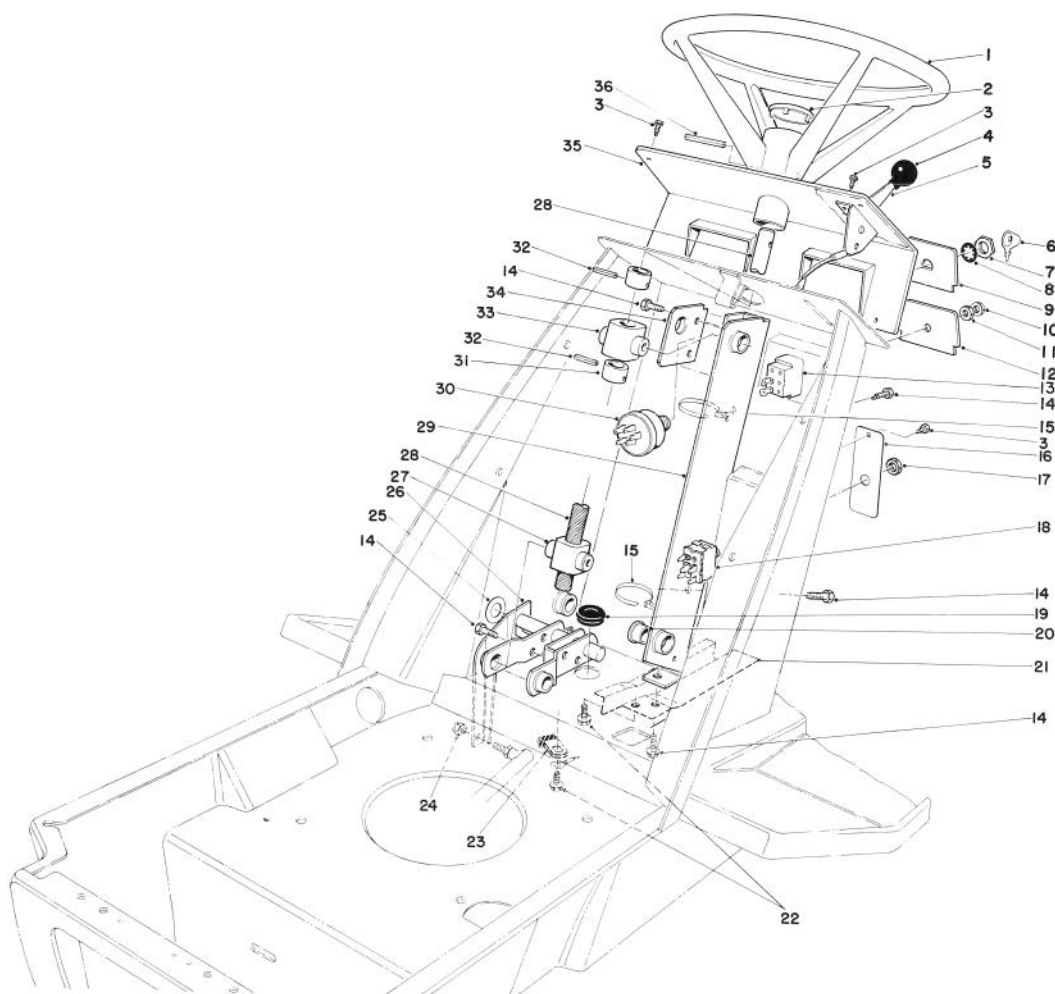


STEERING WHEEL & DASH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	38-0830	Steering Wheel	1
2	38-1010	Insert — Steering Wheel (Model #57360)	1
*	38-1000	Insert — Steering Wheel (Model #57300)	1
3	32104-76	Screw — Self Tapping	8
4	233-25	Knob	1
5	38-0990	Throttle Control (Incl. Ref. #4)	1
6	218-412	Key	2
7	218-461	Nut	1
8	3254-5	Lockwasher	1
9	28-2690	Insert — Dash Panel (Ignition)	1
10	218-497	Beveled Facenut	1
11	218-498	Locknut	1
12	28-2510	Insert — Dash Panel (lights) (Model #57360)	1
*	28-2500	Insert — Dash Panel (Model #57300)	1
13	28-4110	Light Switch (Model #57360) (Incl. Ref. #10 & 11)	1
14	32144-11	Self Tapping Screw	7
15	3290-410	Push Mount Tie (Incl. w/Wire Harness)	3

Ref. No.	Part No.	Description	No. Used
16	44-5710	Plate — Clutch Switch	1
17	218-500	Nut	1
18	37-2610	Switch — Clutch (Incl. Ref. #17)	1
19	237-100	Grommet (Incl. w/Wire Harness)	1
20	27-9080	Flange Bearing	2
21	36-1570	Shield Wire Harness	1
22	32144-10	Screw — Thread Forming	2
23	18-2970	Clamp	1
24	3296-5	Locknut	1
25	11-6240	Washer	1
26	36-3470	Steering Link	1
27	37-0140	Follower — Steering Shaft	1
28	38-5310	Shaft — Steering	1
29	36-2040	Bracket Steering	1
30	23-0660	Ignition Switch (Incl. Ref. #6-8)	1
31	28-3940	Collar — Steering Shaft	2
32	32121-31	Roll Pin	2
33	37-0150	Bearing — Steering Shaft	1
34	28-0390	Bearing Support — Steering	1
35	28-2460	Panel — Dash	1
36	32121-78	Roll Pin	1


* Not Illustrated

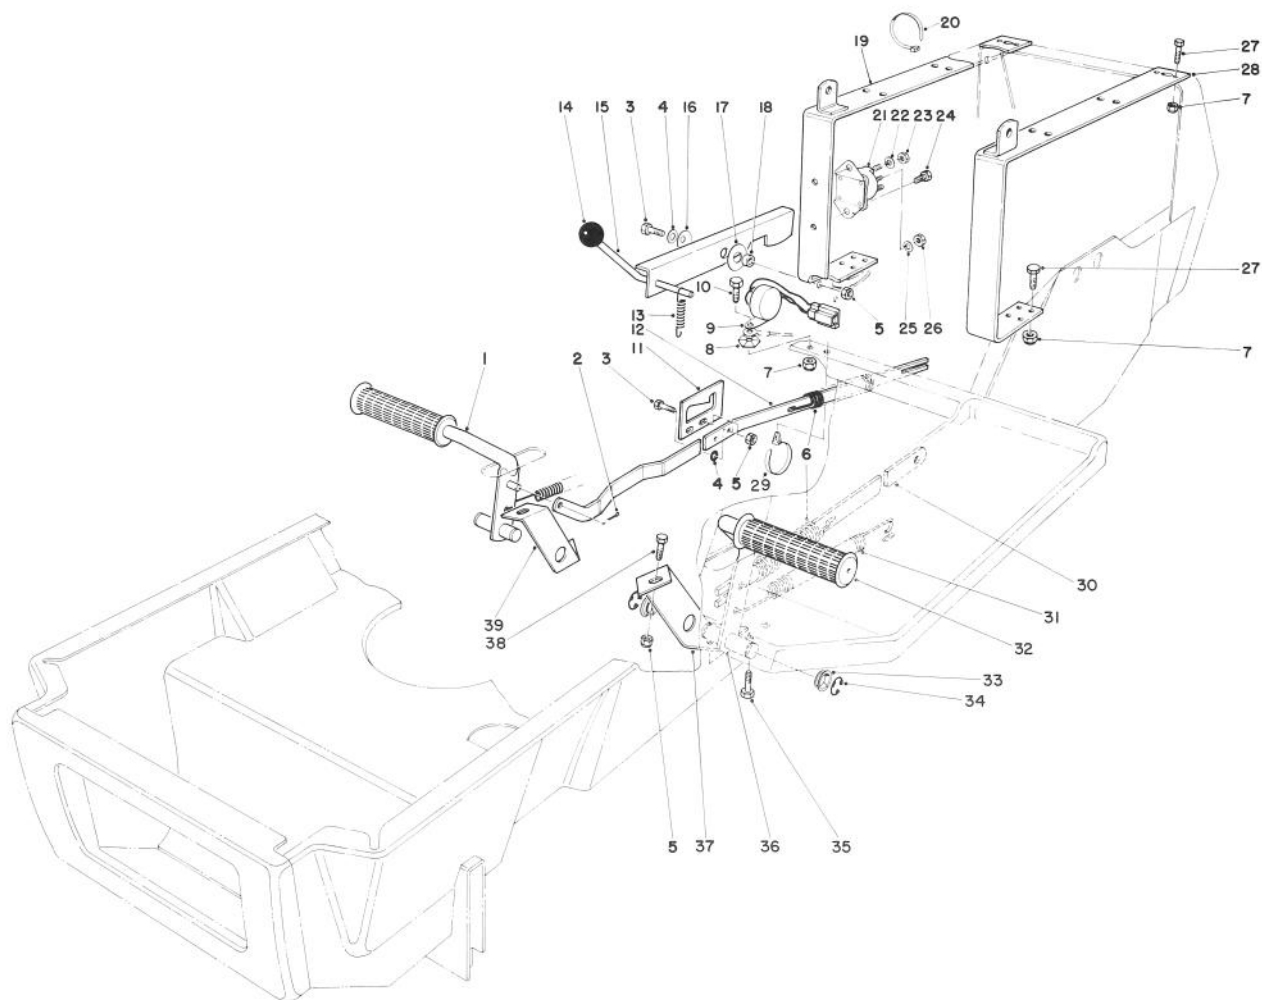

BRAKE & CLUTCH PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-2530	Brake Pedal	1
2	3272-10	Cotter Pin	1
3	322-3	Capscrew	3
4	3256-23	Washer	3
5	32152-1	Locknut	5
6	27-8950	Spring — Extension	2
7	32152-4	Locknut	9
8	3290-257	Pyramidal Washer	1
9	28-7890	Module — Interlock	1
10	321-4	Capscrew	1
11	28-9370	Latch Plate — Brake Rod	1
12	28-9350	Link — Brake Rod	1
13	8-9900	Spring — Control Rod	1
14	233-42	Knob	1
15	28-2570	Parking Brake Lever	1
16	3290-413	Belleville Washer	1
17	28-2450	Washer	1
18	28-2440	Spacer	1
19	38-0940	Strap — Rear Body R.H.	1
20	3290-378	Cable Tie	1


Ref. No.	Part No.	Description	No. Used
21	28-4210	Solenoid	1
22	3253-4	Lockwasher	2
23	3218-13	Nut	2
24	32144-10	Screw Thread Forming	2
25	3219-14	Nut	2
26	3253-17	Lockwasher	2
27	321-3	Capscrew	8
28	38-0950	Strap — Rear Body L.H.	1
29	3290-410	Pushmount Tie	1
30	28-0430	Link Clutch Rod	1
31	27-8890	Spring — Return	2
32	28-2470	Pad — Foot	2
33	256-258	Nyliner	4
34	32120-19	E-Ring	4
35	32144-11	Self Tapping Screw	4
36	28-2520	Clutch Pedal	1
37	28-0420	Support Pedal	1
38	322-2	Capscrew	2
39	28-0410	Support Pedal R.H.	1

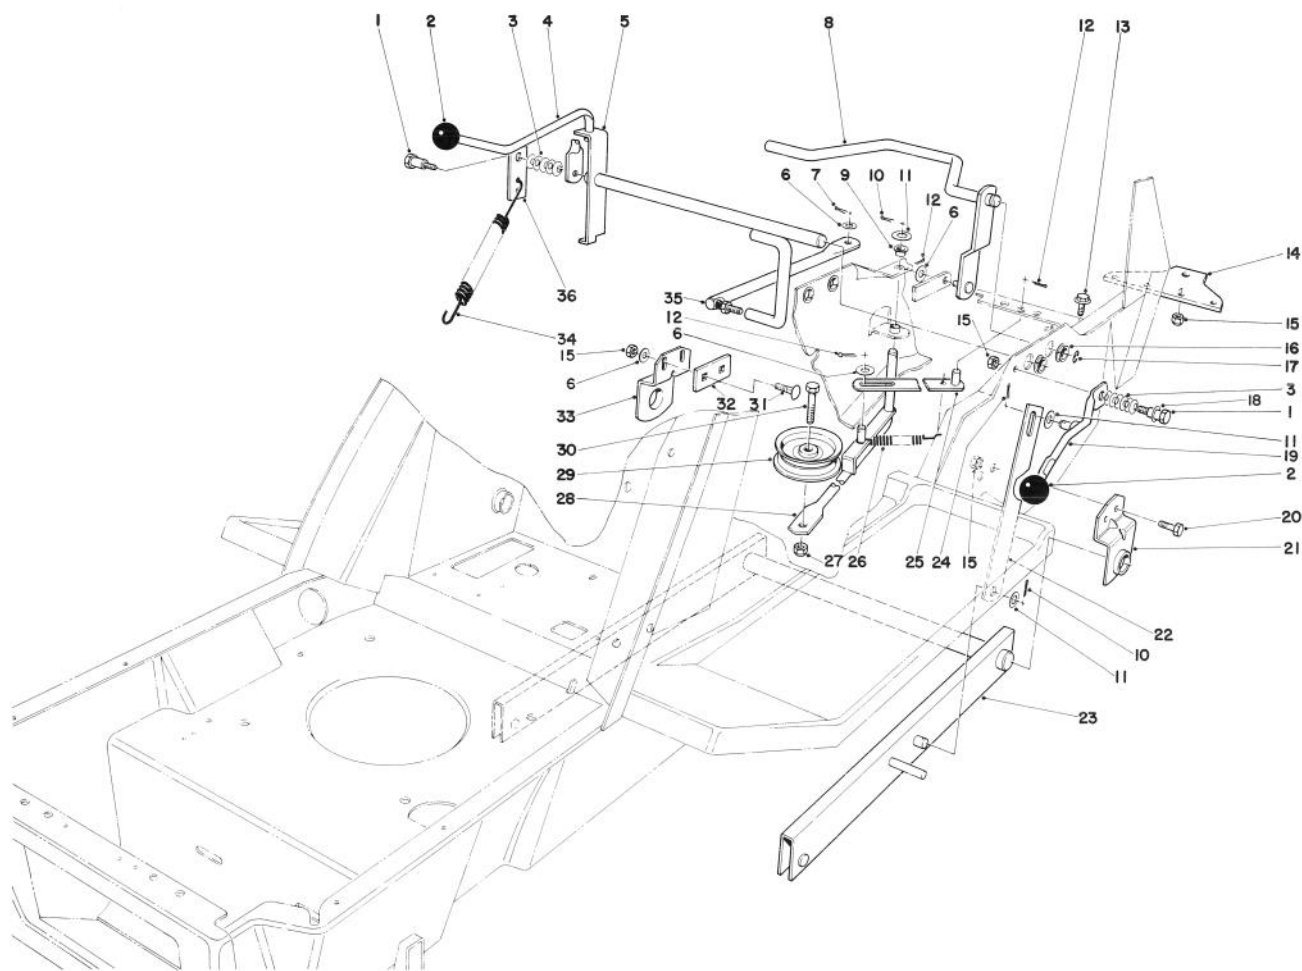

SHIFT & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0540	Shoulder Bolt	2
2	233-48	Knob	2
3	3290-413	Belleville Washer	11
4	28-2190	Shift Lever	1
5	28-2590	Shift Lever	1
6	3256-23	Washer	5
7	3272-6	Cotter Pin	1
8	27-9090	Clutch Actuator	1
9	256-257	Flanged Nyliner	2
10	3272-11	Cotter Pin	2
11	3256-26	Washer	3
12	3272-10	Cotter Pin	3
13	3234-5	Hex Flange Capscrew	4
14	28-2250	Plate — Hitch	1
15	32152-1	Locknut	9
16	256-258	Nyliner	4
17	32120-19	E-Ring	2
18	3256-4	Washer	1
19	28-2180	Height-of-Cut Handle	1

Ref. No.	Part No.	Description	No. Used
20	322-2	Capscrew	2
21	28-4050	Retainer — Pivot Bar L.H.	1
22	28-0400	Strap Height-of-Cut	1
23	27-9180	Pivot Bar	1
24	3272-7	Cotter Pin	1
25	28-2270	Spring Retainer	1
26	28-2340	Spring — Deck Tension	1
27	32152-2	Locknut	1
28	28-0500	Idler Arm	1
29	36-1020	Idler Pulley	1
30	323-10	Capscrew	1
31	3230-2	Carriage Bolt	2
32	38-6610	Spacer	1
33	28-4060	Retainer — Pivot Bar R.H.	1
34	27-8960	Spring — Deck Engagement	1
35	28-2210	Shift Arm	1
36	28-9400	Bracket — Counter Balance Spring	1

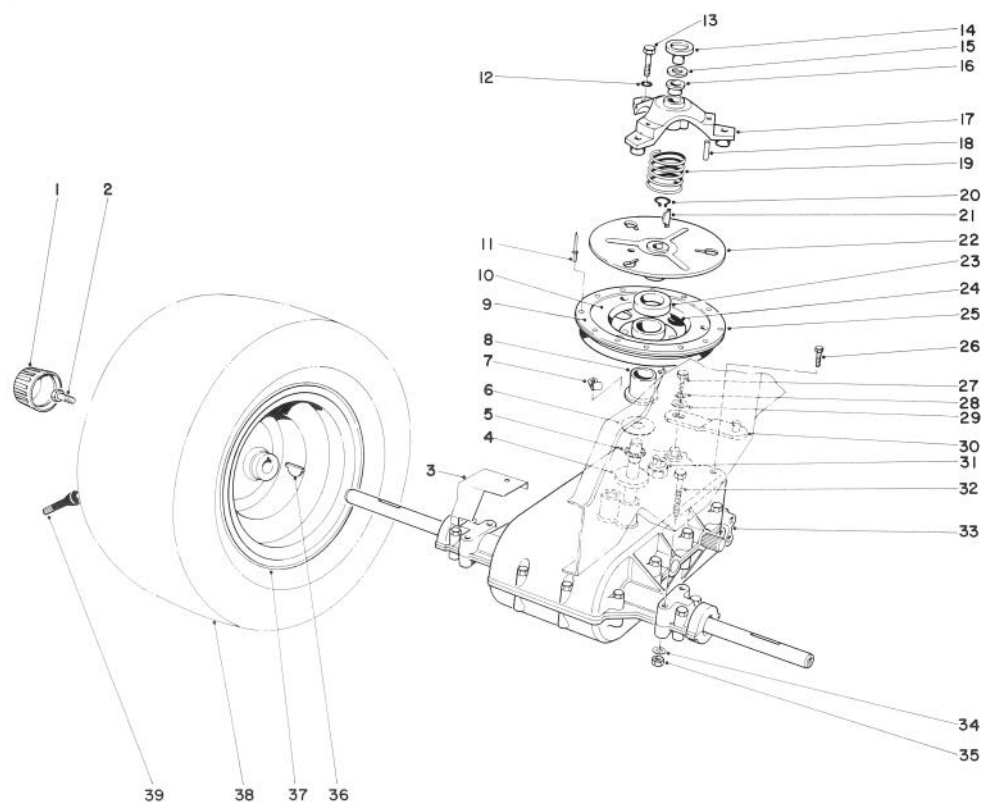


TRANSAXLE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0060	Hub Cap	2
2	36-4030	Capscrew	2
3	29-6940	Shield — Grass	1
4	39-4770	Spacer	1
5	252-58	Thrust Bearing	1
6	27-8820	Thrust Washer	1
7	18-2970	Clamp	1
8		Bushing	1
9	27-8800	Clutch Pad	1
10	40-4630	Retainer Ring	1
11	3269-3	Rivet	12
12	3254-8	Lockwasher	3
13	321-5	Capscrew	3
14	36-2130	Cap Clutch	1
15	252-94	Thrust Race	1
16	256-259	Bushing	1
17	28-2560	Clutch Cover (Incl. Ref. #16 & 18)	1
18	252-92	Needle — Roller	3
19	36-2220	Spring Compression	1
20	32120-64	Retaining Ring	1

Ref. No.	Part No.	Description	No. Used
21	3257-30	Key	1
22	27-9030	Clutch Plate	1
23	28-4220	Felt Washer	1
24	2410-40	Plug	3
25	11-0119	Sheave Assembly (Incl. Ref. #8-11)	1
26	32144-11	Self Tapping Screw	2
27	329-2	Capscrew	1
28	3253-3	Lockwasher	1
29	3256-22	Washer	1
30	28-2380	Shift Bracket	1
31	28-4250	Switch — Neutral	1
32	322-11	Capscrew	4
33	42-5160	Transaxle	1
34	3256-23	Washer	4
35	32152-1	Locknut	4
36	3257-40	Hi Pro Key	2
37	47-5130	Rim	2
38	231-106	Tire	2
39	232-27	Valve Stem & Cap	2
*	231-91	Tube (Optional)	2

*Not Illustrated


PEERLESS TRANSAXLE MODEL 801C

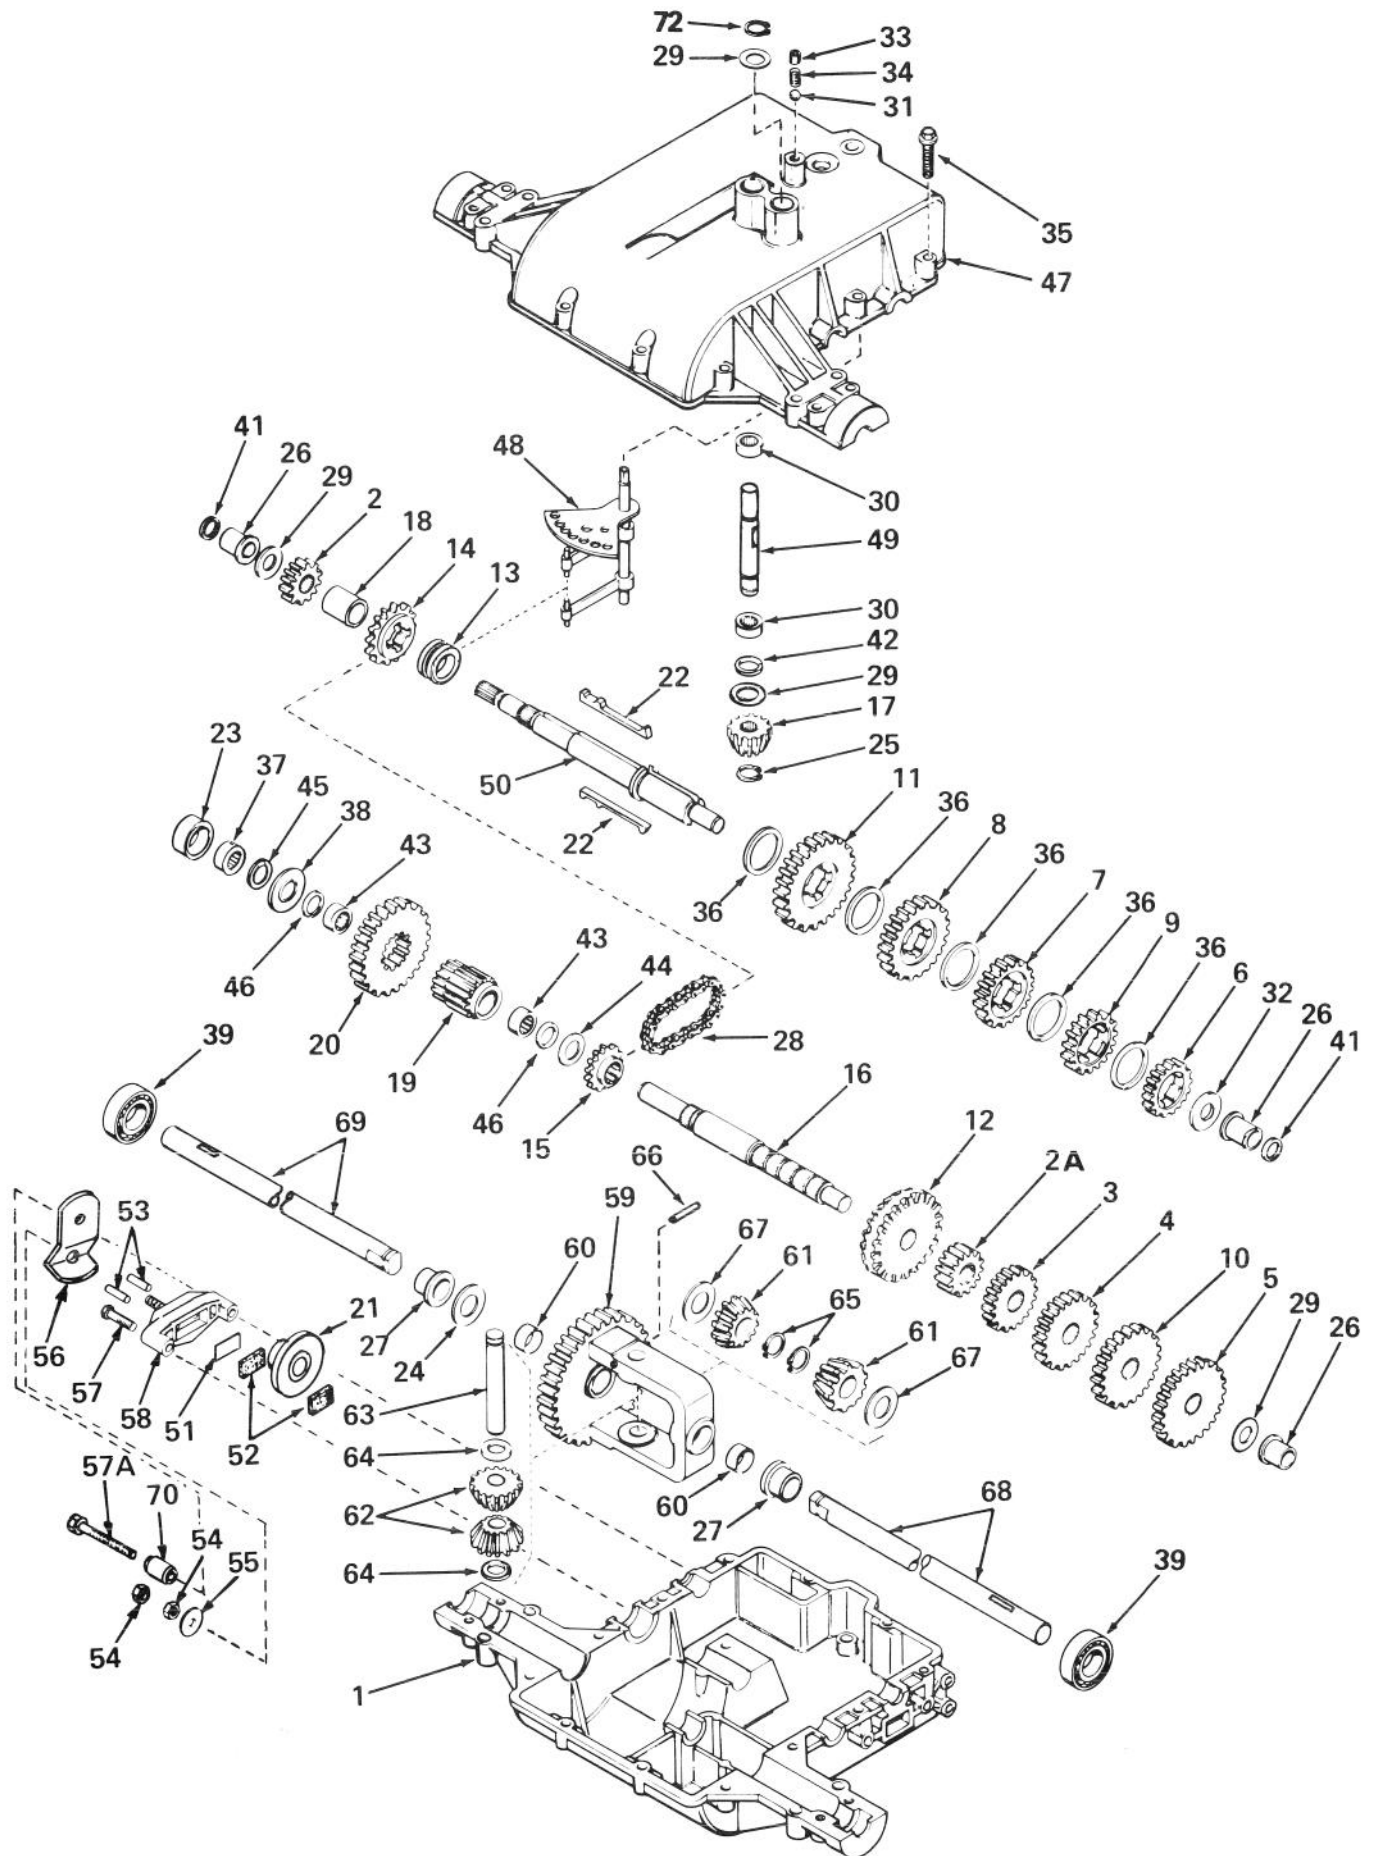

PEERLESS TRANSAXLE MODEL 801C

Ref. No.	Part No.	Description	No. Used
1	770071	Case, Transaxle	1
2	778136	Gear, Spur (15 teeth)	1
2A	778145	Gear, Spur (12 teeth)	1
3	778126A	Gear, Spur (20 teeth)	1
4	778127A	Gear, Spur (25 teeth)	1
5	778129A	Gear, Spur (30 teeth)	1
6	778121A	Gear, Spur (20 teeth)	1
7	778123A	Gear, Spur (25 teeth)	1
8	778124A	Gear, Spur (30 teeth)	1
9	778122A	Gear, Spur (22 teeth)	1
10	778128A	Gear, Spur (28 teeth)	1
11	778146	Gear, Spur (37 teeth)	1
12	778137	Gear, Bevel (42 teeth)	1
13	784266	Collar, Shift	1
14	786083	Sprocket (18 teeth)	1
15	786082	Sprocket (9 teeth)	1
16	776181	Shaft, Counter	1
17	778113A	Bevel Pinion, Input	1
18	786074	Spacer	1
19	778138	Pinion, Output	1
20	778139	Gear, Output	1
21	790003	Disk, Brake	1
22	792089A	Key	1
23	786075	Spacer	1
24	780001	Washer	1
25	788040	Ring, Retaining	1
26	780105	Bushing, Flanged	1
27	780118	Bushing, Flanged	1
28	786081	Chain, Roller (No. 41 chain, 24 links)	1
29	780072	Washer, Thrust	1
30	780086	Bearing, Needle	1
31	792077	Ball, Steel	1
32	780109	Washer, Thrust	1
33	792078	Screw, Set	1
34	792079	Spring	1
35	792073	Screw, Hex Hd. Thread Forming	1
36	780108	Washer, Thrust	1

Ref. No.	Part No.	Description	No. Used
37	780111	Bearing, Needle	1
38	780113	Washer, Flat	1
39	780119	Bearing, Ball	1
41	788051	Ring, Square Cut	1
42	792001	Ring, Square Cut	1
43	780112	Bearing, Needle	1
44	780114	Washer, Flat	1
45	788052	Ring, Square Cut	1
46	788053	Ring, Square Cut	1
47	772078A	Cover, Transaxle	1
48	784290	Rod & Fork Assy., Shift	1
49	776182A	Shaft, Input	1
50	776183	Shaft, Brake	1
51	790007	Plate, Brake Pad	1
52	790006	Pad, Brake	1
53	786026	Pin, Dowel	1
54	792075	Locknut	1
55	792076	Washer, Flat	1
56	790022	Lever, Brake	1
57	792073	Screw, Hex Hd. Thread Forming	1
57A	792085	Screw, Hex Hd. Thread Forming	1
58	790020	Holder, Brake Pad	1
59	778053A	Gear Assy., Differential (Incl. 2 of No. 60)	1
60	780064	Bushing	1
61	778067	Gear, Bevel	1
62	778068	Pinion, Bevel	1
63	786034	Pin, Drive	1
64	780065	Washer, Thrust	1
65	792018	Ring, Retaining	1
66	792040	Pin, Roll	1
67	780001	Washer, Thrust	1
68	774364A	Axle (14-7/8" long)	1
69	774363A	Axle (13" long)	1
70	786067	Spacer	1
72	792035	Ring, Retaining	1

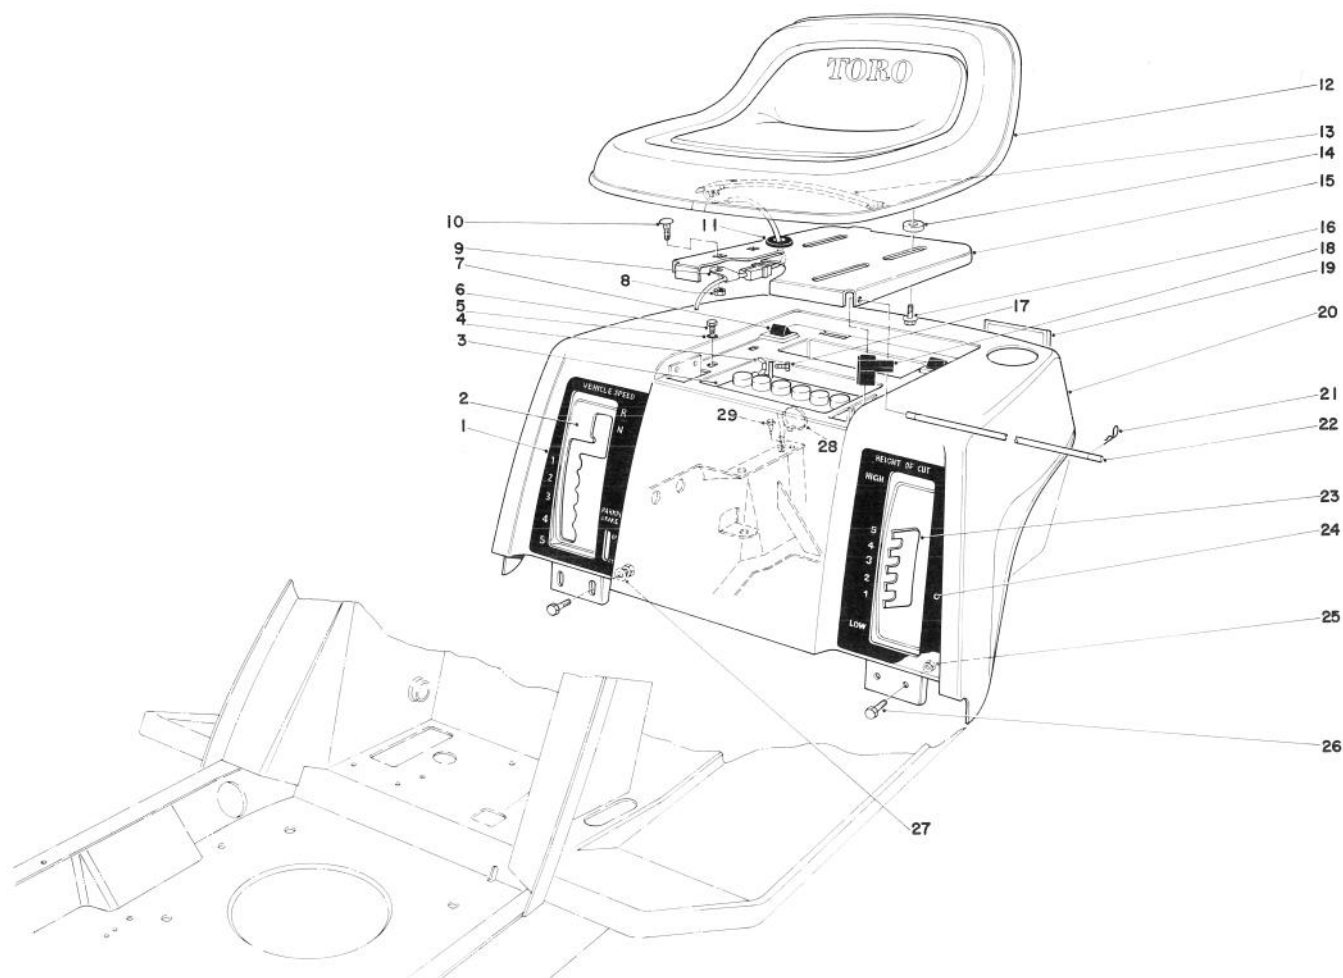


REAR BODY & SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	36-1530	Decal — Transmission	1
2	28-0370	Plate — Detent	1
3	28-1400	Battery (Model #57300)	1
*	239-21	Battery Vent Tube	1
*	29-9870	Battery (Model #57360)	1
4	32103-22	Wing Nut	2
5	5-1350	Washer	4
6	32144-11	Hex Hd. Self Tapping Screw	4
7	28-9440	Seat Bumper	2
8	32149-2	Locknut	2
9	2412-66	Clamp	2
10	3229-11	Carriage Bolt	2
11	237-100	Grommet	1
12	28-0840	Seat (Model #57360)	1
*	38-0850	Seat (Model #57300)	1
13	38-1420	Seat Switch	1
14	26-4840	Spacer	4


Ref. No.	Part No.	Description	No. Used
15	36-1490	Seat Support	1
16	3234-5	Hex Flange Capscrew	4
17	321-3	Capscrew	2
18	28-8080	Boot Terminal	1
19	218-491	Reflector	2
20	11-5669	Rear Body Assembly (Incl. Ref. #1 & 24)	1
21	3290-307	Hair Pin Cotter	2
22	28-2400	Pivot Rod — Seat	1
23	44-5730	Quadrant Height-of-Cut	1
24	44-5840	Decal — Height-of-Cut	1
25	32152-1	Locknut	4
26	322-2	Capscrew	4
27	3256-23	Washer	2
28	3290-378	Cable Tie	1
29	32104-76	Self Tapping Screw	1

*Not Illustrated

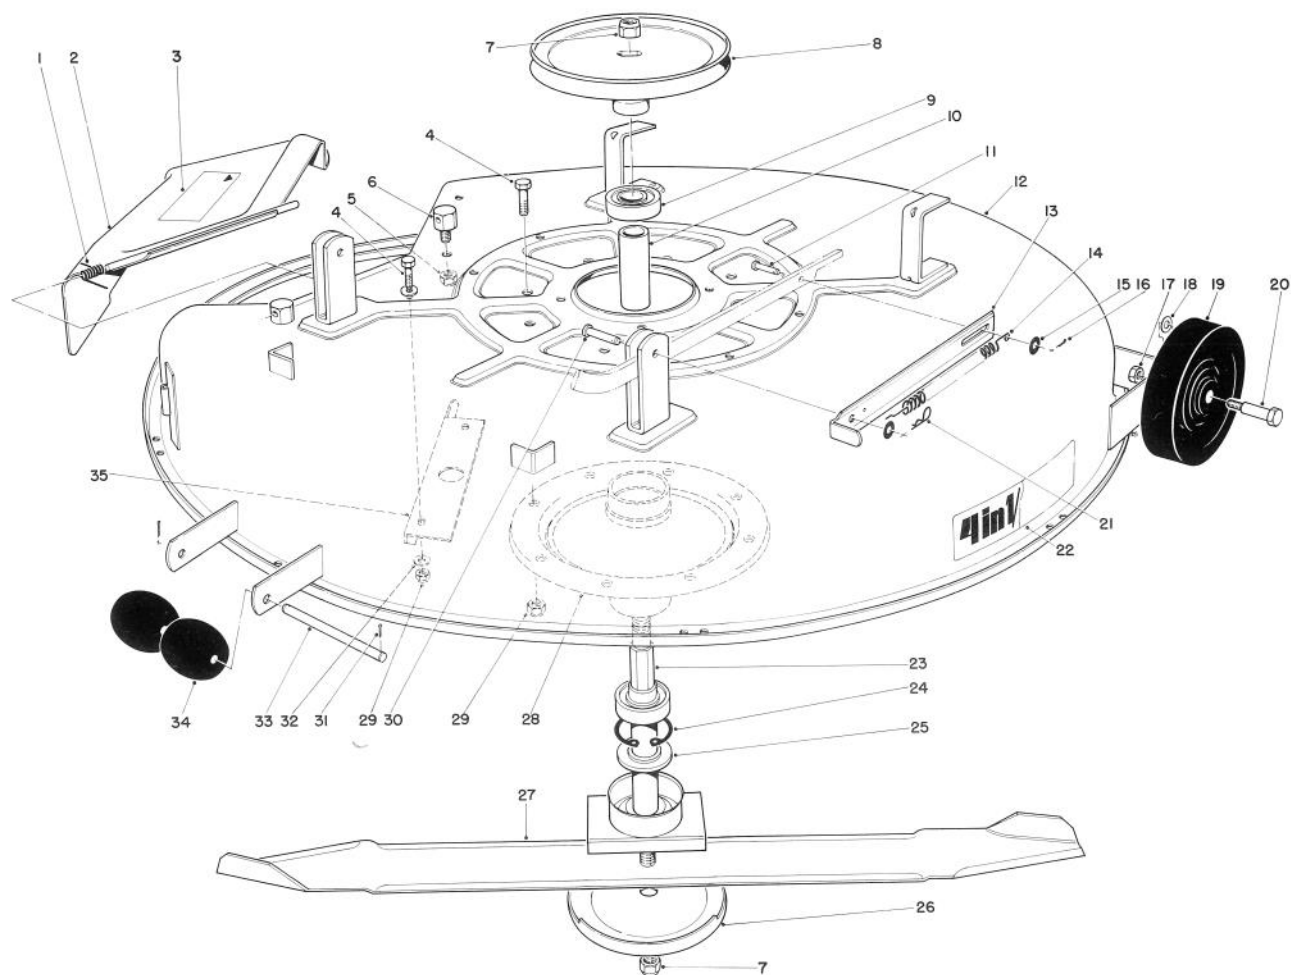

CUTTING DECK MODEL 59130


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	28-8010	Spring	1	18	3256-24	Washer	2
2	44-5930	Deflector Assembly (Incl. Ref. #3)	1	19	29-6010	Wheel	2
3	12-2890	Decal — Deflector	1	20	3-2652	Wheel Bolt	2
4	322-4	Capscrew	10	21	3290-250	Hair Pin Cotter	2
5	32153-2	Locknut	1	22	47-7240	Decal — Deck	1
6	28-7350	Pivot Post — Deflector	1	23	47-0090	Spindle Shaft	1
7	17-0980	Locknut	2	24	32120-11	Ring — Retaining	1
8	28-8000	Pulley — Blade Drive	1	25	47-0110	Spacer — Spindle	1
9	251-297	Bearing	2	26	7-3522	Anti-Scalp Cup	1
10	47-0100	Spacer — Bearing	1	27	33-4750	Blade	1
11	283-2	Clevis Pin	2	28	47-0120	Spindle Tube	1
12	47-4910	Cutter Deck	1	29	3296-29	Locknut	10
13	39-5370	Strap — Deck Spring	2	30	283-15	Clevis Pin	2
14	28-2340	Spring — Deck Tension	2	31	3272-11	Cotter Pin	2
15	3256-24	Washer	4	32	3256-23	Washer	4
16	3272-6	Cotter Pin	2	33	7-0277	Shaft — Roller	1
17	32146-6	Locknut	2	34	29-4820	Roller	2
				35	44-5720	Baffle — Deck	1

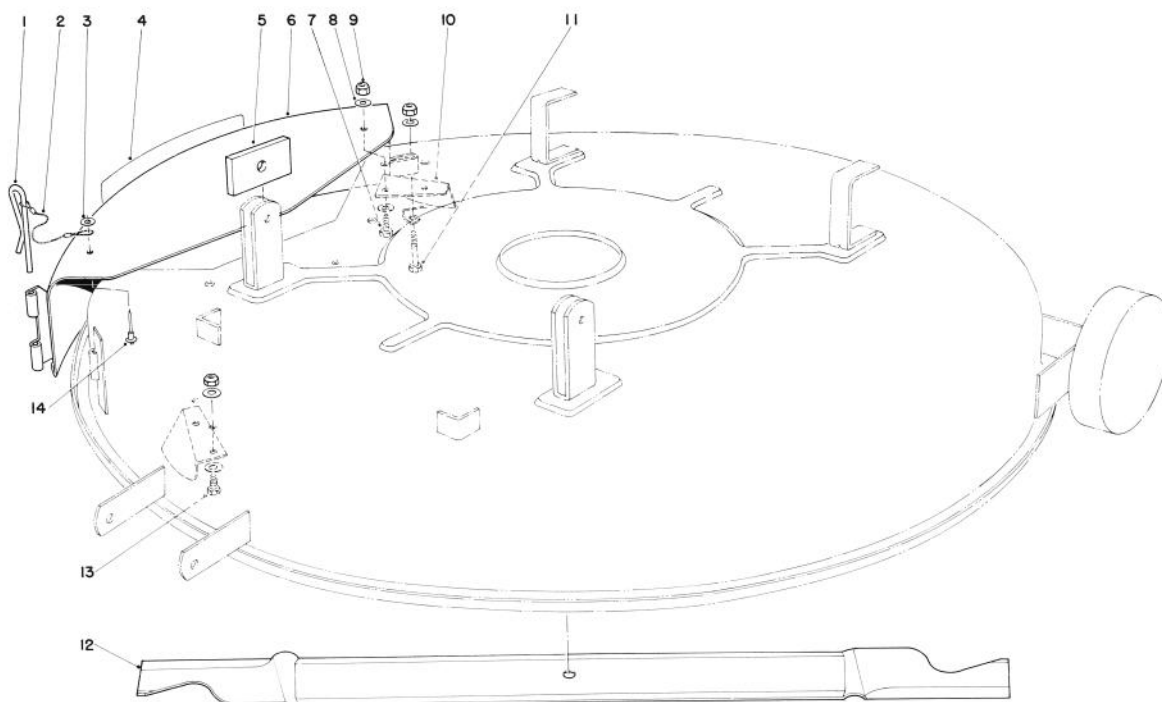

MULCHER KIT MODEL 59155 (Optional)

Ref. No.	Part No.	Description	No. Used
1	28-8130	Pin — Chute Locking	1
2	28-8070	Lanyard	1
3	3256-49	Washer	1
4	44-5910	Decal — Mulcher Cover	1
5	44-5820	Spacer — Deck Angle	2
6	44-5700	Cover — Mulcher Assembly (Incl. Ref. #1-4 & 14)	1
7	322-5	Capscrew — Hex Head	1

Ref. No.	Part No.	Description	No. Used
8	3256-23	Washer	9
9	3296-29	Locknut	5
10	44-5810	Kicker	2
11	322-10	Capscrew — Hex Head	1
12	39-3480	Blade — Mulcher	1
13	322-3	Capscrew — Hex Head	3
14	3290-282	Rivet — Pop	1

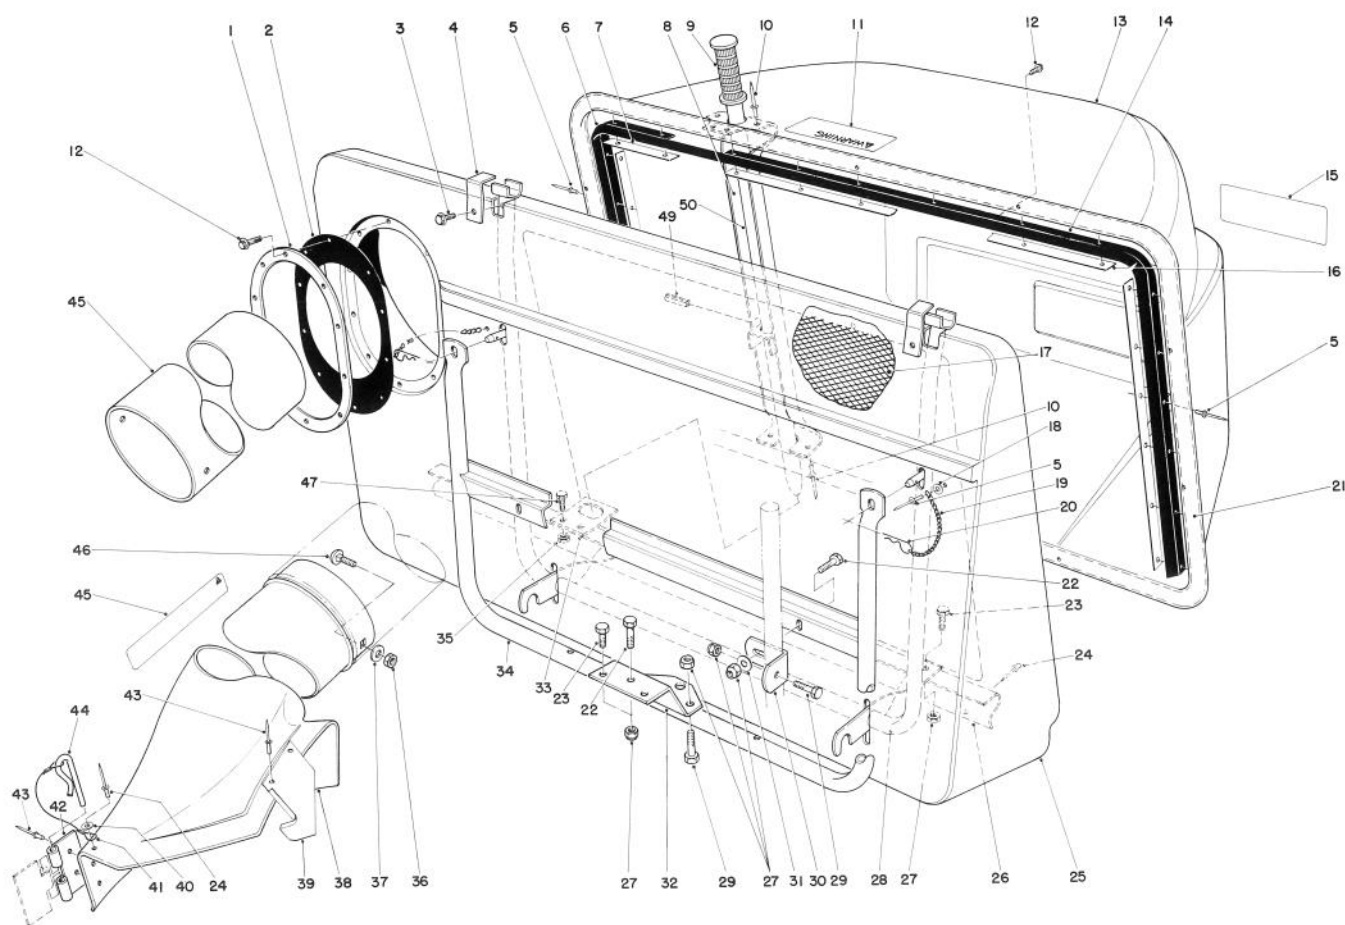


EASY-EMPTY GRASS CATCHER MODEL 59111 (Optional)

Ref. No.	Part No.	Description	No. Used
1	28-7760	Ring — Retainer	1
2	28-7770	Ring — Retainer Rubber	1
3	32104-60	Screw — Hex Hd. Self Tapping	2
4	28-7700	Retainer Pivot Bracket	2
5	3290-415	Domed Head Rivet	22
6	36-2520	Seal — Bag R.H.	1
7	29-5540	Retainer — Ext. Top	1
8	38-2920	Channel — Dump Handle	1
9	233-40	Grip Handle	1
10	3290-409	Domed Head Rivet	16
11	46-2850	Decal — Warning	1
12	32104-76	Screw — Self Tapping	18
13	36-2120	Grass Basket — Rear	1
14	36-2530	Seal — Bag L.H.	1
15	25-2200	Decal	1
16	29-5550	Retainer — Ext. Bag	3
17	28-7840	Screen — Bag	1
18	5-1254	Washer	2
19	2830-10	Chain	2
20	3290-355	Hair Pin Cotter	2
21	28-7670	Frame — Bag Support	1
22	322-5	Capscrew — Hex Hd.	3
23	322-2	Capscrew — Hex Hd.	4
24	3290-282	Rivet	6
25	28-7810	Bag Front	1
26	28-7830	Frame Support Bracket	1

Ref. No.	Part No.	Description	No. Used
27	32152-1	Locknut	11
28	28-7710	Bag Frame	1
29	322-7	Capscrew — Hex Hd.	4
30†	47-2020	Bracket — Mtg. Grass Catcher	2
31	3256-23	Washer — Plain	2
32†	47-2030	Bracket — Mtg. Grass Catcher	1
33	28-7820	Hanger — Frame Tower	1
34	28-7780	Bag Support	1
35	32152-4	Locknut	2
36	32149-2	Locknut	2
37	3256-22	Washer	2
38	28-8060	Chute Assembly (Incl. Ref. #24, 39-45)	1
39	33-2090	Bracket — Chute Support	1
40	3256-49	Washer	1
41	28-8070	Lanyard	1
42	28-8050	Bracket — Chute Mounting	1
43	3290-412	Rivet	4
44	28-8130	Pin — Chute Locking	1
45	26-7030	Decal — Instruction Chute	1
46	3229-1	Carriage Bolt	2
47	321-3	Capscrew — Hex Hd.	2
48	36-7900	Duct	1
49	32121-79	Roll Pin	1
50	29-5470	Dump Handle	1
*	11-4569	Loose Parts	1

*Not Illustrated

†Note: Used For Mounting Easy-Empty Grass Catcher on Rear Engine Riders Only.

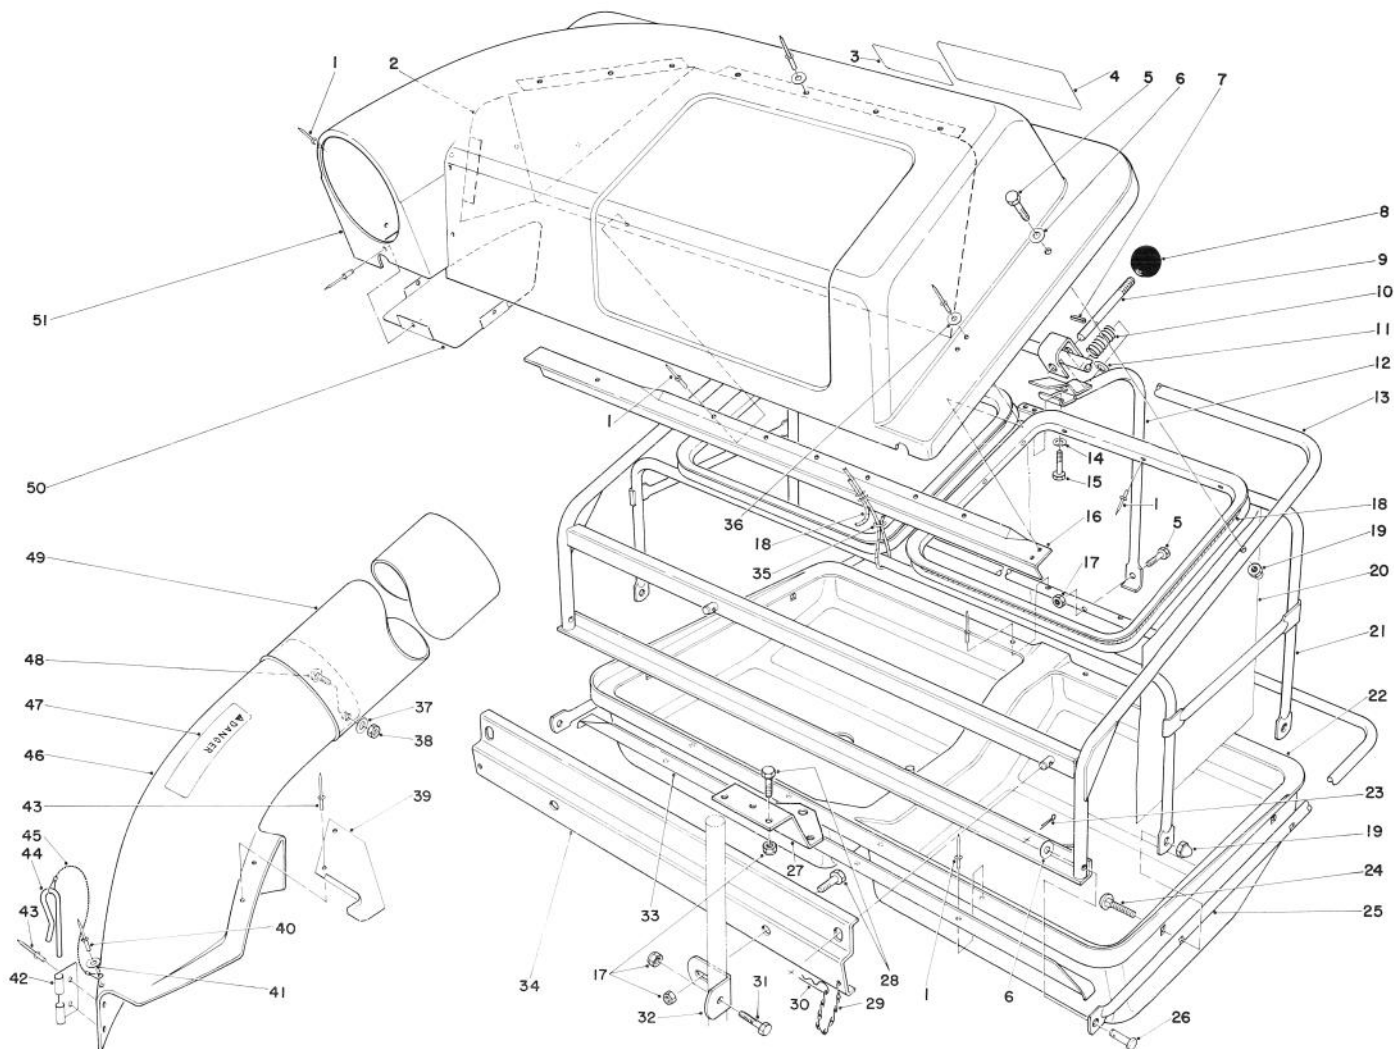


EASY-FILL GRASS CATCHER MODEL 59120 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3290-409	Pop Rivet	45
2	36-4230	Screen Cover	1
3	36-7860	Decal — Latch Operation	1
4	36-4570	Decal — "Easy Fill"	1
5	322-17	Capscrew	5
6	3256-23	Washer	6
7	32121-18	Roll Pin	1
8	233-48	Knob	1
9	36-4490	Lever — Latch	1
10	36-8410	Compression Spring	1
11	3256-26	Washer	1
12	36-4500	Handle Assembly	1
13	36-4600	Frame Assembly	1
14	3253-3	Lockwasher	2
15	321-7	Capscrew	2
16	36-4840	Bracket Screen Support	1
17	32152-1	Locknut	8
18	36-7770	Retainer Cord	2
19	32111-8	Acorn Nut	8
20	36-7870	Curtain	2
21	36-4580	Bag Support Assembly	1
22	36-3370	Hopper	1
23	3272-10	Cotter Pin	2
24	3230-3	Carriage Bolt	4
25	36-4440	Hopper Support Tube	1
26	283-18	Clevis Pin	2
27†	47-2030	Bracket Mtg. Grass Catcher	1

Ref. No.	Part No.	Description	No. Used
28	322-5	Capscrew	5
29	2830-9	Chain	2
30	3290-355	Hair Pin Cotter	2
31	322-7	Capscrew	2
32†	47-2020	Bracket Mtg. Grass Catcher	2
33	36-8270	Hopper Support Strap	1
34	36-4550	Bracket Frame Support	1
35	249-27	Coupler	2
36	3256-14	Washer	18
37	3256-22	Washer — Plain	2
38	32149-2	Locknut	2
39	33-2090	Chute Support Bracket	1
40	3290-282	Pop Rivet	1
41	3256-49	Washer — Plain	1
42	28-8050	Chute Mounting Bracket	1
43	3290-412	Pop Rivet	4
44	28-8130	Chute Locking Pin	1
45	28-8070	Lanyard	1
46	28-8060	Chute Assembly (Incl. Ref. #39-45 & 47)	1
47	26-7030	Decal — Instruction Chute	1
48	3229-1	Carriage Bolt	2
49	36-7900	Duct	1
50	47-6760	Shield Cover	1
51	47-7520	Cover	1
*	33-1060	Cloth Bag (Optional)	2
*	8-1789	Loose Parts	1

* Not Illustrated

† Note: Used For Mounting Easy-Fill Grass Catcher on Rear Engine Riders Only.

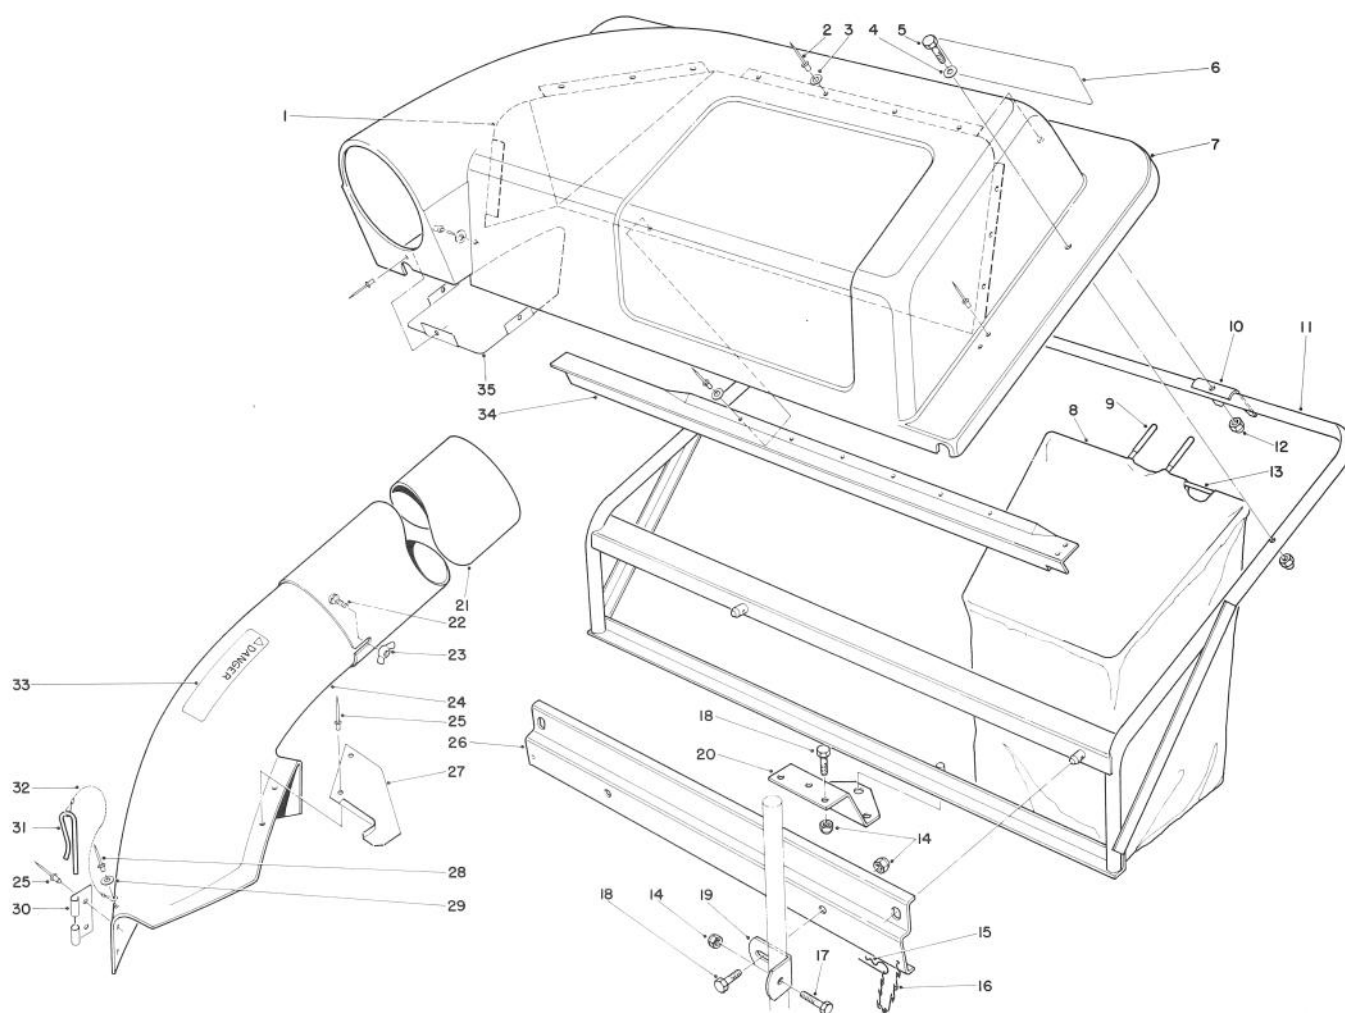


TWIN BAGGER GRASS CATCHER MODEL NO. 59122 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	36-4230	Screen — Cover	1	20†	47-2030	Plate — Mtg. Grass Catcher	1
2	3290-409	Rivet — Pop	23	21	47-7210	Duct	1
3	3256-14	Washer — Plain	19	22	3229-1	Carriage Bolt	2
4	3256-23	Washer — Plain	4	23	32103-14	Nut — Wing	2
5	322-17	Screw — Cap Hex Hd.	4	24	28-8060	Chute Assembly (Incl. Ref. #25, 27-33)	1
6	47-6890	Decal — Twin Bagger	1	25	3290-412	Pop Rivet	4
7	47-2190	Cover	1	26	36-4550	Bracket — Frame Support	1
8	47-2570	Bag — Twin Bagger	2	27	33-2090	Bracket Chute Support	1
9	47-2550	Grip — Bag Handle	2	28	3290-282	Pop Rivet	1
10	47-2580	Bracket — Bag Frame	2	29	3256-49	Washer — Plain	1
11	32111-8	Nut — Acorn	4	30	28-8050	Bracket Chute Mounting	1
12	47-2630	Frame	1	31	28-8130	Pin — Chute Locking	1
13	47-2620	Frame — Bag	1	32	28-8070	Lanyard	1
14	32152-1	Nut — Lock	7	33	26-7030	Decal — Instruction Chute	1
15	3290-355	Hair Pin Cotter	2	34	47-2650	Bracket — Screen Support	1
16	2830-9	Chain	2	35	47-6760	Shield — Cover	1
17	322-7	Capscrew	2	*	11-5459	Loose Parts	1
18	322-5	Capscrew	5	*	505-78	Adhesive — Plastic	1
19†	47-2020	Bracket — Mtg. Grass Catcher	2				

*Not Illustrated

†Note: Used For Mounting Twin Bagger Grass Catcher on Rear Engine Riders Only.

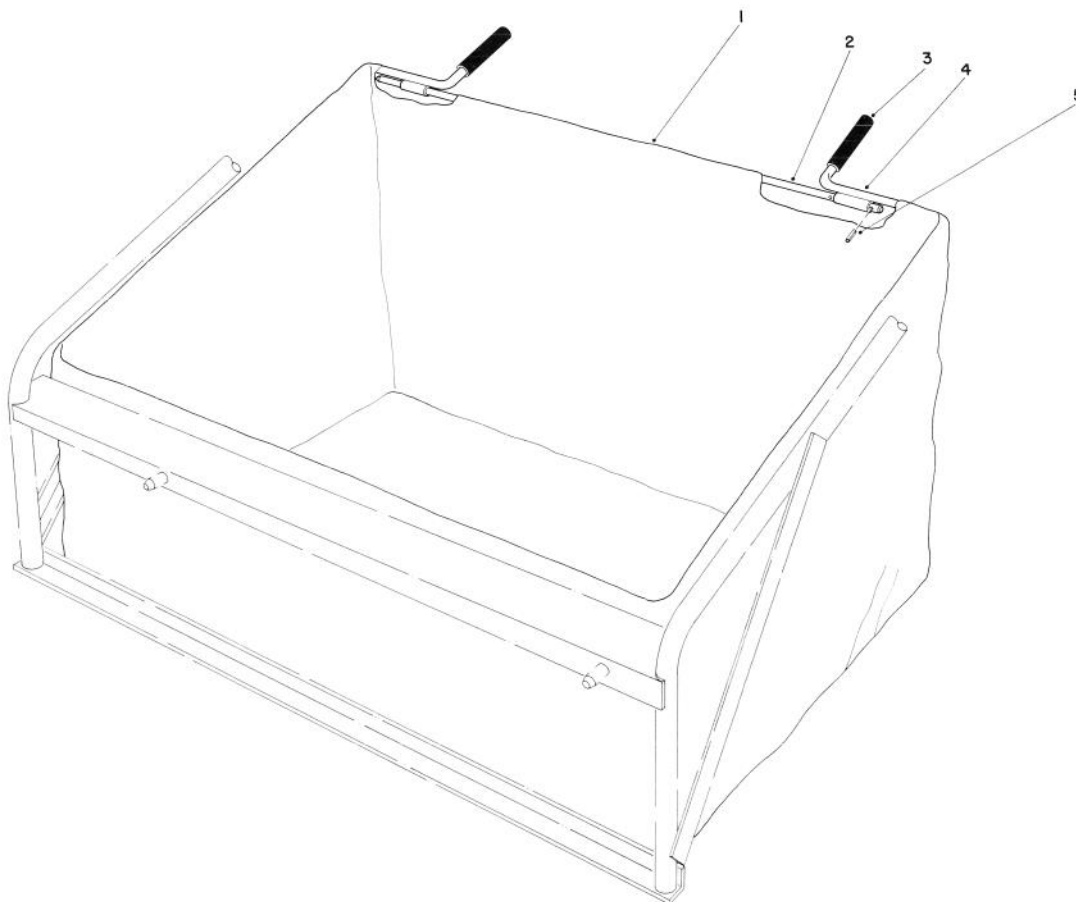


LEAF BAG MODEL 59123 (FOR USE ON TWIN BAGGER GRASS CATCHER) (Optional)

Ref. No.	Part No.	Description	No. Used
1	47-6860	Bag — Leaf Catcher	1
2	47-6800	Rod — Bag Frame	1
3	47-6710	Grip — Leaf Bag Handle	2

Ref. No.	Part No.	Description	No. Used
4	47-6830	Bag Frame	1
5	32121-73	Rollpin	2
*	505-78	Adhesive — Plastic	1


* Not Illustrated

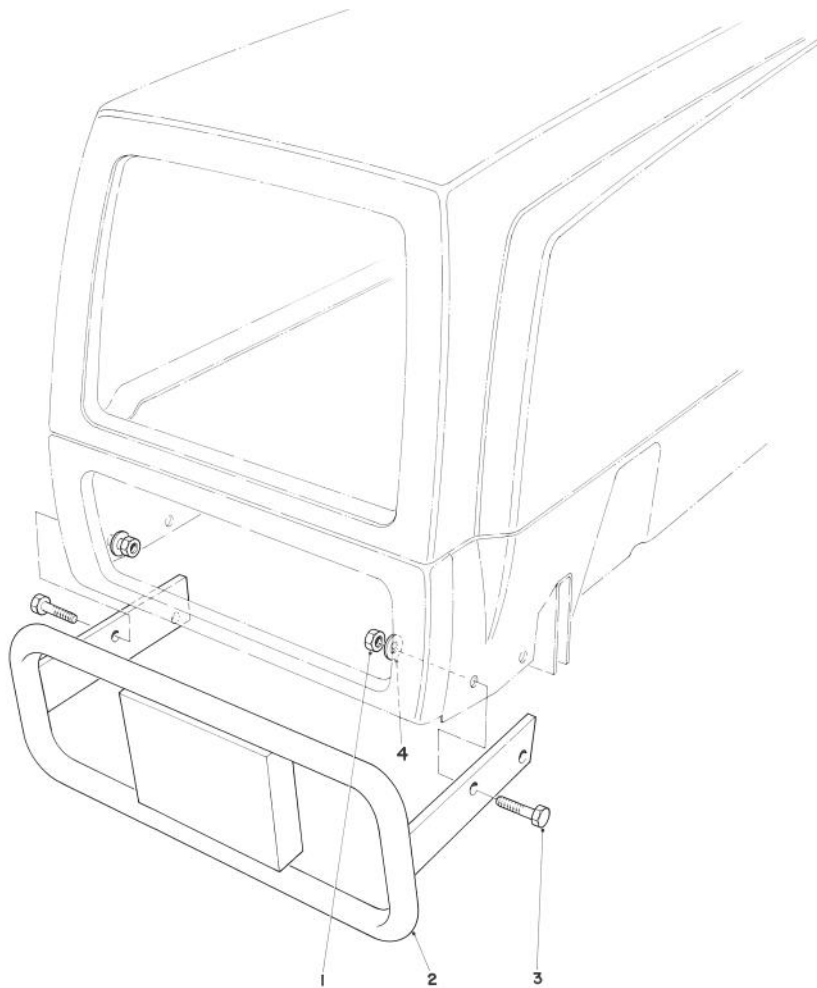

BUMPER KIT MODEL NO. 59102 (Optional)

Ref. No.	Part No.	Description	No. Used
1	32152-1	Locknut	4
2	29-4390	Bumper	1


Ref. No.	Part No.	Description	No. Used
3	322-5	Hex Hd. Capscrew	4
4	3256-23	Washer	4

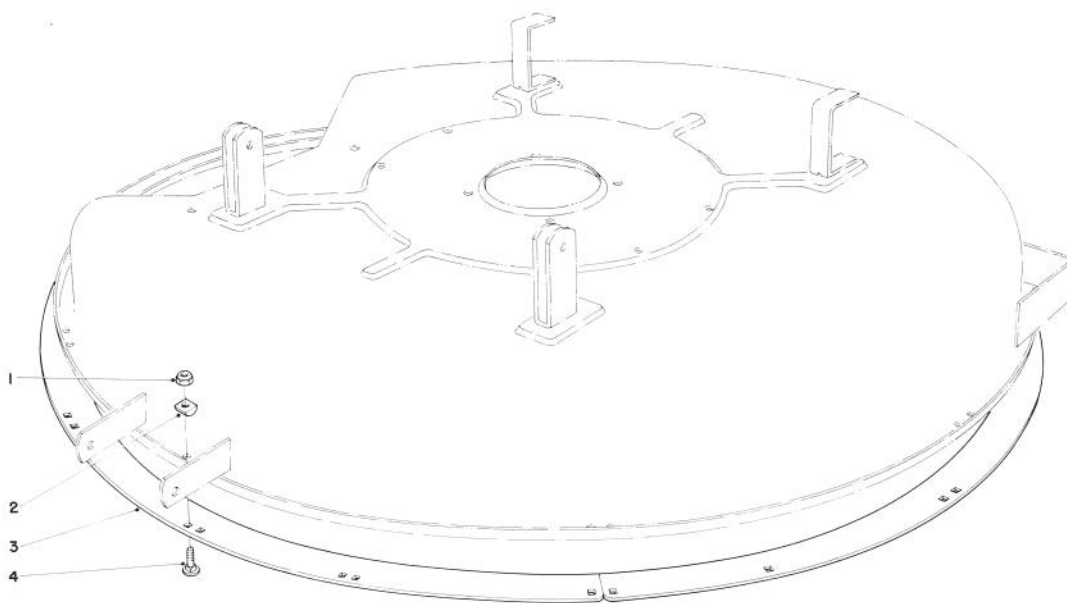

WET GRASS BAGGING KIT NO. 38-5730 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3296-29	Locknut	12
2	38-5690	Spacer – Deck Ring	12

Ref. No.	Part No.	Description	No. Used
3	38-6030	Ring – Deck	4
4	3230-2	Carriage Bolt	12

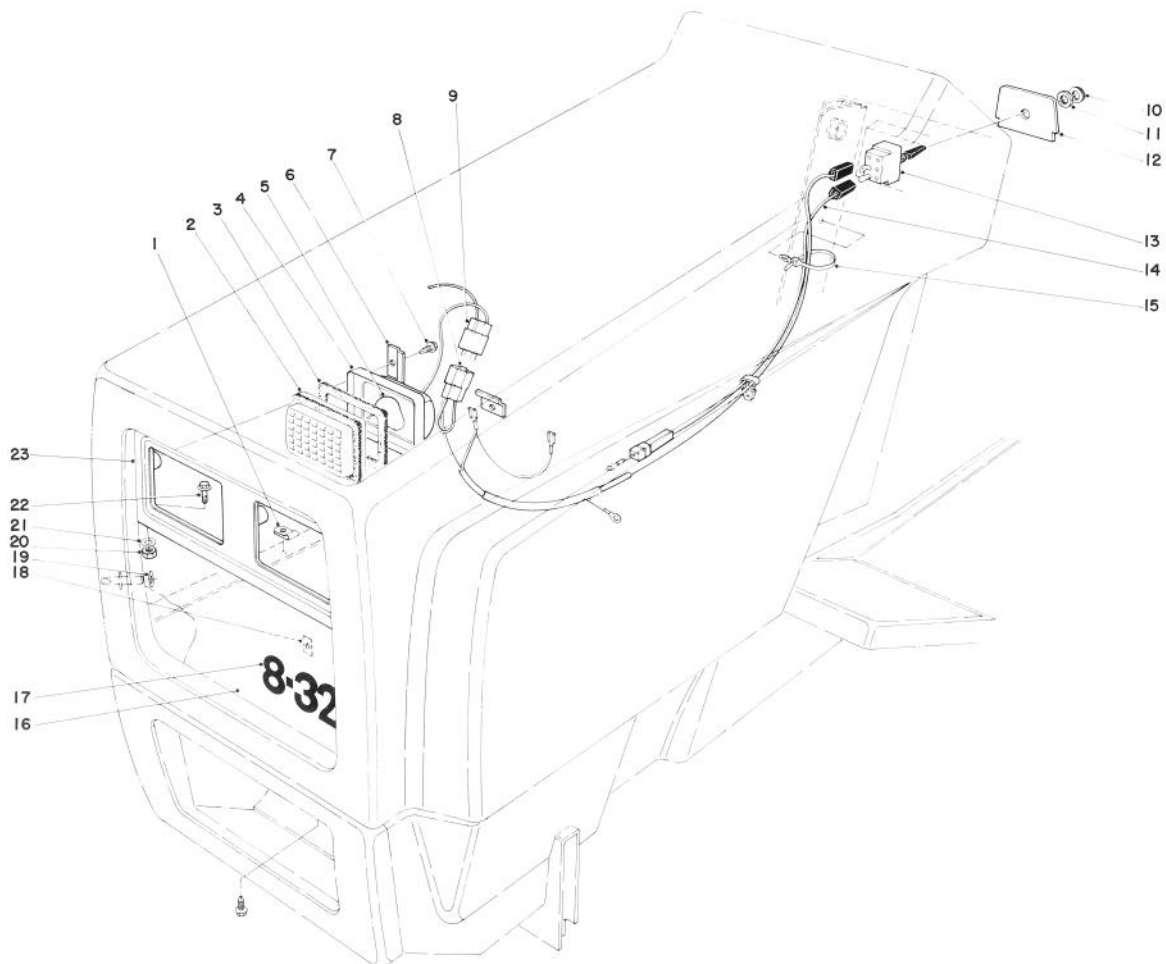


HEADLIGHT KIT NO. 38-5760 (Optional)

Ref. No.	Part No.	Description	No. Used
1	2412-51	Clamp	1
2	219-14	Lens	2
3	219-13	Gasket Lens	4
4	38-2580	Reflector Assembly	2
5		Bulb GE #1156	2
6	28-0050	Clamp Headlight	3
7	32104-76	Self Tapping Screw	3
8	218-493	Connector	1
9	218-508	Socket	1
10	218-497	Beveled Facenut	1
11	218-498	Locknut	1
12	28-2510	Insert — Dash Panel	1

Ref. No.	Part No.	Description	No. Used
13	28-4110	Light Switch	1
14	38-1030	Wire Harness	1
15	3290-378	Cable Tie	5
16	28-0020	Grille Headlight	1
17	28-2660	Nameplate Grille	1
18	3290-299	Tinnerman Nut	2
19	5-1350	Washer	2
20	32153-1	Locknut	2
21	3256-21	Washer	2
22	3290-144	Hex Hd. Machine Screw	2
23	28-0040	Panel Headlight	1
*	8-3579	Headlight Assembly (Incl. Ref. #2-5)	2


*Not Illustrated

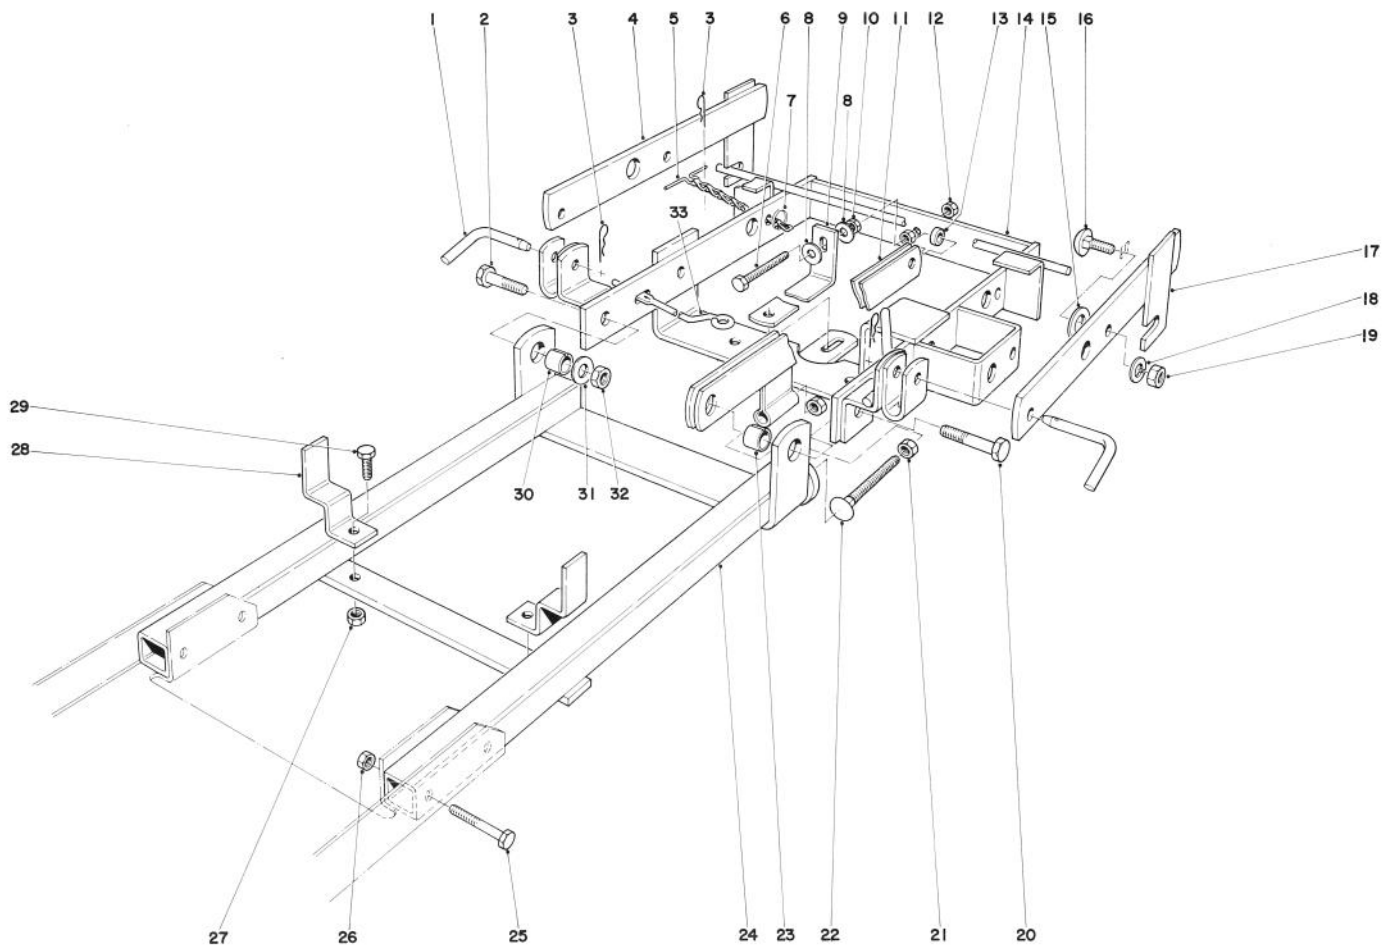

36" SNOWTHROWER ATTACHMENT MODEL NO. 59136 (Optional)

Ref. No.	Part No.	Description	No. Used
1	40-1330	Pin-Roller, Locating	2
2	325-7	Hex Head Capscrew	1
3	3290-225	Hair Pin Cotter	3
4	40-1340	Mounting Bracket — R.H.	1
5	40-1300	Chain & Toggle	1
6	323-15	Hex Head Capscrew	1
7	40-1310	Spring Clip	1
8	3256-4	Washer	2
9	40-1220	Bracket — Belt Adjust	1
10	3218-3	Jam Nut	2
11	40-0940	Lift Extension	1
12	3217-7	Nut	1
13	40-0980	Spacer	1
14	40-1200	Mounting Frame — Upper	1
15	40-1320	Washer — Flat	2
16	3233-23	Carriage Bolt	2
17	40-1350	Mounting Bracket — L.H.	1


Ref. No.	Part No.	Description	No. Used
18	3253-8	Lockwasher	2
19	3217-11	Nut	2
20	325-9	Hex Head Capscrew	1
21	3218-5	Nut — Jam	2
22	40-1590	Carriage Bolt	1
23	40-1360	Spacer — Bearing	1
24	40-0930	Mounting Frame	1
25	322-9	Hex Head Capscrew	4
26	32152-1	Locknut	4
27	32152-2	Locknut	2
28	40-0990	Stop — Position	2
29	323-6	Hex Head Capscrew	2
30	40-1370	Spacer — Idler Pulley	1
31	3256-26	Washer	2
32	32152-3	Locknut	2
33	40-1290	Wire — Belt Guide	1

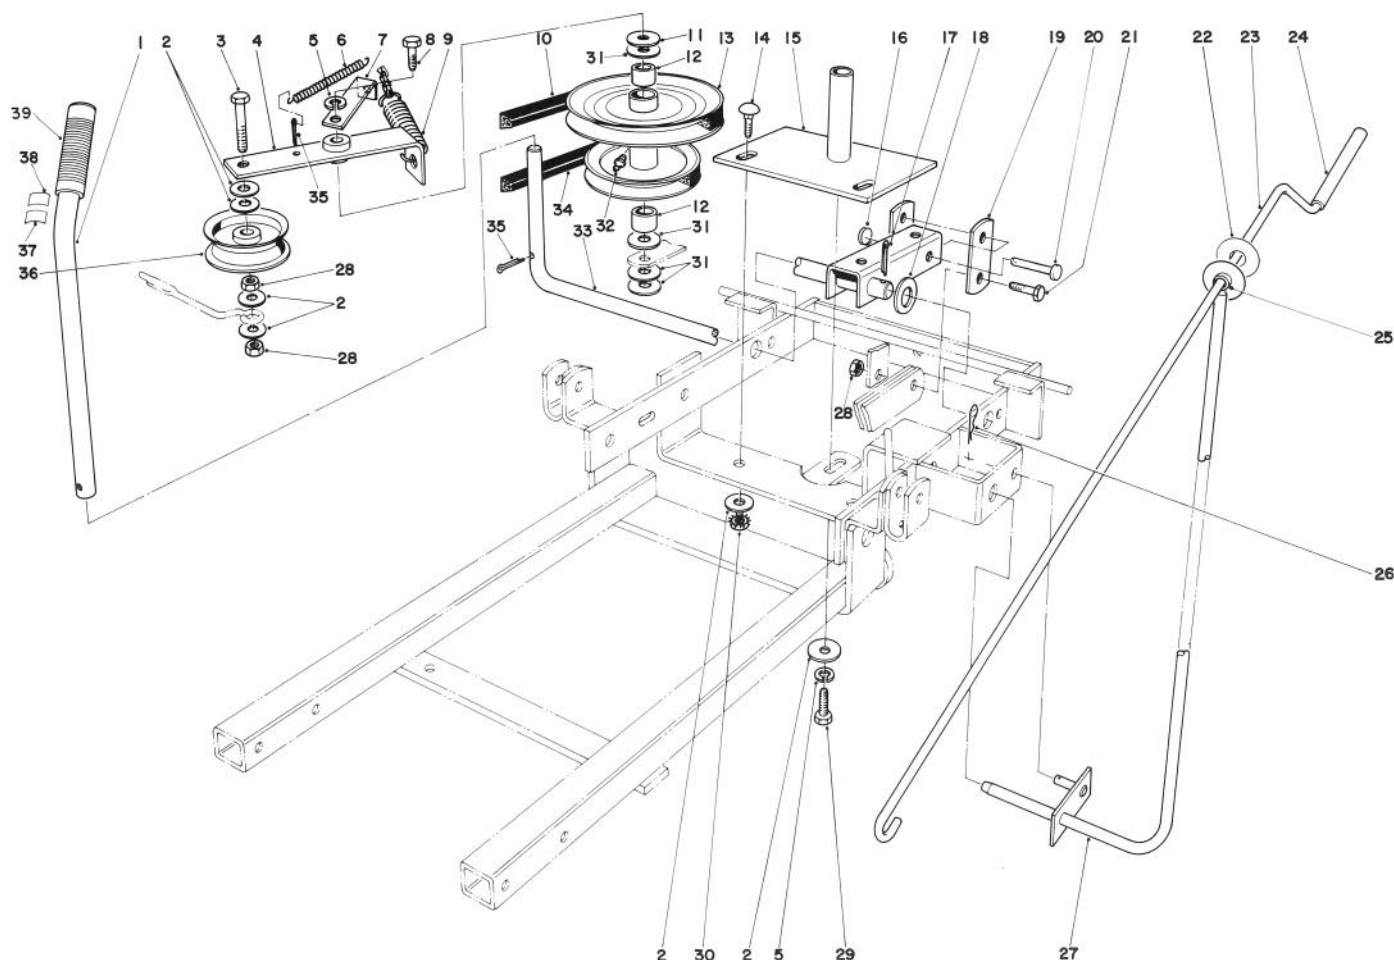

36" SNOWTHROWER ATTACHMENT MODEL 59136 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	40-1010	Lift Handle	1
2	3256-4	Washer	7
3	323-12	Hex Head Capscrew	1
4	40-1250	Idler Arm	1
5	3253-21	Lockwasher	2
6	40-1280	Spring — Detent	1
7	40-1270	Bracket — Spring Anchor	1
8	323-4	Hex Head Capscrew	1
9	40-0730	Spring	1
10	40-1380	V-Belt	1
11	40-0740	Washer	1
12	40-1230	Roller Bearings	2
13	40-1240	Pulley Housing	1
14	3231-2	Carriage Bolt	2
15	40-1210	Mounting Bracket — Pulley	1
16	40-1310	Spring Clip	1
17	3272-12	Cotter Pin	1
18	40-0970	Spacer	1
19	40-0960	Strap — Lift Link	2

Ref. No.	Part No.	Description	No. Used
20	40-0950	Pin — Clevis, Handle	1
21	323-7	Hex Head Capscrew	1
22	40-1410	Decal — Spout Rotation	1
23	40-1110	Rod — Deflector Control	1
24	40-1100	Grip — Handle	1
25	40-1080	Nylon Bushing	1
26	3290-343	Hair Pin Cotter	1
27	40-1090	Crank Rod Support (Incl. Ref. #22 & 25)	1
28	32152-2	Locknut	3
29	323-6	Hex Head Capscrew	1
30	32149-10	Locknut	2
31	3-1000	Washer	4
32	302-5	Grease Fitting	1
33	40-1000	Lift Bar	1
34	40-1390	V-Belt	1
35	3272-21	Cotter Pin	2
36	40-1260	Idler Pulley	1
37	40-1020	Decal — Lift Control	1
38	40-1030	Decal — Raise & Lower	1
39	235-21	Grip Handle	1

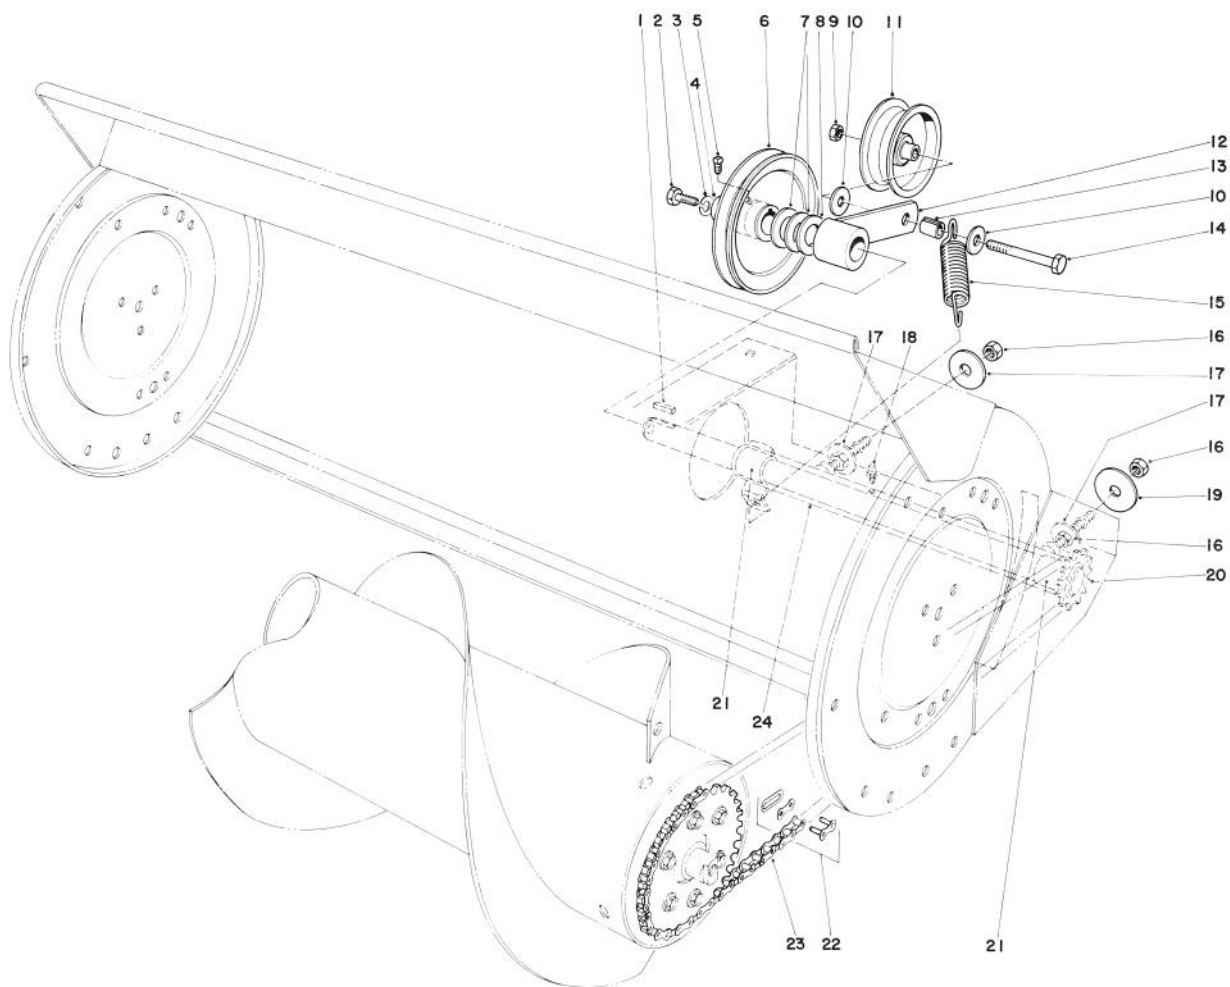


36" SNOWTHROWER ATTACHMENT MODEL NO. 59136 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	21-5070	Key	1
2	323-4	Hex Head Capscrew	1
3	3253-21	Lockwasher	1
4	3256-3	Washer	1
5	3242-2	Set Screw	2
6	40-0860	Pulley	1
7	3-1000	Washer	2
8	40-0740	Washer	1
9	32152-2	Locknut	1
10	3256-4	Washer	2
11	40-1260	Idler Pulley	1
12	40-0710	Idler Arm	1
13	40-0980	Spacer	1

Ref. No.	Part No.	Description	No. Used
14	323-12	Hex Head Capscrew	1
15	40-0730	Spring	1
16	3217-9	Nut	4
17	3256-5	Washer	3
18	302-5	Grease Fitting	1
19	40-0720	Flat Washer	1
20	40-0770	Shaft & Sprocket	1
21	40-0750	Bushing — Jackshaft	2
22*	2710-6	Repair Kit — Roller Chain	1
23	40-0700	Roller Chain — Endless	1
24	40-0760	Jackshaft Housing (Incl. Ref. #18)	1


*Repair only

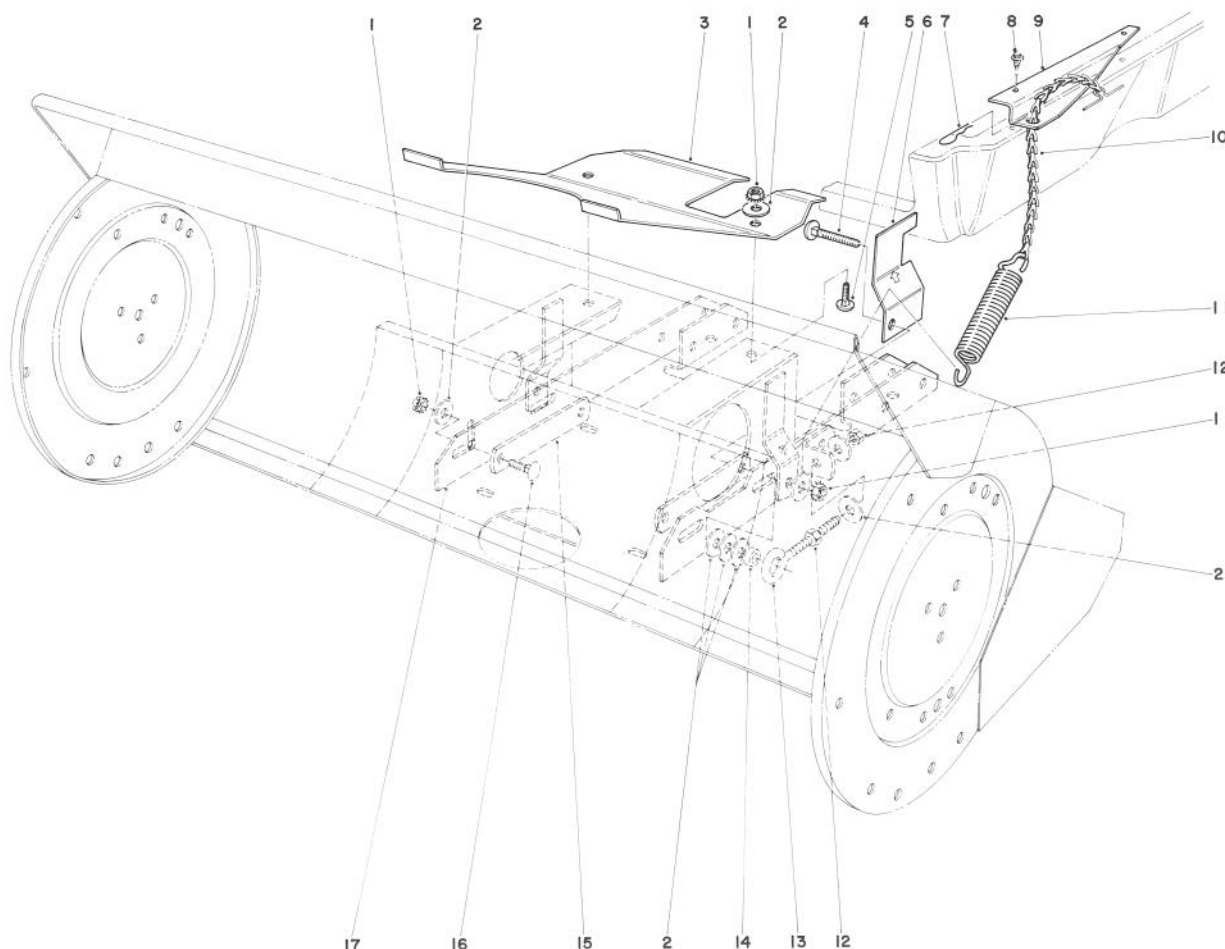

36" SNOWTHROWER ATTACHMENT MODEL NO. 59136 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	32149-10	Locknut	6
2	3256-4	Washer	16
3	40-0920	Guard — Drive Pulley	1
4	3231-7	Carriage Bolt	2
5	3231-21	Carriage Bolt	2
6	40-0900	Bracket — Belt Adjust Guide	1
7	3290-343	Hair Pin Cotter	1
8	32104-76	Screw — Self Tapping	2
9	40-0680	Plate — Lift Spring Anchor	1

Ref. No.	Part No.	Description	No. Used
10	40-0660	Chain & Toggle	1
11	40-0670	Spring — Idler Arm	1
12	3217-7	Nut	4
13	40-0880	Eye Bolt	2
14	40-0980	Spacer	2
15	40-0890	Strap — Header Channel	2
16	3231-2	Carriage Bolt	2
17	40-0910	Pivot Bracket	1

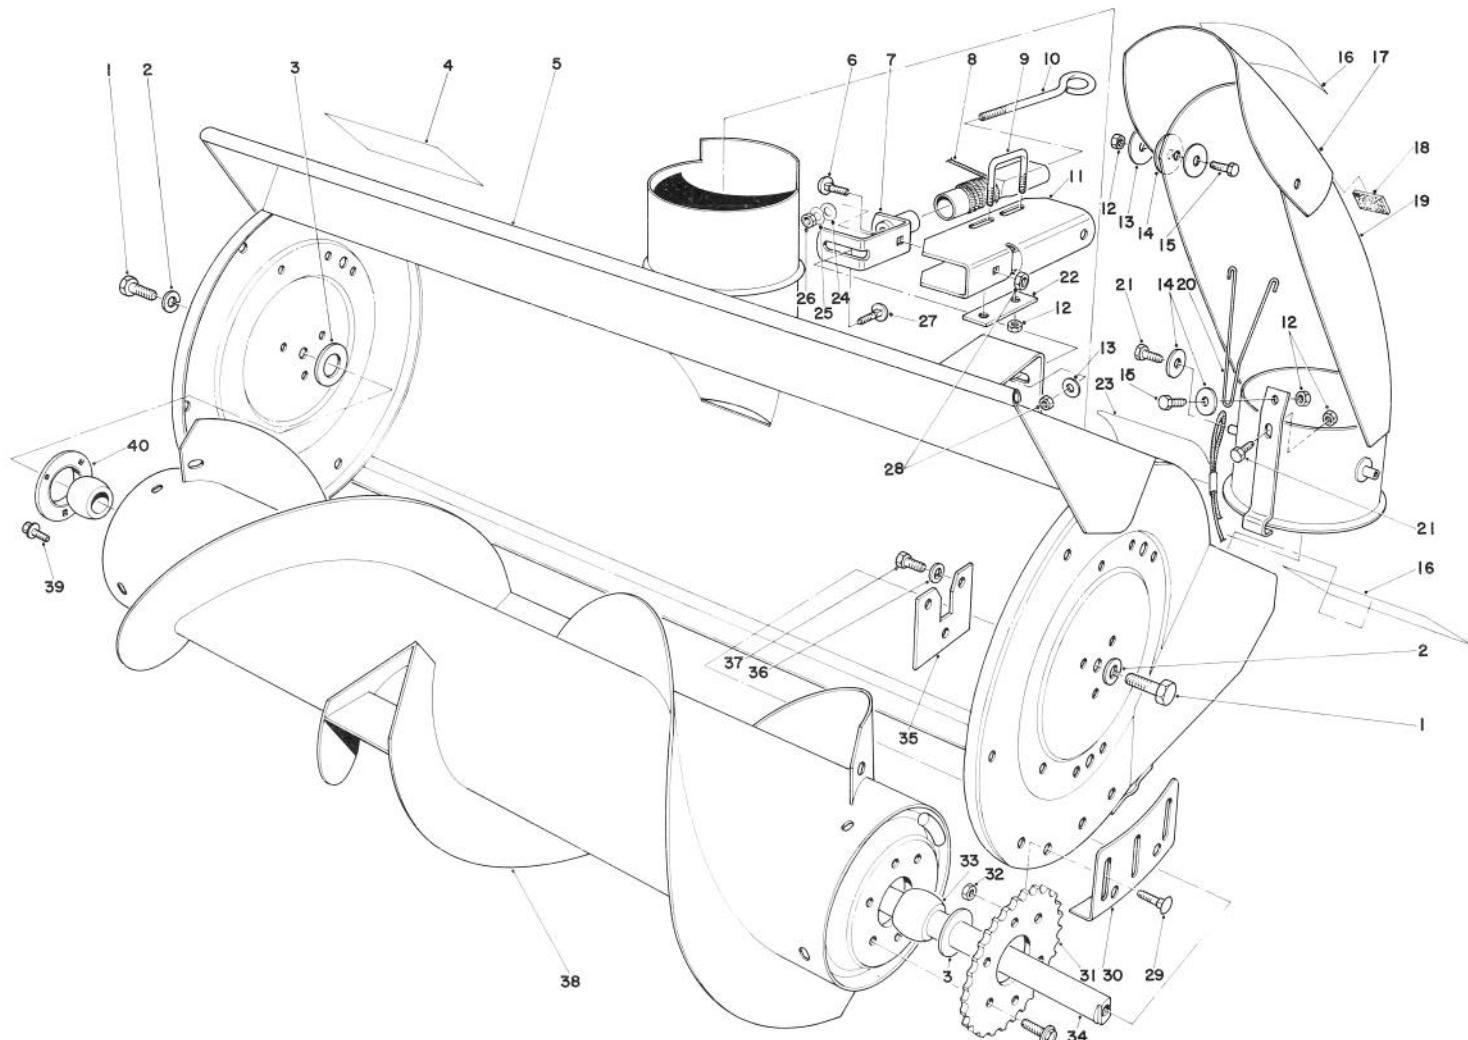


36" SNOWTHROWER ATTACHMENT MODEL NO. 59136 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	325-5	Hex Head Capscrew	2
2	3253-7	Lockwasher	2
3	40-0780	Washer — Auger Shaft	2
4	27-4600	Decal	1
5	40-1400	Header (Incl. Ref. #16 & 23)	1
6	3231-21	Carriage Bolt	1
7	40-1170	Bracket & Tube	1
8	40-1180	Cable & Tube	1
9	40-1160	U-Bolt	1
10	40-1150	Eye Bolt	1
11	40-1190	Shroud — Stack Drive	1
12	32153-4	Locknut	6
13	3-6916	Washer	6
14	40-1130	Washer	3
15	321-3	Hex Head Capscrew	3
16	29-6350	Decal — Auger Warning	2
17	40-1060	Deflector (Incl. Ref. #16)	1
18	40-1050	Molding — Deflector	1
19	40-1070	Deflector Elbow	1
20	40-1040	Hook — Lift Spring	1
21	321-2	Hex Head Capscrew	2
22	40-1140	Strap — Friction	1
23	29-6380	Decal — Hazards Caution	1
24	3256-4	Washer	1

Ref. No.	Part No.	Description	No. Used
25	40-1120	Spring Washer	1
26	32152-2	Locknut	1
27	3231-2	Carriage Bolt	1
28	32149-10	Locknut	2
29	3-5861	Carriage Bolt	6
30	40-0870	Skidshoe	2
31	40-0840	Sprocket — Auger Drive	1
32	32149-1	Locknut	6
33	40-0790	Bearing — Auger Shaft	2
34	40-0810	Shaft — Auger	1
35	40-0820	Plate — Auger Mounting	1
36	3253-4	Lockwasher	3
37	322-2	Hex Head Capscrew	3
38	40-0850	Auger Assembly	1
39	32104-58	Screw — Self Tapping	9
40	40-0800	Flangette	1
*	40-0690	Exhaust Pipe Extension	1
*	32140-42	Screw — Self Tapping (For use with exhaust pipe extension)	1
†	40-0830	Scraper Blade	1
†	3229-22	Carriage Bolt (For use with scraper blade)	7
†	32149-2	Locknut (For use with scraper blade)	7

*Not Illustrated

†Optional Equipment

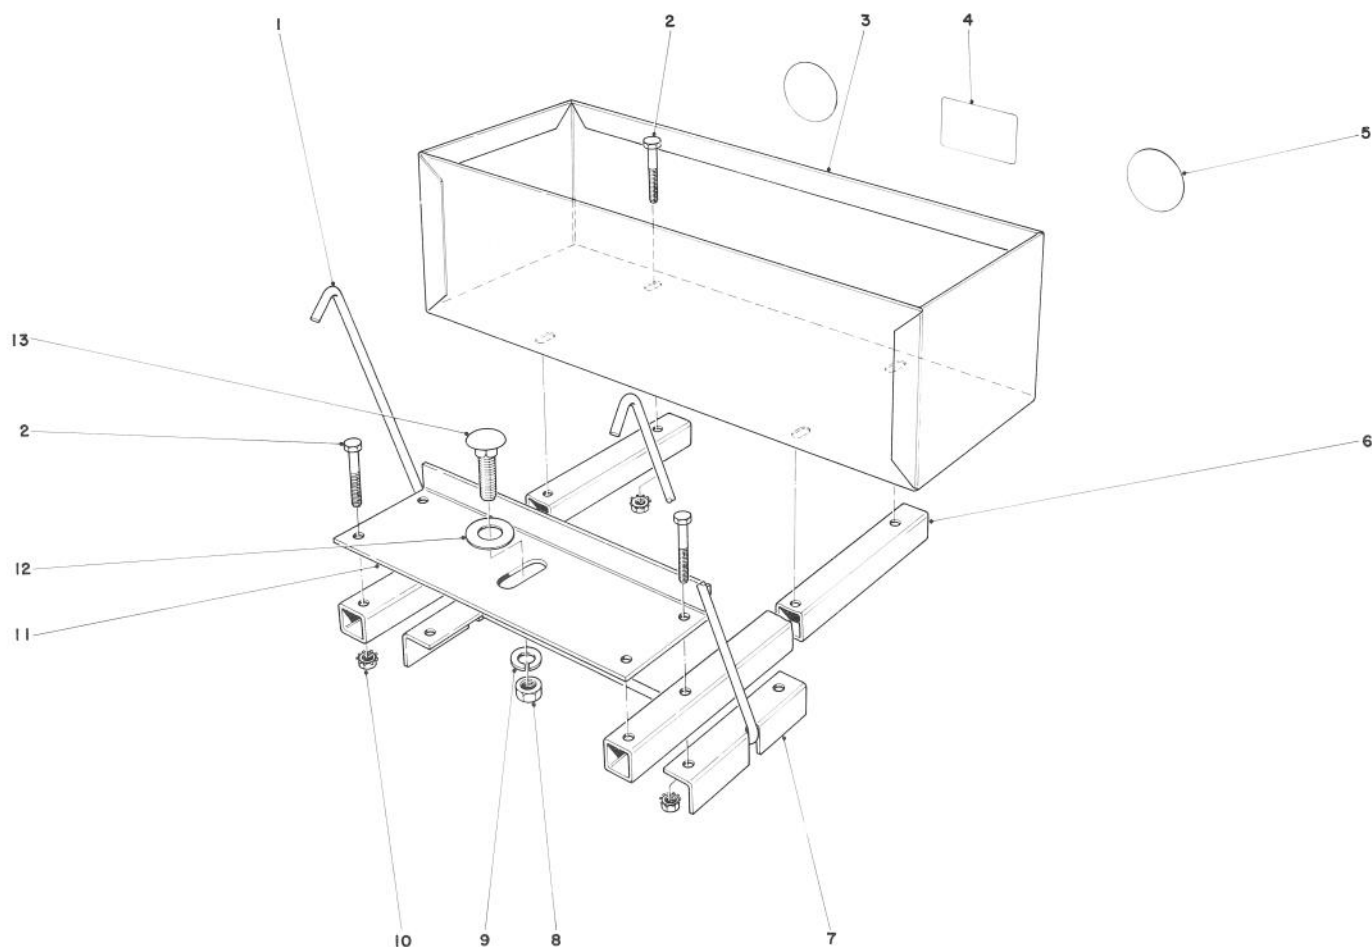


36" SNOWTHROWER WEIGHT BOX ASSEMBLY MODEL NO. 59138 (Optional)

Ref. No.	Part No.	Description	No. Used
1	40-0640	Bracket — Support	1
2	322-9	Hex Head Capscrew	8
3	40-0600	Weight Box	1
4	40-0650	Decal — Weight Box	1
5	40-0590	Reflector	2
6	40-0620	Tube — Mounting	2
7	40-0630	Bracket — Mounting	2

Ref. No.	Part No.	Description	No. Used
8	3217-23	Nut	1
9	3253-7	Lockwasher	1
10	32149-1	Locknut	8
11	40-0610	Bracket — Mounting	1
12	3-1000	Washer	1
13	3233-2	Carriage Bolt	1


**ENGINE BRIGGS & STRATTON MODEL 191707-5816-01
(MODEL 57300)**

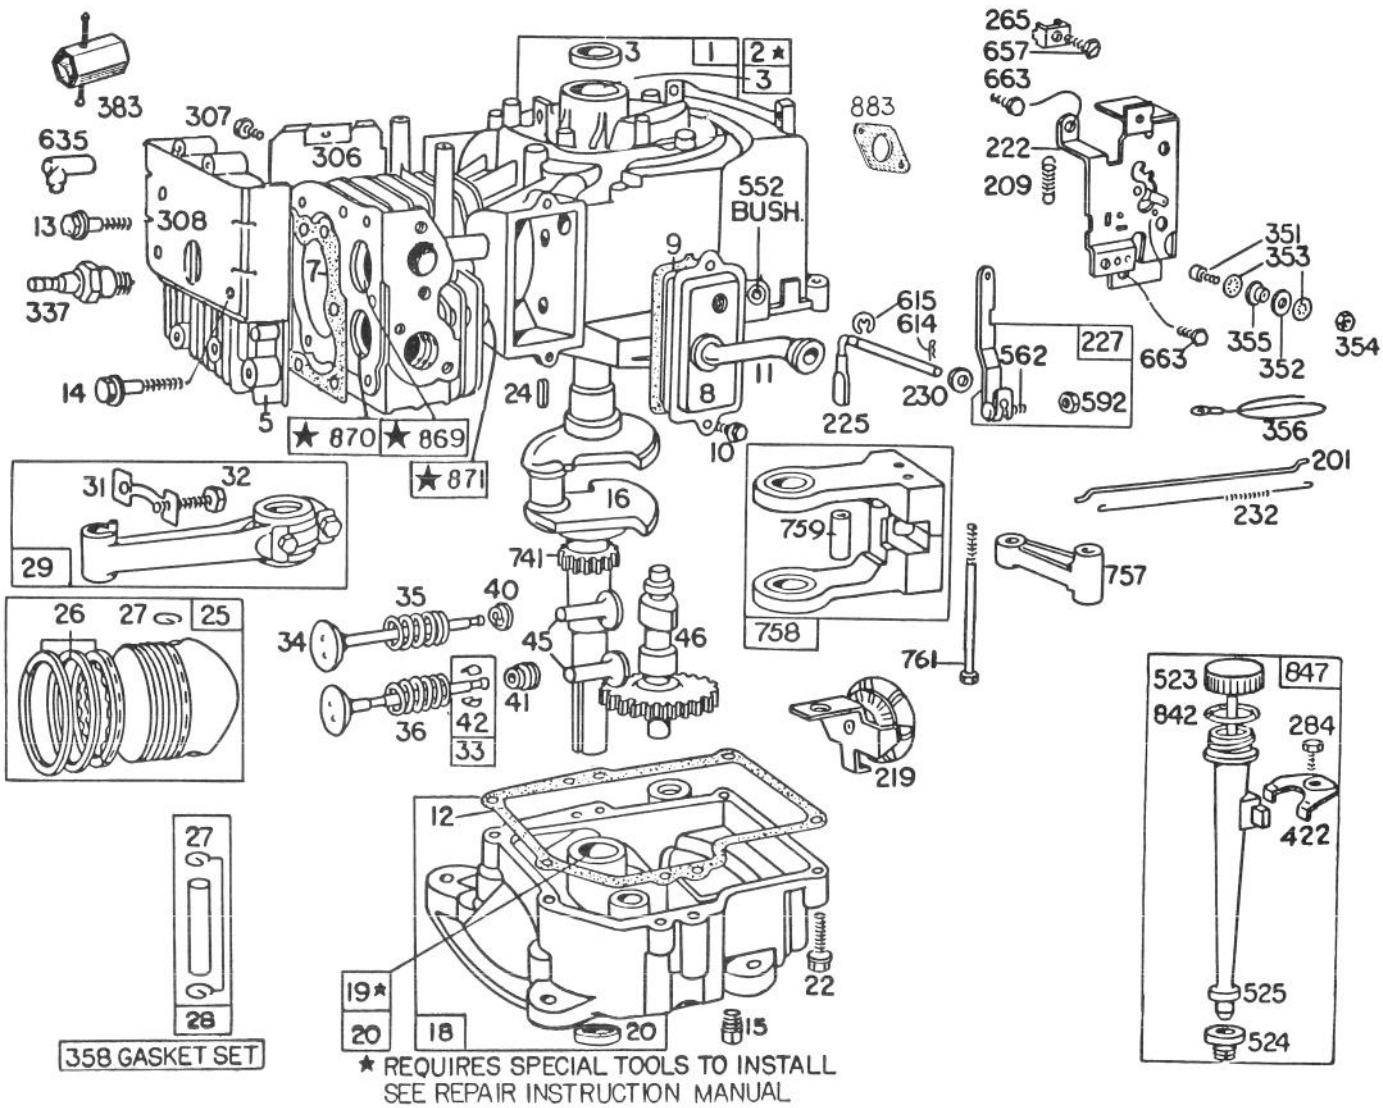

ENGINE BRIGGS & STRATTON MODEL 191707-5816-01 (MODEL 57300)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	396269	Cylinder Assembly	1	42	93630	Retainer — Exhaust Valve Rotocoil	2
2	391726	Bushing — Cylinder		45	260933	Tappet — Valve	1
		Note: Requires special tools for installation.	1	46	211689	Gear — Cam	1
3	294606	Seal — Oil	1	201	260971	Link — Governor	1
5	212286	Head — Cylinder	1	209	261306	Spring — Governor	1
7	*270430	Gasket — Cylinder Head	1	219	392718	Oil Slinger, Gov. Gear and Bracket Assembly	1
8	391406	Breather Assembly	1	222	390662	Plate — Gov. Control	1
9	*27803	Gasket — Valve Cover	1	225	231058	Crank — Governor (1/4" Dia.)	1
10	93394	Screw — Sem	1	227	391733	Lever Assy. — Governor For 1/4" Dia. Crank	1
11	280005	Tube — Breather	1	230	222450	Washer — Gov. Lever (1/4" I.D.)	1
12	*27750	Gasket — Crankcase Cover — 1/64" thick	1	232	260584	Spring — Governor Link	1
	*27876	Gasket — Crankcase Cover — .005" thick	1	265	22372	Clamp — Casing	1
	*27877	Gasket — Crankcase Cover — .009" thick	1	284	93804	Screw — Clamp Mtg.	1
13	93211	Screw — Cylinder Head (2-21/32" long)		306	222830	Shield — Cylinder	1
	93776	Note: Stud — Cylinder Head		307	93163	Screw — Cylinder Shield Mtg. Sem	1
	22963	Washer	1	308	222636	Cover — Cylinder Head Motor — Starting (12 Volt)	1
14	93723	Screw — Cylinder Head (3" long) 1 Req'd.	1	337	293918	Plug — Spark (1-1/2" high — 37 M.M.) (Resistor Type)	1
15	91084	Plug — Oil Drain	1	351	93735	Screw — Terminal	1
16	390370	Crankshaft		352	66068	Washer — Insulating	1
18	392548	Sump — Oil	1	353	92791	Washer — Lock — Shakeproof	3
19	295963	Bushing — Oil Sump	1	354	90576	Nut — Hex. — 8-32	2
		Note: Requires special tools for installation.		355	66554	Collar — Insulating	1
20	391086	Seal — Oil	1	356	299500	Wire — Ground	1
22	93585	Screw — Sump Mtg. Sem	1	358	299577	Gasket Set	1
24	222698	Key — Flywheel		383	89838	Spark Plug Wrench	1
25	391673	Piston Assy. — Std.	1	422	222502	Clamp — Oil Filler Tube	1
	391674	Piston Assy. — .010" O.S.	1	523	391840	Cap and Dipstick — Oil Filler	1
	391675	Piston Assy. — .020" O.S.	1	524	68838	Seal — Filler Tube	1
	391676	Piston Assy. — .030" O.S.	1	525	280133	Tube — Oil Filler	1
		PISTON RING SETS:		552	231055	Bushing — Gov. Crank (1/4" I.D.)	1
		Note: For Chrome Piston Ring Set — Std. Size — Order No. 299743	1	562	92613	Bolt — Governor Lever	1
26	391669	Ring Set — Piston — Std.	1	592	231082	Nut — Hex., 10-24	1
	391670	Ring Set — Piston — .010" O.S.	1	614	93306	Cotter — Hair Pin	1
	391671	Ring Set — Piston — .020" O.S.	1	615	93307	Retainer — E-Ring	1
	391672	Ring Set — Piston — .030" O.S.	1	635	66538	Elbow — Spark Plug	1
27	68546	Lock — Piston Pin	1	657	93469	Screw — Sem	1
28	295840	Pin Assy. — Piston — Std.	1	663	93572	Screw	1
	295841	Pin Assy. — Piston — .005" O.S.	1	741	261195	Gear — Timing	1
29	390402	Rod Assy. — Connecting		757	212359	Link — Counterweight	1
		Note: For Connecting Rod with .020" Undersize Crankpin Bore — Order No. 390773	1	758	390172	Counterweight Assy.	1
31	222114	Lock — Conn. Rod Screw	1	759	298909	Pin — Counterweight	1
32	92659	Screw — Conn. Rod	1	761	93874	Screw — Counterweight	1
33	390419	Valve — Exhaust	1	842	270920	Seal — Filler Cap	1
34	261055	Valve — Intake	1	847	392066	Filler Group — Oil	1
35	65906	Spring — Intake Valve	1	869	211661	Seat — Intake Valve (Std.)	1
36	26828	Spring — Exhaust Valve	1	870	211661	Seat — Exhaust Valve (Std.)	1
40	221596	Retainer — Intake Valve	1	871	231218 or 230655	Guide — Exhaust Valve (See Repair Manual)	1
41	292260	Rotocoil — Exhaust Valve	1	883	270918	Gasket — Exhaust Pipe	1


*Included in Gasket Set — Part No. 299577.

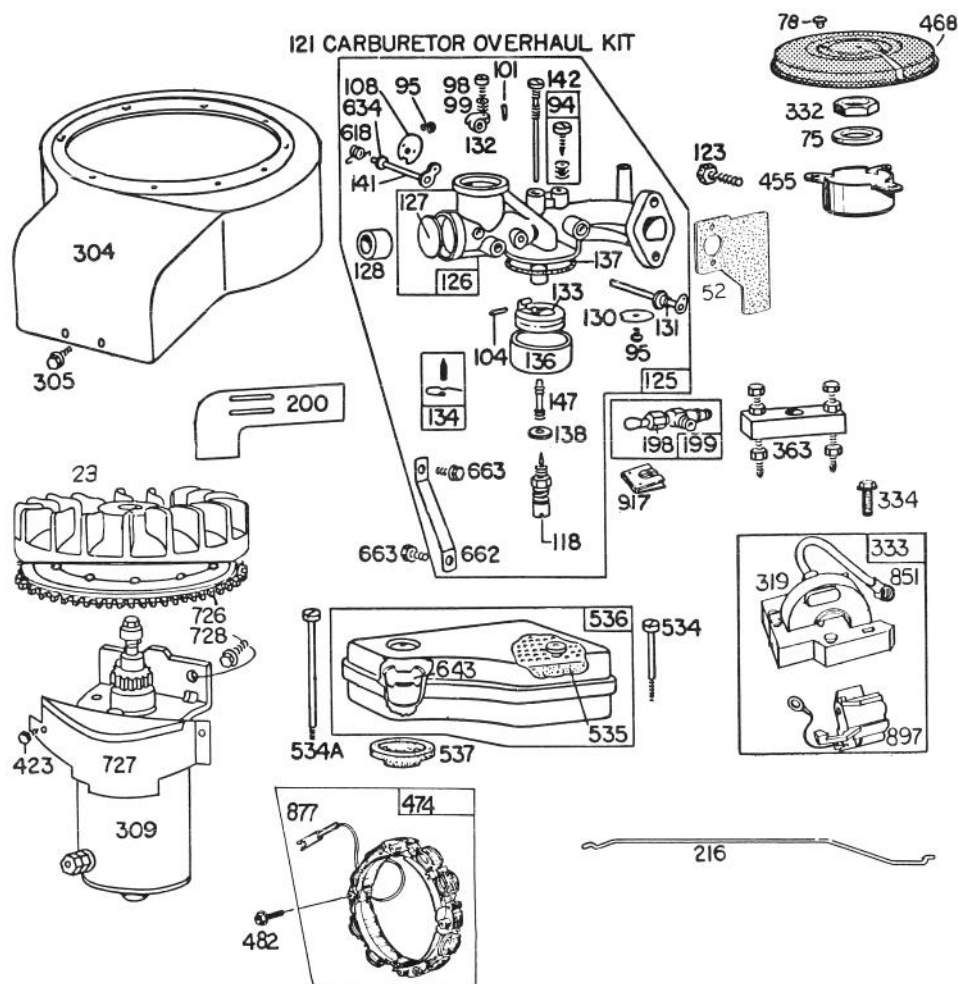

BRIGGS & STRATTON MODEL 191707-5816-01 (MODEL 57300) (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	391983	Flywheel and Ring Gear Assy. — Magneto	1	132	211712	Stop — Throttle	1
52	270824	Gasket — Carburetor Mtg.	1	133	299707	Float — Carburetor	1
75	220865	Washer — Spring	1	134	†394681	Valve — Fuel Inlet	1
78	93805	Screw — Sem	1	136	221995	Bowl — Float	1
94	†292681	Valve Assy. — Carburetor Idle	1	137	†270511	Gasket — Float Bowl	1
95	93499	Screw — Throttle and Choke Valve Mtg. Sem	1	138	†222014	Washer — Float Bowl	1
98	91920	Screw — Machine, Fill. Hd. 8-32 x 5/8"	1	141	390684	Shaft and Lever — Choke	1
99	26157	Spring — Throttle Adjustment	1	142	†299740	Nozzle — Carburetor	1
101	93043	Pin — Throttle Stop	1	147	†230932	Screw — Nozzle	1
104	†230896	Pin — Float Hinge	1	198	293934	Valve — Fuel Shut-Off	1
108	222010	Valve — Choke	1	199	390303	Connector — Fuel Pipe	1
118	†391233	Valve — Needle	1	200	221760	Guide — Air	1
121	394698	Carburetor Overhaul Kit	1	216	261117	Link — Choke	1
123	93357	Screw — Carburetor Mtg.	1	304	391379	Housing — Blower	1
125	390811	Carburetor Assembly	1	305	93158	Screw — Blower Housing Mounting Sem	1
126	299851	Body Assembly Carburetor	1	309	222636	Cover — Cylinder Head Motor — Starting (12 Volt)	1
127	†221997	Plug — Welch	1	319	395326	Armature Assy. (Less Trigger Coil)	1
128	211682	Venturi — Carburetor	1	332	92284	Nut — Flywheel	1
130	221986	Valve — Throttle	1	333	395492	Armature Assembly	1
131	391512	Shaft and Lever — Throttle	1	334	93381	Screw — Armature Mtg. Sem	1

†Included in Carburetor Overhaul Kit — Part No. 394698.

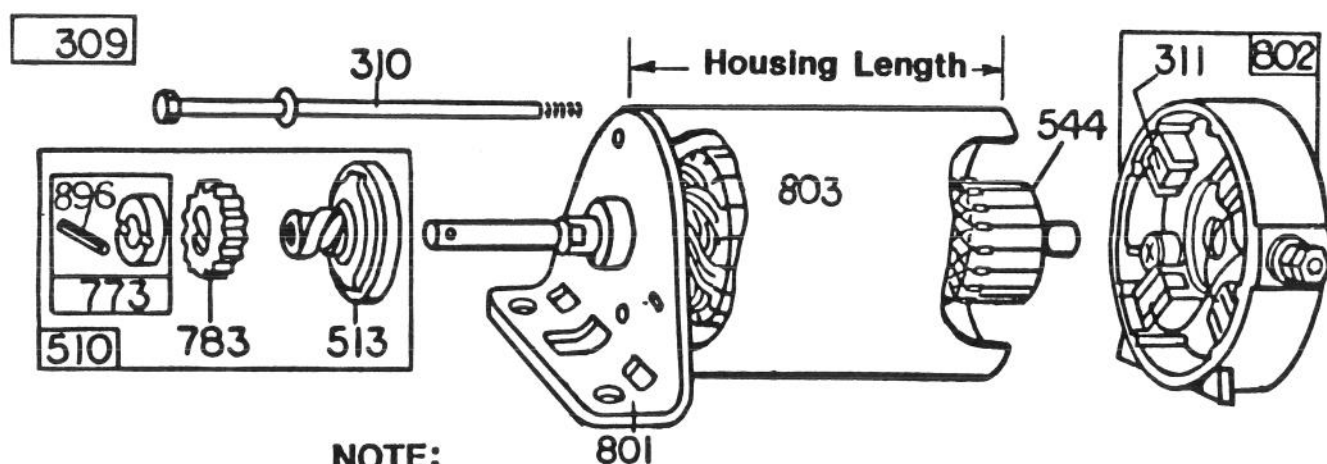


NOTE:

To identify Briggs & Stratton manufactured starter motors, measure the housing length.

BRIGGS & STRATTON MODEL 191707-5816-01 (MODEL 57300) (Continued)

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assembly	1
310	94003	Thru Bolt	2
311	395538	Brush Assembly	4
510	391461	Drive Assy. (Incl. Ref. #513, 773, 783, 896)	1
513	391135	Clutch Assembly	1
544	392747	Armature Assembly	1

Ref. No.	Part No.	Description	No. Used
773	391462	Retainer & Pin	1
783	280104	Gear	1
801	394856	End Cap Assy. — Drive	1
802	395537	End Cap Assy. — Commutator (Incl. Ref. #311)	1
803	392744	Housing Assembly	1
896	93754	Roll Pin	1

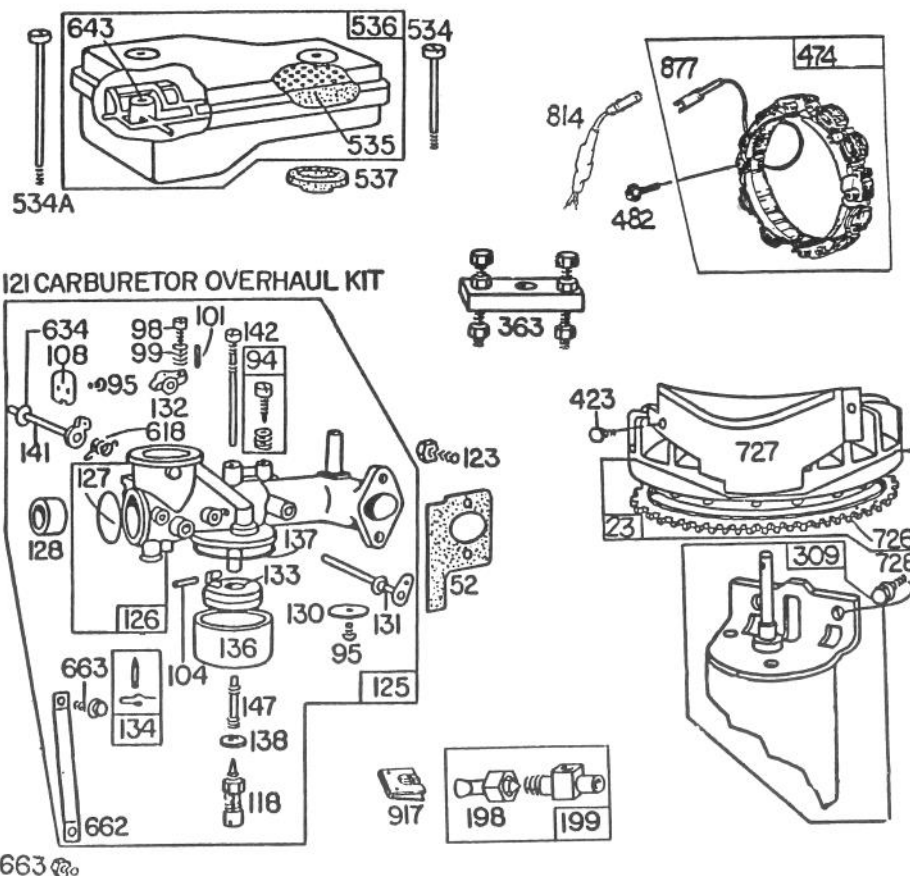


ENGINE BRIGGS & STRATTON MODEL 252707-0637-01 (MODEL 57360)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	391988	Flywheel and Ring Gear Assy. — Magneto	1	142	†299740	Nozzle — Carburetor	1
52	*270872	Gasket — Carburetor Mounting	1	147	†230932	Screw — Nozzle	1
94	†292681	Valve Assy. — Carburetor Idle	1	198	293934	Valve — Fuel Shut-Off	1
95	93499	Screw — Throttle and Choke Valve Mtg. Sem	1	199	390303	Connector — Fuel Pipe	1
98	91920	Screw — Machine, Fill. Hd. 8-32 x 5/8"	1	216	261274	Link — Choke	1
99	26157	Spring — Throttle Adjustment	1	309		Motor — Starting (12 Volt)	1
101	93043	Pin — Throttle Stop	1	363	19203	Puller — Flywheel	1
104	†230896	Pin — Float Hinge	1	423	93984	Screw — Sem	1
108	222010	Valve Choke	1	474	392595	Stator — Alternator (Tri-Circuit)	1
118	†391233	Valve — Needle	1	482	93621	Screw — Sem	1
121	299852	Carburetor Overhaul Kit	1	534	93622	Screw — Air Cleaner	1
123	93357	Screw — Carburetor Mtg.	1	534A	93323	Screw — Air Cleaner	1
125	393410	Carburetor Assembly (Choke-A-Matic)	1	535	270843	Element — Air Cleaner	1
126	391787	Body Assembly Carburetor	1	536	391786	Cleaner Assembly — Air	1
127	†221997	Plug — Welch	1	537	270853	Gasket — Air Cleaner	1
128	211960	Venturi — Carburetor	1	618	261116	Spring — Choke Return	1
130	222858	Valve — Throttle	1	634	270382	Washer — Choke Shaft	1
131	391512	Shaft and Lever — Throttle	1	643	280118	Support — Air Cleaner Element	1
132	211712	Stop — Throttle	1	662	222311	Bracket — Carburetor	1
133	299707	Float — Carburetor	1	663	93572	Screw	1
134	†299096	Valve — Fuel Inlet	1	726	392134	Gear — Ring (Includes mounting parts)	1
136	221995	Bowl — Float	1	727	395405	Cover and Shield — Starter	1
137	†270511	Gasket — Float Bowl	1	728	93523	Screw — Sem	1
138	†222014	Washer — Float Bowl	1	814	392606	Wire Assembly — Alternator	1
141	390684	Shaft and Lever — Choke	1	877	393537	Connector Assy. (Tri-Circuit)	1
				917	223271	Valve Handle — Fuel Shut-Off	1

*Included in Gasket Set — Part No. 393411.

†Included in Carburetor Overhaul Kit — Part No. 299852.

ENGINE BRIGGS & STRATTON MODEL 252707-0637-01 (MODEL 57360) (Continued)

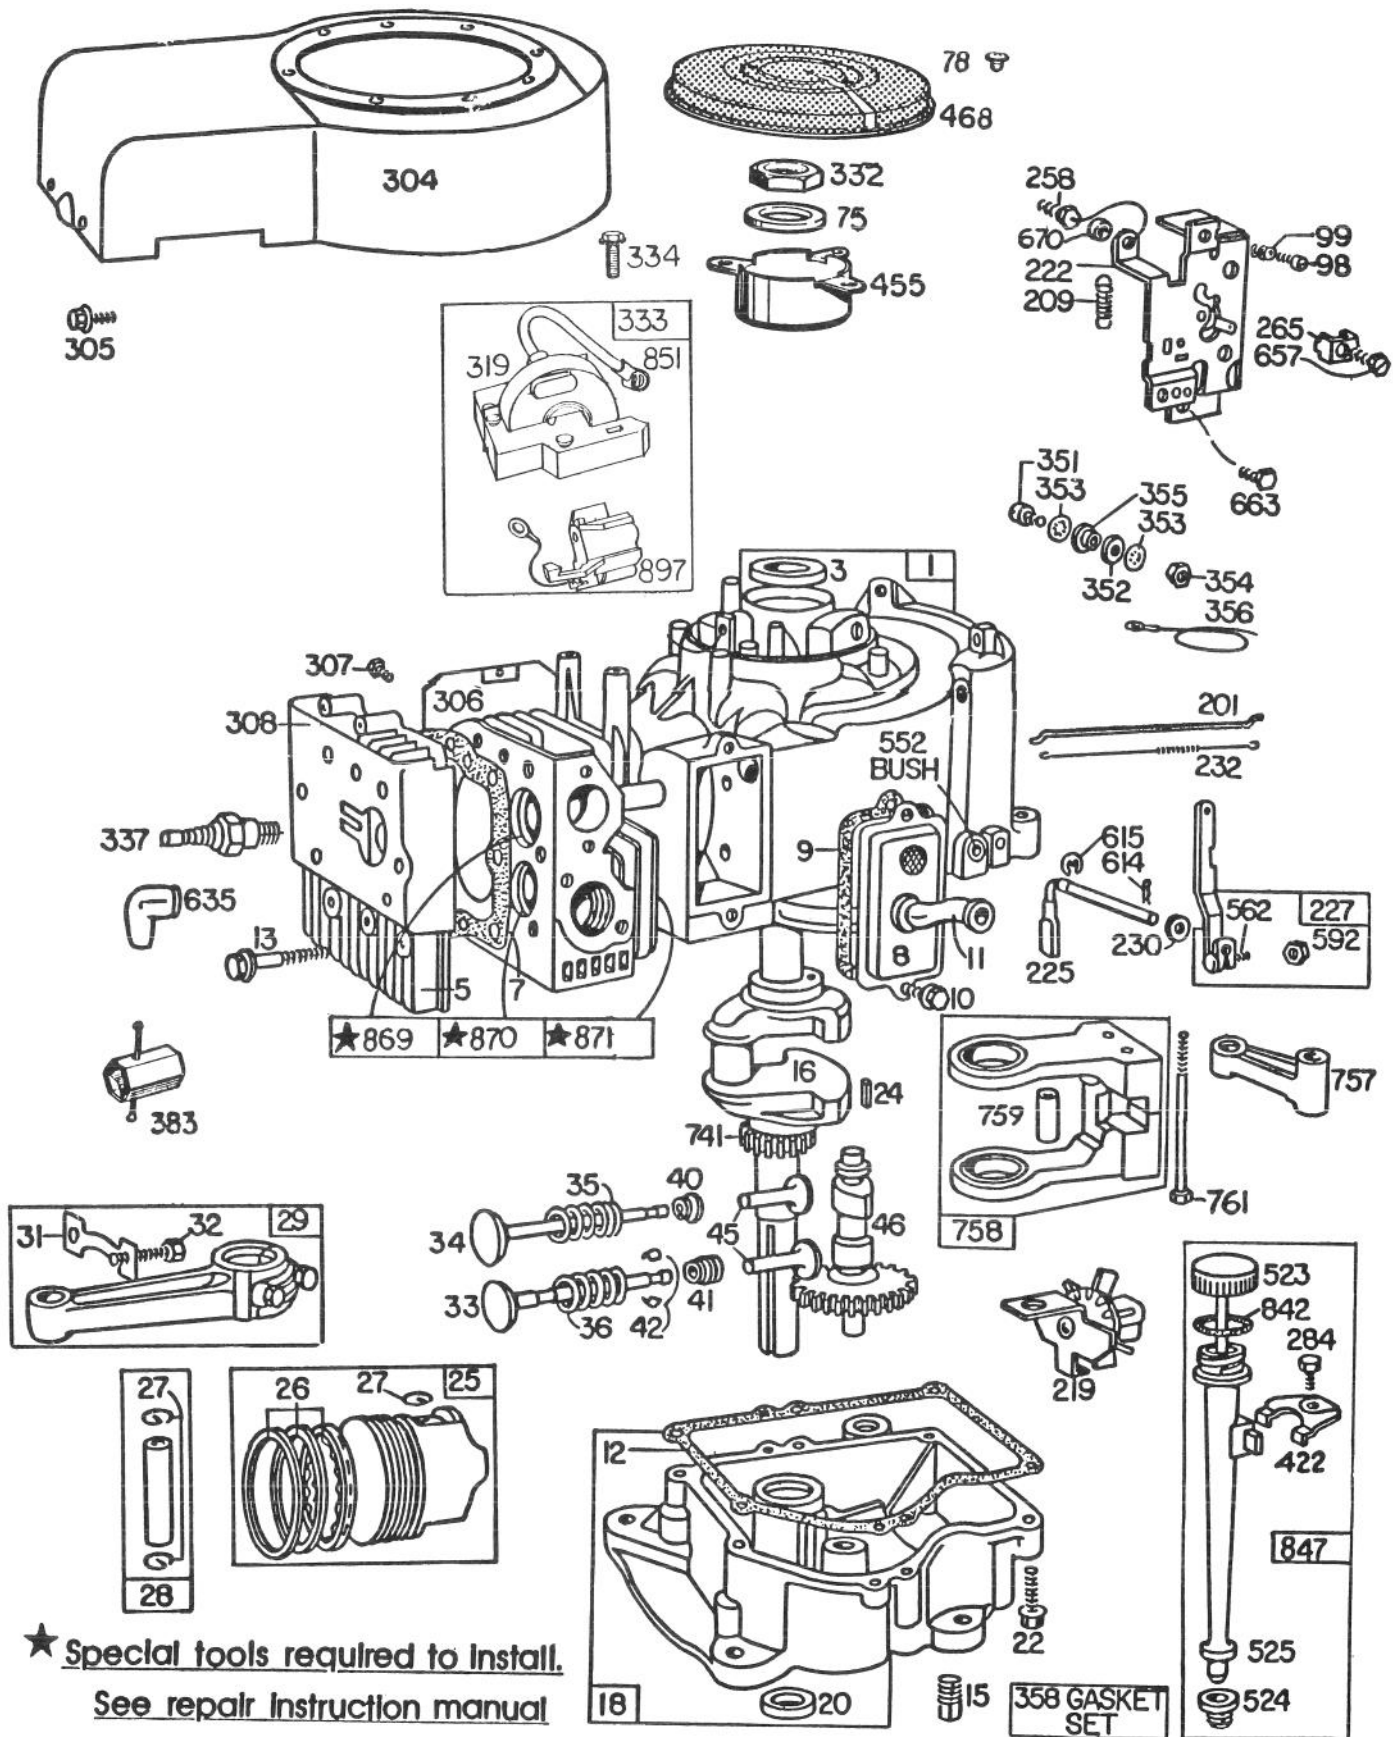


ENGINE BRIGGS & STRATTON MODEL 252707-0637-01 (MODEL 57360) (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	396324	Cylinder Assembly	1	227	391733	Lever Assy. — Governor (For 1/4" dia. Crank)	1
3	391086	Seal — Oil	1	230	222450	Washer — Gov. Crank (1/4" I.D.)	1
5	212300	Head — Cylinder	1	232	261197	Spring — Governor Link	1
7	*271075	Gasket — Cylinder Head	1	258	93686	Screw — Control Bracket Mtg.	1
8	391406	Breather Assembly	1	265	22378	Clamp — Casing	1
9	*27803	Gasket — Valve Cover	1	284	93804	Screw — Clamp Mtg.	1
10	93394	Screw — Sem	1	304	391556	Housing — Blower	1
11	280100	Tube — Breather	1	305	93158	Screw — Blower Housing Mounting Sem	1
12	*270808	Gasket — Crankcase Cover — 1/64" thick	1	306	222744	Shield — Cylinder	1
	*270915	Gasket — Crankcase Cover — .005" thick	1	307	93163	Screw — Cylinder Shield Mtg. Sem	1
	*270916	Gasket — Crankcase Cover — .009" thick	1	308	222725	Cover — Cylinder Head	1
13	93723	Screw — Cylinder Hd. (3" long)	1	319	395326	Armature Assy. (Less Trigger Coil)	1
	93781	Note: Stud — Cylinder Hd.		332	92284	Nut — Hex	1
	22963	Washer	1	333	395492	Armature Group	1
15	91084	Plug — Oil Drain	1	334	93381	Screw — Armature Mtg. Sem	1
16	392299	Crankshaft	1	337	293918	Plug — Spark (1-1/2" high — 37-42 M.M.)	
18	391784	Sump — Oil	1			Note: Spark Plugs use Ignition Cable Terminal No. 221798	
20	291675	Seal — Oil	1	351	93735	Screw — Terminal (Truss Hd.)	1
22	93585	Screw — Sump Mtg. Sem	1	352	66068	Washer — Insulating	1
24	222698	Key — Flywheel	1	353	92791	Washer — Lock — Shakeproof	1
25	391285	Piston Assy. — Std.	1	354	90576	Nut — Hex. — 8-32	2
	391287	Piston Assy. — .010" O.S.	1	355	66554	Collar — Insulating	1
	391288	Piston Assy. — .020" O.S.	1	356	299500	Wire — Ground	1
	391289	Piston Assy. — .030" O.S.	1	358	393411	Gasket Set	1
		PISTON RING SETS:		383	89838	Wrench — Spark Plug	1
		Note: For Chrome Ring Set — Standard Size — Order No. 392331.		422	222502	Clamp — Oil Filler Tube	1
26	391780	Ring Set — Piston — Std.	1	455	222561	Cup — Screen Mounting	1
	391781	Ring Set — Piston — .010" O.S.	1	468	222562	Screen — Flush Rotating	1
	391782	Ring Set — Piston — .020" O.S.	1	523	391841	Cap & Dipstick — Oil Filler	1
	391783	Ring Set — Piston — .030" O.S.	1	524	68838	Seal — Filler Tube	1
27	260924	Lock — Piston Pin	1	525	280134	Tube — Oil Filler	1
28	299691	Pin Assy. — Piston — Std.	1	552	231055	Bushing — Gov. Crank (1/4" I.D.)	1
	391286	Pin Assy. — Piston — .005" O.S.	1	562	92613	Bolt — Governor Lever	1
29	391775	Rod Assy. — Connecting	1	592	231082	Nut — Hex., 10-24	1
31	222299	Lock — Conn. Rod Screw	1	614	93306	Cotter — Hair Pin	1
32	92909	Screw — Conn. Rod	1	615	93307	Retainer — E-Ring	1
33	261185	Valve — Exhaust	1	635	66538	Elbow — Spark Plug	1
34	261462	Valve — Intake	1	657	93469	Screw — Sem	1
35	65906	Spring — Intake Valve	1	663	93572	Screw	1
36	26828	Spring — Exhaust Valve	1	670	231039	Spacer — Control Bracket Mtg.	1
40	221596	Retainer — Intake Valve	1	741	261196	Gear — Timing	1
41	292260	Rotocoil — Exhaust Valve	1	757	212359	Link — Counterweight	1
42	93630	Retainer — Exhaust Valve Rotocoil	2	758	391373	Counterweight Assy.	1
45	261183	Tappet — Valve	1	759	298909	Pin — Counterweight	1
46	212296	Gear — Cam	1	761	93875	Screw — Counterweight	1
75	220865	Washer — Spring	1	842	270920	Seal — Oil Filler Cap	1
78	93808	Screw — Sem	1	847	392067	Fill Group — Oil	1
98	91920	Screw, Mach., Fill. Hd. 8-32 x 5/8"	1	851	221798	Terminal — Ignition Cable	1
99	26157	Spring — Throttle Adjustment	1	869	261463	Seat — Intake Valve (Std.)	1
201	261198	Link — Governor	1	870	210940	Seat — Exhaust Valve (Std.)	1
209	261306	Spring — Governor	1	871	230655	Guide — Exhaust Valve	1
219	391764	Oil Slinger, Gov. Gear and Bracket Assembly	1	†883	270917	Gasket — Exhaust Pipe	1
222	390662	Plate — Gov. Control	1	897	394970	Trigger Coil	1
225	231058	Crank — Gov. (1/4" dia.)	1				

*Included in Gasket Set — Part No. 393411.




†See Ref. #29 Page 6.

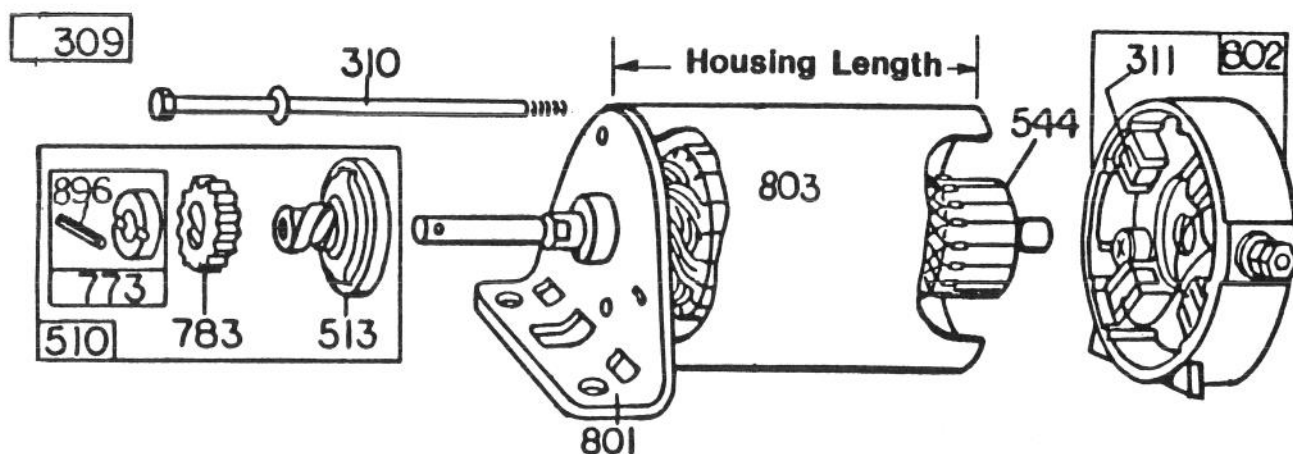


**BRIGGS & STRATTON MODEL 252707-0637-01
(MODEL 57360) (Continued)**

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assembly	1
310	94003	Thru Bolt	2
311	395538	Brush Assembly	4
510	391461	Drive Assy. (Incl. Ref. #513, 773, 783, 896)	1
513	391135	Clutch Assembly	1
544	392747	Armature Assembly	1

Ref. No.	Part No.	Description	No. Used
773	391462	Retainer & Pin	1
783	280104	Gear	1
801	394856	End Cap Assy. — Drive	1
802	395537	End Cap Assy. — Commutator (Incl. Ref. #311)	1
803	392744	Housing Assembly	1
896	93754	Roll Pin	1

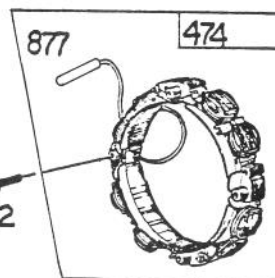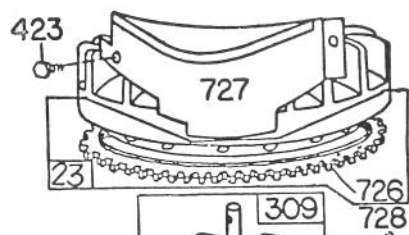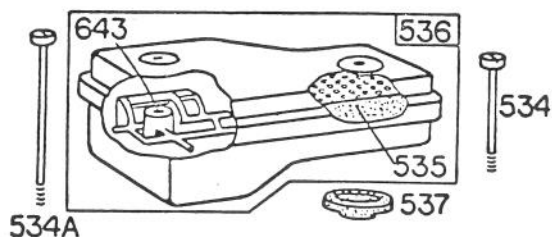

121 CARBURETOR OVERHAUL KIT

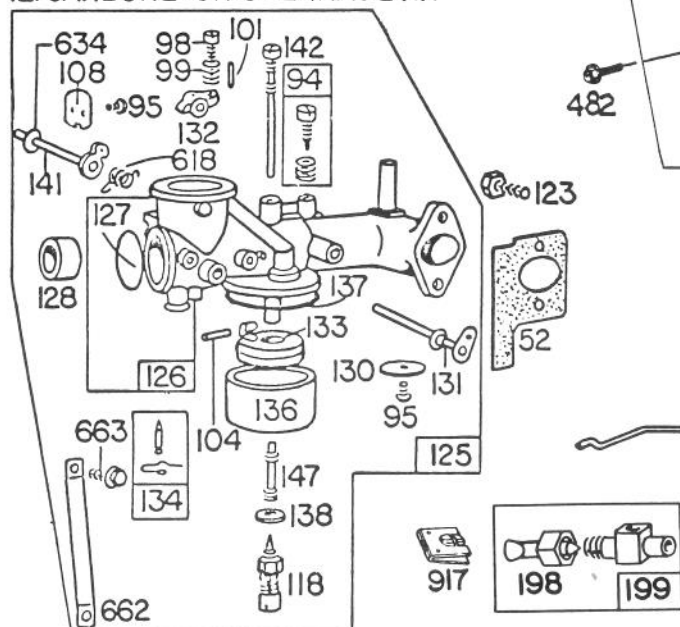


ENGINE BRIGGS & STRATTON MODEL 252707-0230-01 (MODEL 57360)

Ref. No.	Part No.	Description	No. Used
23	391988	Flywheel and Ring Gear Assy. — Magneto	1
52	*270872	Gasket — Carburetor Mounting	1
94	†292681	Valve Assembly — Carburetor Idle	1
95	93499	Screw — Throttle and Choke Valve Mtg.	1
98	91920	Screw — Machine, Fill. Hd.	1
99	26157	Spring — Throttle Adjustment	1
101	93043	Pin — Throttle Stop	1
104	†230896	Pin — Float Hinge	1
108	222010	Valve Choke	1
118	†391233	Valve — Needle	1
121	299852	Carburetor Overhaul Kit	1
123	93357	Screw — Carburetor Mtg.	1
125	393410	Carburetor Assembly (Choke-A-Matic)	1
126	391787	Body Assembly Carburetor	1
127	†221997	Plug — Welch	1
128	211960	Venturi — Carburetor	1
130	222858	Valve — Throttle	1
131	391512	Shaft and Lever — Throttle	1
132	211712	Stop — Throttle	1
133	299707	Float — Carburetor	1
134	†299096	Valve — Fuel Inlet	1
136	221995	Bowl — Float	1
137	†270511	Gasket — Float Bowl	1
138	†222014	Washer — Float Bowl	1
141	390684	Shaft and Lever — Choke	1

Ref. No.	Part No.	Description	No. Used
142	†299740	Nozzle — Carburetor	1
147	†230932	Screw — Nozzle	1
198	293934	Valve — Fuel Shut-Off	1
199	390303	Connector — Fuel Pipe	1
216	261274	Link — Choke	1
309		Motor — Starting (see page 40 for parts breakdown)	1
423	93410	Screw	1
474	392595	Stator — Alternator (Tri-Circuit)	1
482	93621	Screw	1
534	93622	Screw — Air Cleaner	1
534A	93323	Screw — Air Cleaner	1
535	270843	Element — Air Cleaner	1
536	391786	Cleaner Assembly — Air	1
537	270853	Gasket — Air Cleaner	1
618	261116	Spring — Choke Return	1
634	270382	Washer — Choke Shaft	1
643	280118	Support — Air Cleaner Element	1
662	222311	Bracket — Carburetor	1
663	93572	Screw	1
726	392134	Gear — Ring (Includes mounting parts)	1
727	390233	Cover and Shield — Starter	1
728	93523	Screw	1
877	393537	Connector Assy. (Tri-Circuit)	1
917	223271	Valve Handle — Fuel Shut-Off	1

†Included in Carburetor Overhaul Kit — Part No. 299852.

ENGINE BRIGGS & STRATTON MODEL 252707-0230-01 (MODEL 57360) (Continued)

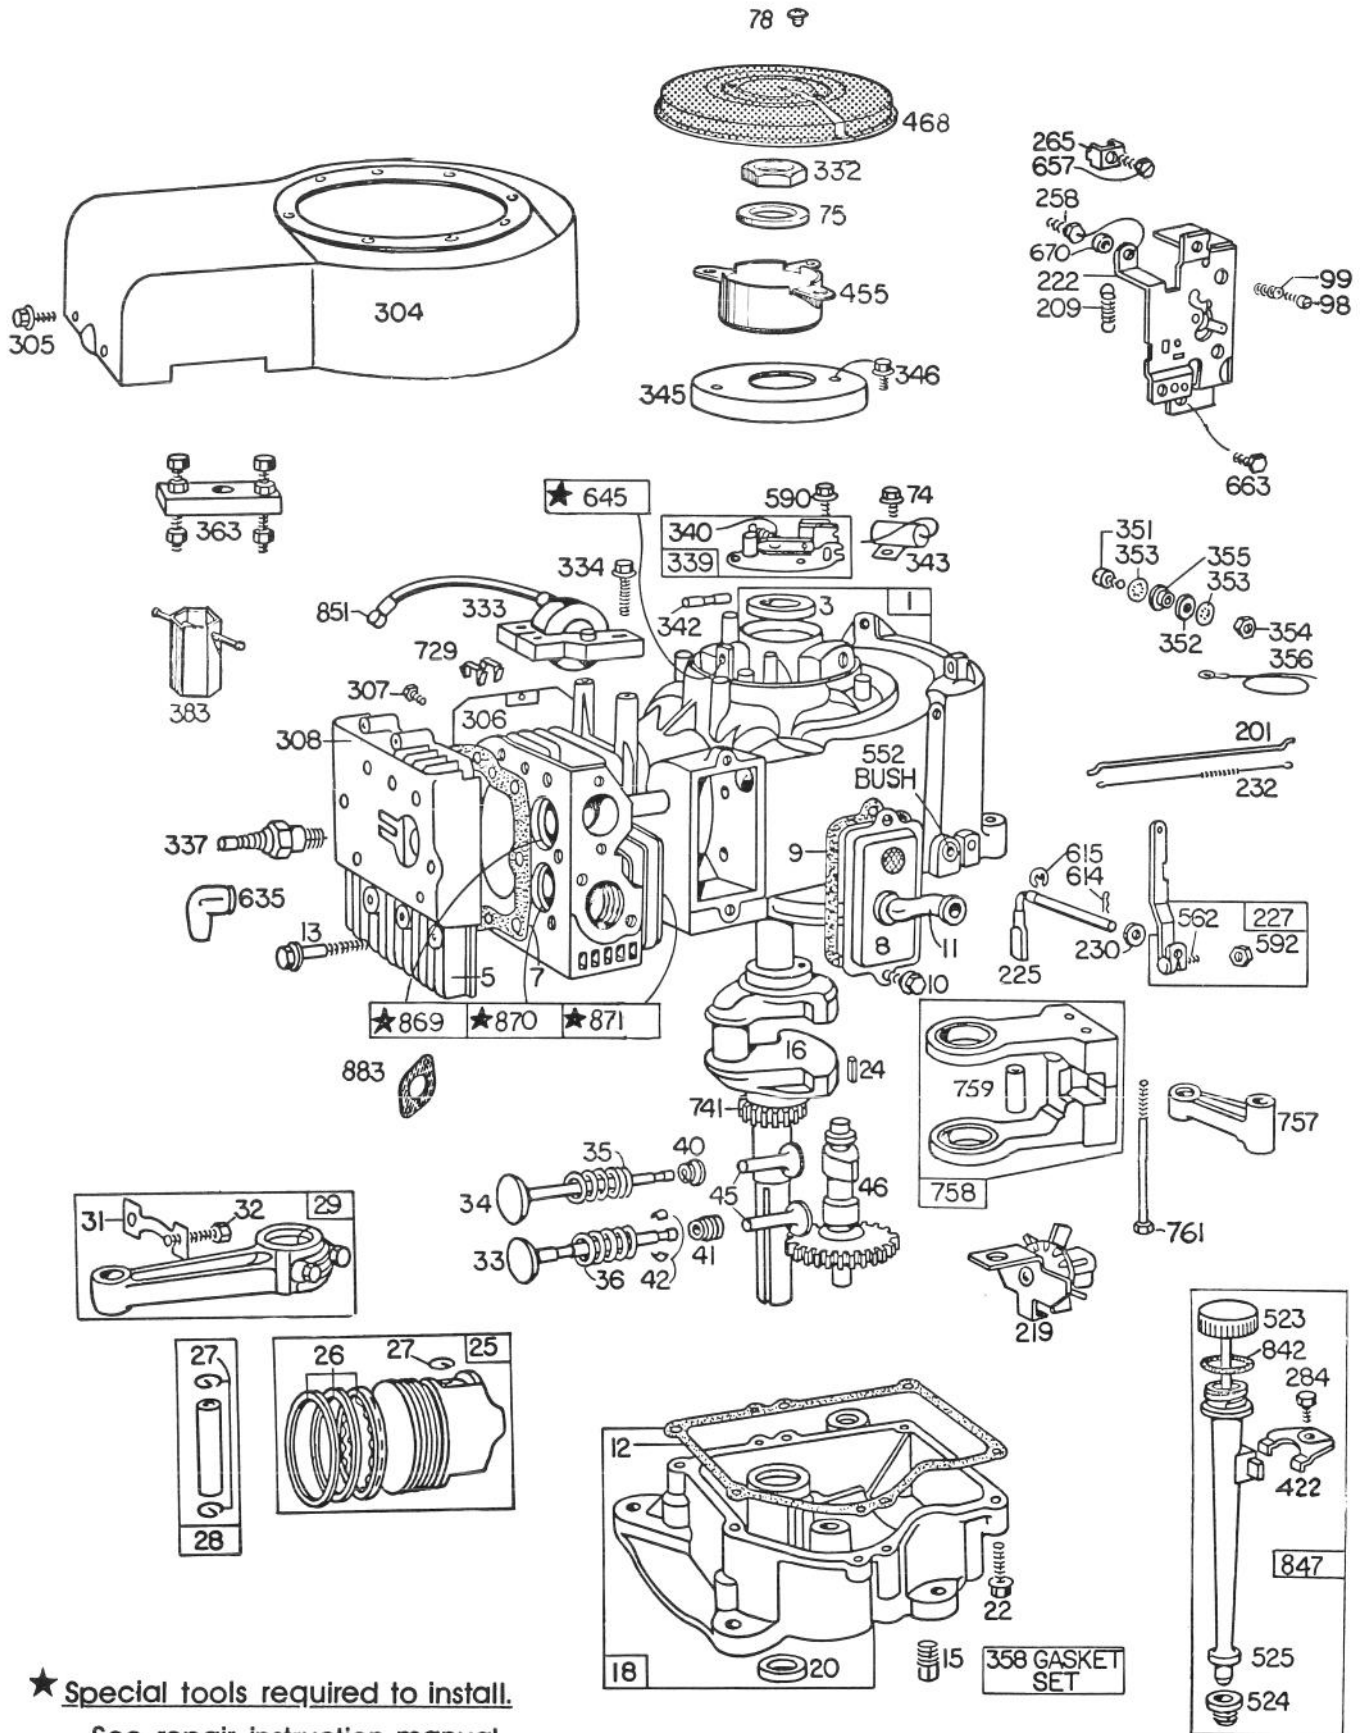


ENGINE BRIGGS & STRATTON MODEL 252707-0230-01 (MODEL 57360) (Continued)

Ref. No.	Part No.	Description	No. Used
1	393676	Cylinder Assembly	1
3	391086	Seal — Oil	1
5	212300	Head — Cylinder	1
7	*271075	Gasket — Cylinder Head	1
8	391406	Breather Assembly	1
9	*27803	Gasket — Valve Cover	1
10	93394	Screw	1
11	280100	Tube — Breather	1
12	*270808	Gasket — Crankcase Cover — 1/64" thick	1
	*270915	Gasket — Crankcase Cover — .005" thick	1
	*270916	Gasket — Crankcase Cover — .009" thick	1
13	93723	Screw — Cylinder Head (3" long) Note: 93781 Stud — Cylinder Head	1
	22963	Washer	1
15	91084	Plug — Oil Drain	1
16	392299	Crankshaft	1
18	391784	Sump — Oil	1
20	291675	Seal — Oil	1
22	93585	Screw — Sump Mounting	1
24	61760	Key — Flywheel	1
25	391285	Piston Assy. — Standard	1
	391287	Piston Assy. — .010" O.S.	1
	391288	Piston Assy. — .020" O.S.	1
	391289	Piston Assy. — .030" O.S.	1
		PISTON RING SETS: Note: For Chrome Ring Set — Standard Size — order No. 392331.	
26	391780	Ring Set — Piston — Std.	1
	391781	Ring Set — Piston — .010" O.S.	1
	391782	Ring Set — Piston — .020" O.S.	1
	391783	Ring Set — Piston — .030" O.S.	1
27	260924	Lock — Piston Pin	1
28	299691	Pin Assy. — Piston — Std.	1
	391286	Pin Assy. — Piston — .005" O.S.	1
29	391775	Rod Assy. — Connecting	1
31	222290	Lock — Conn. Rod Screw	1
32	92900	Screw — Conn. Rod	1
33	261185	Valve — Exhaust	1
34	261462	Valve — Intake	1
35	65906	Spring — Intake Valve	1
36	26828	Spring — Exhaust Valve	1
40	221596	Retainer — Intake Valve	1
41	292260	Rotocoil — Exhaust Valve	1
42	93630	Retainer — Exhaust Valve Rotocoil	2
45	261183	Tappet — Valve	1
46	212296	Gear — Cam	1
74	93042	Screw	1
75	220865	Washer — Spring	1
78	93808	Screw	1
98	91920	Screw — Machine, Fill. Hd.	1
99	26157	Spring — Throttle Adjustment	1
201	261198	Link — Governor	1
209	261306	Spring — Gov.	1
219	391764	Oil Slinger, Gov. Gear and Bracket Assembly	1
222	390662	Plate — Gov. Control	1
225	231058	Crank — Governor (1/4" dia.)	1
227	391733	Lever Assy. — Governor (For 1/4" dia. Crank)	1

Ref. No.	Part No.	Description	No. Used
230	222450	Washer — Gov. Crank (1/4" I.D.)	1
232	261197	Spring — Governor Link	1
258	93686	Screw — Control Bracket Mtg.	1
265	22372	Clamp — Casing	1
284	93804	Screw — Clamp Mtg.	1
304	391556	Housing — Blower	1
305	93158	Screw — Blower Housing Mtg.	1
306	222744	Shield — Cylinder	1
307	93163	Screw — Cylinder Shield Mtg.	1
308	222725	Cover — Cylinder Head	1
332	92284	Nut — Hex.	1
333	298968	Armature Assembly	1
334	93381	Screw — Armature Mtg.	1
337	293918	Plug — Spark (1-1/2" high — 37-42 M.M.) Note: Spark Plugs use Ignition Cable Terminal No. 221798.	1
339	391284	Breaker Assy. — Ignition	1
340	26018	Spring — Breaker Arm	1
342	65704	Plunger — Breaker Point	1
343	29861	Condenser	1
345	222309	Cover — Breaker Point	1
346	93705	Screw	1
351	93735	Screw — Terminal (Truss Hd.)	1
352	66068	Washer — Insulating	1
353	92791	Washer — Lock	1
354	90576	Nut — Hex.	2
355	66554	Collar — Insulating	1
356	391602	Wire — Ground	1
358	393411	Gasket Set	1
363	19203	Puller — Flywheel	1
383	89838	Wrench — Spark Plug	1
422	222502	Clamp — Oil Filler Tube	1
455	222561	Cup — Screen Mounting	1
468	222562	Screen — Flush Rotating	1
523	391841	Cap & Dipstick — Oil Filler	1
524	68838	Seal — Filler Tube	1
525	280134	Tube — Oil Filler	1
552	231055	Bushing — Gov. Crank (1/4" I.D.)	1
562	92613	Bolt — Governor Lever	1
590	93226	Screw — Breaker Adjusting	1
592	231082	Nut — Hex	1
614	93306	Cotter — Hair Pin	1
615	93307	Retainer — E-Ring	1
635	66538	Elbow — Spark Plug	1
645	23513	Bushing — Plunger	1
657	93496	Screw	1
663	93572	Screw	1
670	231039	Spacer — Control Bracket Mounting	1
729	221907	Clip — Wire	1
741	261196	Gear — Timing	1
757	212359	Link — Counterweight	1
758	391373	Counterweight Assy.	1
759	298909	Pin — Counterweight	1
761	93875	Screw — Counterweight	1
842	270920	Seal — Oil Filler Cap	1
847	392067	Fill Group — Oil	1
851	221798	Terminal — Ignition Cable	1
869	261463	Seat — Intake Valve (Std.)	1
870	210940	Seat — Exhaust Valve (Std.)	1
871	230655	Guide — Exhaust Valve	1
883	270917	Gasket — Exhaust Pipe	1

* Included in Gasket Set — Part No. 393411.

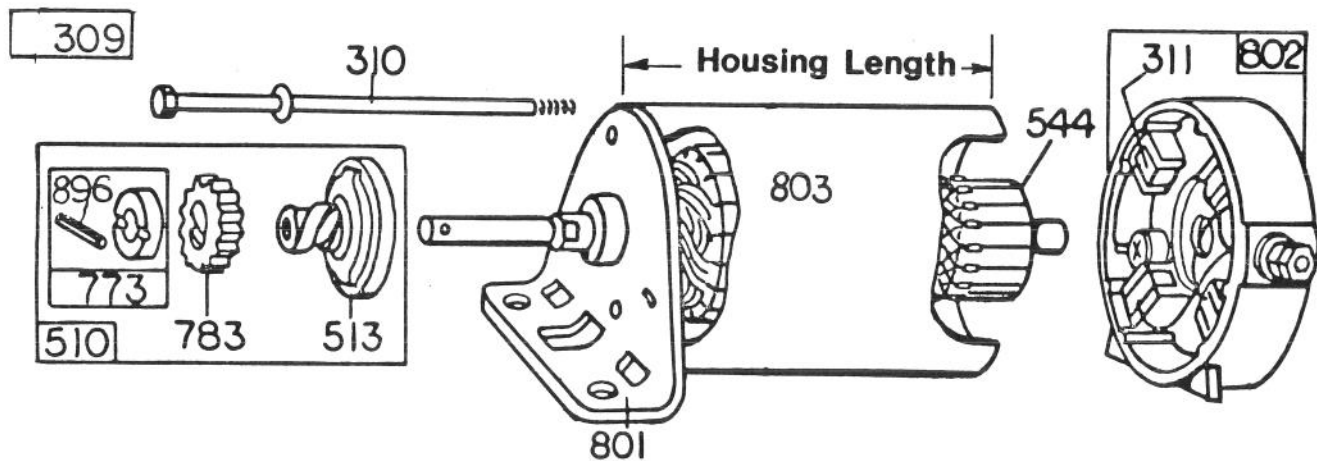

**BRIGGS & STRATTON MODEL 252707-0230-01
(MODEL 57360) (Continued)**

Ref. No.	Part No.	Description	No. Used
309	392749	Motor & Drive Assembly	1
310	391706	Thru Bolt Assembly	1
311	391705	Brush Assembly	1
510	391461	Drive Assy. (Incl. Ref. #513, 773, 783, & 896)	1
513	391135	Clutch Assembly	1
544	392747	Armature Assembly	1
773	391462	Retainer & Pin	1

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	392061	End Cap Assy. — Drive	1
802	390846	End Cap Assy. — Commutator (Incl. Ref. #311)	1
803	392744	Housing Assembly (3-1/16" Lg.)	1
896	93754	Roll Pin	1