



Form No. 3471-922 Rev A

**Count on it.**

# Parts Catalog

## TimeCutter® Max 60in Zero Turn Riding Mower

Model No. 77601—Serial No. 418300000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Frame Assembly..... 4

Decklift Assembly..... 6

Caster Tire Assembly..... 8

Traction Control Assembly..... 10

LH Hydro Transmission Assembly No. 140-8301..... 12

RH Hydro Transmission Assembly No. 140-8300..... 14

Brake Assembly..... 16

Tire Assembly..... 18

Seat Pan Assembly..... 20

Motion Control Assembly..... 22

Engine and Muffler Assembly..... 24

Fuel Pod Assembly..... 26

Electrical Assembly..... 28

Main Wire Harness Assembly No. 145-6382..... 30


60 Inch Deck and Decal Assembly..... 32

Model Specific Assembly..... 34

Clutch Assembly..... 36

Attachments and Accessories..... 38


# Frame Assembly

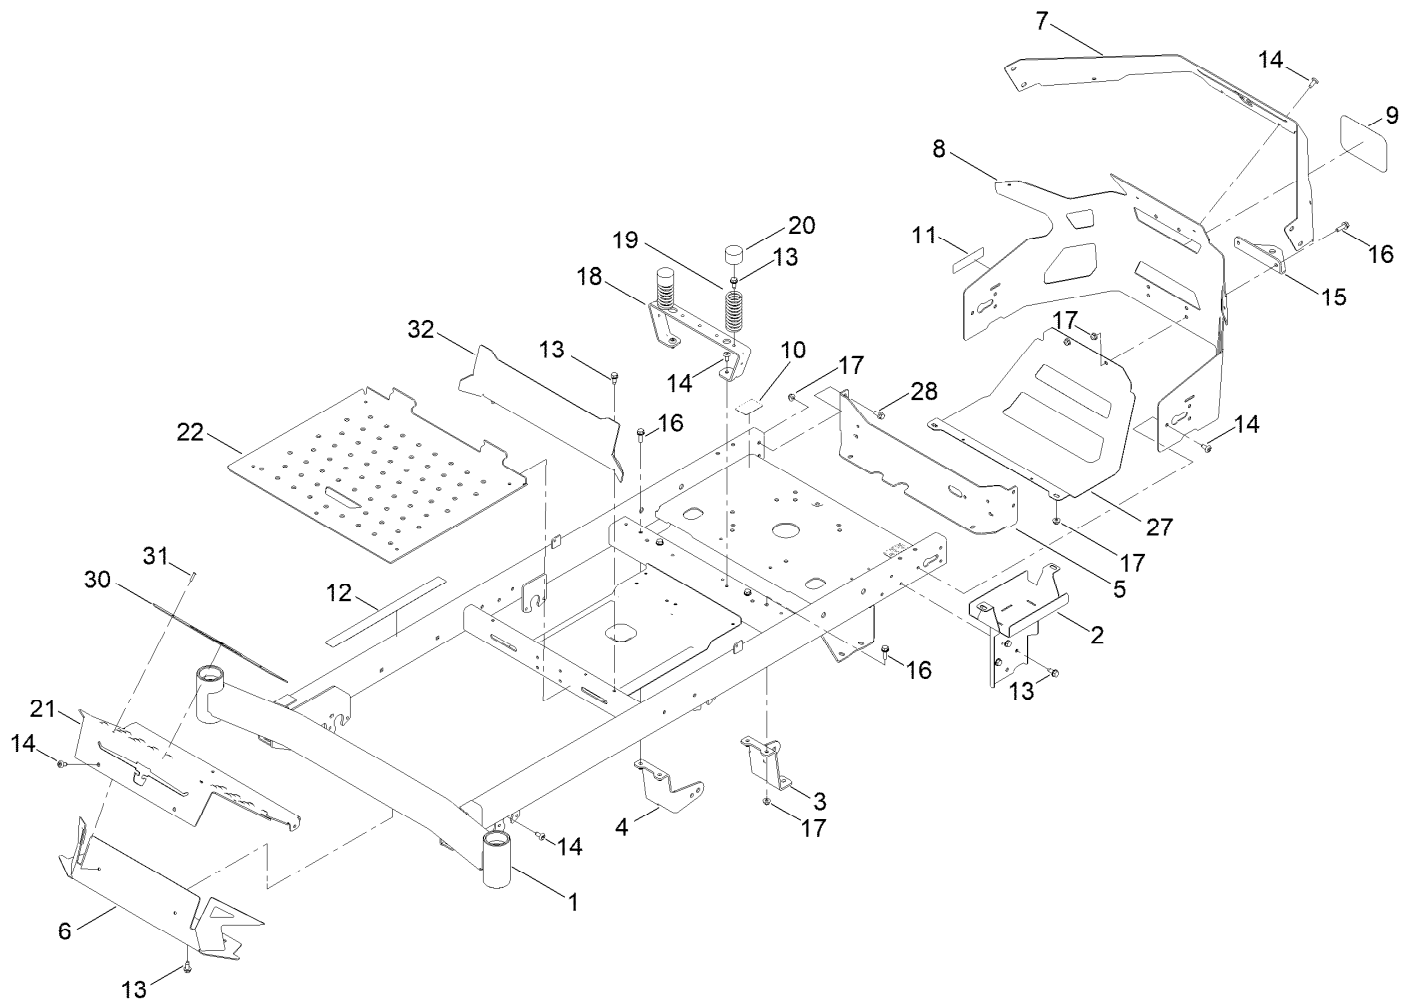

## Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 161-6613           | 1           | Service ASM-Frame, Tc  | 15          | 117-1232-03        | 1           | Bracket-Hitch         |
| 2           | 145-6283-01        | 1           | Wa-Battery Mount       | 16          | 139-2596           | 6           | Screw-HHF             |
| 3           | 161-6506-01        | 1           | Mount-Drive, LH        | 17          | 119-4041           | 12          | Nut-HF                |
| 4           | 161-6507-01        | 1           | Mount-Drive, RH        | 18          | 145-6315-03        | 1           | Support-Seat          |
| 5           | 147-8709-03        | 1           | Plate-Mount            | 19          | 138-2548           | 2           | Spring-Compression    |
| 6           | 147-2966-03        | 1           | Footrest-Top           | 20          | 701178             | 2           | Cap-Protector         |
| 7           | 147-2995-01        | 1           | Plate-Rear Cladding Tc | 21          | 145-6368-01        | 1           | Plate-Kick            |
| 8           | 147-2994-03        | 1           | Guard-Engine Tc        | 22          | 145-6370-01        | 1           | Pan-Floor             |
| 9           | 99-4693            | 1           | Decal                  | 27          | 163-6002-03        | 1           | Guard-Muffler [black] |
| 10          | 161-6207           | 1           | Decal-Bypass           | 28          | 139-2598           | 4           | Screw-HHF             |
| 11          | 142-5864           | 1           | Decal-Spark Arrester   | 30          | 147-8716-05        | 1           | Plate- Toeboard       |
| 12          | 144-5288           | 1           | Decal-Warning          | 31          | 130-8451           | 2           | Rivet-Trifold         |
| 13          | 32144-70           | 9           | Screw-HWHTF            | 32          | 147-5170-03        | 1           | Plate-Kick            |
| 14          | 138-9753           | 16          | Screw                  |             |                    |             |                       |


# Decklift Assembly

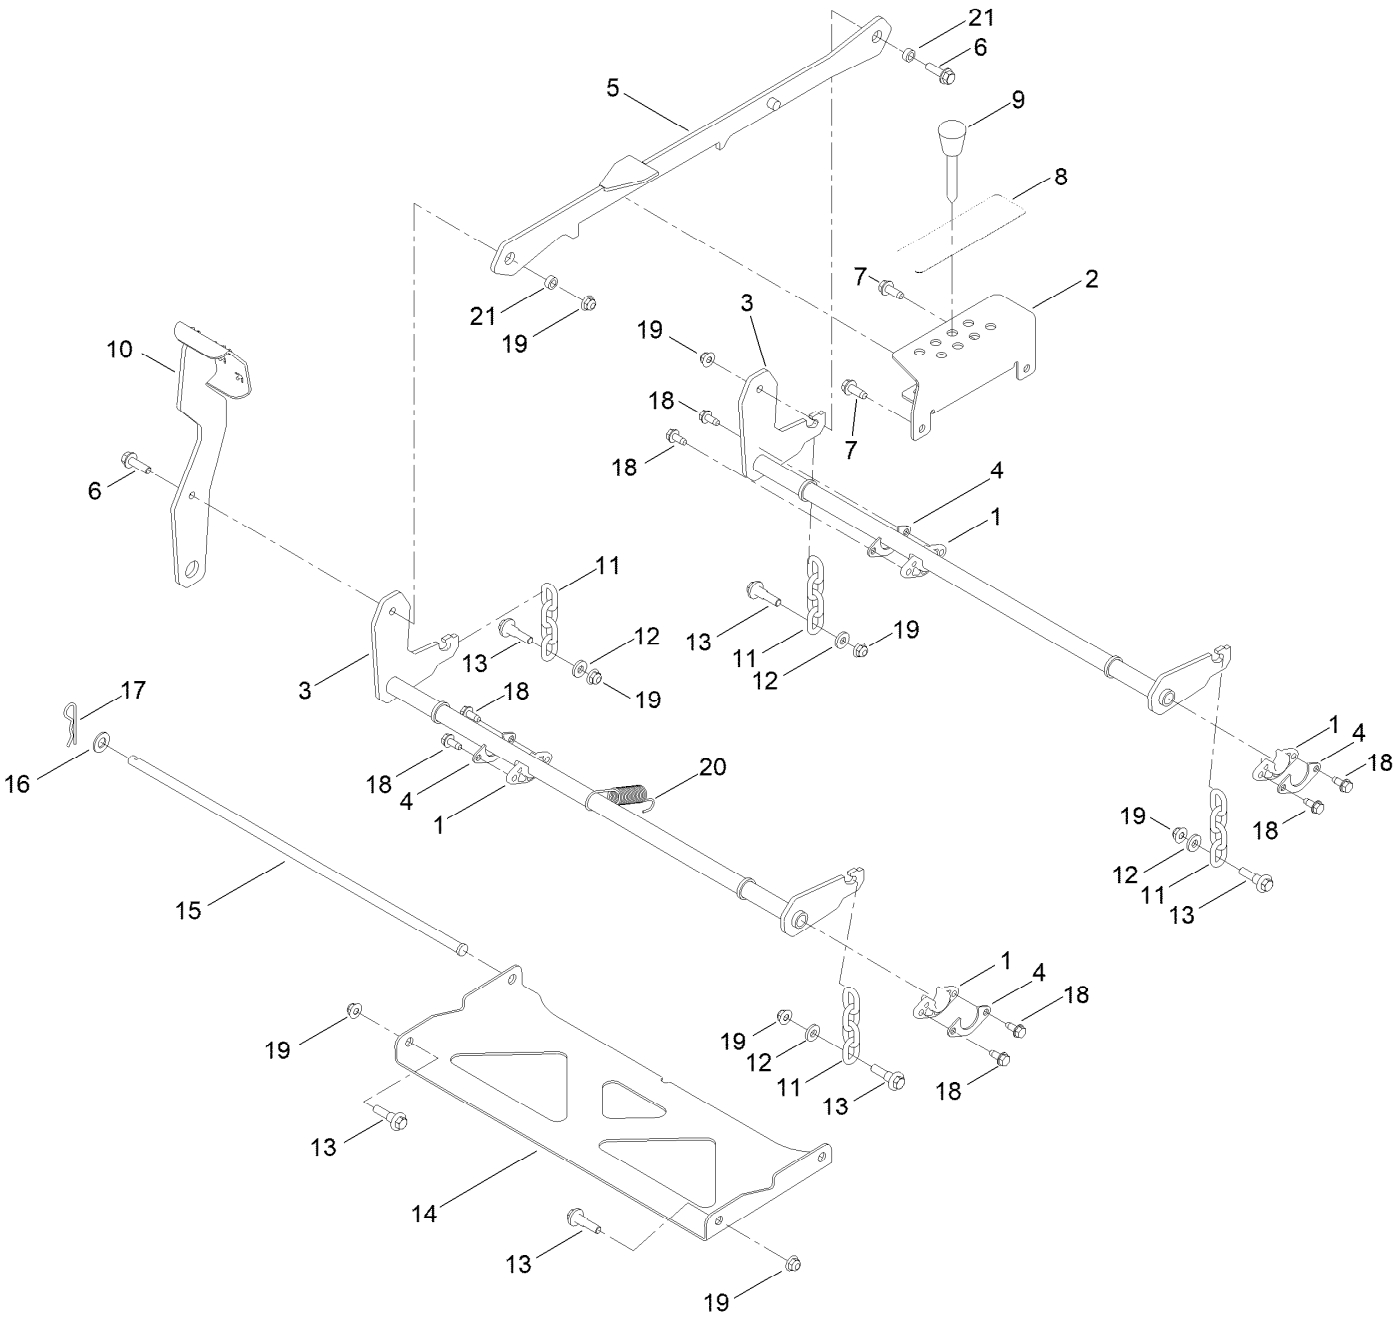

## Decklift Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 139-5872           | 4           | Bearing-Flange           | 12          | 138-7207           | 4           | Spacer-Hub, Blower |
| 2           | 145-6257-01        | 1           | Bracket-HOC              | 13          | 130-0742           | 6           | Bolt-Shoulder      |
| 3           | 145-4645-01        | 2           | Pivot ASM-Decklift [red] | 14          | 145-6248-03        | 1           | Pan-Deck Pivot     |
| 4           | 138-7204           | 4           | Gusset-Deck Lift         | 15          | 145-6288           | 1           | Pin-Deck           |
| 5           | 145-0557-01        | 1           | Link ASM-HOC [red]       | 16          | 139-2611           | 1           | Washer-Flat        |
| 6           | 119-4061           | 2           | Screw-HHF                | 17          | 139-2562           | 1           | Pin-Hair           |
| 7           | 139-2428           | 2           | Screw-HWH                | 18          | 32144-70           | 8           | Screw-HWHTF        |
| 8           | 147-2866           | 1           | Decal-HOC, Tc            | 19          | 119-4042           | 8           | Nut-HF, NI         |
| 9           | 140-2146           | 1           | HOC Pin ASM              | 20          | 138-7206           | 1           | Spring-Extension   |
| 10          | 145-6278-01        | 1           | Pedal ASM [red]          | 21          | 140-2093           | 2           | Spacer             |
| 11          | 138-7205           | 4           | Chain-Decklift, 4-Link   |             |                    |             |                    |


# Caster Tire Assembly

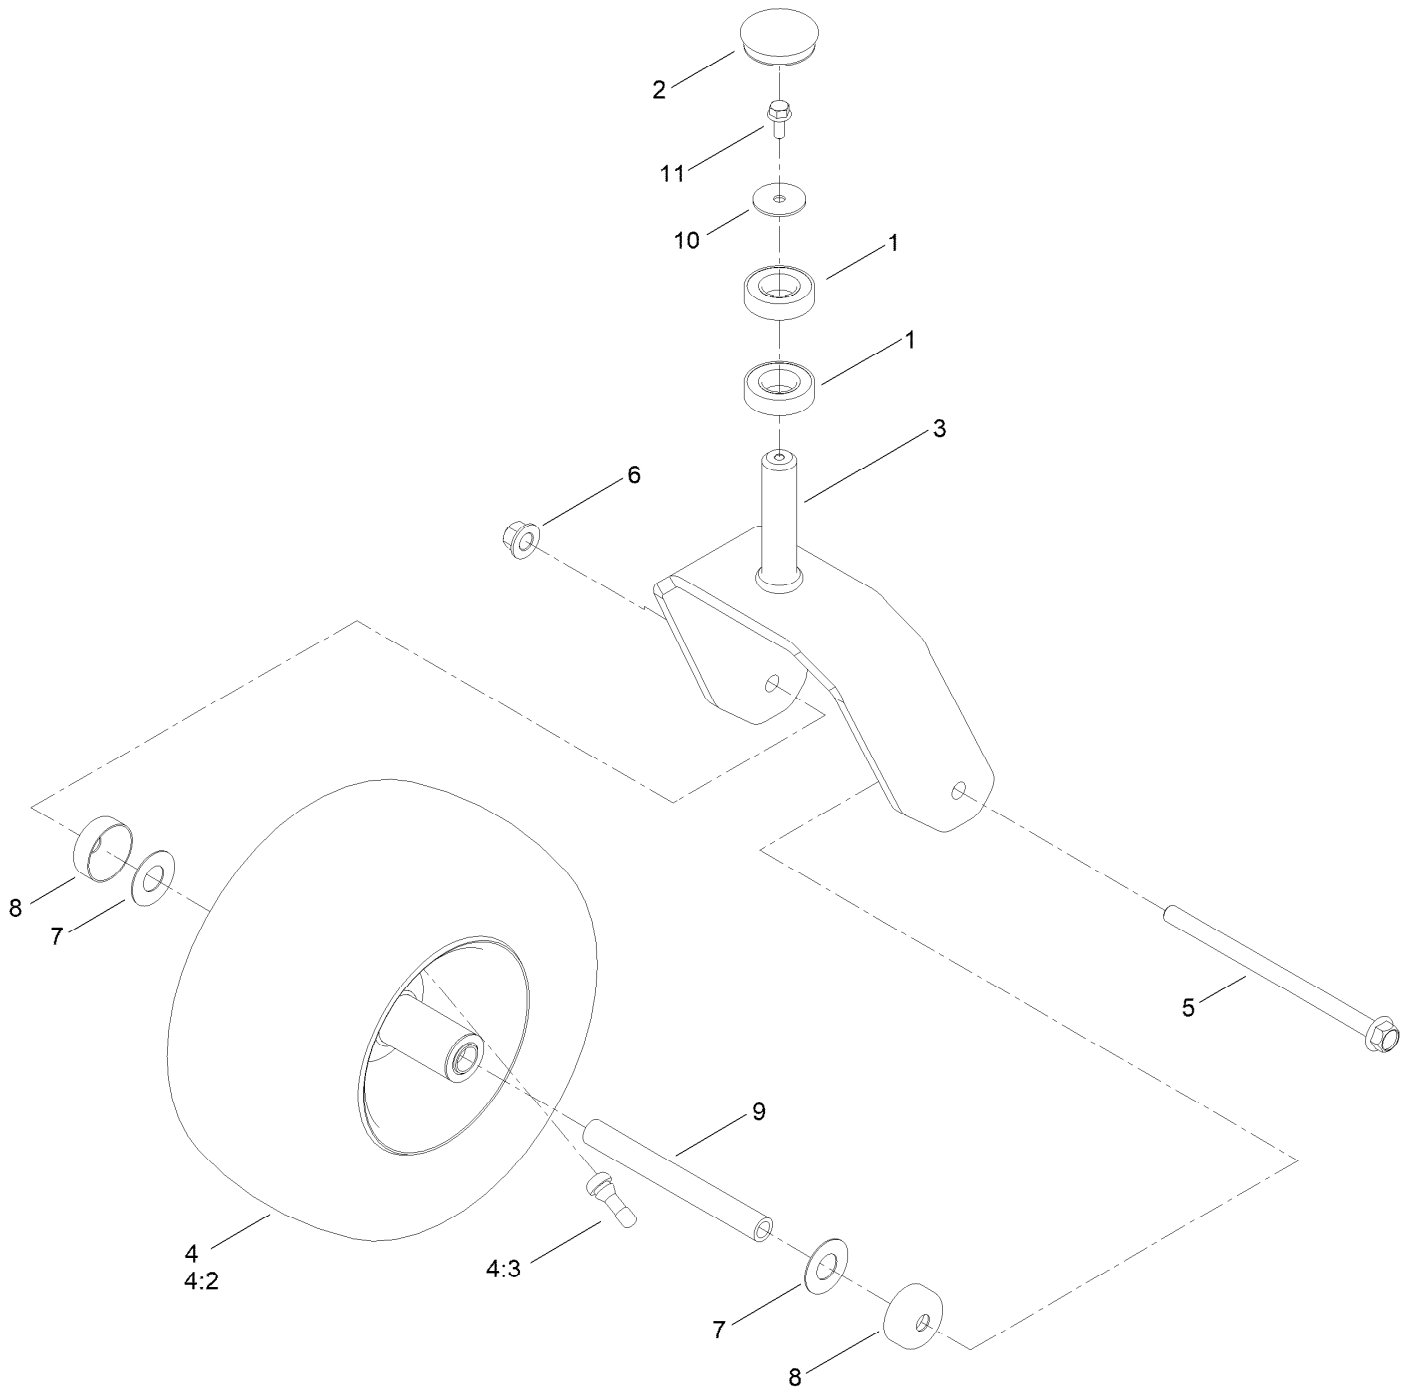

## Caster Tire Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 109-3678           | 4           | Bearing-Ball             | 6           | 99-5107            | 2           | Nut-Lock           |
| 2           | 144-0375           | 2           | Cap, Grease              | 7           | 136-5590           | 4           | Washer             |
| 3           | 133-4375-01        | 2           | Fork                     | 8           | 138-7208           | 4           | Guard-Seal         |
| 4           | 147-7598           | 2           | Caster Tire ASM 13X6.5-6 | 9           | 133-4487           | 2           | Spanner-Wheel      |
| 4:2         | 147-7599           | 1           | Tire 13X6.5-6            | 10          | 115-1151           | 2           | Washer-Flat        |
| 4:3         | 232-27             | 1           | Stem-Valve               | 11          | 100-1668           | 2           | Screw-HHF          |
| 5           | 126-5389           | 2           | Screw-HHF                |             |                    |             |                    |


# Traction Control Assembly

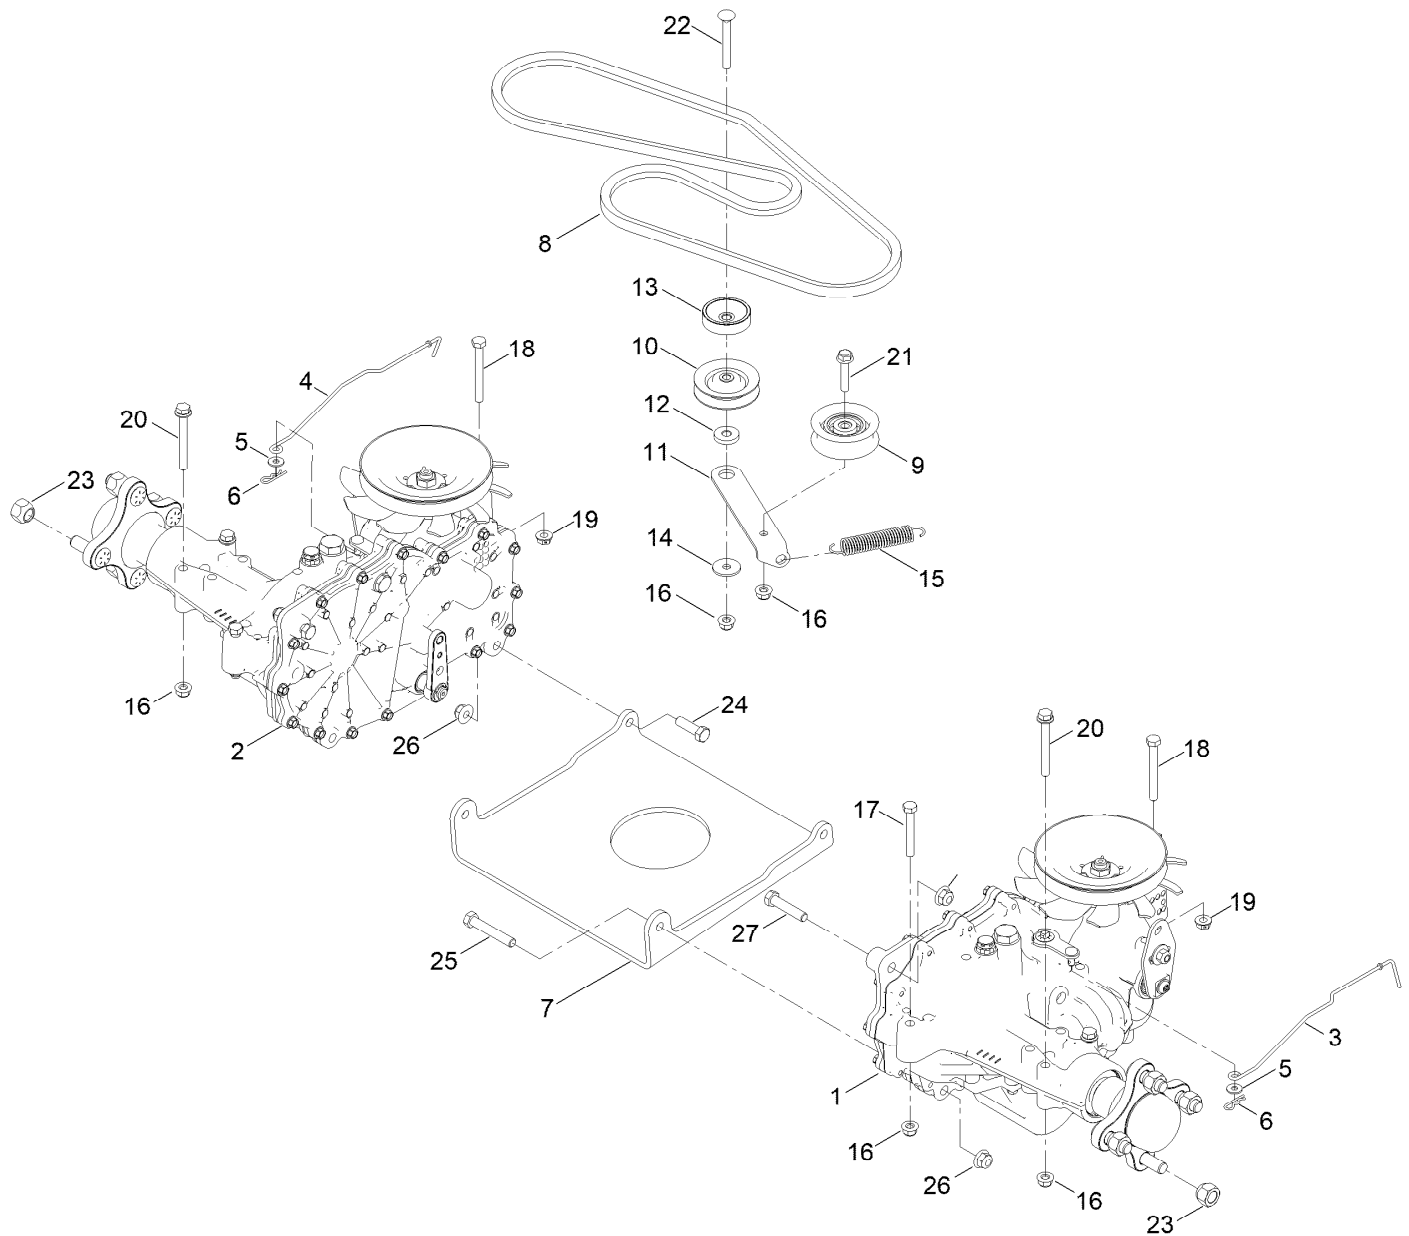

## Traction Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>           | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|------------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 140-8301           | 1           | LH Hydro Transmission<br>ASM | 14          | 5-4460             | 1           | Washer-Pivot         |
| 2           | 140-8300           | 1           | RH Hydro Transmission<br>ASM | 15          | 137-7040           | 1           | Spring-Return, Pedal |
| 3           | 147-2987           | 1           | Rod-Bypass, LH               | 16          | 104-8300           | 8           | Nut-HF, NI           |
| 4           | 147-2986           | 1           | Rod-Bypass, RH               | 17          | 322-11             | 2           | Screw-HH             |
| 5           | 119-8952           | 2           | Washer-Spcl                  | 18          | 145-6388           | 2           | Screw-HH Spcl        |
| 6           | 3290-307           | 2           | Pin-Cotter                   | 19          | 139-2574           | 2           | Nut-HF               |
| 7           | 145-6383-03        | 1           | Plate-Hydro                  | 20          | 138-7590           | 4           | Screw-HHF            |
| 8           | 145-6362           | 1           | V-Belt (A Sec 65.30 EI)      | 21          | 115-1794           | 1           | Screw-HHF            |
| 9           | 138-7597           | 1           | Pulley-Idler, Flat           | 22          | 3230-8             | 1           | Screw-CARR           |
| 10          | 68-0030            | 1           | Idler                        | 23          | 139-2564           | 8           | Nut-Lug              |
| 11          | 147-2925           | 1           | Arm-Idler                    | 24          | 323-7              | 2           | Screw-HH             |
| 12          | 138-7277           | 1           | Spacer-Arm, Idler            | 25          | 323-11             | 2           | Screw-HH             |
| 13          | 138-9809           | 1           | Spacer                       | 26          | 104-8301           | 6           | Nut-HF, NI           |
|             |                    |             |                              | 27          | 323-9              | 2           | Screw-HH             |


# LH Hydro Transmission Assembly No. 140-8301

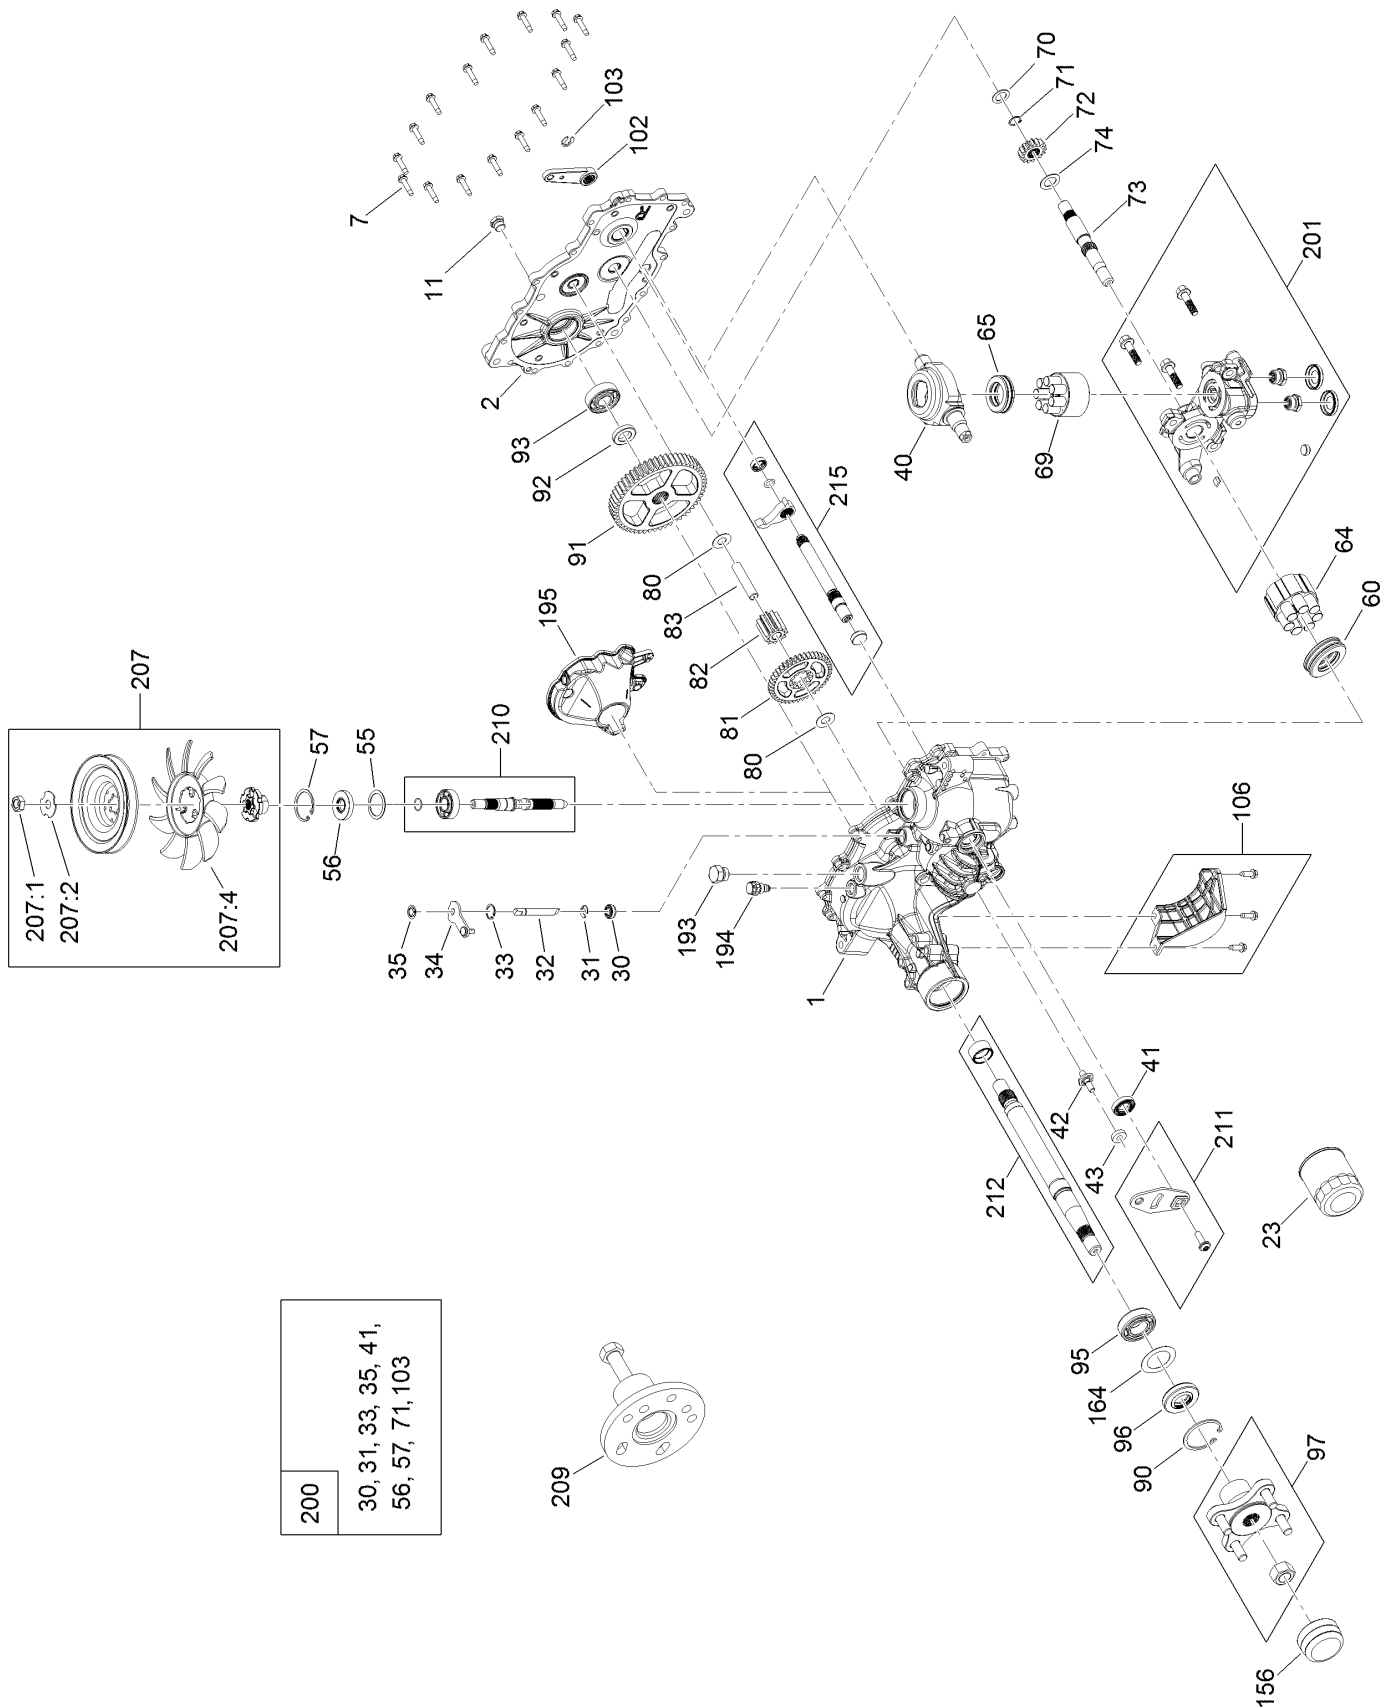

# LH Hydro Transmission Assembly No. 140-8301 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>          | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             |
|-------------|--------------------|-------------|-----------------------------|-------------|--------------------|-------------|--------------------------------|
| 1           | 140-8346           | 1           | RH Control Main Housing Kit | 74          | 104-5360           | 1           | Washer                         |
| 2           | 140-8349           | 1           | RH Side Cover Kit           | 80          | 94-1933            | 2           | Washer                         |
| 7           | 117-5359           | 16          | Screw-HHF                   | 81          | 125-0000           | 1           | Gear-43T                       |
| 11          | 135-1140           | 1           | Plug-Straight               | 82          | 114-1693           | 1           | Gear-11T                       |
| 23          | 109-3321           | 1           | Element-Oil Filter, HYD     | 83          | 104-5329           | 1           | Pin-Jackshaft                  |
| 30          | 139-7497           | 1           | Seal-Lip                    | 90          | 104-2169           | 1           | Ring-Retaining                 |
| 31          | 106-8677           | 1           | Ring-Retaining, External    | 91          | 114-1694           | 1           | Gear-54T                       |
| 32          | 114-1685           | 1           | Rod-Bypass                  | 92          | 120-7975           | 1           | Spacer                         |
| 33          | 106-8679           | 1           | Ring-Retaining, Internal    | 96          | 104-2144           | 1           | Seal                           |
| 34          | 112-9852           | 1           | Arm-Bypass                  | 97          | 109-5939           | 1           | Hub Kit                        |
| 35          | 106-8681           | 1           | Ring-Retaining, External    | 102         | 125-0021           | 1           | Handle-Brake                   |
| 40          | 104-5304           | 1           | Swashplate-Trunnion         | 103         | 131-0906           | 1           | Ring-Retaining, EXT            |
| 41          | 104-5313           | 1           | Seal-Lip                    | 106         | 139-7499           | 1           | Filter Guard Kit               |
| 42          | 104-2116           | 1           | Stud                        | 156         | 115-5057           | 1           | Cover-Nut, Axle                |
| 43          | 112-9853           | 1           | Puck-Friction               | 164         | 121-5745           | 1           | Spacer                         |
| 55          | 104-5308           | 1           | Spacer                      | 193         | 140-8343           | 1           | Plug                           |
| 56          | 104-5310           | 1           | Seal-Lip                    | 194         | 140-8356           | 1           | Breather Fitting ASM           |
| 57          | 104-5309           | 1           | Ring-Retaining              | 195         | 140-8357           | 1           | RH Internal Expansion Tank ASM |
| 60          | 112-4154           | 1           | Bearing-Thrust              | 200         | 140-8351           | 1           | Seal Kit                       |
| 64          | 139-4074           | 1           | Cylinder Block ASM Kit      | 201         | 132-0940           | 1           | RH Center Section Kit          |
| 65          | 94-6922            | 1           | Bearing-Thrust              | 207         | 135-7343           | 1           | Fan And Pulley Kit             |
| 69          | 110-8561           | 1           | Pump Block ASM              | 209         | 114-8467           | 1           | Puller-Hub, 4 Bolt             |
| 70          | 104-5339           | 1           | Washer-Flat                 | 210         | 140-8344           | 1           | Input Shaft Kit                |
| 71          | 104-5340           | 1           | Ring-Retaining              | 211         | 117-5362           | 1           | Control Arm Kit                |
| 72          | 121-5749           | 1           | Gear-16T                    | 212         | 114-8470           | 1           | Axle Shaft Kit                 |
| 73          | 114-1691           | 1           | Shaft-Motor                 | 215         | 140-8352           | 1           | Inboard Kit                    |


# RH Hydro Transmission Assembly No. 140-8300

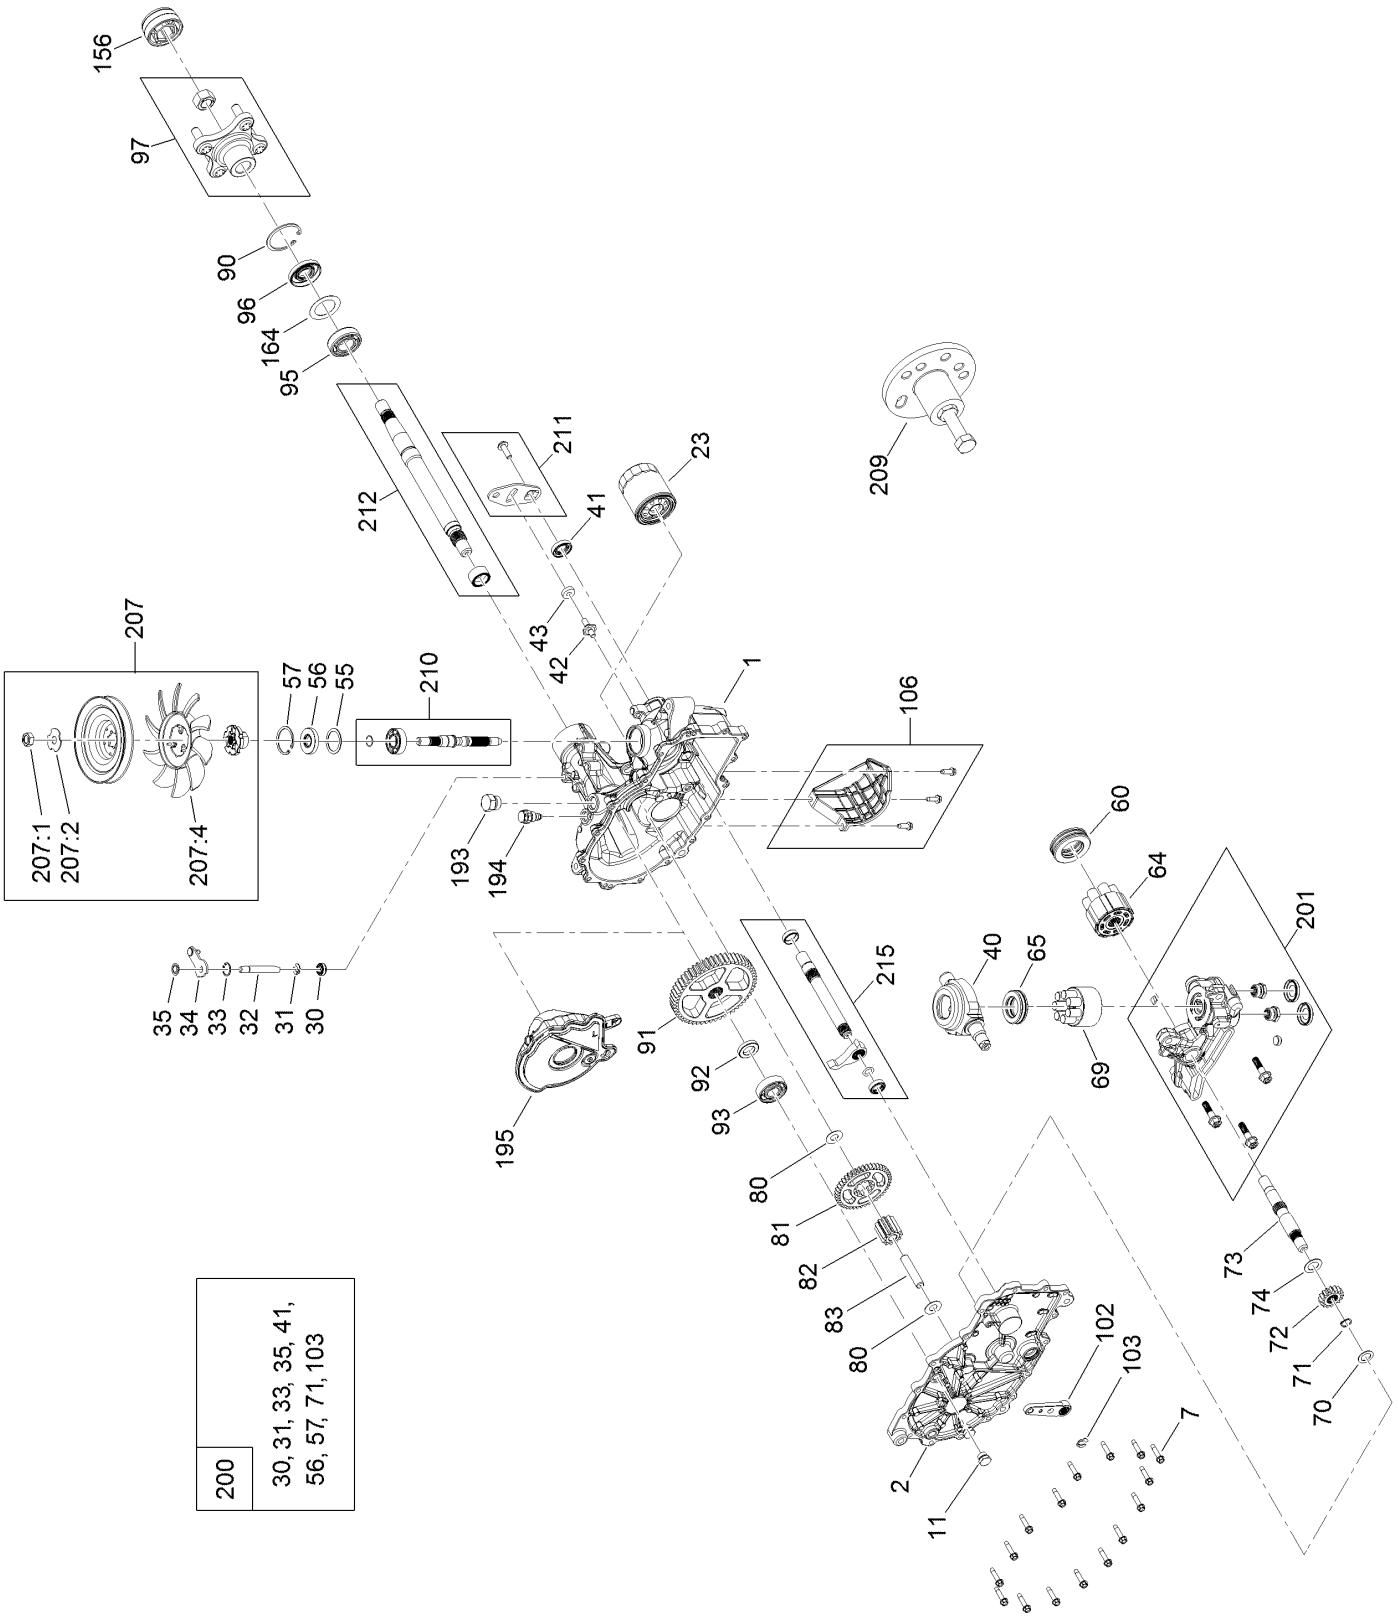

# RH Hydro Transmission Assembly No. 140-8300 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>          | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                |
|-------------|--------------------|-------------|-----------------------------|-------------|--------------------|-------------|-----------------------------------|
| 1           | 140-8348           | 1           | LH Control Main Housing Kit | 80          | 94-1933            | 2           | Washer                            |
| 2           | 140-8350           | 1           | LH Side Cover Kit           | 81          | 125-0000           | 1           | Gear-43T                          |
| 7           | 117-5359           | 16          | Screw-HHF                   | 82          | 114-1693           | 1           | Gear-11T                          |
| 11          | 135-1140           | 1           | Plug-Straight               | 83          | 104-5329           | 1           | Pin-Jackshaft                     |
| 23          | 109-3321           | 1           | Element-Oil Filter, HYD     | 90          | 104-2169           | 1           | Ring-Retaining                    |
| 30          | 139-7497           | 1           | Seal-Lip                    | 91          | 114-1694           | 1           | Gear-54T                          |
| 31          | 106-8677           | 1           | Ring-Retaining, External    | 92          | 120-7975           | 1           | Spacer                            |
| 32          | 114-1685           | 1           | Rod-Bypass                  | 96          | 104-2144           | 1           | Seal                              |
| 33          | 106-8679           | 1           | Ring-Retaining, Internal    | 97          | 109-5939           | 1           | Hub Kit                           |
| 34          | 107-2490           | 1           | Arm-Bypass                  | 102         | 125-0021           | 1           | Handle-Brake                      |
| 35          | 106-8681           | 1           | Ring-Retaining, External    | 103         | 131-0906           | 1           | Ring-Retaining, EXT               |
| 40          | 104-5304           | 1           | Swashplate-Trunnion         | 106         | 139-7498           | 1           | Filter Guard Kit                  |
| 41          | 104-5313           | 1           | Seal-Lip                    | 156         | 115-5057           | 1           | Cover-Nut, Axle                   |
| 42          | 104-2116           | 1           | Stud                        | 164         | 121-5745           | 1           | Spacer                            |
| 43          | 112-9853           | 1           | Puck-Friction               | 193         | 140-8343           | 1           | Plug                              |
| 55          | 104-5308           | 1           | Spacer                      | 194         | 140-8356           | 1           | Breather Fitting ASM              |
| 56          | 104-5310           | 1           | Seal-Lip                    | 195         | 140-8358           | 1           | LH Internal Expansion Tank<br>ASM |
| 57          | 104-5309           | 1           | Ring-Retaining              | 200         | 140-8351           | 1           | Seal Kit                          |
| 60          | 112-4154           | 1           | Bearing-Thrust              | 201         | 125-0036           | 1           | Center Section Kit                |
| 64          | 139-4074           | 1           | Cylinder Block ASM Kit      | 207         | 135-7343           | 1           | Fan And Pulley Kit                |
| 65          | 94-6922            | 1           | Bearing-Thrust              | 209         | 114-8467           | 1           | Puller-Hub, 4 Bolt                |
| 69          | 110-8561           | 1           | Pump Block ASM              | 210         | 140-8344           | 1           | Input Shaft Kit                   |
| 70          | 104-5339           | 1           | Washer-Flat                 | 211         | 117-5362           | 1           | Control Arm Kit                   |
| 71          | 104-5340           | 1           | Ring-Retaining              | 212         | 114-8470           | 1           | Axle Shaft Kit                    |
| 72          | 121-5749           | 1           | Gear-16T                    | 215         | 140-8353           | 1           | Inboard Kit                       |
| 73          | 114-1691           | 1           | Shaft-Motor                 |             |                    |             |                                   |
| 74          | 104-5360           | 1           | Washer                      |             |                    |             |                                   |


Brake Assembly

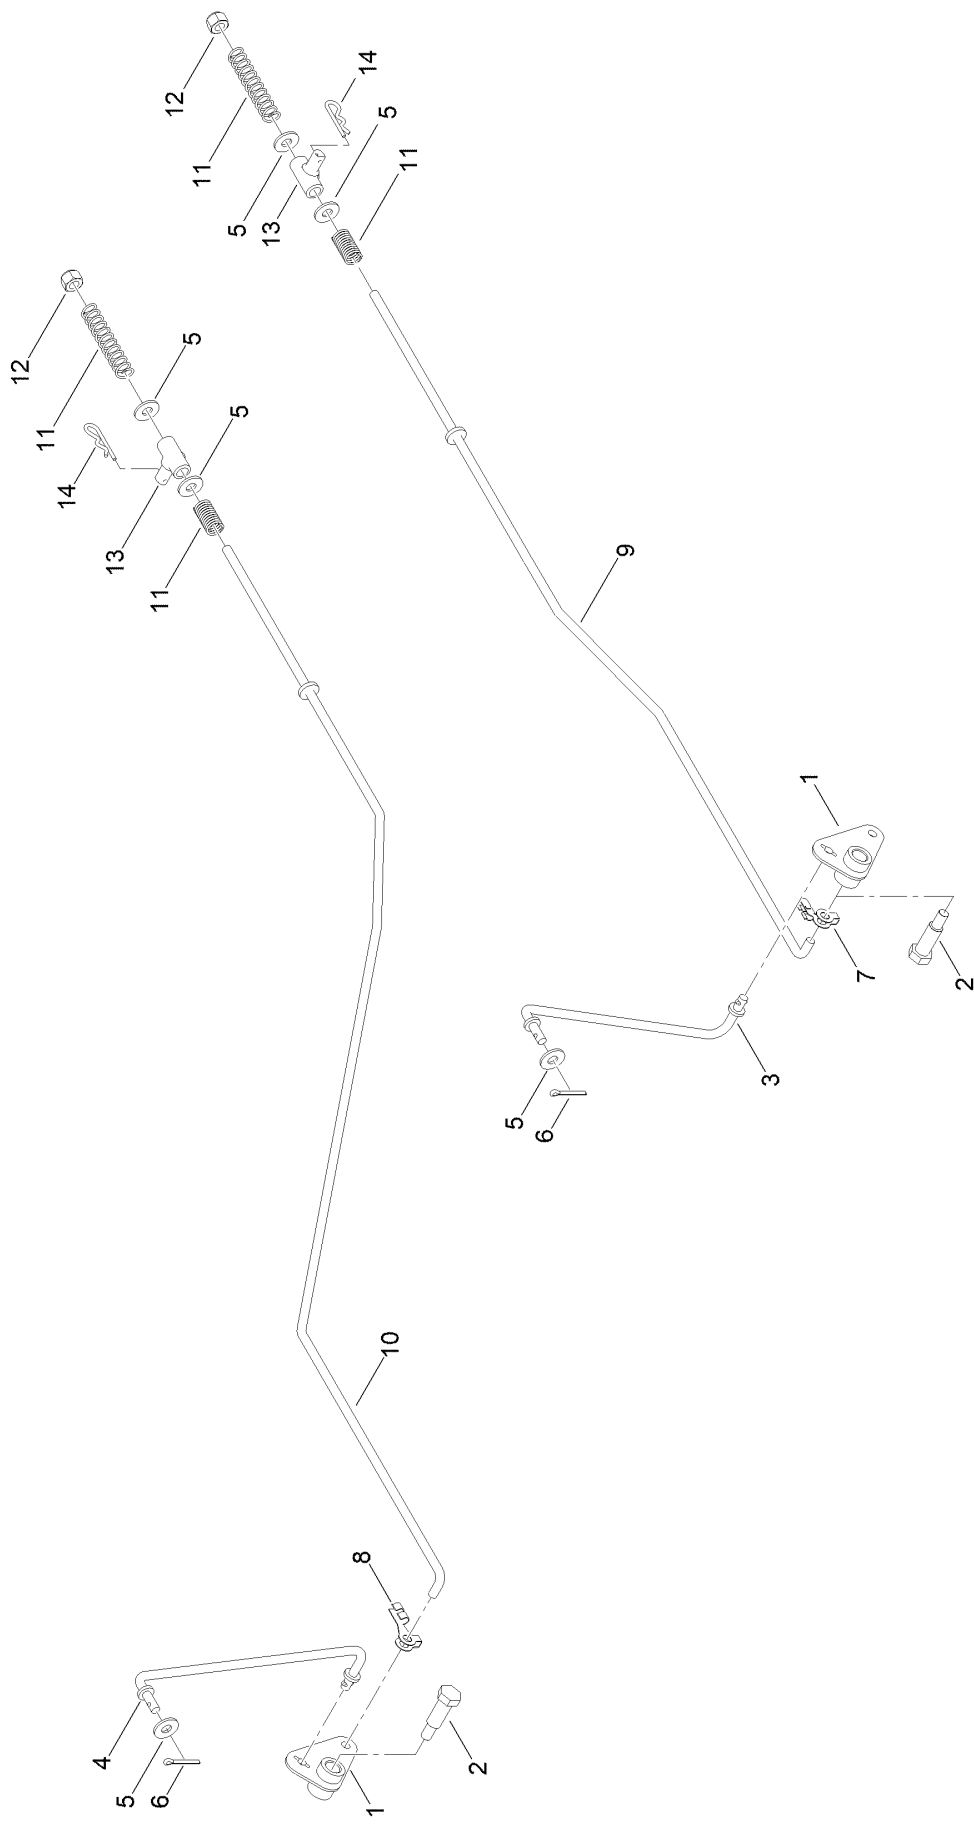

## Brake Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 161-6420           | 2           | Bellcrank                | 8           | 144-1815           | 1           | Clip-Rod, RH (7R, 1/4In) |
| 2           | 145-6364           | 2           | Bolt-Shoulder            | 9           | 145-6372           | 1           | Rod-Brake LH             |
| 3           | 145-4607           | 1           | Link-Brake, LH           | 10          | 145-6371           | 1           | Rod-Brake, RH            |
| 4           | 145-6238           | 1           | Link-Brake, RH           | 11          | 121-5654           | 4           | Spring-Compression       |
| 5           | 119-8952           | 6           | Washer-Spcl              | 12          | 3296-42            | 2           | Nut-Lock, NI             |
| 6           | 120-9716           | 2           | Pin-Cotter               | 13          | 119-8857           | 2           | Mount-Pivot              |
| 7           | 144-1816           | 1           | Clip-Rod, LH (7L, 1/4In) | 14          | 3290-307           | 2           | Pin-Cotter               |


# Tire Assembly

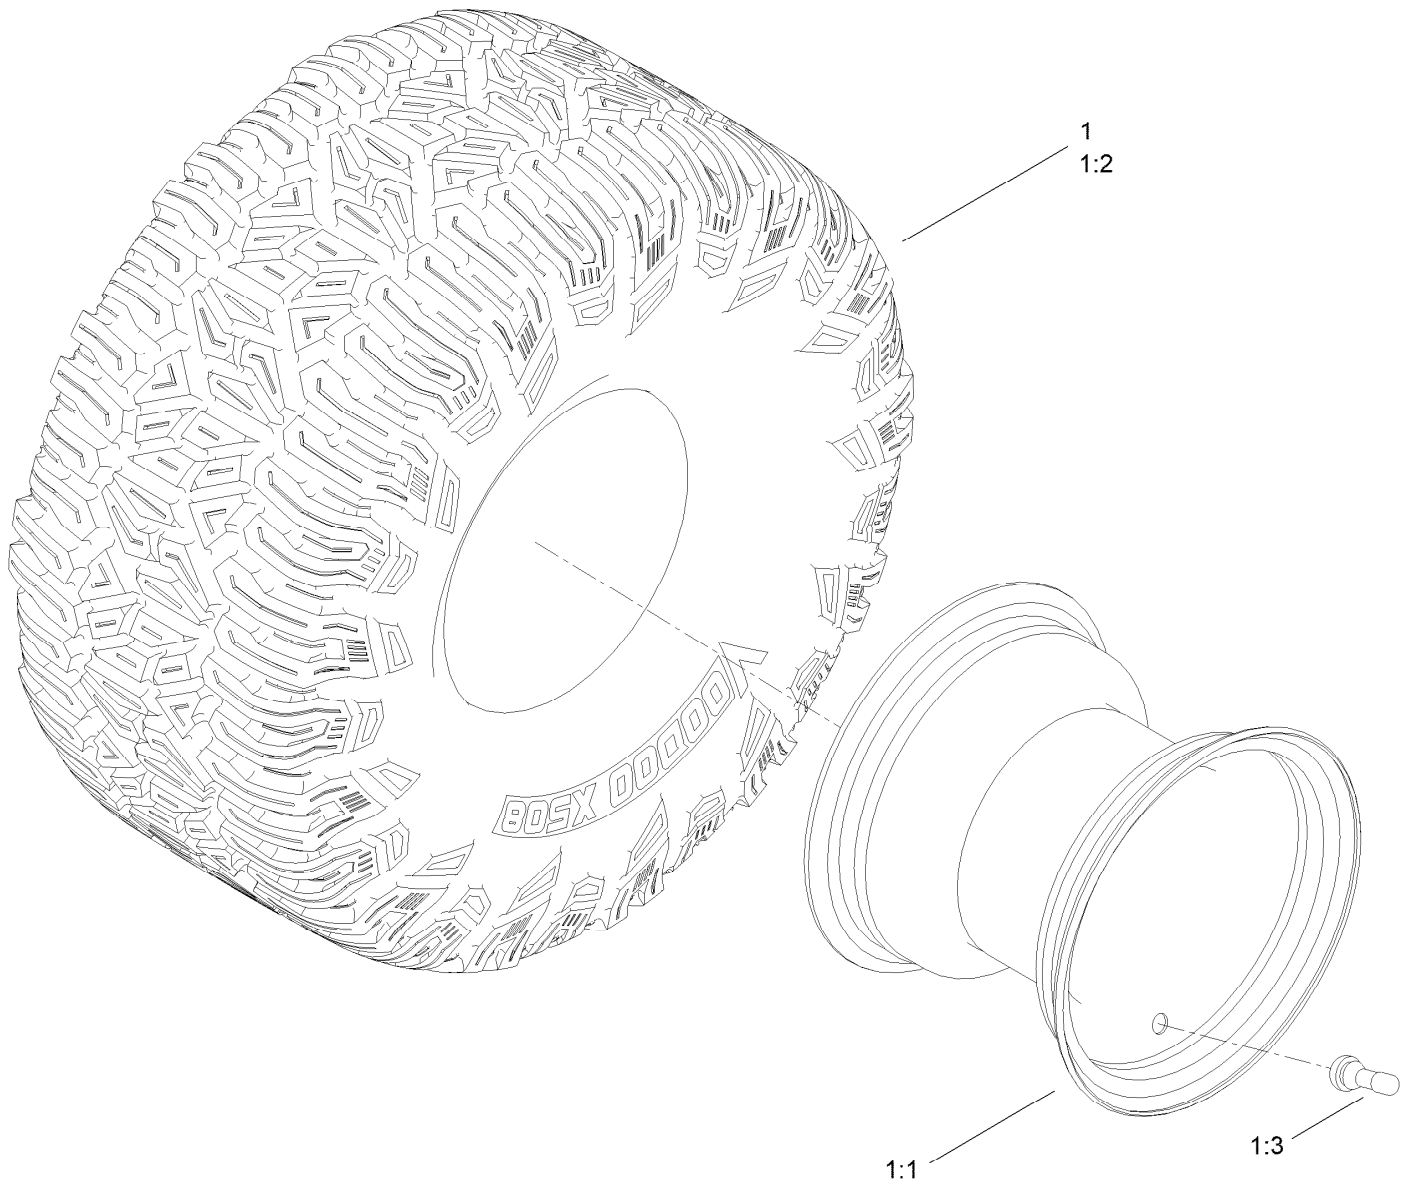

## Tire Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 145-6391           | 2           | Tire ASM           | 1:2         | 147-5179           | 1           | Tire               |
| 1:1         | 147-5180           | 1           | Rim                | 1:3         | 232-27             | 1           | Stem-Valve         |


# Seat Pan Assembly

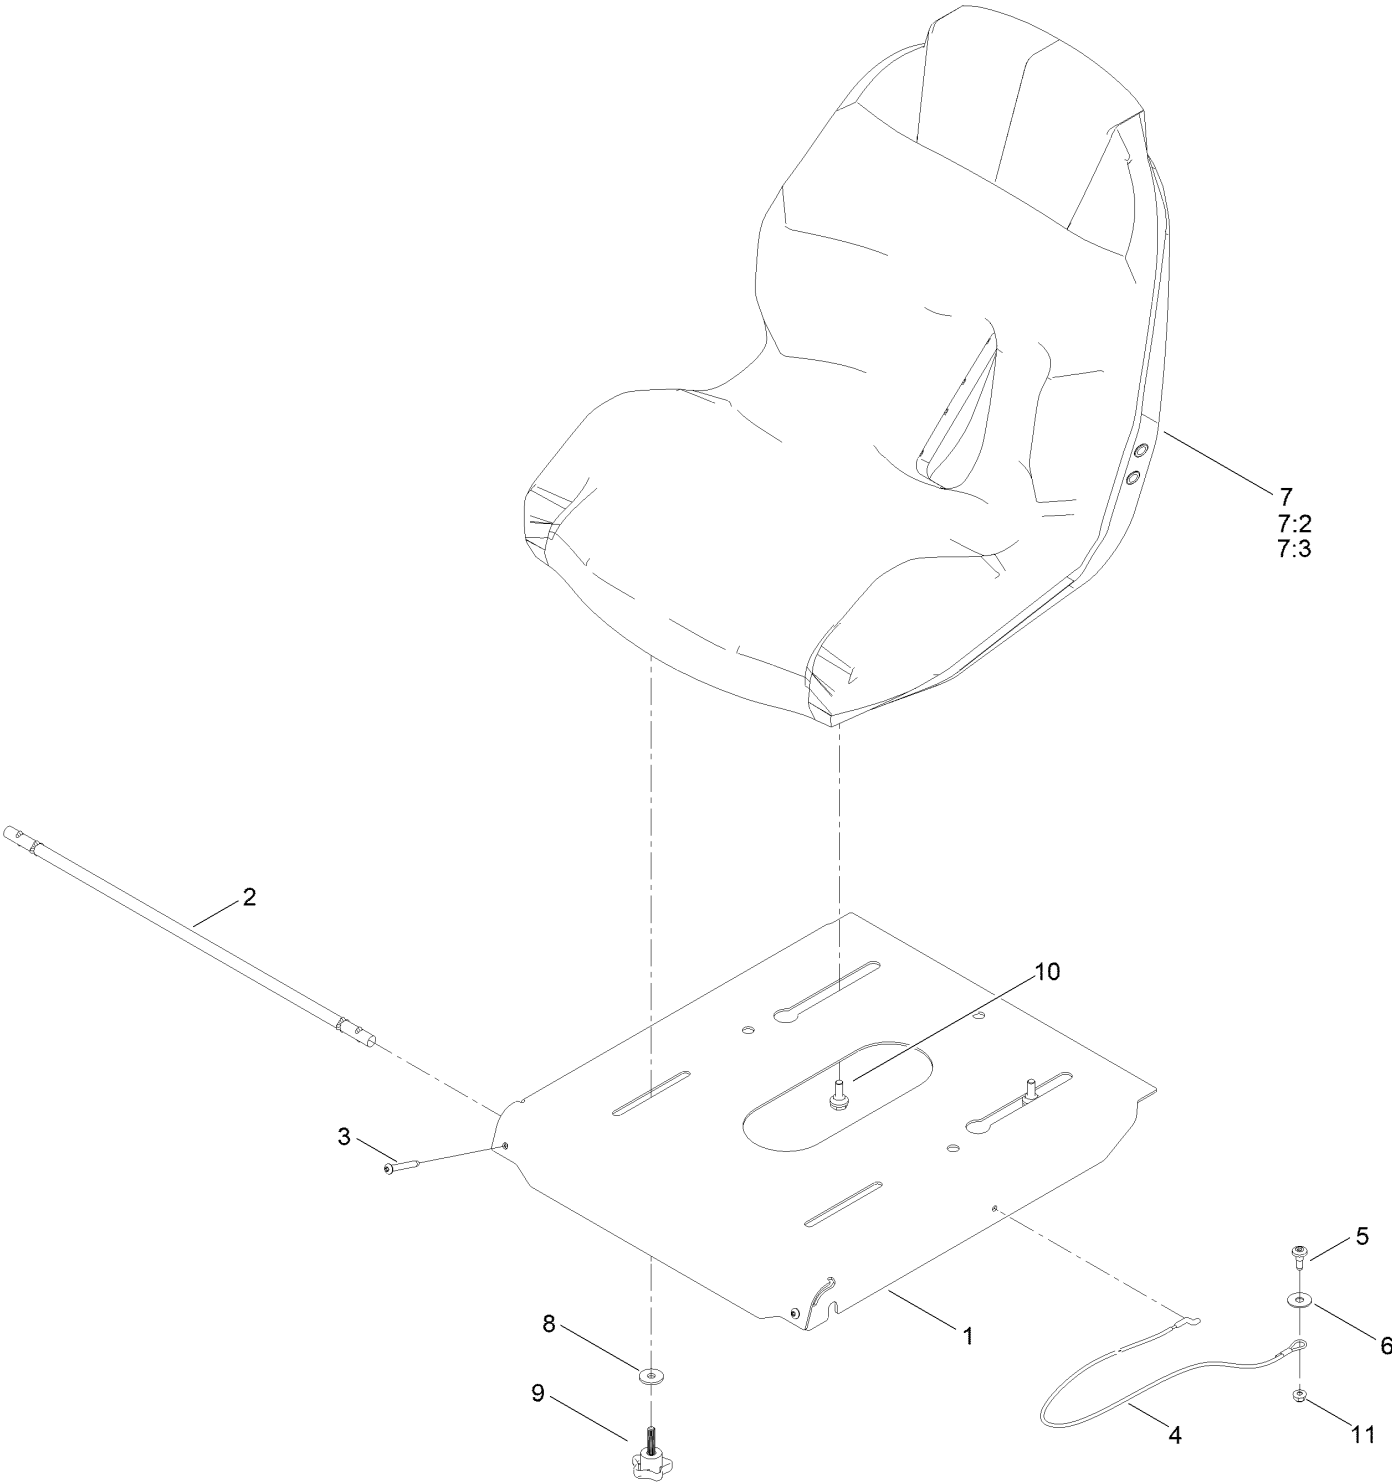

## Seat Pan Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 147-3002-03        | 1           | Pan-Seat                   | 7:2         | 147-8752           | 1           | Cover-Seat         |
| 2           | 147-5169           | 1           | Rod-Pivot                  | 7:3         | 82-2190            | 1           | Switch-Bail        |
| 3           | 147-5175           | 2           | Screw-Tbh,Thd Roll         | 8           | 1-603716           | 2           | Washer-Friction    |
| 4           | 161-4452           | 1           | Cable-Lanyard, 26.75In     | 9           | 139-2401           | 2           | Knob               |
| 5           | 135-2015           | 1           | Screw-Shoulder             | 10          | 147-5174           | 2           | Bolt-Shoulder,Hfh  |
| 6           | 147-5287           | 1           | Washer-Flat                | 11          | 119-4040           | 1           | Nut-HF, NI         |
| 7           | 147-8732           | 1           | Seat ASM - Seat King Sk130 |             |                    |             |                    |

# Motion Control Assembly

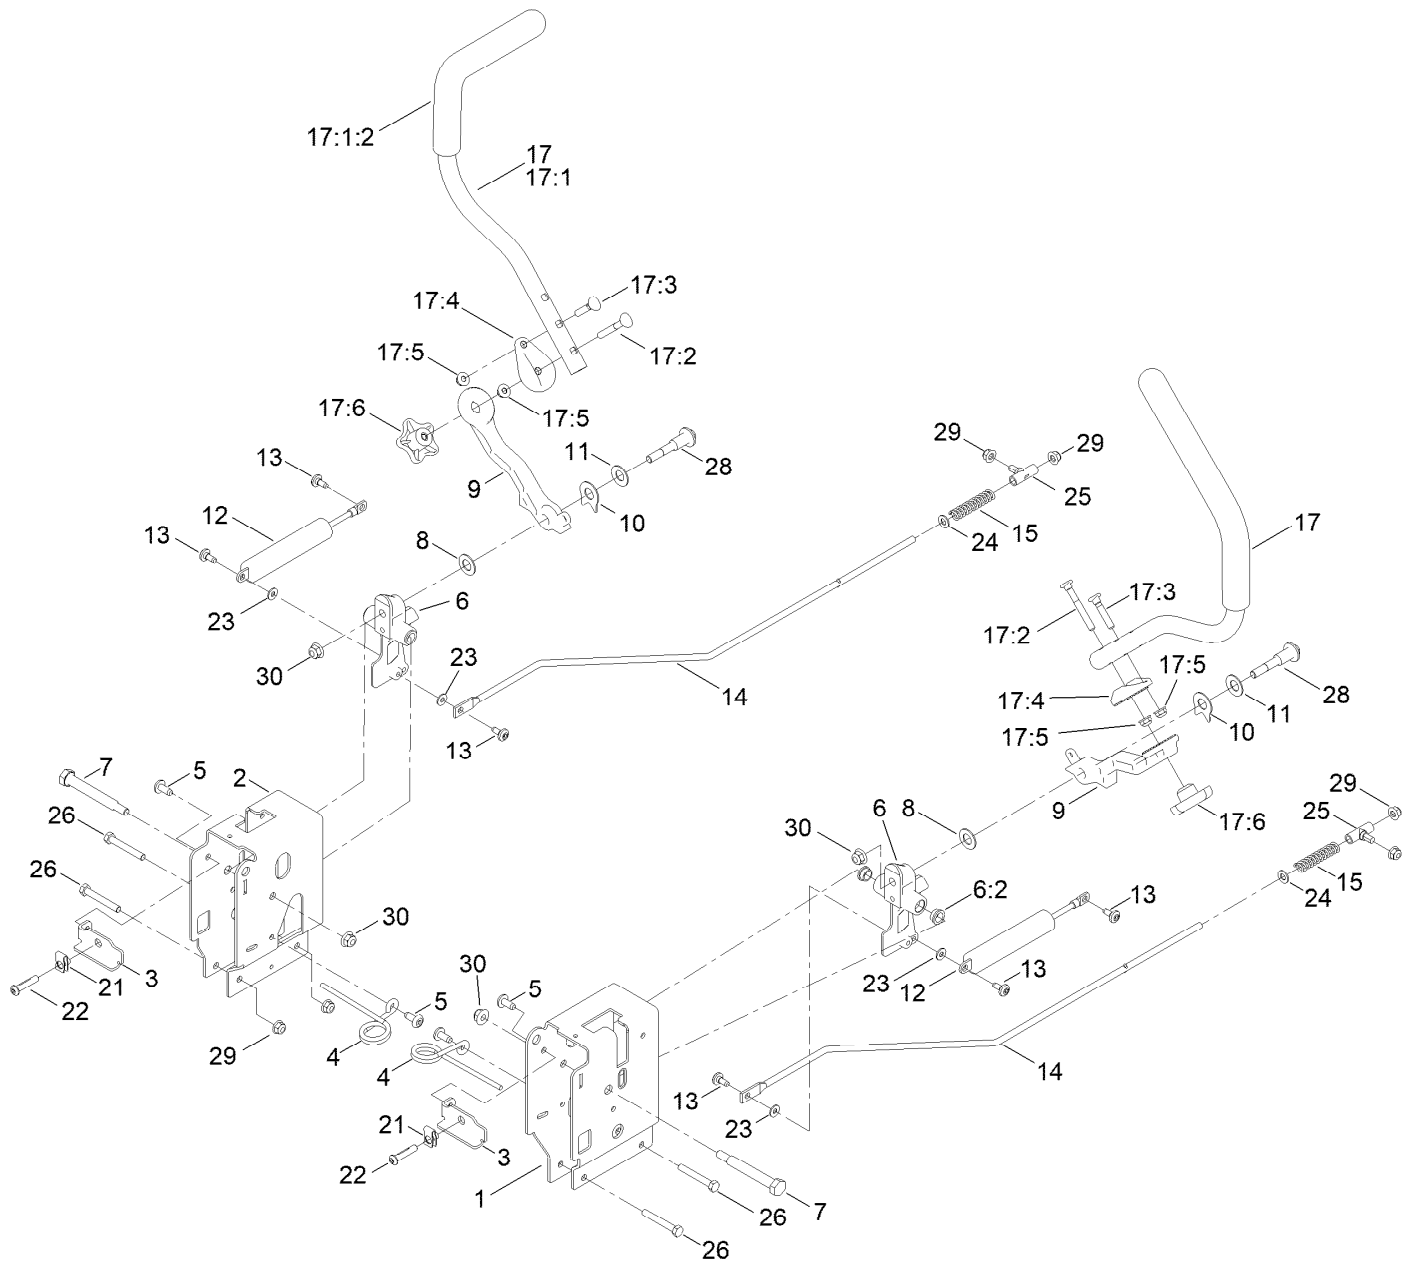


## Motion Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>           | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>               |
|-------------|--------------------|-------------|------------------------------|-------------|--------------------|-------------|----------------------------------|
| 1           | 145-4615-03        | 1           | Control Box - LH G7          | 17:1        |                    | 1           | Handle-Control, ●                |
| 2           | 145-4647-03        | 1           | Control Box - RH G7          | 17:1:2      | 147-3029           | 1           | Grip                             |
| 3           | 147-7580-03        | 2           | Adjustment Plate-Control Box | 17:2        | 145-6366           | 1           | Screw-Handle                     |
| 4           | 145-6253           | 2           | Spring-Torsion               | 17:3        | 137-3008           | 1           | Screw-Handle                     |
| 5           | 138-9753           | 4           | Screw                        | 17:4        | 147-5192-05        | 1           | Disc-Adjustment Handle, 32 Teeth |
| 6           | 145-4648           | 2           | Pivot Arm ASM                | 17:5        | 138-8401           | 2           | Nut-HF                           |
| 6:2         | 256-156            | 2           | Bushing-Flange               | 17:6        | 117-5976           | 1           | Knob-Handle                      |
| 7           | 115-5099           | 2           | Bolt-Pivot                   | 21          | 112-3306           | 2           | Nut                              |
| 8           | 120-2273           | 2           | Washer-Nylon                 | 22          | 126-4299           | 2           | Screw-HSBH                       |
| 9           | 147-5191-05        | 2           | Arm-Control, 32 Teeth        | 23          | 119-8952           | 4           | Washer-Spcl                      |
| 10          | 142-8478           | 2           | Spacer, Anti-Rotation        | 24          | 120-9683           | 2           | Washer-Plain                     |
| 11          | 119-8925           | 2           | Washer-Belleville            | 25          | 138-7218           | 2           | Mount-Rod, Hydro                 |
| 12          | 161-6514           | 2           | Damper - Non Cavitating      | 26          | 322-11             | 4           | Screw-HH                         |
| 13          | 120-7950           | 6           | Screw-Torx                   | 28          | 117-1198           | 2           | Bolt-Pivot                       |
| 14          | 145-4699           | 2           | Rod - Hydro, LH              | 29          | 104-8300           | 8           | Nut-HF, NI                       |
| 15          | 138-7252           | 2           | Spring-Compression           | 30          | 104-8301           | 4           | Nut-HF, NI                       |
| 17          | 161-6523           | 2           | Handle-Control, ASM          |             |                    |             |                                  |

● Not serviced separately

# Engine and Muffler Assembly

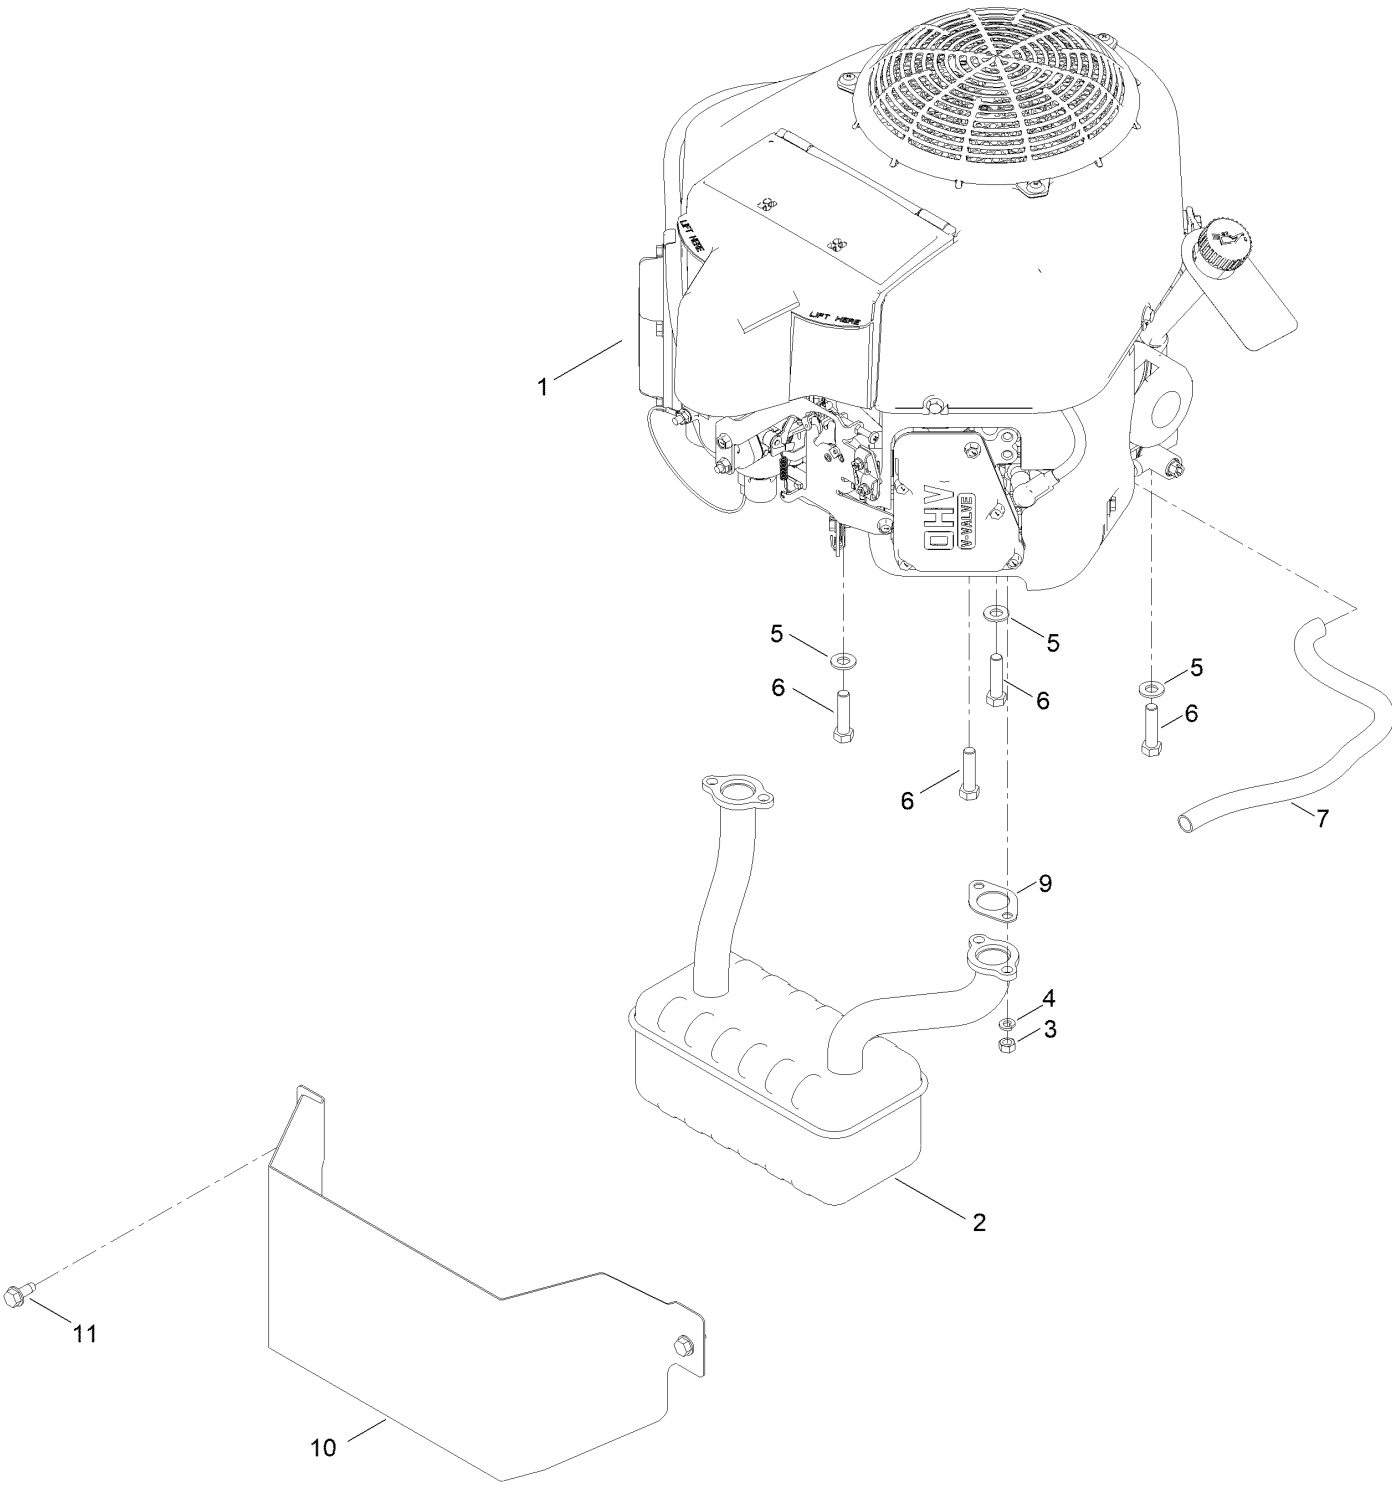

## Engine and Muffler Assembly (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------|
| 1           |                    | 1           | Engine-Kawasaki Fr691 ■▲ | 4           | 114-3550           | 4           | Washer-Lock         |
| 1:1         | 119-5852           | 1           | Filter-Oil ●             | 5           | 3256-24            | 3           | Washer-Plain        |
| 1:2         | 142-6949           | 1           | Filter-Fuel ●            | 6           | 323-50             | 4           | Bolt-HH             |
| 1:3         | 92-2153            | 2           | Plug-Spark ●             | 7           | 106-7022           | 1           | Tube-Drain, Oil     |
| 1:4         | 120-7448           | 1           | Filter-Air, Paper ●      | 9           | 1-653313           | 2           | Gasket-Exhaust      |
| 2           | 139-5867           | 1           | Muffler                  | 10          | 161-6221-03        | 1           | Heat Shield-Muffler |
| 3           | 114-3549           | 4           | Nut                      | 11          | 32144-70           | 2           | Screw-HWHTF         |

● Not illustrated

▲ Obtain parts from [www.kawpower.com](http://www.kawpower.com)

■ Not serviced separately


# Fuel Pod Assembly

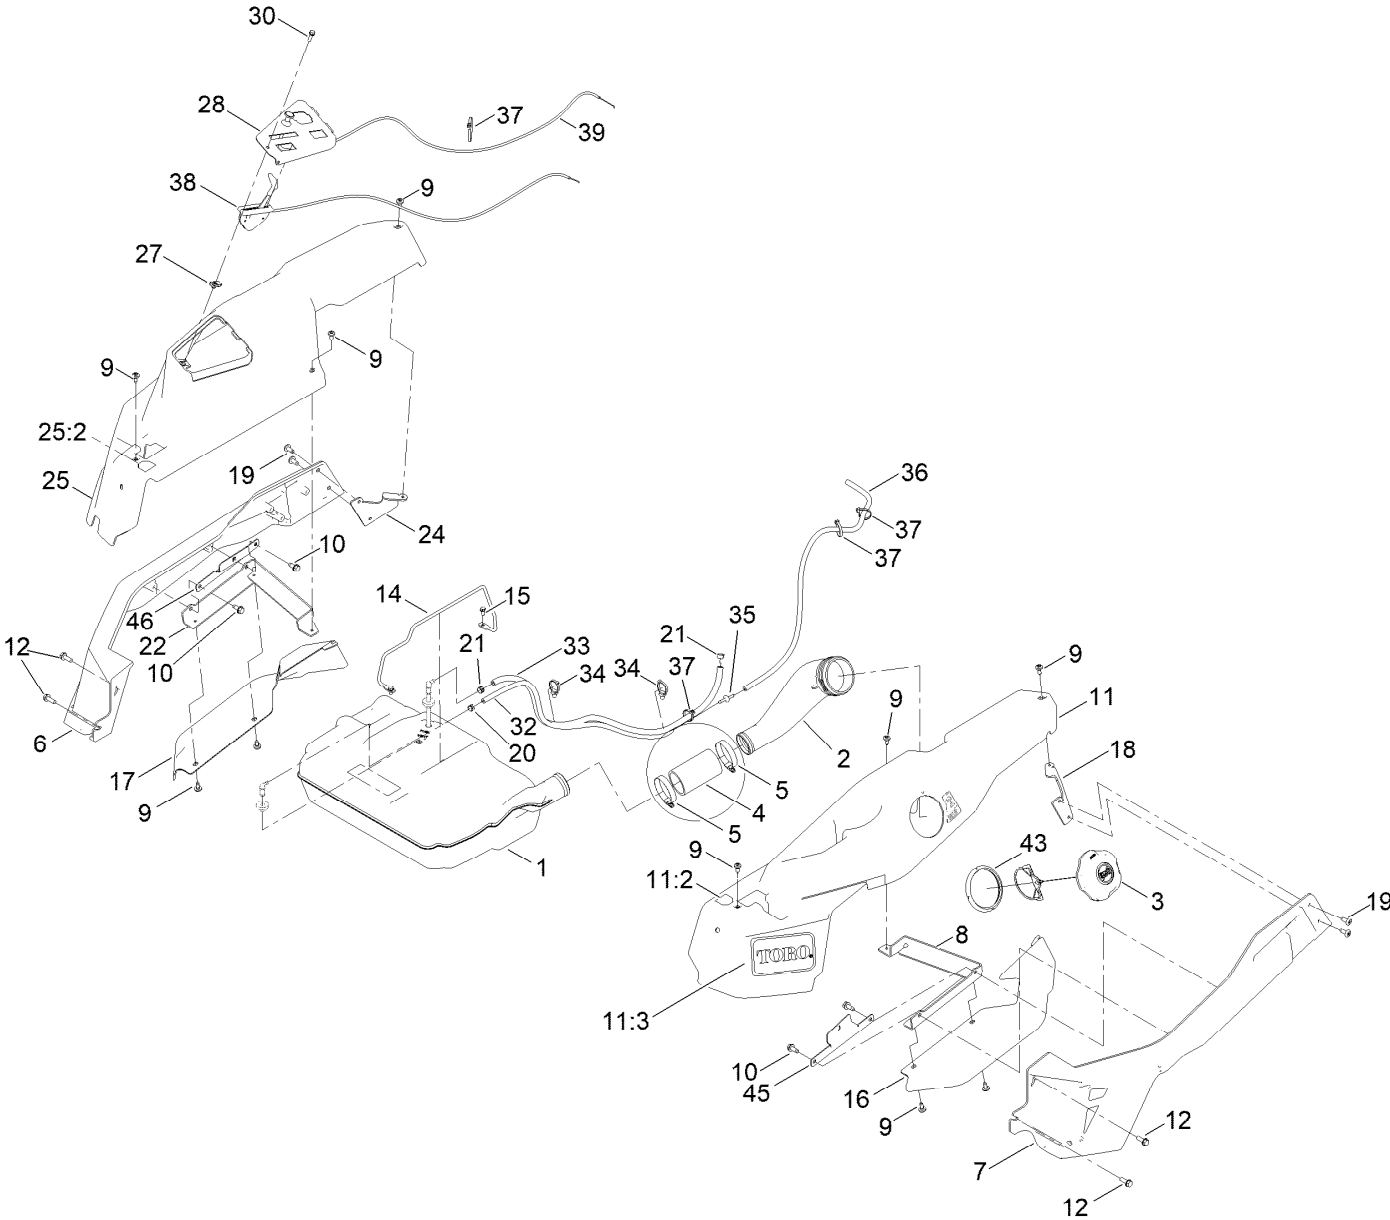

## Fuel Pod Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 145-6304           | 1           | Fuel Tank ASM           | 20          | 2412-80            | 1           | Clamp-Hose                 |
| 2           | 147-7657           | 1           | Neck-Filler, Fuel       | 21          | 2412-98            | 2           | Clamp-Hose                 |
| 3           | 137-4119           | 1           | Cap-Fuel, Ratcheting    | 22          | 147-2975-03        | 1           | Mount-Pod Bracket RH       |
| 4           | 145-4698           | 1           | Hose-Filler, Fuel       | 24          | 147-2977-03        | 1           | Mount-Pod Bracket RH       |
| 5           | 2412-130           | 2           | Clamp-Hose              | 25          | 147-8742           | 1           | Pod ASM - RH W/Decals      |
| 6           | 147-2973-01        | 1           | Cast-Tube, RH [red]     | 25:2        | 139-2394           | 1           | Decal-Control Lever, RH    |
| 7           | 147-2972-01        | 1           | Cast-Tube, LH [red]     | 27          | 107069             | 1           | Clip                       |
| 8           | 147-2974-03        | 1           | Mount-Pod Bracket LH    | 28          | 147-2990-03        | 1           | Panel-Control              |
| 9           | 120-7950           | 10          | Screw-Torx              | 30          | 32105-15           | 1           | Screw-HWH                  |
| 10          | 32144-70           | 4           | Screw-HWHTF             | 32          | 140-4956           | 1           | Hose-Fuel                  |
| 11          | 147-8741           | 1           | Pod ASM - LH W/Decals   | 33          | 109-0275           | 1           | Hose-Fuel                  |
| 11:2        | 139-2395           | 1           | Decal-Control Lever, LH | 34          | 32180-030          | 2           | Clip-Tie                   |
| 11:3        | 147-2399           | 1           | Decal-Fuel Fill         | 35          | 144-1983           | 1           | Adapter Orifice            |
| 12          | 32144-41           | 4           | Screw-Taptite           | 36          | 108-6344           | 1           | Hose-Fuel                  |
| 14          | 147-5176           | 1           | Rod-Hold Down           | 37          | 614249             | 4           | Tie-Cable                  |
| 15          | 32144-4            | 2           | Screw-HWH               | 38          | 147-7695           | 1           | Cable-Throttle             |
| 16          | 147-2978           | 1           | Fender-Time Cutter, LH  | 39          | 139-2402           | 1           | Cable-Choke                |
| 17          | 147-2979           | 1           | Fender-Time Cutter, RH  | 43          | 147-7712           | 1           | Ring-Retaining             |
| 18          | 147-2976-03        | 1           | Bracket-Rear Pod, LH    | 45          | 161-4609-03        | 1           | Bracket-Alignment, Pod LH  |
| 19          | 138-9753           | 4           | Screw                   | 46          | 161-4610-03        | 1           | Bracket- Alignment, Pod RH |

# Electrical Assembly

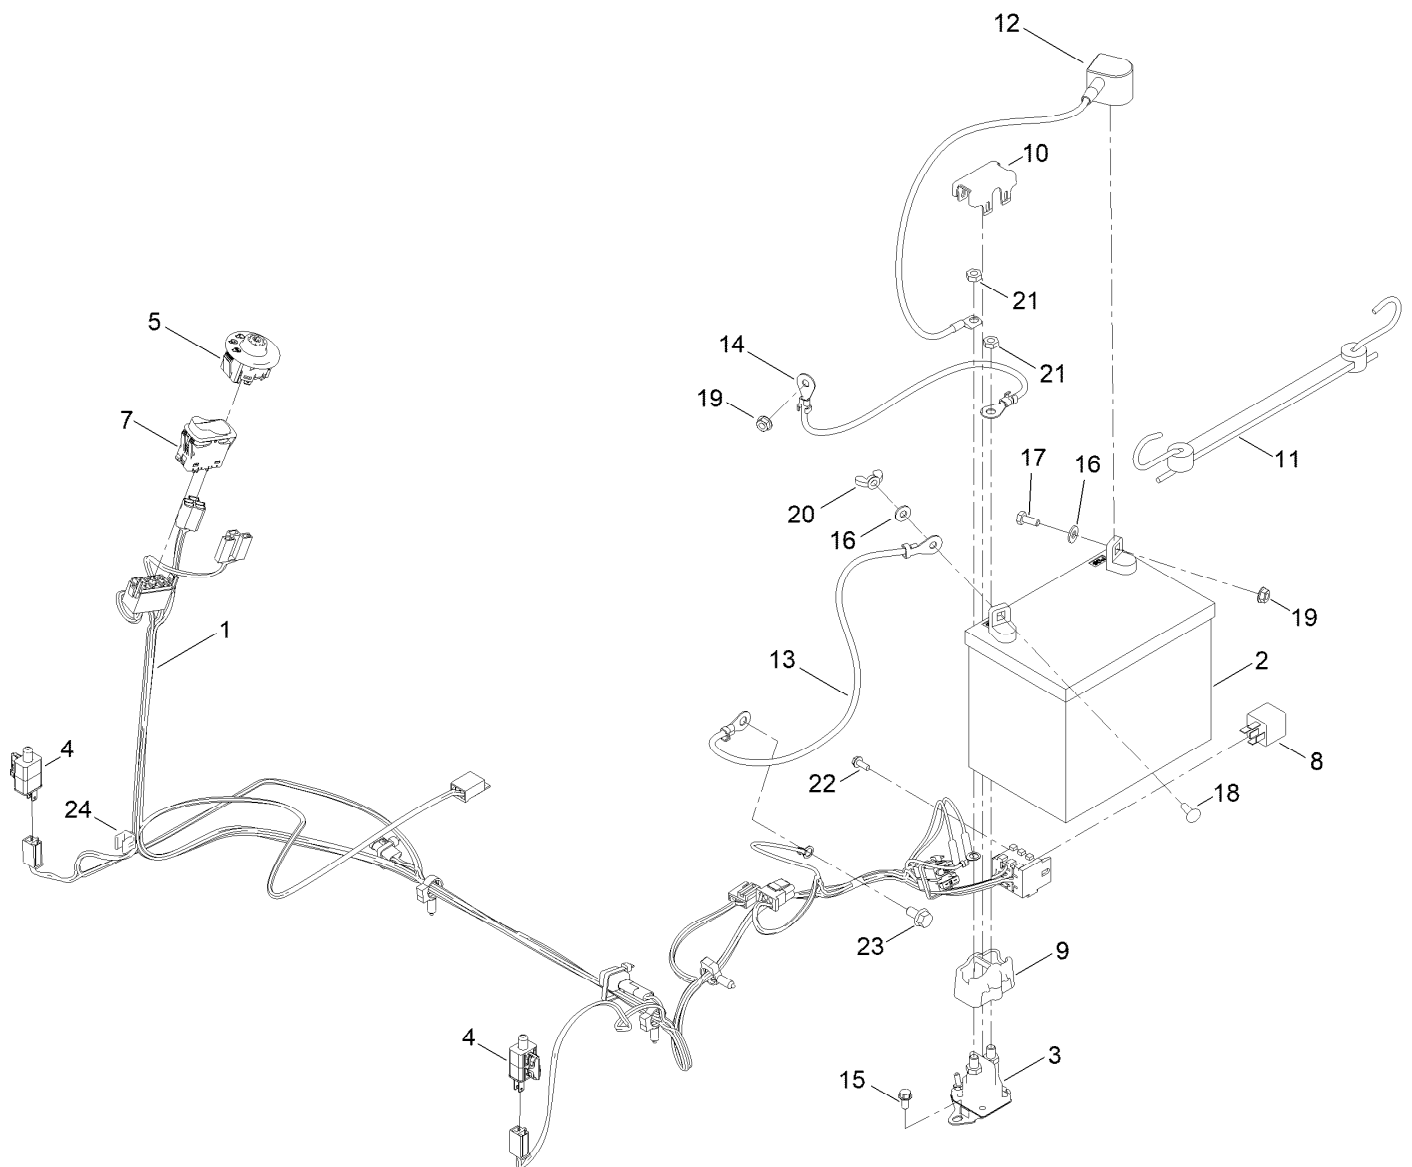

## Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>           | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                |
|-------------|--------------------|-------------|------------------------------|-------------|--------------------|-------------|-----------------------------------|
| 1           | 145-6382           | 1           | Harness-Wire, Main           | 14          | 121-0711           | 1           | Cable-Battery, Positive           |
| 2           | 140-2076           | 1           | Battery - Wet                | 15          | 32144-4            | 2           | Screw-HWH                         |
| 3           | 117-1197           | 1           | Solenoid                     | 16          | 3256-22            | 2           | Washer-Flat                       |
| 4           | 110-6765           | 2           | Switch                       | 17          | 321-3              | 1           | Screw-HH                          |
| 5           | 137-4100           | 1           | Switch-Ignition              | 18          | 3229-1             | 1           | Screw-CARR                        |
| 7           | 139-6368           | 1           | Switch-Rocker,<br>On-None-On | 19          | 32128-33           | 2           | Nut-HF                            |
| 8           | 1-643275           | 1           | Relay                        | 20          | 32103-22           | 1           | Nut-Wing                          |
| 9           | 140-2080           | 1           | Cover-Solenoid               | 21          | 3220-2             | 2           | Nut-Hex Jam                       |
| 10          | 140-2081           | 1           | Cap-Solenoid                 | 22          | 139-1713           | 1           | Screw-Thd Roll                    |
| 11          | 104-2466           | 1           | Holddown-Battery             | 23          | 33104-016          | 1           | Screw-HHF                         |
| 12          | 147-2941           | 1           | Cable-Battery,Red            | 24          | 32180-082          | 1           | Clip-Edge W/Tie,<br>Perpendicular |
| 13          | 119-8899           | 1           | Cable-Battery, Black         |             |                    |             |                                   |

# Main Wire Harness Assembly No. 145-6382




## Main Wire Harness Assembly No. 145-6382 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 7           | 109355             | 1           | Fuse-Blade, 15 Amp      |
| 8           | 109102             | 1           | Fuse-Blade, 25 Amp      |
| 9           | 32160-029          | 1           | Connector-Molded, 1F,1M |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 10          | 100-4918           | 1           | Diode                |
| 11          | 32180-047          | 3           | Clip-Tubing, Harness |





# 60 Inch Deck and Decal Assembly

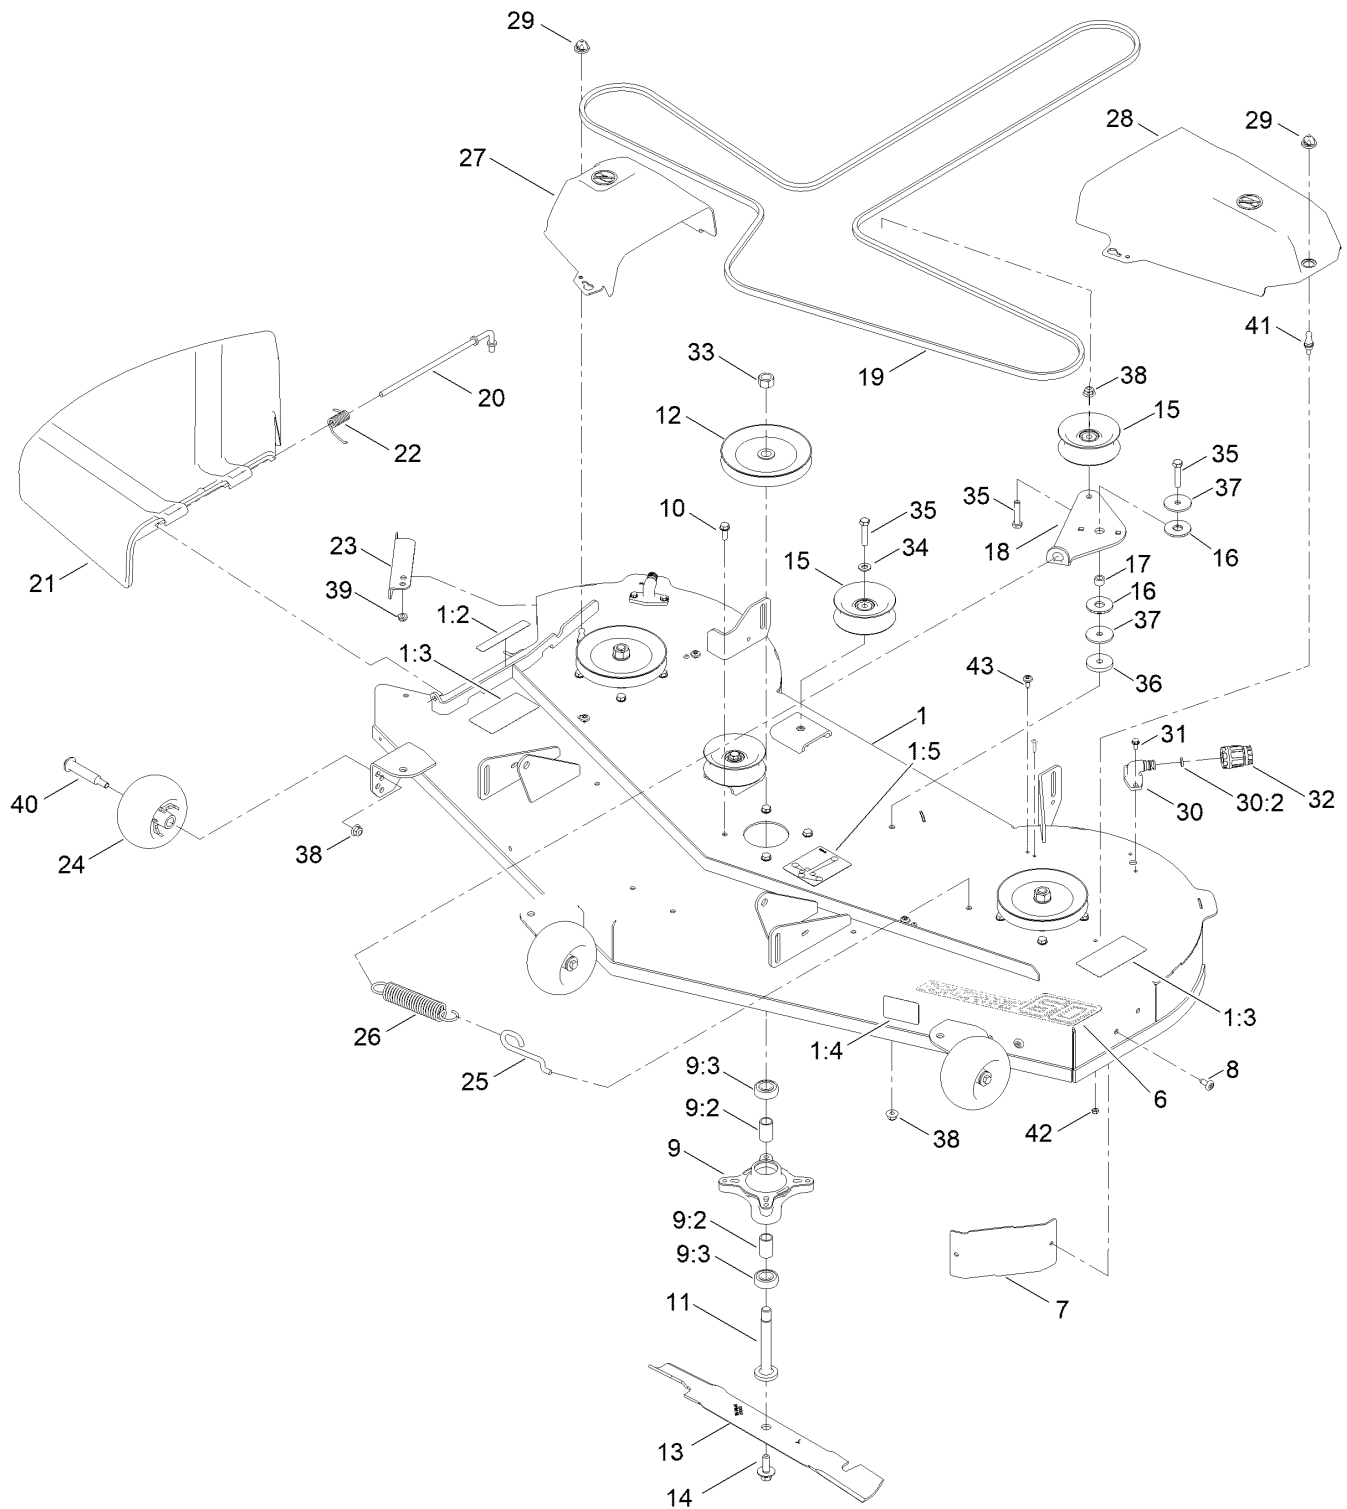

## 60 Inch Deck and Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|---------------------|
| 1           | 147-8747           | 1           | 60 In Deck & Decal ASM     | 22          | 138-7268           | 1           | Spring-Torsion      |
| 1:2         | 130-0731           | 1           | Decal-Danger               | 23          | 138-9800-03        | 1           | Baffle-Cutoff       |
| 1:3         | 132-0872           | 2           | Decal-Danger, Deck         | 24          | 1-603299           | 3           | Roller-Scalp, Anti  |
| 1:4         | 112-9840           | 1           | Decal-Scalp, Anti          | 25          | 138-7266           | 1           | Spring-Return, Hook |
| 1:5         | 99-3943            | 1           | Decal-Routing, Belt        | 26          | 138-7264           | 1           | Spring-Extension    |
| 6           | 147-7564           | 1           | Decal - Iron Forged 60     | 27          | 147-2853           | 1           | Cover-Belt, RH      |
| 7           | 139-2448-03        | 1           | Baffle-Corner              | 28          | 147-2854           | 1           | Cover-Belt, LH      |
| 8           | 138-9753           | 2           | Screw                      | 29          | 147-2871           | 2           | Grommet-Ball        |
| 9           | 139-3214           | 3           | Spindle ASM                | 30          | 133-9289           | 2           | Fitting-Washout     |
| 9:2         | 120-7935           | 2           | Spacer                     | 30:2        | 133-9290           | 1           | O-Ring              |
| 9:3         | 138-9770           | 2           | Bearing-Ball               | 31          | 32144-4            | 4           | Screw-HWH           |
| 10          | 32144-41           | 12          | Screw-Taptite              | 32          | 95-3270            | 1           | Connector-Hose      |
| 11          | 117-7268           | 3           | Shaft-Spindle              | 33          | 3219-6             | 3           | Nut-Hex             |
| 12          | 133-1199           | 3           | Pulley                     | 34          | 3256-24            | 2           | Washer-Plain        |
| 13          | 115-9649-03        | 3           | Blade-Hi Flow              | 35          | 323-9              | 4           | Screw-HH            |
| 14          | 145-0411           | 3           | Bolt-Blade, Sems           | 36          | 110-9981           | 1           | Washer-Plain        |
| 15          | 132-9420           | 3           | Pulley-Idler, Flat         | 37          | 63-7400            | 2           | Washer-Rebound      |
| 16          | 114-0463           | 2           | Washer-Friction, Composite | 38          | 104-8301           | 5           | Nut-HF, NI          |
| 17          | 115-4986           | 1           | Spacer                     | 39          | 3296-59            | 1           | Nut-Lock, NI        |
| 18          | 138-7262           | 1           | Arm-Idler (Mty/Wdm)        | 40          | 112-3977           | 3           | Bolt-Shoulder       |
| 19          | 147-2911           | 1           | Belt-V (A Sec, 154.96 EI)  | 41          | 147-2872           | 2           | Stud-Ball           |
| 20          | 137-2019           | 1           | Rod-Pivot                  | 42          | 115-7373           | 2           | Nut-Lock            |
| 21          | 138-7502           | 1           | Deflector-Discharge        | 43          | 120-7950           | 4           | Screw-Torx          |

# Model Specific Assembly

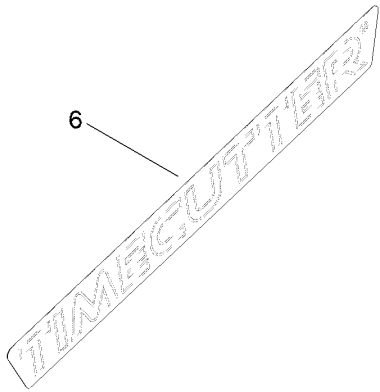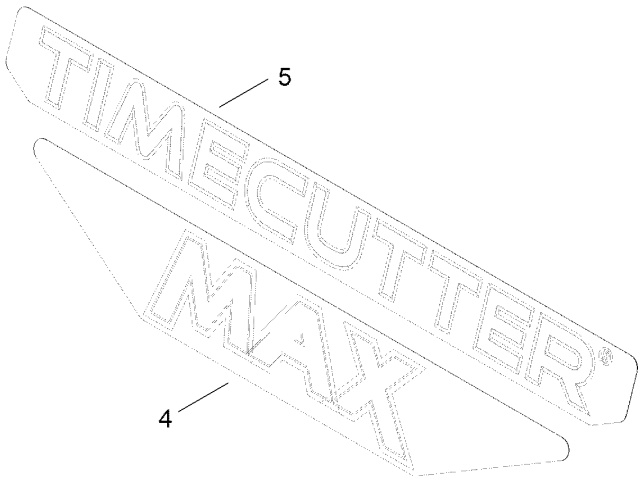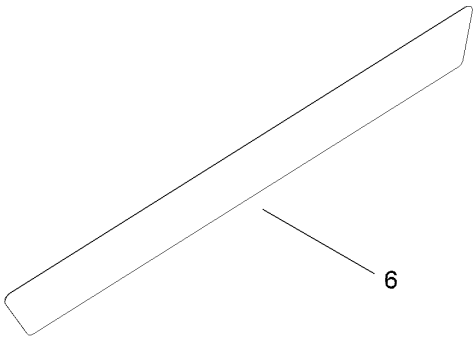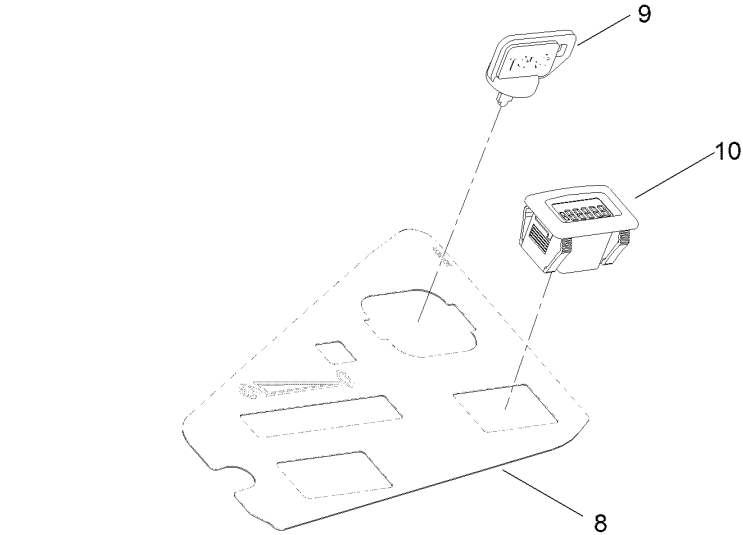


## Model Specific Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 4           | 147-7573           | 1           | Decal-Max          |
| 5           | 147-7561           | 1           | Decal-Timecutter   |
| 6           | 147-7560           | 2           | Decal-Timecutter   |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 8           | 147-7571           | 1           | Decal - Control Panel |
| 9           | 63-8360            | 1           | Key-Ignition          |
| 10          | 139-6404           | 1           | Hour Meter            |

# Clutch Assembly

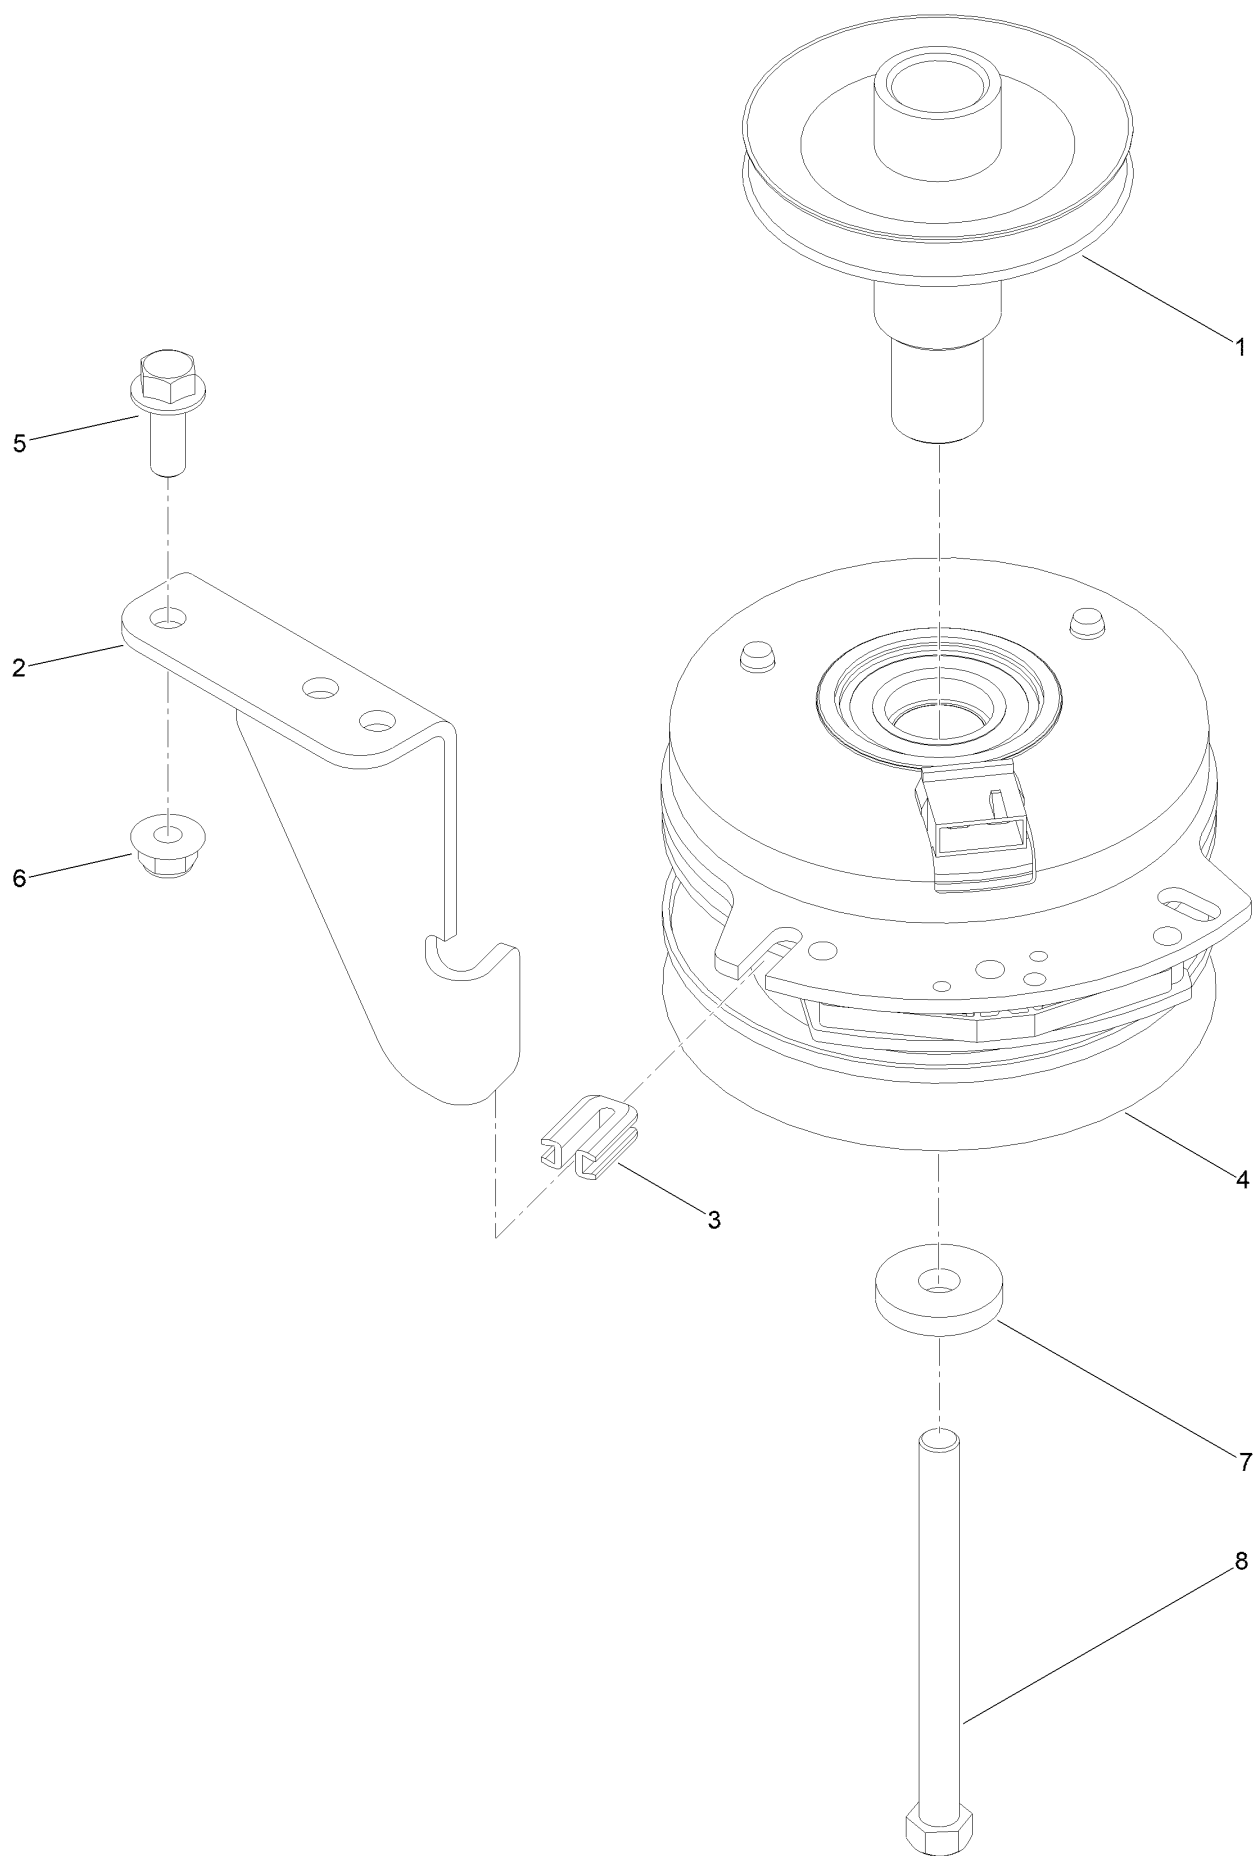

## Clutch Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 138-9792           | 1           | Pulley-Engine      | 5           | 3234-42            | 1           | Screw-HHF          |
| 2           | 137-7000           | 1           | Stop-Clutch (Wide) | 6           | 104-8301           | 1           | Nut-HF, NI         |
| 3           | 120-2217           | 1           | Isolator-Clutch    | 7           | 112843             | 1           | Washer             |
| 4           | 127-3410           | 1           | Clutch-PTO         | 8           | 3212-19            | 1           | Screw-HH           |

# Attachments and Accessories

## For 77601 TimeCutter Max 60in Zero Turn Riding Mower

| Product Name                                 | Model/Part   |
|----------------------------------------------|--------------|
| Residential Z Max 60in Bagger .....          | 79601        |
| 60 Inch Recycler Kit .....                   | 139-3290     |
| 60 Inch Bagging Enhancement Kit .....        | 140-3508     |
| Kit-Striping, 54/60in .....                  | 147-8781     |
| ROPS Kit .....                               | 79487        |
| Floormat Kit .....                           | 147-8765     |
| Assist Bar Kit .....                         | 161-4450     |
| Mount, Jack TC.....                          | 147-8836     |
| 4-Cycle Fuel, Snow And Lawn 32oz Can .....   | 131-3823     |
| Oil-30/10W-30 Synthetic (Quart).....         | 138-6053     |
| Transport Lock Kit.....                      | 161-4510     |
| Flat Free Caster Wheel Kit.....              | 145-0489     |
| Arm Rest Kit.....                            | 147-8774     |
| Led Light Kit.....                           | 147-8757     |
| Kit-Slope Sensor.....                        | 79489        |
| Blade-Hi Flow, 20.5in .....                  | 115-9649-03P |
| Hydro Service Kit .....                      | 144-5347     |
| Jack Kit .....                               | 127-6666     |
| Toro Deluxe Rider Cover.....                 | 490-7319     |
| Toro Premium Fuel Treatment 12oz Bottle..... | 131-6572     |
| 10W30 4-Cycle Engine Oil (32oz Bottle).....  | 38280        |
| Toro 4-Cycle SAE 30 Oil (32oz Bottle) .....  | 38903        |

**Notes:**



**Count on it.**