



Count on it.

Form No. 3378-356 Rev D

Parts Catalog

Multi Pro[®] WM Turf Sprayer

Model No. 41240—Serial No. 314000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Main Frame, Jack Stand and Boom Mount Assembly	4
Fresh Water Tank Assembly No. 117-7901	6
Control Console Assembly	7
Multi Pro WM Turf Sprayer Finishing Kit No. 131-3302	9
Turf Sprayer Finishing Kit No. 131-3301	10
Hydraulic Motor Assembly No. 131-5810	11
Pump and PTO Driveshaft Assembly	12
Pump Assembly No. 117-0713	13
Driveshaft Assembly No. 125-0680	14
Tank Assembly	15
Tank Assembly No. 121-6518	16
Spray Tank Lid Assembly No. 119-9380	17
Suction Filter Assembly No. 125-8006	18
Agitation, Bypass and Boom Manifold Assembly	19
Agitation Manifold Valve Assembly	20
Bypass Manifold Assembly No. 125-0613	21
Flow Meter Assembly No. 106-1038	22
Boom Manifold Assembly No. 125-0616	23
Hose Assembly	24
Boom Lift Hydraulic Assembly	26
Hydraulic Cylinder Assembly No. 117-0701	27
On-Off Boom Lift Valve No. 117-0702	28
Wire Harness Assembly	29
Center Boom Mount Assembly	30
LH Single Turret Body Assembly No. 108-3725	31
Double Turret Body Assembly No. 108-3727	32
RH Single Body Turret Assembly No. 108-3726	33
Boom Mounting Assembly	34
Left and Right Hand Boom Assembly	35
Attachments and Accessories	36

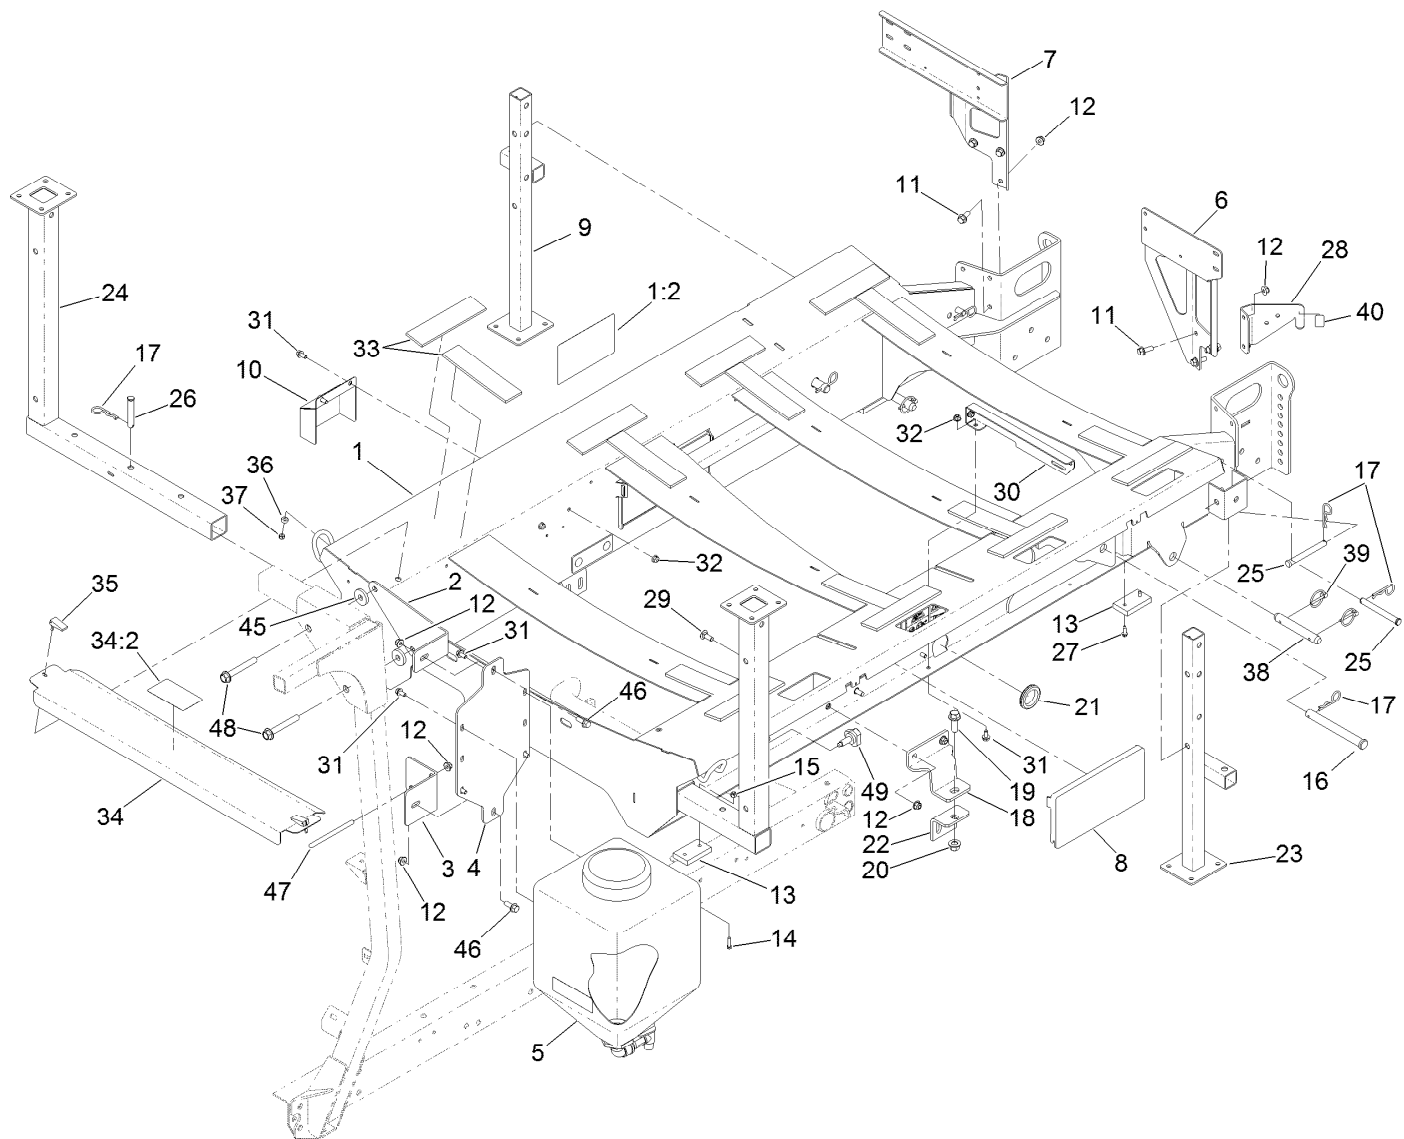

Main Frame, Jack Stand and Boom Mount Assembly

Ref.	Part Number	Qty.	Description
1	127-3984	1	Skid ASM
1:2	127-3936	2	Decal-Danger
2	127-3989-03	1	Mount-Upper, Fresh Water Tank
3	127-3990-03	1	Mount-Lower, Fresh Water Tank
4	120-0763-03	1	Plate-Fresh Water
5	117-7901	1	Fresh Water Tank ASM
6	125-0766-03	1	Bracket-Mount, Agitation Manifold
7	125-0769-03	1	Bracket-Mount, Valve
8	125-0798	2	Cover-Access
9	125-8108-03	1	Jack Stand-Rear, RH
10	125-8138-03	1	Guard-Relay
11	3234-42	6	Screw-HHF
12	104-8301	14	Nut-HF, NI
13	93-9719	4	Block-Wear
14	321-4	4	Screw-HH
15	3296-42	4	Nut-Lock, NI
16	100-5569	2	Pin-Clevis
17	3290-343	8	Pin-Hair


Ref.	Part Number	Qty.	Description
18	125-0809	2	Bracket-Mount, Front
19	100-6116	2	Screw-HHF
20	99-5107	2	Nut-Lock
21	240-2	1	Grommet-Rubber
22	92-2667-03	2	Bracket-Mount
23	125-0840-03	1	Jack Stand-Rear
24	125-0841-03	2	Stand-Front
25	283-83	4	Pin-Clevis
26	283-55	2	Pin-Clevis
27	49-2040	4	Screw-HWHTF
28	125-0992-03	1	Mount-Valve
29	3231-2	4	Bolt-CARR
30	125-4049-03	1	Bracket-Mount, Valve Drain
31	3234-14	8	Screw-HHF
32	104-8300	4	Nut-HF, NI
33	125-8094	16	Pad-Tank
34	127-3985	1	Skid Cover ASM
34:2	127-3937	1	Decal-Warning, Engine Cover
35	106-6777	2	Handle-Latch, Swell
36	106-6778	2	Bushing-Latch, Swell

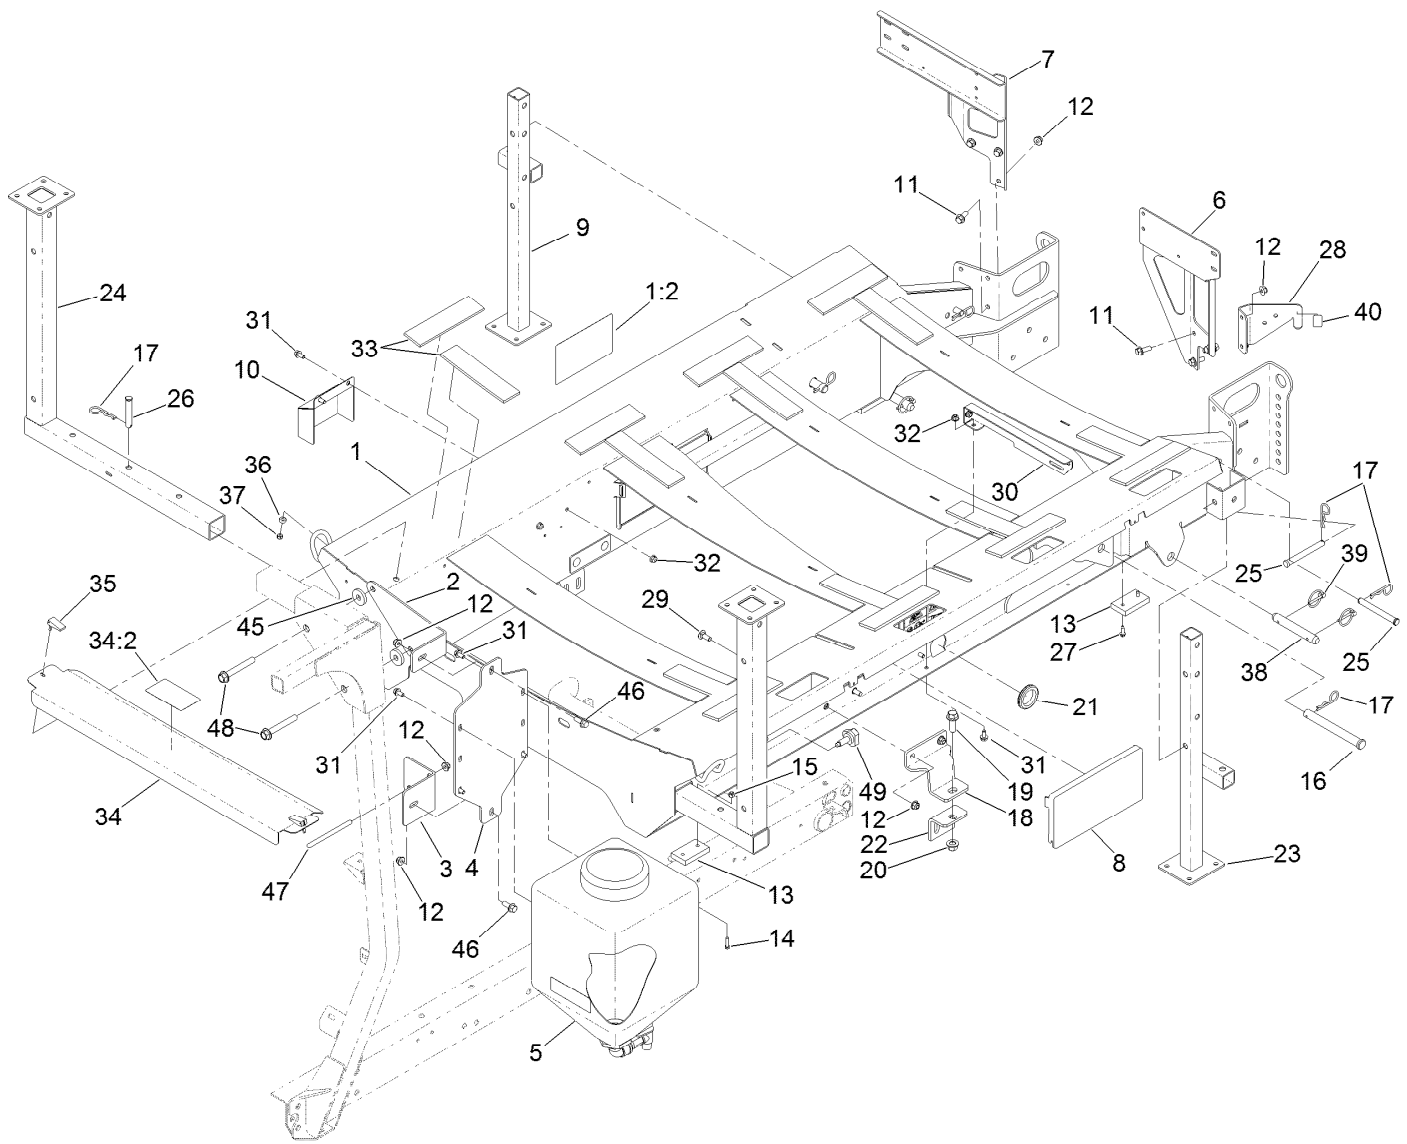

Main Frame, Jack Stand and Boom Mount Assembly (continued)

Ref.	Part Number	Qty.	Description
37	1-804254	2	Nut-Lock, HH
38	92-1233	2	Pin-Clevis
39	92-1298	4	Pin-Lynch
40	127-3943	1	Decal-Agitation, Throttle
45	30-8770	2	Washer

Ref.	Part Number	Qty.	Description
46	3234-11	2	Screw-HHF
47	119-6727	1	U-Bolt
48	114-8419	2	Screw-HHF
49	95-9648	2	Knob

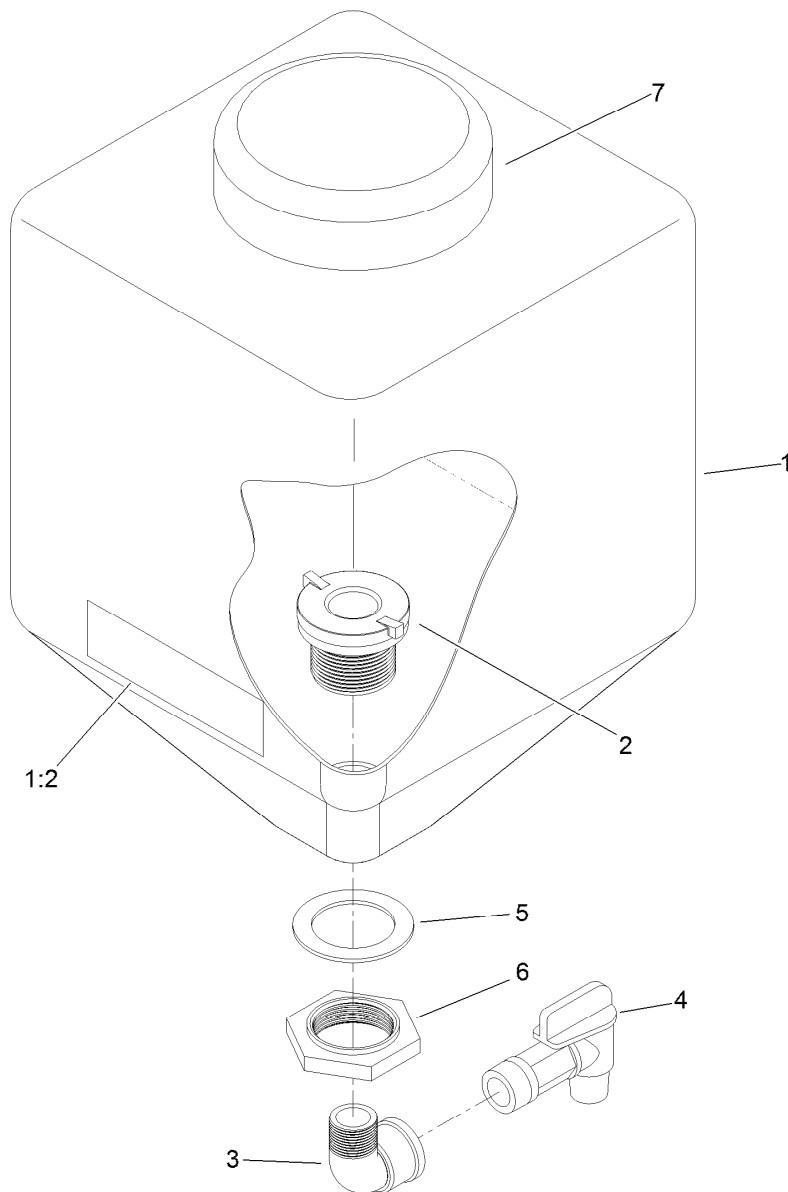


Fresh Water Tank Assembly No. 117-7901

Ref.	Part Number	Qty.	Description
1	127-3983	1	Tank-Water, Fresh
1:2	120-0616	2	Decal-Water, Fresh
2	117-7998	1	Bulkhead
3	119-0524	1	Elbow
4	106-4925	1	Spigot-90 DEG
5	119-0526	1	Bulkhead-Washer
6	119-0525	1	Bulkhead-Nut
7	99-0613	1	Cap-Tank

ITEM 4 Used with
MANUAL WORKMAN FINISH KIT, 131-3302

ITEM 33 Used with
AUTOMATIC WORKMAN FINISH KIT, 131-3301

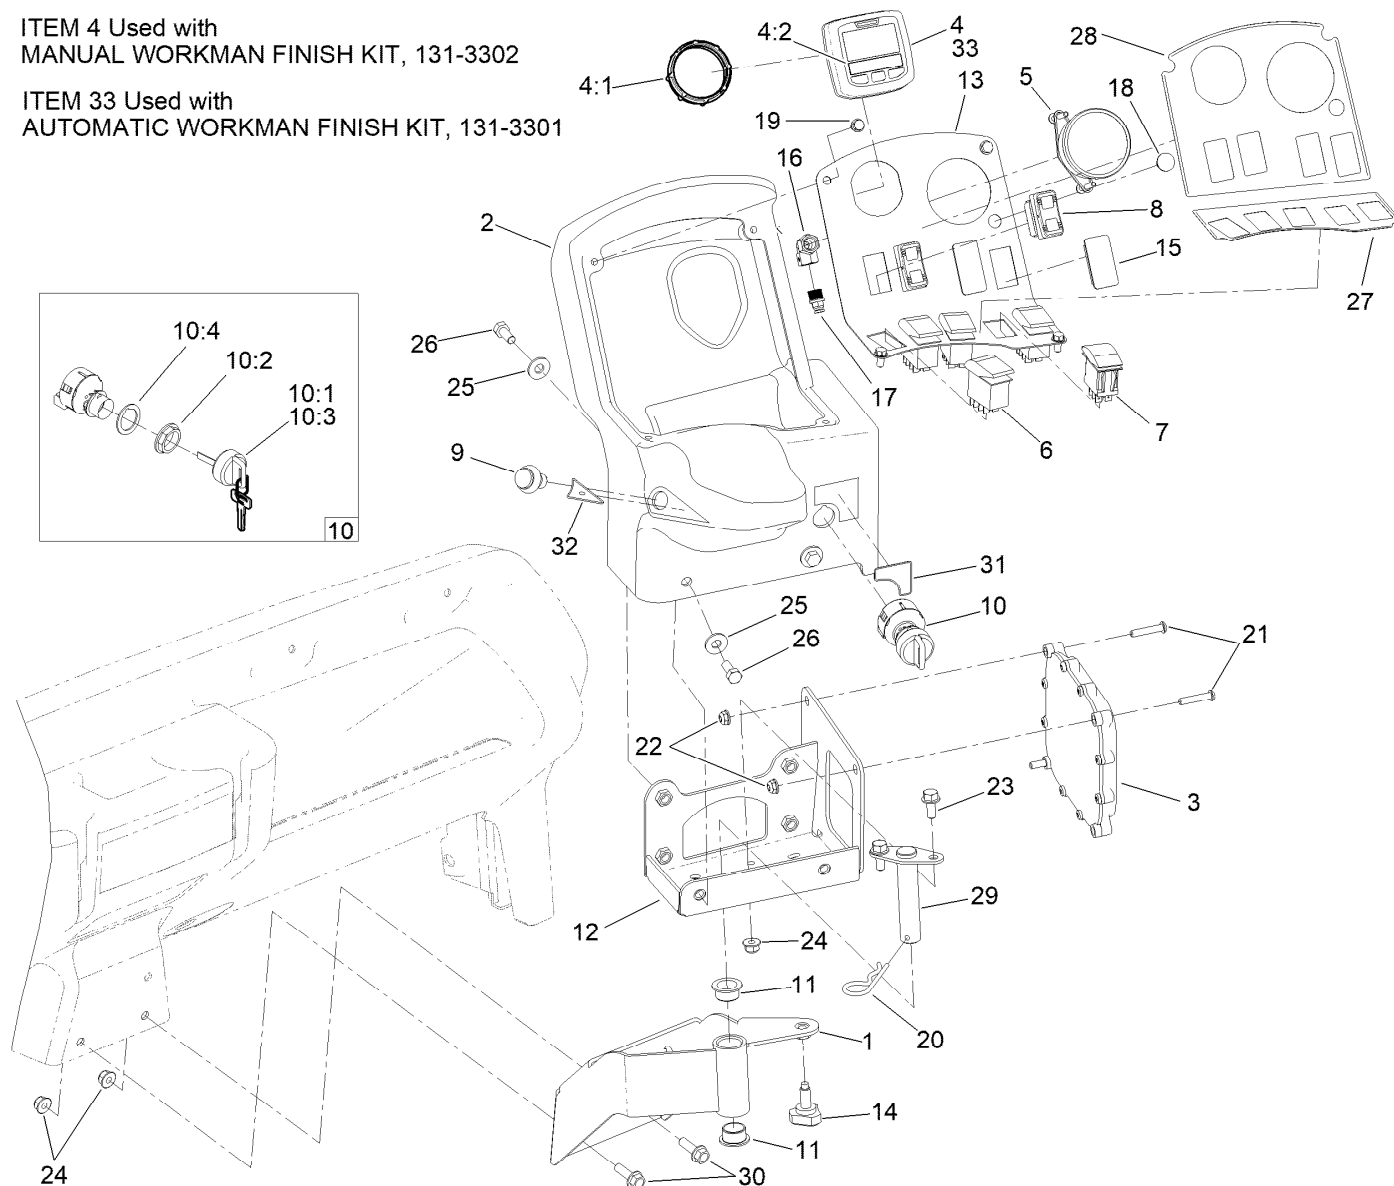

Control Console Assembly


Ref.	Part Number	Qty.	Description
1	125-0716-03	1	Bracket-Mounting, Console
2	125-0715	1	Console-Control
3	115-1900	1	Controller
4	120-6310	1	LCD Display ASM Kantrak 1700
4:1	120-4630	1	Nut-Display
4:2	120-6311	1	Decal-Display
5	120-8546	1	Gauge-Pressure
6	100-8490	4	Switch-Rocker, On-None-On
7	100-1535	1	Switch-Rocker, (On)-Off-(On)
8	125-0899	2	Switch-Rocker
9	125-7996	1	Switch-Pb, Momentary
10	110-2580	1	Switch-Key, Supervisor
10:1		1	Switch-Key ●
10:2	108-8660	1	Nut-Mounting
10:3	110-5221	1	Set-Key, Supervisor

Ref.	Part Number	Qty.	Description
10:4	108-8659	1	Washer-Backup
11	109-8054	2	Bushing-Flange
12	125-4021-03	1	Bracket-Pivot, Console
13	125-4020-03	1	Panel-Control
14	95-9648	1	Knob
15	99-7420	2	Plug-Hole
16	125-8137	1	Fitting-Elbow-90
17	100-8674	1	Coupler-Tube
18	119-5329	1	Plug-Hole
19	32144-4	4	Screw-HWH
20	3290-343	1	Pin-Hair
21	120-0834	3	Screw-HSBH
22	104-7201	3	Nut-HF, NI
23	3234-5	2	Screw-HHF
24	104-8300	5	Nut-HF, NI
25	3256-71	6	Washer-Flat
26	322-43	6	Screw-HH
27	125-4051	1	Decal-Console, Lower

● Not serviced separately

ITEM 4 Used with
MANUAL WORKMAN FINISH KIT, 131-3302


ITEM 33 Used with
AUTOMATIC WORKMAN FINISH KIT, 131-3301

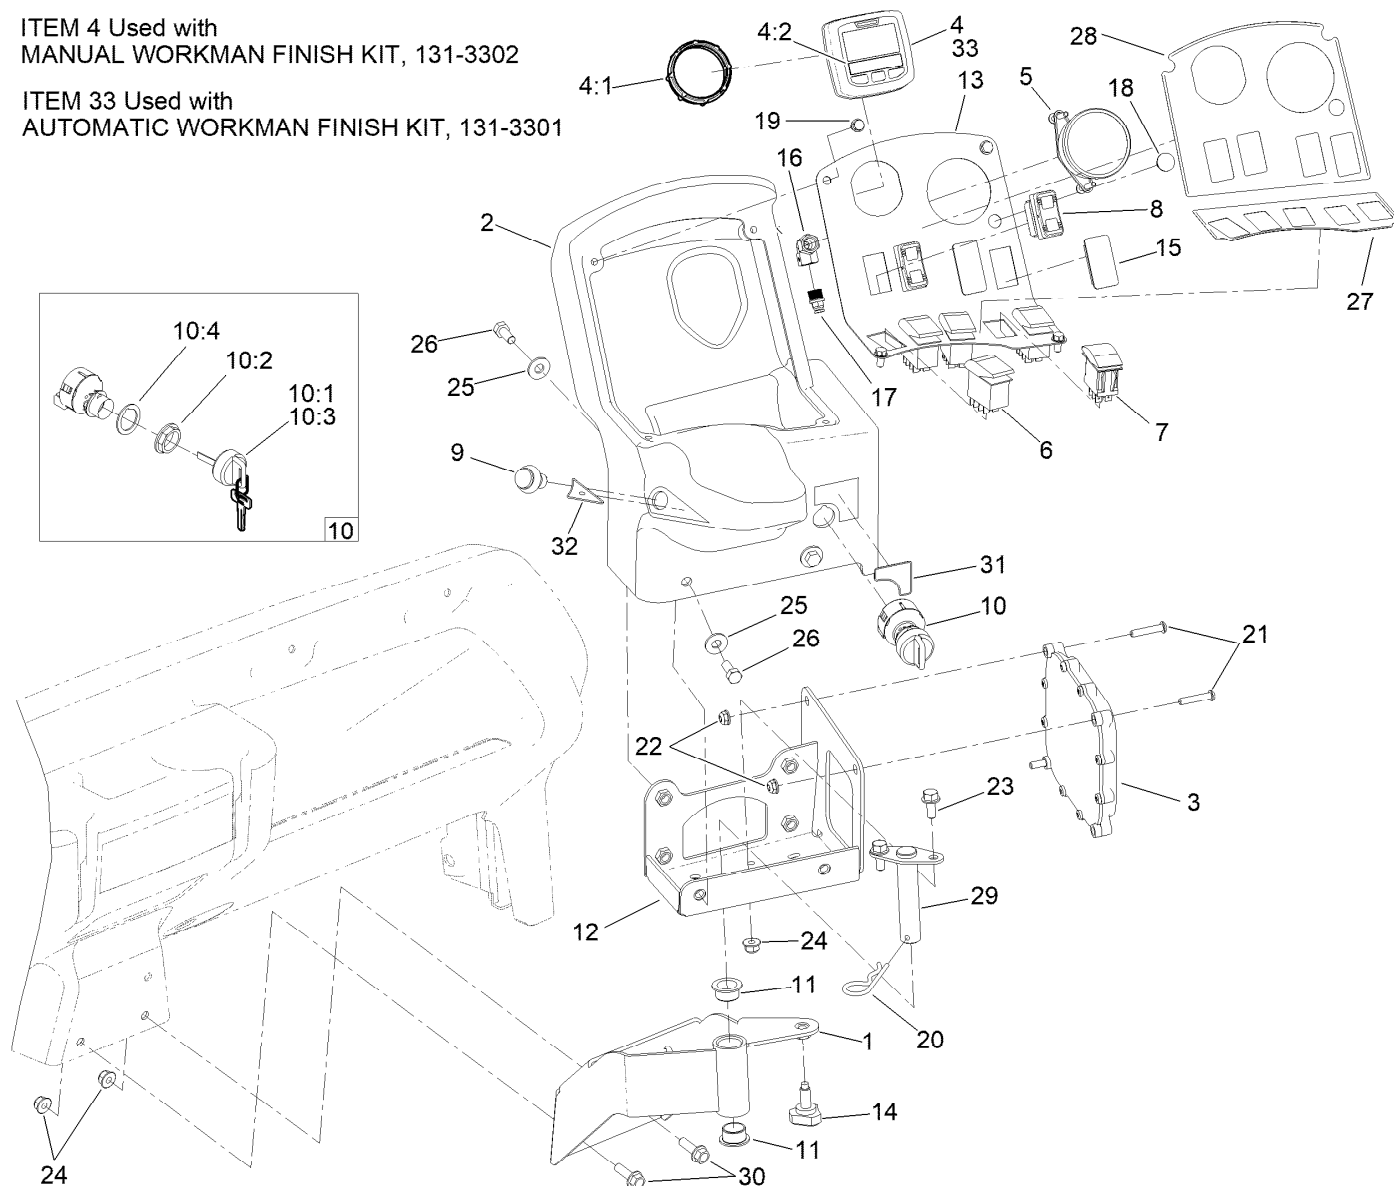

Control Console Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
28	125-4052	1	Decal-Console, Upper	31	127-3916	1	Decal-Supervisor Key
29	125-4054	1	Pin	32	125-8139	1	Decal-Master Boom Switch
30	3234-17	3	Screw-HHF	33	163-2995	1	Display-LCD, Svc Only


● Not serviced separately

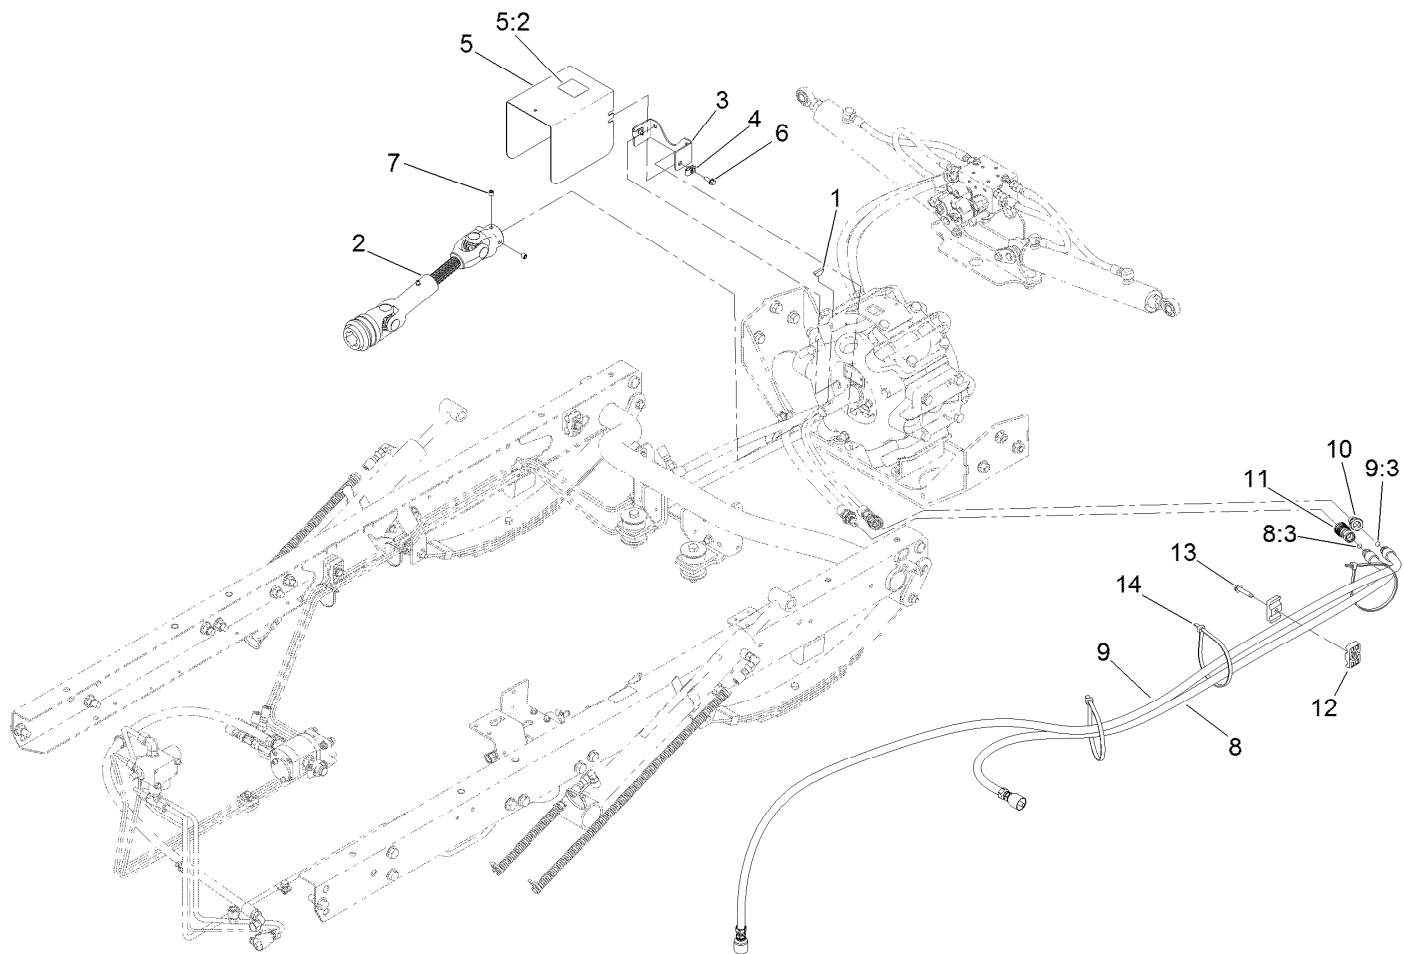

Multi Pro WM Turf Sprayer Finishing Kit No. 131-3302

Ref.	Part Number	Qty.	Description
1	106-1990	1	Key-Woodruff
2	125-0680	1	Driveshaft-PTO
3	125-8054-03	1	Bracket-Shield, Driveshaft
4	107069	2	Clip
5	127-3986	1	Shield-Driveshaft
5:2	127-3981	1	Decal-Warning
6	3234-4	2	Screw-HHF
7	3247-2	2	Screw-Set, HSH
8	112-0274	1	Hose-HYD


Ref.	Part Number	Qty.	Description
8:3	237-42	1	O-Ring
9	112-0273	1	HYD Hose ASM
9:3	237-42	1	O-Ring
10	106-7969	1	Coupler-Quick, Male
11	106-7968	1	Coupler-Quick, Female
12	56-7976	2	Clamp-Tube
13	32144-57	1	Screw
14	3334-945	3	Tie-Cable

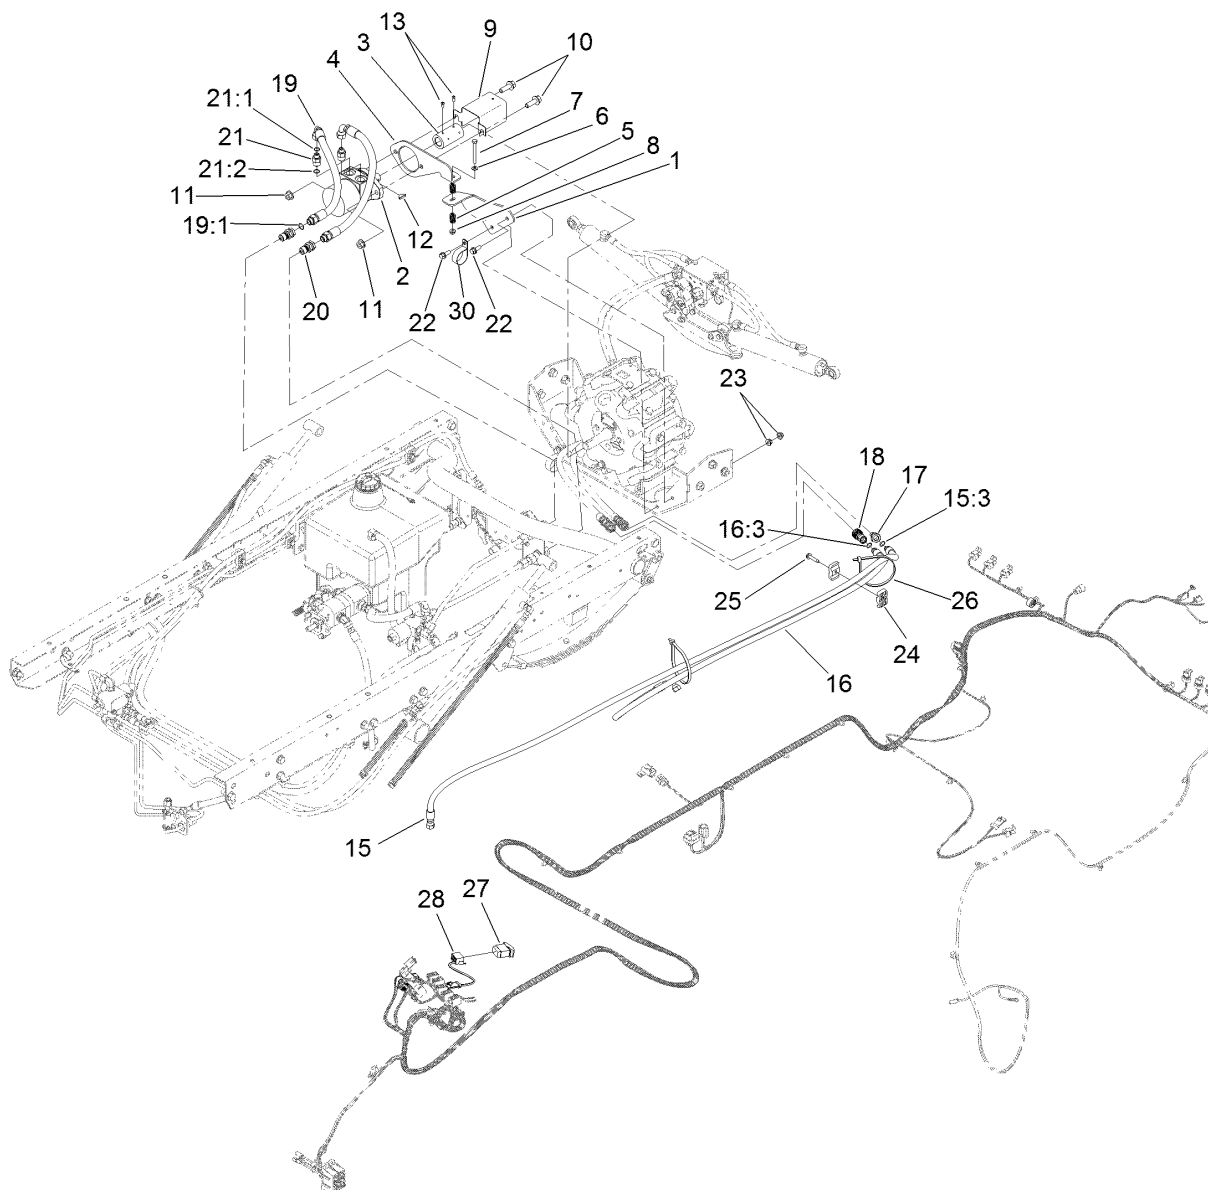

Turf Sprayer Finishing Kit No. 131-3301

Ref.	Part Number	Qty.	Description
1	127-9796-03	1	Mount-Arm, Torque
2	131-5810	1	Motor-Hydraulic
3	117-8045	1	Coupler
4	127-9794-03	1	Bracket-Motor
5	110-5331	2	Spring-Compression
6	3256-23	1	Washer-Plain
7	322-14	1	Screw-HH
8	104-8300	1	Nut-HF, NI
9	120-0628-03	1	Guard-Shaft, Pump
10	100-6116	2	Screw-HHF
11	108-3745	2	Nut-HHF, Whiz
12	106-1990	1	Key-Woodruff
13	3241-7	4	Screw-SQH
15	112-0273	1	HYD Hose ASM
15:3	237-42	1	O-Ring
16	130-7181	1	Upper Lift Hose Valve ASM
16:3	237-42	1	O-Ring

Ref.	Part Number	Qty.	Description
17	106-7969	1	Coupler-Quick, Male
18	106-7968	1	Coupler-Quick, Female
19	130-7184	2	HYD Hose ASM
19:1	237-79	1	O-Ring
20	105-4170	2	Coupler-Male
21	340-6	2	Fitting-Straight
21:1	237-30	1	O-Ring
21:2	237-80	1	O-Ring
22	3234-42	2	Screw-HHF
23	104-8301	2	Nut-HF, NI
24	56-7976	2	Clamp-Tube
25	32144-57	1	Screw
26	3334-945	2	Tie-Cable
27	95-8999	1	Switch-Rocker, On-None-On
28	122-0372	1	Harness-Wire
30	2412-147	1	Clamp-R

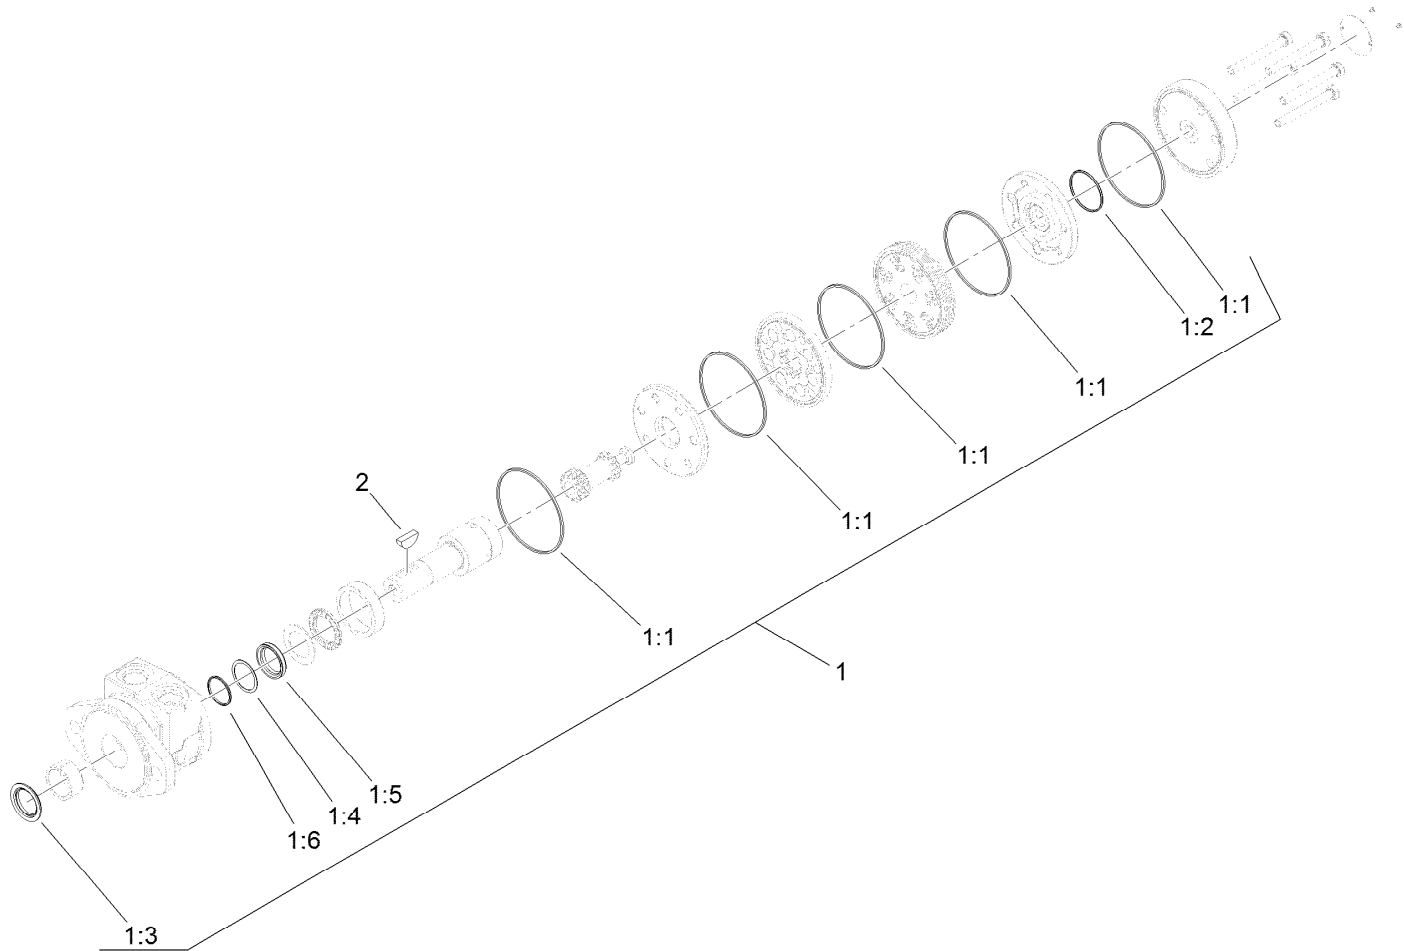


Hydraulic Motor Assembly No. 131-5810

Ref.	Part Number	Qty.	Description
1	106-1989	1	Seal Kit
1:1		6	Seal-Ring ■
1:2		1	Seal-Commutator ■
1:3		1	Seal-Dirt And Water ■
1:4		1	Washer-Backup ■
1:5		1	Seal-Shaft ■
1:6		1	Ring-Back Up ● ■
2	106-1990	1	Key-Woodruff

● Not illustrated


■ Not serviced separately

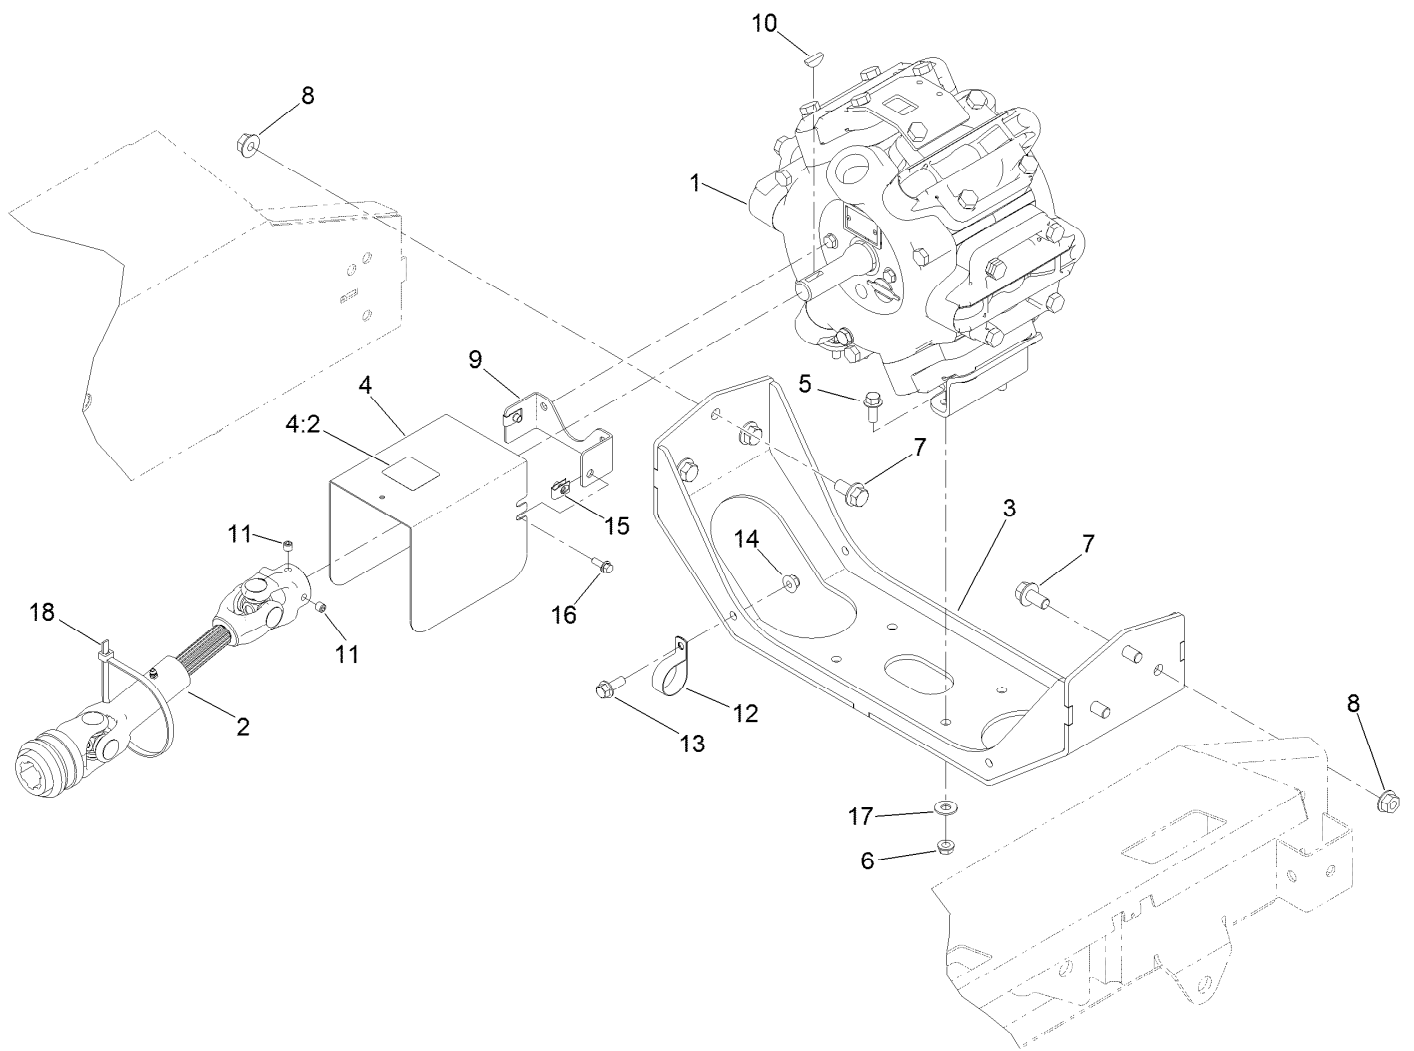

Pump and PTO Driveshaft Assembly

Ref.	Part Number	Qty.	Description
1	117-0713	1	Pump ASM
2	125-0680	1	Driveshaft-PTO
3	125-8053-03	1	Mount-Pump
4	127-3986	1	Shield-Driveshaft
4:2	127-3981	1	Decal-Warning
5	3234-11	4	Screw-HHF
6	3290-357	4	Nut-HSF
7	3234-6	6	Screw-HHF
8	32128-49	6	Nut-HHF
9	125-8054-03	1	Bracket-Shield, Driveshaft


Ref.	Part Number	Qty.	Description
10	106-1990	1	Key-Woodruff
11	3247-2	2	Screw-Set, HSH
12	2412-147	1	Clamp-R
13	3234-42	1	Screw-HHF
14	104-8301	1	Nut-HF, NI
15	107069	2	Clip
16	3234-4	2	Screw-HHF
17	3256-4	4	Washer-Flat
18	3334-945	1	Tie-Cable

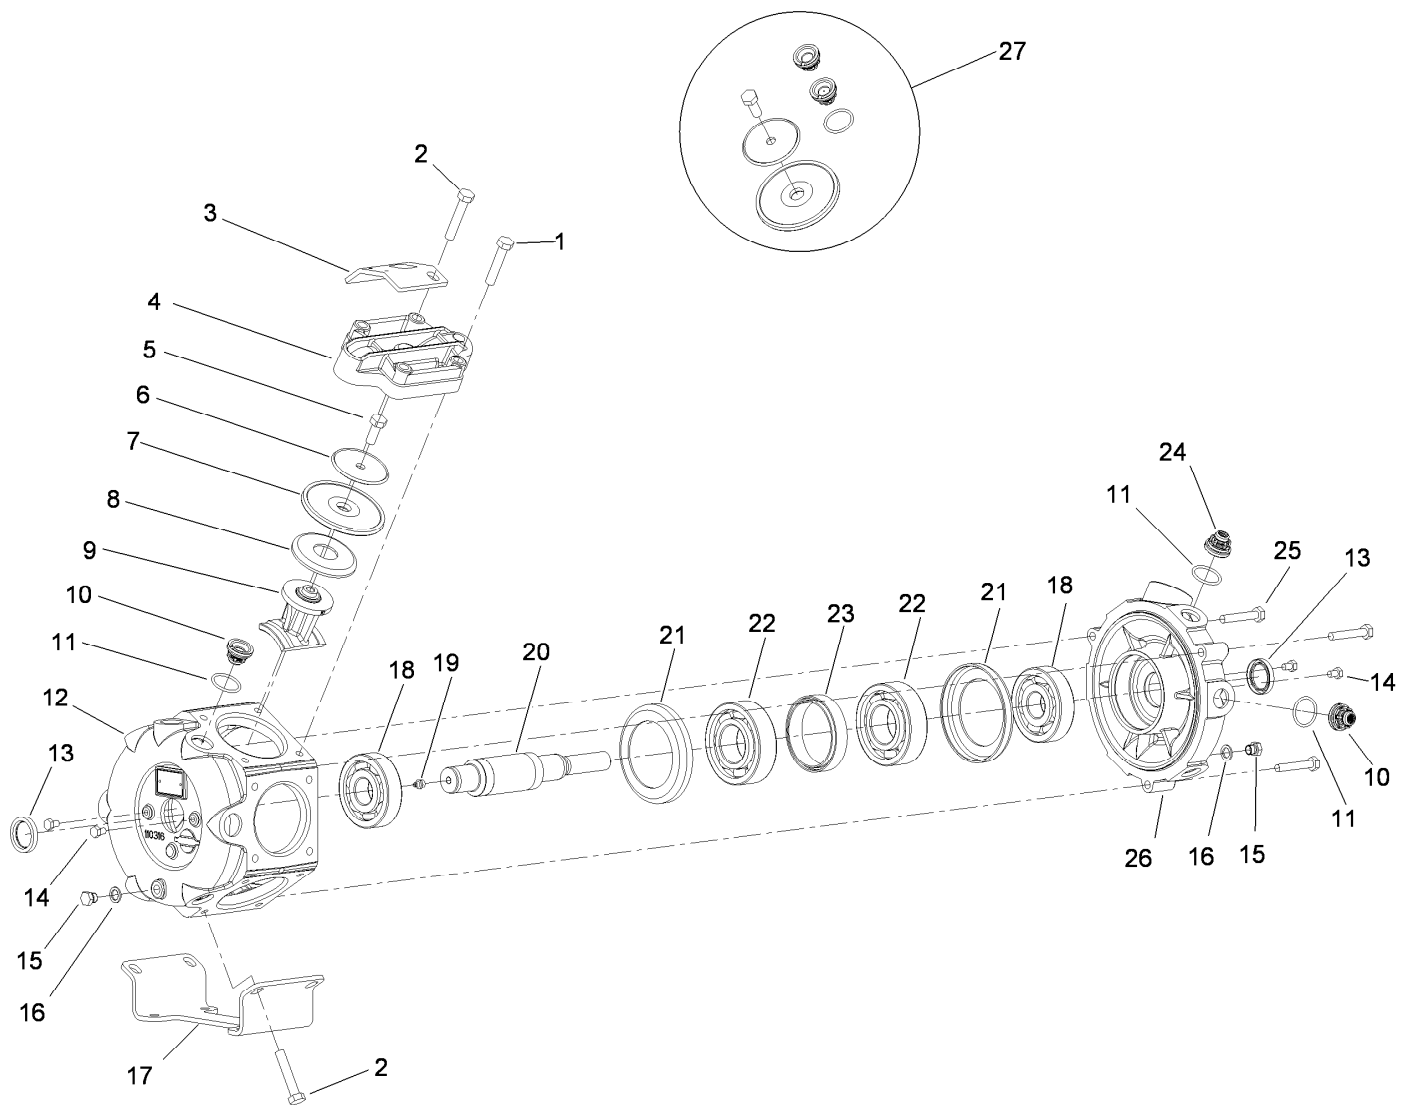

Pump Assembly No. 117-0713


Ref.	Part Number	Qty.	Description
1	120-0773	18	Bolt-Hex
2	120-0774	6	Bolt-Hex
3	120-0775	1	Bracket-Pump
4	120-0776	6	Cover-Valve
5	120-0777	6	Bolt-Hex
6	120-0778	6	Disc-Diaphragm
7	120-0779	6	Diaphragm
8	120-0780	6	Disc-Backing, Diaphragm
9	120-0781	6	Rod-Connecting
10	99-0861	10	Valve-Pump
11	100-6651	12	O-Ring
12	120-0782	1	Casting-Pump
13	120-0783	2	Seal-Oil
14	120-0784	4	Bolt-Hex

Ref.	Part Number	Qty.	Description
15	120-0785	2	Plug
16	120-0786	2	Seal
17	120-0787	1	Foot-Pump
18	120-0788	2	Bearing-Ball
19	99-0873	1	Fitting-Grease
20	120-0789	1	Shaft-Crank
21	120-0790	2	Spacer-Metal
22	120-0791	2	Bearing-Ball
23	120-0792	1	Spacer
24	120-0793	2	Valve W/Hole
25	120-0794	3	Bolt-Hex
26	120-0795	1	Casting-Pump
27	120-0796	1	Pump Kit

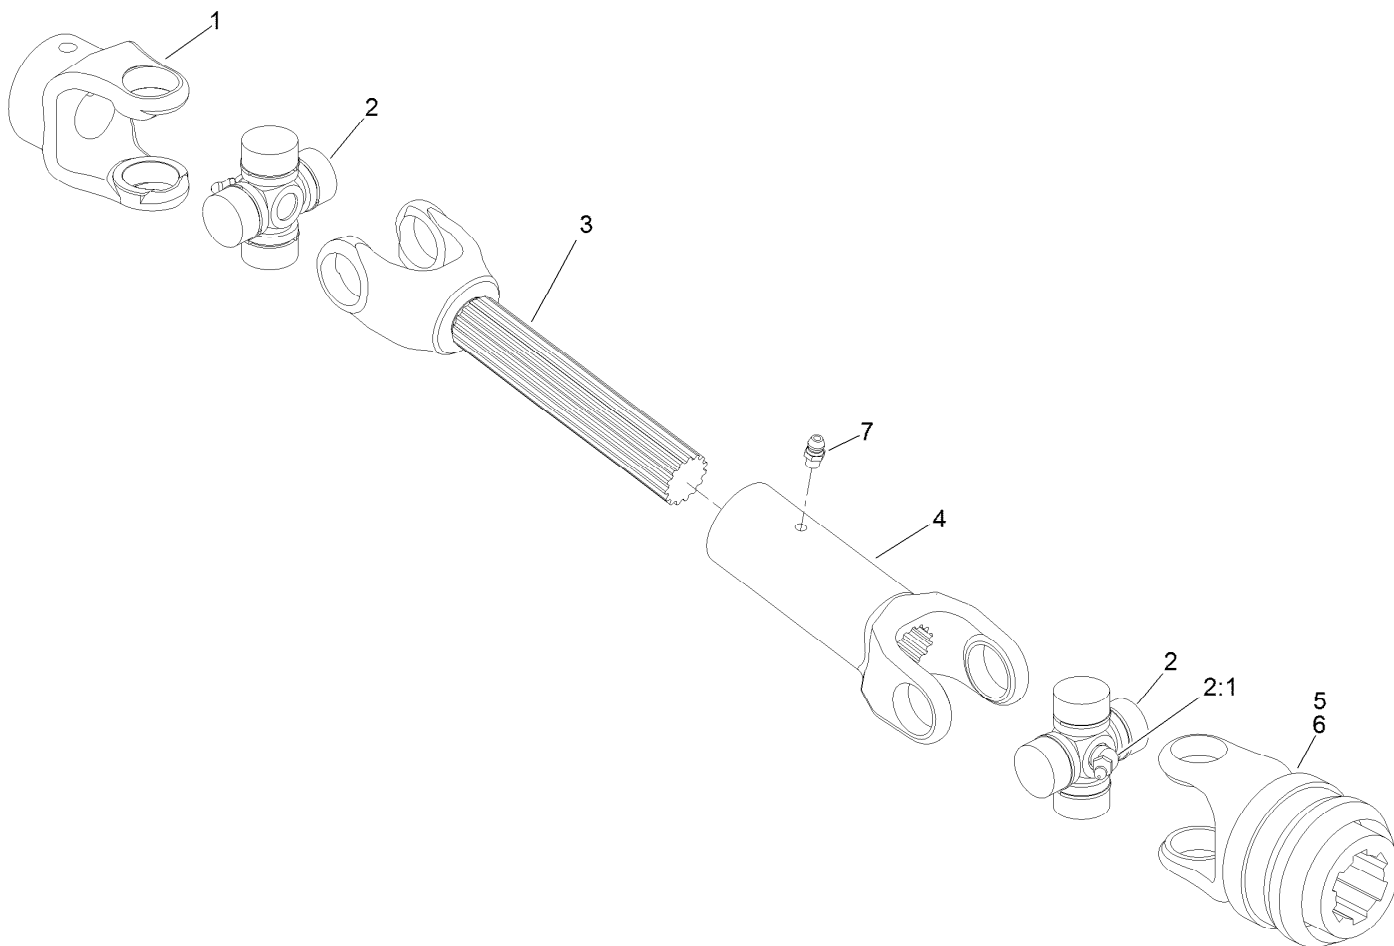


Driveshaft Assembly No. 125-0680

Ref.	Part Number	Qty.	Description
1	125-0679	1	Yoke-Shaft
2	54-9180	2	U-Joint Kit
2:1	62-3820	1	Fitting-Grease
3	125-8109	1	Shaft-Slip Yoke
4	94-7379	1	Tube-Yoke, Slip
5	99-4476	1	Spring Lock Yoke ASM
6	99-4477	1	Yoke Spring Lock Repair Kit
7	302-5	1	Fitting-Grease

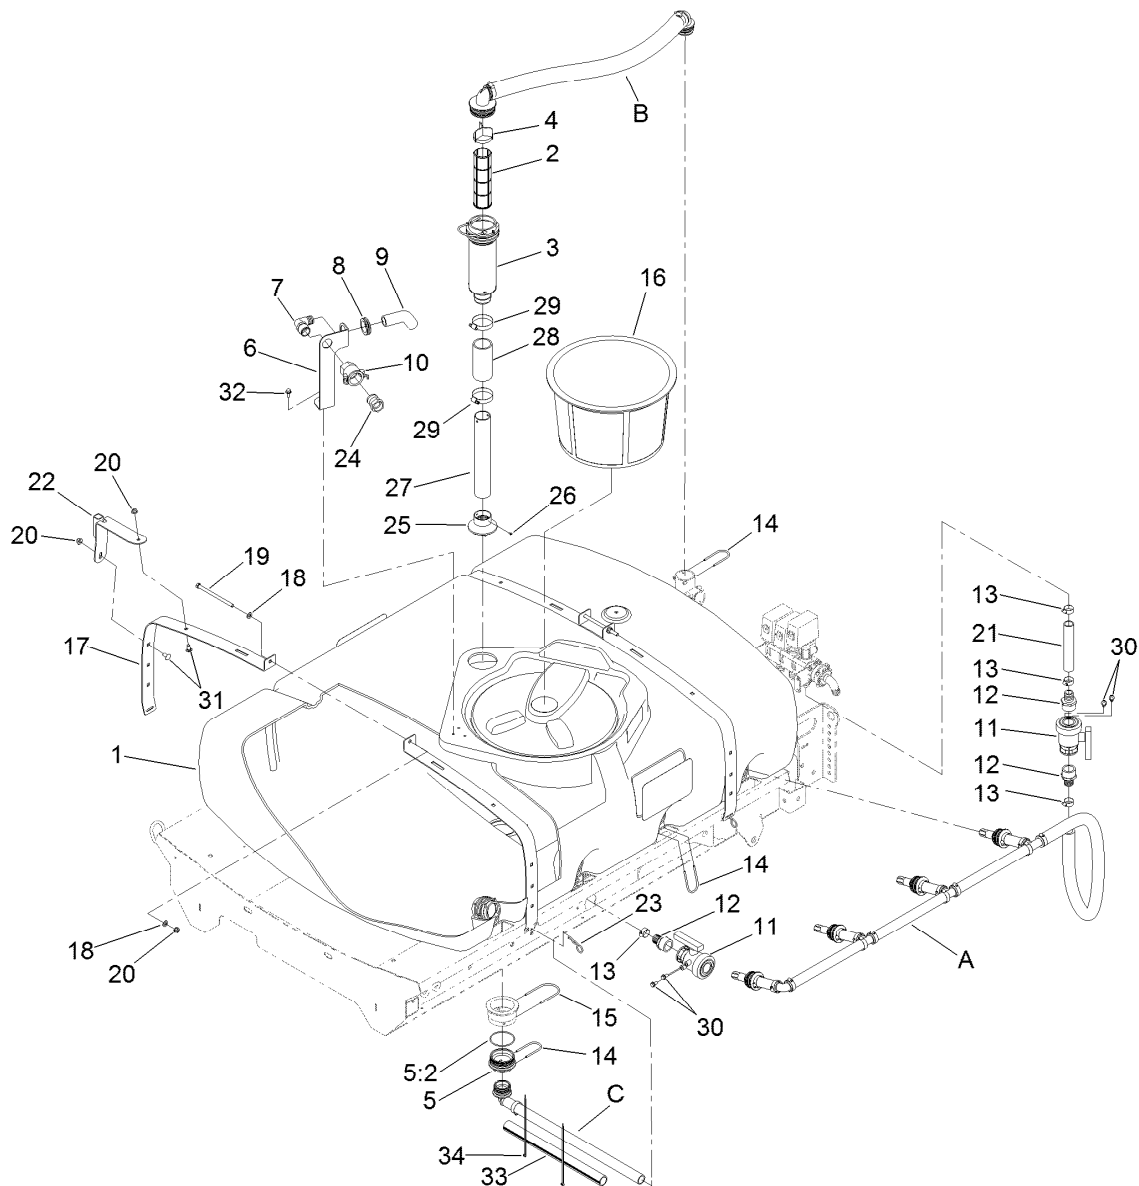

Tank Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	121-6518	1	200 Gallon Tank ASM	18	3256-24	4	Washer-Plain
2	100-8642	1	Screen-Suction	19	323-58	2	Bolt-TAP, HH
3	125-8006	1	Suction Filter ASM	20	104-8301	4	Nut-HF, NI
4	100-8641	1	Vane-Screen	21	125-0665	1	Nozzle-Hose, Agitation
5	117-7928	1	Adapter ASM	22	127-3920-03	1	Bracket-Storage
5:2	100-6989	1	O-Ring	23	3290-343	4	Pin-Hair
6	110-5082-03	1	Bracket-Anti Siphon	24	41316	1	Adapter-Quick
7	41140	1	Elbow	25	100-6714	1	Foot-Tube, Suction
8	110-5090	1	Grommet	26	108-3270	1	Screw-TAP
9	110-5088	1	Hose-Fill	27	125-8128	1	Tube-Suction
10	100-6779	1	Coupling-Female	28	100-8649	1	Hose-Suction
11	108-0069	2	Valve-Ball	29	2412-130	2	Clamp-Hose
12	110-5224	3	Fitting-Barbed, Straight	30	3234-7	4	Screw-HHF
13	2412-34	4	Clamp-Hose	31	3231-21	2	Screw-CARR
14	100-8635	6	Fork	32	3234-5	1	Screw-HHF
15	117-7996	1	Fork	33	127-9716	1	Shield-Hose, Drain
16	119-9419	1	Basket-Filter	34	116-0940	2	Tie-Cable
17	125-4081-03	4	Band-Tank				

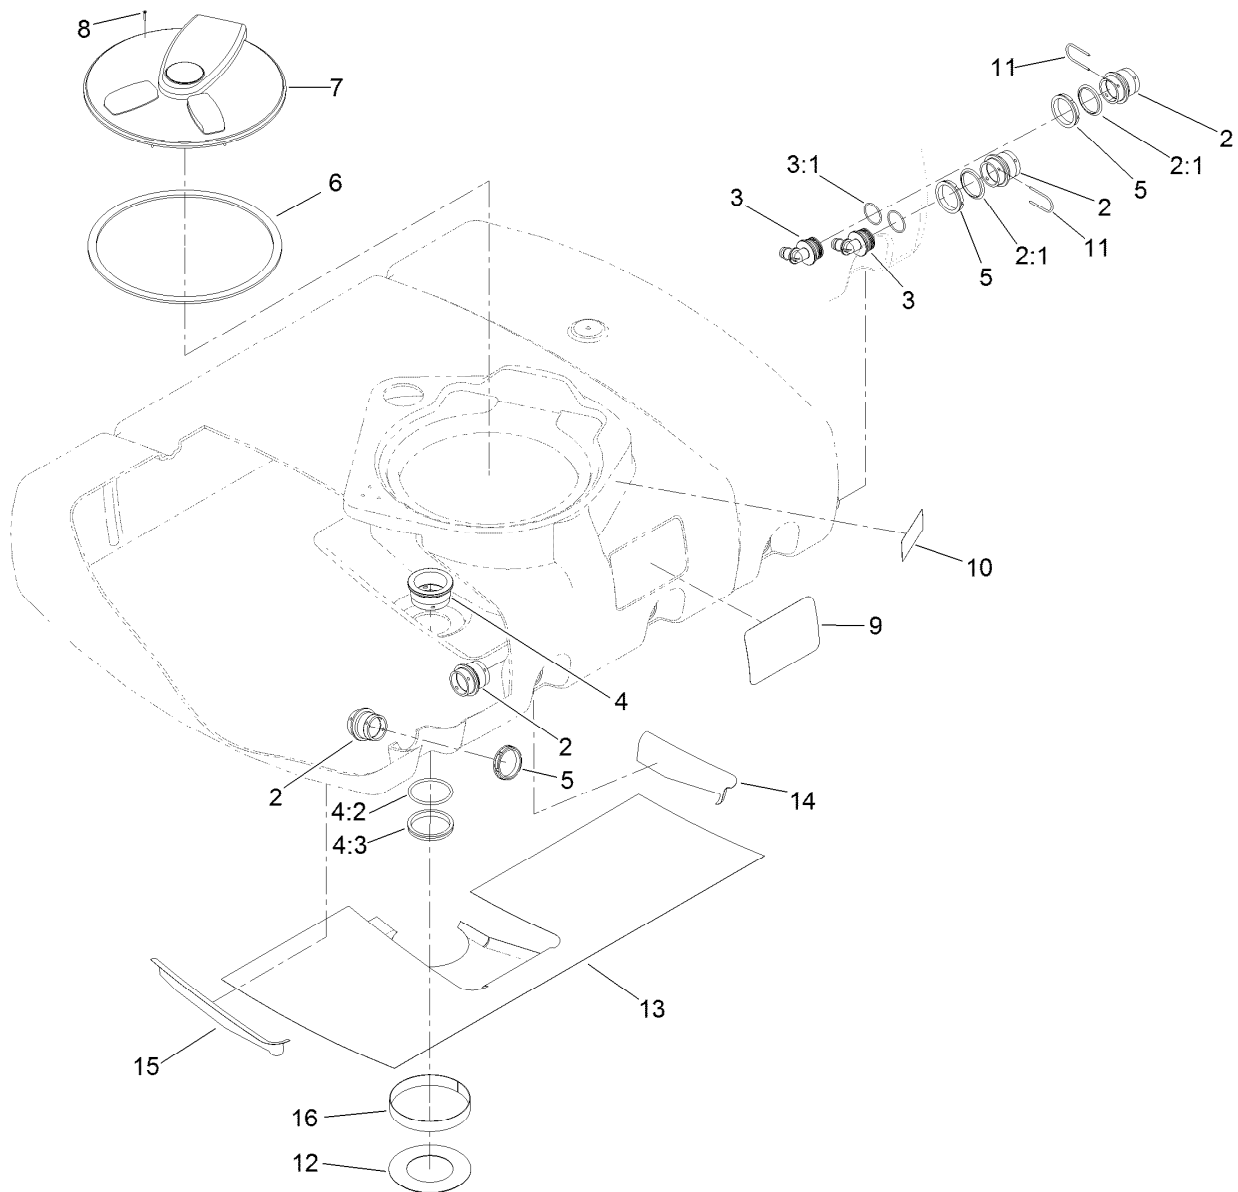

Tank Assembly No. 121-6518


Ref.	Part Number	Qty.	Description
2	108-3358	6	Fitting-Bulkhead
2:1	107-2864	1	Gasket-Bulkhead
3	106-4933	2	Hosebarb ASM
3:1	100-8637	1	O-Ring
4	117-7851	1	Bulkhead ASM
4:2	100-8646	1	Gasket-Bulkhead
4:3	100-8647	1	Nut-Bulkhead
5	100-7051	6	Nut-Bulkhead
6	119-9378	1	Gasket-Lid, Tank
7	119-9380	1	Spray Tank Lid ASM

Ref.	Part Number	Qty.	Description
8	107-8635	8	Screw-PFH
9	125-8064	2	Decal-Tank
10	120-0622	1	Decal-Warning
11	100-8635	2	Fork
12	127-3967	1	Shield-Sump, Bottom
13	127-3960	1	Shield-Sump, Center
14	127-3962	1	Shield-Sump, Rear
15	127-3961	1	Shield-Sump, Front
16	127-3988	1	Shield-Sump, Side

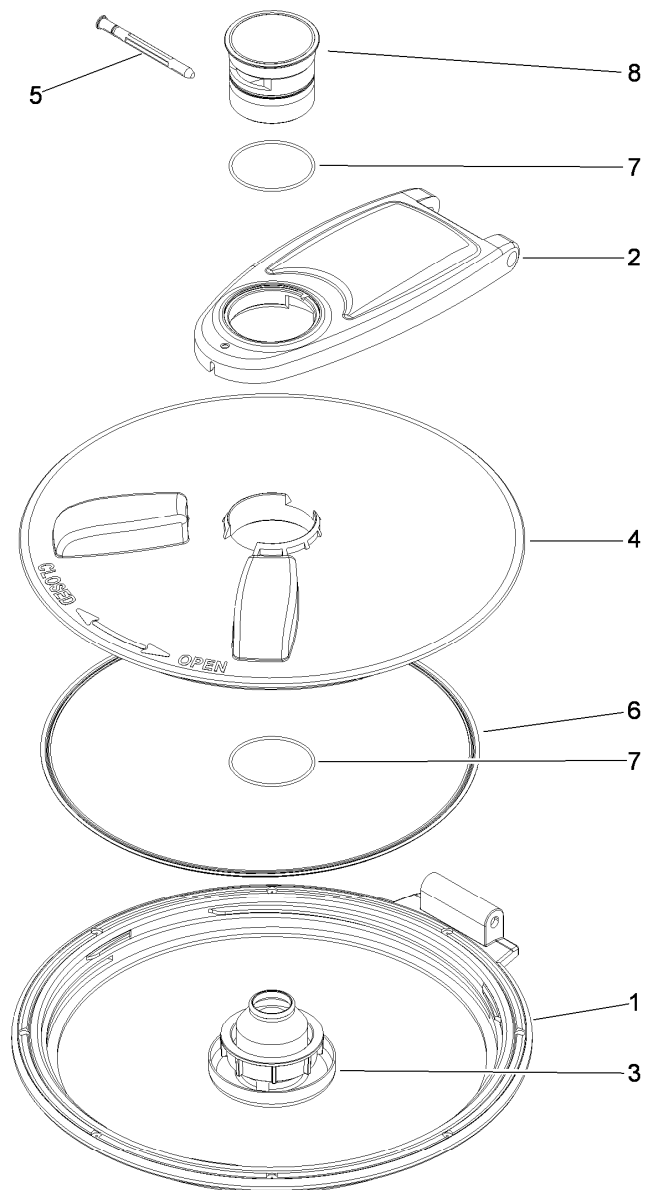


Spray Tank Lid Assembly No. 119-9380

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-9381	1	Ring-Lid
2	119-9382	1	Arm-Lid
3	119-9383	1	Vent-Lid
4	119-9384	1	Cover-Lid
5	119-9385	1	Pin-Pivot
6	106-5004	1	Seal-Lid
7	119-9386	2	O-Ring
8	119-9387	1	Cap-Lid

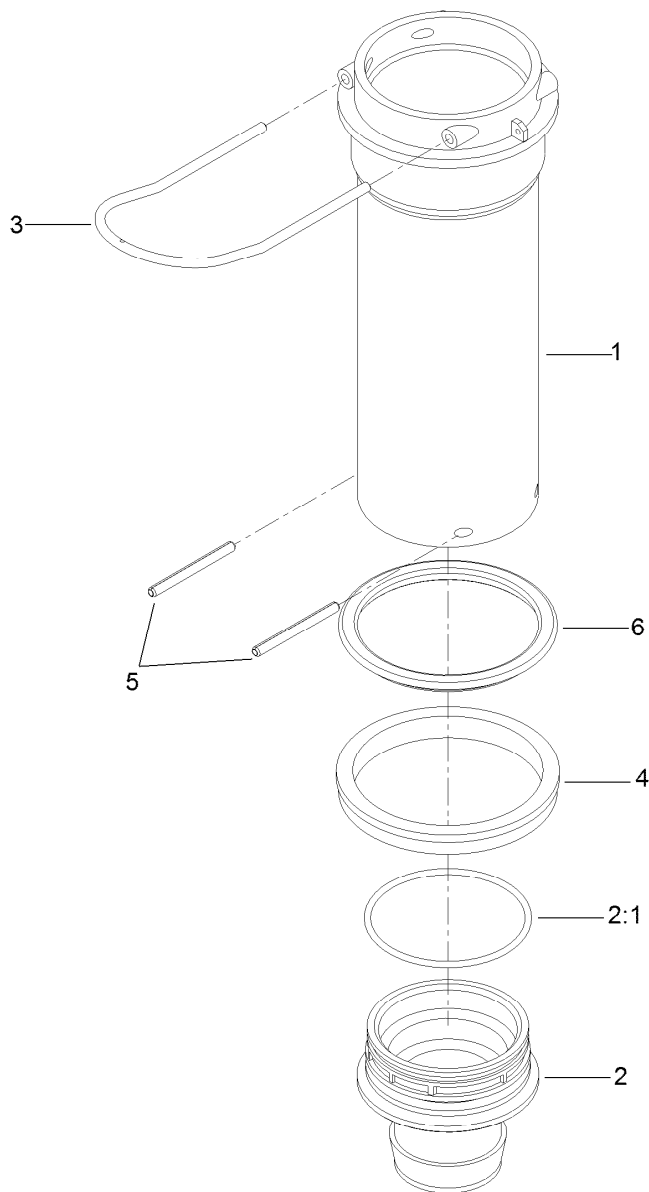

Suction Filter Assembly No. 125-8006


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-8643	1	Housing-Filter
2	106-4942	1	Hosebarb-Straight
2:1	100-6989	1	O-Ring
3	100-8636	1	Fork-Special
4	100-8647	1	Nut-Bulkhead
5	100-8644	2	Pin-Expansion
6	100-8646	1	Gasket-Bulkhead

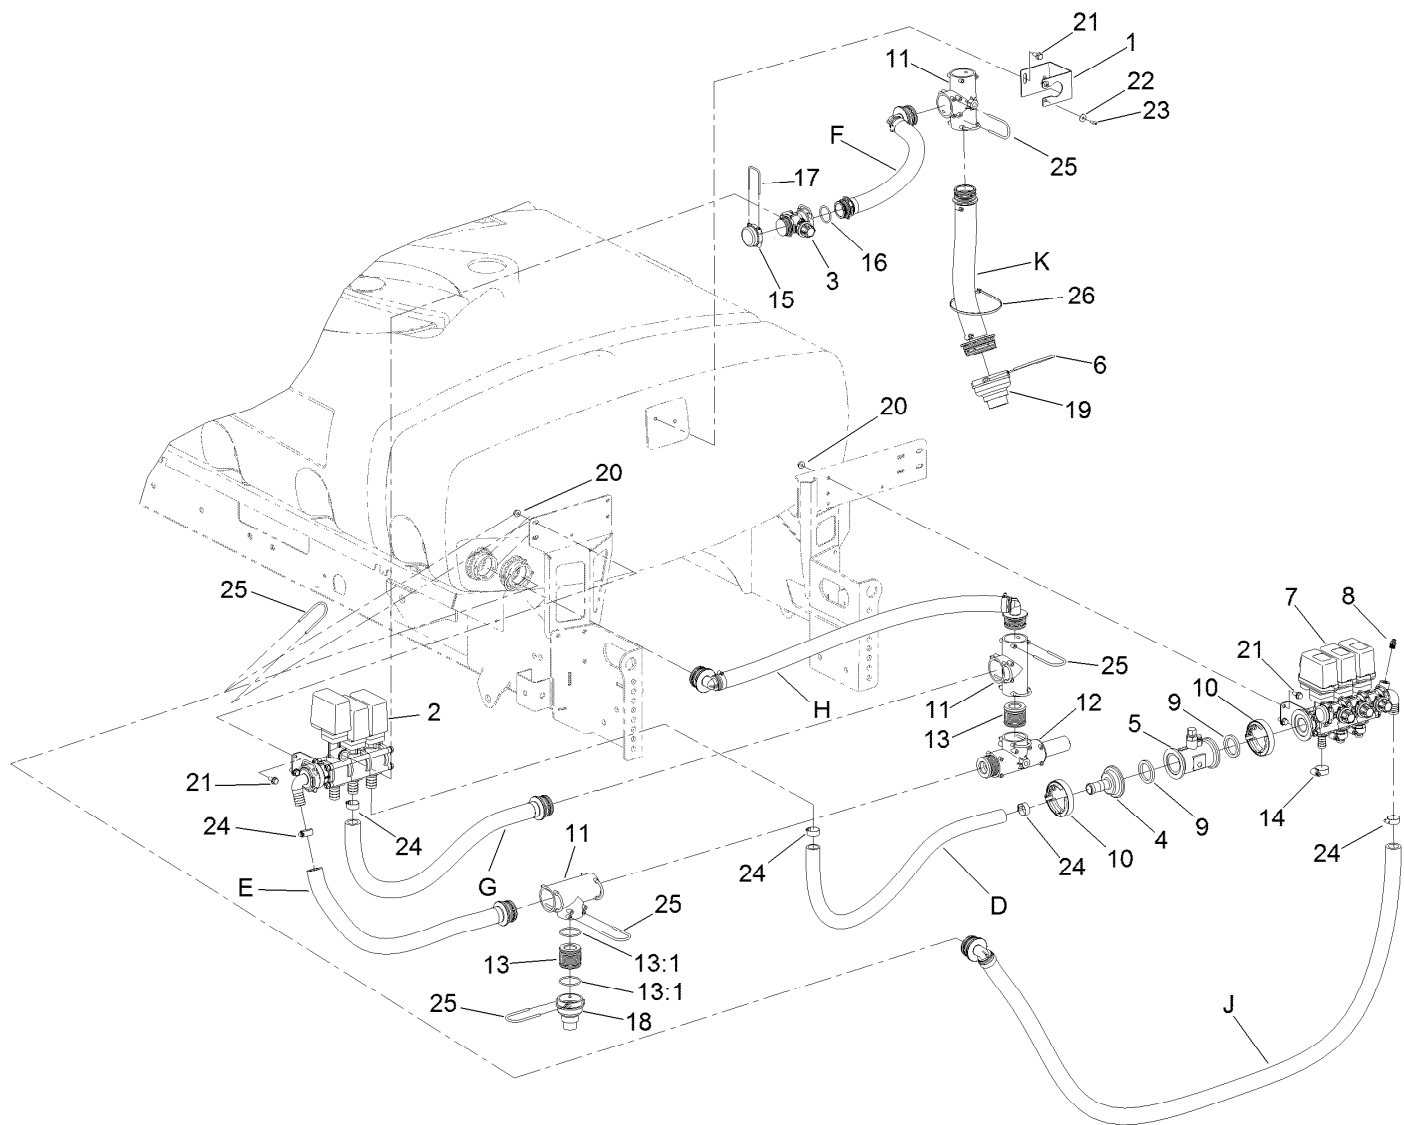

Agitation, Bypass and Boom Manifold Assembly

Ref.	Part Number	Qty.	Description
1	125-0719	1	Bracket-Tee
2	127-3906	1	Agitation Manifold ASM
3	125-0613	1	Bypass Manifold ASM
4	107-8704	1	Hosebarb
5	106-1038	1	Flow Meter ASM
6	117-7996	1	Fork
7	125-0616	1	Boom Manifold ASM
8	100-8674	1	Coupler-Tube
9	104-9090	2	Gasket
10	104-9089	2	Clamp-Screw, Worm
11	100-6704	3	Tee
12	117-7874	1	Relief Valve ASM
13	106-4947	2	Connector
13:1	100-8637	2	O-Ring


Ref.	Part Number	Qty.	Description
14	2412-129	3	Clamp-Hose
15	120-8596	1	Cap-Valve
16	119-4869	1	O-Ring
17	119-4863	1	Fork
18	117-7859	1	Fitting-Pump
19	117-7858	1	Fitting-Pump
20	104-8300	8	Nut-HF, NI
21	3234-47	10	Screw-HHF
22	3256-61	2	Washer-Flat
23	32144-32	2	Screw-PPH
24	2412-34	5	Clamp-Hose
25	100-8635	12	Fork
26	3290-379	1	Tie-Cable

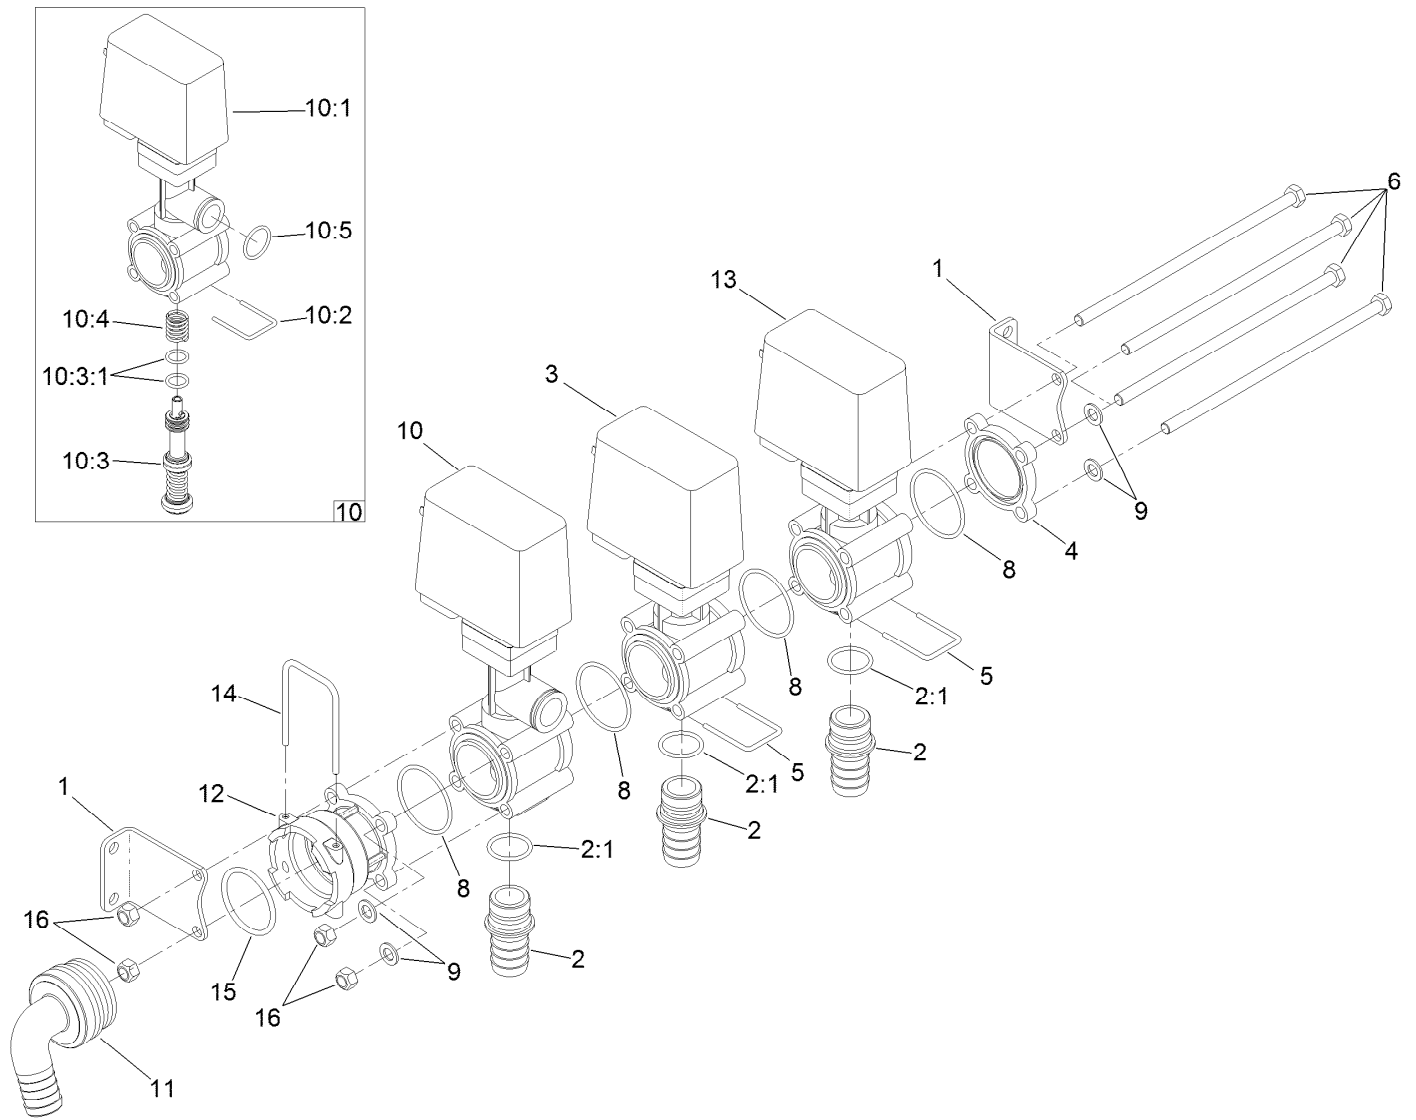

Agitation Manifold Valve Assembly


Ref.	Part Number	Qty.	Description
1	117-7975	2	Bracket Mounting Kit
2	117-7992	3	Hosebarb
2:1	119-4868	1	O-Ring
3	119-0465	1	Valve-Proportional
4	119-0531	1	Adapter-Cover
5	119-4862	2	Fork
6	119-4867	4	Screw-HH
8	119-4870	4	O-Ring
9	119-4871	4	Washer
10	121-5053	1	Valve (W/Bypass)
10:1	119-9397	1	Motor Valve Cover ASM

Ref.	Part Number	Qty.	Description
10:2	119-4862	1	Fork
10:3	121-5054	1	Piston ASM
10:3:1	121-5057	2	O-Ring-Piston
10:4	121-5056	1	Spring-Piston
10:5	119-4868	1	O-Ring
11	125-0691	1	Hosebarb-Elbow
12	125-0692	1	Connector-Flange
13	125-0993	1	Valve (W/O Bypass)
14	125-4000	1	Fork
15	125-4117	1	O-Ring
16	33024-00	4	Nut-Lock, NI

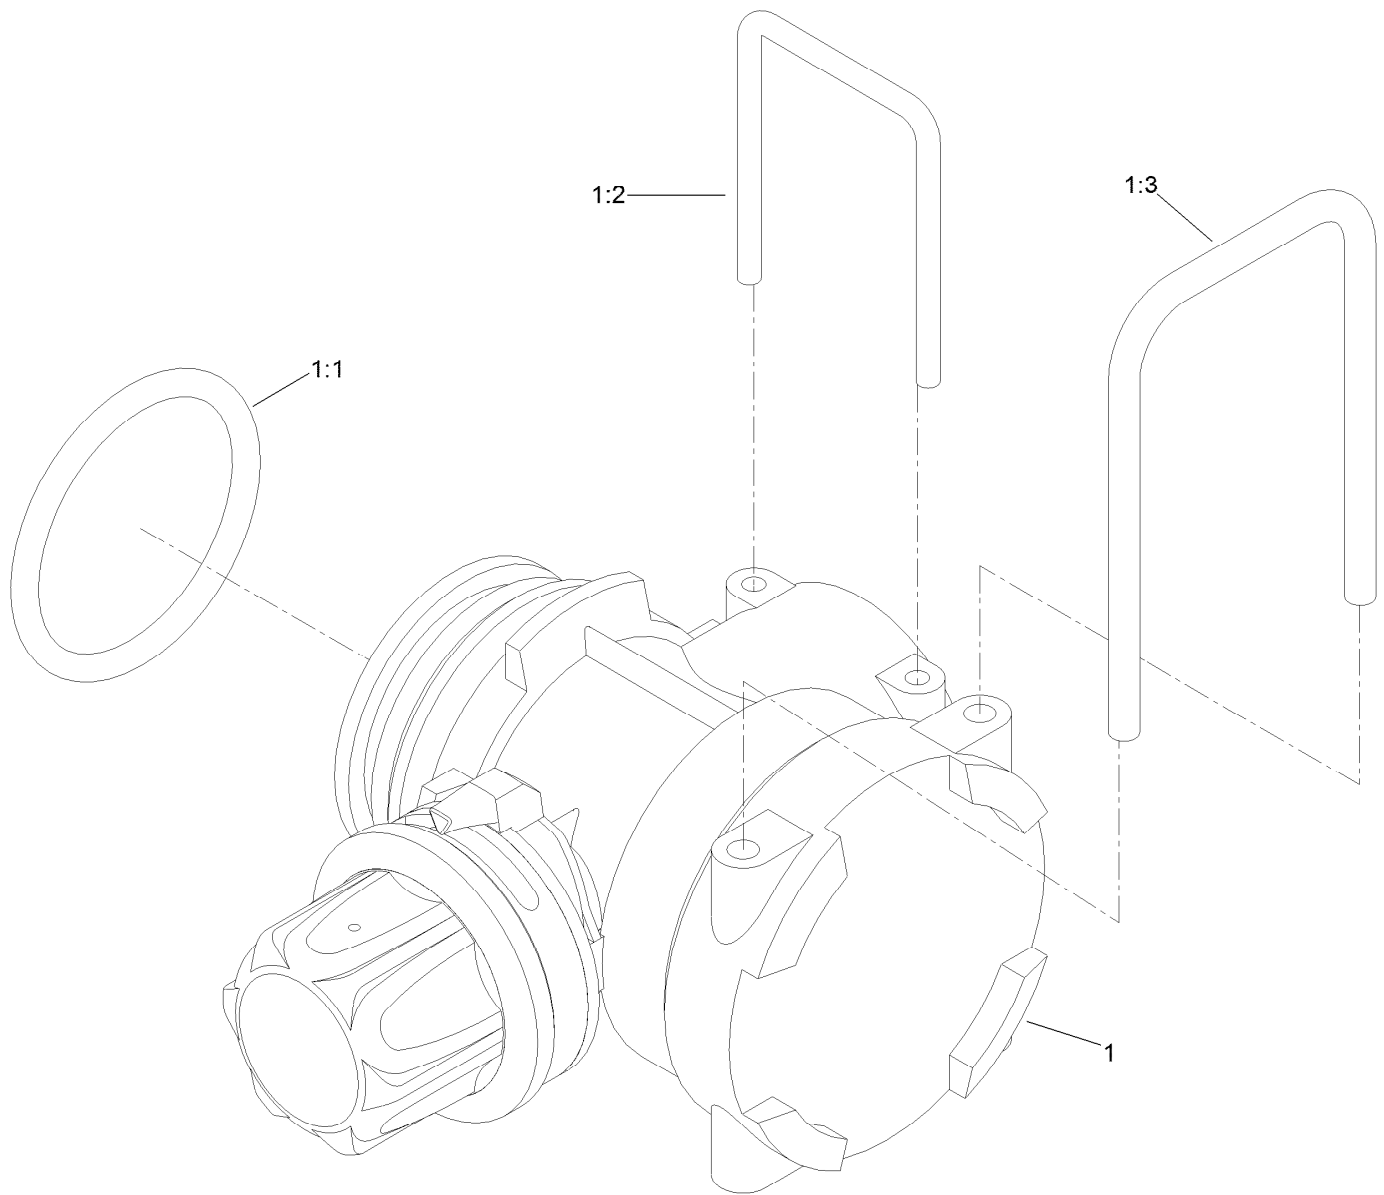


Bypass Manifold Assembly No. 125-0613

Ref.	Part Number	Qty.	Description
1	120-8595	1	Valve-Bypass
1:1	119-4869	1	O-Ring
1:2	119-4862	1	Fork
1:3	119-4863	1	Fork

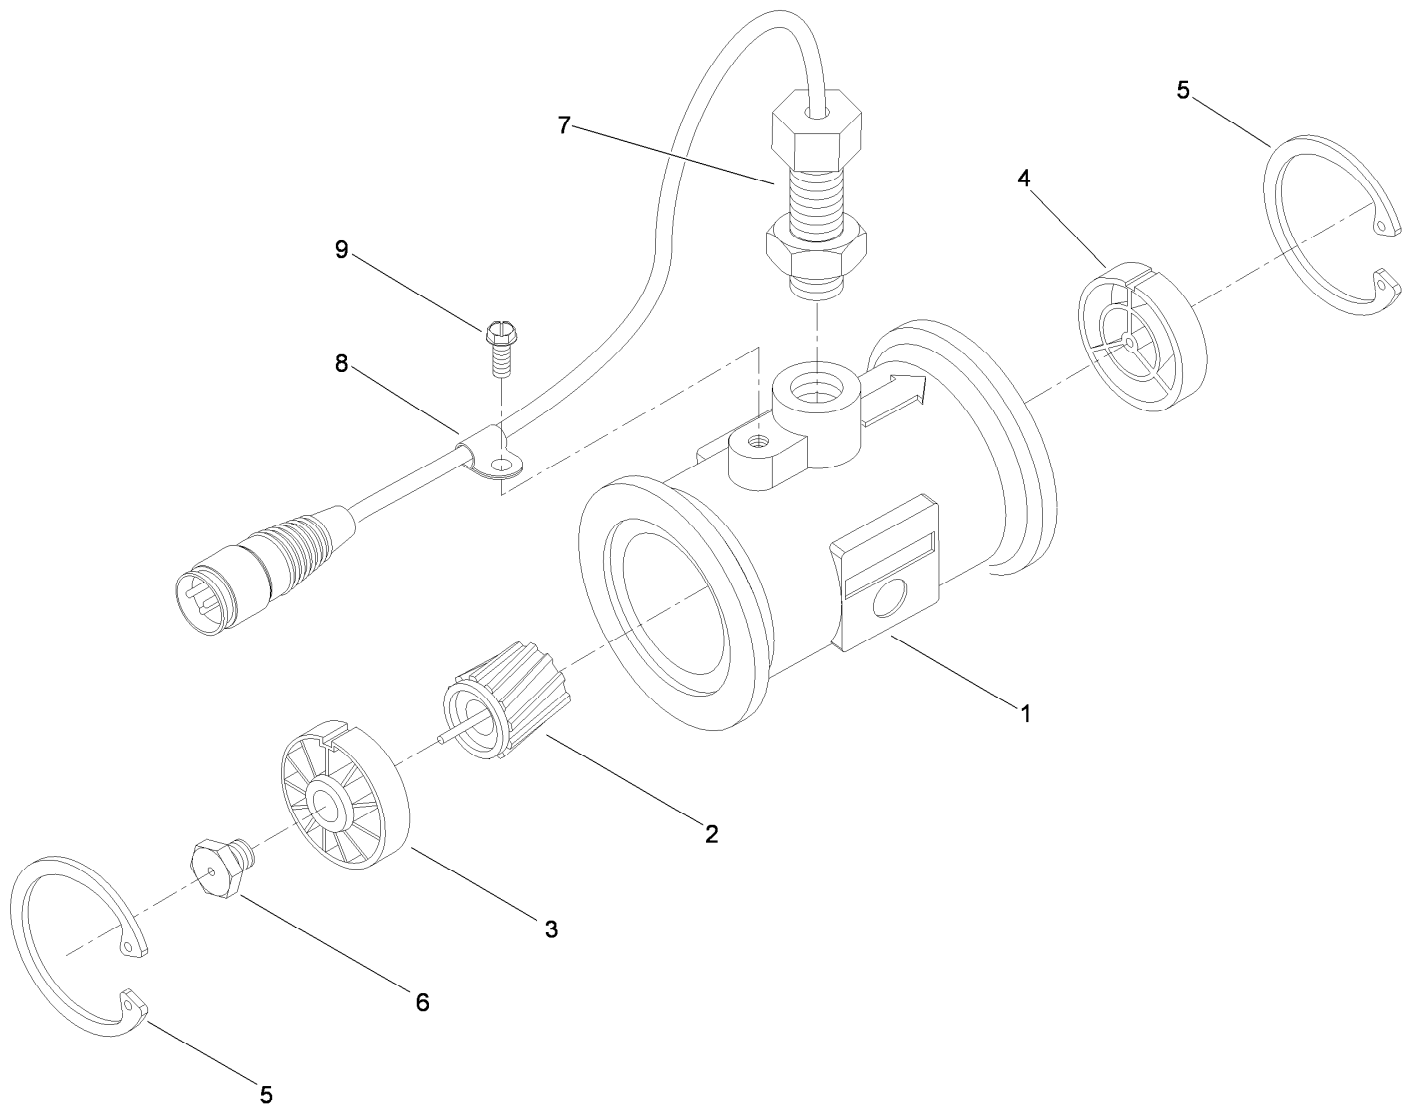

Flow Meter Assembly No. 106-1038


Ref.	Part Number	Qty.	Description
1	106-1042	1	Body-Meter, Flow
2	104-9059	1	Rotor / Magnet ASM
3	104-9060	1	Upstream Hub And Bearing ASM
4	104-9061	1	Downstream Hub ASM
5	104-9062	2	Ring-Retaining, Internal
6	42480	1	Stud-Turbine (W / Bearing)
7	104-9065	1	External Sensor ASM
8	104-9063	1	Clamp-Cable
9	104-9064	1	Screw-HWHTF

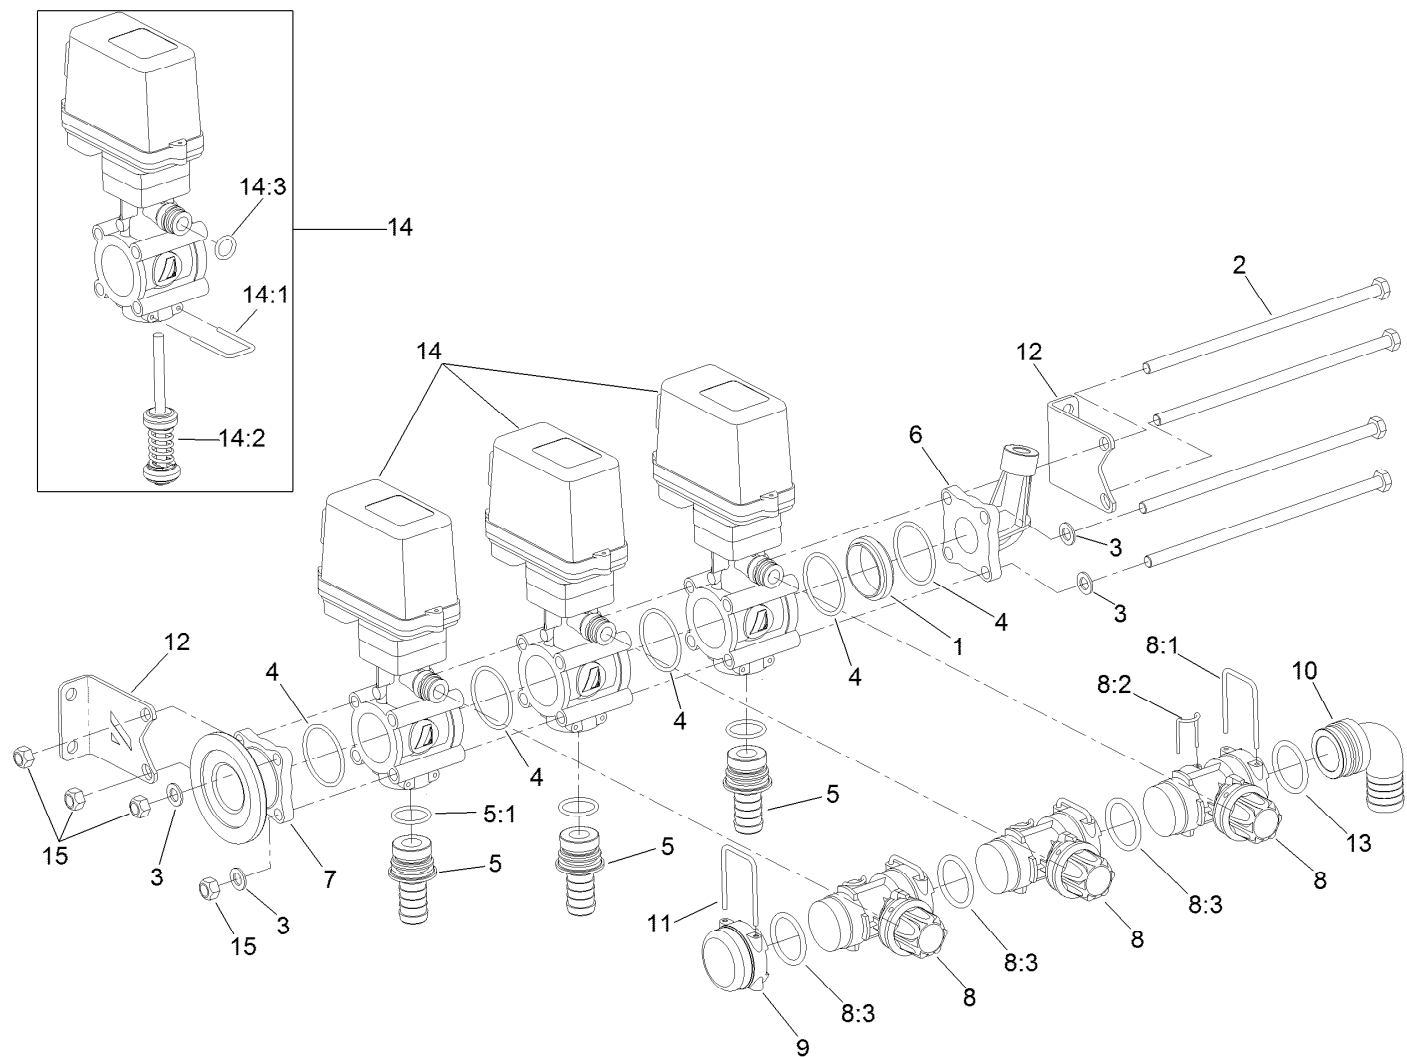

Boom Manifold Assembly No. 125-0616

Ref.	Part Number	Qty.	Description
1	119-0453	1	Adapter-Male-Male
2	119-4867	4	Screw-HH
3	119-4871	4	Washer
4	119-4974	5	O-Ring
5	121-5102	3	Hosebarb
5:1	119-4975	1	O-Ring
6	121-5103	1	Port-Pressure Gauge
7	121-5104	1	Flange-Female
8	121-5105	3	Valve-Bypass
8:1	121-5108	1	Fork
8:2	121-5110	1	Fork

Ref.	Part Number	Qty.	Description
8:3	121-5114	1	O-Ring
9	121-5106	1	Cap-Bypass Valve
10	121-5107	1	Elbow-Hosebarb
11	121-5108	1	Fork
12	121-5109	2	Bracket Mounting Kit
13	121-5114	1	O-Ring
14	125-4120	3	Valve (W/Bypass)
14:1	119-4901	1	Fork
14:2	121-5116	1	Piston-Arag Valve
14:3	121-5123	1	O-Ring
15	33024-00	4	Nut-Lock, NI

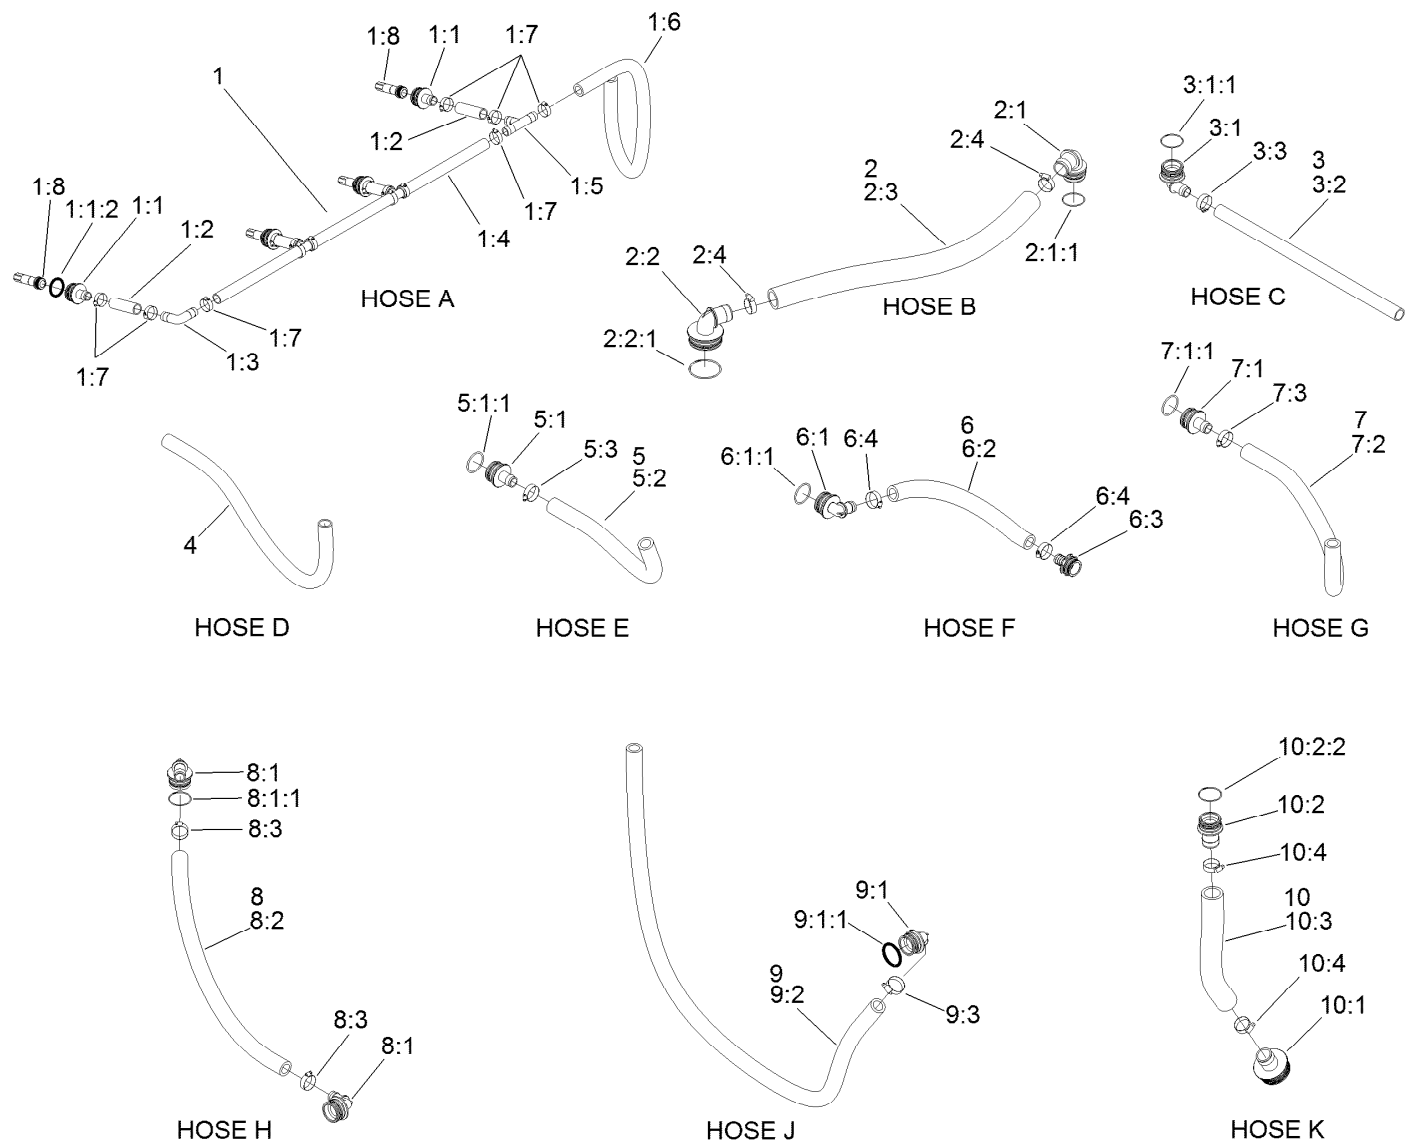


Hose Assembly

Ref.	Part Number	Qty.	Description
1		1	Agitation Hose ASM ●
1:1	117-7978	4	Hosebarb ASM
1:1:2	100-8637	1	O-Ring
1:2	125-0656	4	Hose-Agitation Nozzle
1:3	117-7867	1	Elbow-Hosebarb
1:4	117-7862	3	Hose-Main Agitation
1:5	117-7866	3	Tee-Hosebarb
1:6	119-0542	1	Hose-Bypass, Agitation
1:7	2412-34	15	Clamp-Hose
1:8	117-7853	4	Bushing-Nozzle
2		1	Upper Suction Hose ASM ●
2:1	110-5156	1	Suction Elbow ASM
2:1:1	100-8637	1	O-Ring
2:2	106-4952	1	Hosebarb-90 DEG
2:2:1	100-6989	1	O-Ring
2:3	125-0655	1	Hose-Relief Bypass
2:4	41327	2	Clamp-Hose
3		1	Drain Hose ASM ●

Ref.	Part Number	Qty.	Description
3:1	106-4933	1	Hosebarb ASM
3:1:1	100-8637	1	O-Ring
3:2	125-0657	1	Hose-Drain
3:3	2412-34	1	Clamp-Hose
4	120-0737	1	Hose-Bba Supply
5		1	Supply Hose ASM ●
5:1	106-4932	1	Hosebarb-Straight
5:1:1	100-8637	1	O-Ring
5:2	125-0651	1	Hose-Supply
5:3	2412-34	1	Clamp-Hose
6		1	Relief Bypass Hose ASM ●
6:1	110-5156	1	Suction Elbow ASM
6:1:1	100-8637	1	O-Ring
6:2	125-0654	1	Hose-Upper Suction
6:3	125-0617	1	Hosebarb-STR, T5 X 1"
6:4	41327	2	Clamp-Hose
7		1	Rate Return Hose ASM ●
7:1	106-4932	1	Hosebarb-Straight

● Not serviced separately

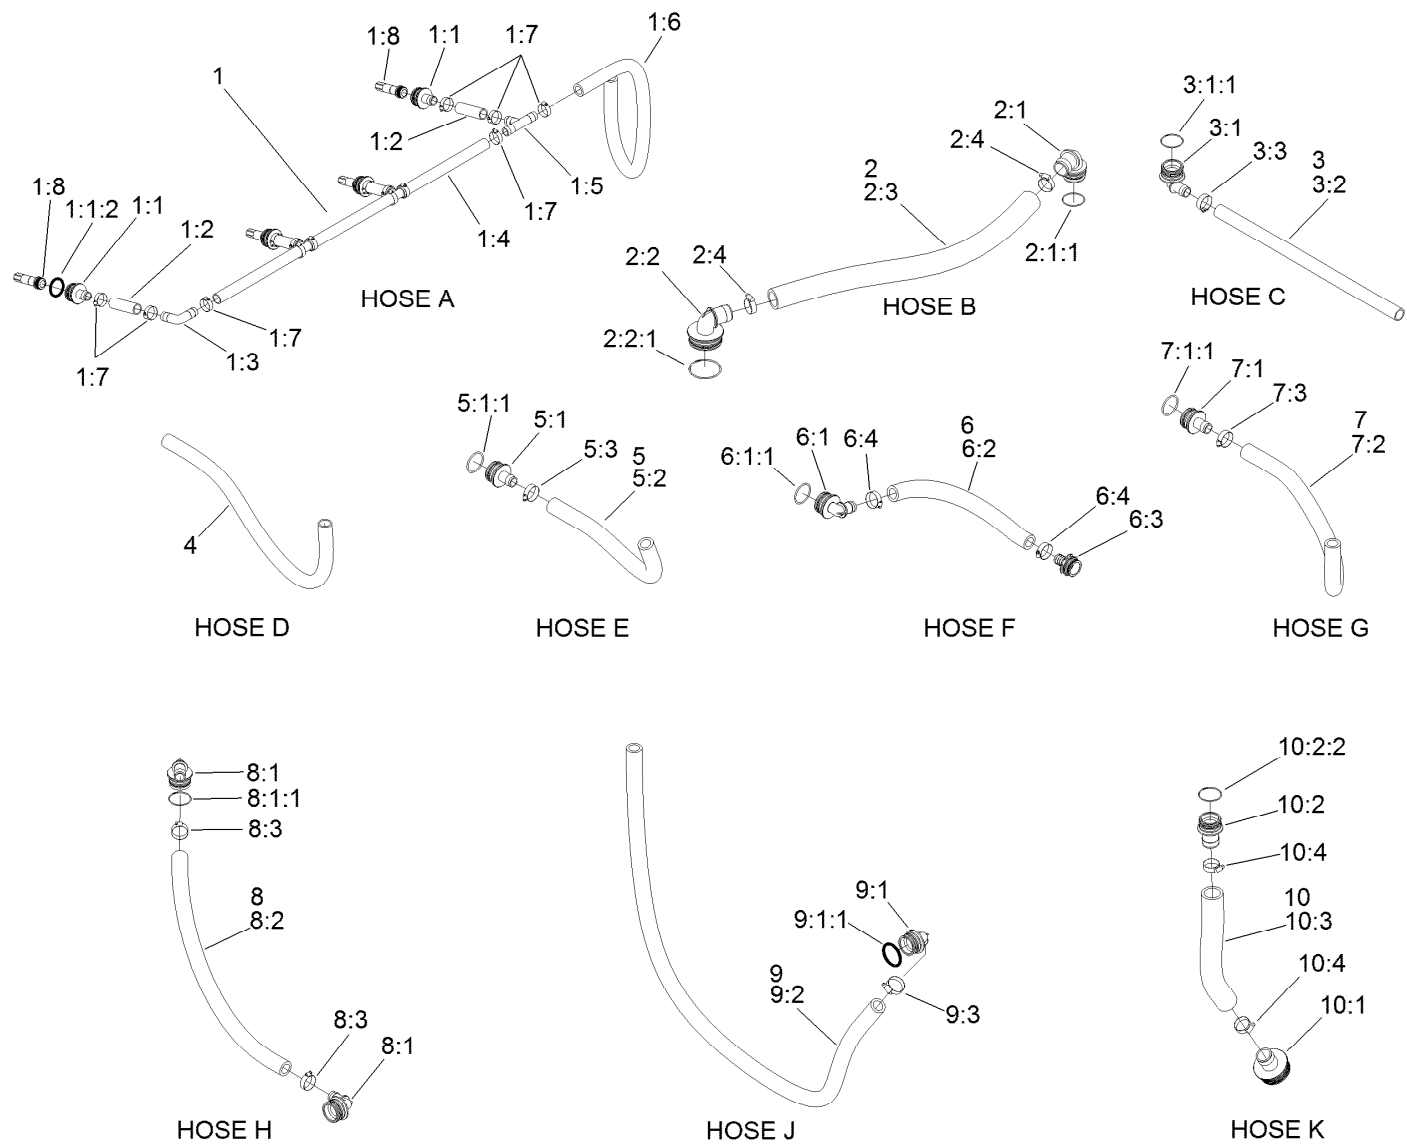


Hose Assembly (continued)

Ref.	Part Number	Qty.	Description
7:1:1	100-8637	1	O-Ring
7:2	125-0641	1	Hose-Master Boom
7:3	2412-34	1	Clamp-Hose
8		1	Regulating Hose ASM ●
8:1	106-4933	2	Hosebarb ASM
8:1:1	100-8637	1	O-Ring
8:2	120-0737	1	Hose-Bba Supply
8:3	2412-34	2	Clamp-Hose
9		1	Boom Bypass Hose ASM ●
9:1	106-4933	1	Hosebarb ASM


Ref.	Part Number	Qty.	Description
9:1:1	100-8637	1	O-Ring
9:2	119-0537	1	Hose-Bypass
9:3	2412-34	1	Clamp-Hose
10		1	Lower Suction Hose ASM ●
10:1	117-7965	1	Hosebarb ASM
10:2	117-7982	1	Hosebarb ASM
10:2:2	100-8637	1	O-Ring
10:3	125-0653	1	Hose-Lower Suction
10:4	41327	2	Clamp-Hose

● Not serviced separately

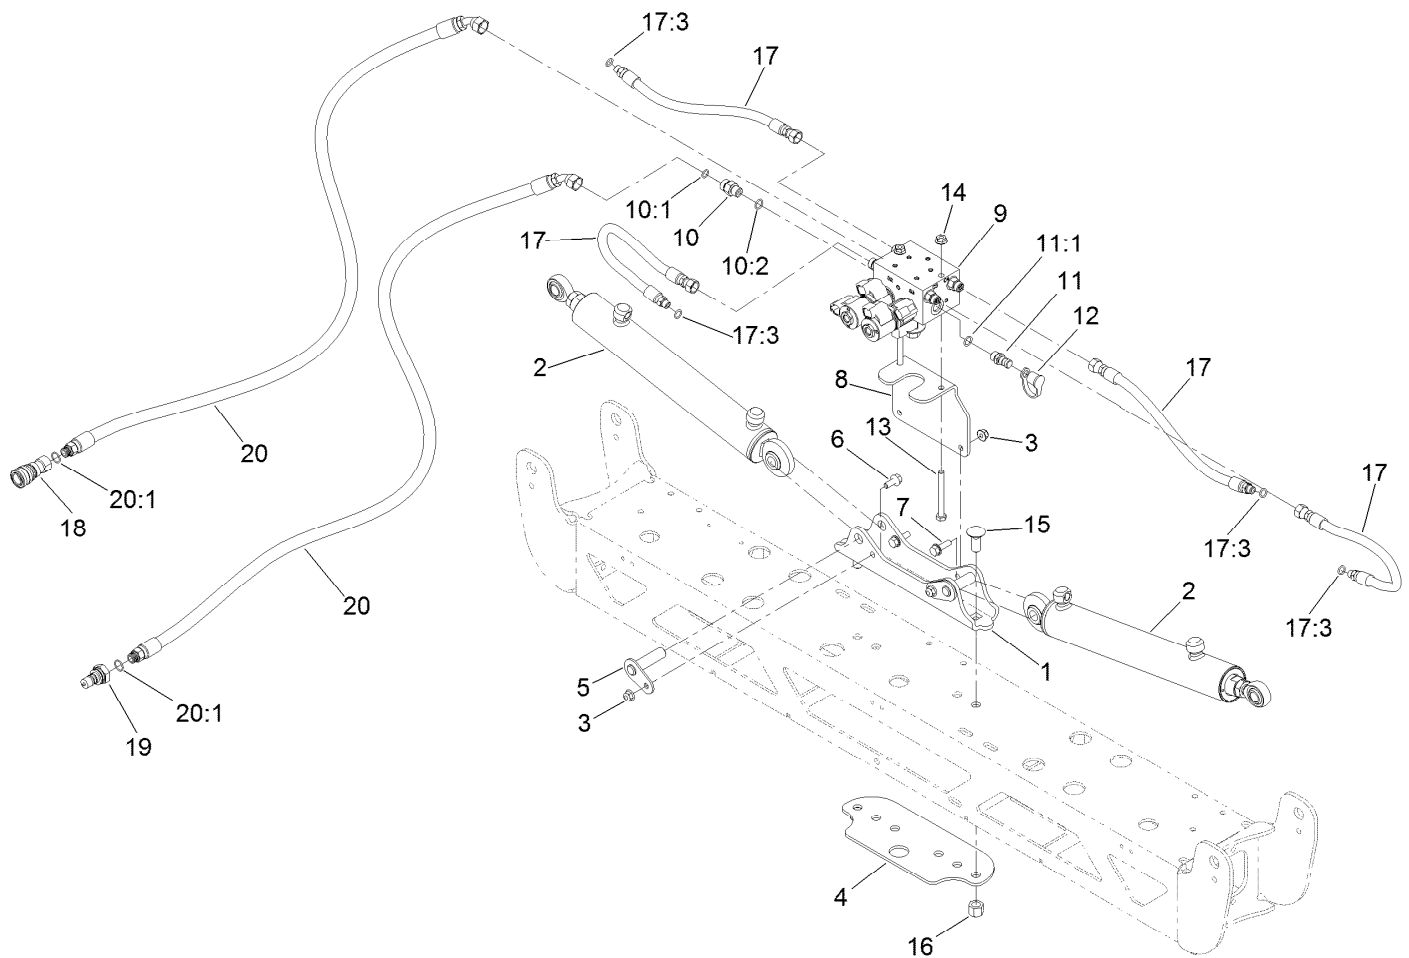

Boom Lift Hydraulic Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	119-4856-03	1	Plate-Mount, Cylinders	11:1	237-42	1	O-Ring
2	117-0701	2	Hydraulic Cylinder ASM	12	354-79	1	Cap-Dust
3	104-8300	4	Nut-HF, NI	13	322-14	2	Screw-HH
4	108-3469-03	1	Plate-Washer	14	32128-26	2	Nut-HF
5	112-7884	2	Pin-Pivot	15	110-5067	2	Screw-CARR
6	110-5053	2	Screw-HHF	16	3296-23	2	Nut-Lock, NI
7	3234-29	2	Screw-HHF	17	119-4859	4	Hose ASM
8	117-0711-03	1	Plate-Mount, Boom Valve	17:3	237-78	1	O-Ring
9	117-0702	1	On-Off Boom Lift Valve ASM	18	106-7968	1	Coupler-Quick, Female
10	340-2	2	Fitting-Straight	19	106-7969	1	Coupler-Quick, Male
10:1	237-22	1	O-Ring	20	127-9717	2	Hose ASM
10:2	237-42	1	O-Ring	20:1	237-42	1	O-Ring
11	59-7410	1	Fitting-Diagnostic				


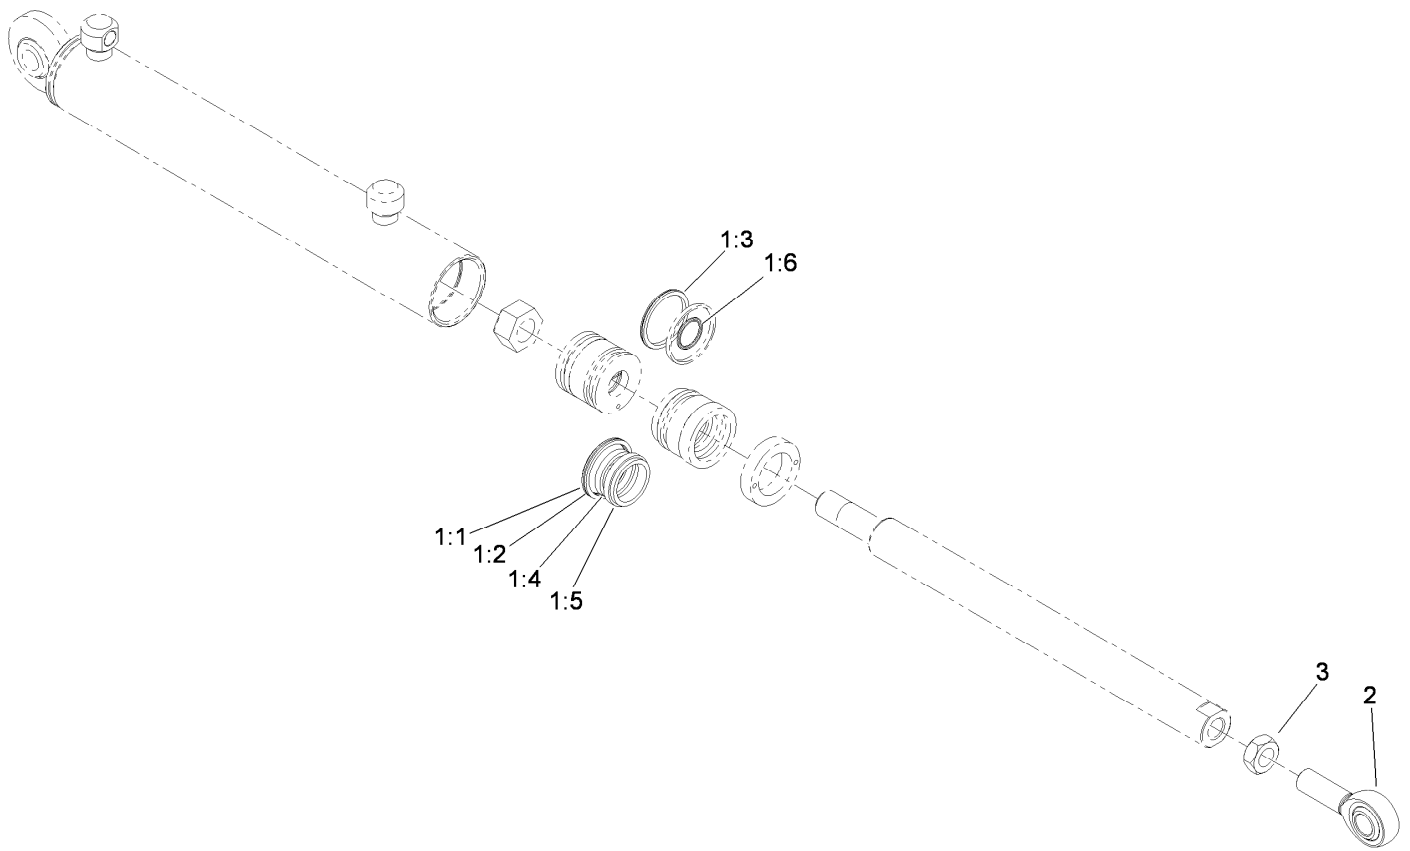


Hydraulic Cylinder Assembly No. 117-0701

Ref.	Part Number	Qty.	Description
1	119-8026	1	Seal Kit ●
1:1		1	O-Ring ■
1:2		1	Ring-Backup ■
1:3		1	Bp Seal ■
1:4		1	Bs Seal ■
1:5		1	Dust Seal ■
1:6		1	O-Ring ■
2	119-8027	1	Rod End
3	3220-6	1	Nut-Jam


● Not illustrated

■ Not serviced separately

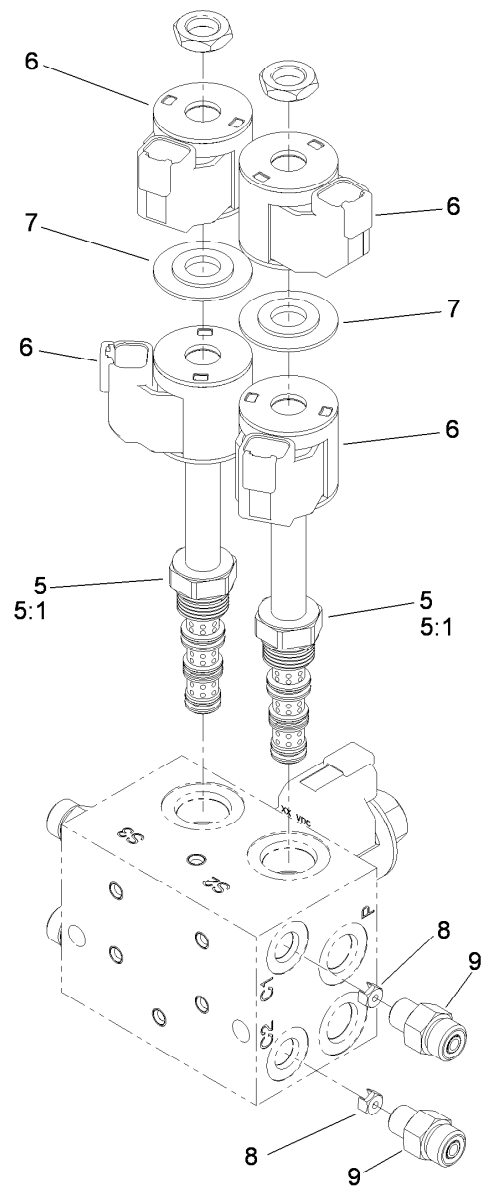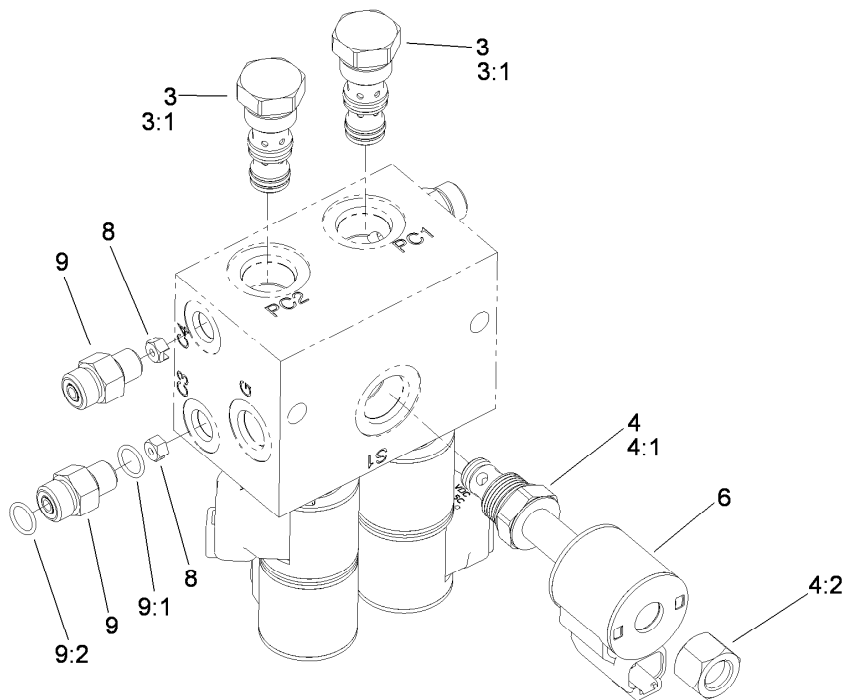

On-Off Boom Lift Valve No. 117-0702


Ref.	Part Number	Qty.	Description
3	120-2588	2	Valve-Check
3:1	120-0886	1	Seal Kit
4	107-7517	1	Valve-Solenoid
4:1	105-9156	1	Seal Kit
4:2	107-7812	1	Nut-Solenoid
5	120-2587	2	Valve-Solenoid
5:1	112-6520	1	Seal Kit
6	119-8036	5	Coil
7	120-2586	2	Spacer-Coil
8	120-2585	4	Orifice, .035
9	340-92	4	Fitting-Straight
9:1	237-78	1	O-Ring
9:2	237-21	1	O-Ring

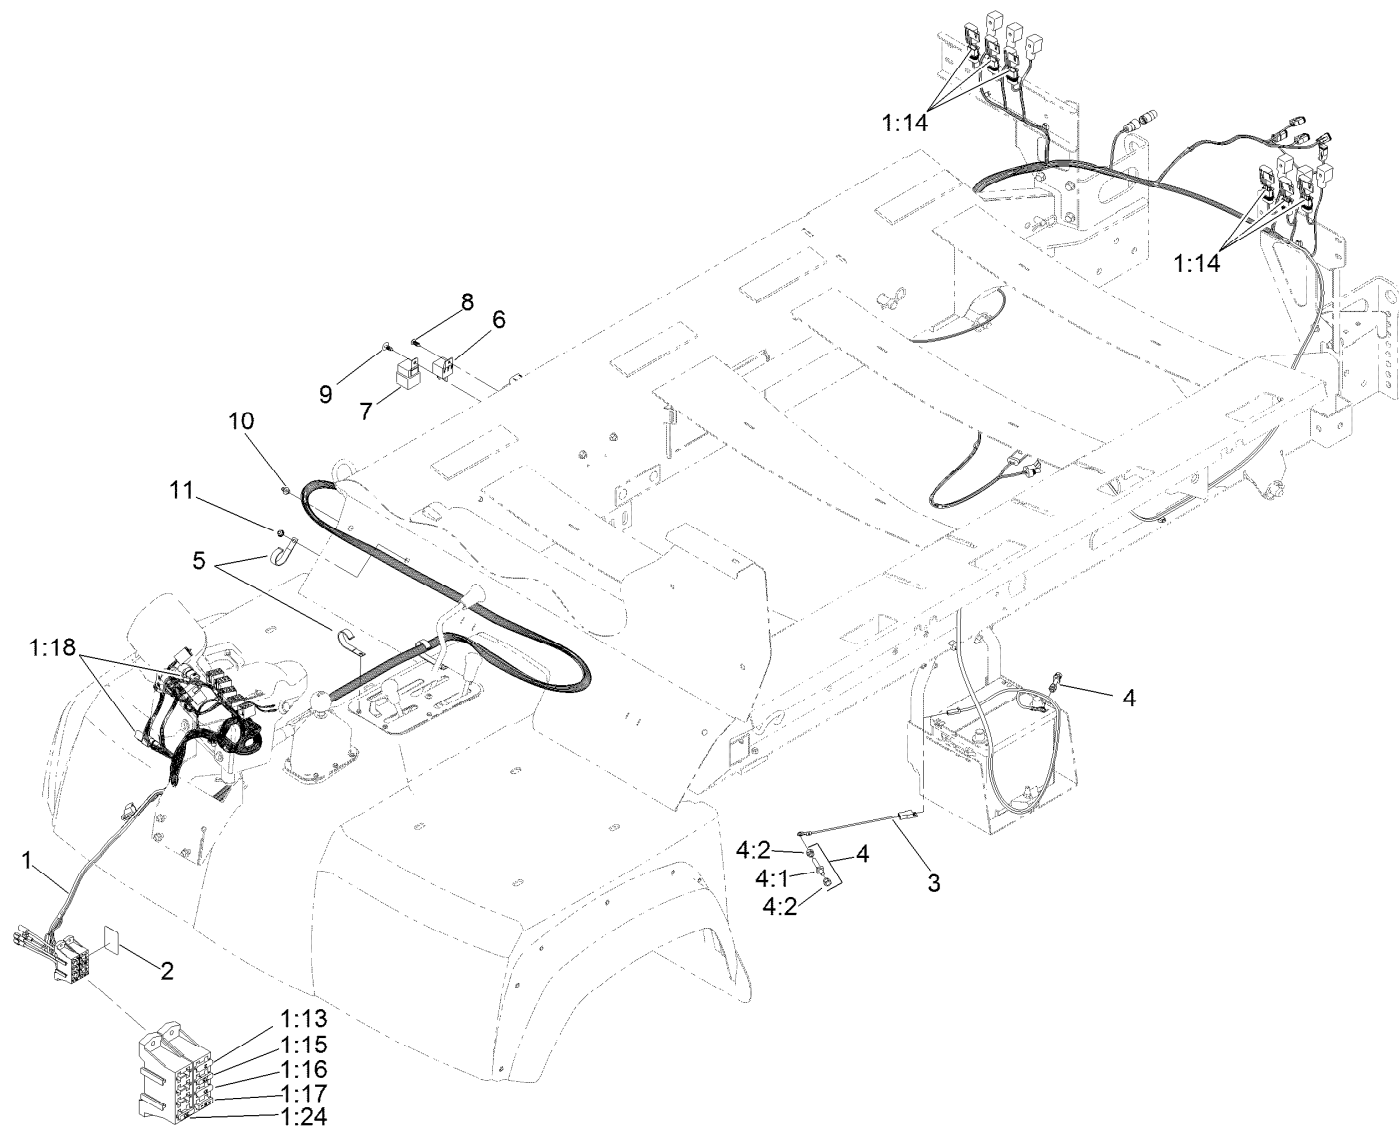

Wire Harness Assembly

Ref.	Part Number	Qty.	Description
1	121-6573	1	Harness-Wire
1:13	94-6710	1	Fuse-2 Amp
1:14	110928	6	Fuse-Blade, 5 Amp
1:15	114241	1	Fuse-Blade, 7.5 Amp
1:16	218-578	1	Fuse-Blade, 10 Amp
1:17	109355	1	Fuse-Blade, 15 Amp
1:18	32180-043	2	Resistor-120 Ohm
1:24	109103	1	Fuse-Blade, 30 Amp
2	127-3966	1	Decal-Fuse Block
3	108-9455	1	Harness-Wire, Fusible Link


Ref.	Part Number	Qty.	Description
4	112-9921	2	Bolt ASM
4:1	32180-107	1	Bolt-Clamp, Battery
4:2	32180-108	2	Nut-Hex Shoulder
5	106-1429	3	Clamp-J
6	99-7435	1	Relay
7	99-7430	1	Relay-Mini
8	114-4899	1	Rivet-Push
9	104-0395	1	Plug-Plastic
10	3234-13	1	Screw-HHF
11	104-7201	1	Nut-HF, NI

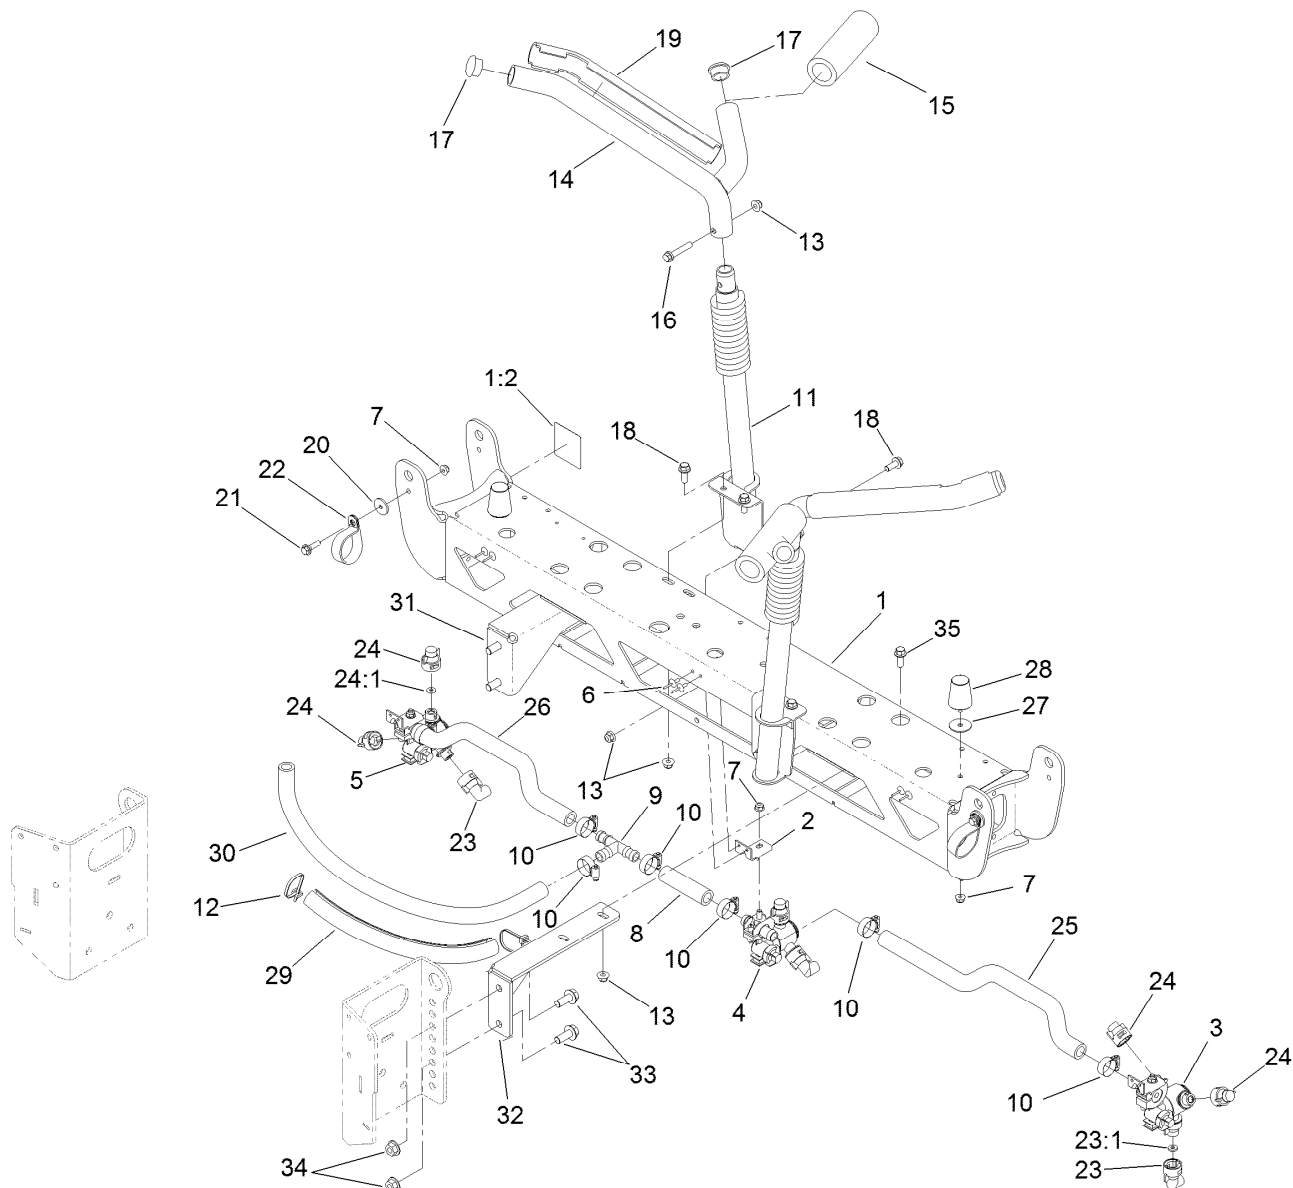

Center Boom Mount Assembly

Ref.	Part Number	Qty.	Description
1	121-5094	1	Frame ASM
1:2	120-0617	2	Decal-Warning, Pinch, Crush
2	107-8775	3	Bracket-Mount, Nozzle
3	108-3725	1	LH Single Body Turret ASM
4	108-3727	1	Double Turret Body ASM
5	108-3726	1	RH Single Body Turret ASM
6	3269-18	6	Rivet-Blind
7	104-8300	7	Nut-HF, NI
8	108-3717	1	Hose-Boom
9	108-3439	1	Tee
10	2412-129	7	Clamp-Hose
11	108-3472-03	2	Cradle-Lower
12	3290-378	2	Tie-Cable
13	104-8301	12	Nut-HF, NI
14	108-3476-03	2	Cradle-Upper
15	108-3457	2	Spacer
16	108-3742	2	Screw-HHF
17	108-3489	4	Cap-Tube
18	110-5052	6	Screw-HHF


Ref.	Part Number	Qty.	Description
19	108-3495	2	Cover-Slide
20	108-3743	2	Washer
21	108-3744	2	Screw-Shoulder
22	114-9566	2	Clamp-R
23	95-9186	3	Cap
23:1	40998	1	Seat-Gasket
24	95-9187	6	Cap-Blank
24:1	40998	1	Seat-Gasket
25	108-3735	1	Hose-Boom, Center (LH)
26	108-3718	1	Hose-Boom, Center (RH)
27	3256-68	2	Washer-Flat
28	110-5070	2	Bumper
29	127-3923RT02	1	Conduit
30	125-8072	1	Hose-Boom, Center
31	117-0652-03	1	Bracket-Boom Mount, LH
32	117-0651-03	1	Bracket-Boom Mount, RH
33	110-5057	4	Capscrew-HHF
34	108-3745	4	Nut-HHF, Whiz
35	110-5050	4	Screw-HHF

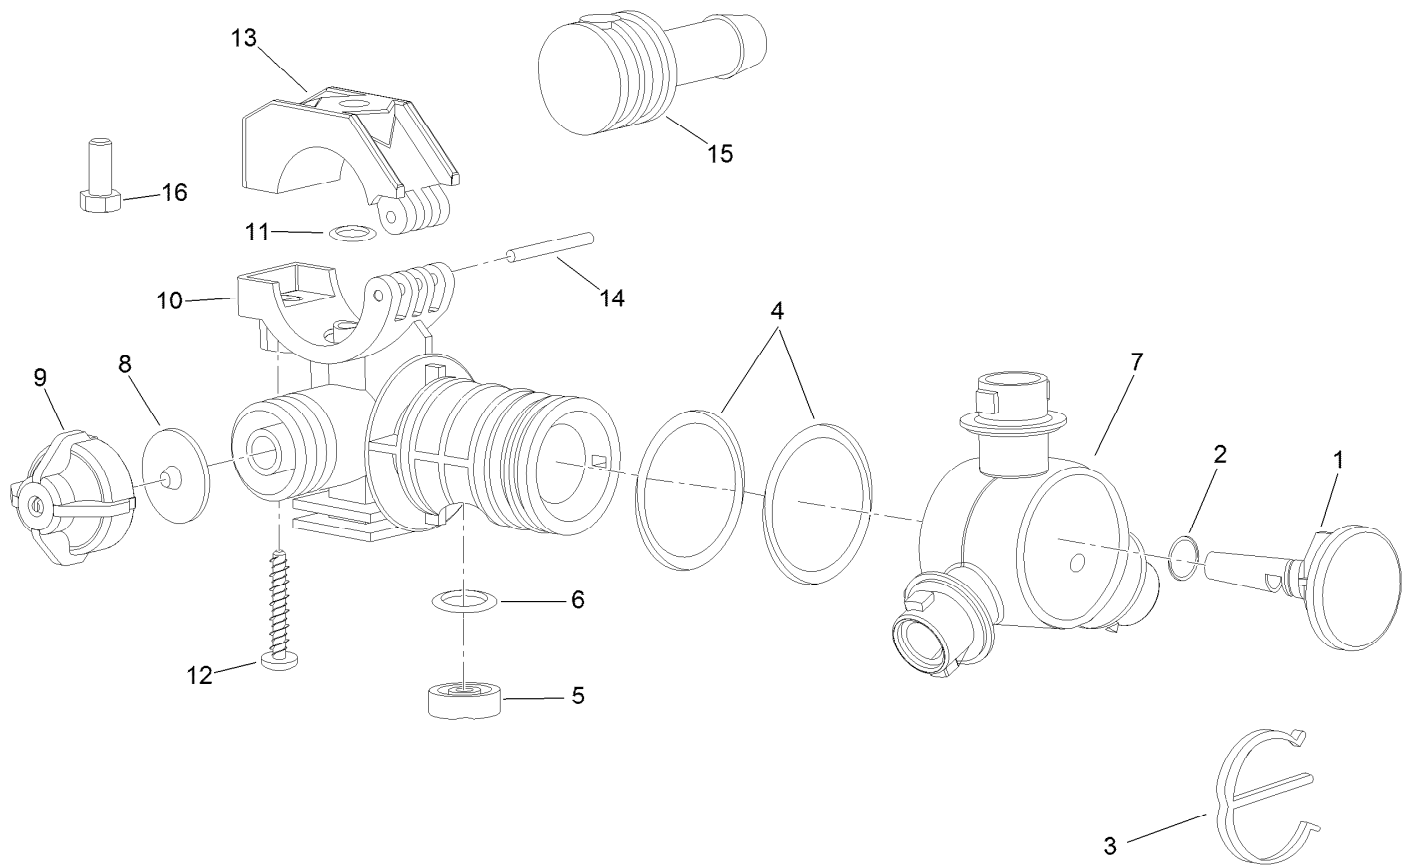

LH Single Turret Body Assembly No. 108-3725

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9201	1	Shank-Hose
16	322-3	1	Screw-HH

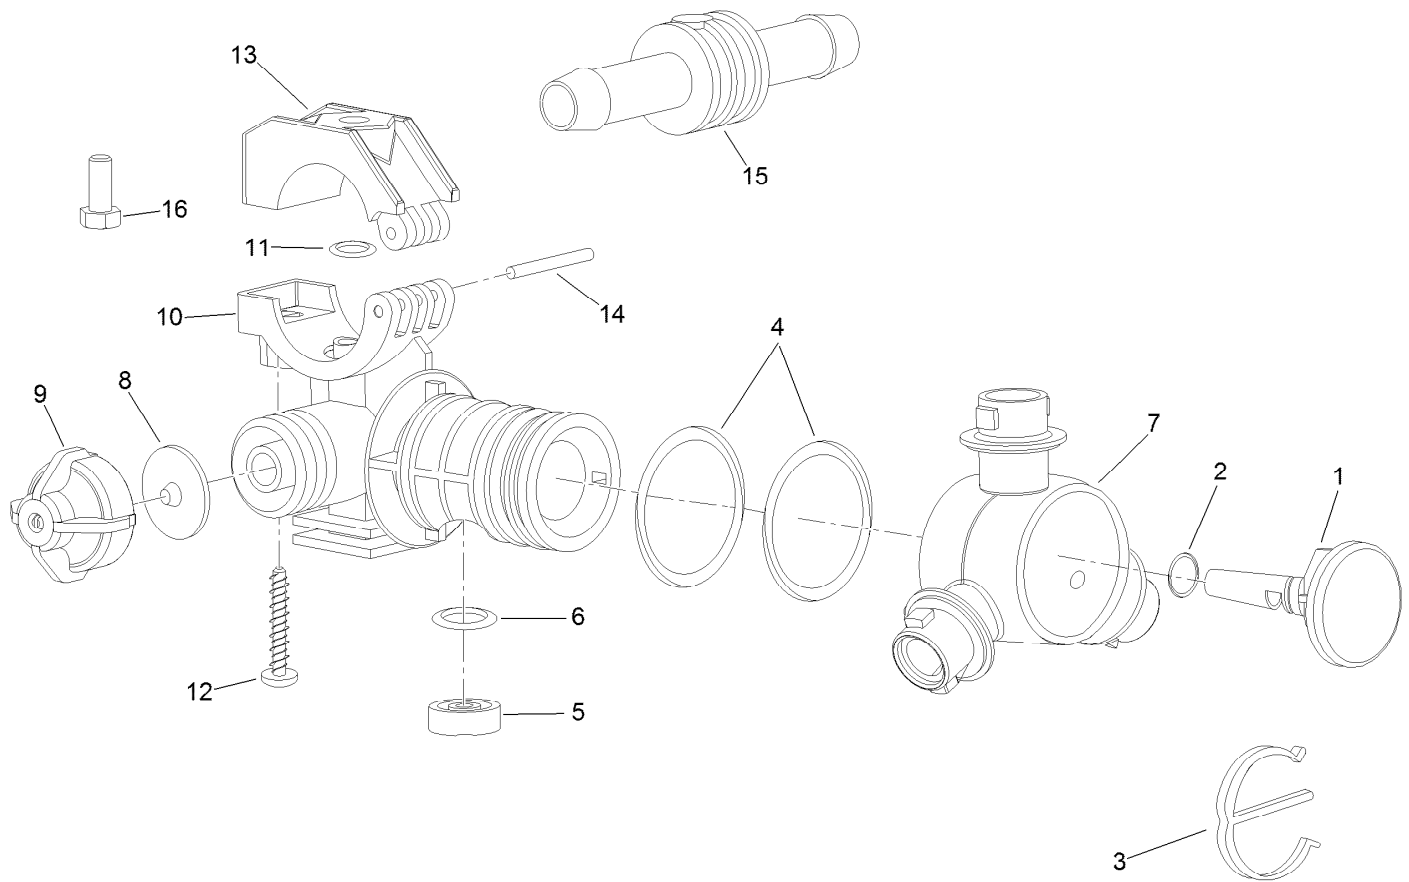

Double Turret Body Assembly No. 108-3727

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9202	1	Shank-Hose
16	322-3	1	Screw-HH

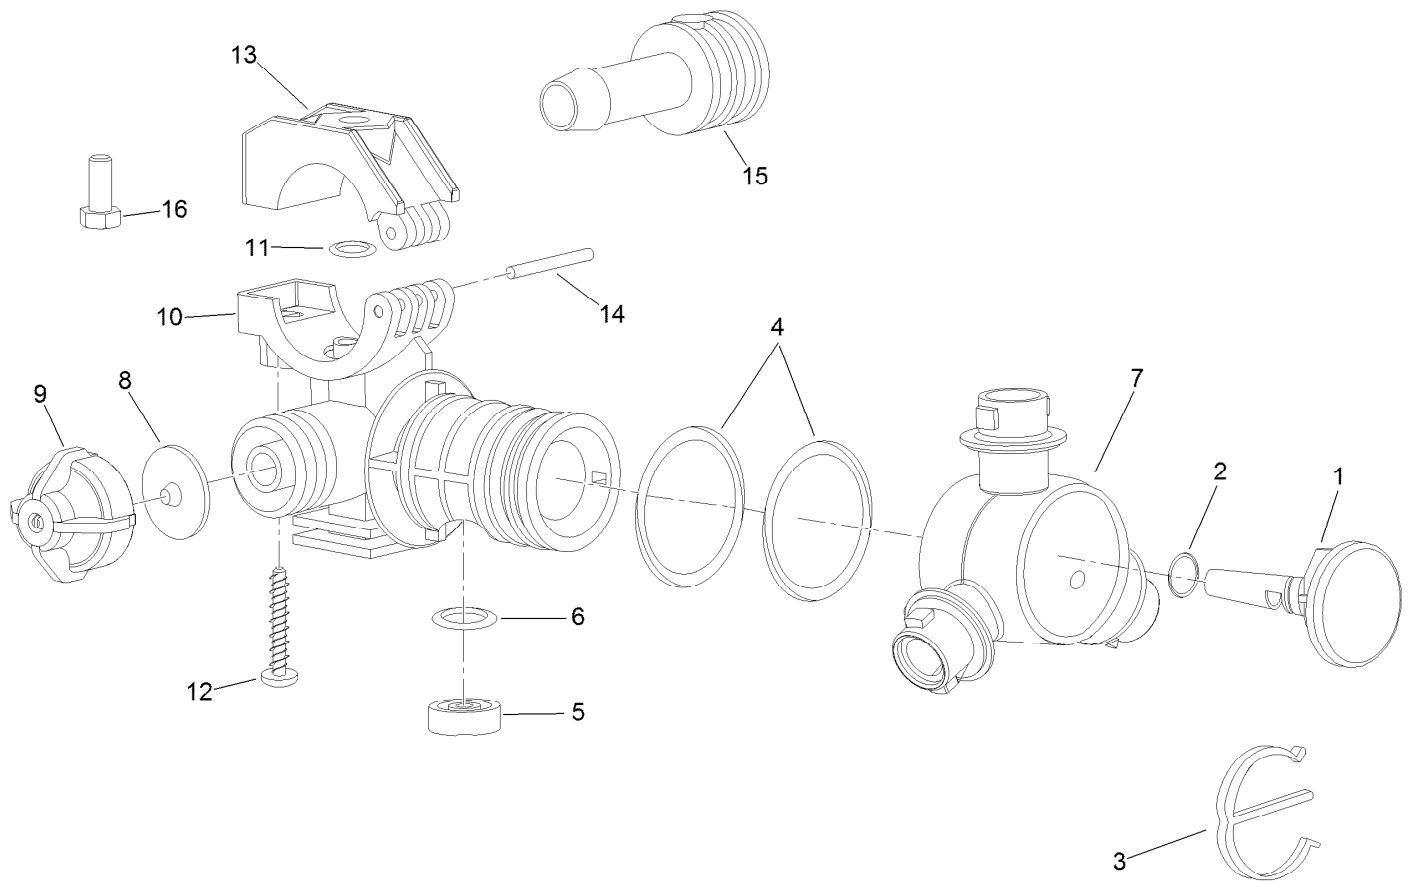

RH Single Body Turret Assembly No. 108-3726

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9201	1	Shank-Hose
16	322-3	1	Screw-HH

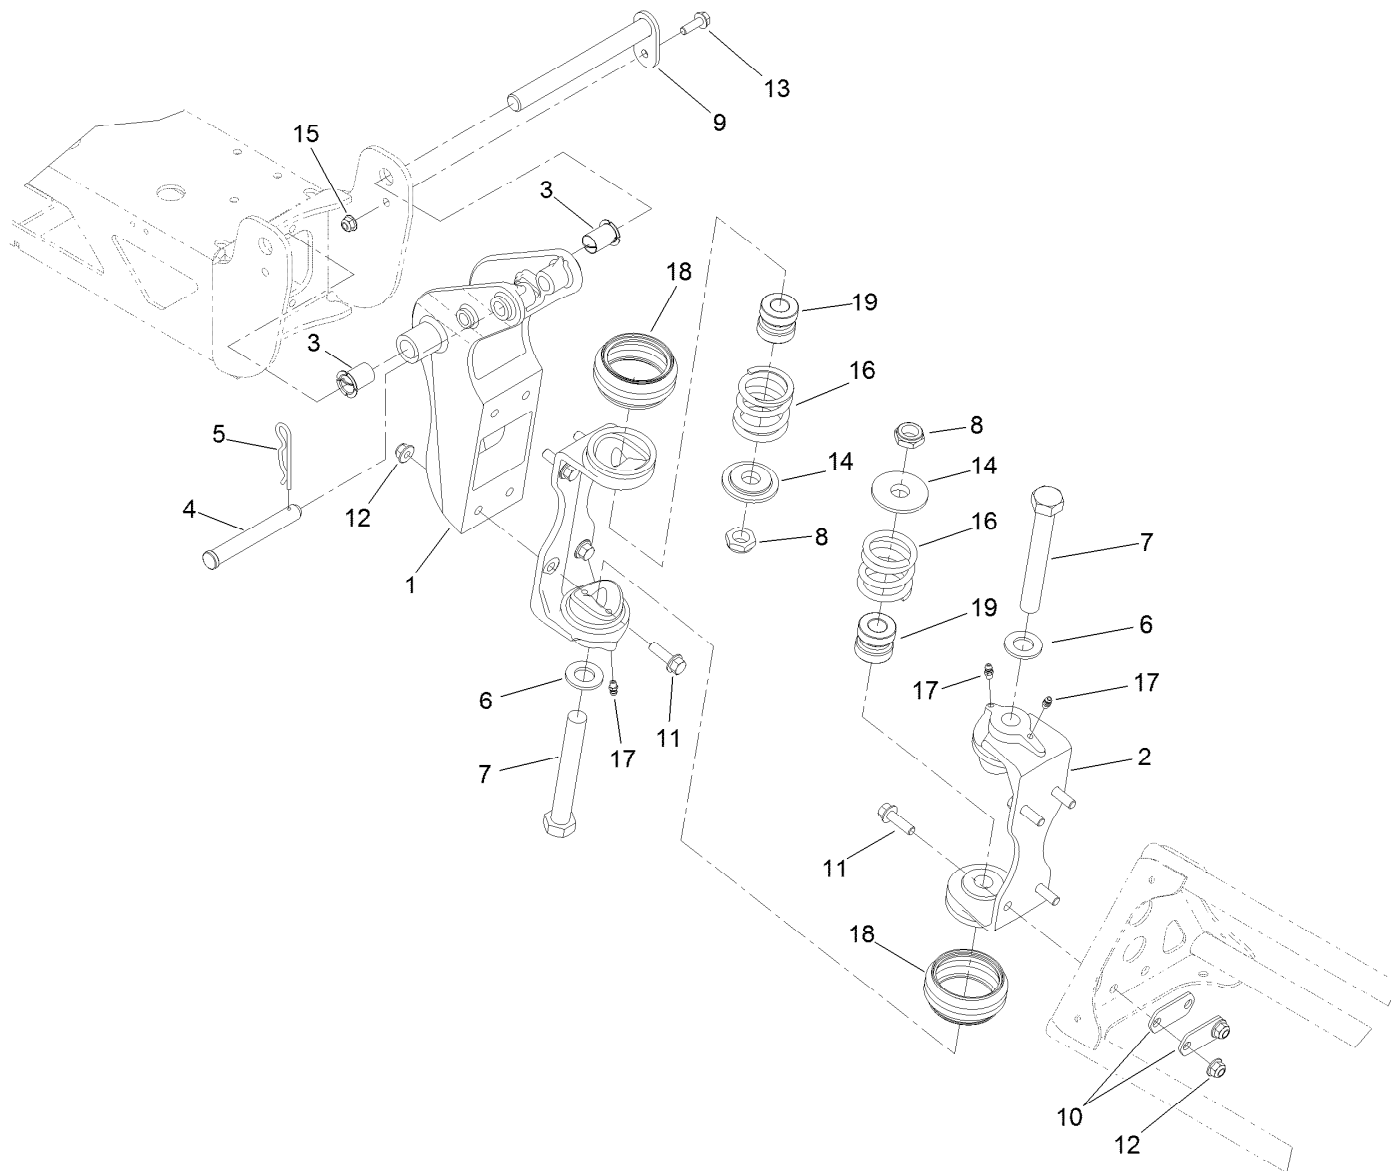

Boom Mounting Assembly

Ref.	Part Number	Qty.	Description
1	119-4993-03	2	Bracket-Pivot
2	108-3471-03	4	Hinge
3	100-8541	4	Bushing-A Arm
4	108-3436	2	Pin-Clevis
5	3290-468	2	Pin-Cotter
6	110-5054	4	Washer-Flat
7	108-3738	4	Screw-HH
8	3296-15	4	Nut-Lock, NI
9	108-3419	2	Pivot Pin ASM
10	108-3605	8	Plate-Backing

Ref.	Part Number	Qty.	Description
11	110-5050	16	Screw-HHF
12	104-8301	16	Nut-HF, NI
13	108-3748	2	Screw-HHF
14	108-3444	4	Retainer-Spring
15	104-8300	2	Nut-HF, NI
16	108-3440	4	Spring-Breakaway, Boom
17	302-5	8	Fitting-Grease
18	108-3459	4	Boot-Hinge
19	120-8541	4	Dampener-Hinge

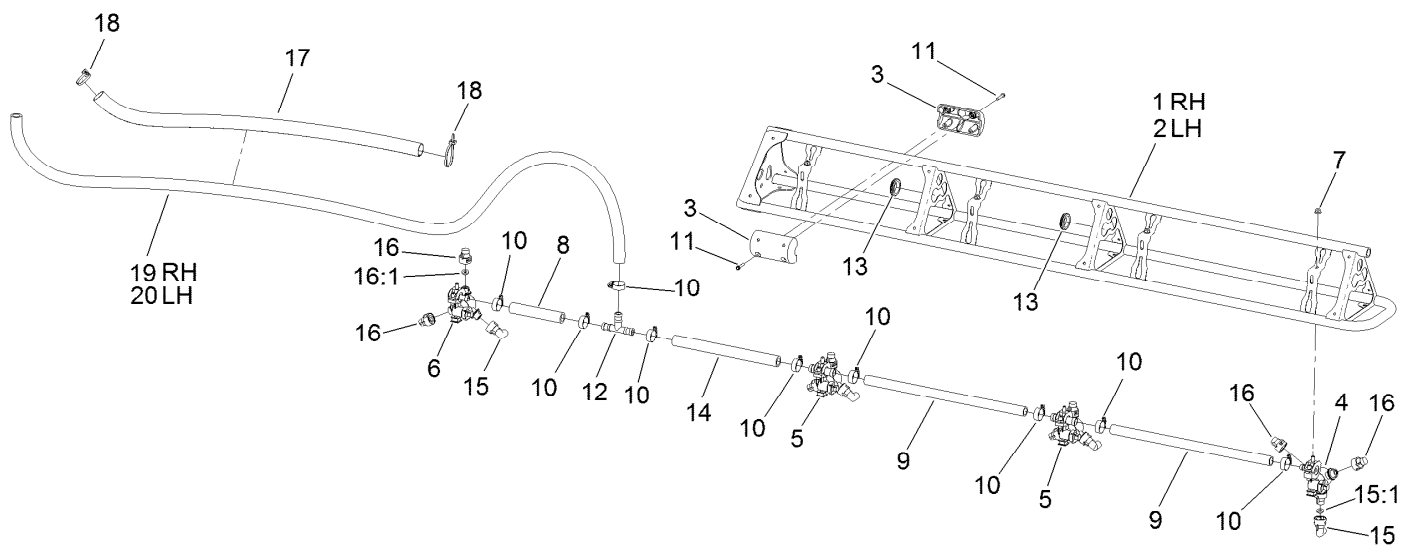

Left and Right Hand Boom Assembly

Ref.	Part Number	Qty.	Description
1	108-3524-03	1	Boom-RH
2	108-3525-03	1	Boom-LH
3	119-9368	4	Block Slide
4	108-3725	2	LH Single Body Turret ASM
5	108-3727	4	Double Turret Body ASM
6	108-3726	2	RH Single Body Turret ASM
7	104-8300	8	Nut-HF, NI
8	108-3728	2	Hose-Boom
9	40506	4	Hose-Jumper
10	2412-129	18	Clamp-Hose
11	119-9369	8	Screw-HHF

Ref.	Part Number	Qty.	Description
12	108-3439	2	Tee
13	240-3	4	Grommet-Rubber
14	108-3721	2	Hose-Boom
15	95-9186	8	Cap
15:1	40998	1	Seat-Gasket
16	95-9187	16	Cap-Blank
16:1	40998	1	Seat-Gasket
17	107-8650	2	Conduit-Convolutated
18	3290-378	6	Tie-Cable
19	125-8070	1	Hose-Boom
20	125-8046	1	Hose-Supply, Hose Reel

Attachments and Accessories

For 41240 Multi Pro WM Turf Sprayer

Product Name	Model/Part
Premium ATF (Drum).....	108-1185
Premium ATF (Pail)	108-1186
Premium All Purpose Grease (Tube)	108-1190
License Plate Kit.....	120-8506
Covered Boom Spring Upgrade Kit.....	120-8508
Premium Engine Oil 10w30 (55 Gallon Drum)	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Foam Marker Finishing Kit.....	125-8121
Fan Kit (EFI, Gas Engine Only).....	127-9719
Lance Suction Assembly	127-9826
Sonic Boom Finish Kit.....	130-8228
Foam Marker Finishing Kit.....	136-0459
Rear Work Light Kit.....	41010
Single Nozzle Kit.....	41023
Hand Spray Wand Kit	41131
Pro Foam Concentrate (4 x 1 Gallon)	41157
EU Compliance Kit.....	41204
Jackstand Kit	41216
Ultra Sonic Boom Leveling Kit	41219
Tank Clean Rinse Kit	41241
Chemical Pre-Mix Kit	41242
Electric Hose Reel Kit	41243
Foam Marker Kit	41249
Drift Reduction Boom Shroud Kit	41602
Pro-Foam.....	41607

Notes:

Notes:

Notes:



Count on it.