



Count on it.

Parts Catalog

21in Heavy-Duty Recycler®/Rear Bagger Lawn Mower

Model No. 22296—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Housing Assembly 4

Grass Bag Assembly 6

Engine and Blade Assembly 8

Height-of-Cut and Wheel Assembly 10


Transmission Assembly 12

Transmission Assembly No. 131-0859 14

Handle and Control Assembly 16

Attachments and Accessories 18


Housing Assembly

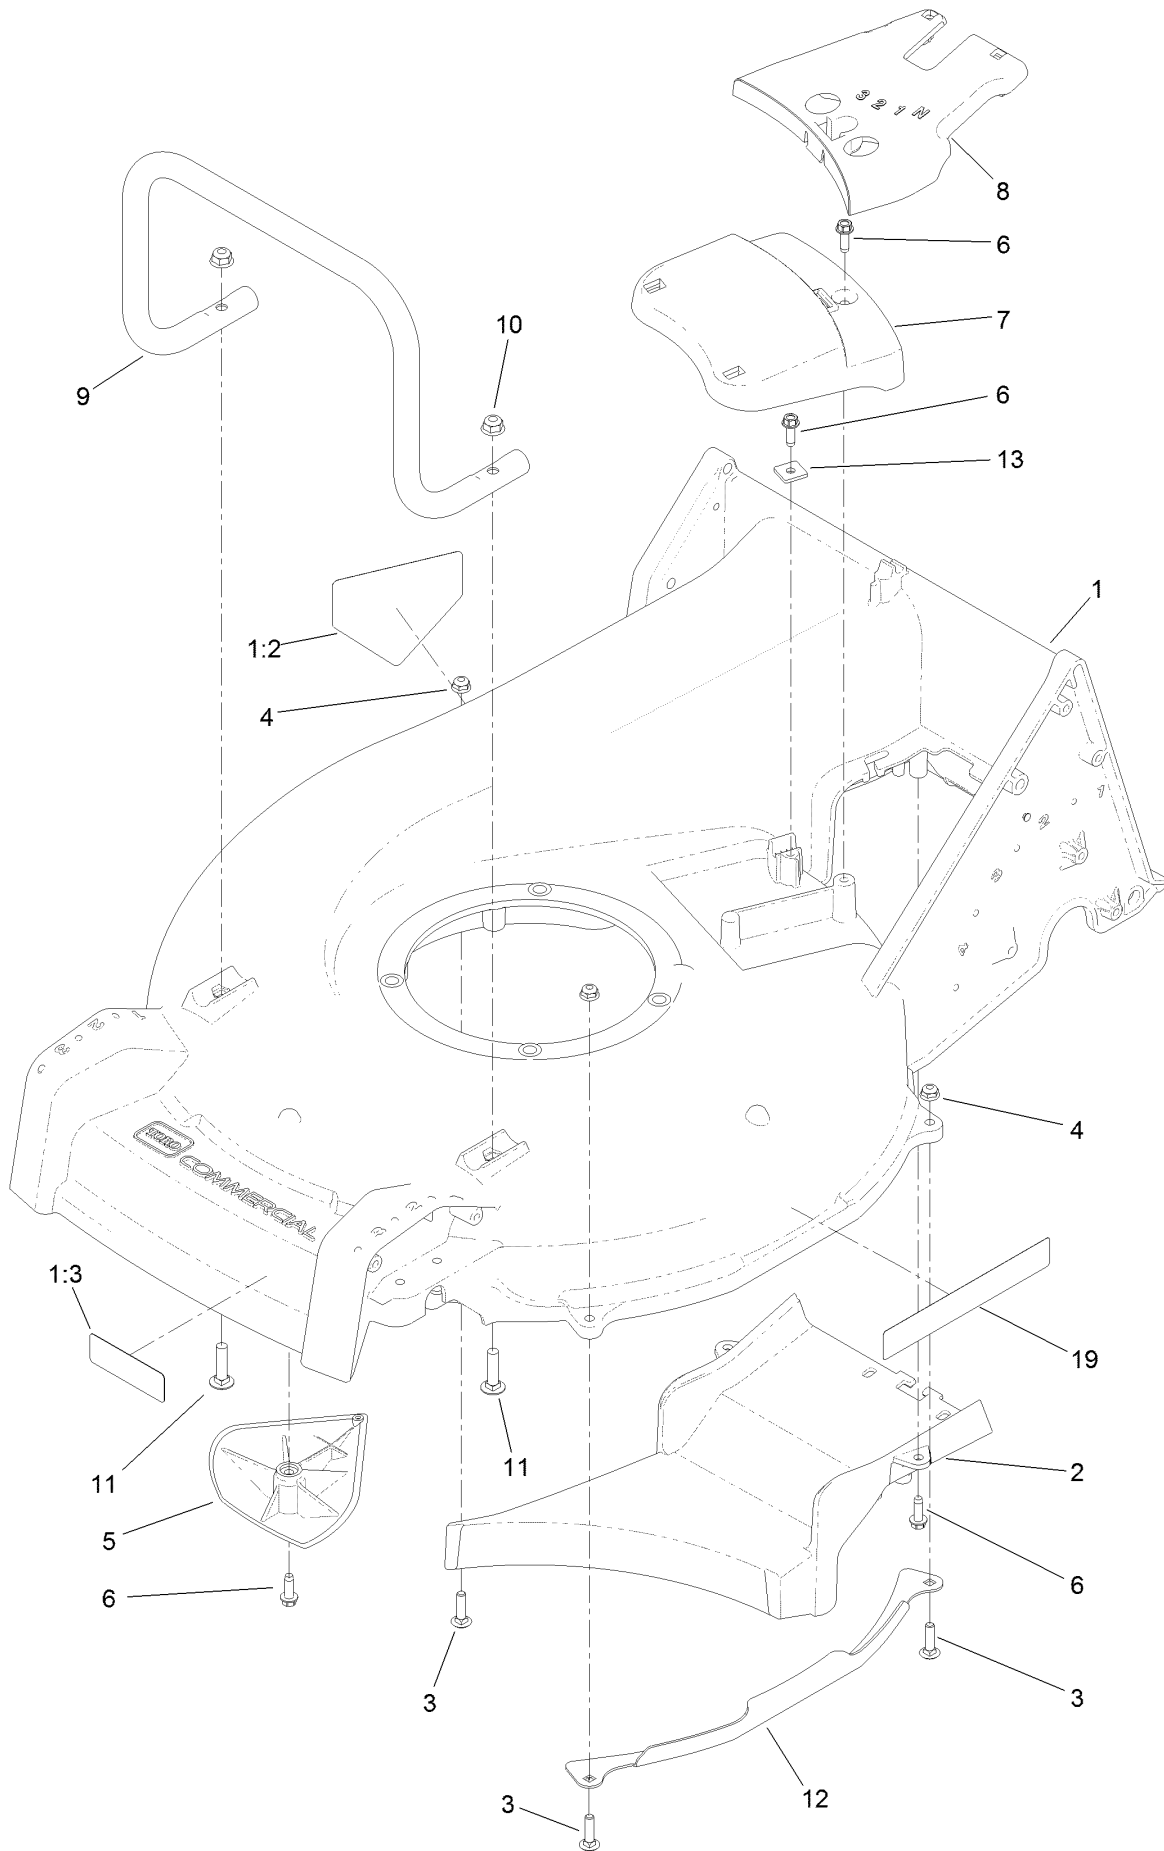

Housing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-8400	1	Housing ASM	7	125-5038	1	Cover-Belt, Front
1:2	94-8072	1	Decal-Danger	8	125-5039	1	Cover-Belt, Rear
1:3	130-9670	1	Decal-Warning, Blade	9	125-1003-03	1	Guard-Engine
2	125-1002-01	1	Floor-Chute	10	104-8300	2	Nut-HF, NI
3	3229-2	4	Screw-CARR	11	3230-3	2	Screw-CARR
4	104-7201	4	Nut-HF, NI	12	125-1047-03	2	Guard-Side, Deck
5	125-5041	2	Kicker	13	125-8387	1	Clamp-Cable
6	49-2040	6	Screw-HWHTF	19	119-2368	2	Decal-Recycler


Grass Bag Assembly

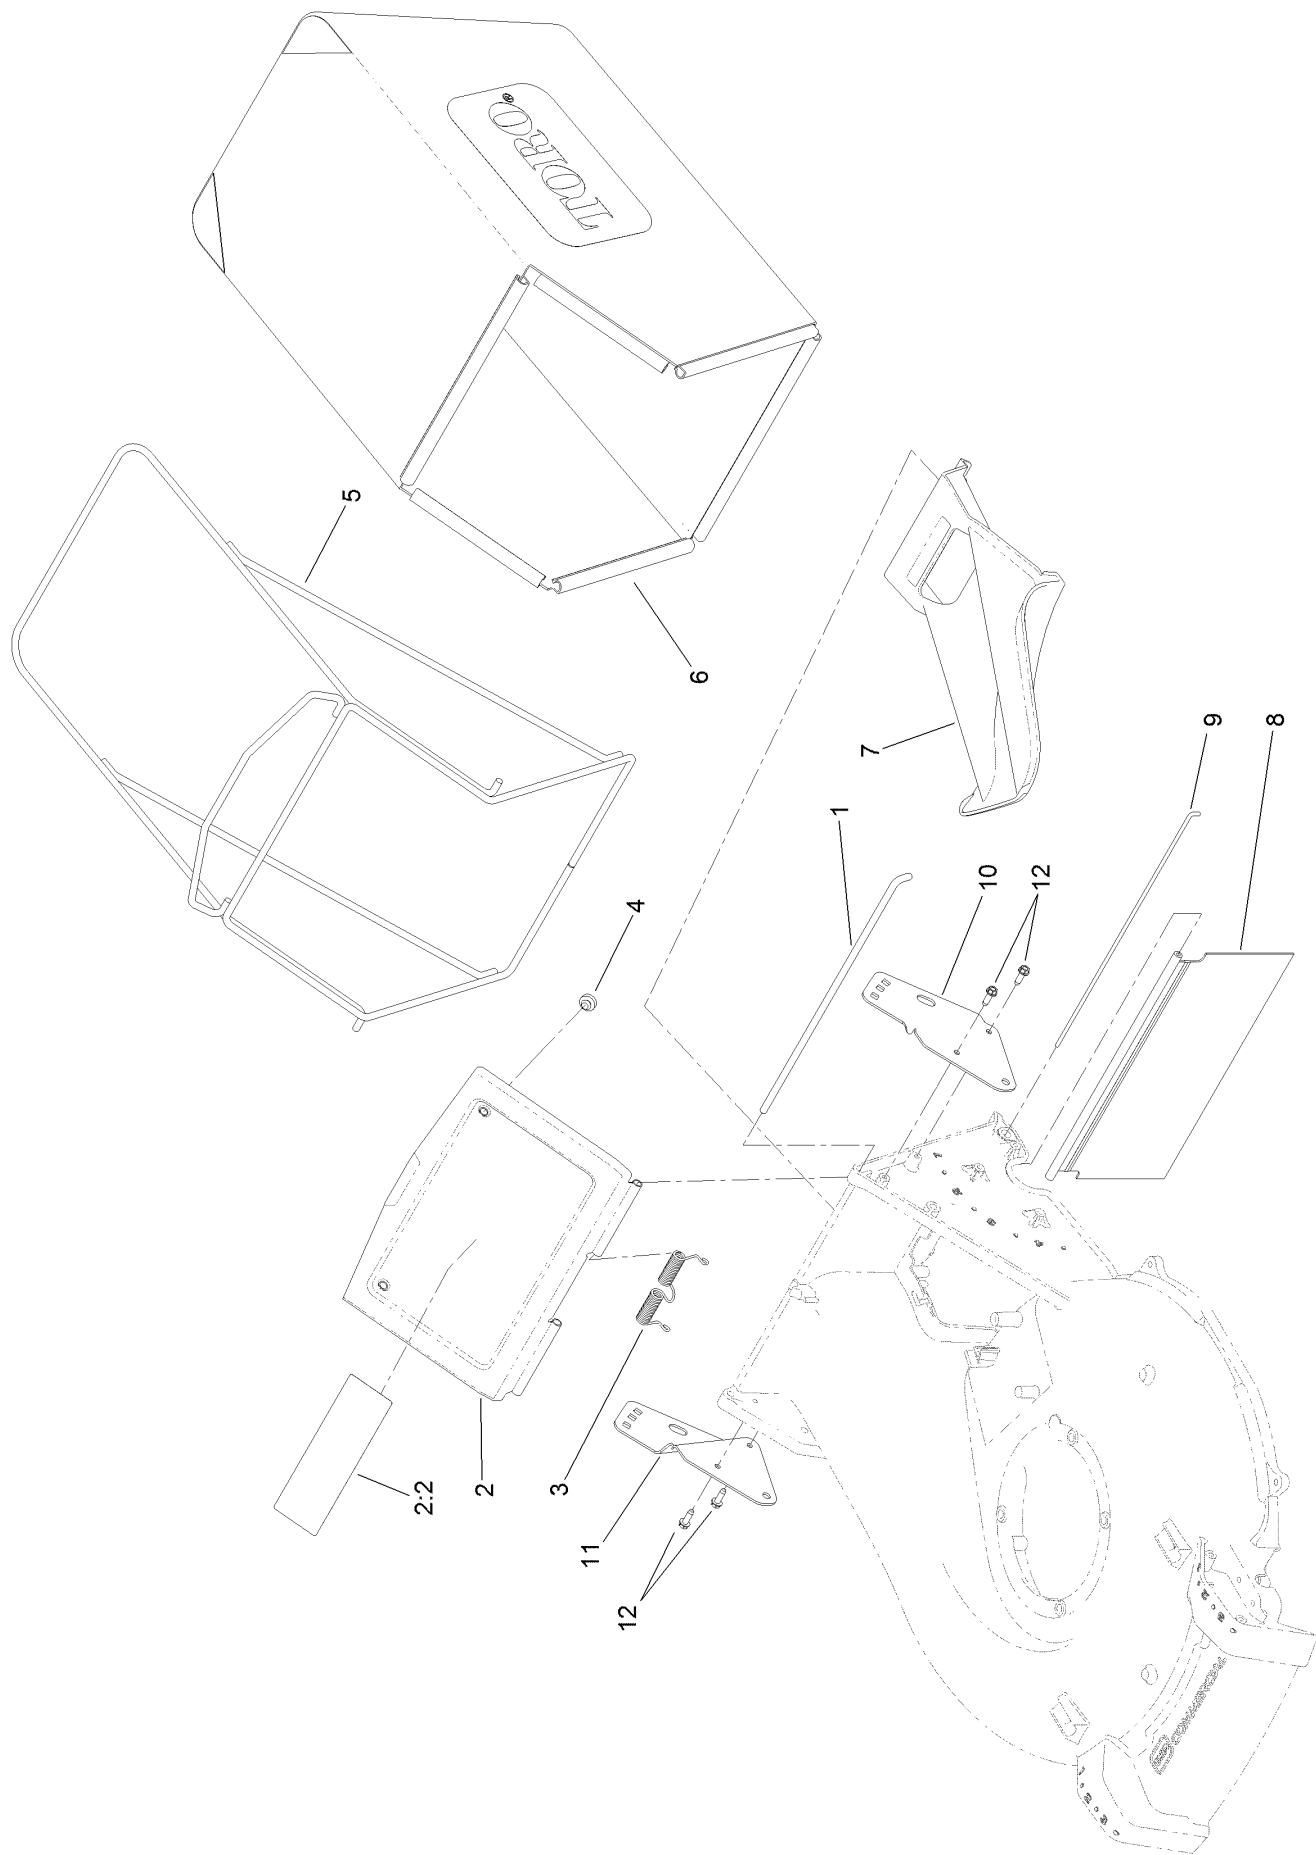

Grass Bag Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1017	1	Rod-Door, Bag	7	125-1008	1	Plug-Mulch
2	125-8402	1	Bag Door ASM	8	125-1007	1	Shield-Trailing
2:2	116-7583	1	Decal-Warning	9	125-8413	1	Rod-Shield, Trailing
3	125-1019	1	Spring-Torsion	10	125-1013-03	1	Bracket-Mount, LH Handle
4	1-513658	2	Bumper	11	125-1014-03	1	Bracket-Mount, RH Handle
5	121-1399-03	1	Frame-Bag	12	49-2040	4	Screw-HWHTF
6	125-1030	1	Bag-Grass				


Engine and Blade Assembly

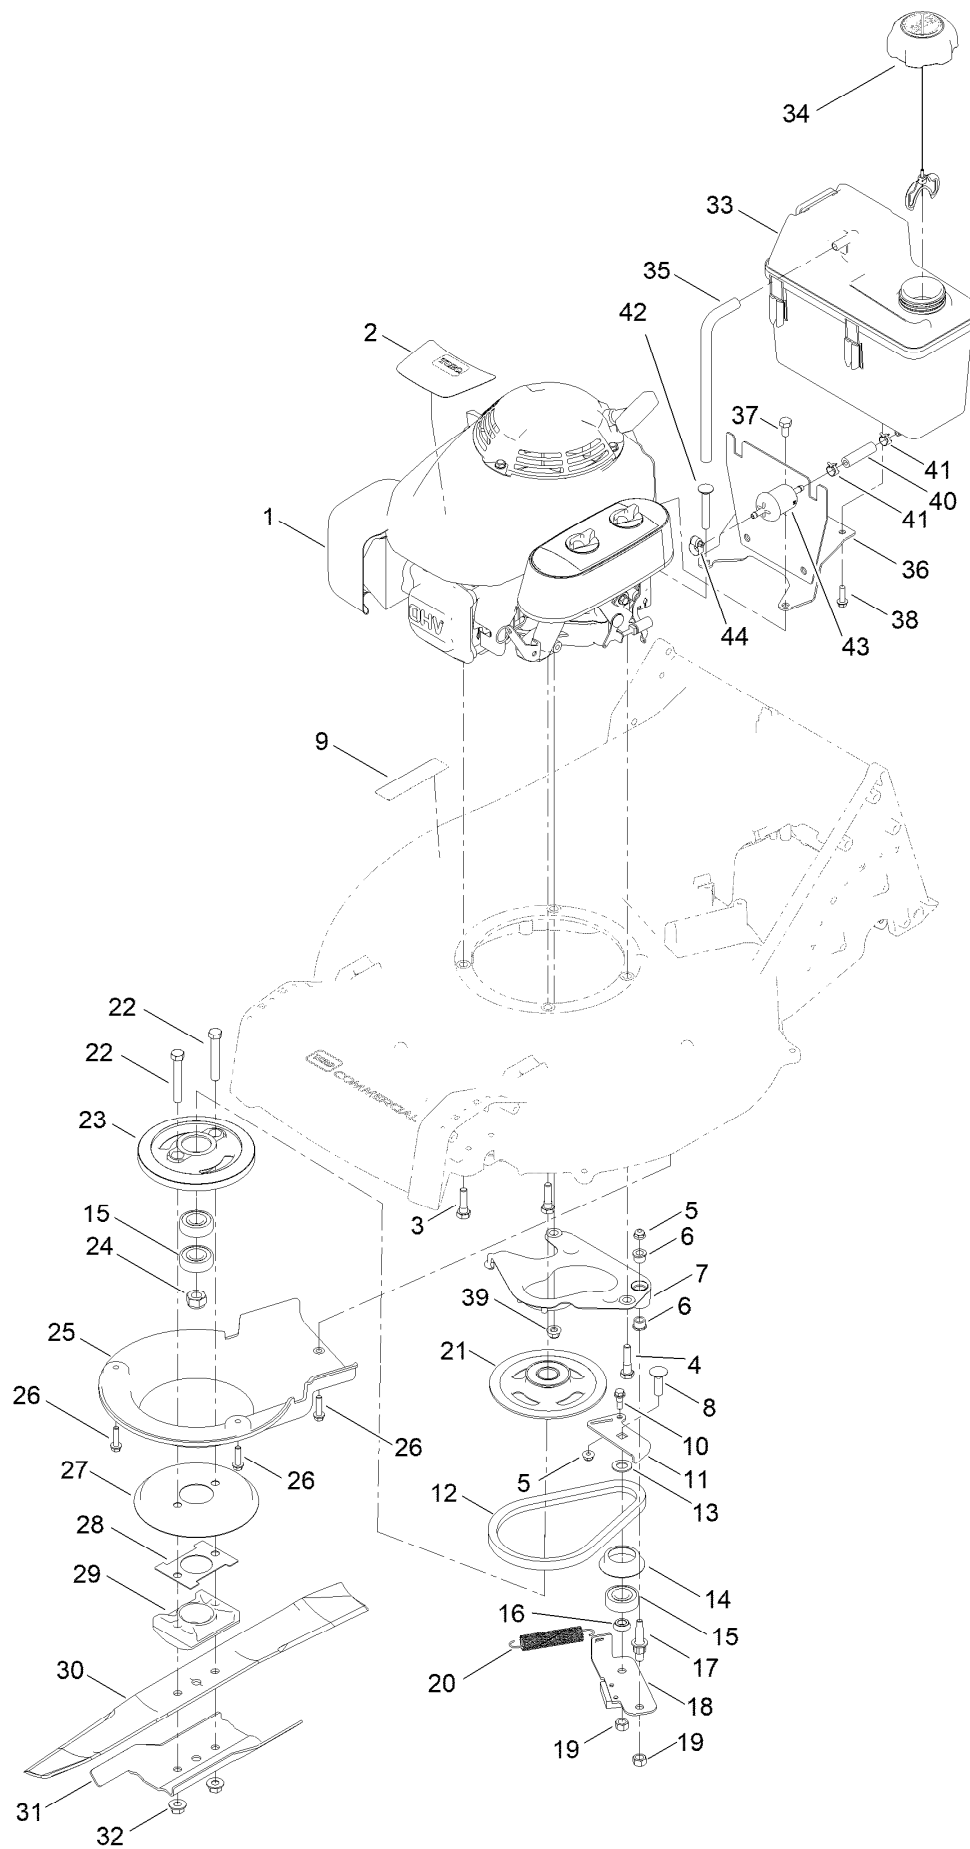

Engine and Blade Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1095	1	Engine-Honda, Gxv160 Gas	23	107-0754	1	Drum
2	125-8405	1	Decal-Engine, Honda	24	108-9342	1	Nut-Hex
3	125-1074	2	Screw-HH	25	125-1006	1	Cover
4	103-2678	1	Screw-Shoulder	26	32144-86	3	Screw-HWHTF
5	104-7201	2	Nut-HF, NI	27	108-3787	1	Disc
6	130-2377	2	Bushing-Flange	28	130-6404-01	1	Spacer-Driver, Blade
7	130-2375	1	Plate-Anchor	29	107-7487	1	Support-Blade
8	3231-25	1	Bolt-CARR	30	108-3762-03	1	Blade-Recycling
9	117-2718	1	Decal-Arrester, Spark	31	125-1069-03	1	Accelerator-Blade
10	42-3560	1	Bolt-Shoulder	32	127-6852	2	Nut-Flange, Lock
11	125-8446	1	Plate-Guide, BBC	33	114-0280	1	Tank-Fuel
12	110-1790	1	Belt	34	115-7788	1	Cap-Fuel
13	605256	1	Spacer	35	115-0962	1	Hose-Vent, Canister
14	108-3790	1	Retainer-Belt	36	119-7837-03	1	Mount-Tank
15	38-7820	3	Bearing-Ball	37	3210-2	1	Screw-HH
16	107-0758	1	Spacer-Bearing	38	46-8091	2	Screw-HWH
17	107-0759	1	Bolt-Shoulder	39	104-8300	1	Nut-HF, NI
18	125-1063	1	Plate-Brake	40	119-7856	1	Hose-Fuel
19	125-5069	2	Nut-Hex	41	2412-98	2	Clamp-Hose
20	108-3792	1	Spring-Tension, Brake	42	3230-7	1	Bolt-CARR
21	117-5970	1	Pulley	43	139-0717	1	Filter-Fuel
22	3211-42	2	Screw-HH	44	2412-108	1	Clamp-Worm


Height-of-Cut and Wheel Assembly

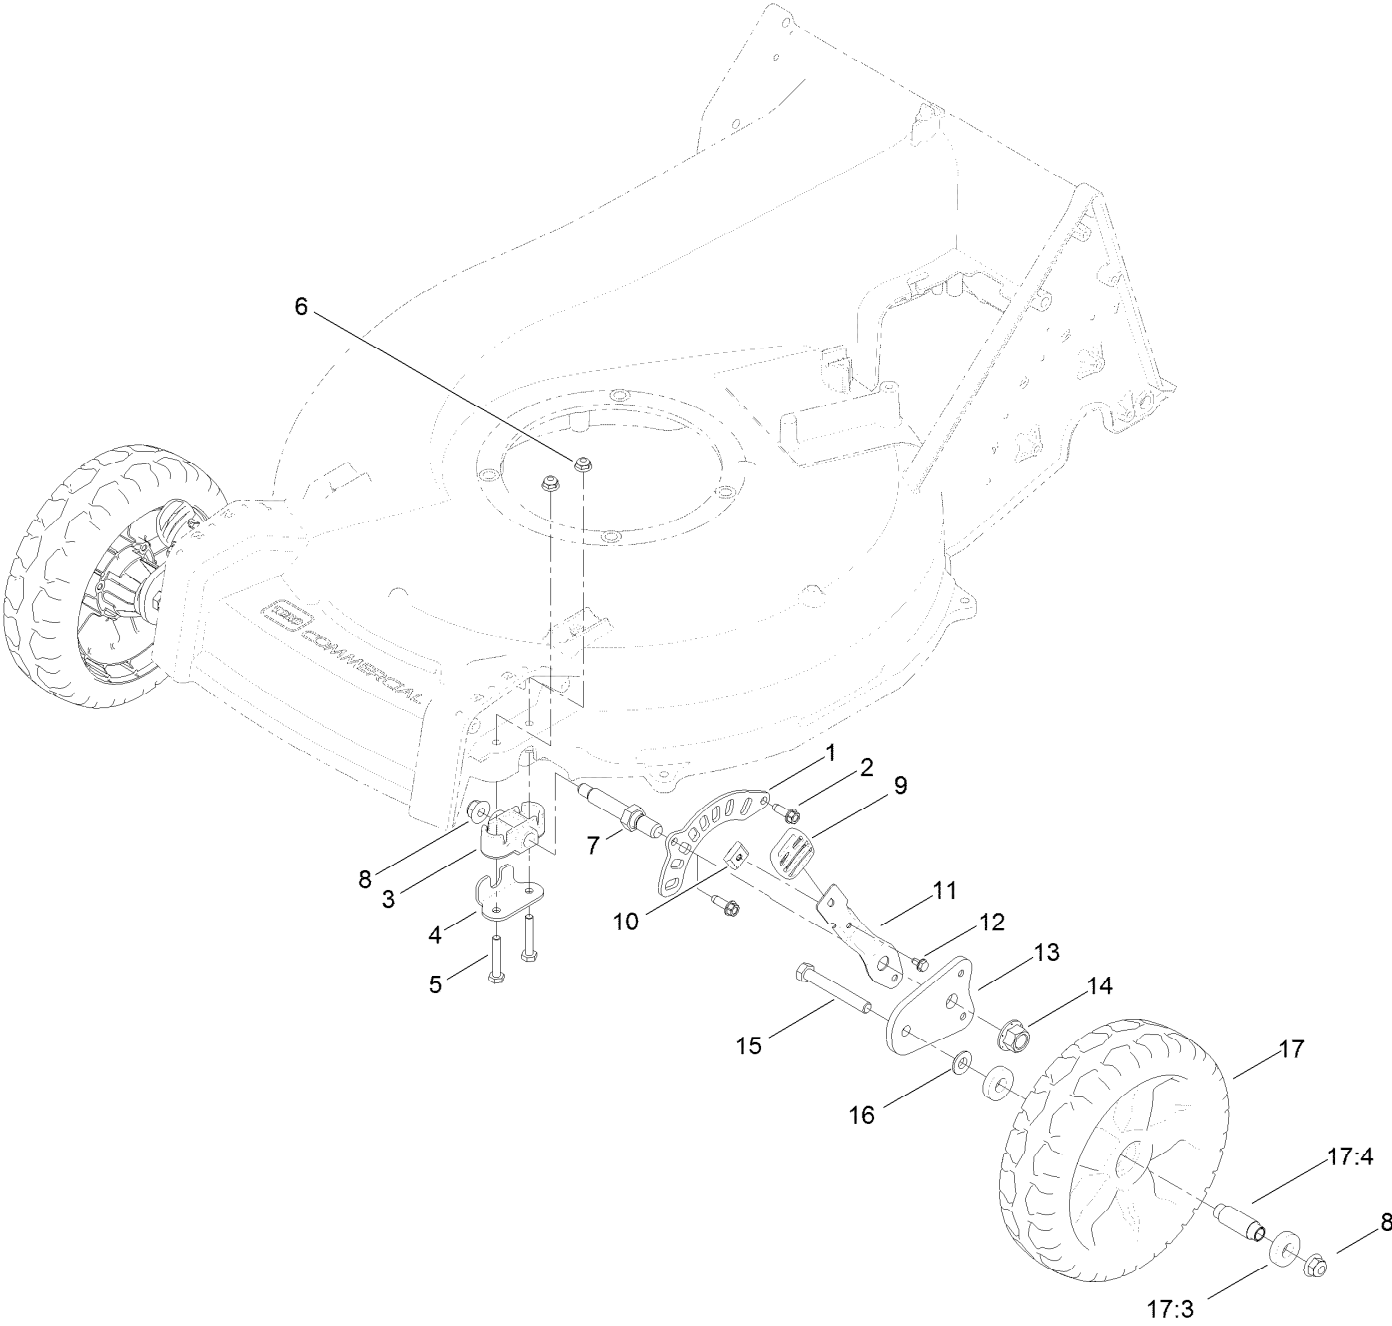

Height-of-Cut and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-1439	2	Plate-HOC, Front	10	130-9690	2	Key-Arm, Spring
2	49-2040	4	Screw-HWHTF	11	121-1431-03	2	Arm-Spring
3	121-1427	2	Bushing-Axle, Front HOC	12	104-2065	2	Screw-HWH
4	121-1442	2	Retainer-Bushing, Front Axle	13	130-6420	2	Arm-Pivot, Front
5	321-9	4	Screw-HH	14	99-5107	2	Nut-Lock
6	104-7201	4	Nut-HF, NI	15	323-13	2	Screw-HH
7	121-1428	2	Axle-Wheel	16	74-1671	2	Spacer-Cover, Wheel
8	104-8301	4	Nut-HF, NI	17	125-1080	2	Wheel
9	125-1093	2	Knob-Lever, HOC	17:3	52-2450	2	Bearing-Wheel
				17:4	125-1077	1	Spacer

Transmission Assembly

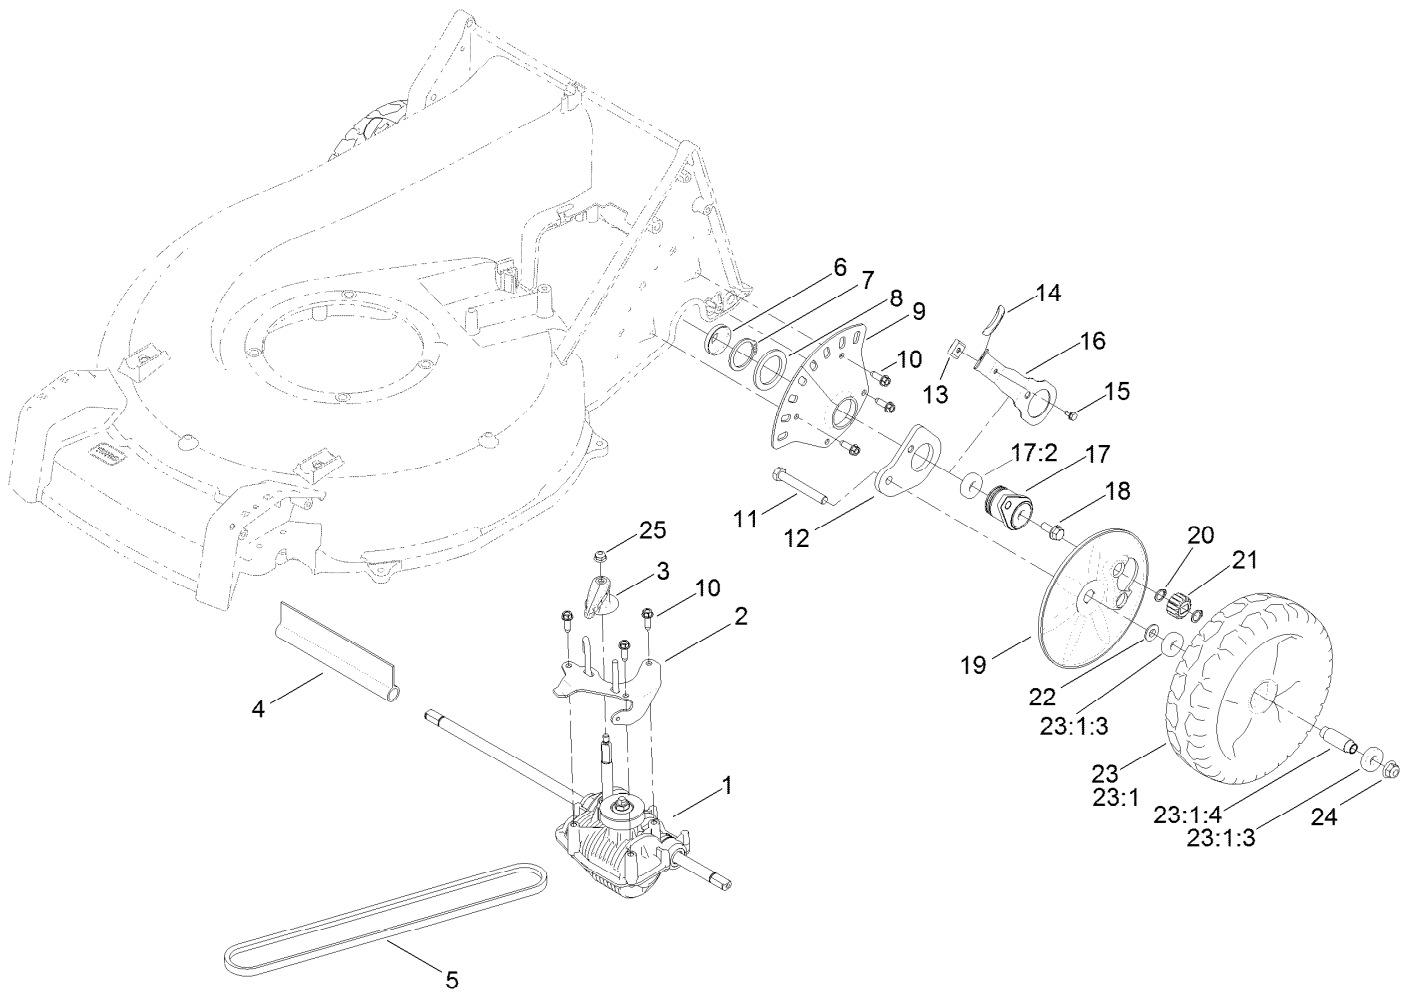


Transmission Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-0859	1	Transmission-HD	16	121-1448-03	2	Arm-Spring, Rear
2	125-5090-03	1	Guide-Belt	17	121-1424	2	Retainer ASM
3	125-5040	1	Lever-Shift	17:2	52-2450	4	Bearing-Wheel
4	130-9681	1	Cover-Shaft, Transmission	18	130-9692	2	Screw-HWH
5	125-1011	1	Belt-V	19	125-1082	2	Cover-Wheel
6	127-6848	2	Cover-Bearing	20	32151-61	4	Ring-Retaining
7	32151-10	2	Ring-Retaining	21	110-9417	2	Gear-Pinion, 15T
8	98-1452	2	Washer-Thrust	22	74-1671	2	Spacer-Cover, Wheel
9	130-6422	2	Plate-HOC, Rear	23	125-1081	2	Wheel ASM
10	49-2040	9	Screw-HWHTF	23:1		1	Wheel ●
11	323-13	2	Screw-HH	23:1:3	52-2450	2	Bearing-Wheel
12	130-6421	2	Arm-Pivot, Rear	23:1:4	125-1077	1	Spacer
13	130-9690	2	Key-Arm, Spring	24	104-8301	2	Nut-HF, NI
14	125-1093	2	Knob-Lever, HOC	25	104-7201	1	Nut-HF, NI
15	104-2065	2	Screw-HWH				

● Not serviced separately


Transmission Assembly No. 131-0859

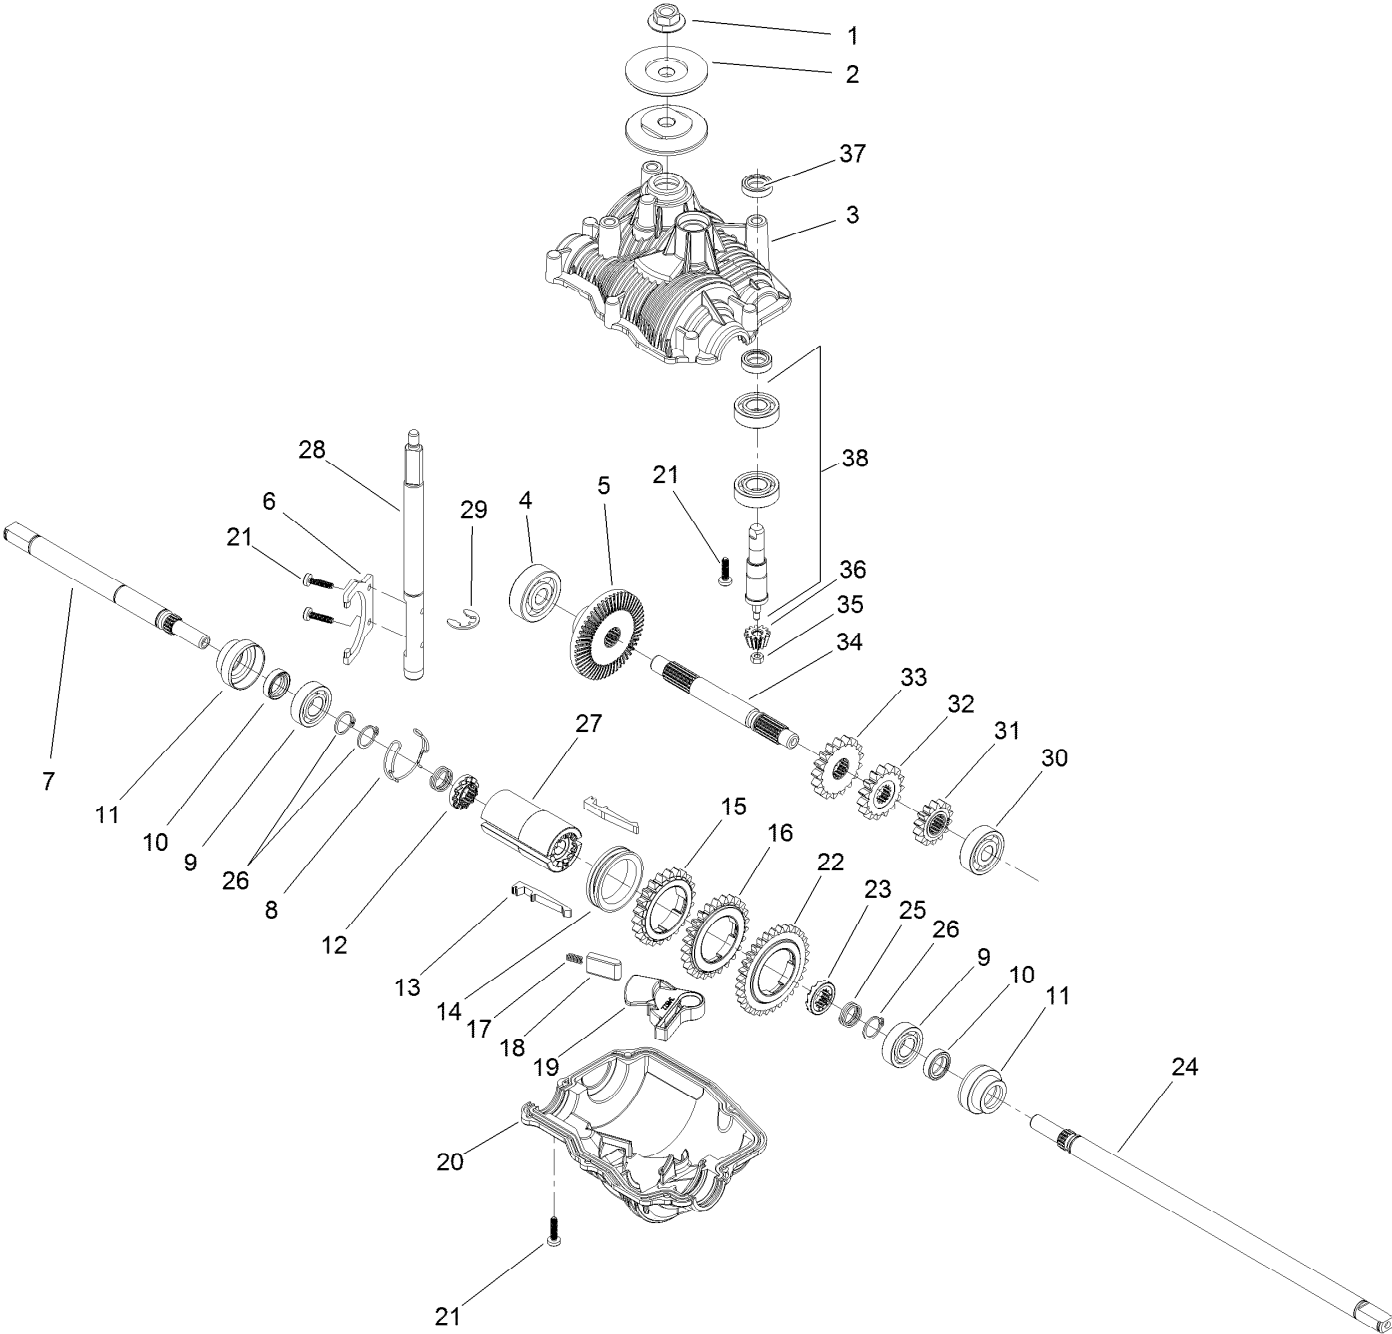

Transmission Assembly No. 131-0859 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-2301	1	Nut-Flange	20	130-2337	1	Case-Lower, Transmission
2	130-2326	2	Flange-Pulley	21	130-2302	10	Screw
3	130-2336	1	Case-Upper, Transmission	22	130-2317	1	Gear-Output, 32 Tooth
4	130-2318	1	Bearing-Ball	23	130-2335	1	Clutch-Dog, RH
5	130-2311	1	Gear-Bevel, 53 Tooth	24	130-2309	1	Shaft-Output, Long
6	130-2327	1	Fork-Shift	25	130-2323	2	Spring-Compression, Clutch
7	130-2308	1	Shaft-Output, Short	26	130-2305	3	Ring-Retaining
8	130-2322	1	Spring-Retaining	27	130-2330	1	Hub-Gear, Output
9	130-9708	2	Bearing-Ball	28	130-2306	1	Shaft-Shift
10	130-2325	2	Seal	29	130-2304	1	Ring-Retaining
11	130-2333	2	Bushing-Shaft, Output	30	130-2319	1	Bearing-Ball
12	130-2334	1	Clutch-Dog	31	130-2314	1	Gear-Intermediate, 14 Tooth
13	130-2328	2	Key-Shift	32	130-2313	1	Gear-Intermediate, 15 Tooth
14	130-2329	1	Ring-Shift	33	130-2312	1	Gear-Intermediate, 17 Tooth
15	130-2315	1	Gear-Output, 22 Tooth	34	130-2307	1	Shaft-Intermediate
16	130-2316	1	Gear-Output, 25 Tooth	35	130-2303	1	Nut-Shaft, Input
17	130-2321	1	Spring-Indexing, Shifter	36	130-2310	1	Gear-Bevel, 12 Tooth
18	130-2332	1	Pin-Indexing, Shifter	37	130-2324	2	Seal
19	130-2331	1	Lever-Indexing, Shifter	38	130-2300	1	Shaft-Input

Handle and Control Assembly

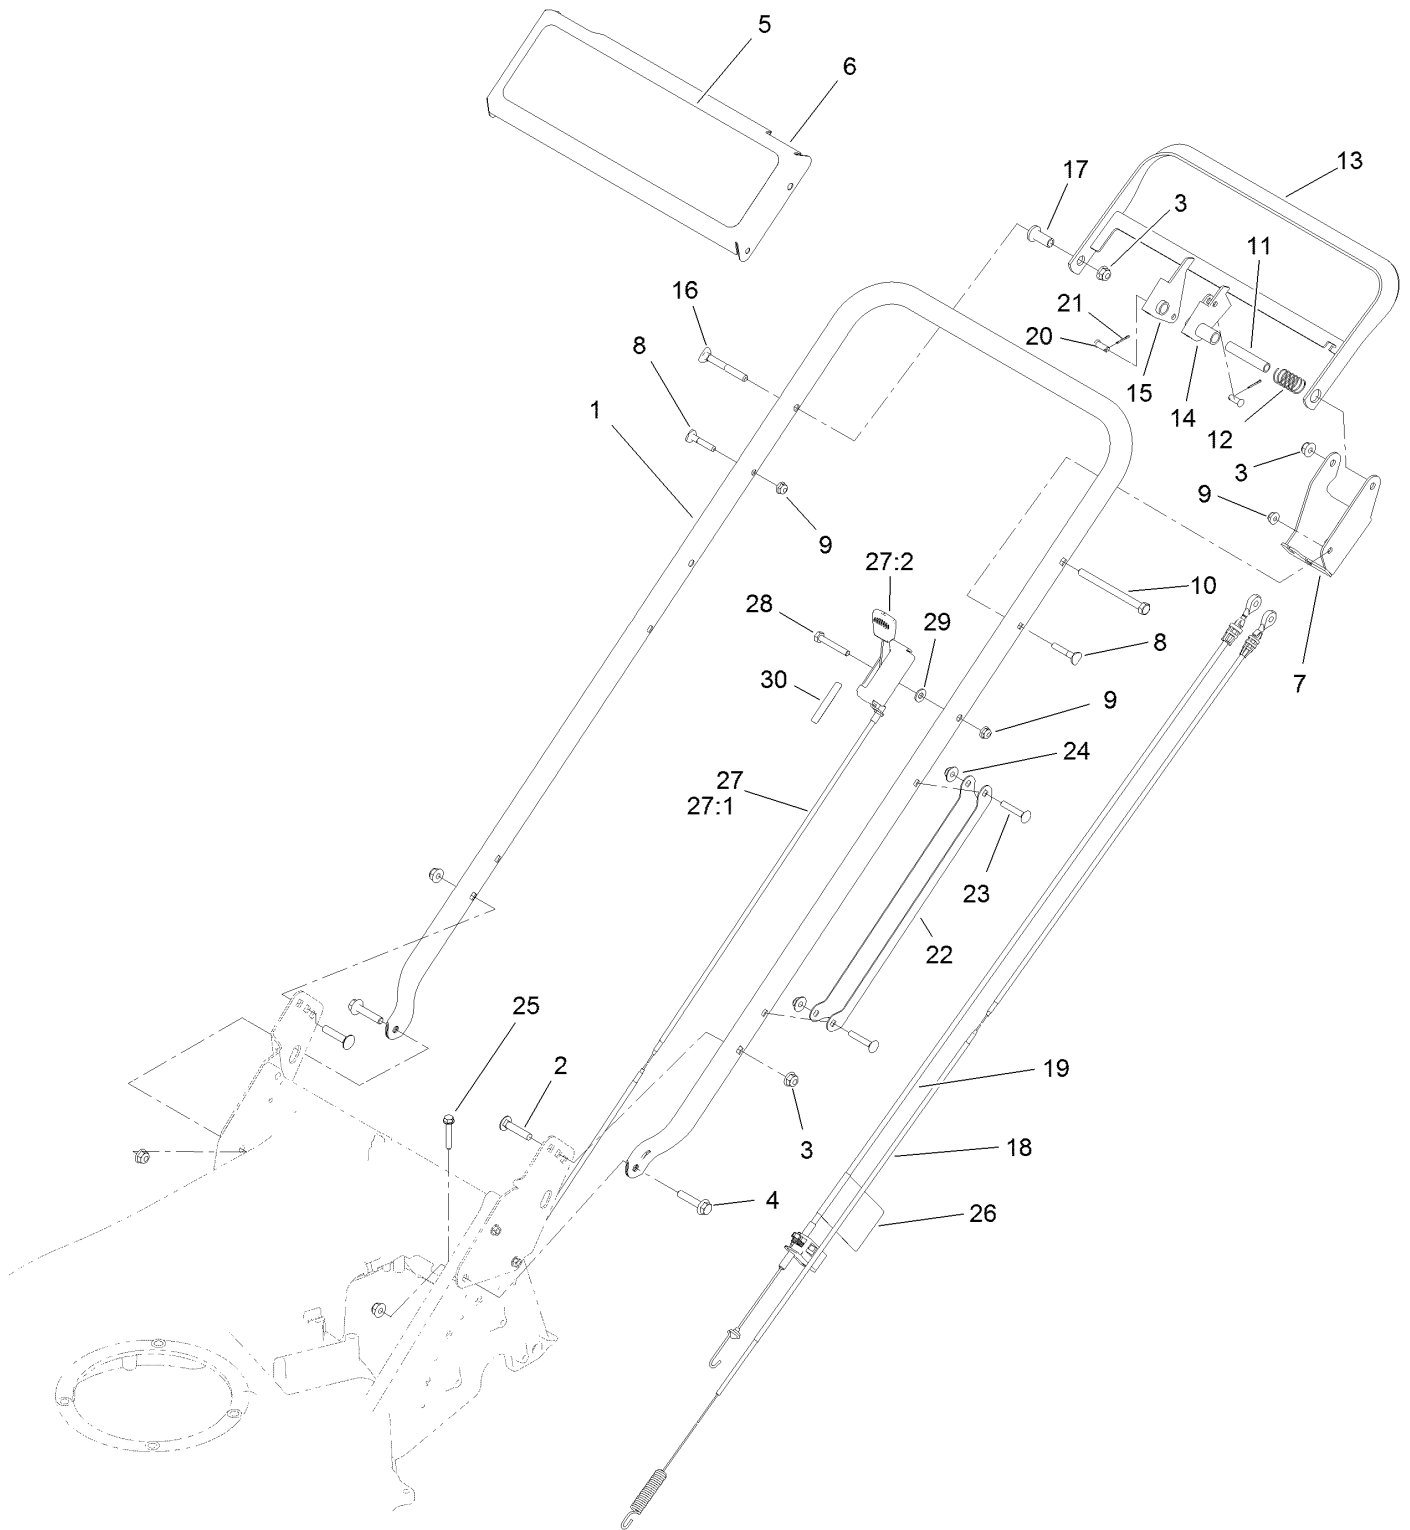

Handle and Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1016-03	1	Handle	18	130-9702	1	Cable-BBC
2	3230-4	2	Screw-CARR	19	130-9703	1	Cable-Traction, BBC
3	104-8300	6	Nut-HF, NI	20	84-9040	2	Pin-Cable
4	115-1794	2	Screw-HHF	21	3272-1	2	Pin-Cotter
5	125-8421	1	Decal-Toro, Commercial	22	127-6897-03	1	Guard-Cable, Handle
6	125-8350-01	1	Panel-Control	23	108-0988	2	Screw-CARR
7	125-8358-03	1	Bracket-Control	24	114-3778	2	Nut-HF
8	117-7737	2	Screw-Handle	25	94-2691	1	Screw-HWH Taptite
9	104-7201	3	Nut-HF, NI	26	130-6722	1	Decal-Adjust Self Propel Drive
10	322-19	1	Screw-HH	27	125-8374	1	Control-Throttle/Choke
11	125-8424	1	Spacer	27:1	130-6400	1	Cable-Throttle
12	85-6750	1	Spring-Control	27:2	130-6401	1	Control-Throttle
13	125-8357-03	1	Bar-Control	28	321-10	1	Screw-HH
14	125-8352	1	Lever-Control	29	3256-22	1	Washer-Flat
15	125-8354	1	Lever-Traction	30	130-9656	1	Decal-Throttle, Choke
16	125-8408	1	Screw-Handle				
17	125-8359	1	Spacer-Flange				

Attachments and Accessories

For 22296 21in Heavy-Duty Recycler/Rear Bagger Lawn Mower

Product Name	Model/Part
Blade-21in	108-0954-03
Blade-Bagging, 21in	125-1072-03
Cup-Anti Scalp.....	125-8440
Rear Discharge Kit.....	130-9734

Notes:



Count on it.