



CCR[™] Powerlite[®] 325 Snowthrower

Model No. 38182 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

-  Not illustrated
-  Not serviced separately

Contents


Description	Page	Description	Page
Impeller Drive Assembly	 3	Engine Assembly Tecumseh No. Hsk635 1723c	 10
Housing, Upper Shroud, and Chute Assembly	 4		
Impeller Assembly	 5	Recoil Starter Assembly No. 590743	
120 Volt Starter Assembly No. 105-2953	 6	Tecumseh Hsk635 Type 1723c	 12
Engine, Side Plate and Wheel Assembly	 7	Recoil Starter Assembly No. 590712	 13
Handle and Lower Shroud Assembly	 8		
Carburetor Assembly No. 640086 Tecumseh Hsk635 Type 1723c	 9		

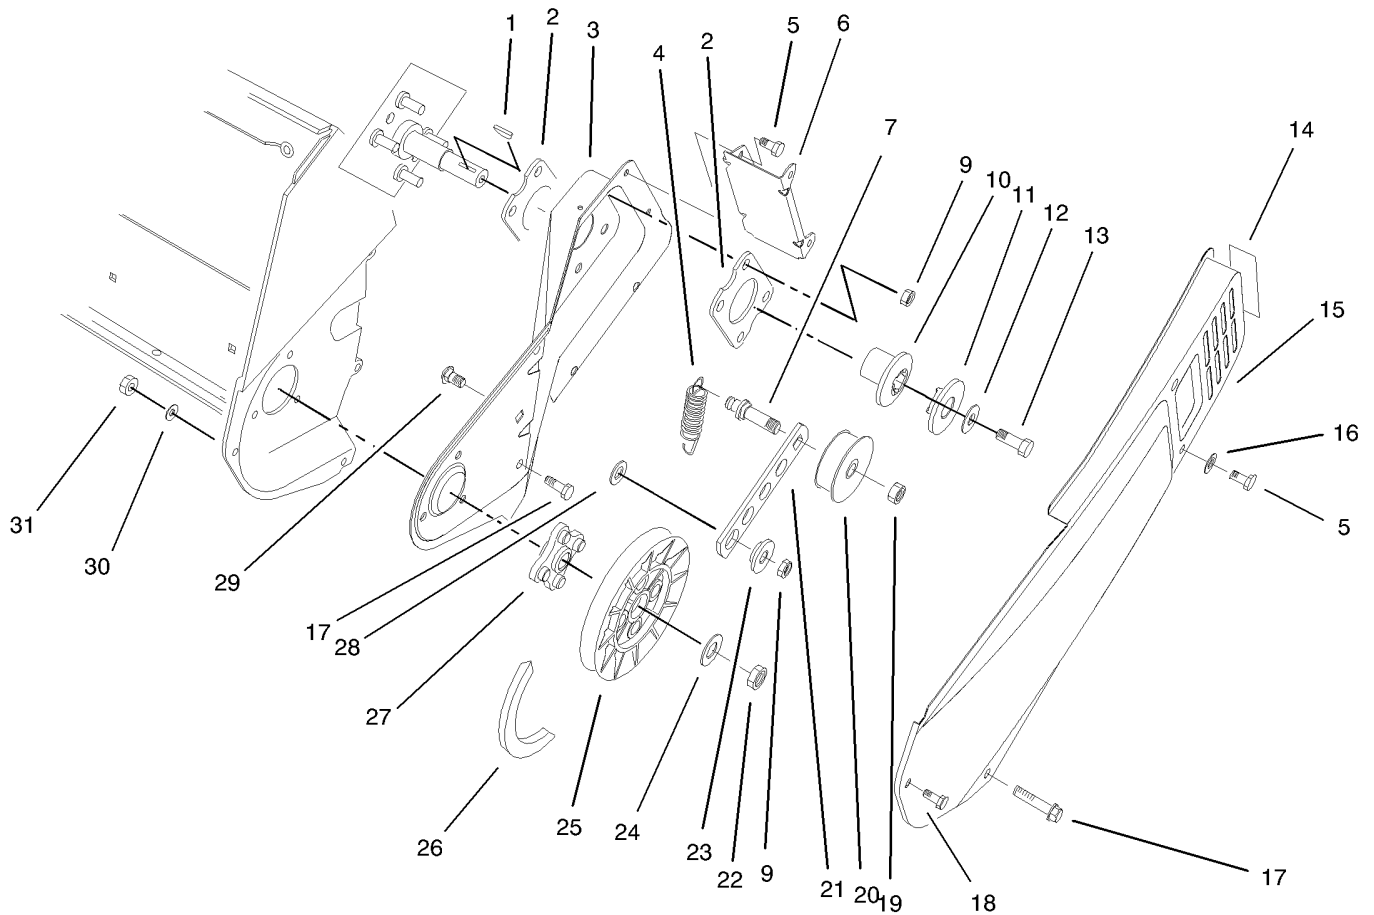

Impeller Drive Assembly

Ref	Part No.	Qty.	Description
1	3257-3	1	Key-Woodruff
2	71-5290-03	2	Plate-Engine
3	95-7945-03	1	Sideplate-LH
4	75-9020	1	Spring-Extension
5	32144-4	4	Screw-HWH
6	75-8870-03	1	Bracket-Cover, Belt
7	75-8720	1	Pin-Idler
9	3296-29	5	Nut-Lock, NI
10	71-5050	1	Hub-Half Sheave
11	71-5060	1	Cap-Half Sheave
12	3256-71	1	Washer-Flat
13	3235-6	1	Screw-HH
14	104-2767	1	Decal-Hot Surface
15	75-8830-03	1	Cover-Belt
16	3256-1	2	Washer-Flat
17	46-8094	3	Screw-Plastite
18	32105-23	1	Screw
19	3296-59	1	Nut-Lock, NI
20	71-5260	1	Pulley-Idler
21	75-9050	1	Arm-Idler
22	3296-38	1	Nut-Lock NI
23	75-8700	1	Bushing-Idler
24	3256-25	1	Washer-Flat
25	75-8750	1	Pulley-Driven


Ref	Part No.	Qty.	Description
26	75-9010	1	V-Belt
27	75-8740	1	Hub
28	25-5640	1	Washer
29	3230-23	1	Screw-CARR
30	3256-14	1	Washer-Flat
31	3296-2	1	Nut-Lock

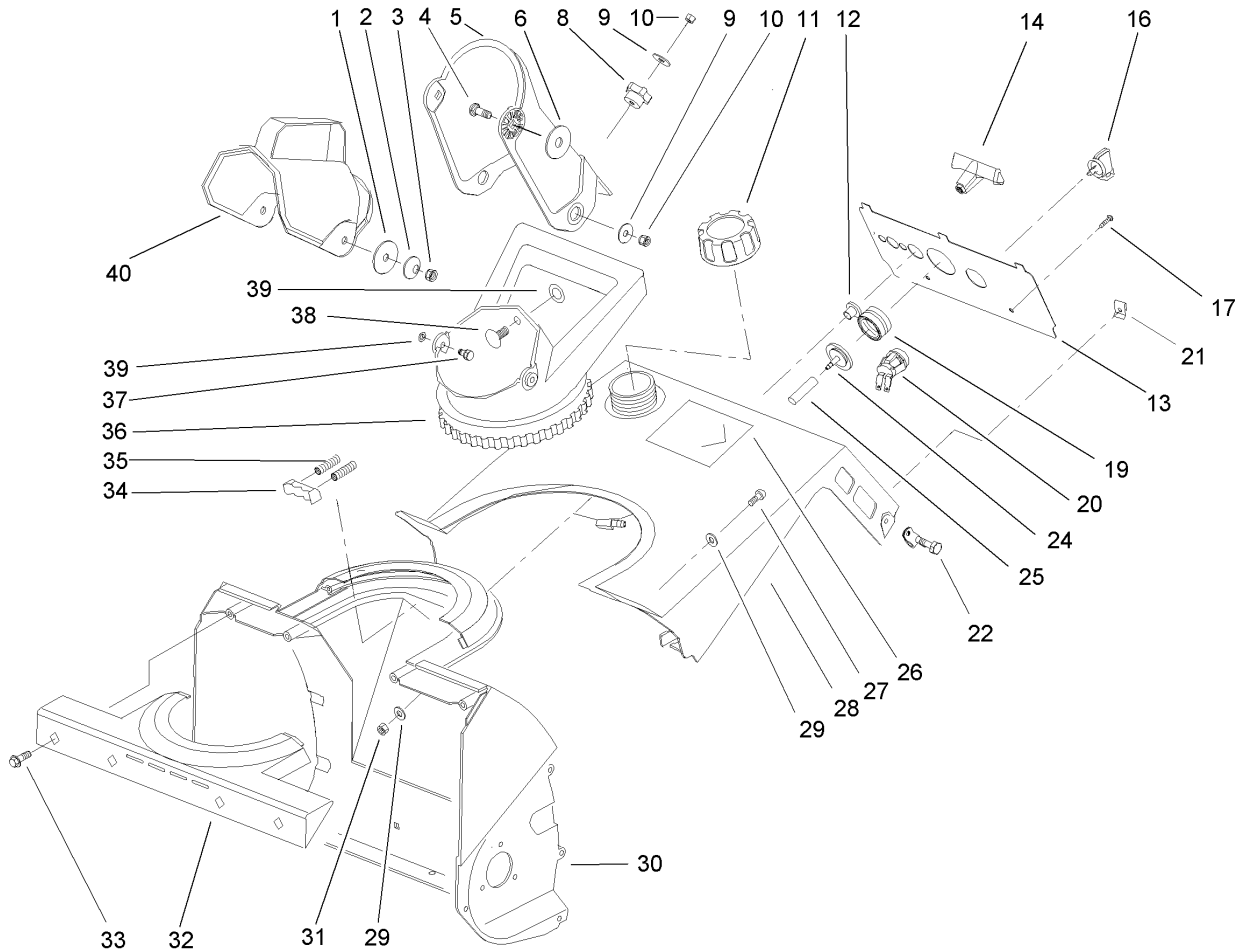

Housing, Upper Shroud, and Chute Assembly


Ref	Part No.	Qty.	Description
1	3256-68	2	Washer-Flat
2	3290-340	2	Washer-Belleville
3	3296-29	2	Nut-Lock, NI
4	3230-2	2	Bolt-CARR
5	104-2764	1	Chute
6	95-1905	2	Washer-Rubber
8	233-67	1	Knob-Chute
9	3256-81	2	Washer-Flat
10	3296-56	2	Nut-Lock, NI
11	104-4133	1	Gas Cap ASM
12	23-7470	1	Guide-Starter Rope
13	104-4940	1	Control Panel-Silkscreened
14	92-4853	1	Handle-Starter
16	63-8360	1	Key-Ignition
17	32144-53	2	Screw-SHWH
19	66-7460	1	Bulb-Primer
20	40-5940	1	Switch-On/off
21	49-1490	2	Nut
22	32144-89	2	Screw-Forming, Thread
24	44-2750	1	Body-Primer
25	44-3173	1	Hose-Primer
26	106-4724	1	Decal-Electric Start
27	3250-32	2	Screw-PPH
28	105-2994	1	Shroud-Tank, Gas Upper

Ref	Part No.	Qty.	Description
29	3256-1	4	Washer-Flat
30	75-8660	1	Housing
31	3296-42	2	Nut-Lock, NI
32	75-8650	1	Retainer-Chute
33	46-8094	4	Screw-Plastite
34	75-9160	1	Detent-Chute
35	75-9170	2	Spring-Compression
36	75-8670	1	Handle-Chute
37	321-3	2	Screw-HH
38	3229-11	1	Screw-CARR
39	32115-15	3	Pushnut-Retainer, Bolt
40	75-8770	1	Deflector-Chute

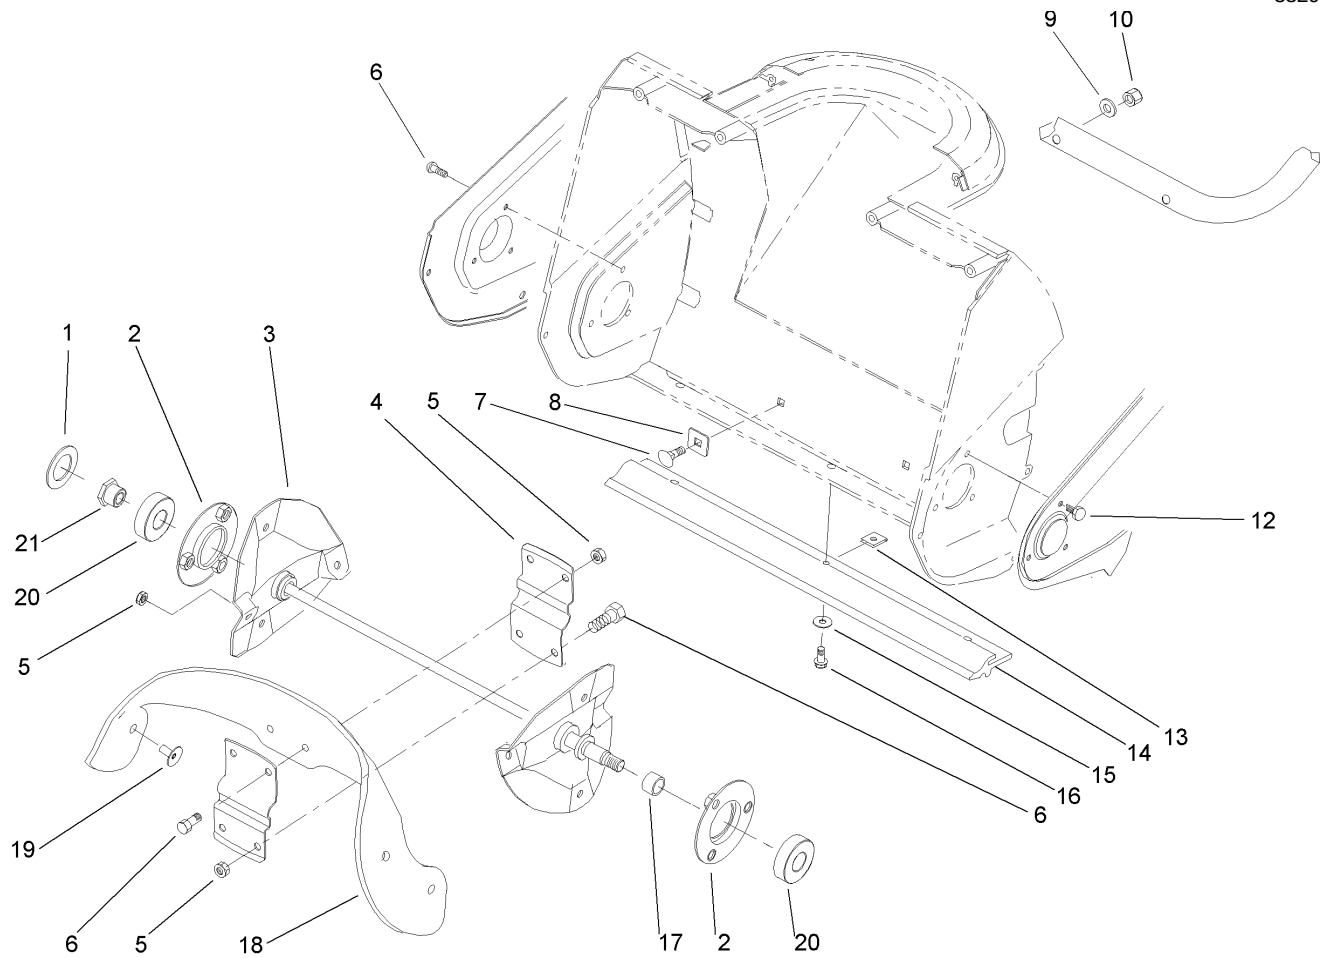


Impeller Assembly

Ref	Part No.	Qty.	Description				
1	75-9180	1	Washer-Rubber				
2	75-9080-03	2	Flange Bearing ASM				
3	75-8840-03	1	Rotor Shaft ASM				
4	75-8880-03	2	Support-Rotor				
5	3296-56	12	Nut-Lock, NI				
6	3234-33	7	Screw-HHF				
7	3229-5	2	Screw-CARR				
8	75-9040	2	Washer-Square				
9	3-7501	2	Washer				
10	3296-42	2	Nut-Lock, NI				
12	321-3	3	Screw-HH				
13	32115-19	3	Nut-Speed, U Type				
14	75-8780	1	Scraper				
15	3256-14	3	Washer-Flat				
16	32144-34	3	Screw-Forming, Thread				
17	75-8710	1	Spacer				
18	84-1980	2	Blade-Rotor				
19	84-1970	8	Screw				
20	100-1048	2	Bearing-Ball				
21	75-8690	1	Nut				

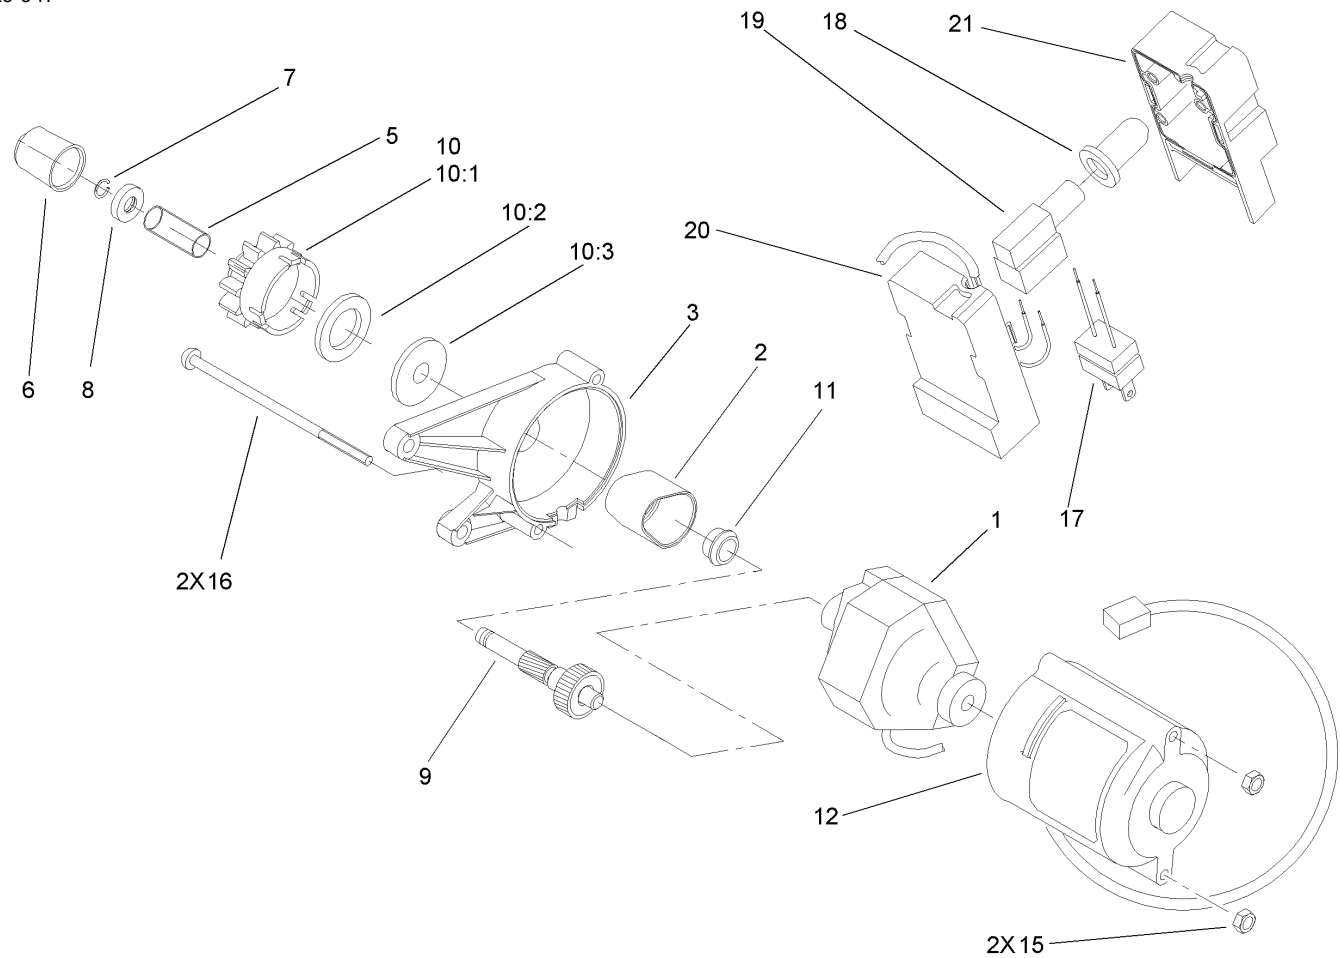

120 Volt Starter Assembly No. 105-2953


Ref	Part No.	Qty.	Description				
1	70-7802	1	Starter Motor ASM				
2	70-7850	1	Cover-Gear				
3	100-3443	1	Housing-Upper Starter				
5	61-4690	1	Spring				
6	70-7890	1	Cap-Pinion				
7	61-4680	1	Ring-Lock				
8	100-2902	1	Stop-Pinion				
9	105-8831	1	Shaft And Gear ASM				
10	84-5240	1	Pinion ASM				
10:1	70-7790	1	Nut				
10:2	84-5230	1	Pinion				
10:3	84-5440	1	Ring-Rubber				
11	70-7900	1	Bushing				
12	100-3444	1	Housing-Lower Starter				
15	3296-2	2	Nut-Lock				
16	32144-101	2	Screw				
17	94-9933	1	Plug-Power				
18	61-4810	1	Boot-Switch				
19	61-4820	1	Switch-Starter				
20	100-3441	1	Switch-Base Housing				
21	100-3442	1	Switch-Cap Housing				

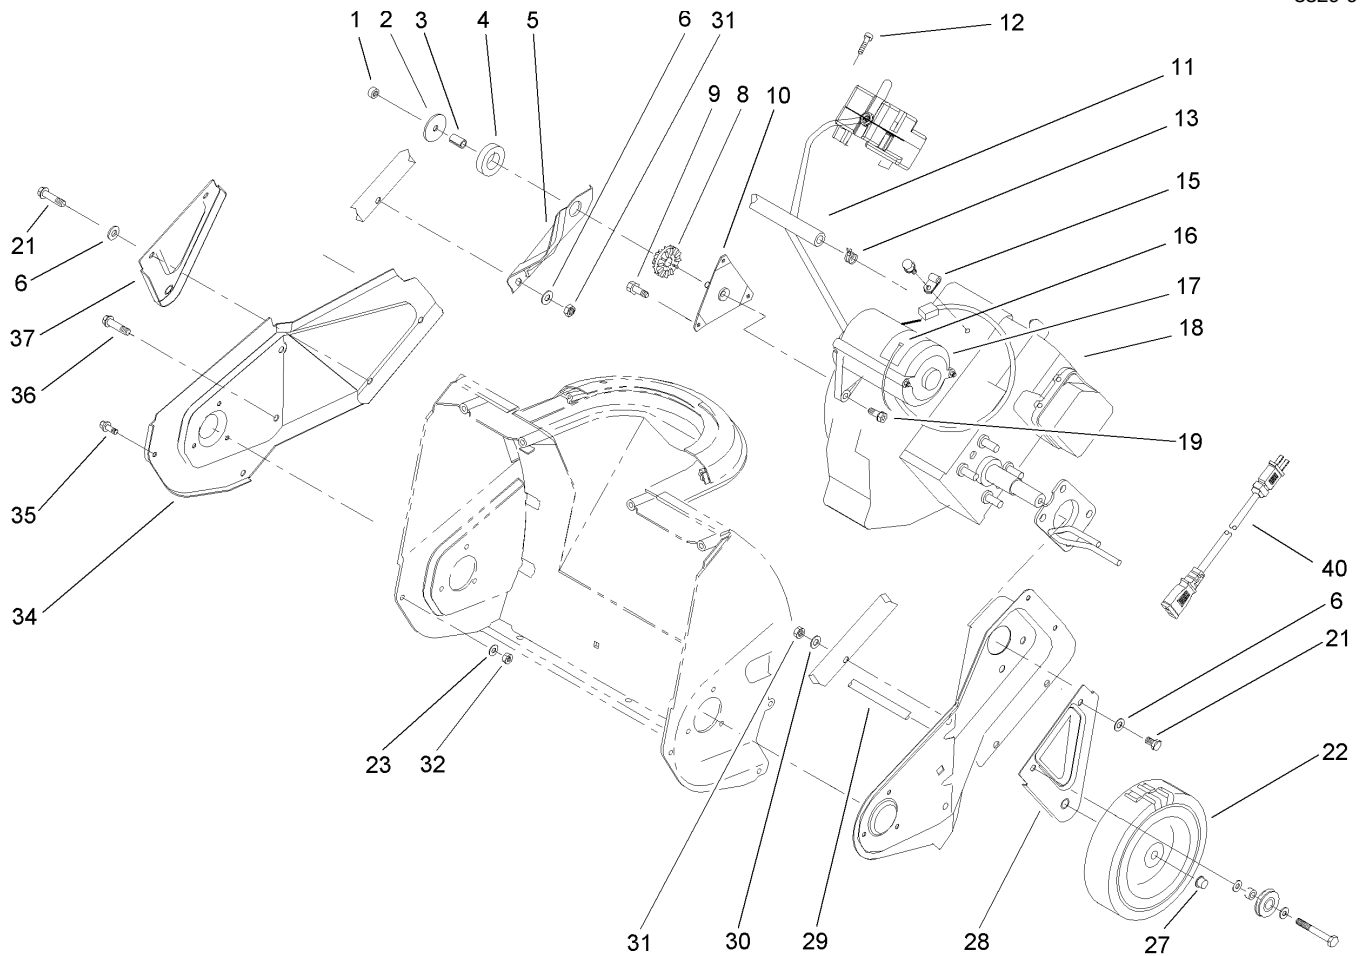

Engine, Side Plate and Wheel Assembly


Ref	Part No.	Qty.	Description
1	3296-56	1	Nut-Lock, NI
2	3256-58	1	Washer-Flat
3	80-0650	1	Spacer-Tubular
4	95-1903	1	Ring-Isolator
5	75-8980-03	1	Bracket-Support, Engine
6	3256-1	6	Washer-Flat
8	75-9100	1	Bushing-Isolator
9	94-2789	3	Screw
10	92-6012	1	Bracket/stud ASM
11	49-2483	1	Line-Gas
12	32144-27	3	Screw-Plastite
13	2412-98	2	Clamp
15	2412-91	1	Clamp
16	250-7	1	Tie-Cable
17	105-2953	1	Starter ASM (120 Volt)
18		1	Engine-Tecumseh, Hsk635-1723c
19	80-0700	2	Screw
21	321-10	4	Screw-HH
22	23-3250	2	Wheel
23	3256-14	1	Washer-Flat
27	3290-320	2	Retainer-Push On
28	75-8910-03	1	Bracket-Wheel, LH
29	27-0062	1	Axle
30	3-7501	2	Washer

Ref	Part No.	Qty.	Description
31	3296-42	4	Nut-Lock, NI
32	3296-2	1	Nut-Lock
34	75-8820-03	1	Plate-Side, RH
35	32105-23	1	Screw
36	46-8094	3	Screw-Plastite
37	75-8900-03	1	Bracket-Wheel, RH
40	106-4741	1	Cord-Electric

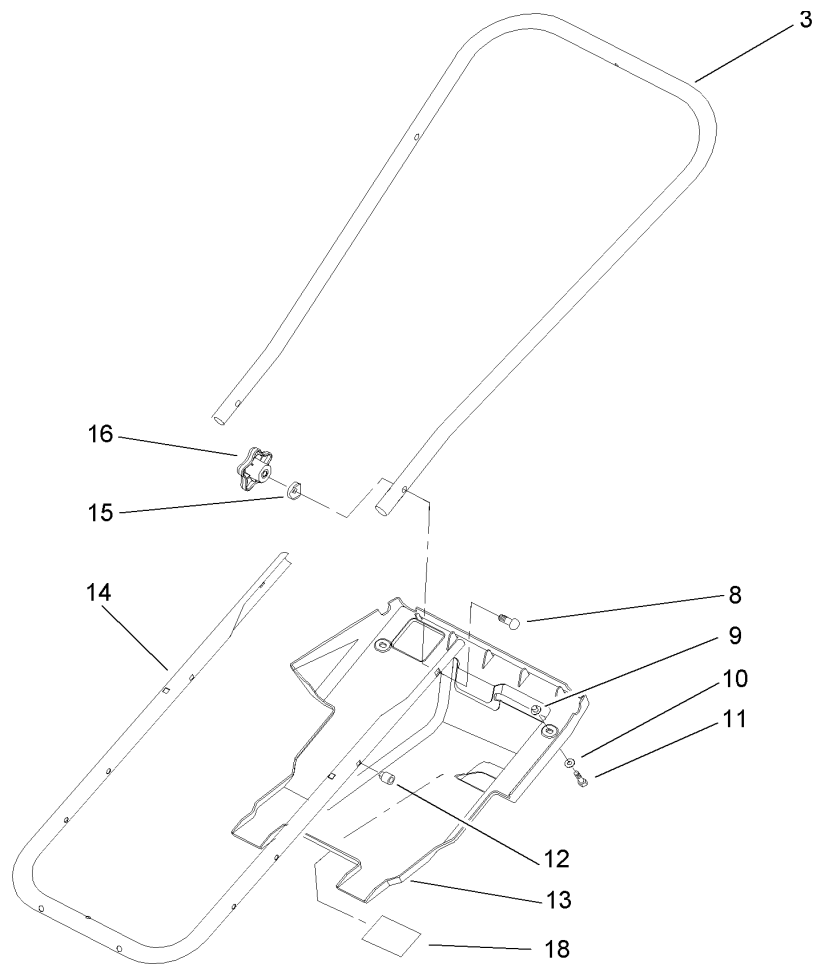

Handle and Lower Shroud Assembly

Ref	Part No.	Qty.	Description				
3	75-9070-03	1	Handle-Upper				
8	92-2260	2	Screw-Handle				
9	605120	2	Nut-Clip				
10	3256-14	2	Washer-Flat				
11	32144-34	2	Screw-Forming, Thread				
12	32115-17	2	Nut-Expansion				
13	75-8790	1	Shroud				
14	75-9060-03	1	Tube-Frame				
15	75-9130	2	Washer-Curved				
16	106-4161	2	Knob-Handle				
18	61-4790	1	Decal				

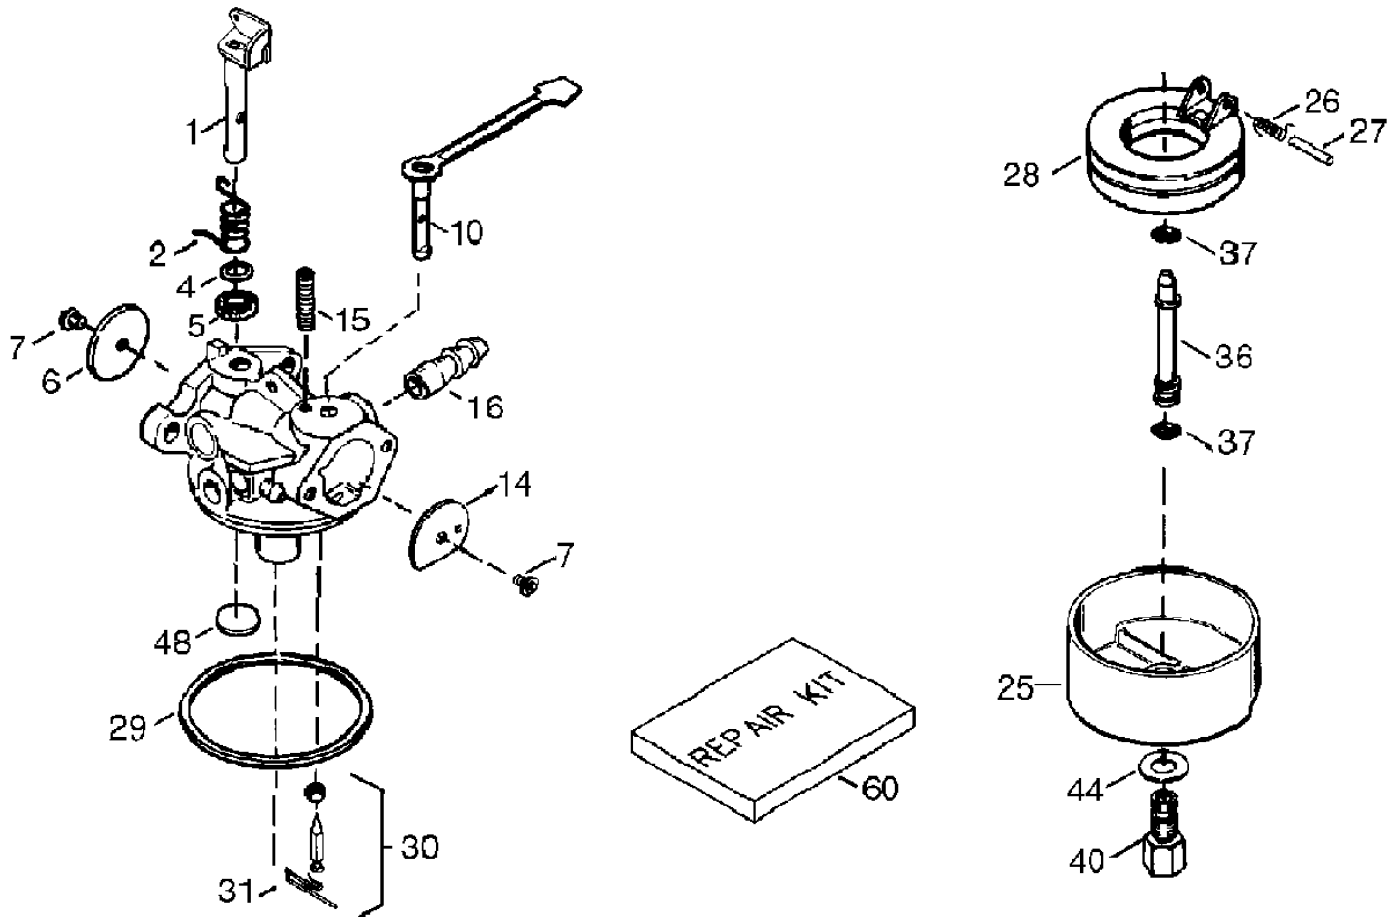


Carburetor Assembly No. 640086 Tecumseh Hsk635 Type 1723c

Ref	Part No.	Qty.	Description
0	640086A	1	Carburetor (Incl. 184 Of Engine Parts List)
1	632166A	1	Throttle Shaft And Lever Assembly
2	632169	1	Spring-Trottle, Return
4	631184	1	Washer-Dust Seal
5	631183	1	Seal-Dust, Throttle
6	631616	1	Throttle-Shutter
7	650506	2	Shutter-Screw
10	632553	1	Choke Shaft And Lever Assembly
14	31837	1	Shutter-Choke
15	630735	1	Spring-Choke, Positioning
16	632164	1	Fitting-Fuel
25	631867	1	Float-Bowl
26	632386	1	Spring-Float, Dampening
27	631024	1	Float-Shaft
28	632019	1	Float
29	631028	1	O-Ring-Bowl, Float
30	631021	1	Inlet Needle, Seat & Clip (Incl. 31)
31	631022	1	Clip-Spring
36	640080	1	Tube-Nozzle, Main
37	632547	2	O-Ring-Main Nozzle Tube
40	640301	1	Nut-Bowl, High Speed
44	27110A	1	Washer-Nut, Bowl
48	631027	1	Welch Plug-Atmospheric Vent

Ref	Part No.	Qty.	Description
60	632760	1	Repair Kit

Engine Assembly


Tecumseh No. Hsk635 1723c

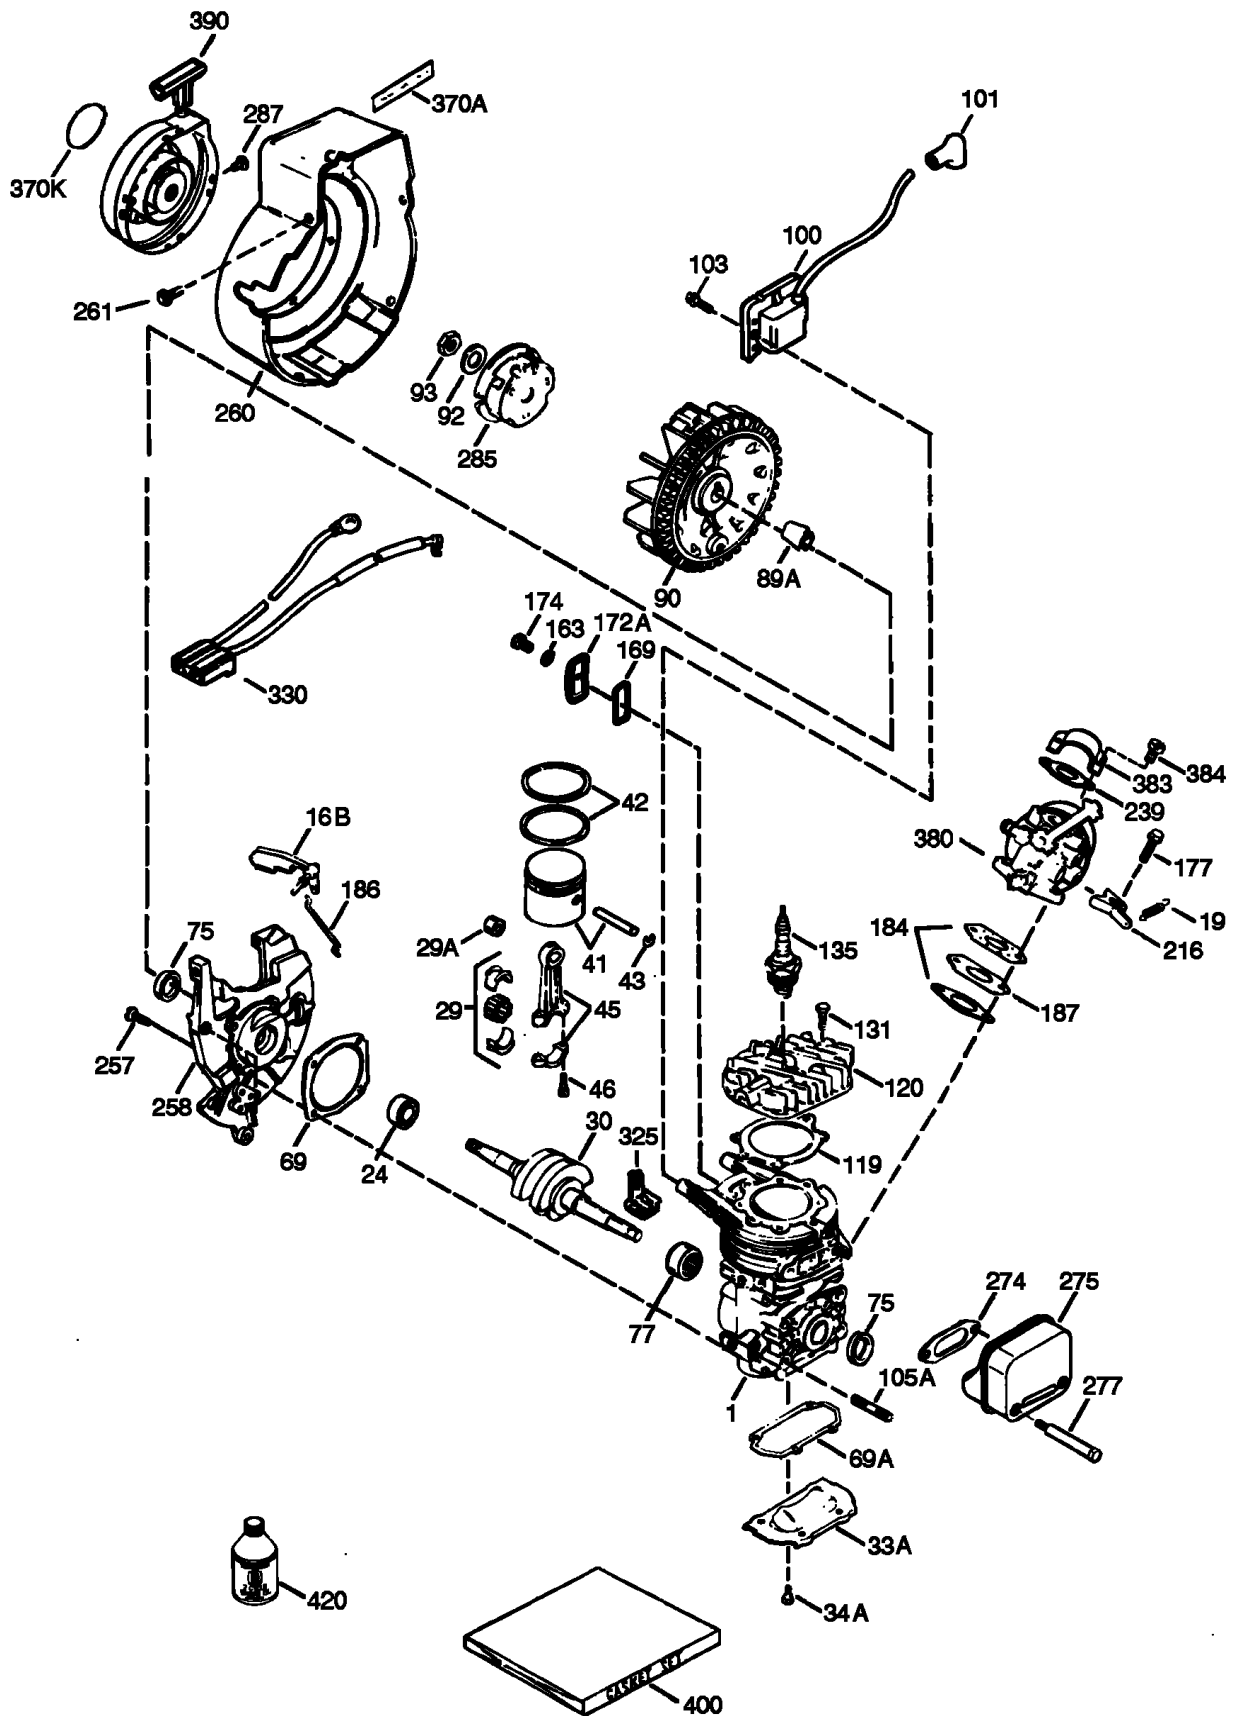

Engine Assembly


Tecumseh No. Hsk635 1723c

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	0	1	Cylinder	285	590551A	1	Cup-Starter
16B	490291A	1	Vane-Air	287	650926	3	Screw, 8-32 X 21/64"
19	570707	1	Spring-Extention	325	29443	1	Clip-Wire
24	530110	1	Bearing-Ball	330	611131A	1	Harness-Wire
29	530150	1	Needle Bearing And Liner Set (37 Needles)	370A	36261	1	Decal-Instruction
29A	530104A	1	Bearing-Cartridge	370K	36695	1	Decal-Starter
30	290602	1	Crankshaft	380	640086A	1	Carburetor (Incl. 184)
33A	570644	1	Plate-Cover	383	570434	1	Baffle-Carburetor
34A	650579	4	Screw, T-25, 10-24 X 1/2"	384	650431	2	Screw, T-25, 10-32 X 5/8"
41	310283A	1	Piston & Pin Ass'y. (Incl. 43)	390	590743	1	Rewind Starter Assembly
42	310289	2	Ring Set	400	510324B	1	Gasket Set
43	310167	2	Ring-Retaning	420	730227B	1	2-Cycle Oil (8 Oz.)
45	310235B	1	Connecting Rod Ass'y. (Incl. 29, 29a, & 46)				
46	650633	2	Bolt-Rod, Connecting				
69	510292A	1	Gasket-Cover, Cylinder				
69A	510323A	1	Gasket-Plate, Cover				
75	510319	2	Seal-Oil				
77	530105	1	Bearing-Cartridge				
89A	611032	1	Sleeve-Adapter				
90	611066	1	Flywheel				
92	650815	1	Washer-Belleville				
93	650390	1	Nut-Flywheel				
100	34443B	1	Solid State Ignition (Incl. 101)				
101	610118	1	Cover-Spark Plug				
103	651007	2	Screw, T-15, 10-24 X 15/16"				
105A	650796	4	Stud				
119	510274A	1	Gasket-Cylinder Head				
120	250240B	1	Head-Cylinder				
131	650477	5	Screw, T-30, 1/4-20 X 3/4"				
135	611049	1	Plug-Spark, Resister (Rcj8y)				
163	650838	1	Washer				
169	510325A	1	Cover, Compression Release				
172A	570708	1	Cover-Compression Release				
174	650579	1	Screw, T-25, 10-24 X 1/2"				
177	650959	2	Screw, 5/32, 1/4-20 X 1"				
184	510326A	2	Gasket-Carburetor				
186	490322	1	Governor-Link				
187	570438A	1	Spacer				
216	570645	1	Lever-Adjusting, Rpm				
239	35815	1	Gasket-Air Cleaner				
257	650911	4	Screw, T-30, 1/4-20 X 5/8"				
258	350422	1	Base-Housing,blower (Incl.75)				
260	350437	1	Housing-Blower				
261	650737	4	Screw, 1/4-20 X 1/2"				
274	510207A	1	Gasket-Exhaust				
275	390332	1	Muffler (Incl. 274 & 277)				
277	650869	2	Screw, 1/4-20 X 2-3/4"				

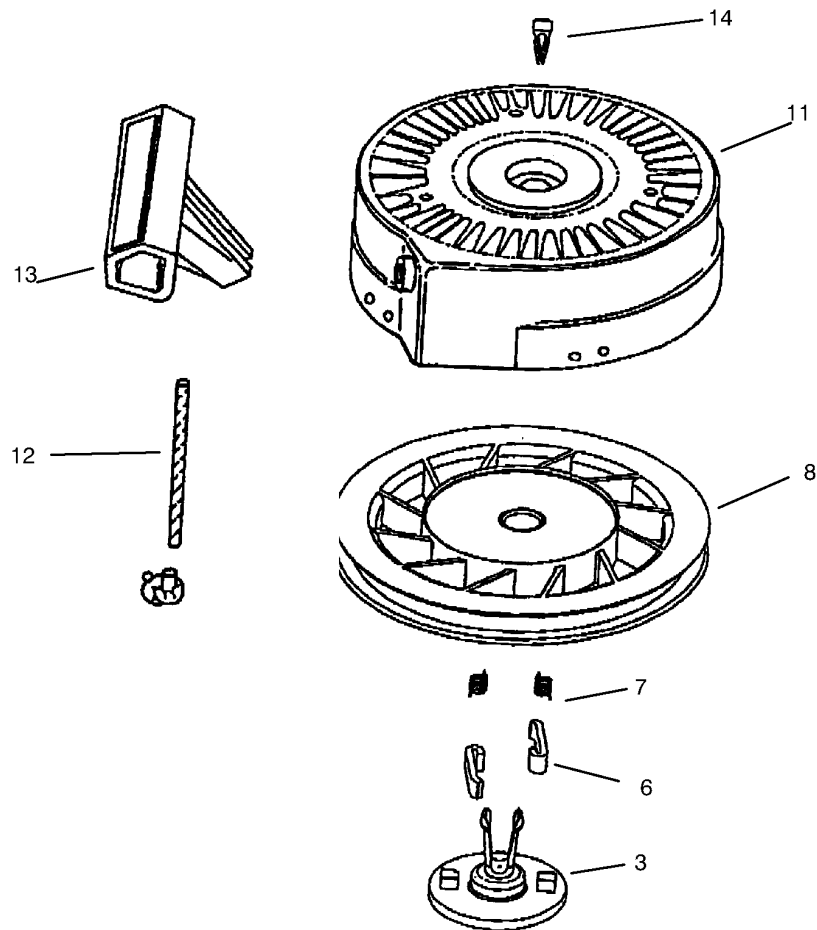

Recoil Starter Assembly No. 590743
Tecumseh Hsk635 Type 1723c

Ref	Part No.	Qty.	Description				
0	590743	1	Rewind Starter Assembly				
3	590740	1	Retainer				
6	590616	2	Dog-Starter				
7	590617	2	Spring-Dog				
8	590645A	1	Pulley And Rewind Spring Assembly				
11	590643A	1	Starter Housing Assembly				
12	590535	1	Rope-Starter				
13	590701	1	Handle-Starter				
14	590760	1	Clip-Spring				

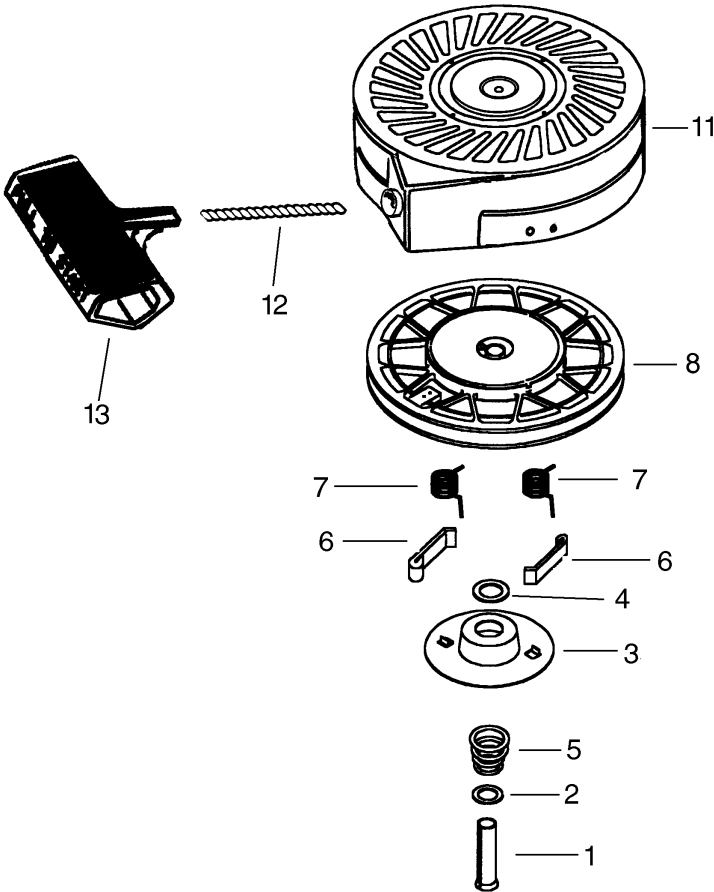

Recoil Starter Assembly No. 590712

Ref	Part No.	Qty.	Description				
0	590712	1	Rewind Starter Assembly (Optional)				
1	590599A	1	Spring Pin (Incl. 4)				
2	590600	1	Washer				
3	590696	1	Retainer				
4	590601	1	Washer				
5	590697	1	Spring-Brake				
6	590698	2	Dog-Starter				
7	590699	2	Spring-Dog				
8	590709	1	Pulley And Rewind Spring Assembly				
11	590713	1	Starter Housing Assembly				
12	590535	1	Rope-Starter				
13	590701	1	Handle-Starter				

NOTES

NOTES

