

LAWN-BOY®

Silver Series® Lawnmower

Model No. 10272 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HS.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

- ❶

Not illustrated
- ❷


Not serviced separately
- ❸

Included in Repair Kit No. 632809
- ❹

Obtain parts from your local Tecumseh dealer


Contents

Description	Page	Description	Page
Housing Assembly	 3	Recoil Starter Assembly No. 590739	
Housing Assembly 98-4471B	 4	Tecumseh Model No. LEV120-362005A	 12
Handle Assembly	 5	Recoil Starter Assembly No. 590702 (Optional)	
Engine and Blade Assembly	 6	Tecumseh Model No. LEV120-362005A	 13
Carburetor Assembly No. 640303 Tecumseh Model No. LEV120-362005A	 7		
Engine Assembly No. 1 Tecumseh Model No. LEV120-362005A	 8		
Engine Assembly No. 2 Tecumseh Model No. LEV120-362005A	 10		

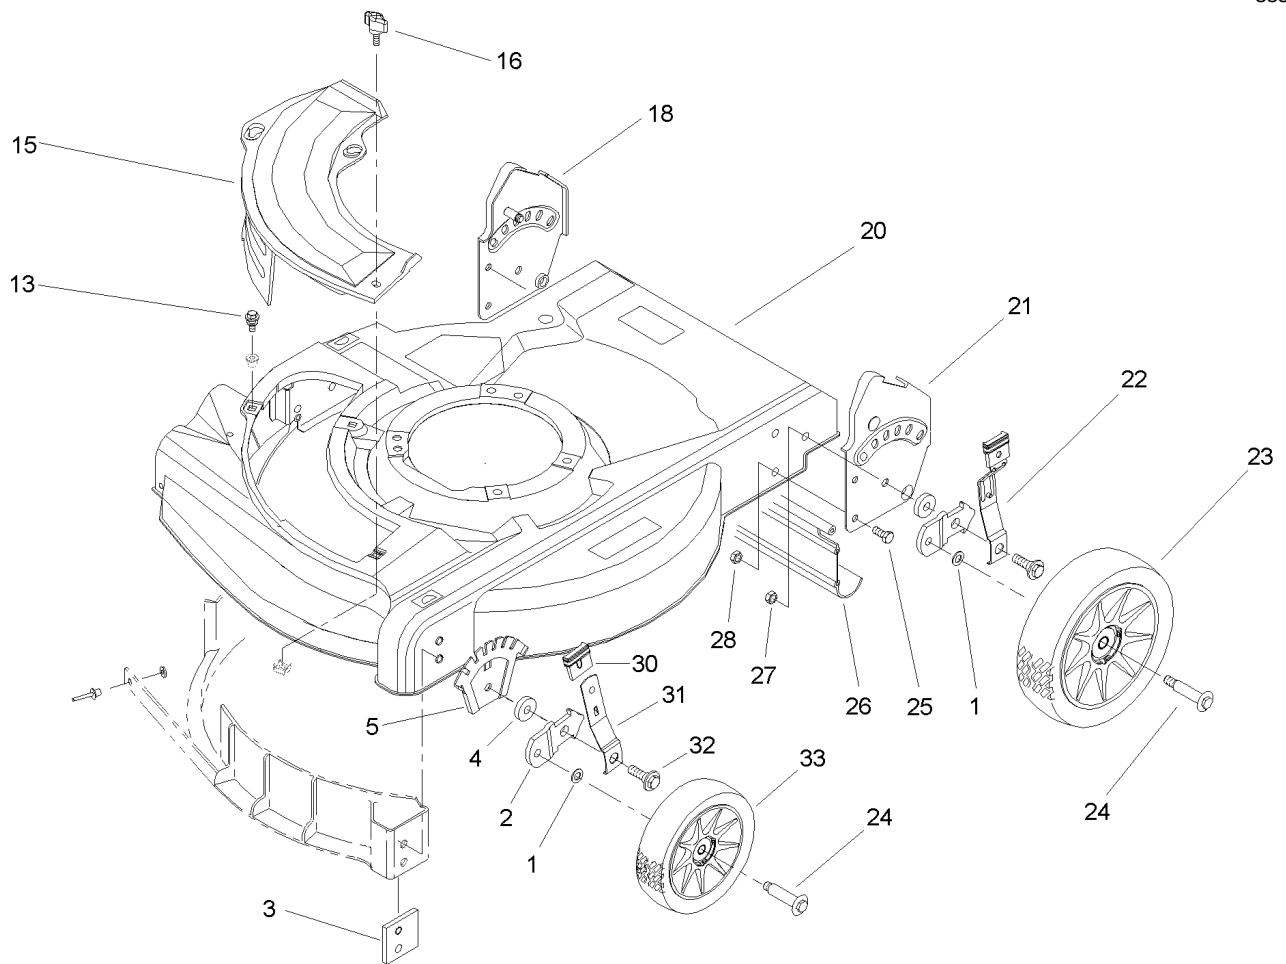


Housing Assembly

Ref	Part No.	Qty.	Description				
1	40-1940	4	Washer				
2	95-7403-03	4	Bracket-Height Adjustment, Wheel				
3	92-7731	2	Plate-Baffle				
4	92-4890	4	Washer-Wheel				
5	92-4881-03	2	Plate-Height, Adjustment				
13	614677	2	Screw-Sems				
15	92-8630	1	Plate-Mulch				
16	98-8332	1	Knob				
18	92-7742	1	RH Handle Bracket ASM				
20	98-4471	1	Housing ASM				
21	92-7743	1	LH Handle Brkt ASM				
22	92-1005	2	Rear Spring Arm ASM				
23	95-7437	2	Wheel And Tire 8"				
24	92-1099	4	Bolt-Shoulder				
25	322-3	4	Screw-HH				
26	92-8647	1	Shield-Trailing				
27	3296-39	2	Nut-Lock, NI				
28	3296-29	4	Nut-Lock, NI				
30	92-1008	4	Knob-Lever, Height Adjustment				
31	614687	2	Arm-Front Spring				
32	614672	4	Bolt-Shoulder				
33	95-7436	2	Wheel And Tire 6"				
99	95-7052	1	Plate-Opening, Chute				

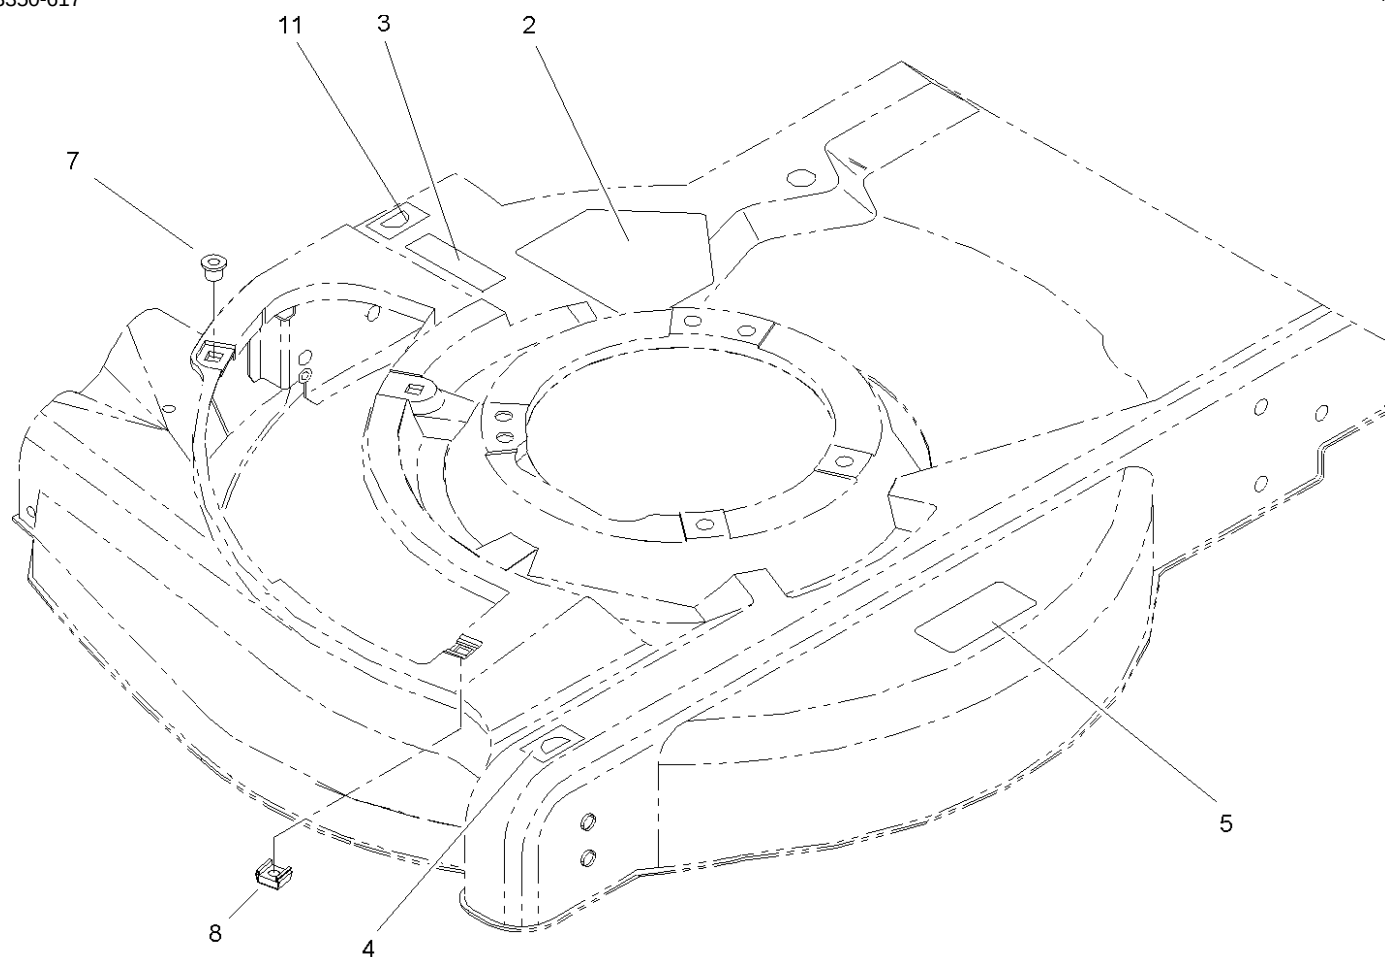


Housing Assembly 98-4471B

Ref	Part No.	Qty.	Description
2	43-8480	1	Decal-Danger
3	99-6018	1	Decal-Warning
4	92-2914	1	Decal-Hoc, LH
5	93-7250	1	Decal-Warning
7	94-1610	2	Nut-Clip
8	613765	1	Nut-Cage
11	92-2915	1	Decal-Hoc, RH

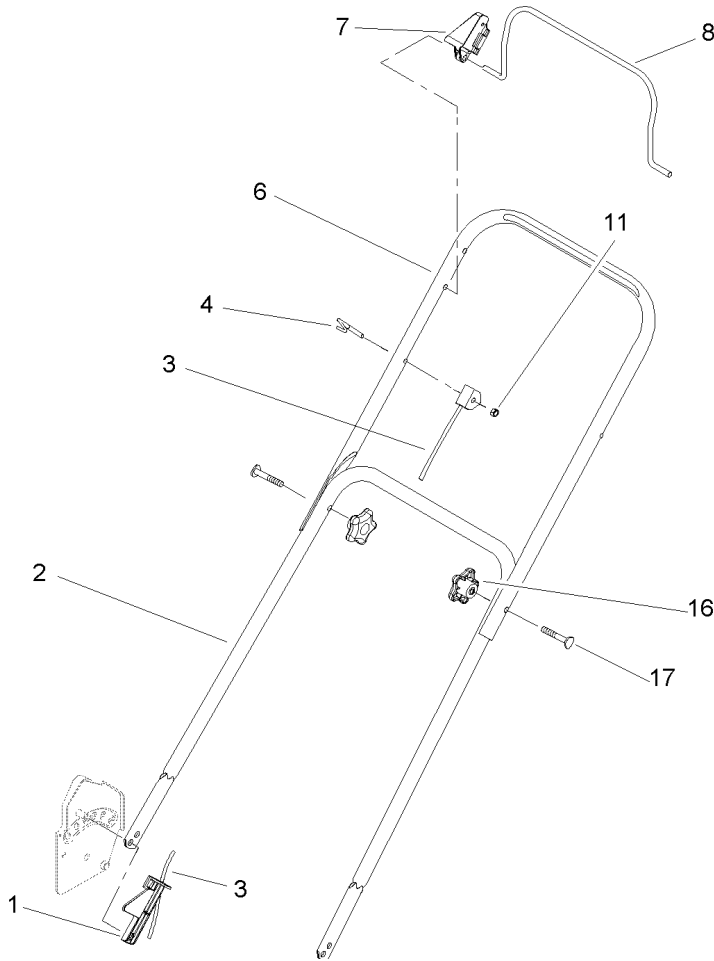


Handle Assembly

Ref	Part No.	Qty.	Description				
1	104-1013	1	Guard-Cable				
2	614643-05	1	Handle-Lower				
3	100-5989	1	Brake Cable ASM				
4	106-8330	1	Guide-Rope				
6	100-2888-05	1	Handle-Upper				
7	107-0757	1	Stop-Pivot				
8	93-4184-03	1	Bail-Brake				
11	3296-73	1	Nut-Lock, NI				
16	106-4161	2	Knob-Handle				
17	614697	2	Screw				

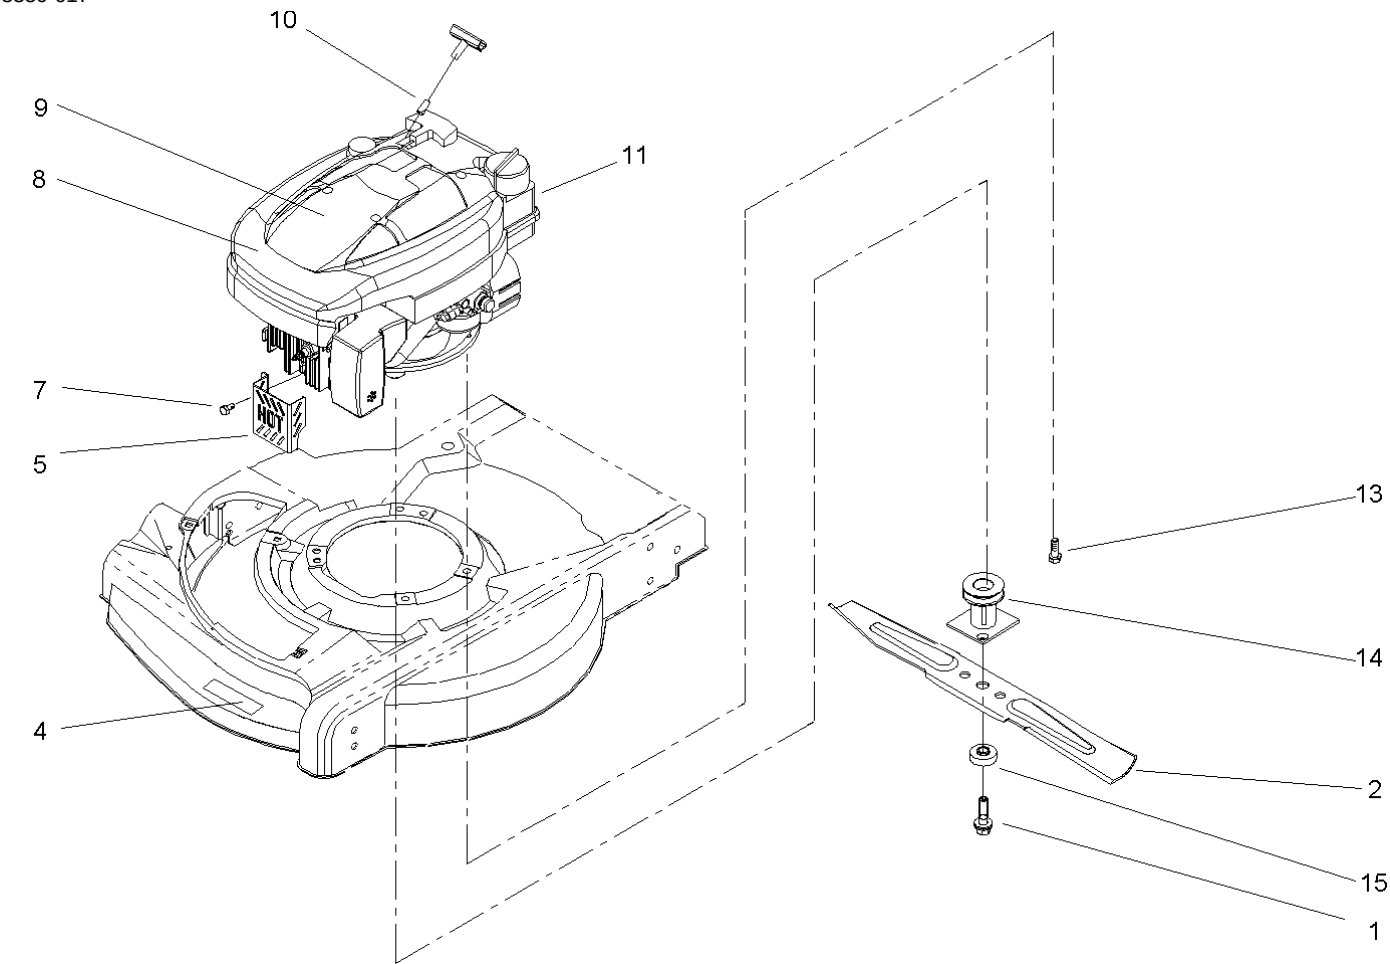

Engine and Blade Assembly


Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	612543-03	1	Blade				
4	104-7958	1	Decal-Deck				
5	106-8346-03	1	Guard-Muffler				
7	32144-4	1	Screw-HWH				
8	98-1593	1	Applique				
9	106-8375	1	Decal-Recoil				
10	92-1701	1	Stop-Rope				
11		1	Engine-Tecumseh, Lv195ea-362005b				
13	95-1726	3	Screw-Taptite				
14	106-3950	1	Driver-Blade				
15	106-6826	1	Spacer				

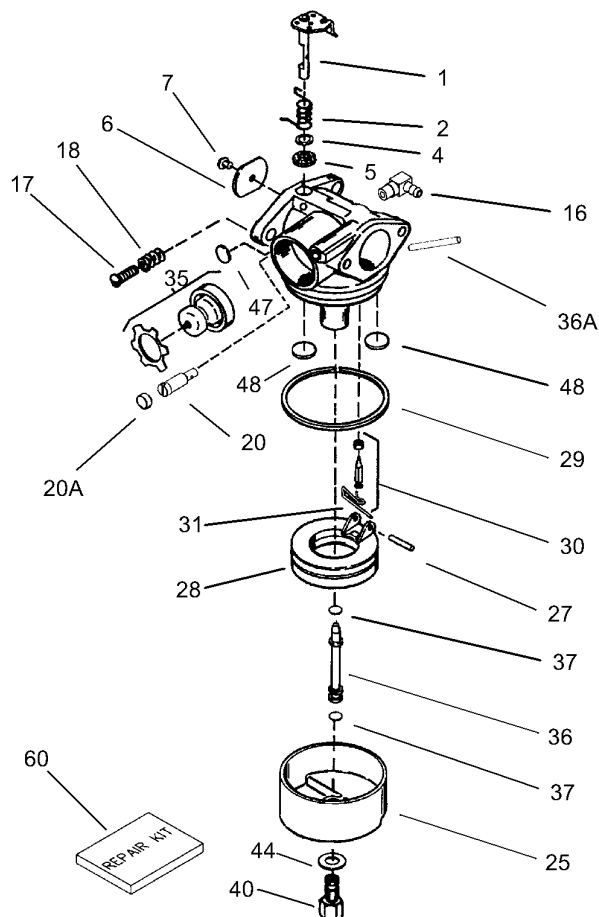

Carburetor Assembly No. 640303 Tecumseh Model No. LEV120-362005A

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
④0	640303	1	Carburetor (Incl. Ref. #184 Of Engine Parts List)	④40	640087	1	Nut-Bowl, Float
④1	631615	1	Shaft And Lever ASM	③④44	27110A	1	Bowl Nut Washer
④2	631767	1	Spring-Return	③④47	630748	1	Plug-Welch, Idle Mixture Well
③④4	631184	1	Washer-Dust Seal	③④48	631027	2	Plug-Welch, Vent
③④5	631183	1	Seal-Dust, Throttle	③④60	632809	1	Repair Kit (Incl. Items Marked * In Notes)
④6	640070	1	Shutter-Throttle				
③④7	650506	1	Screw-Shutter				
④16	631807	1	Fitting-Fuel				
④17	651025	1	Screw-Idle				
④18	630766	1	Spring-Tension				
④20	640018	1	Screw-Idle Restrictor				
③④20A	640200	1	Screw-Idle Restrictor				
④25	631867	1	Float-Bowl				
③④27	631024	1	Shaft-Float				
④28	632802	1	Float (Plastic)				
③④29	631028	1	O-Ring, Float Bowl				
③④30	632807	1	Inlet Needle, Seat, And Clip (Incl. Ref. #31)				
③④31	631022	1	Clip-Spring				
④35	640259	1	Primer Bulb / Retainerring ASM				
④36	640019	1	Tube-Nozzle, Main				
④36A	632766	1	Tube-Vent, Bowl				
③④37	632547	2	O-Ring, Main Nozzle Tube				

Engine Assembly No. 1
Tecumseh Model No. LEV120-362005A

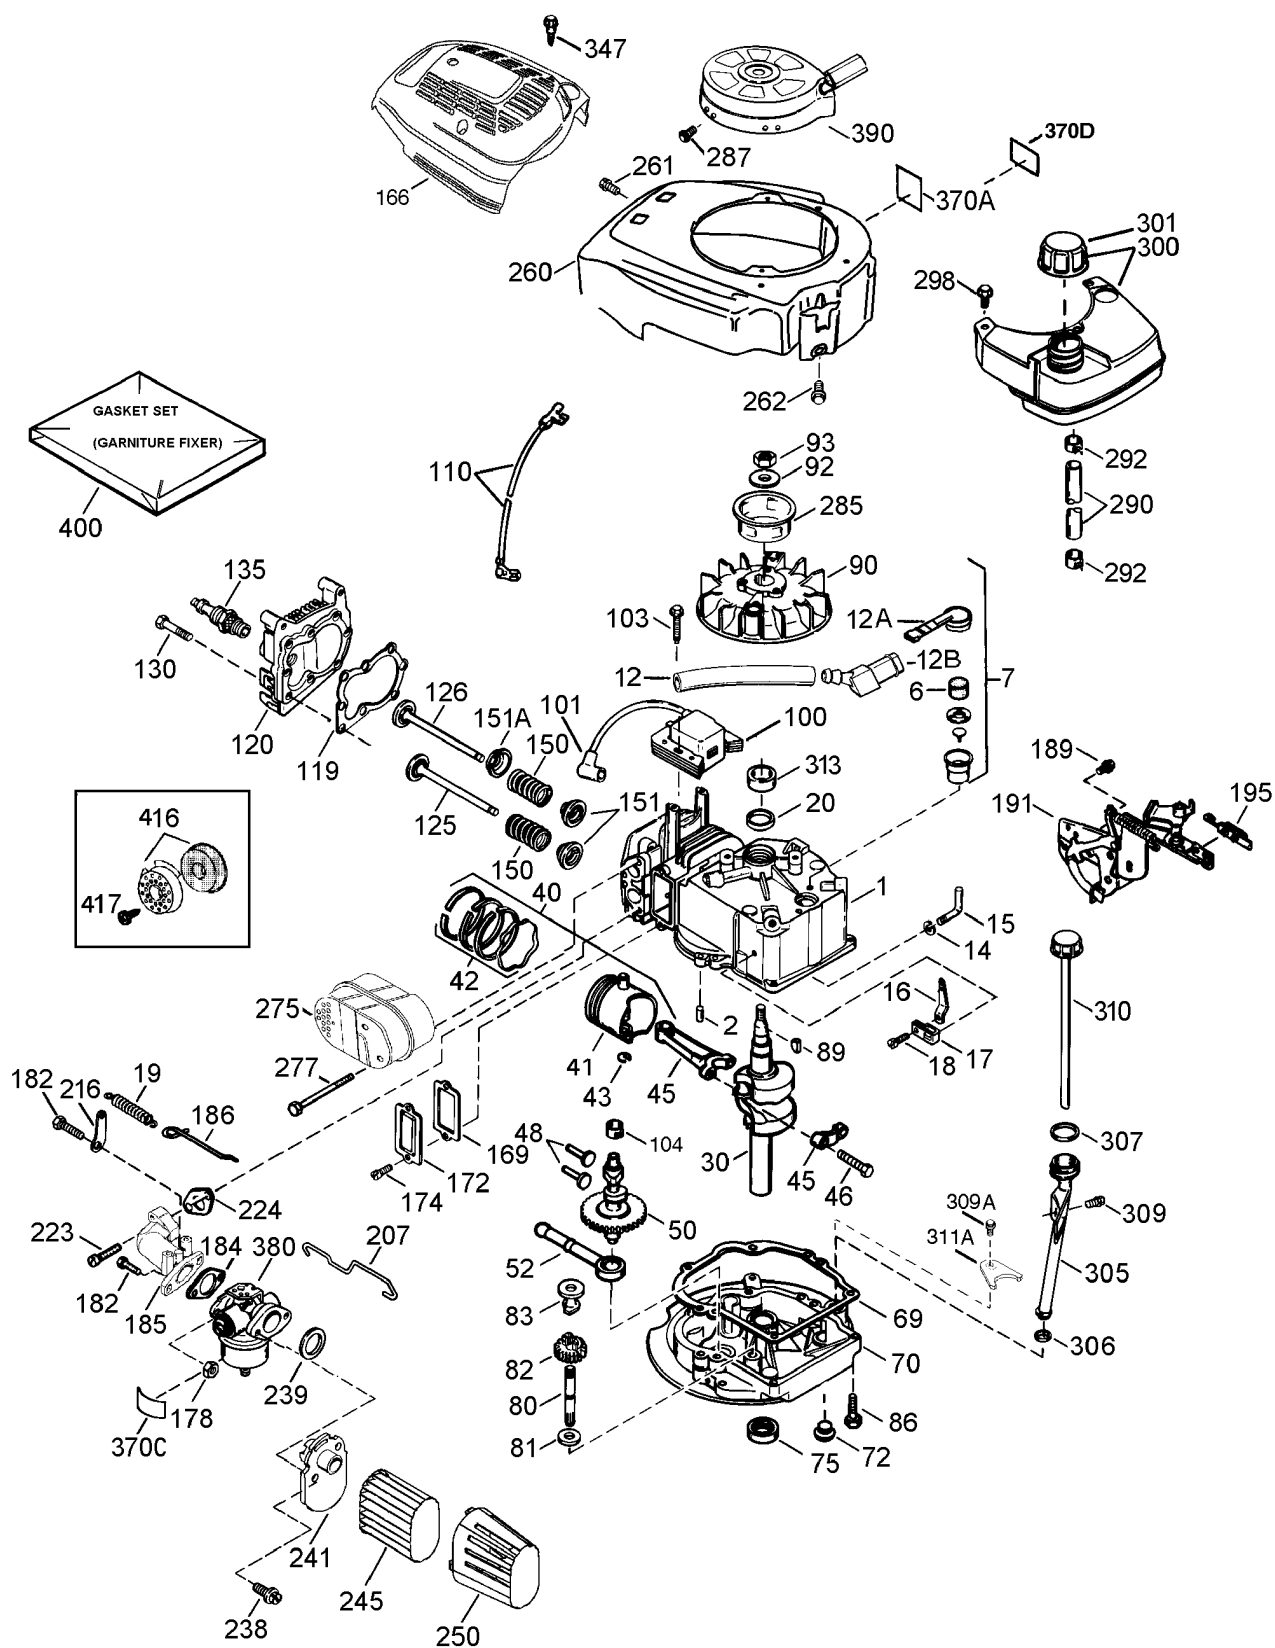

Engine Assembly No. 1


Tecumseh Model No. LEV120-362005A

Ref	Part No.	Qty.	Description
④1	37465	1	Cylinder(Incl. Ref. #2, 20 And 150)
④2	26727	2	Pin-Dowel
④6	33734	1	Element-Element
④7	36557	1	Breather ASM (Incl. Ref. #6 And 12a)
④12	36775	1	Tube-Breather
④12A	36558	1	Breather Cover And Tube (Incl. Ref. #12b)
④12B	36694	1	Elbow-Tube, Breather
④14	28277	1	Washer
④15	30589	1	Governor Rod (Incl. Ref. #14)
④16	34839A	1	Lever-Governor
④17	31335	1	Clamp-Governor
④18	651018	1	Screw
④19	36281	1	Spring
④20	32600	1	Seal-Oil
④30	37692	1	Crankshaft
④40	40027	1	Piston, Pin And Ring Set (Std.)
④41	40042	1	Piston And Pin ASM (Std.) (Incl. Ref. #43)
④42	40006	1	Ring Set
④43	20381	2	Ring-Retaining
④45	36777	1	Connecting Rod ASM (Incl. Ref. #46)
④46	32610A	2	Screw
④48	27241	2	Lifter-Valve
④50	37460	1	Camshaft (Exhaust Mcr) (Incl. Ref. #104)
④52	29914	1	Oil Pump ASM
③④69	37609	1	Gasket-Mounting Flange
④70	37608	1	Mounting Flange (Incl. Ref. #72-83, 306, 309a And 311a)
④72	37614	1	Plug-Drain, Oil
④75	27897	1	Seal-Oil
④80	30574A	1	Shaft-Governor
④81	30590A	1	Washer
④82	30591	1	Governor Gear ASM (Incl. Ref. #81)
④83	30588A	1	Spool-Governor
④86	650488	6	Screw
④89	611004	1	Key-Woodruff
④90	611112	1	Flywheel
④92	650815	1	Washer-Belleville
④93	650816	1	Nut-Flywheel
④100	34443C	1	Ignition-Solid State
④101	610118	1	Cover-Spark Plug
④103	651007	2	Screw-Torx, T-15 (10-24 X 15/16")
④104	37480	1	Bushing-Cam
④110	37047	1	Wire-Ground
③④119	36787	1	Gasket-Head, Cylinder
④120	37714	1	Sprocket Assembly

Ref	Part No.	Qty.	Description
④125	36780	1	Exhaust Valve (1/32" Os) (Incl. Ref. #151)
④125	37288	1	Exhaust Valve (Std.) (Incl. Ref. #151)
④126	37289	1	Intake Valve (Std.) (Incl. Ref. #151and 151a)
④130	6021A	8	Screw, 5/16-18 X 1-7/16"
④135	35395	1	Spark Plug (Rn4c)
④150	31672	2	Spring-Valve
④151	31673	2	Cap-Valve Spring
④151A	40017	1	Bearing-Trans
④166	37813	1	Engine Shroud (Green)
③④169	36783	1	Gasket-Cover, Valve
④172	36784	1	Cover-Valve
④174	30200	2	Screw
④178	29752	2	Nut And Lockwasher ASM
④182	6201	2	Screw
③④184	26756	1	Gasket-Carburetor
④185	37466	1	Pipe-Intake
④186	32653	1	Link-Governor
④189	650839	2	Screw
④191	36559A	1	S.e. Brake Bracket (Incl. Ref. #195)
④195	610973	1	Terminal
④207	34336A	1	Link-Throttle
④216	33086	1	Lever-Rpm Adjusting
④223	650451	2	Screw
③④224	36786	1	Gasket-Pipe, Intake
④238	650932	2	Screw
③④239	34338	1	Gasket-Air Cleaner
④241	36919	1	Vollar-Air Cleaner
④245	36905	1	Filter-Air Cleaner
④250	37122	1	Cover-Air Cleaner
④260	37696A	1	Housing-Blower
④261	30200	2	Screw
④262	650831	2	Screw
④275	37498	1	Muffler
④277	650988	2	Screw
④285	35000A	1	Cup-Starter
④287	650926	2	Screw, 8-32 X 21/64"
④290	29774	1	Line-Fuel
④292	26460	2	Clamp-Fuel Line
④298	28763	2	Screw

Engine Assembly No. 2


Tecumseh Model No. LEV120-362005A

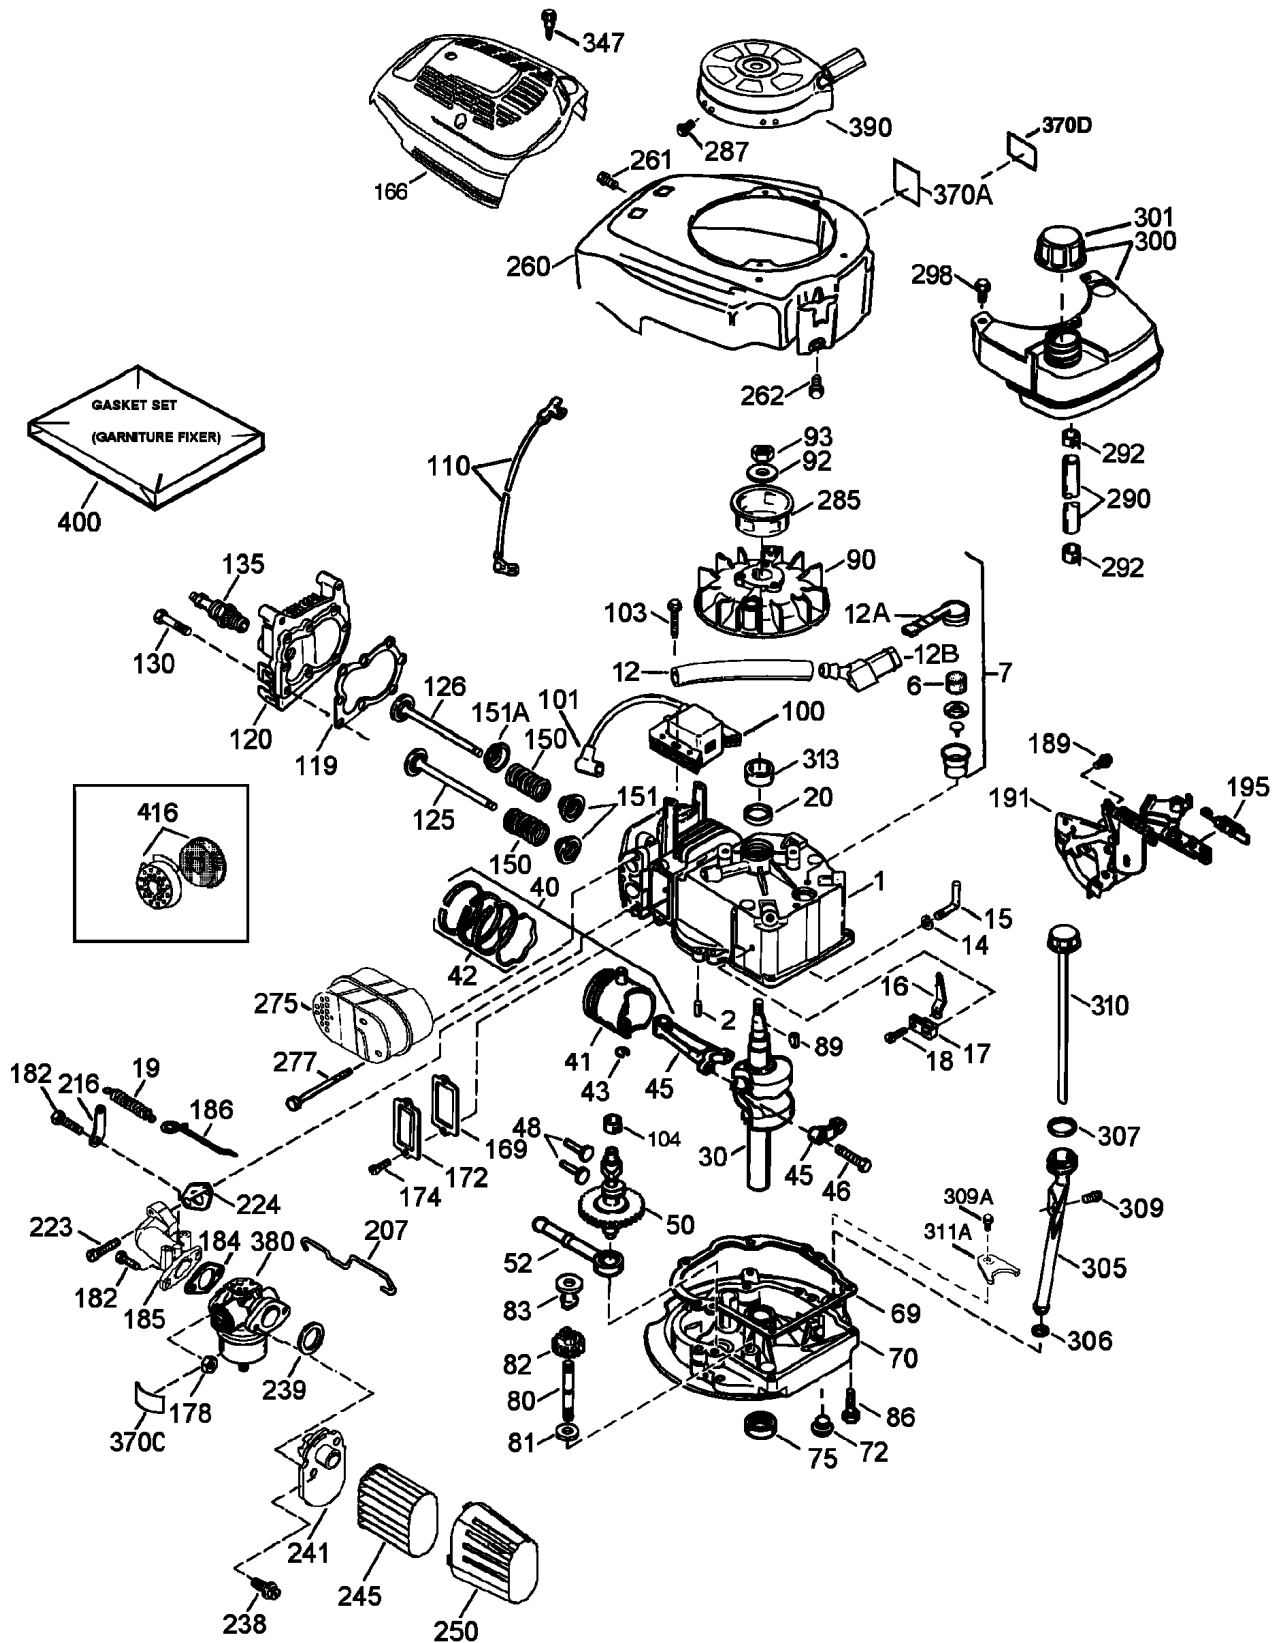

Engine Assembly No. 2


Tecumseh Model No. LEV120-362005A

Ref	Part No.	Qty.	Description				
④ 300	35586A	1	Fuel Tank (Incl. Ref. #292 And 301)				
④ 301	36246	1	Cap-Fuel				
④ 305	35647	1	Tube-Oil Fill				
③ ④ 306	37610	1	O-Ring				
④ 307	35499	1	O-Ring				
④ 309	650562	1	Screw				
④ 309A	650783	1	Screw-HH				
④ 310	35648	1	Dipstick				
④ 311A	37611	1	Bracket-Hold Down				
④ 313	34080	1	Spacer				
④ 347	650898A	1	Screw				
④ 370A	36261	2	Decal-Instruction				
④ 370C	37695	1	Decal-Primer				
④ 370D	35977	1	Decal-Caution				
④ 380	640303	1	Carburetor (Incl. Ref. #184)				
④ 390	590739	1	Rewind Starter ASM				
④ 400	37613	1	Gasket Set (Incl. Items Marked Pk In Notes)				
④ 416	37530	1	Spark Arrestor Kit				
④	750876	1	Shortblock				

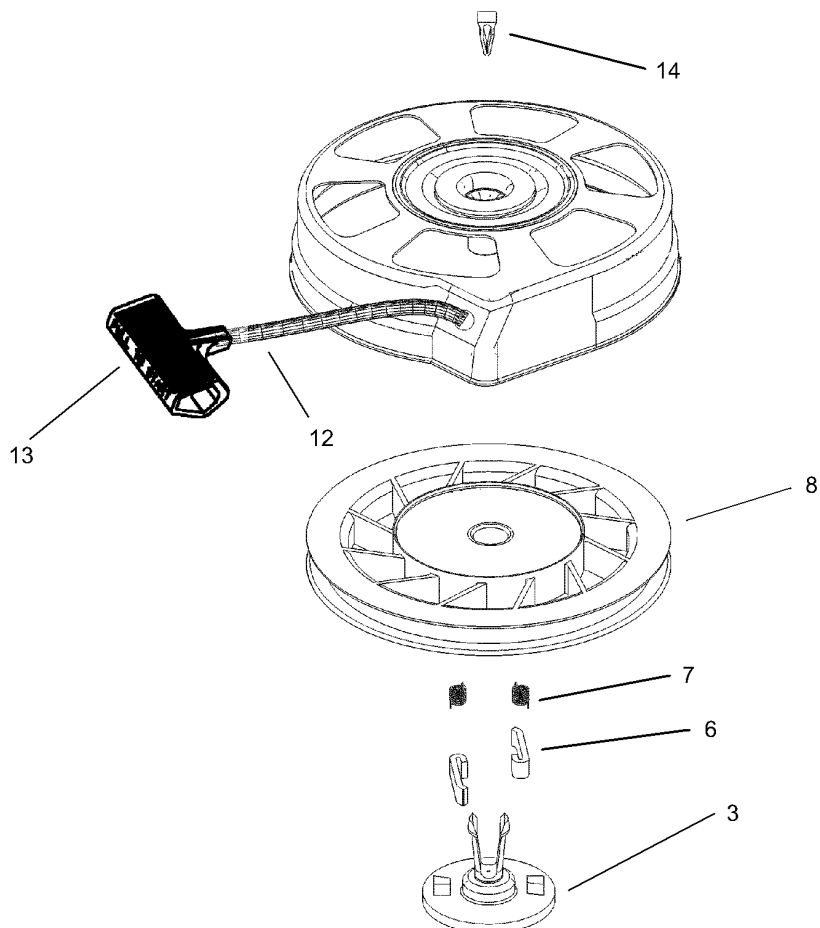

Recoil Starter Assembly No. 590739
Tecumseh Model No. LEV120-362005A

Ref	Part No.	Qty.	Description				
40	590739	1	Rewind Starter ASM				
43	590740	1	Retainer				
46	590616	2	Dog-Starter				
47	590617	2	Spring-Dog				
48	590618A	1	Pulley And Rewind Spring ASM				
411	590638A	1	Starter Housing ASM (40 Degree Grommet)				
412	590535	1	Rope-Starter (Length 98" X 9/64" Dia)				
413	590701	1	Handle-Starter				
414	590760	1	Clip-Spring				

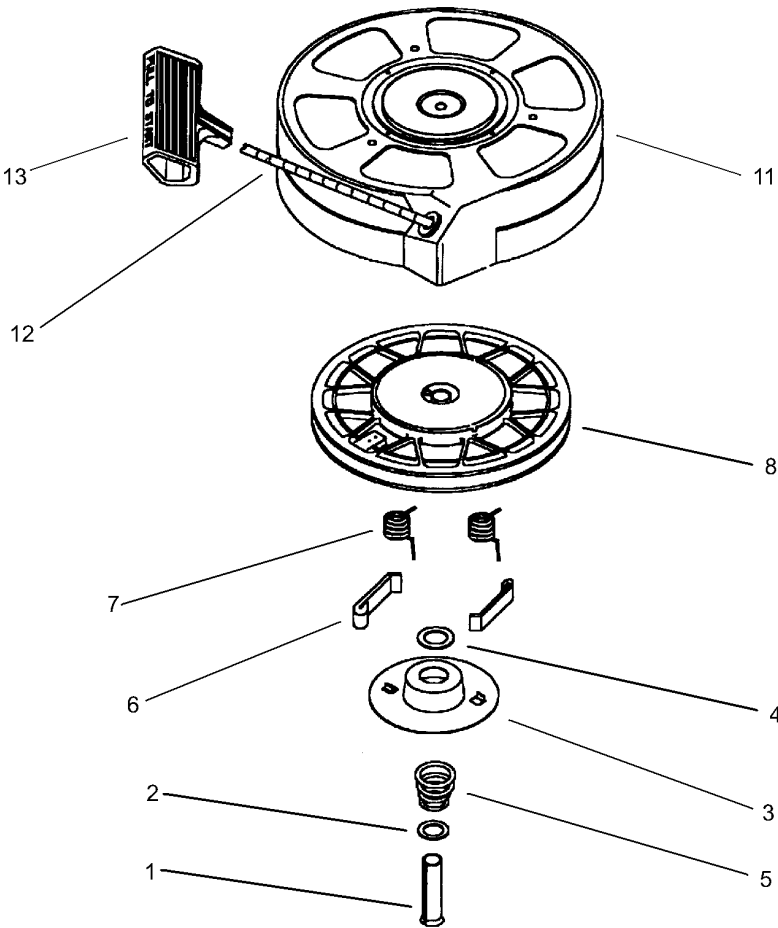

Recoil Starter Assembly No. 590702 (Optional)
Tecumseh Model No. LEV120-362005A

Ref	Part No.	Qty.	Description				
④0	590702	0	Recoil Starter ASM				
④1	590599A	1	Pin-Spring (Incl. Ref. #4)				
④2	590600	1	Washer				
④3	590696	1	Retainer				
④4	590601	1	Washer				
④5	590697	1	Spring-Brake				
④6	590698	2	Dog-Starter				
④7	590699	2	Spring-Dog				
④8	590700	1	Pulley And Spring-Rewind				
④11	590703A	1	Starter Housing ASM (40 Degree Grommet)				
④12	590535	1	Rope-Starter (Length 98" X 9/64" Dia)				
④13	590701	1	Handle-Starter				

NOTES

NOTES

LAWN-BOY®