

LAWN-BOY®

Silver Series® Lawnmower

Model No. 10272C - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

- ❶


Not serviced separately
- ❷

Included in Repair Kit No. 632809
- ❸

Obtain parts from your local Tecumseh dealer

Contents


Description	Page	Description	Page
Housing, Handle Bracket and Wheel Assembly	 3	Recoil Starter Assembly No. 590739	
Engine and Blade Assembly	 4	Tecumseh Model LV195EA-362005B	 11
Handle Assembly	 5	Recoil Starter Assembly No. 590702 (Optional)	
Engine Assembly No. 1 Tecumseh Model LV195EA-362005B	 7	Tecumseh Model LV195EA-362005B	 12
Engine Assembly No. 2 Tecumseh Model LV195EA-362005B	 9		
Carburetor Assembly No. 640303 Tecumseh Model LV195EA-362005B	 6		

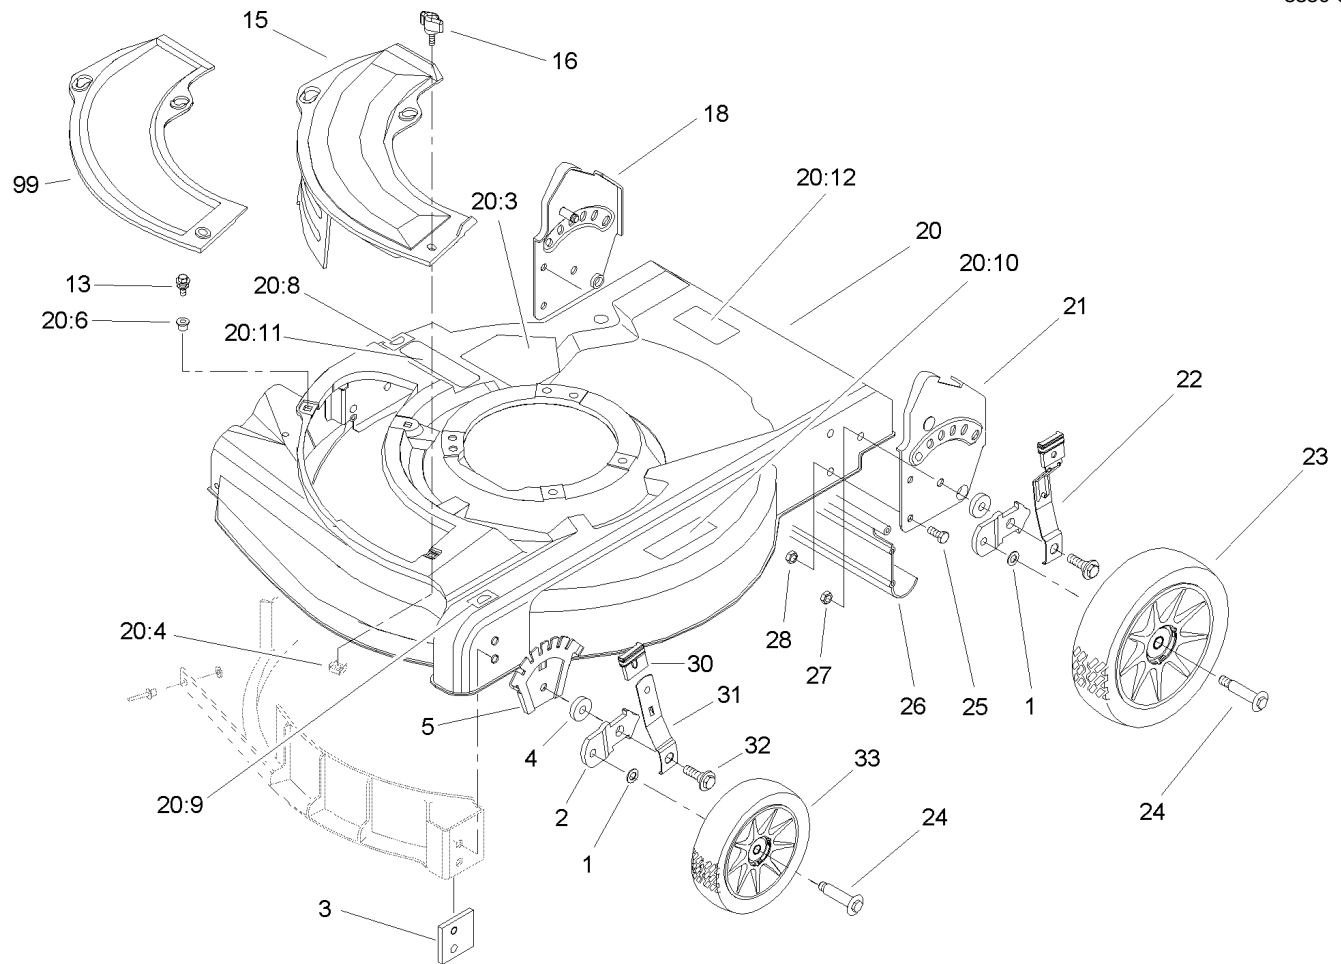

Housing, Handle Bracket and Wheel Assembly


Ref	Part No.	Qty.	Description
1	40-1940	4	Washer
2	95-7403-03	4	Bracket-Height Adjustment, Wheel
3	92-7731	2	Plate-Baffle
4	92-4890	4	Washer-Wheel
5	92-4881-03	2	Plate-Height, Adjustment
13	614677	2	Screw-Sems
15	92-8630	1	Plate-Mulch
16	98-8332	1	Knob
18	92-7742	1	RH Handle Bracket ASM
20	105-1264	1	Housing
20:3	56-6270	1	Decal-Danger
20:4	613765	1	Nut-Cage
20:6	94-1610	2	Nut-Clip
20:8	104-7616	1	Decal-Hoc, LH
20:9	104-7617	1	Decal-Hoc, RH
20:10	104-7627	1	Decal-Warning
20:11	104-7629	1	Decal-Warning
20:12	104-7634	1	Decal-Manual
21	92-7743	1	LH Handle Bracket ASM
22	92-1005	2	Rear Spring Arm ASM
23	95-7437	2	Wheel And Tire ASM
24	92-1099	4	Bolt-Shoulder
25	322-3	4	Screw-HH
26	92-8647	1	Shield-Trailing

Ref	Part No.	Qty.	Description
27	3296-39	2	Nut-Lock, NI
28	3296-29	4	Nut-Lock, NI
30	92-1008	4	Knob-Lever, Height Adjustment
31	614687	2	Arm-Front Spring
32	614672	4	Bolt-Shoulder
33	95-7436	2	Wheel And Tire ASM
99	95-7052	1	Plate-Opening, Chute

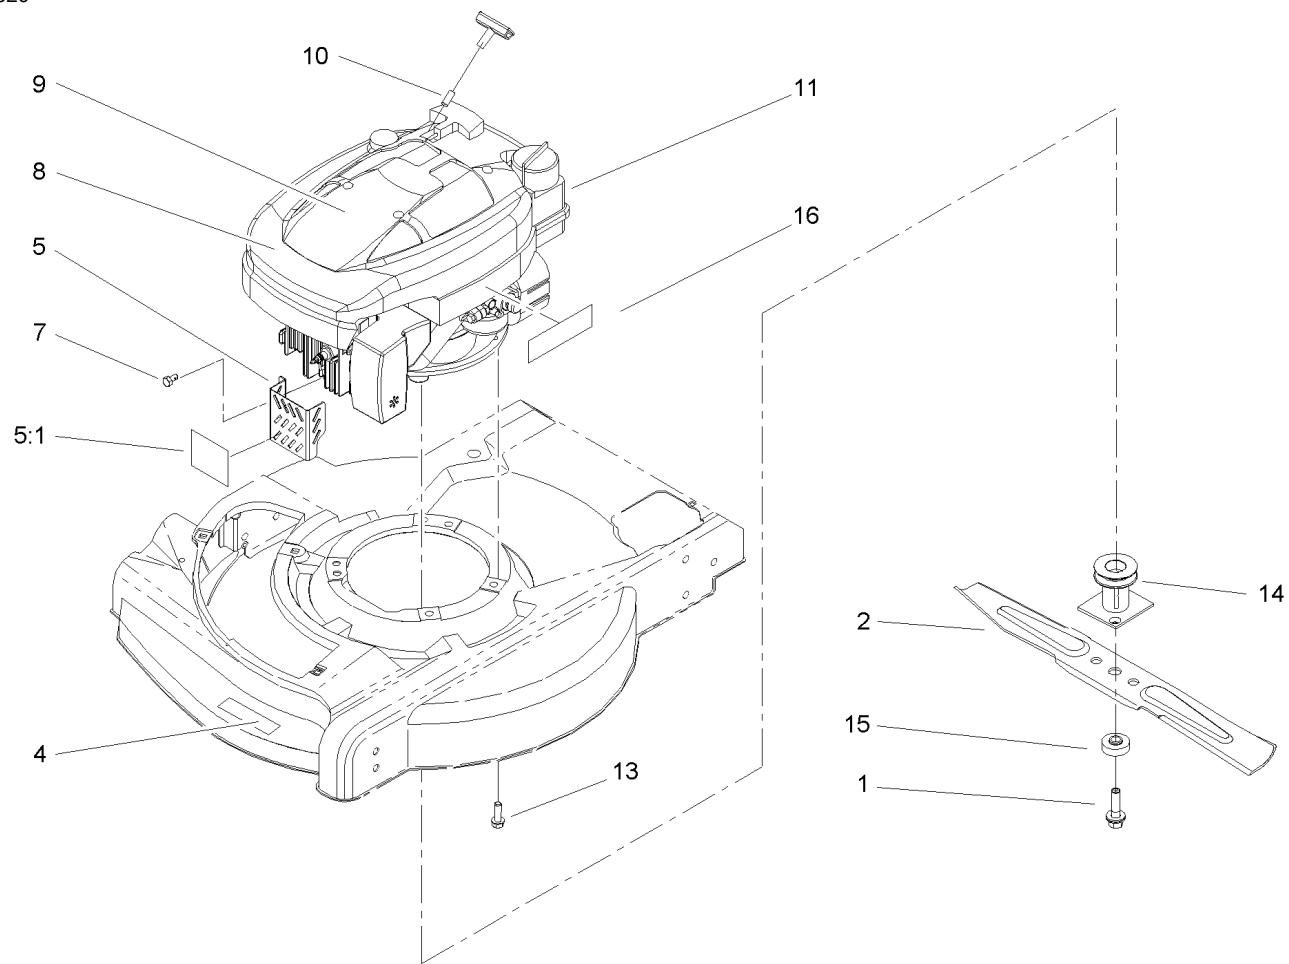

Engine and Blade Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	612543-03	1	Blade				
4	104-7958	1	Decal-Deck				
5	106-8387	1	Muffler Guard Assembly				
5:1	106-5517	1	Decal-Surface, Hot				
7	32144-85	1	Screw-HWH				
8	98-1593	1	Applique				
9	106-8375	1	Decal-Recoil				
10	92-1701	1	Stop-Rope				
11		1	Engine-Tecumseh, Lv195ea-362005b				
13	95-1726	3	Screw-Taptite				
14	106-3950	1	Driver-Blade				
15	106-6826	1	Spacer				
16	105-6832	1	Decal-Primer				

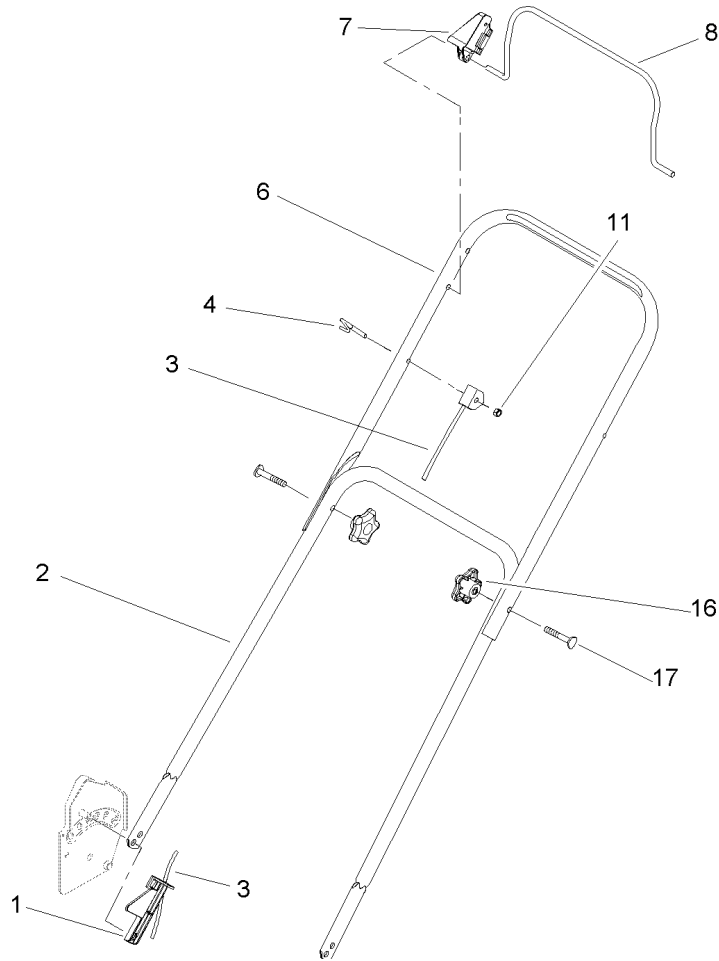


Handle Assembly

Ref	Part No.	Qty.	Description				
1	104-1013	1	Guard-Cable				
2	614643-05	1	Handle-Lower				
3	100-5989	1	Brake Cable ASM				
4	106-8330	1	Guide-Rope				
6	100-2888-05	1	Handle-Upper				
7	107-0757	1	Stop-Pivot				
8	93-4184-03	1	Bail-Brake				
11	3296-73	1	Nut-Lock, NI				
16	106-4161	2	Knob-Handle				
17	614697	2	Screw				

Engine Assembly No. 1

Tecumseh Model LV195EA-362005B

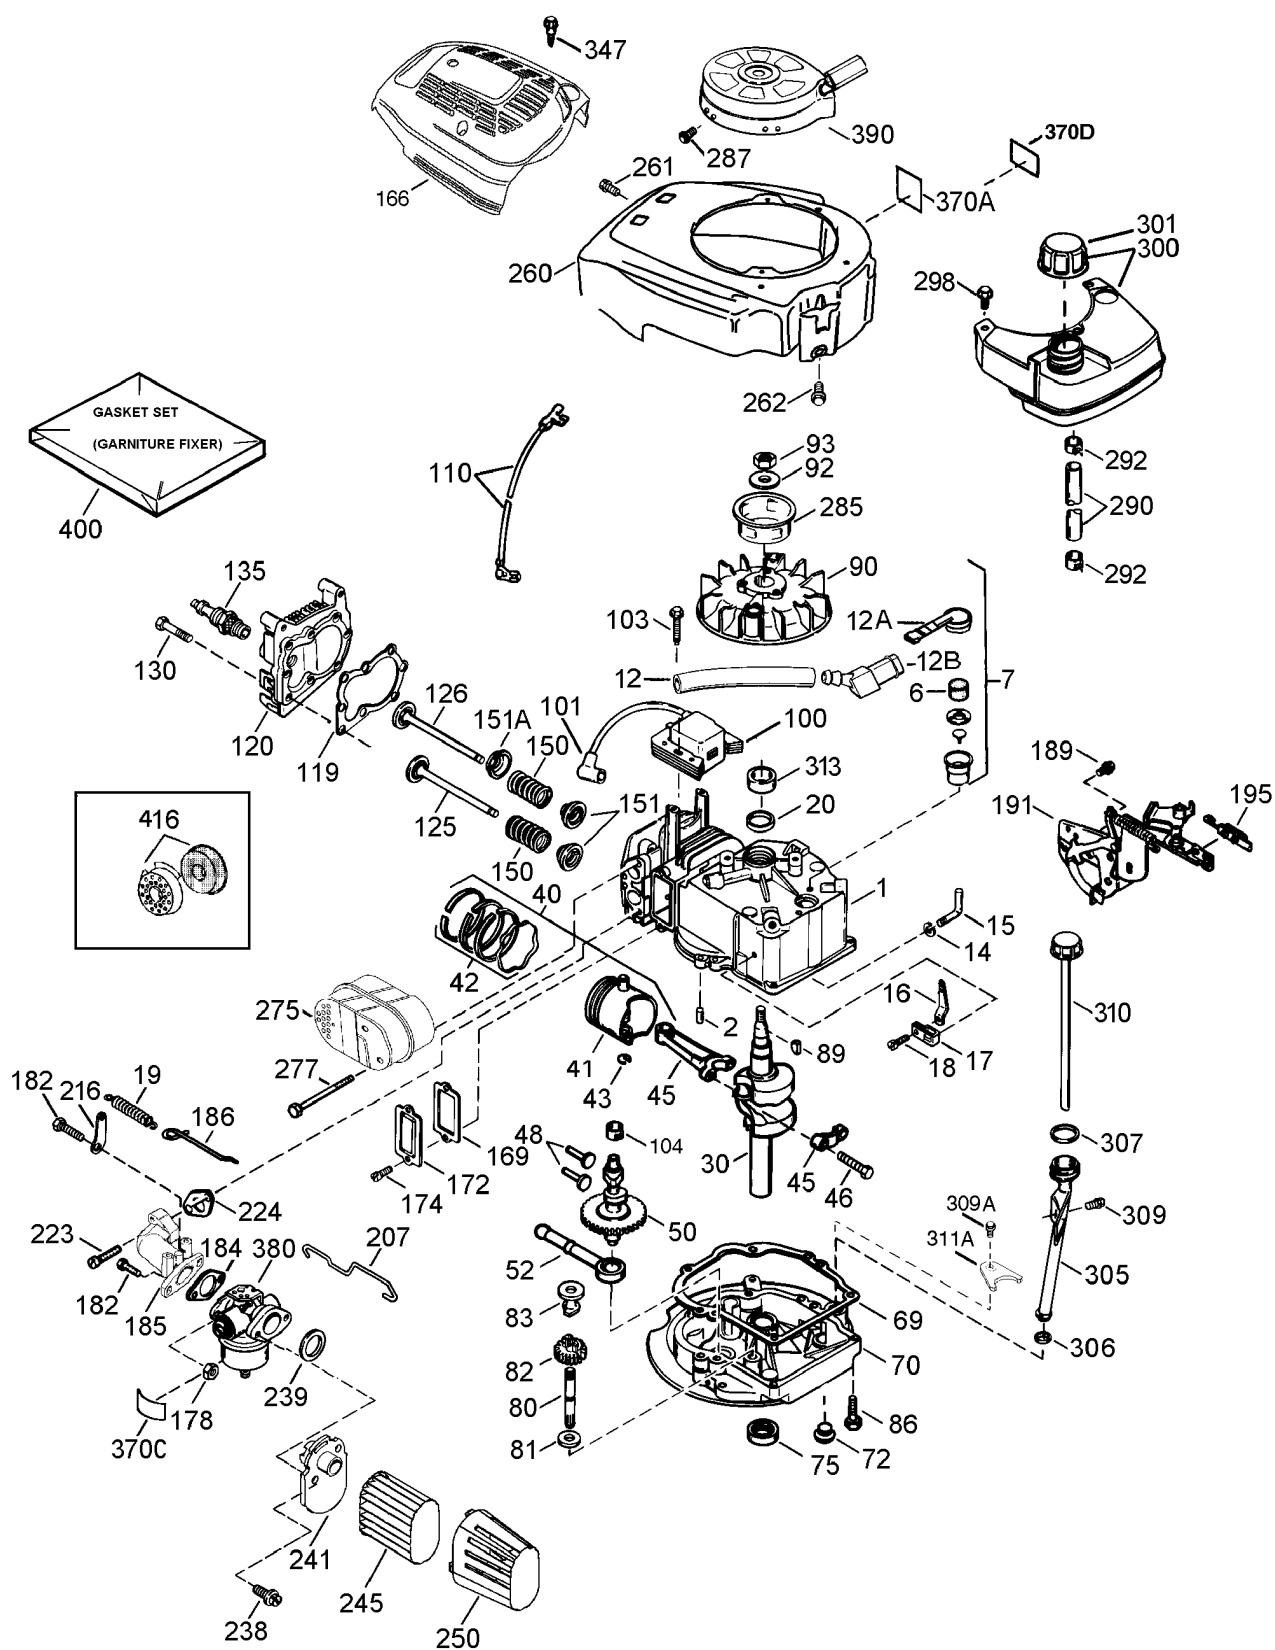


Engine Assembly No. 1

Tecumseh Model LV195EA-362005B

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③1	37465	1	Cylinder(Incl. Ref. #2, 20 And 150)	③125	37288	1	Exhaust Valve (Std.) (Incl. Ref. #151)
③2	26727	2	Pin-Dowel	③126	37289	1	Intake Valve (Std.) (Incl. Ref. #151and 151a)
③6	33734	1	Element-Breather	③130	6021A	8	Screw, 5/16-18 X 1-7/16in
③7	36557	1	Breather ASM (Incl. Ref. #6 And 12a)	③135	35395	1	Resistor-Spark Plug (Rj19Im)
③12	36775	1	Tube-Breather	③150	31672	2	Spring-Valve
③12A	36558	1	Breather Cover And Tube (Incl. Ref. #12b)	③151	31673	2	Cap-Valve Spring
③12B	36694	1	Elbow-Tube, Breather	③151A	40017	1	Seal-Intake Valve
③14	28277	1	Washer	③166	37813	1	Engine Shroud (Green)
③15	30589	1	Governor Rod (Incl. Ref. #14)	②③169	36783	1	Gasket-Valve Cover
③16	34839A	1	Lever-Governor	③172	36784	1	Cover-Valve
③17	31335	1	Clamp-Governor Lever	③174	30200	2	Screw, 10-24 X 9/16in
③18	651018	1	Screw, T-15, 8-32 X 19/64in	③178	29752	2	Nut And Lock Washer, 1/4-28
③19	36281	1	Spring-Extension	③182	6201	2	Screw, 1/4-28 X 7/8in
③20	32600	1	Seal-Oil	②③184	26756	1	Gasket-Carburetor To Intake Pipe
③30	37692	1	Crankshaft	③185	37466	1	Pipe-Intake
③40	40027	1	Piston, Pin And Ring Set (Std.)	③186	32653	1	Link-Governor
③41	40042	1	Piston And Pin ASM (Std.) (Incl. Ref. #43)	③189	650839	2	Screw, 1/4-20 X 3/8in
③42	40006	1	Ring Set (Std.)	③191	36559A	1	S.e. Brake Bracket (Incl. Ref. #195)
③43	20381	2	Retaining Ring-Piston Pin	③195	610973	1	Terminal
③45	36777	1	Connecting Rod ASM (Incl. Ref. #46)	③207	34336A	1	Link-Throttle
③46	32610A	2	Bolt-Connecting Rod	③216	33086	1	Lever-R.p.m. Adjusting
③48	27241	2	Lifter-Valve	③223	650451	2	Screw, 1/4-20 X 1in
③50	37460	1	Camshaft (Exhaust Mcr) (Incl. Ref. #104)	②③224	36786	1	Gasket-Intake Pipe
③52	29914	1	Oil Pump ASM	③238	650932	2	Screw, 10-32 X 49/64in
②③69	37609	1	Gasket-Mounting Flange	②③239	34338	1	Gasket-Air Cleaner
③70	37608	1	Mounting Flange (Incl. Ref. #72-83, 306, 309a And 311a)	③241	36919	1	Collar-Air Cleaner
③72	37614	1	Plug-Oil Drain	③245	36905	1	Filter-Air Cleaner
③75	27897	1	Seal-Oil	③250	37122	1	Cover-Air Cleaner
③80	30574A	1	Shaft-Governor	③260	37696A	1	Housing-Blower
③81	30590A	1	Washer	③261	30200	2	Screw, 10-24 X 9/16in
③82	30591	1	Governor Gear ASM (Incl. Ref. #81)	③262	650831	2	Screw, 1/4-20 X 1/2in
③83	30588A	1	Spool-Governor	③275	37498	1	Muffler
③86	650488	6	Screw, 1/4-20 X 1-1/4in	③277	650988	2	Screw, 1/4-20 X 2-9/32in
③89	611004	1	Key-Flywheel	③285	35000A	1	Cup-Starter
③90	611112	1	Flywheel	③287	650926	2	Screw, 8-32 X 21/64in
③92	650815	1	Washer-Belleville	③290	29774	1	Line-Fuel
③93	650816	1	Nut-Flywheel	③292	26460	2	Clamp-Fuel Line
③100	34443C	1	Ignition-Solid State	③298	28763	2	Screw
③101	610118	1	Cover-Spark Plug				
③103	651007	2	Screw, T-15, 10-24 X 15/16in				
③104	37480	1	Bushing-Cam				
③110	37047	1	Wire-Ground				
②③119	36787	1	Gasket-Cylinder Head				
③120	37714	1	Sprocket Assembly				
③125	36780	1	Exhaust Valve (1/32" Os) (Incl. Ref. #151)				


Engine Assembly No. 2
Tecumseh Model LV195EA-362005B

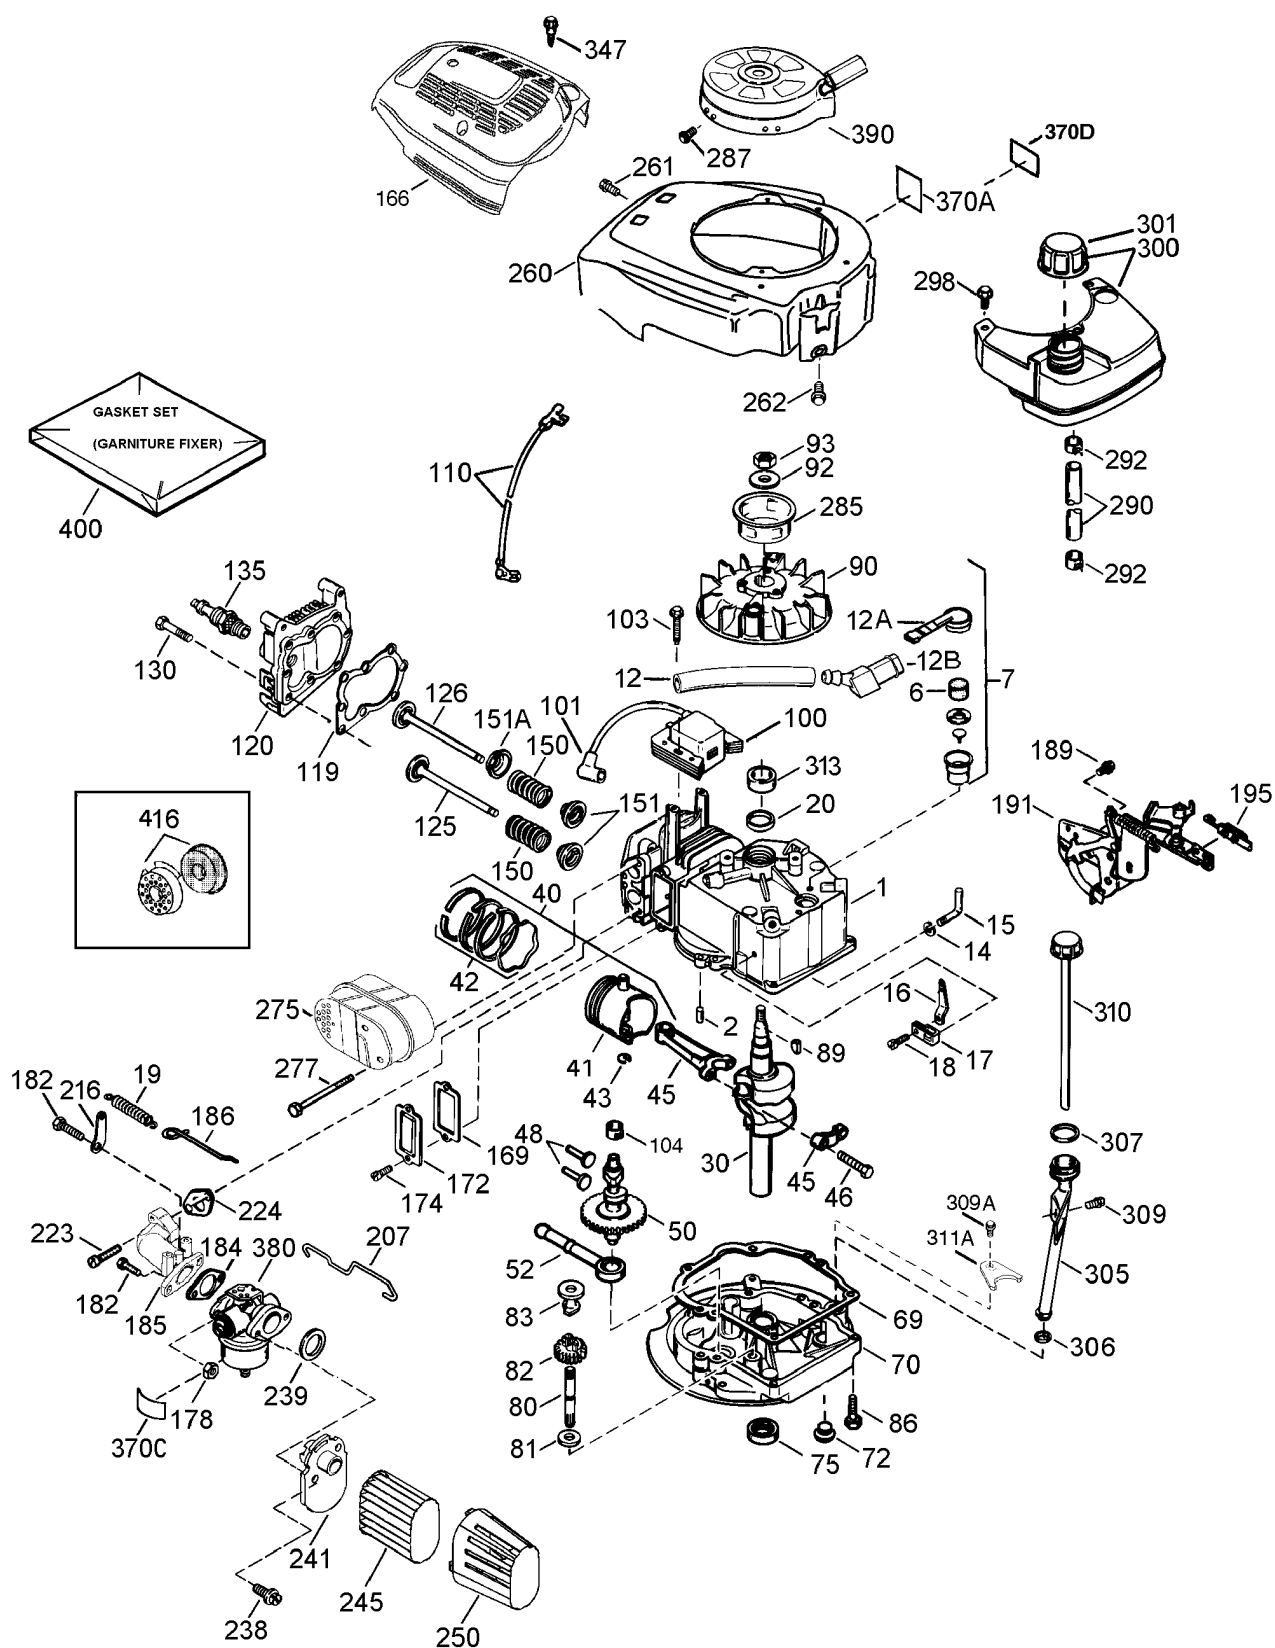

Engine Assembly No. 2


Tecumseh Model LV195EA-362005B

Ref	Part No.	Qty.	Description				
③300	35586A	1	Fuel Tank (Incl. Ref. #292 And 301)				
③301	36246	1	Fuel Cap ASM				
③305	35647	1	Tube-Oil Fill				
②③306	37610	1	O-Ring				
③307	35499	1	O-Ring				
③309	650562	1	Screw, 10-32 X 1/2in				
③309A	650783	1	Screw, 10-24 X 3/4in				
③310	35648	1	Dipstick				
③311A	37611	1	Bracket-Hold Down				
③313	34080	1	Spacer				
③347	650898A	1	Screw, 10-32 X 27/32in				
③370A	36261	2	Decal-Lubrication				
③370C	37695	1	Decal-Primer				
③370D	35977	1	Decal-Warning				
③380	640303	1	Carburetor (Incl. Ref. #184)				
③390	590739	1	Starter-Rewind				
③400	37613	1	Gasket Set				
③416	37530	1	Kit-Spark Arrestor (Optional)				
③	750876	1	Short Block Asm				

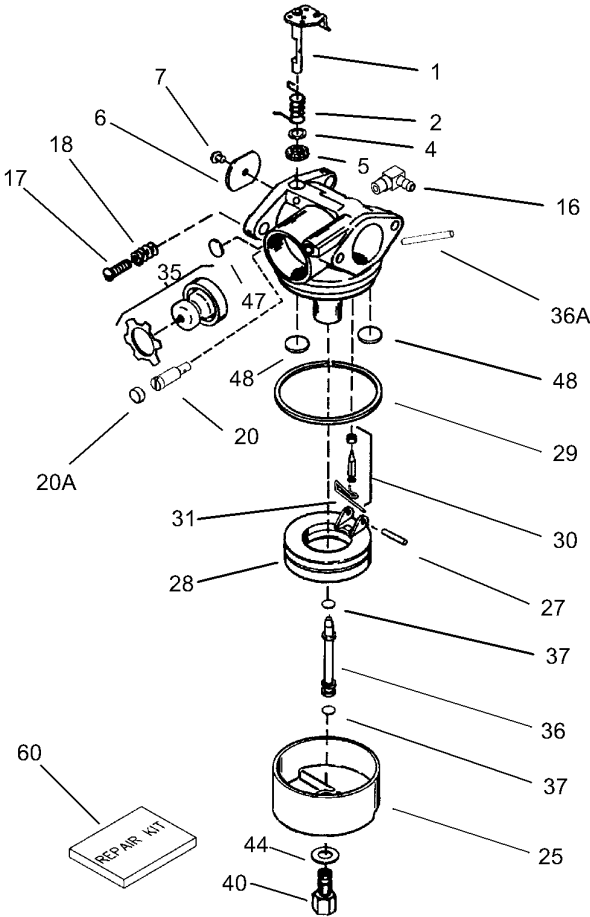


Carburetor Assembly No. 640303
Tecumseh Model LV195EA-362005B

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	631615	1	Throttle Shaft And Lever ASM	44	27110A	1	Washer-Bowl Nut
2	631767	1	Spring-Throttle Return	47	630748	1	Welch Plug-Idle Mixture Well
4	631184	1	Washer-Dust Seal	48	631027	2	Welch Plug-Atmospheric Vent
5	631183	1	Seal-Dust	60	632809	1	Repair Kit
6	640070	1	Shutter-Throttle				
7	650506	1	Screw-Shutter				
16	631807	1	Fitting-Fuel				
17	651025	1	Throttle Crack Screw/Idle Speedscrew				
18	630766	1	Spring-Tension				
20	640018	1	Screw-Idle Restrictor				
20A	640200	1	Cap-Idle Restrictor Screw				
25	631867	1	Bowl-Float				
27	631024	1	Shaft-Float				
28	632802	1	Float (Plastic)				
29	631028	1	O-Ring-Float Bowl				
30	632807	1	Inlet Needle, Seat, And Clip (Incl. Ref. #31)				
31	631022	1	Clip-Spring				
35	640259	1	Retainer Ring-Primerbulb (Red)				
36	640019	1	Tube-Main Nozzle				
36A	632766	1	Extension-Bowl Vent Tube				
37	632547	2	O-Ring-Main Nozzle Tube				
40	640087	1	High Speed Bowl Nut				

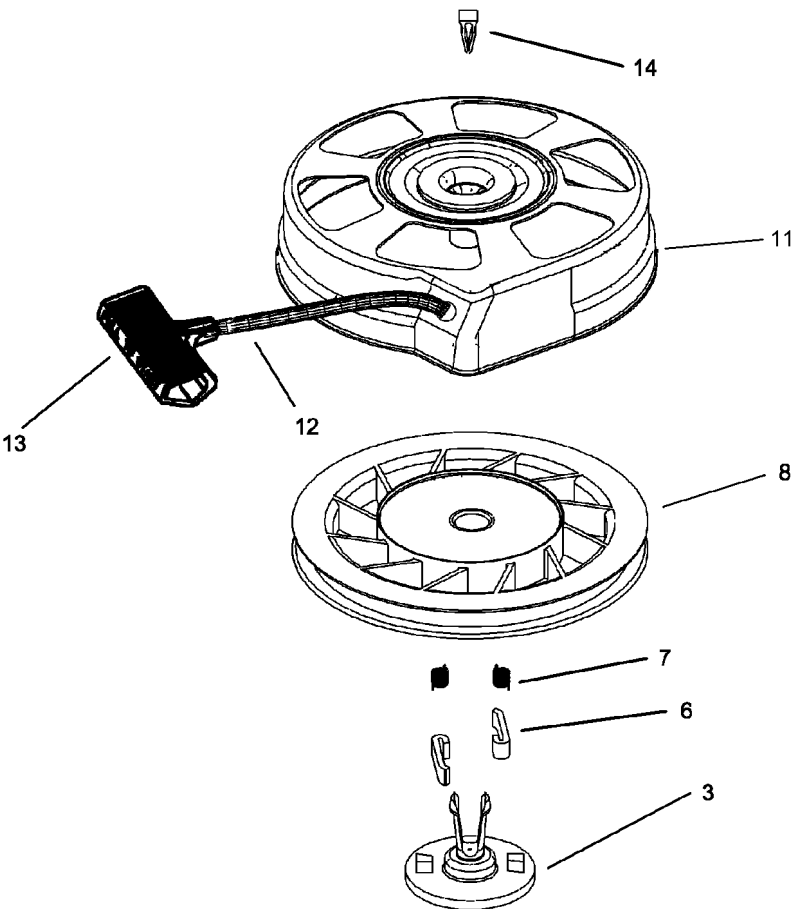

Recoil Starter Assembly No. 590739
Tecumseh Model LV195EA-362005B

Ref	Part No.	Qty.	Description				
3	590740	1	Retainer				
6	590616	2	Dog-Starter				
7	590617	2	Spring-Dog				
8	590618A	1	Pulley And Rewind Spring ASM				
11	590638A	1	Starter Housing ASM (40 Degree Grommet)				
12	590535	1	Rope-Starter (Length 98in X 9/64in Dia.)				
13	590701	1	Handle-Starter				
14	590760	1	Spring Clip				

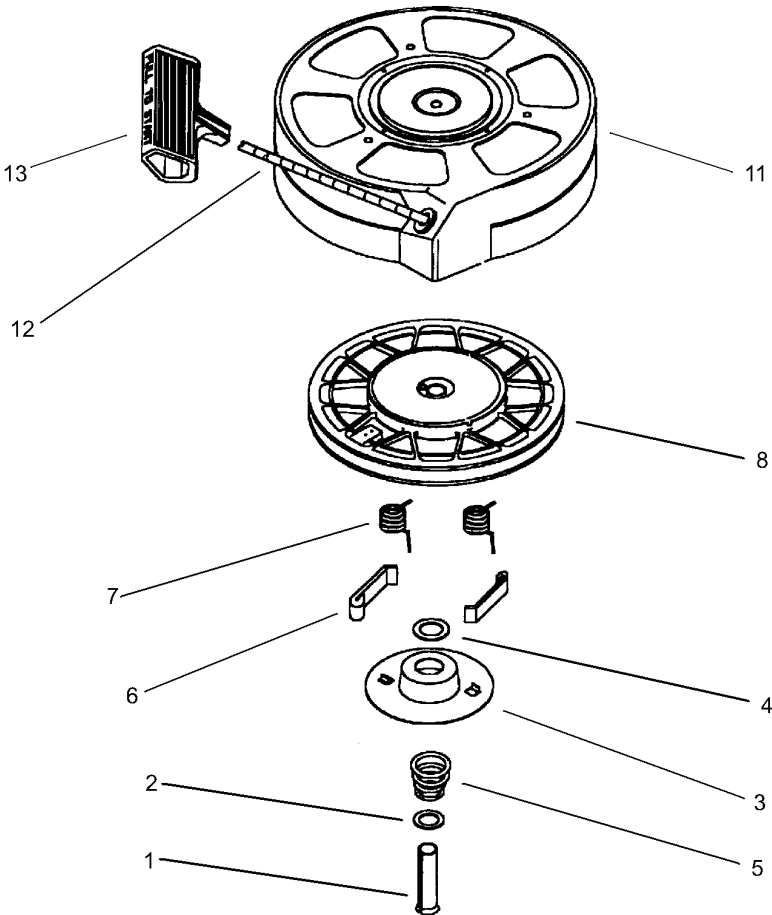

Recoil Starter Assembly No. 590702 (Optional)
Tecumseh Model LV195EA-362005B

Ref	Part No.	Qty.	Description				
❶1	590599A	1	Spring Pin ASM (Incl. Ref. #4)				
❷2	590600	1	Washer				
❸3	590696	1	Retainer				
❹4	590601	1	Washer				
❺5	590697	1	Spring-Brake				
❻6	590698	2	Dog-Starter				
❼7	590699	2	Spring-Dog				
❽8	590700	1	Pulley And Rewind Spring ASM				
❾11	590703A	1	Starter Housing ASM (40 Degree Grommet)				
❿12	590535	1	Rope-Starter (Length 98in X 9/64in Dia.)				
⓫13	590701	1	Handle-Starter				

NOTES

NOTES

NOTES

LAWN-BOY®