

LAWN-BOY®

Silver Series® Lawnmower

Model No. 10357 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HS.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

- ❶

Not illustrated
- ❷

Not serviced separately
- ❸

Included in Repair Kit No. 632809
- ❹

Obtain parts from your local Tecumseh dealer
- ❺


Included in Gasket Kit No. 37613A
- ❻

For Serial Range 240000001 through 240000625
- ❼

For Serial Range 240000626 and up

Contents


Description	Page	Description	Page
Housing Assembly	 3	Recoil Starter Assembly No. 590739	
Gear Case Assembly No. 104-7671	 4	Tecumseh Model LV195EA-362006B	 14
Gear Case and Wheel Assembly	 5	Recoil Starter Assembly No. 590702 (Optional)	
Engine and Blade Assembly	 6	Tecumseh Model LV195EA-362006B	 15
Handle Assembly	 7	Electric Starter Kit No. 37753 Tecumseh Model	
Electrical Assembly	 8	LV195EA-362006B	 16
Carburetor Assembly No. 640303 Tecumseh			
Model LV195EA-362006B	 9		
Engine Assembly No. 1 Tecumseh Model			
LV195EA-362006B	 10		
Engine Assembly No. 2 Tecumseh Model			
LV195EA-362006B	 12		

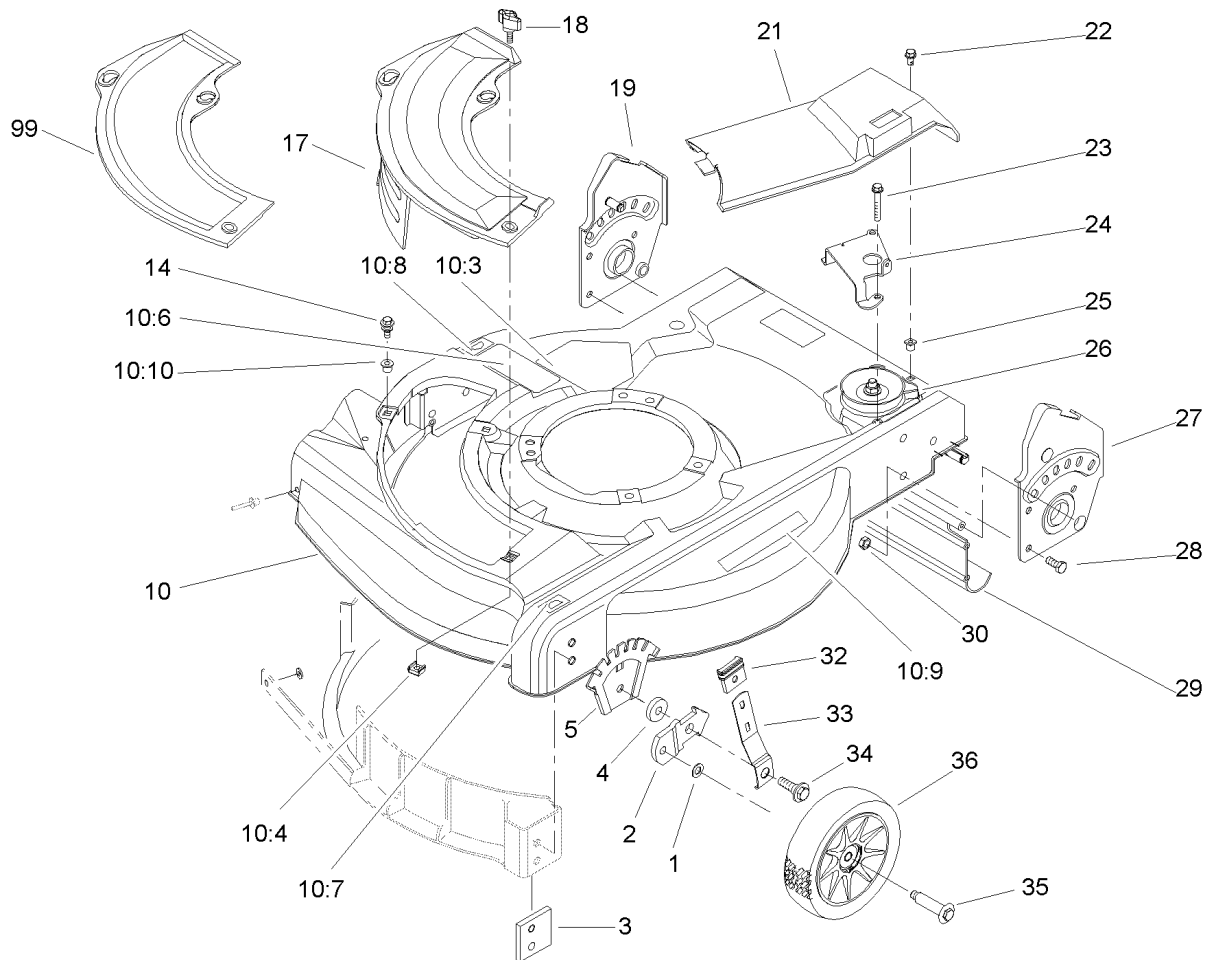

Housing Assembly


Ref	Part No.	Qty.	Description
1	40-1940	2	Washer
2	95-7403-03	2	Bracket-Height Adjustment, Wheel
3	92-7731	2	Plate-Baffle
4	92-4890	2	Washer-Wheel
5	92-4881-03	2	Plate-Height, Adjustment
10	98-4477	1	Deck ASM
10:3	43-8480	1	Decal-Danger
10:4	613765	1	Nut-Cage
10:6	99-6018	1	Decal-Warning
10:7	92-2914	1	Decal-Hoc, LH
10:8	92-2915	1	Decal-Hoc, RH
10:9	93-7250	1	Decal-Warning
10:10	94-1610	2	Nut-Clip
14	614677	2	Screw-Sems
17	92-8630	1	Plate-Mulch
18	98-8332	1	Knob
19	105-8602	1	RH Bracket ASM
21	95-7068	1	Cover-Drive
22	92-9665	1	Screw
23	65-5221	2	Screw-HWHTF
24	92-7728-03	1	Guide-Transmission
25	605120	1	Nut-Clip
26	104-7671	1	Gear Case ASM
27	105-8604	1	LH Bracket ASM

Ref	Part No.	Qty.	Description
28	322-3	6	Screw-HH
29	92-8647	1	Shield-Trailing
30	3296-29	6	Nut-Lock, NI
32	92-1008	2	Knob-Lever, Height Adjustment
33	614687	2	Arm-Front Spring
34	614672	2	Bolt-Shoulder
35	92-1099	2	Bolt-Shoulder
36	684776	2	Wheel And Tire ASM
99	95-7052	1	Plate-Opening, Chute

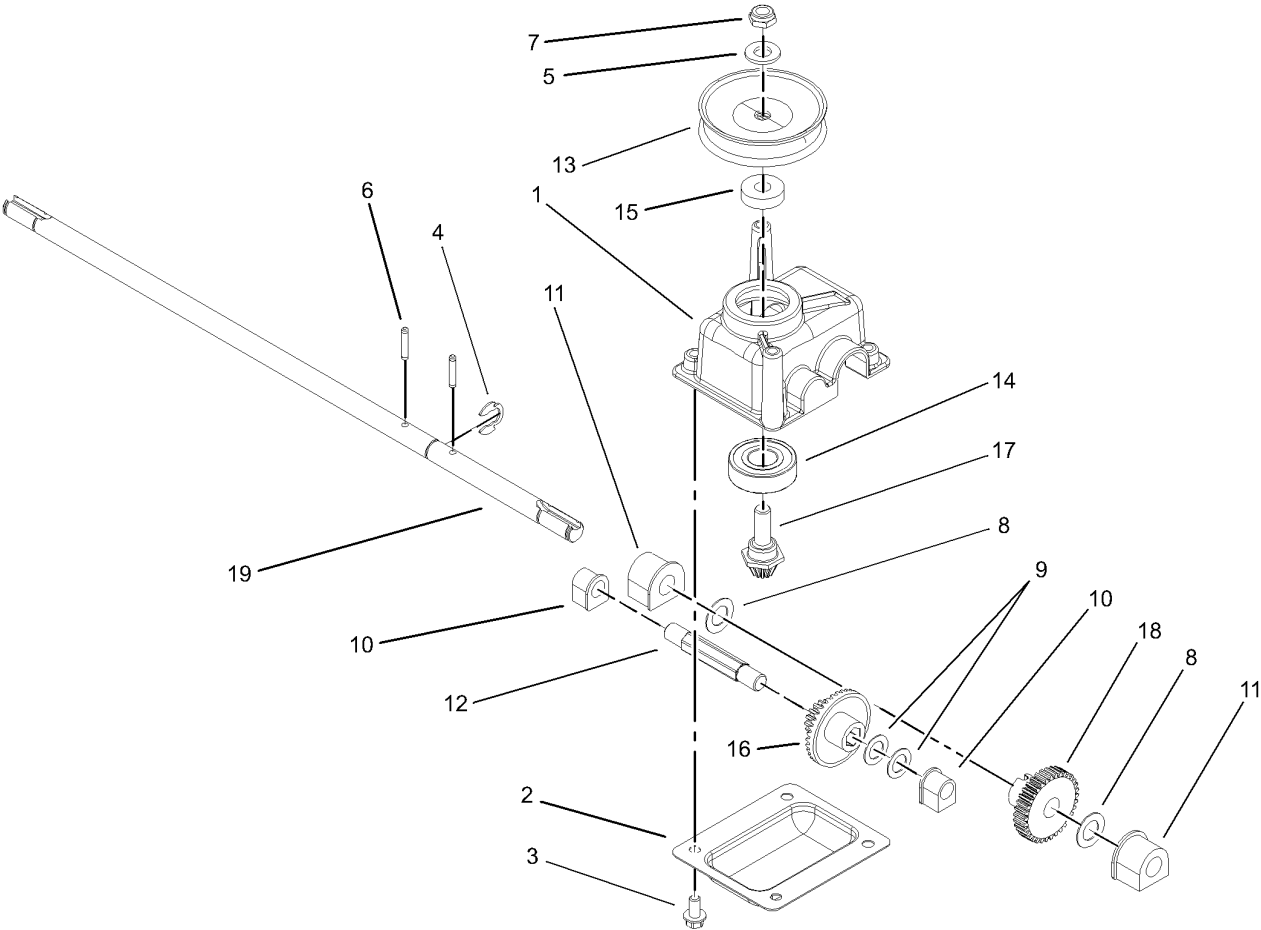

Gear Case Assembly No. 104-7671


Ref	Part No.	Qty.	Description				
1	104-7619	1	Case-Gear				
2	614668-03	1	Cover-Case, Gear				
3	32144-4	4	Screw-HWH				
4	32151-68	1	Ring-Retaining				
5	3256-24	1	Washer-Flat				
6	3285-19	2	Pin-Groove				
7	3296-5	1	Nut-Lock, NI				
8	36-4780	2	Washer				
9	36-4791	2	Washer-Thrust				
10	60-8750	2	Bushing				
11	60-8850	2	Bushing				
12	614696	1	Shaft-Intermediate				
13	614669	2	Half-Pulley				
14	100-1048	1	Bearing-Ball				
15	62-6660	1	Spacer				
16	104-7668	1	Gear-15t Spur, 37t Bevel				
17	104-7667	1	Gear-Pinion, Bevel				
18	614596	1	Gear				
19	104-7670	1	Shaft-Output				

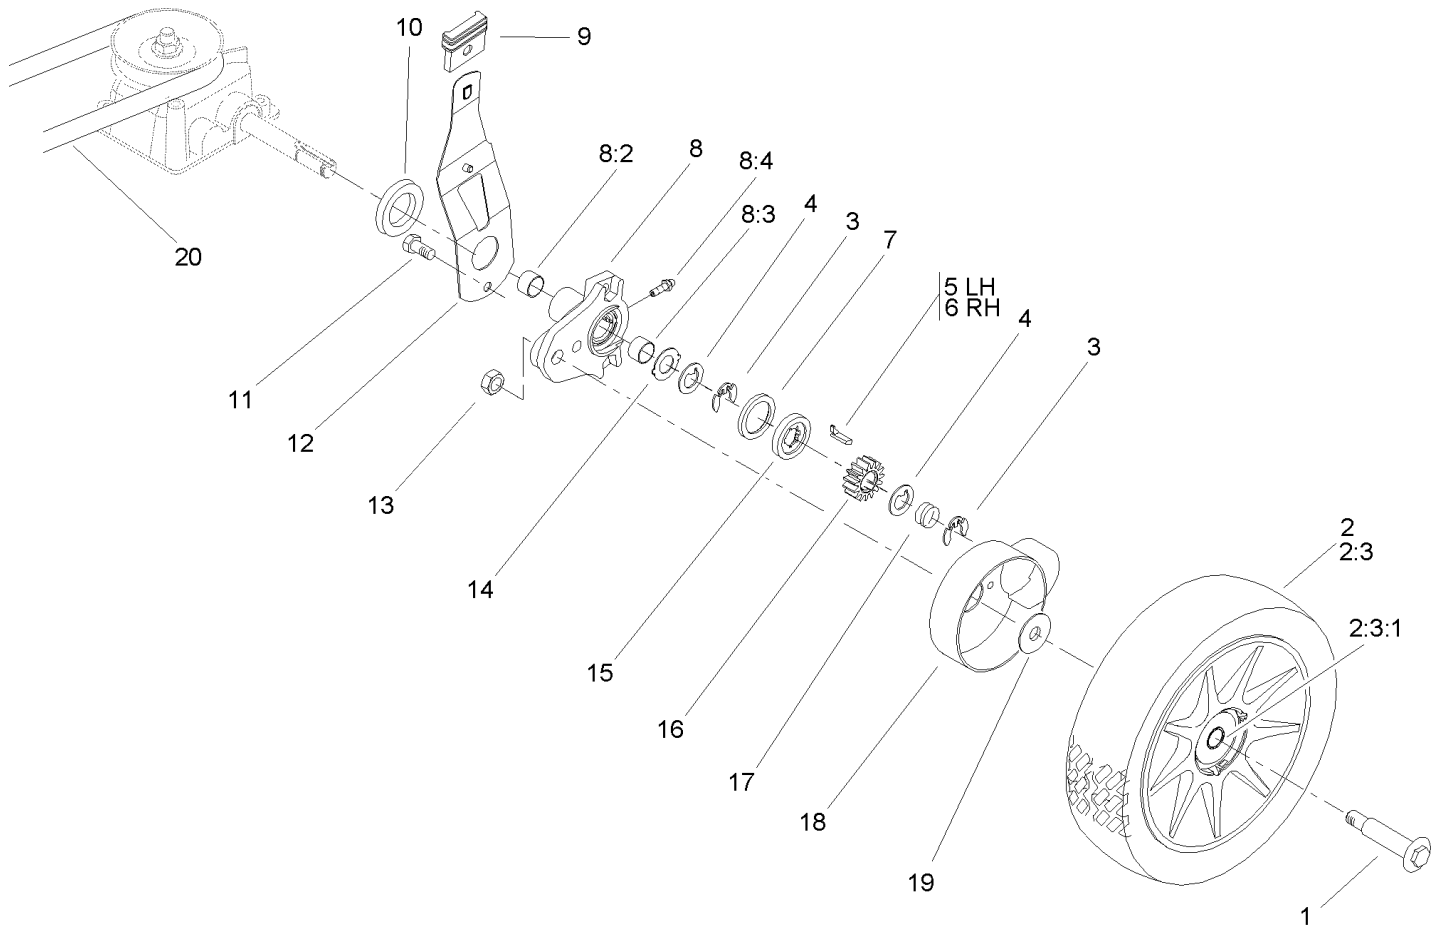

Gear Case and Wheel Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	Wheel And Tire ASM
2:3		1	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Rear Height Adjustment Arm ASM
8:2	70-9760	1	Bushing
8:3	47-2900	1	Bushing
8:4	302-56	1	Fitting-Grease
9	92-1008	2	Knob-Lever, Height Adjustment
10	614447	2	Spacer-Axle Shaft
11	32144-85	2	Screw-HWH
12	92-1004	2	Rear Spring Arm ASM
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel
19	614426	2	Washer-Stepped

Ref	Part No.	Qty.	Description
20	93-7381	1	V-Belt

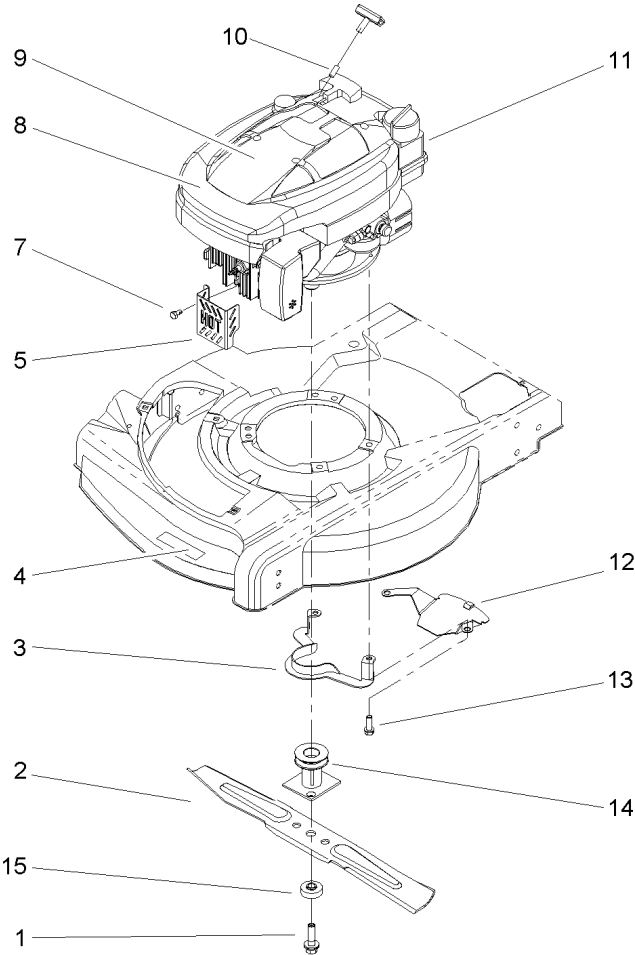


Engine and Blade Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	612543-03	1	Blade				
3	92-1024-03	1	Guide-Belt				
4	104-7955	1	Decal-Deck				
5	106-8346-03	1	Guard-Muffler				
7	32144-85	1	Screw-HWH				
8	98-1593	1	Applique				
9	106-8375	1	Decal-Recoil				
10	92-1701	1	Stop-Rope				
11		1	Engine-Tecumseh, Lv195ea-362006b				
12	93-4196-03	1	Shield-Grass				
13	95-1726	3	Screw-Taptite				
14	106-3950	1	Driver-Blade				
15	106-6826	1	Spacer				

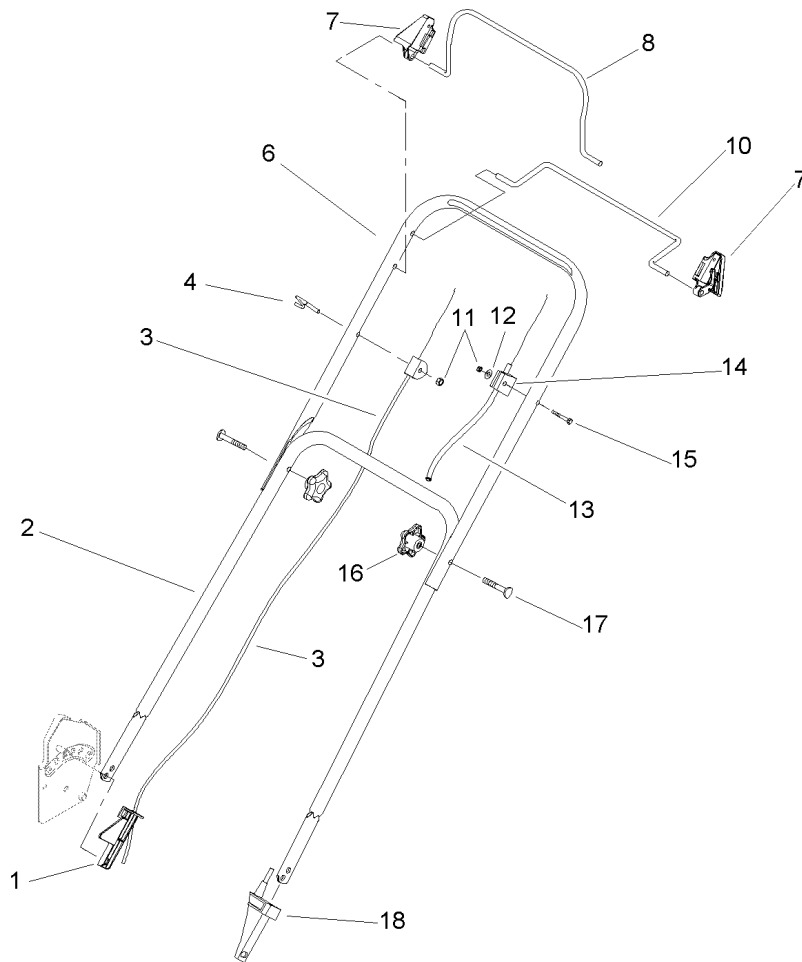


Handle Assembly

Ref	Part No.	Qty.	Description				
1	104-1013	1	Guard-Cable				
2	614643-05	1	Handle-Lower				
3	100-5989	1	Brake Cable ASM				
4	106-8330	1	Guide-Rope				
6	100-2888-05	1	Handle-Upper				
7	107-0757	2	Stop-Pivot				
8	93-4184-03	1	Bail-Brake				
10	92-1001-03	1	Bail-Control				
11	3296-73	2	Nut-Lock, NI				
12	3256-1	1	Washer-Flat				
13	100-5982	1	Cable-Ground Speed				
14	92-7729	1	Anchor-Cable, Upper				
15	321-50	1	Screw-HH				
16	106-4161	2	Knob-Handle				
17	614697	2	Screw				
18	93-7380	1	Anchor-Cable				

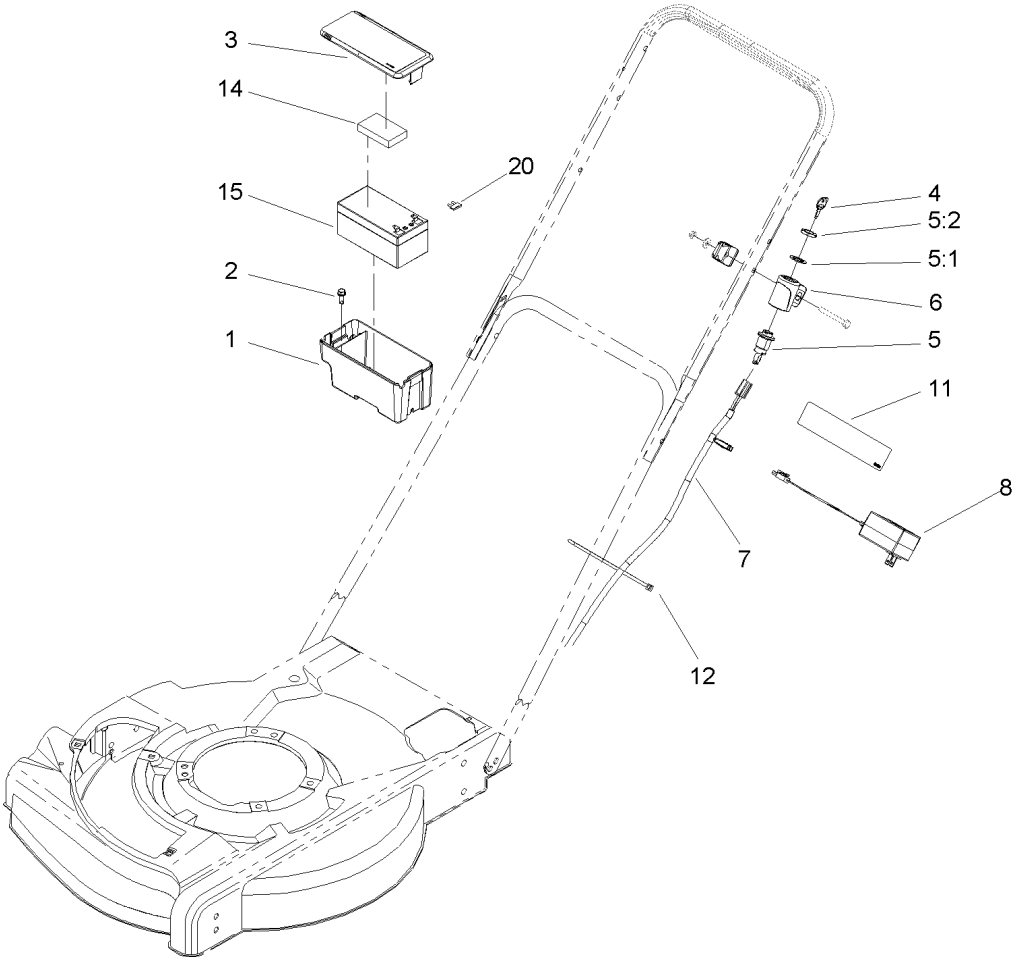

Electrical Assembly


Ref	Part No.	Qty.	Description				
1	106-3996	1	Box-Battery				
2	104-7649	2	Screw-Tek				
3	106-3997	1	Cover-Battery				
3	107-3758	1	Cover-Battery				
4	98-4486	1	Key-Ignition				
5	46-5780	1	Switch-Starter				
5:1	3254-5	1	Washer-Tooth				
5:2	218-461	1	Nut-HH				
6	104-8692	1	Mount-Switch				
7	106-8359	1	Harness-Wire				
8	104-7401	1	Charger-12 Volt				
11	104-7953	1	Decal-Harness				
12	614249	3	Strap-Tie				
14	106-3994	1	Foam-Battery				
14	107-3774	1	Foam-Battery				
15	106-8397	1	Battery-12 Volt				
20	99-6124	2	Fuse-40 Amp				

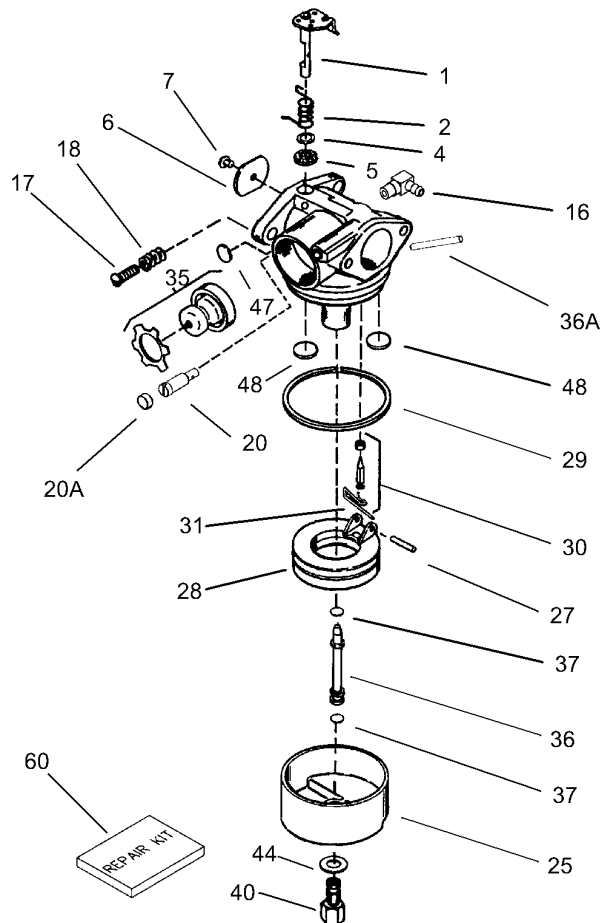

Carburetor Assembly No. 640303 Tecumseh Model LV195EA-362006B

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
④1	631615	1	Throttle Shaft And Lever ASM	③④44	27110A	1	Washer-Bowl Nut
④2	631767	1	Spring-Throttle Return	③④47	630748	1	Welch Plug-Idle Mixture Well
③④4	631184	1	Washer-Dust Seal	③④48	631027	2	Welch Plug-Atmospheric Vent
③④5	631183	1	Seal-Dust	④60	632809	1	Repair Kit
④6	640070	1	Shutter-Throttle				
③④7	650506	1	Screw-Shutter				
④16	631807	1	Fitting-Fuel				
④17	651025	1	Throttle Crack Screw/Idle Speedscrew				
④18	630766	1	Spring-Tension				
④20	640018	1	Screw-Idle Restrictor				
③④20A	640200	1	Cap-Idle Restrictor Screw				
④25	631867	1	Bowl-Float				
③④27	631024	1	Shaft-Float				
④28	632802	1	Float (Plastic)				
③④29	631028	1	O-Ring-Float Bowl				
③④30	632807	1	Inlet Needle, Seat, And Clip ASM (Incl. Ref. #31)				
③④31	631022	1	Clip-Spring				
④35	640259	1	Retainer Ring-Primerbulb (Red)				
④36	640019	1	Tube-Main Nozzle				
④36A	632766	1	Extension-Bowl Vent Tube				
③④37	632547	2	O-Ring-Main Nozzle Tube				
④40	640087	1	High Speed Bowl Nut				

Engine Assembly No. 1
Tecumseh Model LV195EA-362006B

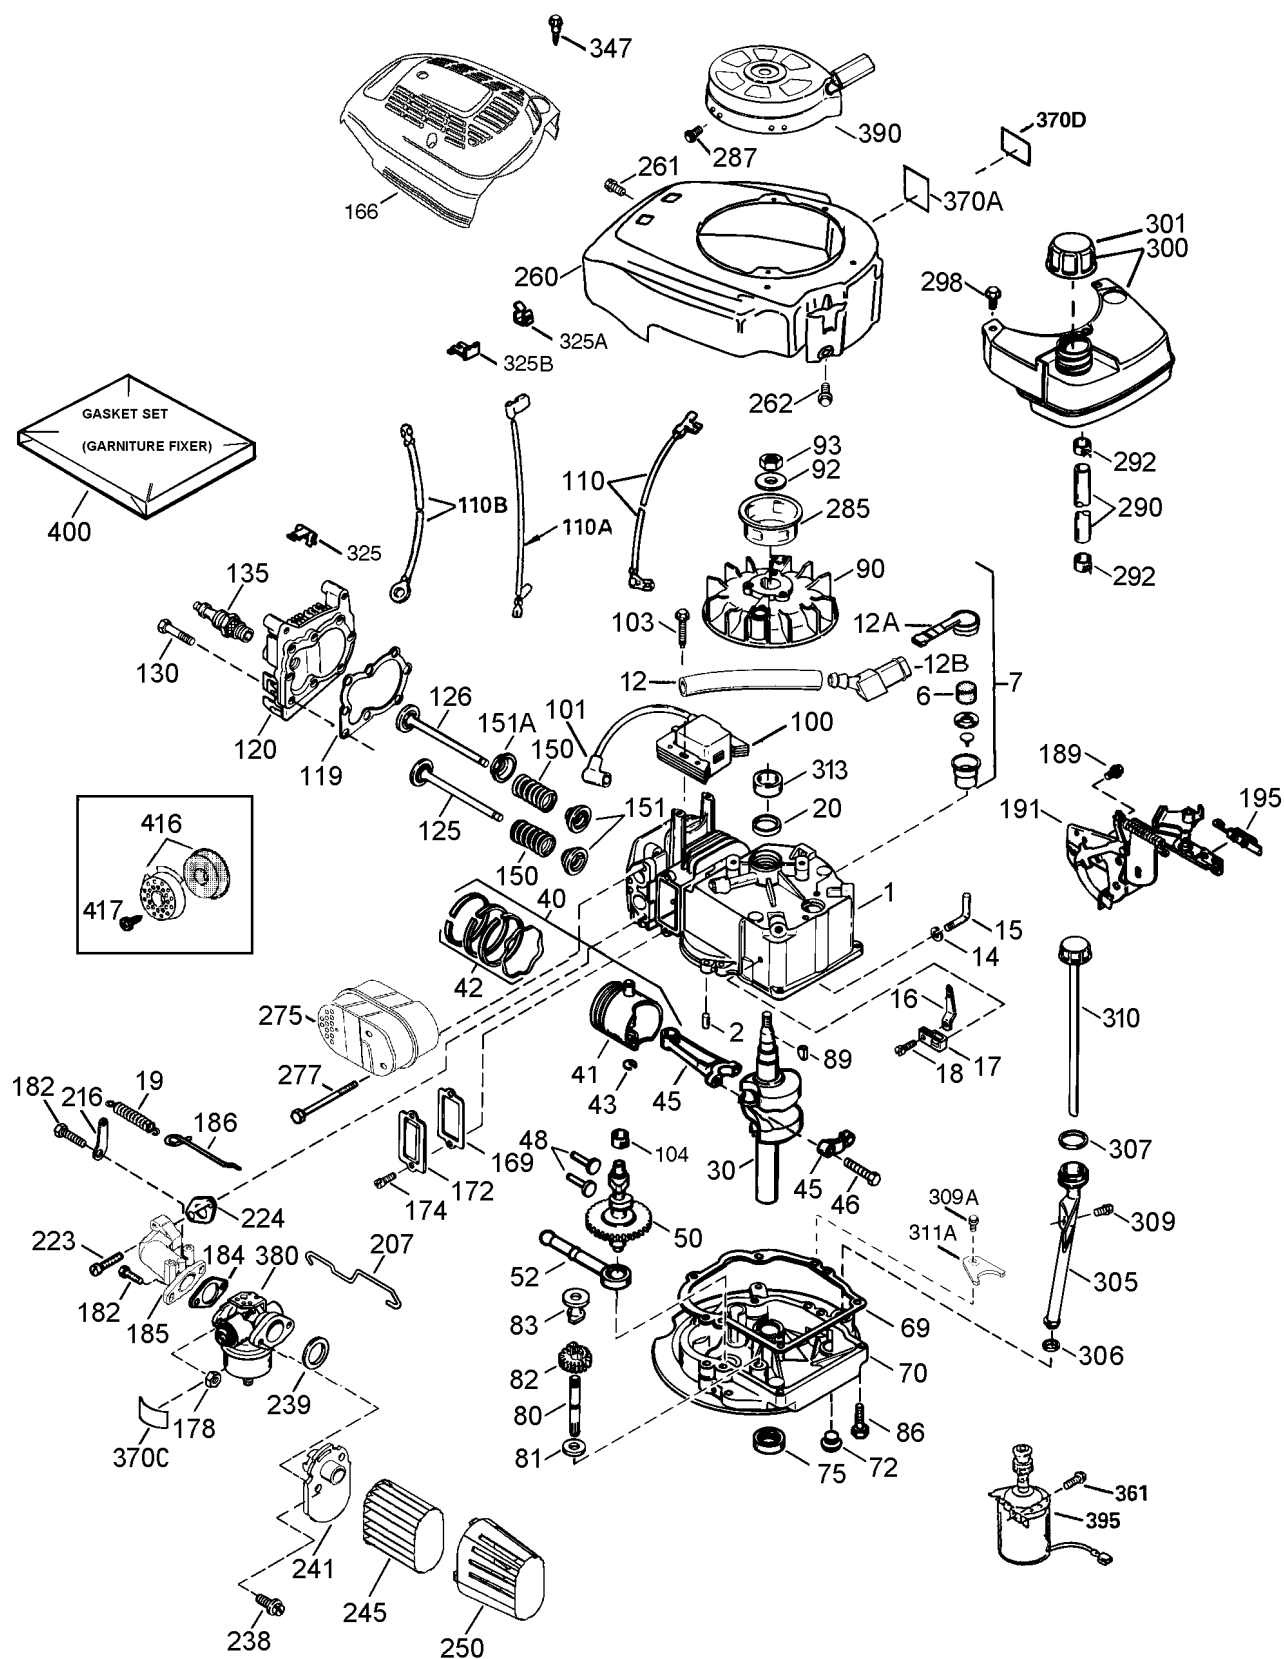


Engine Assembly No. 1

Tecumseh Model LV195EA-362006B

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
④1	37465	1	Cylinder(Incl. Ref. #2, 20 And 150)	④125	36780	1	Exhaust Valve (1/32" Os) (Incl. Ref. #151)
④2	26727	2	Pin-Dowel	④125	37288	1	Exhaust Valve (Std.) (Incl. Ref. #151)
④6	33734	1	Element-Breather	④126	37289	1	Intake Valve (Std.) (Incl. Ref. #151and 151a)
④7	36557	1	Breather ASM (Incl. Ref. #6 And 12a)	④130	6021A	8	Screw, 5/16-18 X 1-7/16in
④12	36775	1	Tube-Breather	④135	35395	1	Resistor-Spark Plug (Rj19lm)
④12A	36558	1	Breather Cover And Tube (Incl. Ref. #12b)	④150	31672	2	Spring-Valve
④12B	36694	1	Elbow-Tube, Breather	④151	31673	2	Cap-Valve Spring
④14	28277	1	Washer	④151A	40017	1	Seal-Intake Valve
④15	30589	1	Governor Rod (Incl. Ref. #14)	④166	37813	1	Engine Shroud (Green)
④16	34839A	1	Lever-Governor	④⑤169	36783	1	Gasket-Valve Cover
④17	31335	1	Clamp-Governor Lever	④172	36784	1	Cover-Valve
④18	651018	1	Screw, T-15, 8-32 X 19/64in	④174	30200	2	Screw, 10-24 X 9/16in
④19	36281	1	Spring-Extension	④178	29752	2	Nut And Lock Washer, 1/4-28
④20	32600	1	Seal-Oil	④182	6201	2	Screw, 1/4-28 X 7/8in
④30	37692	1	Crankshaft	④⑤184	26756	1	Gasket-Carburetor To Intake Pipe
④40	40027	1	Piston, Pin And Ring Set (Std.)	④185	37466	1	Pipe-Intake
④41	40042	1	Piston And Pin ASM (Std.) (Incl. Ref. #43)	④186	32653	1	Link-Governor
④42	40006	1	Ring Set (Std.)	④189	650839	2	Screw, 1/4-20 X 3/8in
④43	20381	2	Retaining Ring-Piston Pin	④191	36559A	1	S.e. Brake Bracket (Incl. Ref. #195)
④45	36777	1	Connecting Rod ASM (Incl. Ref. #46)	④195	610973	1	Terminal
④46	32610A	2	Bolt-Connecting Rod	④207	34336A	1	Link-Throttle
④48	27241	2	Lifter-Valve	④216	33086	1	Lever-R.p.m. Adjusting
④50	37460	1	Camshaft (Exhaust Mcr) (Incl. Ref. #104)	④223	650451	2	Screw, 1/4-20 X 1in
④52	29914	1	Oil Pump ASM	④⑤224	36786	1	Gasket-Intake Pipe
④⑤69	37609	1	Gasket-Mounting Flange	④238	650932	2	Screw, 10-32 X 49/64in
④70	37608	1	Mounting Flange (Incl. Ref. #72-83, 306, 309a And 311a)	④⑤239	34338	1	Gasket-Air Cleaner
④72	37614	1	Plug-Oil Drain	④241	36919	1	Collar-Air Cleaner
④75	27897	1	Seal-Oil	④245	36905	1	Filter-Air Cleaner
④80	30574A	1	Shaft-Governor	④250	37122	1	Cover-Air Cleaner
④81	30590A	1	Washer	④260	37693A	1	Housing-Blower
④82	30591	1	Governor Gear ASM (Incl. Ref. #81)	④261	30200	2	Screw, 10-24 X 9/16in
④83	30588A	1	Spool-Governor	④262	650831	2	Screw, 1/4-20 X 1/2in
④86	650488	6	Screw, 1/4-20 X 1-1/4in	④275	37498	1	Muffler
④89	611004	1	Key-Flywheel	④277	650988	2	Screw, 1/4-20 X 2-9/32in
④90	37787	1	Flywheel	④285	35000A	1	Cup-Starter
④92	650815	1	Washer-Belleville	④287	650926	2	Screw, 8-32 X 21/64in
④93	650816	1	Nut-Flywheel	④290	29774	1	Line-Fuel
④100	34443C	1	Ignition-Solid State	④292	26460	2	Clamp-Fuel Line
④101	610118	1	Cover-Spark Plug	④298	28763	2	Screw
④103	651007	2	Screw, T-15, 10-24 X 15/16in				
④104	37480	1	Bushing-Cam				
④110	36953	1	Wire-Ground				
④110A	36954	1	Wire-Ground				
④110B	37047	1	Wire-Ground				
④⑤119	37796	1	Gasket-Cylinder Head				
④120	37714	1	Sprocket Assembly				

Engine Assembly No. 2


Tecumseh Model LV195EA-362006B

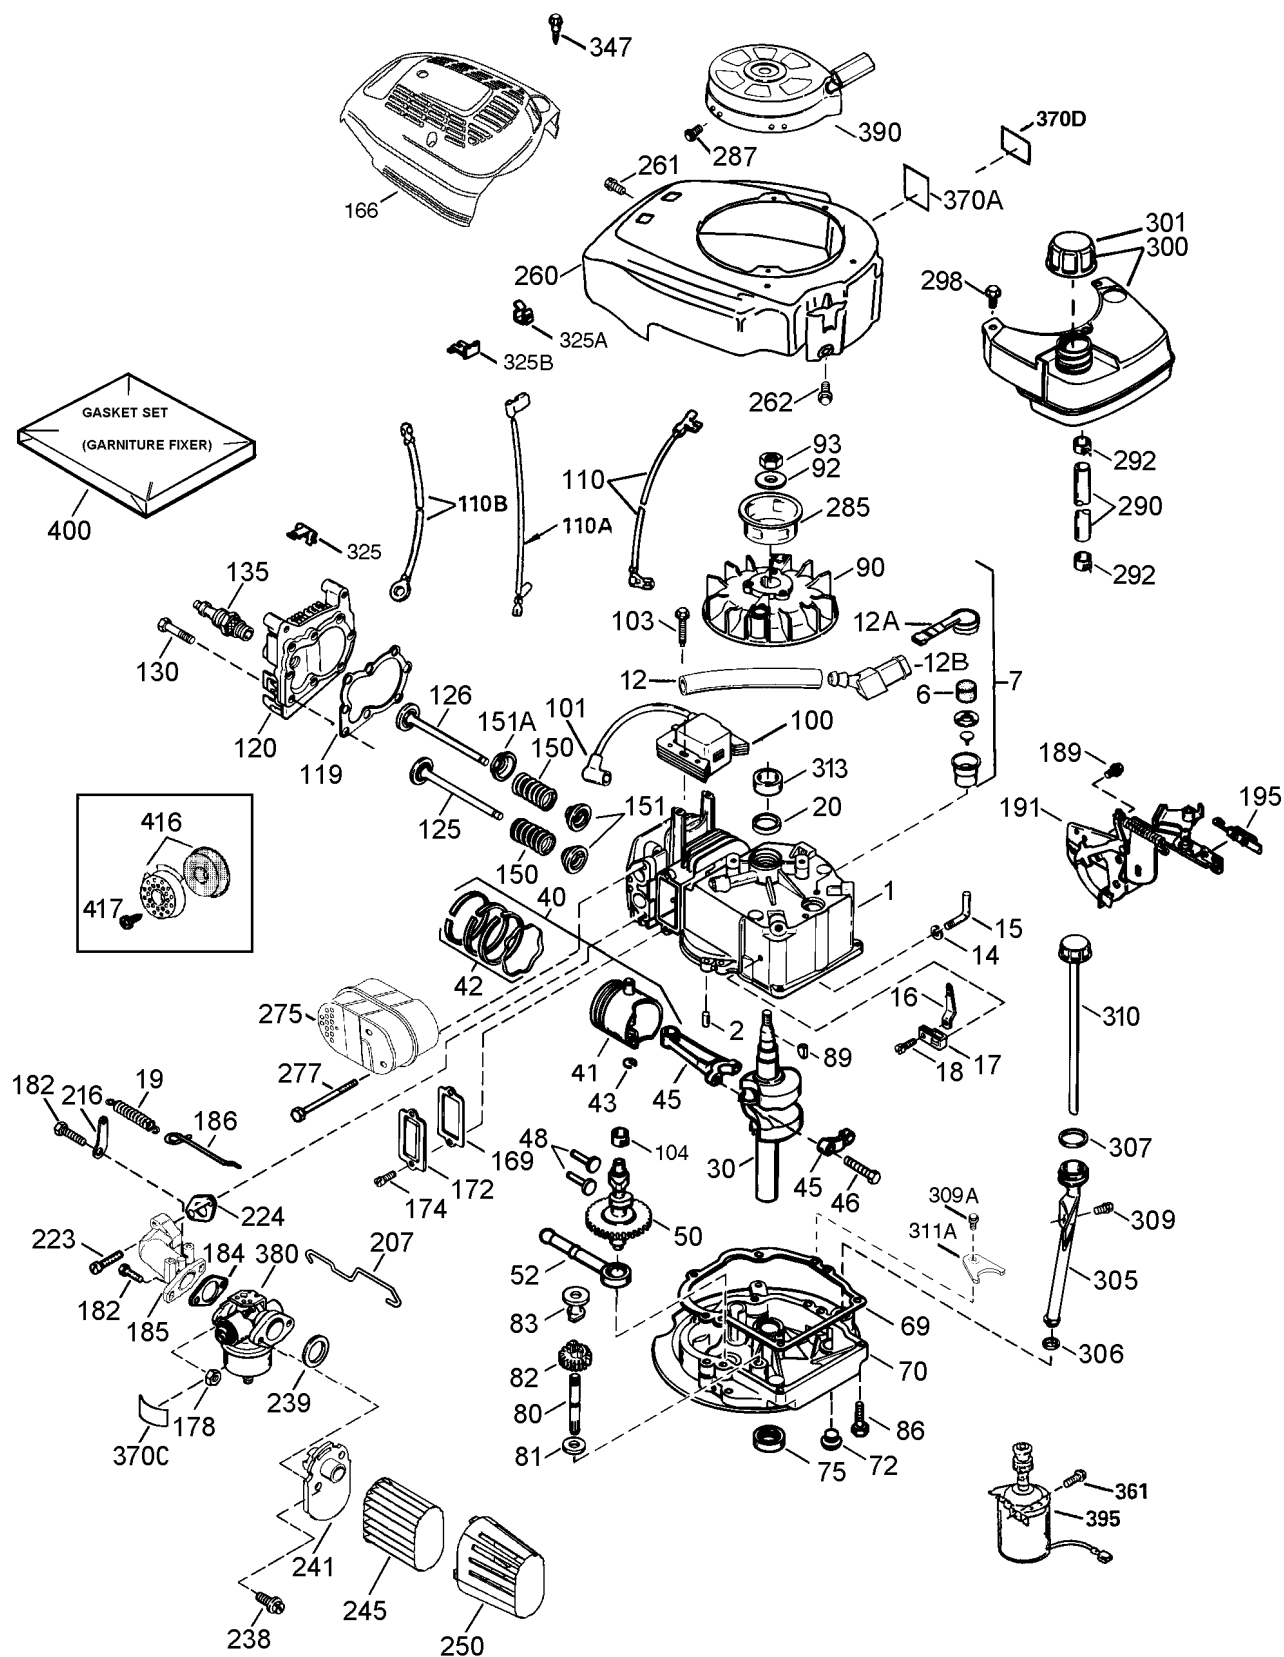

Engine Assembly No. 2

Tecumseh Model LV195EA-362006B


Ref	Part No.	Qty.	Description				
④ 300	37947	1	Fuel Tank (Incl. Ref. #292 And 301)				
④ 301	37844	1	Fuel Cap ASM				
④ 305	35647	1	Tube-Oil Fill				
④ ⑤ 306	37610	1	O-Ring				
④ 307	35499	1	O-Ring				
④ 309	650562	1	Screw, 10-32 X 1/2in				
④ 309A	650783	1	Screw, 10-24 X 3/4in				
④ 310	35648	1	Dipstick				
④ 311A	37611	1	Bracket-Hold Down				
④ 313	34080	1	Spacer				
④ 325	35249	1	Wire Clip				
④ 325A	37152	1	Wire Clip				
④ 325B	29443	1	Wire Clip				
④ 347	650898A	1	Screw, 10-32 X 27/32in				
④ 361	650831	2	Screw, 1/4-20 X 1/2in				
④ 370A	36261	2	Decal-Lubrication				
④ 370C	37695	1	Decal-Primer				
④ 370D	35977	1	Decal-Warning				
④ 380	640303	1	Carburetor (Incl. Ref. #184)				
④ 390	590739	1	Starter-Rewind				
④ 395	37753	1	Starter-Electric 12 Volt				
④ 400	37613A	1	Gasket Set				
④ 416	37530	1	Kit-Spark Arrestor (Optional)				
④ 417	650760	1	Screw, 8-32 X 3/8in				
④	750876	1	Short Block Asm				

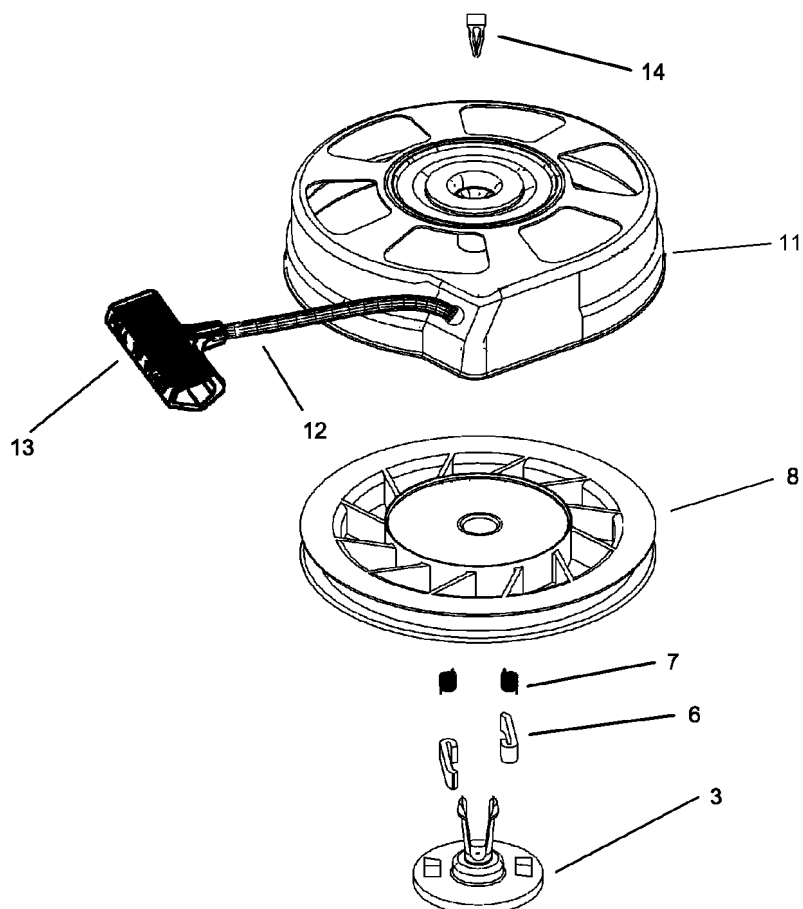

Recoil Starter Assembly No. 590739


Tecumseh Model LV195EA-362006B

Ref	Part No.	Qty.	Description				
3	590740	1	Retainer				
6	590616	2	Dog-Starter				
7	590617	2	Spring-Dog				
8	590618A	1	Pulley And Rewind Spring ASM				
11	590638A	1	Starter Housing ASM (40 Degree Grommet)				
12	590535	1	Rope-Starter (Length 98in X 9/64in Dia.)				
13	590701	1	Handle-Starter				
14	590760	1	Clp-Spring				

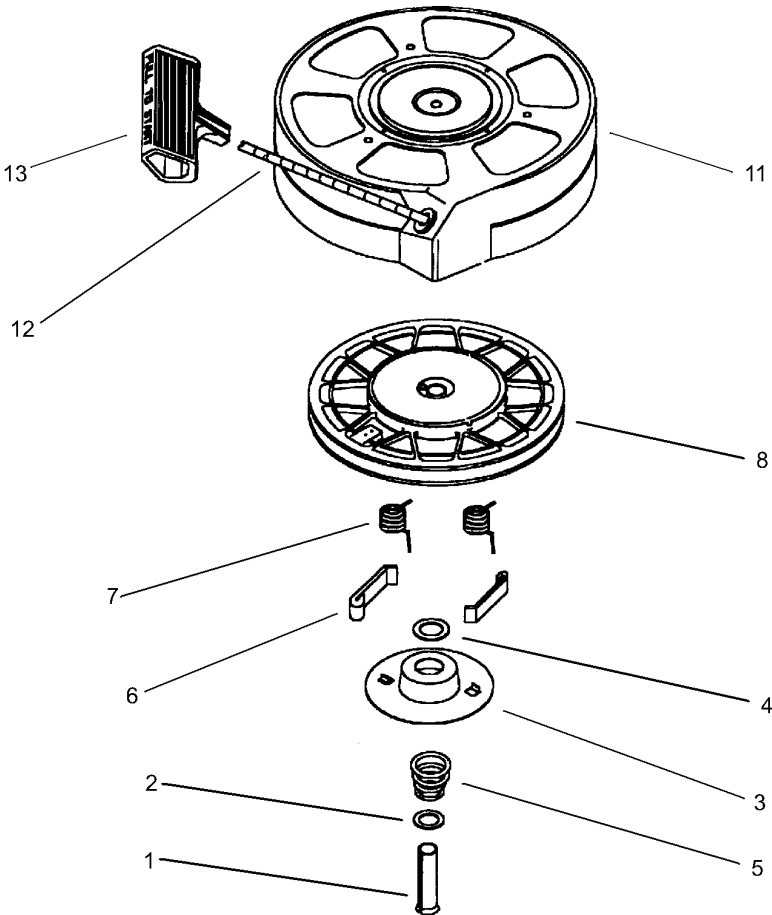

Recoil Starter Assembly No. 590702 (Optional)
Tecumseh Model LV195EA-362006B

Ref	Part No.	Qty.	Description				
④1	590599A	1	Spring Pin ASM (Incl. Ref. #4)				
④2	590600	1	Washer				
④3	590696	1	Retainer				
④4	590601	1	Washer				
④5	590697	1	Spring-Brake				
④6	590698	2	Dog-Starter				
④7	590699	2	Spring-Dog				
④8	590700	1	Pulley And Rewind Spring ASM				
④11	590703A	1	Starter Housing ASM (40 Degree Grommet)				
④12	590535	1	Rope-Starter (Length 98in X 9/64in Dia.)				
④13	590701	1	Handle-Starter				

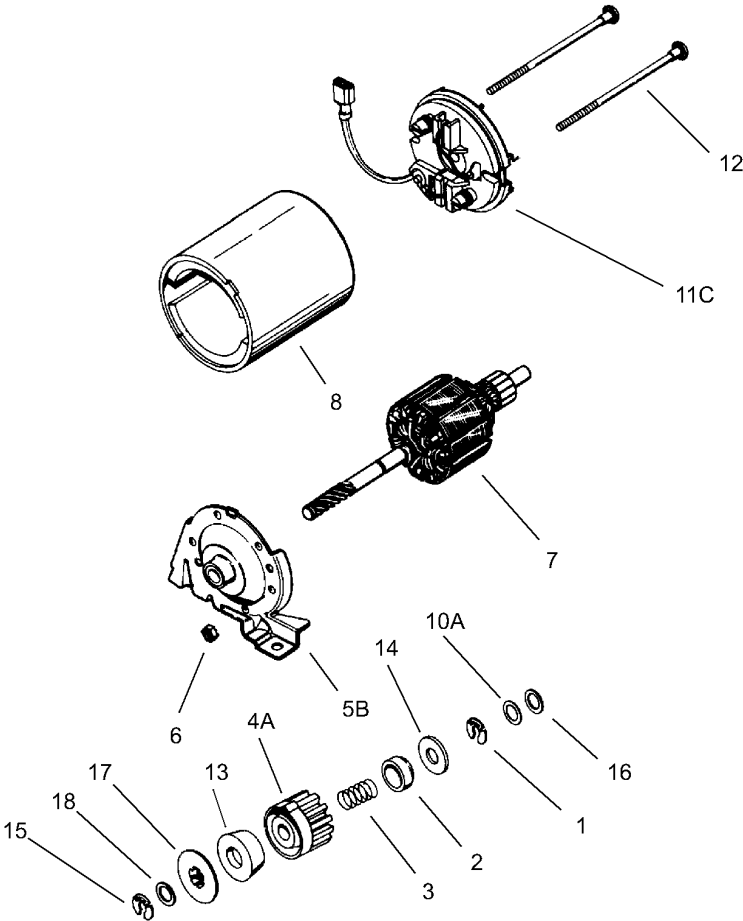

Electric Starter Kit No. 37753
Tecumseh Model LV195EA-362006B

Ref	Part No.	Qty.	Description				
④1	34955	1	Ring-Retaining				
④2	34950	1	Spring-Retainer				
④3	34954	1	Spring				
④4A	37788	1	Gear				
④5B	34943	1	Drive End Cap ASM				
④6	33450	2	Nut-Lock				
④7	34944	1	Armature				
④8	34945	1	Housing ASM				
④10A	590500	1	Washer-Thrust				
④11C	35714	1	Commutator End Cap ASM (Incl. Brushes)				
④12	34947	2	Bolt				
④13	34946	1	Driver-Pinion				
④14	34951	1	Washer-Cup				
④15	34952	1	Ring-Retaining				
④16	34948	1	Washer				
④17	34953	1	Nut-Drive				
④18	590608	1	Washer				

NOTES

NOTES

NOTES

LAWN-BOY®