Form Number 3350-624

LAWN-BOY®

Silver Series® Lawnmower

Model No. 10357 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
PPH. . . . . phillips pan head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head
WH. . . . . wing head

Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Included in Repair Kit No. 632809
❹ Obtain parts from your local Tecumseh dealer
❺ Included in Gasket Kit No. 37613A
❻ For Serial Range 240000001 through 240000625
❼ For Serial Range 240000626 and up

Contents


Description	Page
Housing Assembly	3
Gear Case Assembly No. 104-7671	4
Gear Case and Wheel Assembly	5
Engine and Blade Assembly	6
Handle Assembly	7
Electrical Assembly	8
Carburetor Assembly No. 640303 Tecumseh Model LV195EA-362006B	9
Engine Assembly No. 1 Tecumseh Model LV195EA-362006B	10
Engine Assembly No. 2 Tecumseh Model LV195EA-362006B	12
Recoil Starter Assembly No. 590739 Tecumseh Model LV195EA-362006B	14
Recoil Starter Assembly No. 590702 (Optional) Tecumseh Model LV195EA-362006B	15
Electric Starter Kit No. 37753 Tecumseh Model LV195EA-362006B	16

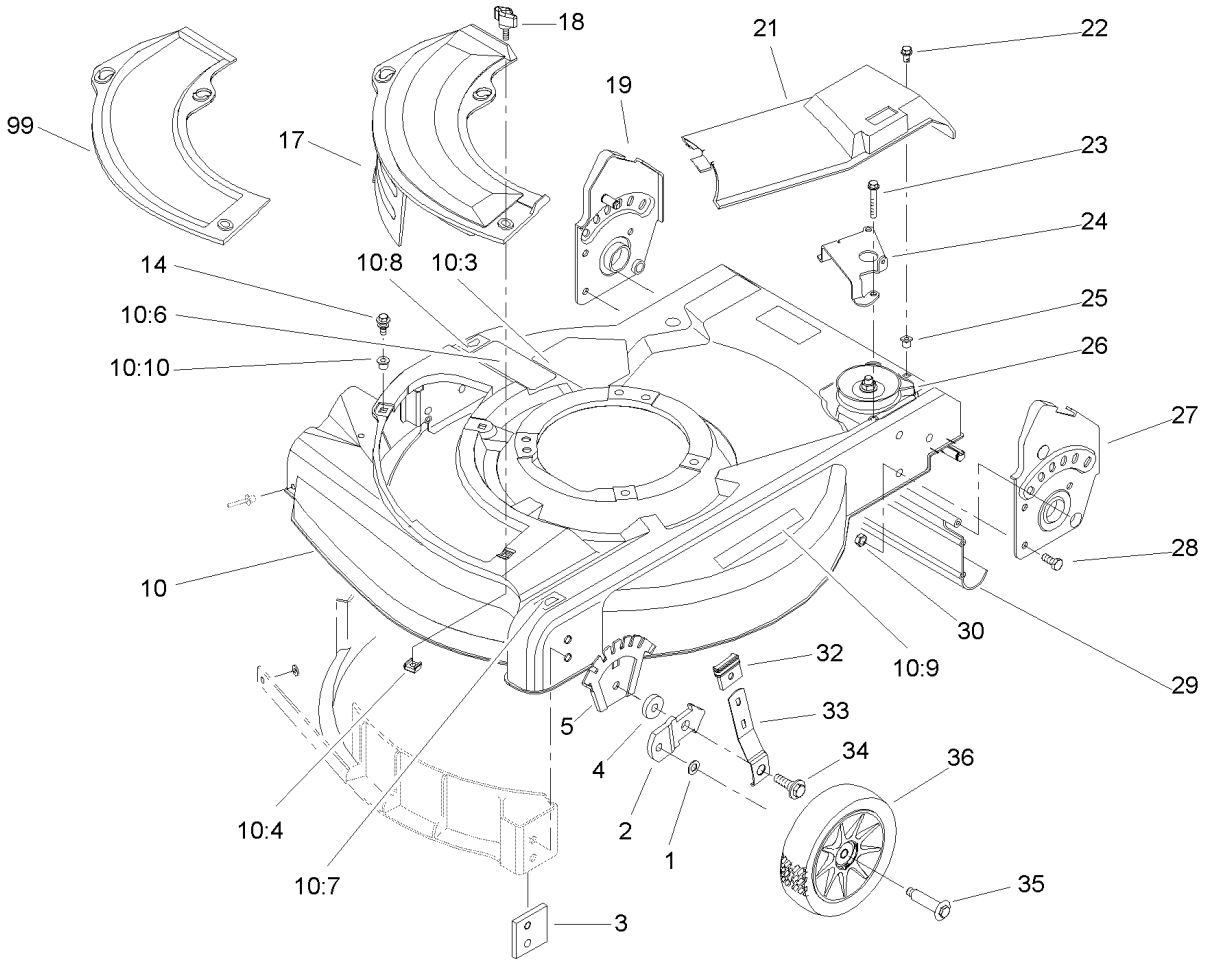

Housing Assembly


Ref	Part No.	Qty.	Description
1	40-1940	2	Washer
2	95-7403-03	2	Bracket-Height Adjustment, Wheel
3	92-7731	2	Plate-Baffle
4	92-4890	2	Washer-Wheel
5	92-4881-03	2	Plate-Height, Adjustment
10	98-4477	1	Deck ASM
10:3	43-8480	1	Decal-Danger
10:4	613765	1	Nut-Cage
10:6	99-6018	1	Decal-Warning
10:7	92-2914	1	Decal-Hoc, LH
10:8	92-2915	1	Decal-Hoc, RH
10:9	93-7250	1	Decal-Warning
10:10	94-1610	2	Nut-Clip
14	614677	2	Screw-Sems
17	92-8630	1	Plate-Mulch
18	98-8332	1	Knob
19	105-8602	1	RH Bracket ASM
21	95-7068	1	Cover-Drive
22	92-9665	1	Screw
23	65-5221	2	Screw-HWHTF
24	92-7728-03	1	Guide-Transmission
25	605120	1	Nut-Clip
26	104-7671	1	Gear Case ASM
27	105-8604	1	LH Bracket ASM

Ref	Part No.	Qty.	Description
28	322-3	6	Screw-HH
29	92-8647	1	Shield-Trailing
30	3296-29	6	Nut-Lock, NI
32	92-1008	2	Knob-Lever, Height Adjustment
33	614687	2	Arm-Front Spring
34	614672	2	Bolt-Shoulder
35	92-1099	2	Bolt-Shoulder
36	684776	2	Wheel And Tire ASM
99	95-7052	1	Plate-Opening, Chute

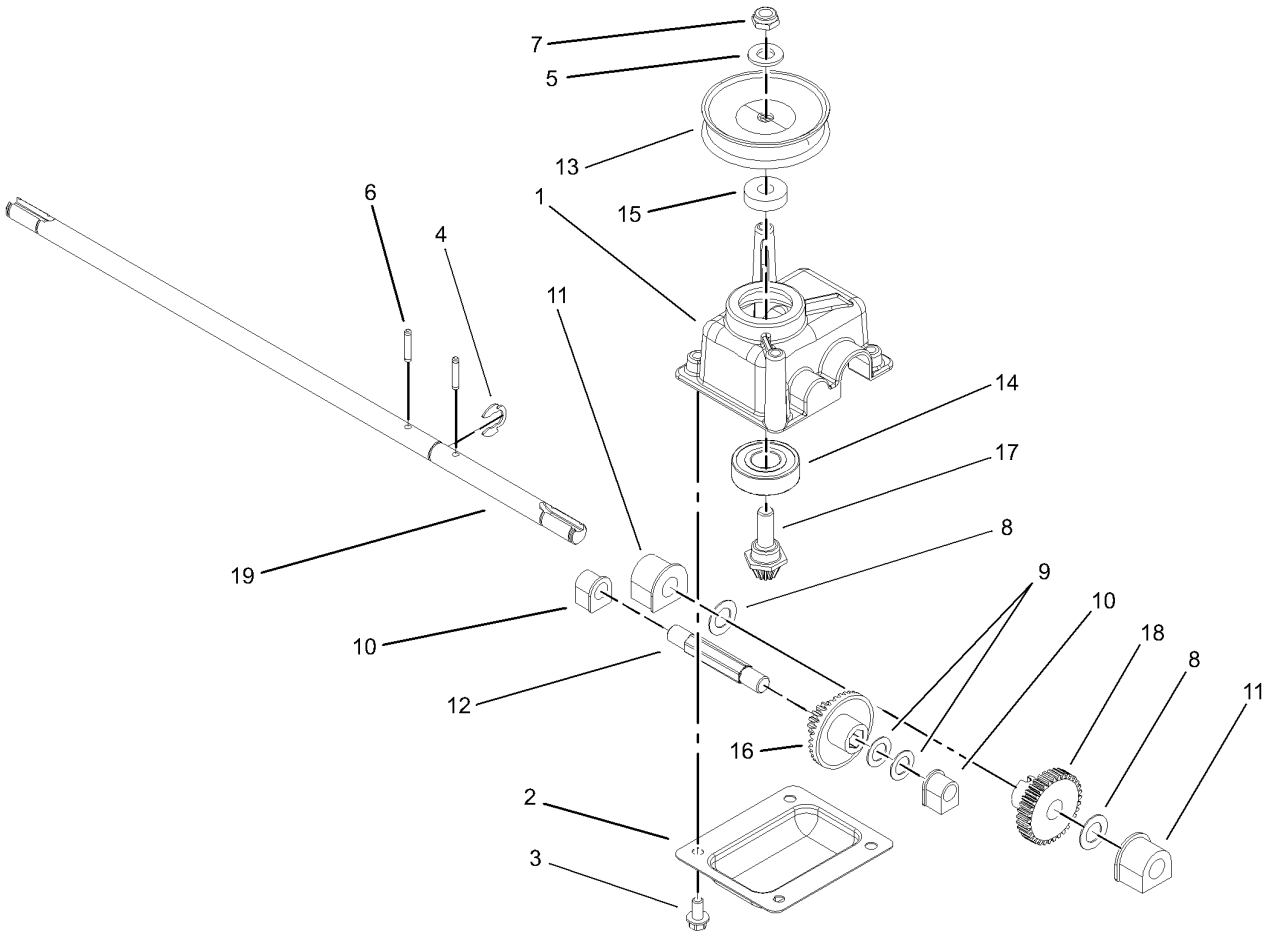

Gear Case Assembly No. 104-7671


Ref	Part No.	Qty.	Description
1	104-7619	1	Case-Gear
2	614668-03	1	Cover-Case, Gear
3	32144-4	4	Screw-HWH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock, NI
8	36-4780	2	Washer
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing
12	614696	1	Shaft-Intermediate
13	614669	2	Half-Pulley
14	100-1048	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-7668	1	Gear-15t Spur, 37t Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	614596	1	Gear
19	104-7670	1	Shaft-Output

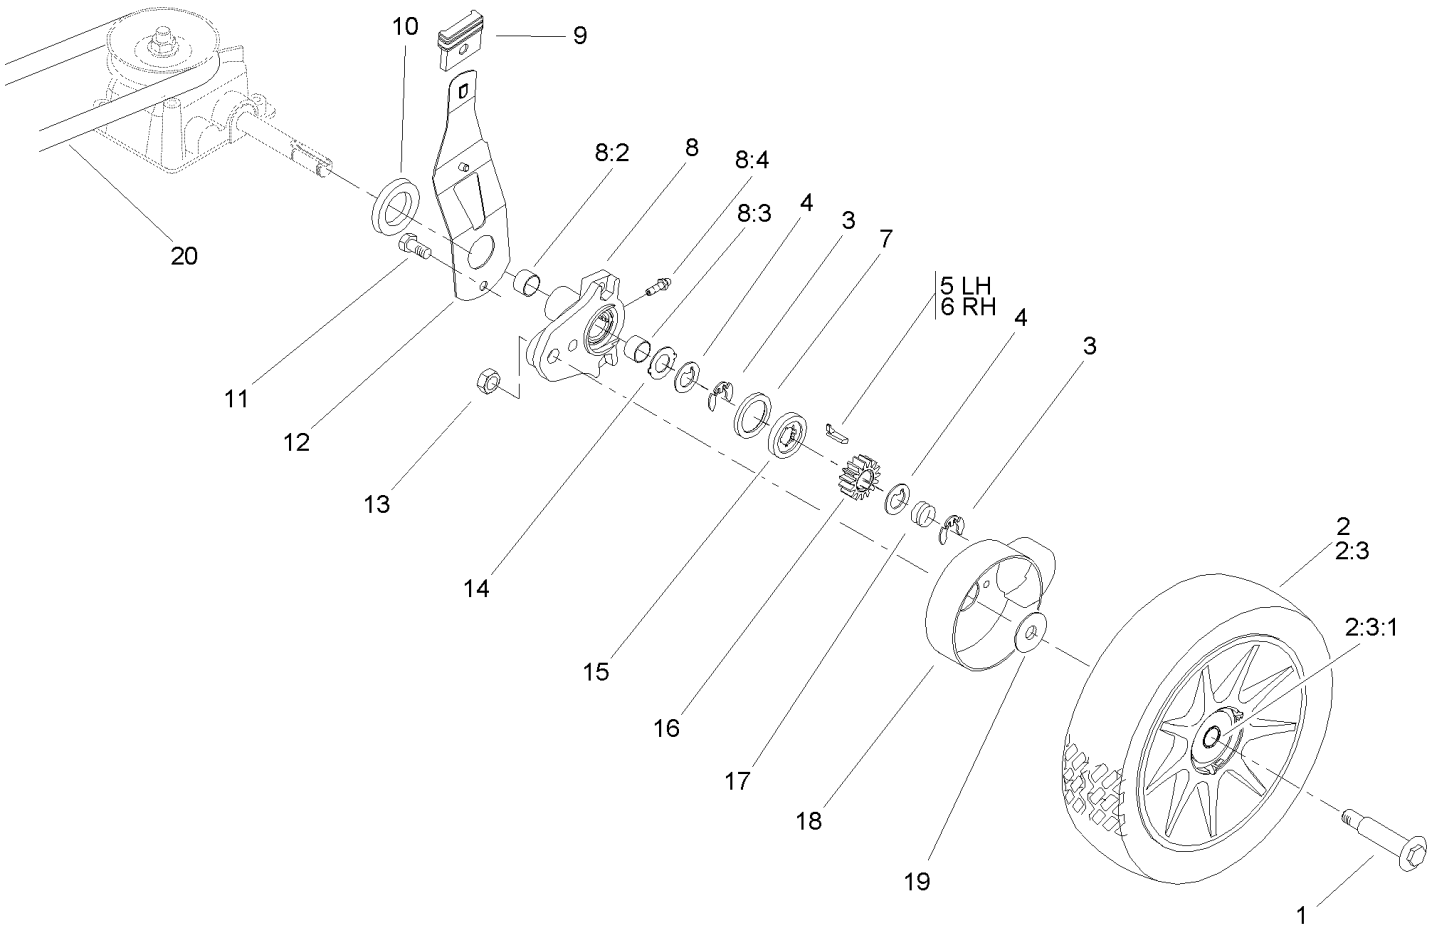

Gear Case and Wheel Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	Wheel And Tire ASM
❷2:3		1	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
❶6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Rear Height Adjustment Arm ASM
8:2	70-9760	1	Bushing
8:3	47-2900	1	Bushing
8:4	302-56	1	Fitting-Grease
9	92-1008	2	Knob-Lever, Height Adjustment
10	614447	2	Spacer-Axle Shaft
11	32144-85	2	Screw-HWH
12	92-1004	2	Rear Spring Arm ASM
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel
19	614426	2	Washer-Stepped

Ref	Part No.	Qty.	Description
20	93-7381	1	V-Belt

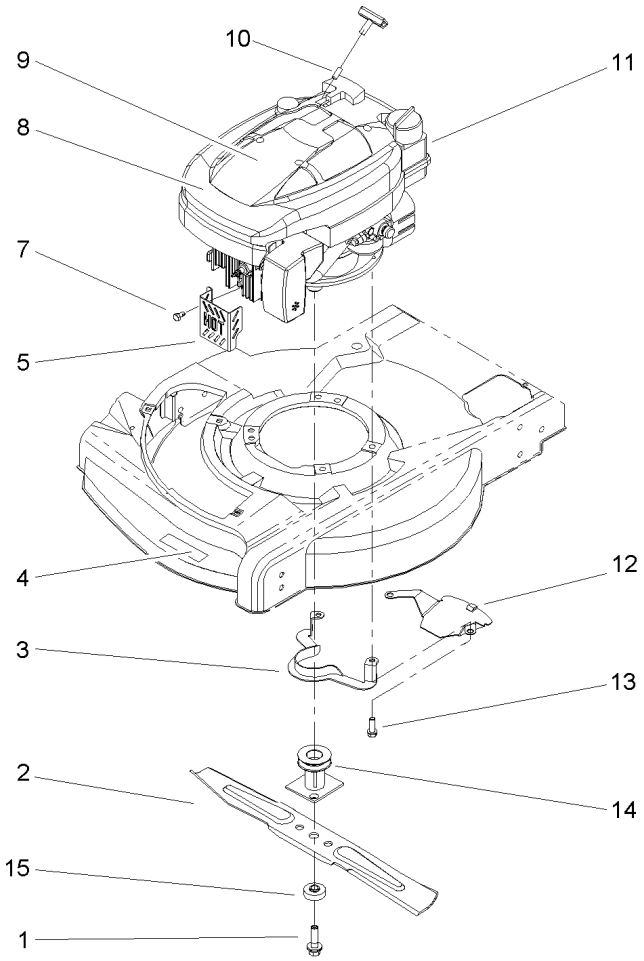


Engine and Blade Assembly

Ref	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade
2	612543-03	1	Blade
3	92-1024-03	1	Guide-Belt
4	104-7955	1	Decal-Deck
5	106-8346-03	1	Guard-Muffler
7	32144-85	1	Screw-HWH
8	98-1593	1	Applique
9	106-8375	1	Decal-Recoil
10	92-1701	1	Stop-Rope
❷11		1	Engine-Tecumseh, Lv195ea-362006b
12	93-4196-03	1	Shield-Grass
13	95-1726	3	Screw-Taptite
14	106-3950	1	Driver-Blade
15	106-6826	1	Spacer

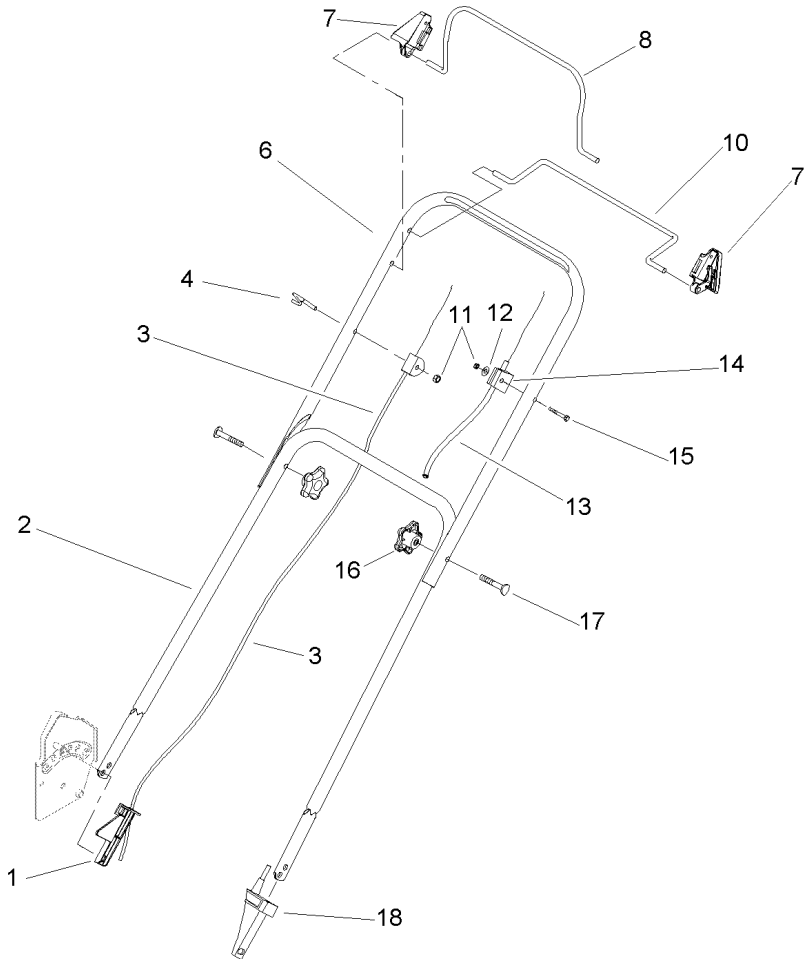


Handle Assembly

Ref	Part No.	Qty.	Description
1	104-1013	1	Guard-Cable
2	614643-05	1	Handle-Lower
3	100-5989	1	Brake Cable ASM
4	106-8330	1	Guide-Rope
6	100-2888-05	1	Handle-Upper
7	107-0757	2	Stop-Pivot
8	93-4184-03	1	Bail-Brake
10	92-1001-03	1	Bail-Control
11	3296-73	2	Nut-Lock, NI
12	3256-1	1	Washer-Flat
13	100-5982	1	Cable-Ground Speed
14	92-7729	1	Anchor-Cable, Upper
15	321-50	1	Screw-HH
16	106-4161	2	Knob-Handle
17	614697	2	Screw
18	93-7380	1	Anchor-Cable

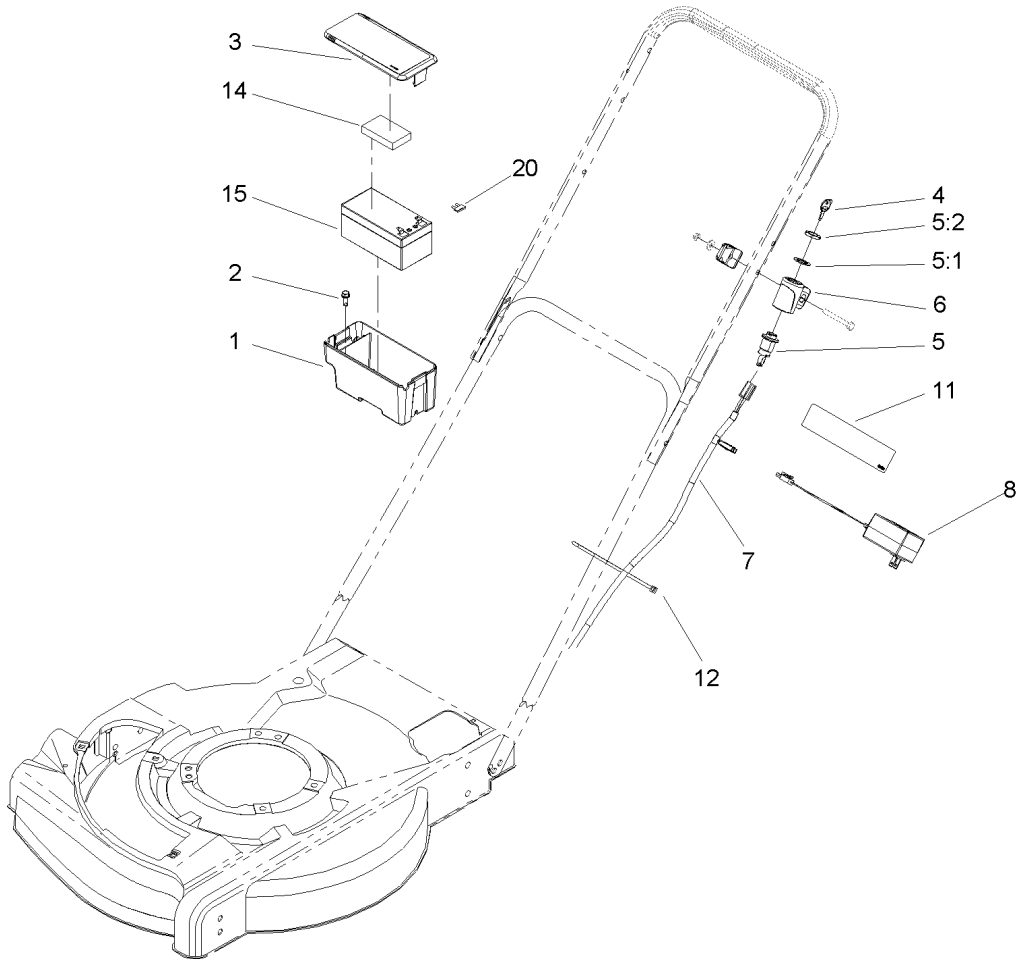

Electrical Assembly

Ref	Part No.	Qty.	Description
1	106-3996	1	Box-Battery
2	104-7649	2	Screw-Tek
❻3	106-3997	1	Cover-Battery
❼3	107-3758	1	Cover-Battery
4	98-4486	1	Key-Ignition
5	46-5780	1	Switch-Starter
5:1	3254-5	1	Washer-Tooth
5:2	218-461	1	Nut-HH
6	104-8692	1	Mount-Switch
7	106-8359	1	Harness-Wire
❶8	104-7401	1	Charger-12 Volt
❶11	104-7953	1	Decal-Harness
12	614249	3	Strap-Tie
❻14	106-3994	1	Foam-Battery
❼14	107-3774	1	Foam-Battery
15	106-8397	1	Battery-12 Volt
20	99-6124	2	Fuse-40 Amp

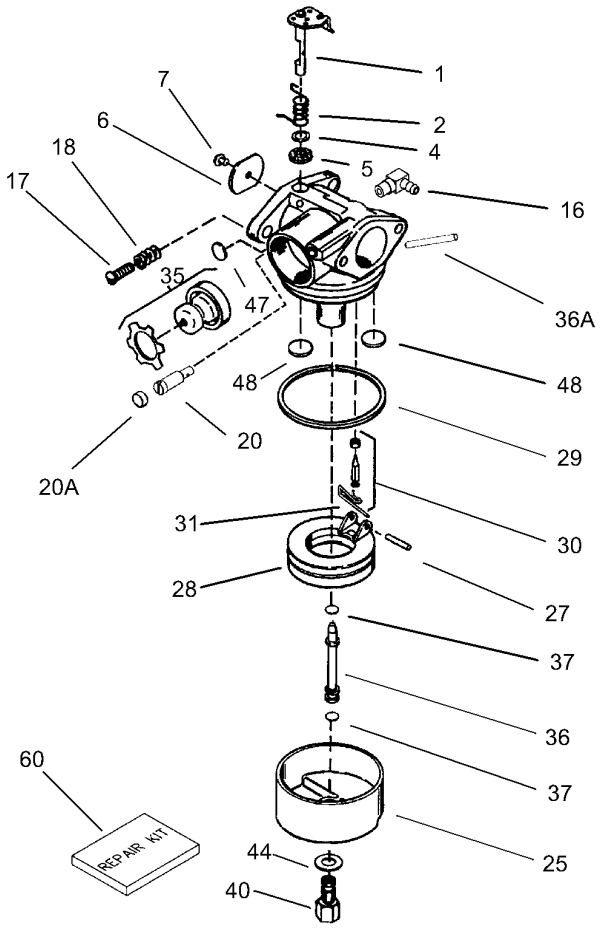


Carburetor Assembly No. 640303
Tecumseh Model LV195EA-362006B

Ref	Part No.	Qty.	Description
❹1	631615	1	Throttle Shaft And Lever ASM
❹2	631767	1	Spring-Throttle Return
❸❹4	631184	1	Washer-Dust Seal
❸❹5	631183	1	Seal-Dust
❹6	640070	1	Shutter-Throttle
❸❹7	650506	1	Screw-Shutter
❹16	631807	1	Fitting-Fuel
❹17	651025	1	Throttle Crack Screw/idle Speedscrew
❹18	630766	1	Spring-Tension
❹20	640018	1	Screw-Idle Restrictor
❸❹20A	640200	1	Cap-Idle Restrictor Screw
❹25	631867	1	Bowl-Float
❸❹27	631024	1	Shaft-Float
❹28	632802	1	Float (Plastic)
❸❹29	631028	1	O-Ring-Float Bowl
❸❹30	632807	1	Inlet Needle, Seat, And Clip ASM (Incl. Ref. #31)
❸❹31	631022	1	Clip-Spring
❹35	640259	1	Retainer Ring-Primerbulb (Red)
❹36	640019	1	Tube-Main Nozzle
❹36A	632766	1	Extension-Bowl Vent Tube
❸❹37	632547	2	O-Ring-Main Nozzle Tube
❹40	640087	1	High Speed Bowl Nut

Ref	Part No.	Qty.	Description
❸❹44	27110A	1	Washer-Bowl Nut
❸❹47	630748	1	Welch Plug-Idle Mixture Well
❸❹48	631027	2	Welch Plug-Atmospheric Vent
❹60	632809	1	Repair Kit

Engine Assembly No. 1
Tecumseh Model LV195EA-362006B

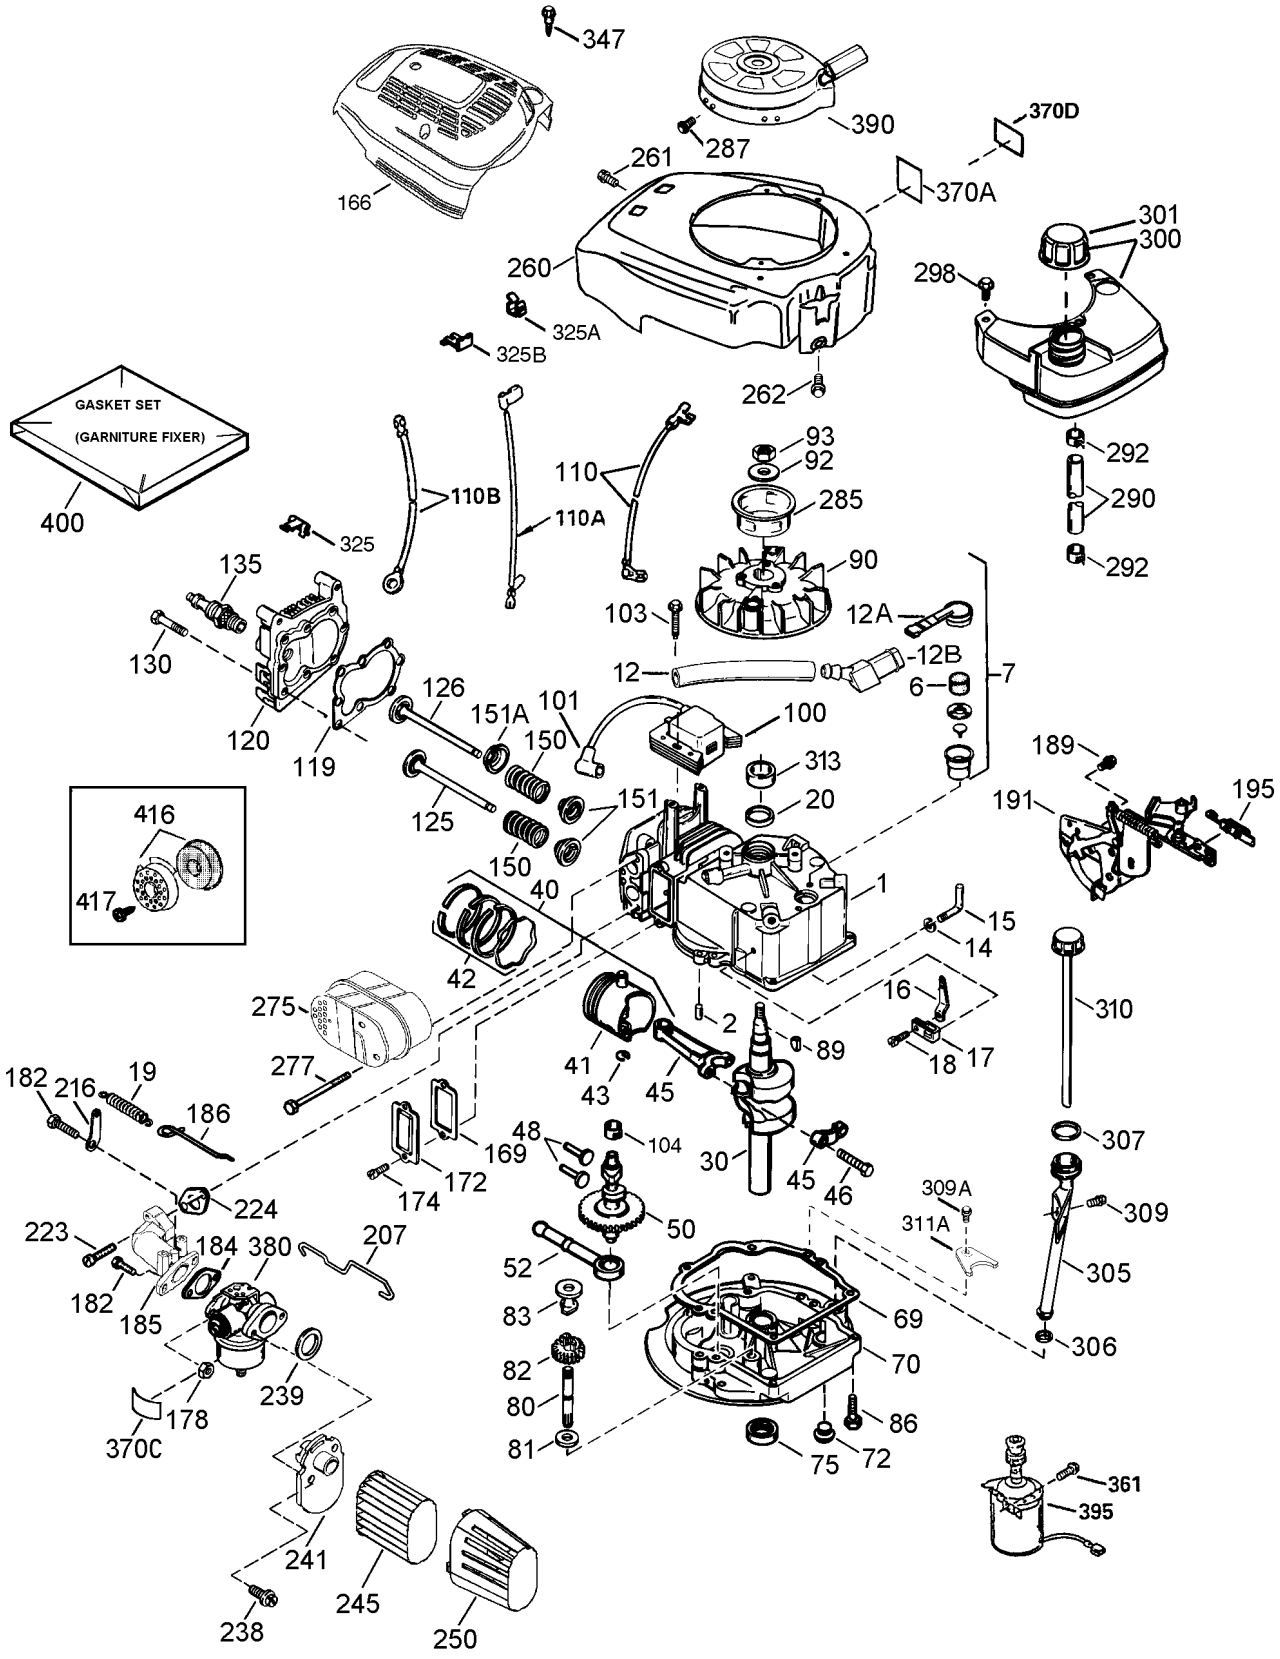


Engine Assembly No. 1
Tecumseh Model LV195EA-362006B

Ref	Part No.	Qty.	Description
❹1	37465	1	Cylinder(Incl. Ref. #2, 20 And 150)
❹2	26727	2	Pin-Dowel
❹6	33734	1	Element-Breather
❹7	36557	1	Breather ASM (Incl. Ref. #6 And 12a)
❹12	36775	1	Tube-Breather
❹12A	36558	1	Breather Cover And Tube (Incl. Ref. #12b)
❹12B	36694	1	Elbow-Tube, Breather
❹14	28277	1	Washer
❹15	30589	1	Governor Rod (Incl. Ref. #14)
❹16	34839A	1	Lever-Governor
❹17	31335	1	Clamp-Governor Lever
❹18	651018	1	Screw, T-15, 8-32 X 19/64in
❹19	36281	1	Spring-Extension
❹20	32600	1	Seal-Oil
❹30	37692	1	Crankshaft
❹40	40027	1	Piston, Pin And Ring Set (Std.)
❹41	40042	1	Piston And Pin ASM (Std.) (Incl. Ref. #43)
❹42	40006	1	Ring Set (Std.)
❹43	20381	2	Retaining Ring-Piston Pin
❹45	36777	1	Connecting Rod ASM (Incl. Ref. #46)
❹46	32610A	2	Bolt-Connecting Rod
❹48	27241	2	Lifter-Valve
❹50	37460	1	Camshaft (Exhaust Mcr) (Incl. Ref. #104)
❹52	29914	1	Oil Pump ASM
❹❺69	37609	1	Gasket-Mounting Flange
❹70	37608	1	Mounting Flange (Incl. Ref. #72-83, 306, 309a And 311a)
❹72	37614	1	Plug-Oil Drain
❹75	27897	1	Seal-Oil
❹80	30574A	1	Shaft-Governor
❹81	30590A	1	Washer
❹82	30591	1	Governor Gear ASM (Incl. Ref. # 81)
❹83	30588A	1	Spool-Governor
❹86	650488	6	Screw, 1/4-20 X 1-1/4in
❹89	611004	1	Key-Flywheel
❹90	37787	1	Flywheel
❹92	650815	1	Washer-Belleville
❹93	650816	1	Nut-Flywheel
❹100	34443C	1	Ignition-Solid State
❹101	610118	1	Cover-Spark Plug
❹103	651007	2	Screw, T-15, 10-24 X 15/16in
❹104	37480	1	Bushing-Cam
❹110	36953	1	Wire-Ground
❹110A	36954	1	Wire-Ground
❹110B	37047	1	Wire-Ground
❹❺119	37796	1	Gasket-Cylinder Head
❹120	37714	1	Sprocket Assembly


Ref	Part No.	Qty.	Description
❹125	36780	1	Exhaust Valve (1/32" Os) (Incl. Ref. #151)
❹125	37288	1	Exhaust Valve (Std.) (Incl. Ref. #151)
❹126	37289	1	Intake Valve (Std.) (Incl. Ref. #151and 151a)
❹130	6021A	8	Screw, 5/16-18 X 1-7/16in
❹135	35395	1	Resistor-Spark Plug (Rj19lm)
❹150	31672	2	Spring-Valve
❹151	31673	2	Cap-Valve Spring
❹151A	40017	1	Seal-Intake Valve
❹166	37813	1	Engine Shroud (Green)
❹❺169	36783	1	Gasket-Valve Cover
❹172	36784	1	Cover-Valve
❹174	30200	2	Screw, 10-24 X 9/16in
❹178	29752	2	Nut And Lock Washer, 1/4-28
❹182	6201	2	Screw, 1/4-28 X 7/8in
❹❺184	26756	1	Gasket-Carburetor To Intake Pipe
❹185	37466	1	Pipe-Intake
❹186	32653	1	Link-Governor
❹189	650839	2	Screw, 1/4-20 X 3/8in
❹191	36559A	1	S.e. Brake Bracket (Incl. Ref. #195)
❹195	610973	1	Terminal
❹207	34336A	1	Link-Throttle
❹216	33086	1	Lever-R.p.m. Adjusting
❹223	650451	2	Screw, 1/4-20 X 1in
❹❺224	36786	1	Gasket-Intake Pipe
❹238	650932	2	Screw, 10-32 X 49/64in
❹❺239	34338	1	Gasket-Air Cleaner
❹241	36919	1	Collar-Air Cleaner
❹245	36905	1	Filter-Air Cleaner
❹250	37122	1	Cover-Air Cleaner
❹260	37693A	1	Housing-Blower
❹261	30200	2	Screw, 10-24 X 9/16in
❹262	650831	2	Screw, 1/4-20 X 1/2in
❹275	37498	1	Muffler
❹277	650988	2	Screw, 1/4-20 X 2-9/32in
❹285	35000A	1	Cup-Starter
❹287	650926	2	Screw, 8-32 X 21/64in
❹290	29774	1	Line-Fuel
❹292	26460	2	Clamp-Fuel Line
❹298	28763	2	Screw

Engine Assembly No. 2
Tecumseh Model LV195EA-362006B

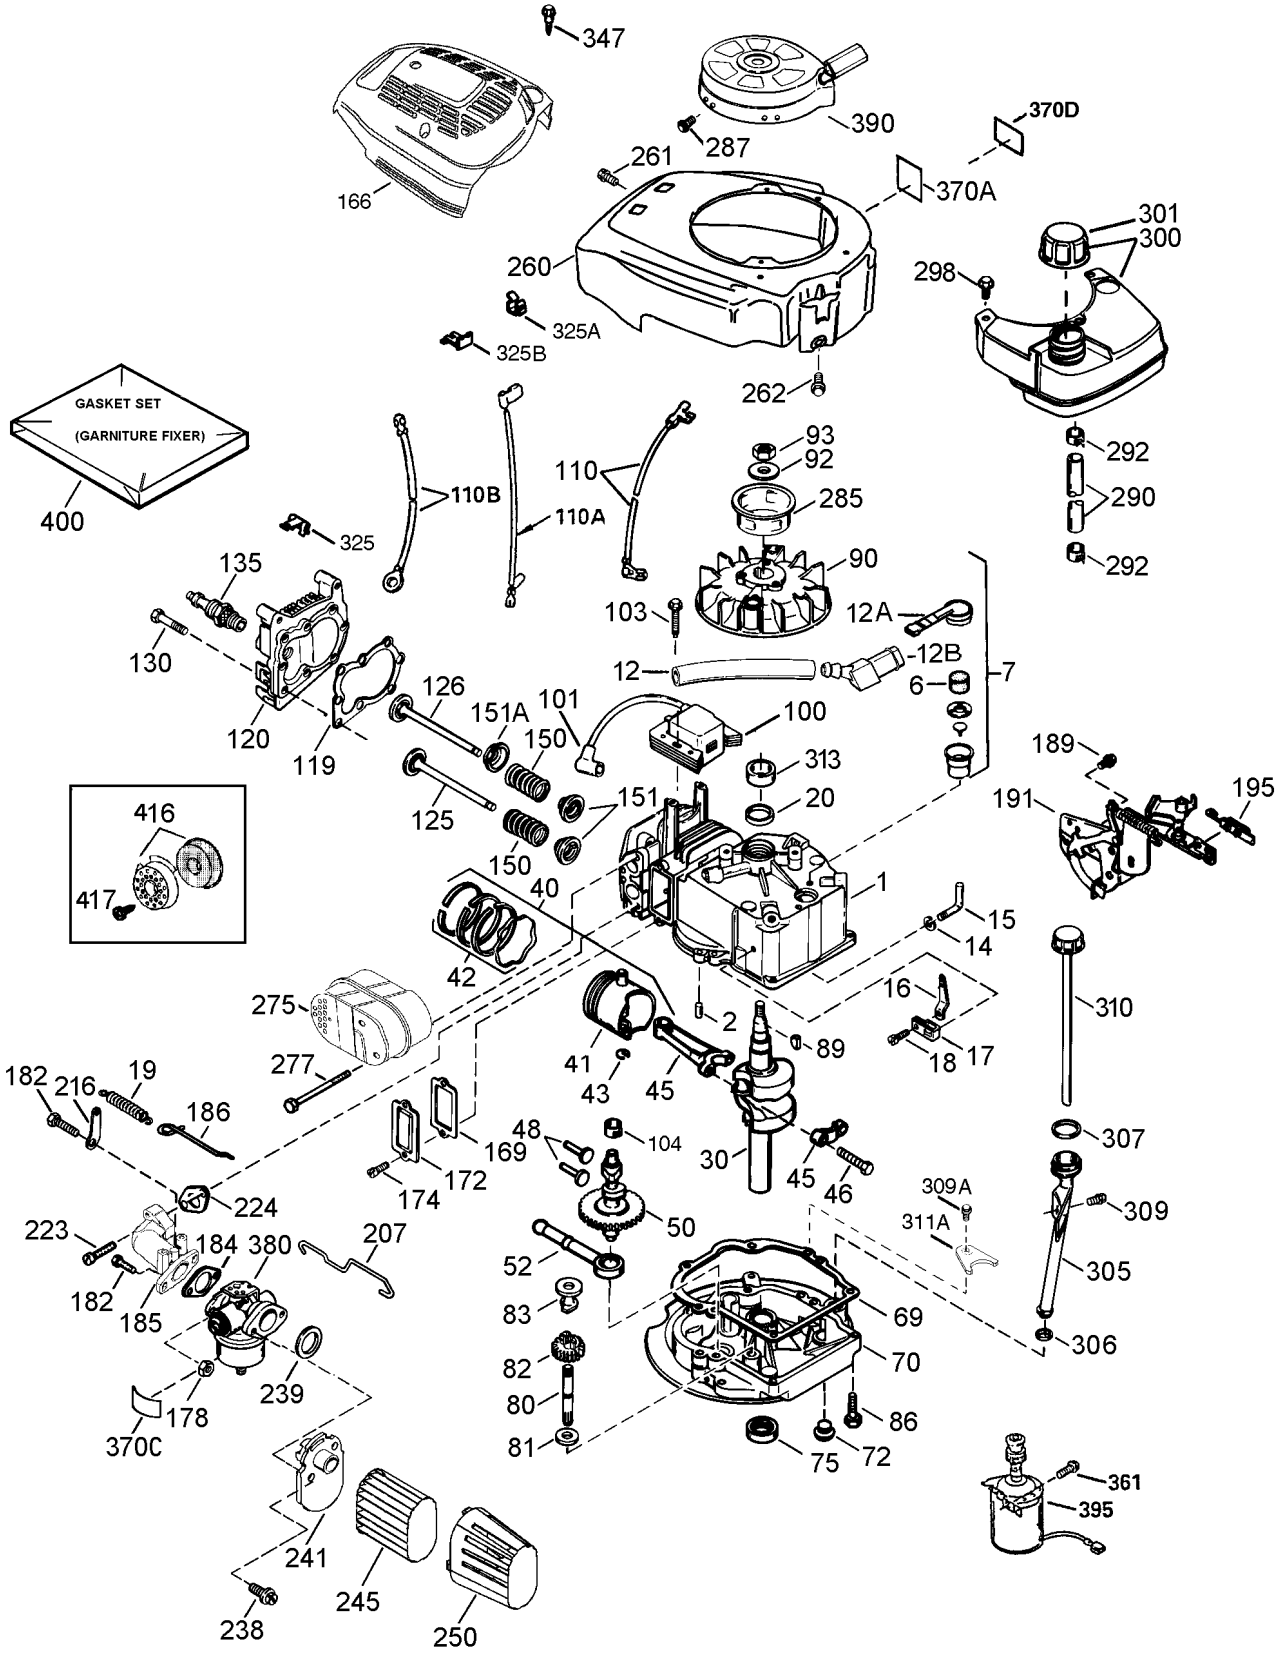


Engine Assembly No. 2
Tecumseh Model LV195EA-362006B

Ref	Part No.	Qty.	Description
❹300	37947	1	Fuel Tank (Incl. Ref. #292 And 301)
❹301	37844	1	Fuel Cap ASM
❹305	35647	1	Tube-Oil Fill
❹❺306	37610	1	O-Ring
❹307	35499	1	O-Ring
❹309	650562	1	Screw, 10-32 X 1/2in
❹309A	650783	1	Screw, 10-24 X 3/4in
❹310	35648	1	Dipstick
❹311A	37611	1	Bracket-Hold Down
❹313	34080	1	Spacer
❹325	35249	1	Wire Clip
❹325A	37152	1	Wire Clip
❹325B	29443	1	Wire Clip
❹347	650898A	1	Screw, 10-32 X 27/32in
❹361	650831	2	Screw, 1/4-20 X 1/2in
❹370A	36261	2	Decal-Lubrication
❹370C	37695	1	Decal-Primer
❹370D	35977	1	Decal-Warning
❹380	640303	1	Carburetor (Incl. Ref. #184)
❹390	590739	1	Starter-Rewind
❹395	37753	1	Starter-Electric 12 Volt
❹400	37613A	1	Gasket Set
❹416	37530	1	Kit-Spark Arrestor (Optional)
❹417	650760	1	Screw, 8-32 X 3/8in
❹	750876	1	Short Block Asm

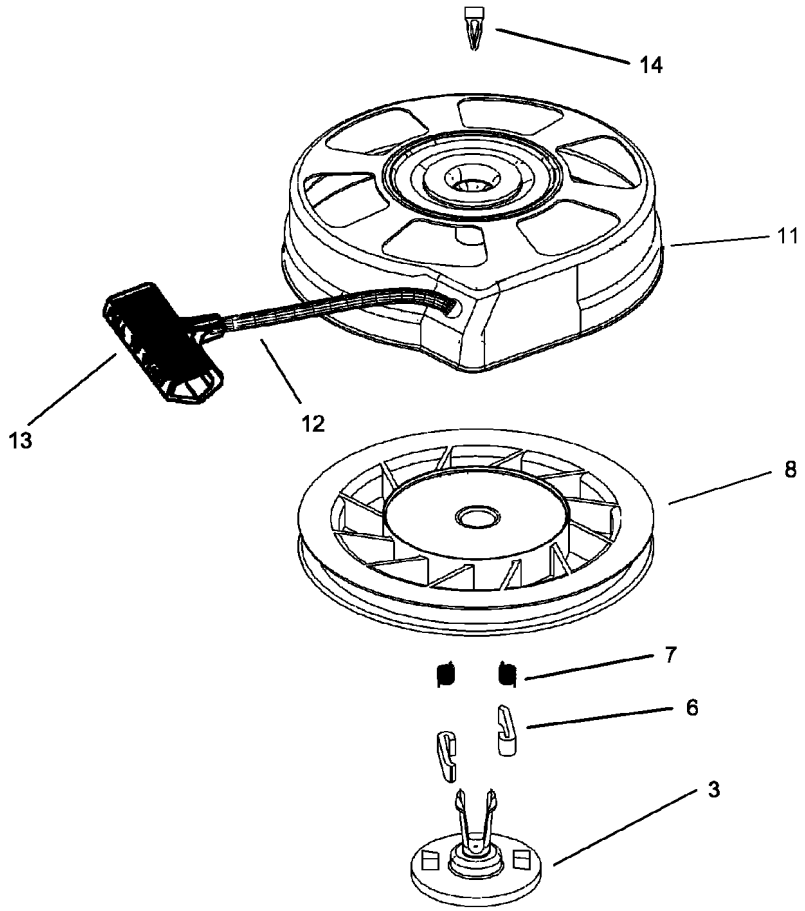


Recoil Starter Assembly No. 590739
Tecumseh Model LV195EA-362006B

Ref	Part No.	Qty.	Description
3	590740	1	Retainer
6	590616	2	Dog-Starter
7	590617	2	Spring-Dog
8	590618A	1	Pulley And Rewind Spring ASM
11	590638A	1	Starter Housing ASM (40 Degree Grommet)
12	590535	1	Rope-Starter (Length 98in X 9/64in Dia.)
13	590701	1	Handle-Starter
14	590760	1	Clp-Spring

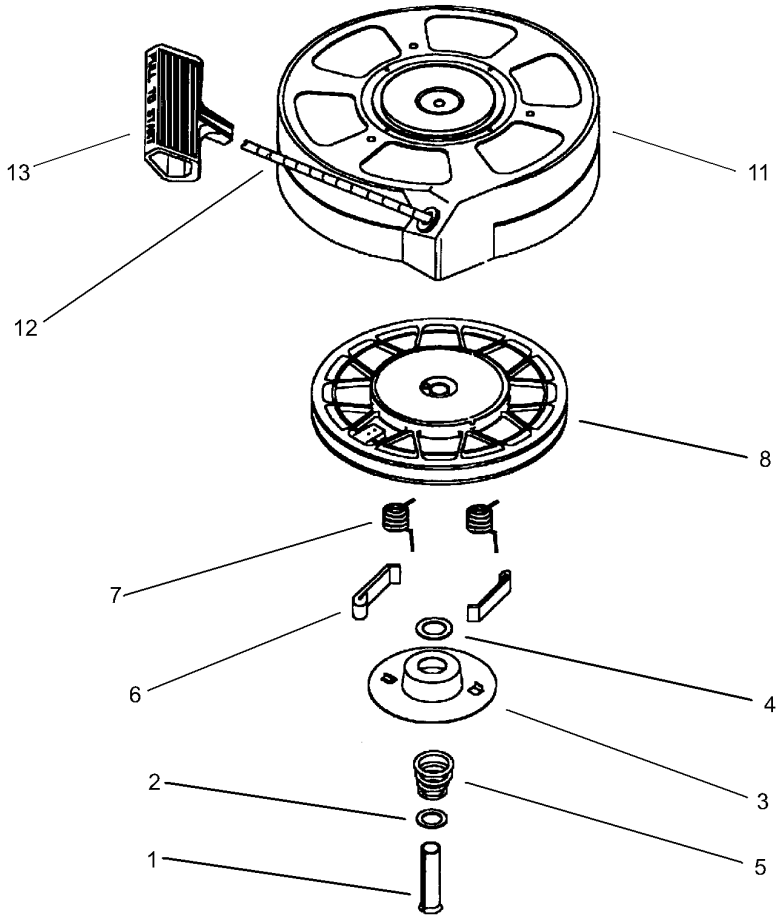

Recoil Starter Assembly No. 590702 (Optional)
Tecumseh Model LV195EA-362006B

Ref	Part No.	Qty.	Description
❹1	590599A	1	Spring Pin ASM (Incl. Ref. #4)
❹2	590600	1	Washer
❹3	590696	1	Retainer
❹4	590601	1	Washer
❹5	590697	1	Spring-Brake
❹6	590698	2	Dog-Starter
❹7	590699	2	Spring-Dog
❹8	590700	1	Pulley And Rewind Spring ASM
❹11	590703A	1	Starter Housing ASM (40 Degree Grommet)
❹12	590535	1	Rope-Starter (Length 98in X 9/64in Dia.)
❹13	590701	1	Handle-Starter

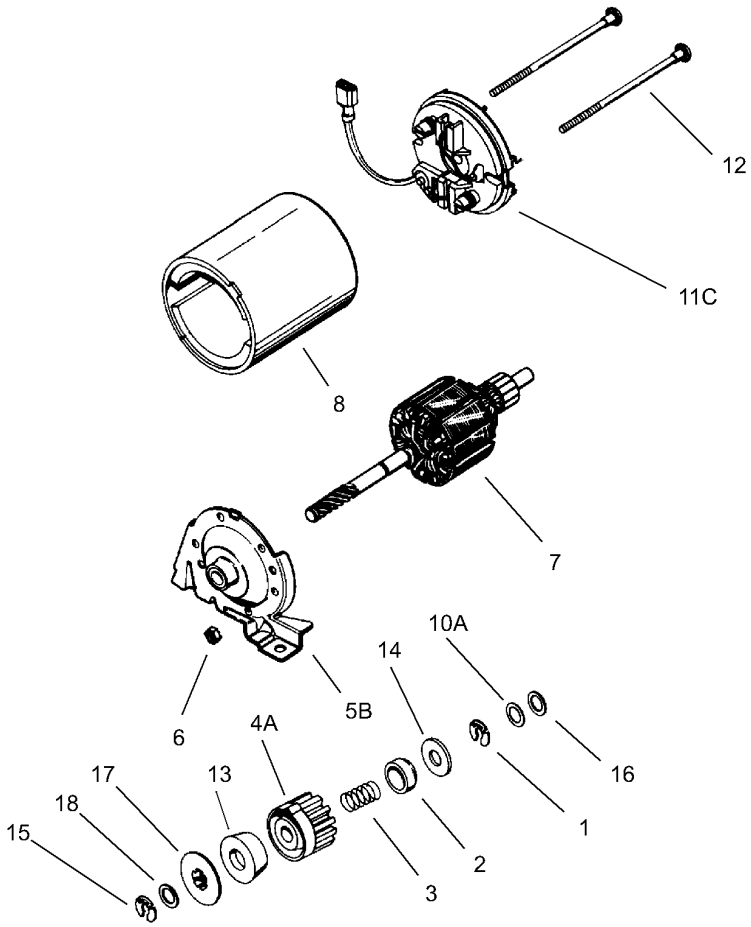

Electric Starter Kit No. 37753
Tecumseh Model LV195EA-362006B

Ref	Part No.	Qty.	Description
❹1	34955	1	Ring-Retaining
❹2	34950	1	Spring-Retainer
❹3	34954	1	Spring
❹4A	37788	1	Gear
❹5B	34943	1	Drive End Cap ASM
❹6	33450	2	Nut-Lock
❹7	34944	1	Armature
❹8	34945	1	Housing ASM
❹10A	590500	1	Washer-Thrust
❹11C	35714	1	Commutator End Cap ASM (Incl. Brushes)
❹12	34947	2	Bolt
❹13	34946	1	Driver-Pinion
❹14	34951	1	Washer-Cup
❹15	34952	1	Ring-Retaining
❹16	34948	1	Washer
❹17	34953	1	Nut-Drive
❹18	590608	1	Washer

NOTES

NOTES

NOTES

LAWN-BOY®